

FANUC Series *0i*-MODEL F

CONNECTION MANUAL (HARDWARE)

B-64603EN/01

- No part of this manual may be reproduced in any form.
- All specifications and designs are subject to change without notice.

The products in this manual are controlled based on Japan's "Foreign Exchange and Foreign Trade Law". The export from Japan is subject to an export license by the government of Japan. Furthermore, the product may also be controlled by re-export regulations of the United States government.

Should you wish to export or re-export these products, please contact FANUC for advice.

The products in this manual are manufactured under strict quality control. However, when using any of the products in a facility in which a serious accident or loss is predicted due to a failure of the product, install a safety device.

In this manual we have tried as much as possible to describe all the various matters. However, we cannot describe all the matters which must not be done, or which cannot be done, because there are so many possibilities. Therefore, matters which are not especially described as possible in this manual should be regarded as "impossible".

This manual contains the program names or device names of other companies, some of which are registered trademarks of respective owners. However, these names are not followed by ® or ™ in the main body.

SAFETY PRECAUTIONS

Described below are the safety precautions regarding the control units and those peripheral units explained herein. The safety precautions must be observed in order to use these units safely.

Because exchanging, as well as performing daily maintenance operations on, the control units and those peripheral units explained herein may incur diverse dangers, you cannot be involved in such work unless you have been sufficiently trained for safety.

Some safety precautions may not apply to your control units or peripheral units explained herein because the units have no corresponding function. If this is the case, skip reading those precautions.

As for safety precautions regarding machine tools, refer to the respective machine manuals provided by the machine tool builders.


Before starting to operate machines for check purposes, be sure to read the manuals provided by the machine tool builders and FANUC and sufficiently understand their descriptions.


Contents

DEFINITION OF WARNING, CAUTION, AND NOTE.....s-1
 WARNINGS AND CAUTIONS REGARDING MOUNTING, WIRING, AND EXCHANGING.....s-2
 WARNINGS AND CAUTIONS REGARDING DESIGNING.....s-4
 WARNINGS, CAUTIONS, AND NOTES REGARDING DAILY MAINTENANCE.....s-5
 NOTE REGARDING KOREAN KC MARKs-5

DEFINITION OF WARNING, CAUTION, AND NOTE

This manual includes safety precautions for protecting the user and preventing damage to the machine. Precautions are classified into Warning and Caution according to their bearing on safety. Also, supplementary information is described as a Note. Read the Warning, Caution, and Note thoroughly before attempting to use the machine.

 **WARNING**
 Applied when there is a danger of the user being injured or when there is a danger of both the user being injured and the equipment being damaged if the approved procedure is not observed.

 **CAUTION**
 Applied when there is a danger of the equipment being damaged, if the approved procedure is not observed.

NOTE
 The Note is used to indicate supplementary information other than Warning and Caution.

- Read this manual carefully, and store it in a safe place.

WARNINGS AND CAUTIONS REGARDING MOUNTING, WIRING, AND EXCHANGING

WARNING

- 1 Before starting mounting, wiring, and exchanging, be sure to shut off externally supplied power. Otherwise, electrical shocks, breakdown, and blowout may occur.
If a control unit is turned off but other units are not, it is likely that power may be supplied to servo units, resulting in the units being damaged and workers getting an electrical shock when the units are exchanged.
- 2 Voltage lingers in servo and spindle amplifiers for a while even after power has been turned off, resulting in workers possibly getting an electrical shock when the workers touch them. Before starting to exchange these amplifiers, wait for 20 minutes after power has been turned off.
- 3 Be sure to ground your control units and peripheral units in accordance with your national grounding standards (protective grounding class C or stricter). Otherwise, electrical shocks, breakdown, and blowout may occur.
- 4 In order to prevent damage that may be caused by static electricity, wear a grounding wrist strap or take a similar protective measure before starting to touch a printed-circuit board or unit or attach a cable.
Static electricity from human bodies can damage electrical circuits.
- 5 In unit replacement, specify the same settings and parameters in the newly installed unit as those for the one removed. (For details, refer to the respective manuals for the units.)
Operating the newly installed unit with incorrect settings or parameters will cause the machine to behave unexpectedly, possibly leading to a damaged workpiece or machine or injury.
- 6 If you notice an apparent hardware fault, such as abnormal noise, abnormal odor, smoke, ignition, or abnormal heat, in the hardware while power is being supplied to it, shut it off at once. These faults can cause fire, breakdown, blowout, and malfunction.
- 7 The radiating fins of control units, servo amplifiers, spindle amplifiers, and other devices can remain very hot for a while after power has been turned off, making you get burned if you touch them. Before starting to work on them, wait and make sure they are cool.
- 8 When exchanging heavy stuff, you should do so together with two or more people.
If you try to exchange heavy stuff all by yourself, you may drop it and get hurt.
- 9 Wiring work in the control units and peripheral units must be done only after they have been installed. Otherwise, electrical shocks can occur.
- 10 Be careful not to damage cables. Otherwise, electrical shocks can occur.
- 11 When working, wear suitable clothes with safety taken into account. Otherwise, injury and electrical shocks can occur.
- 12 Do not work with your hands wet. Otherwise, electrical shocks and damage to electrical circuits can occur.

**CAUTION**

Failing to observe any caution stated below can lead to fire, breakdown, blowout, and malfunction.

- 1 Do not attach the units directly to any flammable object or install the units near any flammable object.
- 2 Do not allow any foreign matter (such as a screw, metal chip, or coolant) to get in the units.
- 3 Handle the units and printed-circuit boards gently because they are precision devices. Be careful not to drop them or give a high impact to them.
- 4 Lay signal wires away from power wires as stated in this manual.
- 5 When fastening each unit or wire, be sure to observe the screw tightening torque specified for them. If screws are tightened too weakly or too strongly, it is likely that the unit may drop, break, or malfunction, or the wire may be short-circuited. Do not forget to tighten all necessary screw.
- 6 Do not block any cooling fan air inlet or outlet. For units having no cooling fan, allow space for natural convection cooling above and below them.
- 7 Be careful not to make an incorrect wiring or connection. Be sure to attach wires and cables to their respective corresponding terminals and connectors.
- 8 Confirm equipment's electrical rating stated herein. Do not apply any unspecified voltage to the equipment.
- 9 Do not confuse voltage polarity. Carefully confirm the arrangement of connector pins.
- 10 When making a cable assembly, press-mount, crimp, or solder the wires, using the tool specified by the cable manufacturer.
- 11 Use printed-circuit boards and peripheral units that match your control unit.
- 12 When mounting the units, pay attention to their mass.
- 13 When detaching a cable from a unit, hold the connector rather than the cable. When attaching a cable, be sure to fit its connector to the connector pins securely. For connectors having a lock mechanism, be sure to lock them securely.
- 14 As for the shielding wires of the cables specified herein, securely ground them, using, for example, cable clamps.
- 15 Always use wires whose length, diameter, heat resistance, and flex resistance match their use.

WARNINGS AND CAUTIONS REGARDING DESIGNING

WARNING


- 1 When designing, be sure to observe all rules stated in this document and any related manuals. Otherwise, it is likely that failure and malfunction may occur.
- 2 Failures in the control units and I/O units as well as input power abnormality and communication failures can hamper the normal operation of these I/O units. Design each I/O unit in such a way that the machine can operate safely, for example, by providing an external safety circuit to the I/O unit so that no accident will occur even if the I/O unit fails to operate normally.
The DO function of each I/O unit has been designed in such a way that, if a system alarm is issued in the control unit that controls the I/O unit or the power of the control unit or the I/O unit is turned off, the DO function of all the I/O units is turned off. However, it is not guaranteed that the DO function is surely turned off. So, it is requested that, if a signal regarding safety is involved, a safety circuit external to each I/O unit must be configured. Using the dual check safety function makes it possible to detect a single fault in a portion related to safety. For details of the dual check safety function, refer to the FANUC Series 30i/31i/32i-MODEL B Dual Check Safety Connection Manual (B-64483EN-2).
- 3 Install each control unit, display unit, MDI unit, and machine operator panel in such a place that neither cutting chip nor coolant will spatter to them. Otherwise, damage or malfunction may occur.
- 4 Coolants containing sulfur or chlorine at a high activation level, oil-free coolants called synthetic, and water-soluble coolants at a high alkali level, in particular, can largely affect the CNC and peripheral units. Please note that, even if consideration is taken to protect them from direct exposure to these coolants, the following trouble is likely to occur.
 - Coolants containing sulfur or chlorine at a high activation level
Some coolants containing sulfur or chlorine are at an extremely high activity level. If such a coolant adheres to the CNC or peripheral units, it reacts chemically with a material, such as resin, of equipment, possibly leading to corrosion or deterioration. If it gets in the CNC or peripheral units, it corrodes metals, such as copper and silver, used as component materials, possibly leading to a defective component.
 - Synthetic-type coolants having a high permeability
Some synthetic-type coolants whose lubricating component is, for example, PAG (polyalkylene glycol) have an extremely high permeability. If such a coolant is used even in equipment having a high closeness, it can readily flow into the CNC or peripheral units through, for example, gaskets. It is likely that, if the coolant gets in the CNC or a peripheral unit, it may deteriorate the insulation and damage the components.
 - Water-soluble coolants at a high alkali level
Some coolants whose pH is increased using alkanolamine are so strong alkali that its standard dilution will lead to pH10 or higher. If such a coolant spatters over the surface of the CNC or peripheral unit, it reacts chemically with a material, such as resin, possibly leading to corrosion or deterioration.

WARNINGS, CAUTIONS, AND NOTES REGARDING DAILY MAINTENANCE

WARNING

Battery replacement

Do not replace batteries unless you have been well informed of maintenance work and safety.

When opening the cabinet and replacing batteries, be careful not to touch any high-voltage circuit (marked with  and covered with an electric shock prevention cover).


When the electric shock prevention cover has been removed, you will get an electric shock if you touch any high-voltage circuit.

WARNING

Fuse replacement

Before replacing a blown fuse, it is necessary to remove the cause of the blown fuse.

So, do not replace fuses unless you have been well informed of maintenance work and safety.

When opening the cabinet and replacing fuses, be careful not to touch any high-voltage circuit (marked with  and covered with an electric shock prevention cover).

When the electric shock prevention cover has been removed, you will get an electric shock if you touch any high-voltage circuit.

CAUTION

Handle the batteries gently. Do not drop them or give a strong impact to them.

NOTE

Each control unit uses batteries, because it must hold data, such as programs, offset values, and parameters even when AC power for it is off.

Back up the data (programs, offset values, and parameters) regularly.

If the battery voltage becomes low, a low battery voltage alarm is displayed on the machine operator's panel or screen.

Once the battery voltage alarm has been displayed, replace the batteries within one week. Otherwise, the memory contents may be lost.

For the battery replacement procedure, see Section 4.4, "Batteries". Recollect or discard old batteries in the way your local autonomous community specifies.

NOTE REGARDING KOREAN KC MARK

NOTE

This equipment is industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home.

이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

PREFACE

This manual describes the information, that is, electrical and structural specifications, needed in connecting machine tools to the control and peripheral units stated below. The manual covers the range shown on the total connection diagrams mentioned in Chapter 2. The manual briefly describes the units that are used in common with the FANUC control units, such as FANUC I/O units, FANUC PANEL *i*, and servo motors. It also gives supplementary information for use of these units with the control units. For detailed specifications, refer to the manuals of these components. For options not covered in this manual, also refer to the manuals of these components.

Applicable models

The models covered by this manual, and their abbreviations are :

Model name	Abbreviation		
FANUC Series 0i- TF	0i-F	0i-TF	Series 0i
FANUC Series 0i- MF		0i-MF	
FANUC Series 0i- PF		0i-PF	

Organization of this manuals

This manual consists of chapters 1 to 12 and appendixes at the end of the book.

Chapter and title	Contents
Chapter 1 CONFIGURATION	Provides general information related to the connection, as well as an introduction to detailed information.
Chapter 2 TOTAL CONNECTION DAIGRAMS	Describes how to connect peripheral units.
Chapter 3 INSTALLATION	Describes the installation requirements for using.
Chapter 4 POWER SUPPLAY CONNECTION	Describes how to make connections related to the power supply.
Chapter 5 CONNECTION TO CNC PERIOHERALS	Describes how to connect the peripheral devices.
Chapter 6 SERVO AND SPINDLE INTERFACES	Describes how to connect the 30i-B series to servo or spindle amplifiers. Also explains how to connect separate detector interface units.
Chapter 7 CONNECTION TO FANUC I/O Link <i>i</i>	Describes how to connect machine interface I/O units using the FANUC I/O Link <i>i</i> .
Chapter 8 UNITS CONNECTED TO FANUC I/O Link <i>i</i>	Describes major units that correspond to the FANUC I/O Link <i>i</i> .
Chapter 9 STOP AND EMERGENCY STOP	Describes how to handle the emergency stop signal. A lot of important information regarding safety is included. Be sure to read It.
Chapter 10 CONNECTION TO OTHER NETWORKS	Describes how to connect to networks.
Chapter 11 CONNECTION WITH THE FANUC PANEL <i>i</i> AND COMMERCIAL PERSONAL COMPUTERS	Describes how to connect to the FANUC PANEL <i>i</i> or a commercial personal computer, using the high-speed serial bus (HSSB) or Ethernet.
Chapter 12 PANEL <i>i</i>	Describes how to connect a PANEL <i>i</i> .

Chapter and title	Contents
APPENDIX	A) OUTLINE DRAWINGS OF UNITS AND CONNECTORS B) 20-PIN INTERFACE CONNECTORS AND CABLES C) CONNECTION CABLE (SUPPLIED FROM US) D) OPTICAL FIBER CABLE E) MEMORY CARD INTERFACE

Related manuals of 0i-F

The following table lists the manuals related to 0i-F. This manual is indicated by an asterisk(*).

Table 1 Related manuals

Manual name	Specification number	
DESCRIPTIONS	B-64602EN	
CONNECTION MANUAL (HARDWARE)	B-64603EN	*
CONNECTION MANUAL (FUNCTION)	B-64603EN-1	
OPERATOR'S MANUAL (Common to Lathe System/Machining Center System)	B-64604EN	
OPERATOR'S MANUAL (For Lathe System)	B-64604EN-1	
OPERATOR'S MANUAL (For Machining Center System)	B-64604EN-2	
MAINTENANCE MANUAL	B-64605EN	
PARAMETER MANUAL	B-64610EN	
0i-PF CONNECTION MANUAL (FUNCTION)	B-64623EN	
0i-PF OPERATOR'S MANUAL	B-64624EN	
0i-PF PARAMETER MANUAL	B-64630EN	
Programming		
Macro Executor PROGRAMMING MANUAL	B-63943EN-2	
Macro Compiler PROGRAMMING MANUAL	B-66263EN	
C Language Executor PROGRAMMING MANUAL	B-63943EN-3	
PMC		
PMC PROGRAMMING MANUAL	B-64513EN	
Network		
PROFIBUS-DP Board CONNECTION MANUAL	B-63993EN	
Fast Ethernet / Fast Data Server OPERATOR'S MANUAL	B-64014EN	
DeviceNet Board CONNECTION MANUAL	B-64043EN	
FL-net Board CONNECTION MANUAL	B-64163EN	
CC-Link Board CONNECTION MANUAL	B-64463EN	
Industrial Ethernet CONNECTION MANUAL	B-64013EN	
Operation guidance function		
MANUAL GUIDE <i>i</i> (Common to Lathe System/Machining Center System) OPERATOR'S MANUAL	B-63874EN	
MANUAL GUIDE <i>i</i> (For Machining Center System) OPERATOR'S MANUAL	B-63874EN-2	
MANUAL GUIDE <i>i</i> (Set-up Guidance Functions) OPERATOR'S MANUAL	B-63874EN-1	
Dual Check Safety		
Dual Check Safety CONNECTION MANUAL	B-64483EN-2	

Related manuals of SERVO MOTOR α is/ α i/ β is/ β i series

The following table lists the manuals related to SERVO MOTOR α is/ α i/ β is/ β i series

Manual name	Specification number
FANUC AC SERVO MOTOR α i series DESCRIPTIONS	B-65262EN
FANUC AC SPINDLE MOTOR α i series DESCRIPTIONS	B-65272EN
FANUC AC SERVO MOTOR β i series DESCRIPTIONS	B-65302EN
FANUC AC SPINDLE MOTOR β i series DESCRIPTIONS	B-65312EN
FANUC SERVO AMPLIFIER α i series DESCRIPTIONS	B-65282EN
FANUC SERVO AMPLIFIER β i series DESCRIPTIONS	B-65322EN
FANUC SERVO MOTOR α is series FANUC SERVO MOTOR α i series FANUC AC SPINDLE MOTOR α i series FANUC SERVO AMPLIFIER α i series MAINTENANCE MANUAL	B-65285EN
FANUC SERVO MOTOR β is series FANUC AC SPINDLE MOTOR β i series FANUC SERVO AMPLIFIER β i series MAINTENANCE MANUAL	B-65325EN
FANUC AC SERVO MOTOR α i series FANUC AC SERVO MOTOR β i series FANUC LINEAR MOTOR LiS series FANUC SYNCHRONOUS BUILT-IN SERVO MOTOR DiS series PARAMETER MANUAL	B-65270EN
FANUC AC SPINDLE MOTOR α i series FANUC AC SPINDLE MOTOR β i series BUILT-IN SPINDLE MOTOR Bi series PARAMETER MANUAL	B-65280EN

Related manuals of FANUC PANEL i

The following table lists the manuals related to FANUC PANEL i .

Manual name	Specification number
FANUC PANEL i CONNECTION AND MAINTENANCE MANUAL	B-64223EN

Related manuals of FANUC I/O Unit

The following table lists the manuals related to FANUC I/O Unit.

Manual name	Specification number
FANUC I/O Unit-MODEL A CONNECTION AND MAINTENANCE MANUAL	B-61813E
FANUC I/O Unit-MODEL B CONNECTION AND MAINTENANCE MANUAL	B-62163E
Handy Machine Operator's Panel CONNECTION MANUAL	B-63753EN

Training

- FANUC runs FANUC Training Center to train those who will be involved in the connection, maintenance, and operation of FANUC products. It is recommended to attend the class so you will be able to use the products effectively.

Visit the following web site for detailed descriptions of its curriculum.

<http://www.fanuc.co.jp/>

TABLE OF CONTENTS

SAFETY PRECAUTIONS	s-1
DEFINITION OF WARNING, CAUTION, AND NOTE	s-1
WARNINGS AND CAUTIONS REGARDING MOUNTING, WIRING, AND EXCHANGING.....	s-2
WARNINGS AND CAUTIONS REGARDING DESIGNING	s-4
WARNINGS, CAUTIONS, AND NOTES REGARDING DAILY MAINTENANCE	s-5
NOTE REGARDING KOREAN KC MARK	s-5
PREFACE	p-1
1 CONFIGURATION	1
1.1 CONTROL UNIT CONFIGURATION AND COMPONENT NAMES	1
1.1.1 Configurations of LCD-mounted Type Control Units	1
1.1.2 Configurations of Optional Boards	5
1.2 HARDWARE OVERVIEW.....	6
1.2.1 LCD-mounted Type Control Unit Overview	6
2 TOTAL CONNECTION DIAGRAMS	7
3 INSTALLATION	10
3.1 ENVIRONMENTAL REQUIREMENTS OUTSIDE THE CABINET	10
3.1.1 Environmental Conditions outside the Cabinet.....	10
3.1.2 Installation Conditions of the Control Unit.....	10
3.2 CAUTIONS REGARDING THE INSTALLATION DESIGN OF MACHINE TOOL POWER MAGNETICS CABINETS	11
3.3 THERMAL DESIGN OF THE MACHINE TOOL MAGNETIC CABINET	14
3.3.1 Temperature Rise within the Machine Tool Magnetic Cabinet.....	14
3.3.2 Heat Output of Each Unit.....	14
3.3.3 Thermal Design of Operator's Panel.....	15
3.4 COUNTERMEASURES AGAINST NOISE AND GROUNDING	16
3.4.1 Grounding as Noise Suppression Measures	17
3.4.1.1 Grounding methods	17
3.4.1.2 Cabinet.....	18
3.4.2 Protective Ground (Grounding for Protection against Indirect Contact)	21
3.4.3 Connecting the Ground Terminal of the Control Unit	22
3.4.4 Separating Signal Lines.....	23
3.4.5 Noise Suppressor.....	25
3.4.6 Cable Clamp and Shield Processing.....	26
3.4.7 Lightning Surge Absorber Installation	28
3.5 INSTALLING THE CONTROL UNIT	30
3.5.1 Installing the LCD-mounted Type Control Unit	30
3.6 TIGHTENING TORQUE FOR FASTENING UNITS AND GROUND TERMINALS	31
3.7 DUSTPROOF MEASURES FOR CABINETS AND PENDANT BOXES.....	31
3.8 LCD PROTECTION COVER	34
3.9 ATTACHING SCREW CAPS	34
3.10 INSTALLATION CONDITION FOR UL RECOGNITION.....	35

4	POWER SUPPLY CONNECTION	36
4.1	24 VDC POWER (INSULATION AC/DC CONVERTOR).....	36
4.1.1	Connecting 24 VDC Power.....	36
4.1.2	24 VDC Power Supply Specification.....	38
4.1.3	Power Capacity of 24 VDC Power Supplies.....	40
4.2	TURNING ON AND OFF THE POWER TO THE CONTROL UNIT.....	41
4.2.1	Power-on Sequence.....	41
4.2.2	Power-off Sequence.....	42
4.3	CABLE FOR POWER SUPPLY TO CONTROL UNIT.....	44
4.4	BATTERIES.....	44
4.4.1	Battery for Memory Backup in the Control Unit (3 VDC).....	44
4.4.1.1	Replacing the lithium battery.....	45
4.4.1.2	Replacing commercially available alkaline dry cells (size D).....	46
4.4.2	Battery for Separate Absolute Pulsecoders (6VDC).....	48
4.4.3	Battery for Absolute Pulse Coder Built into the Motor (6VDC).....	49
5	CONNECTION TO CNC PERIPHERALS	50
5.1	CONNECTION BETWEEN THE LCD-MOUNTED TYPE CONTROL UNIT AND MDI UNIT.....	50
5.1.1	Overview.....	50
5.1.2	Connection with the MDI Unit.....	51
5.1.3	Key Layout of MDI Unit.....	53
5.1.4	Keyboard Cover.....	55
5.2	CONNECTION WITH INPUT/OUTPUT DEVICES.....	56
5.2.1	Overview.....	56
5.2.2	Connecting I/O Devices.....	56
5.2.3	RS232-C Serial Port.....	57
5.2.4	RS232-C Interface Specification.....	59
5.3	CONNECTING THE HIGH-SPEED SKIP (HDI).....	66
5.3.1	Connecting the High-speed Skip (HDI).....	66
5.3.2	Input Signal Rules for the High-speed Skip (HDI).....	67
5.4	LINKING THE ETHERNET INTERFACE.....	68
5.4.1	Connection to the Ethernet Interface.....	68
5.4.2	Specification of Twisted-Pair Cable.....	70
5.4.3	Network Installation.....	72
5.4.4	Ethernet Connector Panel.....	73
5.5	USB PORT.....	77
6	SERVO AND SPINDLE INTERFACES	79
6.1	OVERVIEW.....	79
6.2	Interface to the Amplifiers.....	80
6.2.1	Number of Units That Can Be Connected.....	81
6.3	SEPARATE DETECTOR INTERFACE.....	82
6.3.1	Overview.....	82
6.3.2	Connection Diagram.....	83
6.3.3	Separate Detector Interface Unit Specification.....	84
6.3.4	Connection of Power Supply.....	84
6.3.5	Separate Detector Interface (Digital Input).....	86
6.3.5.1	FANUC serial interface.....	86
6.3.5.2	Parallel interface.....	87
6.3.5.3	Input Signal Requirements (Parallel interface).....	88
6.3.6	Overview of the Analog Basic Unit.....	90

6.3.7	Connection Diagrams of an Analog Basic Unit	91
6.3.8	Separate Detector Interface (Analog Input).....	93
6.3.8.1	Analog 1Vp-p Interface	93
6.3.8.2	Input signal requirements (analog 1Vp-p interface)	94
6.3.8.3	Method for checking the encoder signals	95
6.3.9	Connection of Battery for Absolute Position Detector.....	96
6.3.10	Connection Between the Basic Unit and Additional Unit.....	98
6.3.11	Connector Locations.....	98
6.3.12	Installation.....	100
6.3.13	Notes on Installing a Separate Detector Interface Unit	101
7	CONNECTION TO FANUC I/O Link <i>i</i>	103
7.1	OVERVIEW	103
7.2	CONNECTION.....	104
7.2.1	Connection of I/O Link <i>i</i> by Electric Cable.....	105
7.2.2	Connection of FANUC I/O Link <i>i</i> by Optical Fiber Cable	106
7.2.3	Connection When Multiple Channels of the I/O Link <i>i</i> is Used	108
7.3	ASSIGNMENT FOR I/O UNITS	112
7.3.1	Assignment of Signals.....	112
7.3.2	Fixed Signals	112
7.3.3	Status Alarm.....	113
7.4	MANUAL PULSE GENERATOR	114
7.4.1	Manual Pulse Generator Connection.....	114
7.4.2	Cable Length for Manual Pulse Generator	115
7.4.3	Manual Pulse Generator Signal Specifications	115
7.5	POWER SUPPLY	116
8	UNITS CONNECTED TO FANUC I/O Link <i>i</i>	117
8.1	GENERAL UNITS.....	117
8.2	CONNECTION OF I/O MODULE FOR CONNECTOR PANEL	121
8.2.1	Configuration	121
8.2.2	Connection Diagram.....	122
8.2.3	Module Specifications.....	123
8.2.4	Connection of the Basic Module, and Extension Modules A and B	125
8.2.4.1	Connector pin arrangement.....	125
8.2.4.2	DI (Input Signal) Connection	126
8.2.4.3	DO (Output Signal) Connection	128
8.2.4.4	DI/DO Signal Specifications	129
8.2.5	Connection of Extension Module C (2A Output Module)	131
8.2.5.1	Connector pin arrangement.....	131
8.2.5.2	2A Output Signal Connection.....	132
8.2.5.3	2A output signal specifications.....	133
8.2.6	Connection of Extension Module D (Analog Input Module).....	133
8.2.6.1	Analog Input Connector Pin Allocation	133
8.2.6.2	Analog Input Signal Connections.....	134
8.2.6.3	Analog Input Signal Specifications	135
8.2.6.4	Channel selection and A/D conversion data	135
8.2.7	Manual Pulse Generator Connection.....	138
8.2.8	Connection of Basic and Extension Modules.....	138
8.2.9	Module Installation.....	139
8.2.10	Other Notes.....	144
8.2.11	Rotary Switch Setting.....	146
8.2.12	Connection of the Grounding Terminal of the Module.....	148
8.2.13	Terminal Conversion Adapter	149

	8.2.13.1	Connection diagram.....	150
	8.2.13.2	Component names	151
	8.2.13.3	External view and dimensions	154
	8.2.13.4	Installation	155
	8.2.13.5	Cable connection to the terminal block	156
	8.2.13.6	Connection.....	158
8.3		CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL (FOR MATRIX INPUT)	163
	8.3.1	Overall Connection Diagram.....	163
	8.3.2	Power Connection	164
	8.3.3	DI/DO Connector Pin Arrangement.....	165
	8.3.4	DI (General-purpose Input Signal) Connection	166
	8.3.5	DI (Matrix Input Signal) Connection	168
	8.3.6	DO (Output Signal) Connection.....	169
	8.3.7	Manual Pulse Generator Connection.....	172
	8.3.8	External View.....	173
	8.3.9	Specifications	174
	8.3.10	Other Notes.....	176
	8.3.11	Connection of the Grounding Terminal of the Module.....	178
8.4		CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL AND I/O MODULE FOR POWER MAGNETICS CABINET.....	179
	8.4.1	Overall Connection Diagram.....	179
	8.4.2	Power Connection	180
	8.4.3	DI/DO Connector Pin Arrangement.....	181
	8.4.4	DI (General-purpose Input Signal) Connection	182
	8.4.5	DO (Output Signal) Connection.....	186
	8.4.6	Manual Pulse Generator Connection.....	187
	8.4.7	External View.....	188
	8.4.8	Specifications	189
	8.4.9	Other Notes.....	191
	8.4.10	Connection of the Grounding Terminal of the Module.....	193
8.5		CONNECTION OF I/O MODULE TYPE-2 FOR CONNECTOR PANEL....	194
	8.5.1	Configuration	194
	8.5.2	Connector Layout Diagram	195
	8.5.3	Connection Diagram.....	196
	8.5.4	Module Specifications.....	197
	8.5.5	DI/DO Connector Pin Assignment.....	198
	8.5.6	DI (Input Signal) Connection	199
	8.5.7	DO (Output Signal) Connection.....	206
	8.5.8	DI/DO Signal Specifications	210
	8.5.9	Power Supply Connection	211
	8.5.10	Manual Pulse Generator Connection.....	211
	8.5.11	Connection between Modules	211
	8.5.12	Unit Dimensions.....	213
	8.5.13	Mounting the Module.....	214
	8.5.14	Connector Panel Printed Circuit Board	215
	8.5.15	Other Notes.....	218
	8.5.16	Connection of the Grounding Terminal of the Module.....	220
8.6		CONNECTION OF TERMINAL TYPE I/O MODULE	221
	8.6.1	Overview	221
	8.6.2	Module Specifications.....	222
	8.6.2.1	Types of modules.....	222
	8.6.2.2	Installation conditions.....	223
	8.6.2.3	I/O signal specifications	223

	8.6.2.4	Power supply rating	226
	8.6.2.5	Heat dissipation	226
	8.6.2.6	Weight	226
	8.6.2.7	Applicable wire.....	227
8.6.3		External View and Dimensions	228
	8.6.3.1	Dimensions (common to the modules)	228
	8.6.3.2	Dimensions in a maximum configuration (one basic module + three extension modules)	228
	8.6.3.3	Component names	229
8.6.4		Installation	232
8.6.5		Connection	234
	8.6.5.1	Overall connection diagram.....	234
	8.6.5.2	Power connection	235
	8.6.5.3	Signal assignment on terminal blocks.....	236
	8.6.5.4	DI/DO connection.....	239
	8.6.5.5	Manual pulse generator connection	246
	8.6.5.6	Inter-module connection.....	246
	8.6.5.7	Cable connection to a terminal block	247
	8.6.5.8	Detaching a terminal block	248
	8.6.5.9	Connection of the ground terminal	249
8.6.6		Settings	250
	8.6.6.1	Address map	250
	8.6.6.2	Channel selection and A/D conversion data for extension module D	251
	8.6.6.3	Channel selection and D/A conversion data for extension module E.....	253
		DO alarm detection.....	254
	8.6.6.4	Setting the rotary switch	256
8.6.7		Others	257
	8.6.7.1	Method of common pin expansion	257
	8.6.7.2	Parallel DO (output signal) connection	259
8.7		I/O Link CONNECTION UNIT	260
	8.7.1	Overview	260
	8.7.2	Specification.....	261
	8.7.3	Installation.....	263
	8.7.4	Connection	266
	8.7.4.1	I/O Link connection.....	266
	8.7.4.2	Power connection	267
8.8		CONNECTION TO MACHINE OPERATOR'S PANEL	268
	8.8.1	Overview	268
	8.8.2	Total Connection Diagram	271
	8.8.3	DI/DO Address Map	274
	8.8.4	Each Connections	276
	8.8.4.1	Pin assignment.....	276
	8.8.4.2	Power supply connection.....	280
	8.8.4.3	I/O Link <i>i</i> connection.....	281
	8.8.4.4	Using the channel 2 of I/O Link <i>i</i>	281
	8.8.4.5	Emergency stop signal connection	284
	8.8.4.6	Power ON/OFF control signal connection.....	285
	8.8.4.7	General-purpose DI signal connection	287
	8.8.4.8	General-purpose DO signal connection.....	293
	8.8.5	Manual Pulse Generator	295
	8.8.5.1	Manual pulse generator connection	295
	8.8.5.2	Pendant type manual pulse generator connection.....	295
	8.8.6	Connector (on the cable side) specifications	297
	8.8.7	DI/DO Addresses for the Keyboard	297
	8.8.8	Code Output for the Rotary Switch.....	299
	8.8.9	Outline	300

8.8.9.1	Outline of main panel	300
8.8.9.2	Outline of Safety machine operator's panel.....	301
8.8.9.3	Outline of Safety machine operator's panel type B	302
8.8.9.4	Outline of sub panel AA.....	303
8.8.9.5	Outline of sub panel D.....	304
8.8.9.6	Connector locations of main panel	305
8.8.9.7	Connector locations of safety machine operator's panel	305
8.8.9.8	Connector locations of safety machine operator's panel type B.....	306
8.8.10	Specifications of the Machine Operator's Panel	306
8.8.10.1	Installation conditions.....	306
8.8.10.2	Order specification.....	306
8.8.10.3	Main panel specification.....	307
8.8.10.4	Safety machine operator's panel and safety machine operator's panel type B specification	307
8.8.10.5	Sub panel AA, D specification	308
8.8.10.6	Power supply specification	308
8.8.10.7	Heat output	308
8.8.10.8	General-purpose DI signal definition	308
8.8.10.9	General-purpose DO signal definition.....	309
8.8.11	Keyboard.....	309
8.8.11.1	Meaning of key symbols.....	309
8.8.11.2	Detachable key top on the main panel	311
8.8.11.3	Keyboard cover.....	311
8.8.12	DO (Output Signal) Error Detection	312
8.9	CONNECTION OF OPERATOR'S PANEL CONNECTION UNIT (SOURCE DO).....	314
8.9.1	Overall Connection Diagram.....	314
8.9.2	Power Connection	314
8.9.3	DI/DO Connector Pin Arrangement.....	315
8.9.4	DI (Input Signal) Connection	316
8.9.5	DO (Output Signal) Connection.....	323
8.9.6	External View.....	327
8.9.7	Specifications	327
8.9.8	Other Notes.....	329
8.10	CONNECTION OF SAFETY IO UNIT.....	331
8.10.1	Overview	331
8.10.2	Total connection diagram.....	331
8.10.3	Power supply connection.....	332
8.10.4	I/O Link <i>i</i> Connection.....	332
8.10.5	DI/DO Address.....	333
8.10.6	Pin assignment of DI/DO	334
8.10.7	DI/DO connection	335
8.10.8	Outline of Safety IO Unit	343
8.10.9	Connector locations of Safety IO Unit.....	344
8.10.10	Color labels for connectors of Safety IO Unit.....	345
8.10.11	Connector specification of Safety IO Unit	346
8.10.12	Specifications of Safety IO Unit.....	346
8.10.13	DO (Output Signal) Error Detection	348
8.11	CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL SUPPORTING SAFETY FUNCTION.....	349
8.11.1	Overview	349
8.11.2	Connection Diagram.....	349
8.11.3	Power Connection	350
8.11.4	DI/DO Address Map	351
8.11.5	DI/DO Connector Pin Arrangement.....	353

8.11.6	DI (General-purpose Input Signal) Connection	355
8.11.7	DO (Output Signal) Connection.....	358
8.11.8	Manual pulse generator Connection.....	359
8.11.9	External View.....	360
8.11.10	Specifications	361
8.11.11	DO (output signal) Error Detection.....	362
8.12	I/O UNIT FOR POWER MAGNETICS CABINET	363
8.12.1	Overall Connection Diagram.....	363
8.12.2	Power Connection	364
8.12.3	DI/DO Connector Pin Arrangement.....	365
8.12.4	DI(General-purpose Input Signal)Connection	366
8.12.5	DO(Output Signal) Connection.....	373
8.12.6	Manual Pulse Generator Connection.....	377
8.12.7	External View.....	377
8.12.8	GND Cable Connection.....	378
8.12.9	Specifications	379
8.12.10	Other Notes.....	381
9	STOP AND EMERGENCY STOP	383
9.1	STOP MODES.....	383
9.2	SHUTTING OFF THE MOTOR POWER	383
9.3	STOPPING THE SPINDLE MOTOR	384
9.4	STOPPING THE SERVO MOTOR	384
9.5	EMERGENCY STOP SIGNAL.....	385
9.6	CAUTIONS ABOUT MULTI-PATH CONTROL.....	389
10	CONNECTION TO OTHER NETWORKS	390
11	CONNECTION WITH FANUC PANEL <i>i</i> AND COMMERCIAL PERSONAL COMPUTERS	391
11.1	OVERVIEW	391
11.2	CAUTIONS	391
11.3	CONNECTION USING THE HIGH-SPEED SERIAL BUS (HSSB).....	391
11.3.1	Overview	391
11.3.2	Connection Diagram.....	392
11.3.3	Specifications of a Commercial PC.....	392
11.3.4	Installation Environment	393
11.3.5	Handling Precautions	393
11.3.6	Procedure for Installing Personal Computer Interface Boards.....	393
11.3.7	Cable Connection	394
11.4	CONNECTION USING Ethernet.....	395
11.4.1	Overview	395
11.4.2	Connection Diagram.....	395
12	PANEL <i>i</i>	396
APPENDIX		
A	OUTLINE DRAWINGS OF UNITS AND CONNECTORS	399
B	20-PIN INTERFACE CONNECTORS AND CABLES	432
B.1	BOARD-MOUNTED CONNECTORS	432

B.1.1	Vertical-type Connectors.....	432
B.1.2	Straight and Right-angled Connectors (for Spring and Screw-fixing Connector Housings)	432
B.2	CABLE CONNECTORS	433
B.2.1	Strand Wire Press-mount Connector.....	433
B.2.2	Soldering Type Connector.....	434
B.3	RECOMMENDED CONNECTORS, APPLICABLE HOUSINGS, AND CABLES	435
B.3.1	Recommended Connectors.....	436
B.3.2	Applicable Cables.....	436
C	CONNECTION CABLE (SUPPLIED FROM US).....	443
D	OPTICAL FIBER CABLE	446
E	MEMORY CARD INTERFACE.....	456
F	HOW TO ATTACH THE KEYBOARD COVER.....	458

1 CONFIGURATION

1.1 CONTROL UNIT CONFIGURATION AND COMPONENT NAMES

The LCD-mounted type is one having both control and indicator sections in it. Each unit has different composition. Described below is the configuration of type. This manual focuses on how to attach the connectors shown in the configuration diagrams to device.

1.1.1 Configurations of LCD-mounted Type Control Units


LCD-mounted type control units						
Basic unit	Screen size	Touch panel	MDI	Number of option slots	Number of horizontal soft keys	Number of vertical soft keys
Basic unit A	8.4"	Without	With (horizontal)	Without 2	5+2	without
			With (vertical)	Without 2		
		With	With (horizontal)	Without 2		
			With (vertical)	Without 2		
	10.4"	Without	Separate (horizontal/vertical)	Without 2	10+2	(8+1)or Without
		With		Without 2		
Basic unit G	15"	Without	Separate (horizontal/vertical)	Without 2	10+2	8+1
				Without 2		
		With		Without 2		
				Without 2		

⚠ CAUTION
 The touch panel is a device designed to be operated by touching directly its screen. Touch panel is possible to be operated with the gloves or bare hand. It is possible to get a better operating feeling when using a FANUC-supplied exclusive touch panel pen (A02B-0236-K111).
 Please be careful not to press too strongly when operating with a finger. There is a risk that internal circuit of the touch panel fails or the glass cracks.
 If you press the screen with the pointed pen or sharp tool like a driver, it may cause failure or the surface of the display may be scratched. Be sure to keep away from such improper use.


⚠ CAUTION
 Do not poke the surface of the display with a sharp tool like a driver, or hit strongly with a something hard like a grip of driver. It may cause failure or the surface of the display may be scratched.

NOTE

The indicators having a touch panel has a protection sheet attached to its front surface. Explanations about how to replace the protection sheet, refer to the FANUC Series 0i-MODEL F Maintenance Manual (B-64605EN).

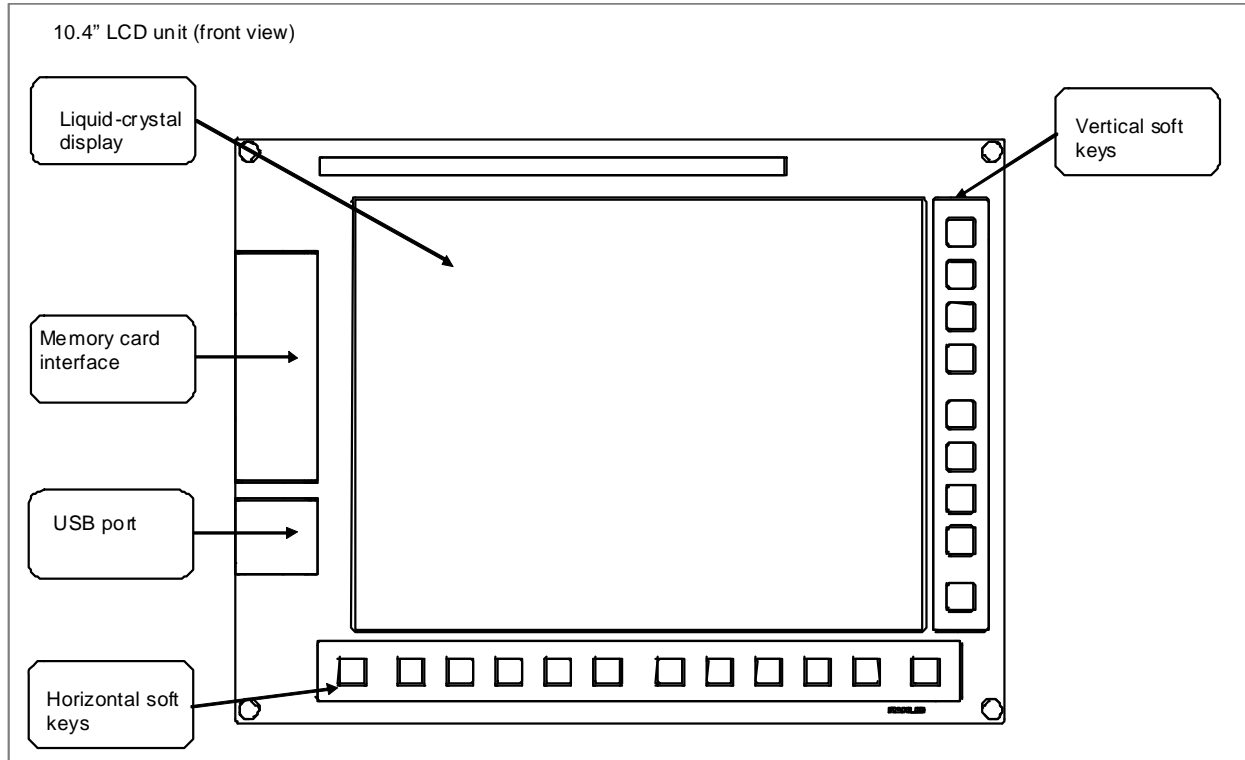
**NOTE**

- 1 This figure shows the 10.4" LCD-mounted control unit as viewed from the front. The basic configuration of the other control unit models is the same, as viewed from the front.
- 2 The LCD (liquid-crystal display) has been fabricated using an extreme precision technology. However, some of their pixels may fail to light or stay constantly lighting because of their characteristics. Please be forewarned that these phenomena are not faults.

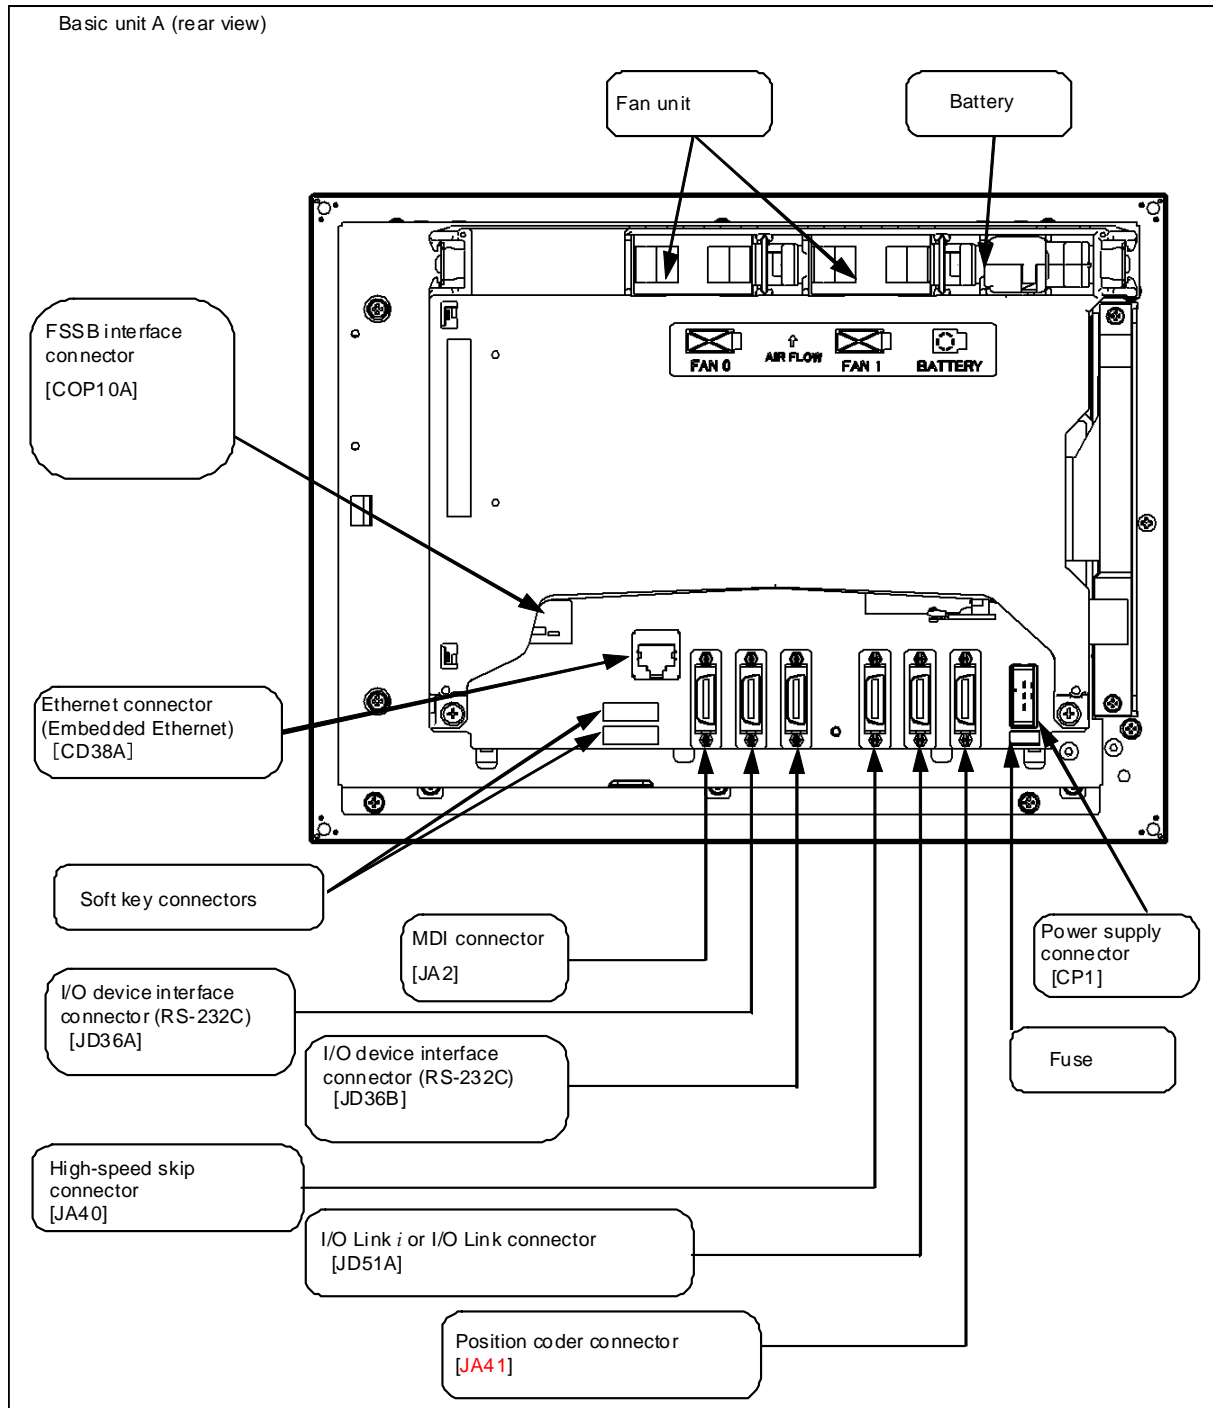

NOTE


- 1 This figure shows an LCD-mounted control unit having no option slot as viewed from the rear.
- 2 The numbers in brackets [] in the figures are connector numbers.

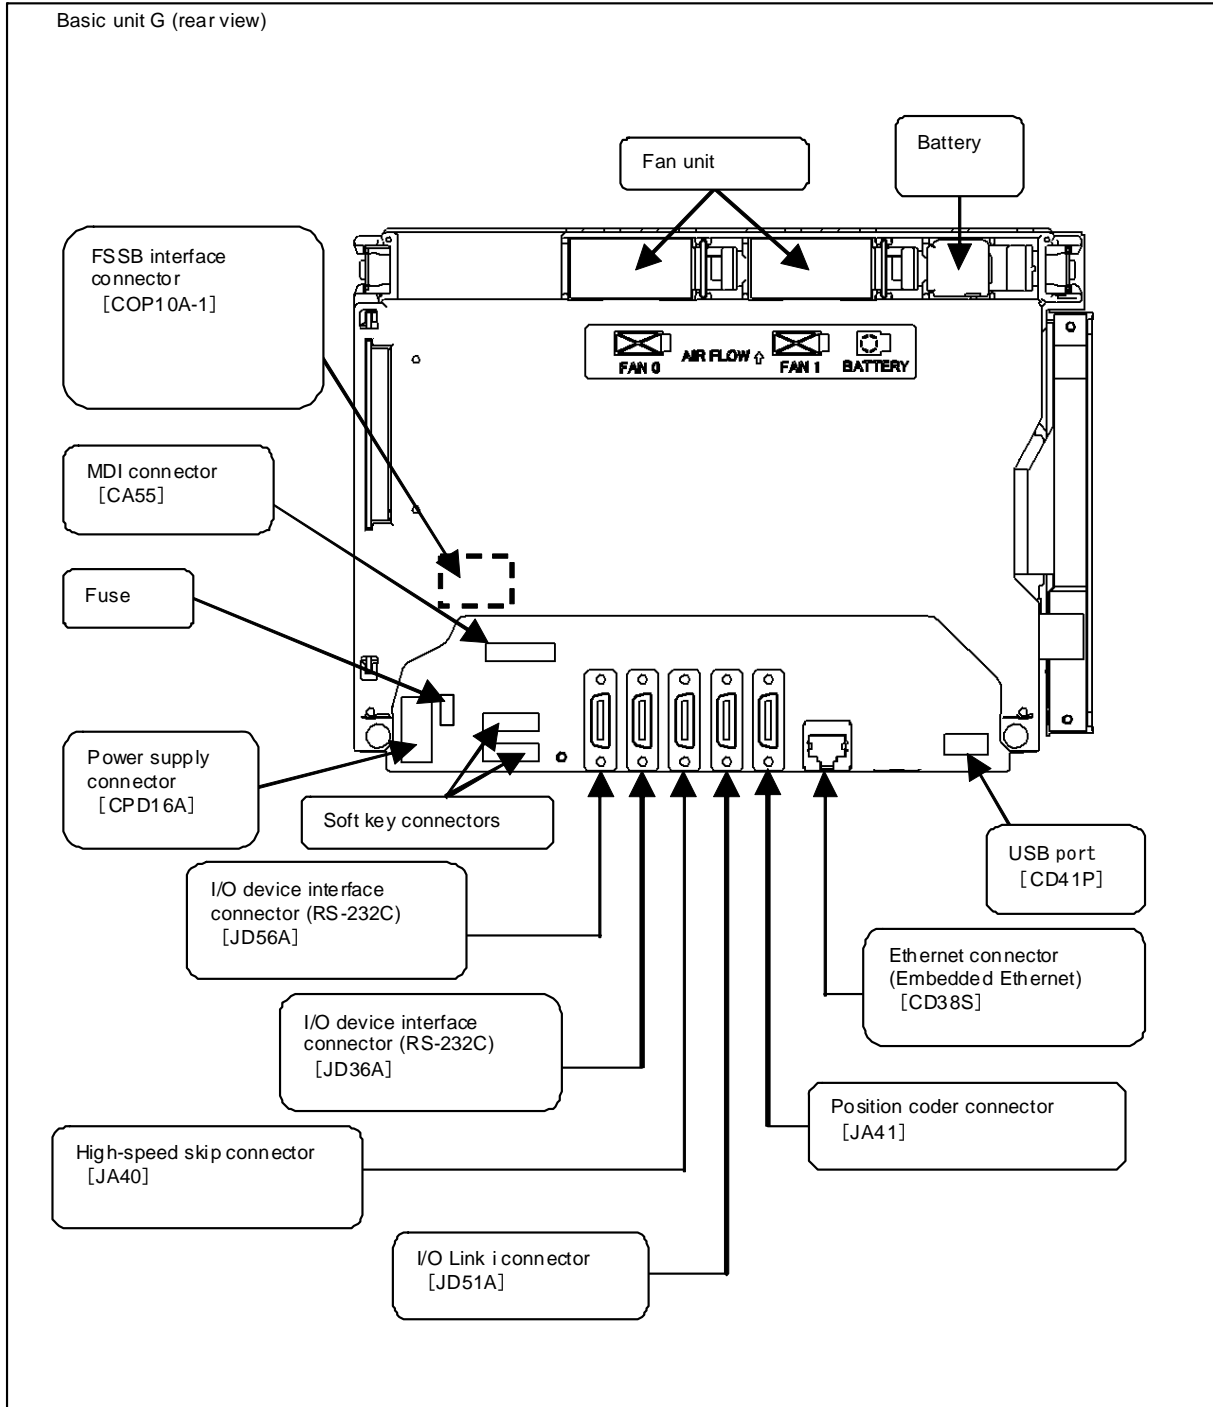

NOTE

- 1 This figure shows an LCD-mounted control unit having no option slot as viewed from the rear.
- 2 The numbers in brackets [] in the figures are connector numbers.

1.1.2 Configurations of Optional Boards

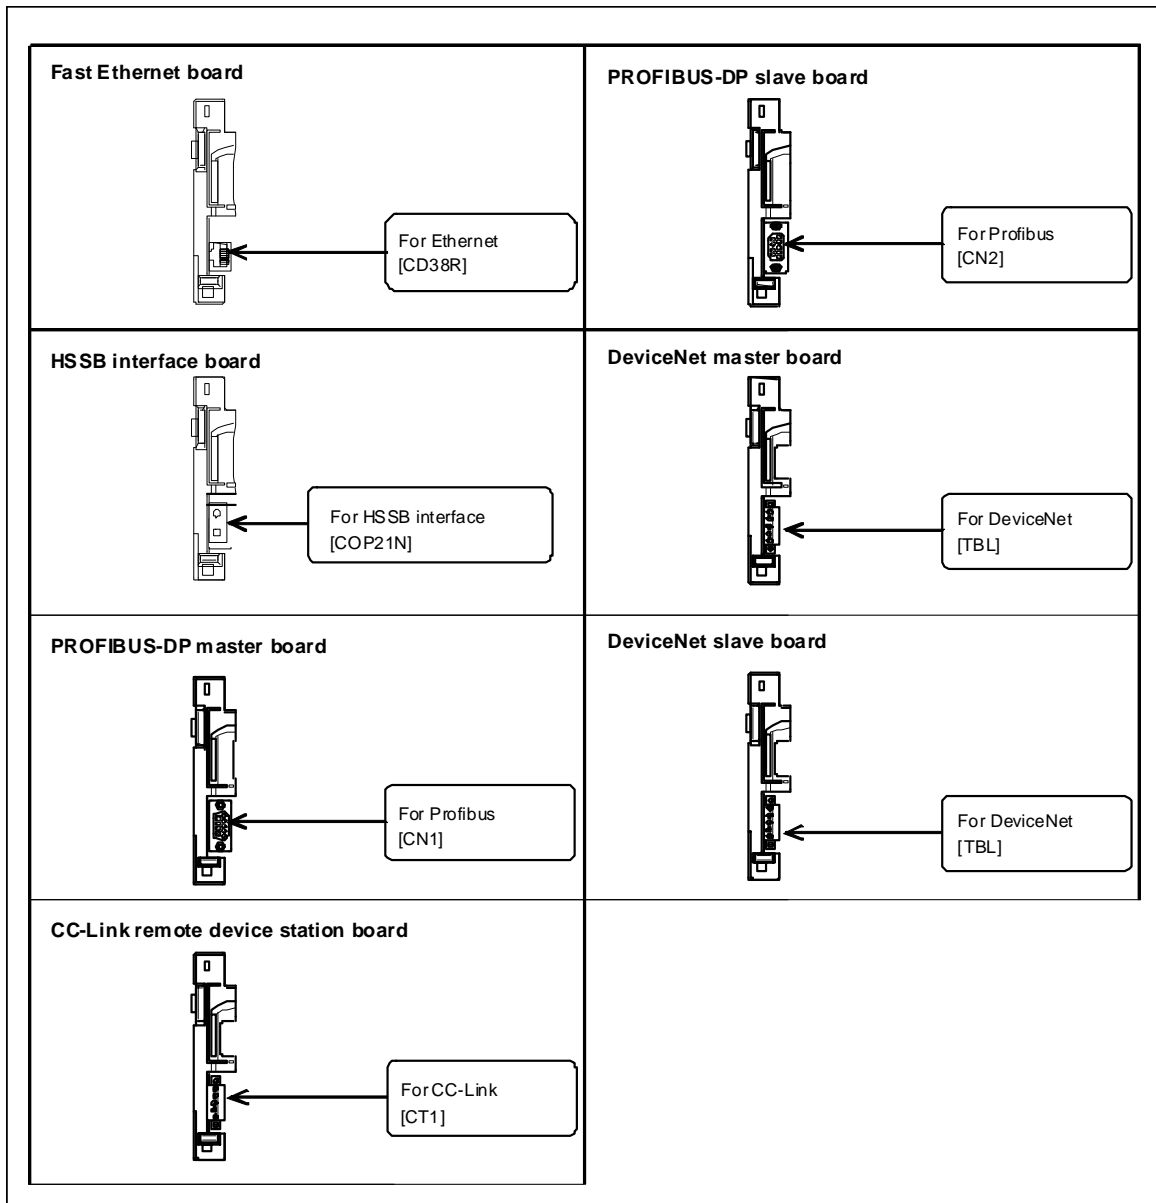


NOTE


The numbers in brackets [] in the figures are connector numbers.
 The Fast Ethernet board may be used also as data server or FL-net functions, depending on the settings of parameters.


1.2 HARDWARE OVERVIEW


1.2.1 LCD-mounted Type Control Unit Overview

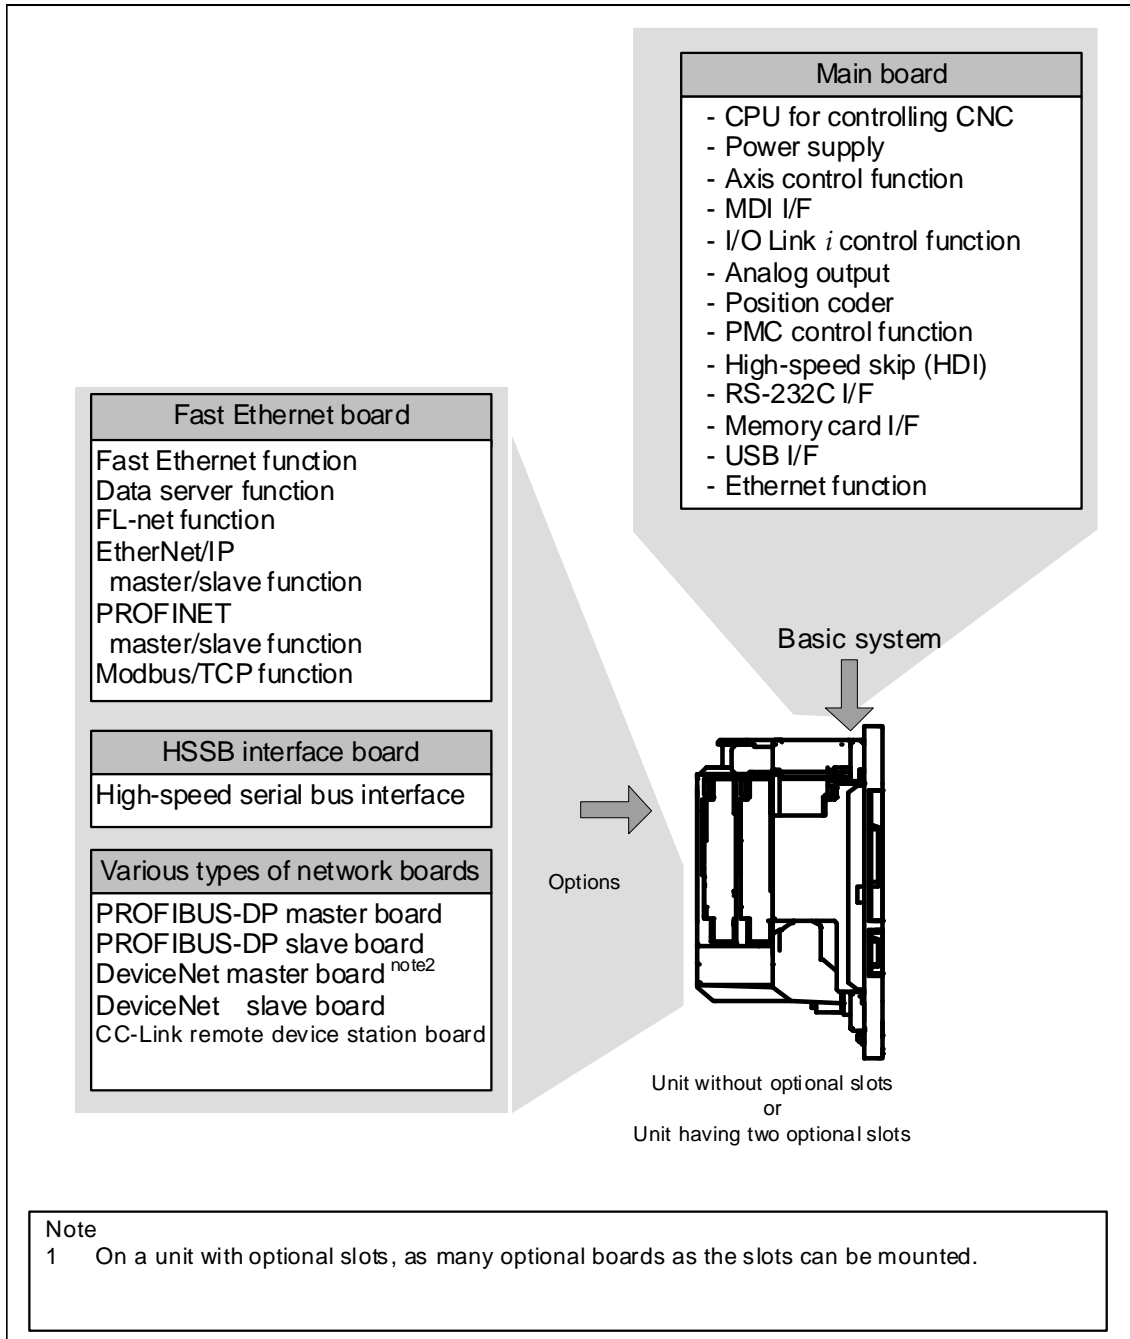

2 TOTAL CONNECTION DIAGRAMS

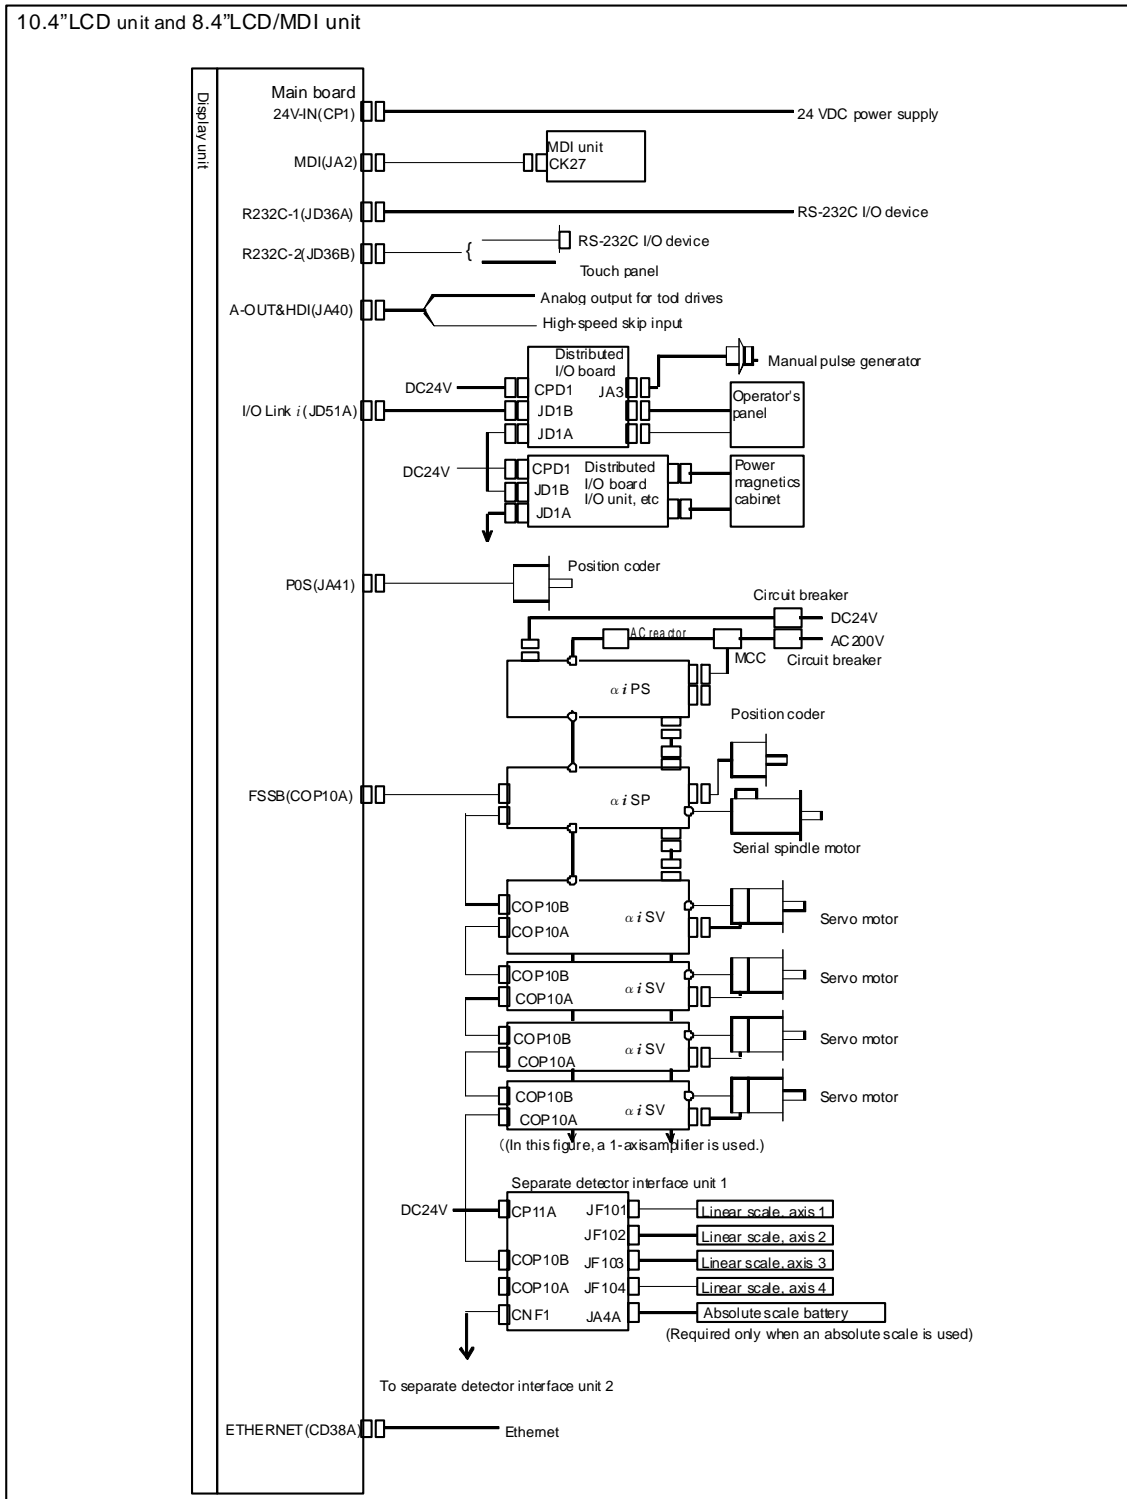

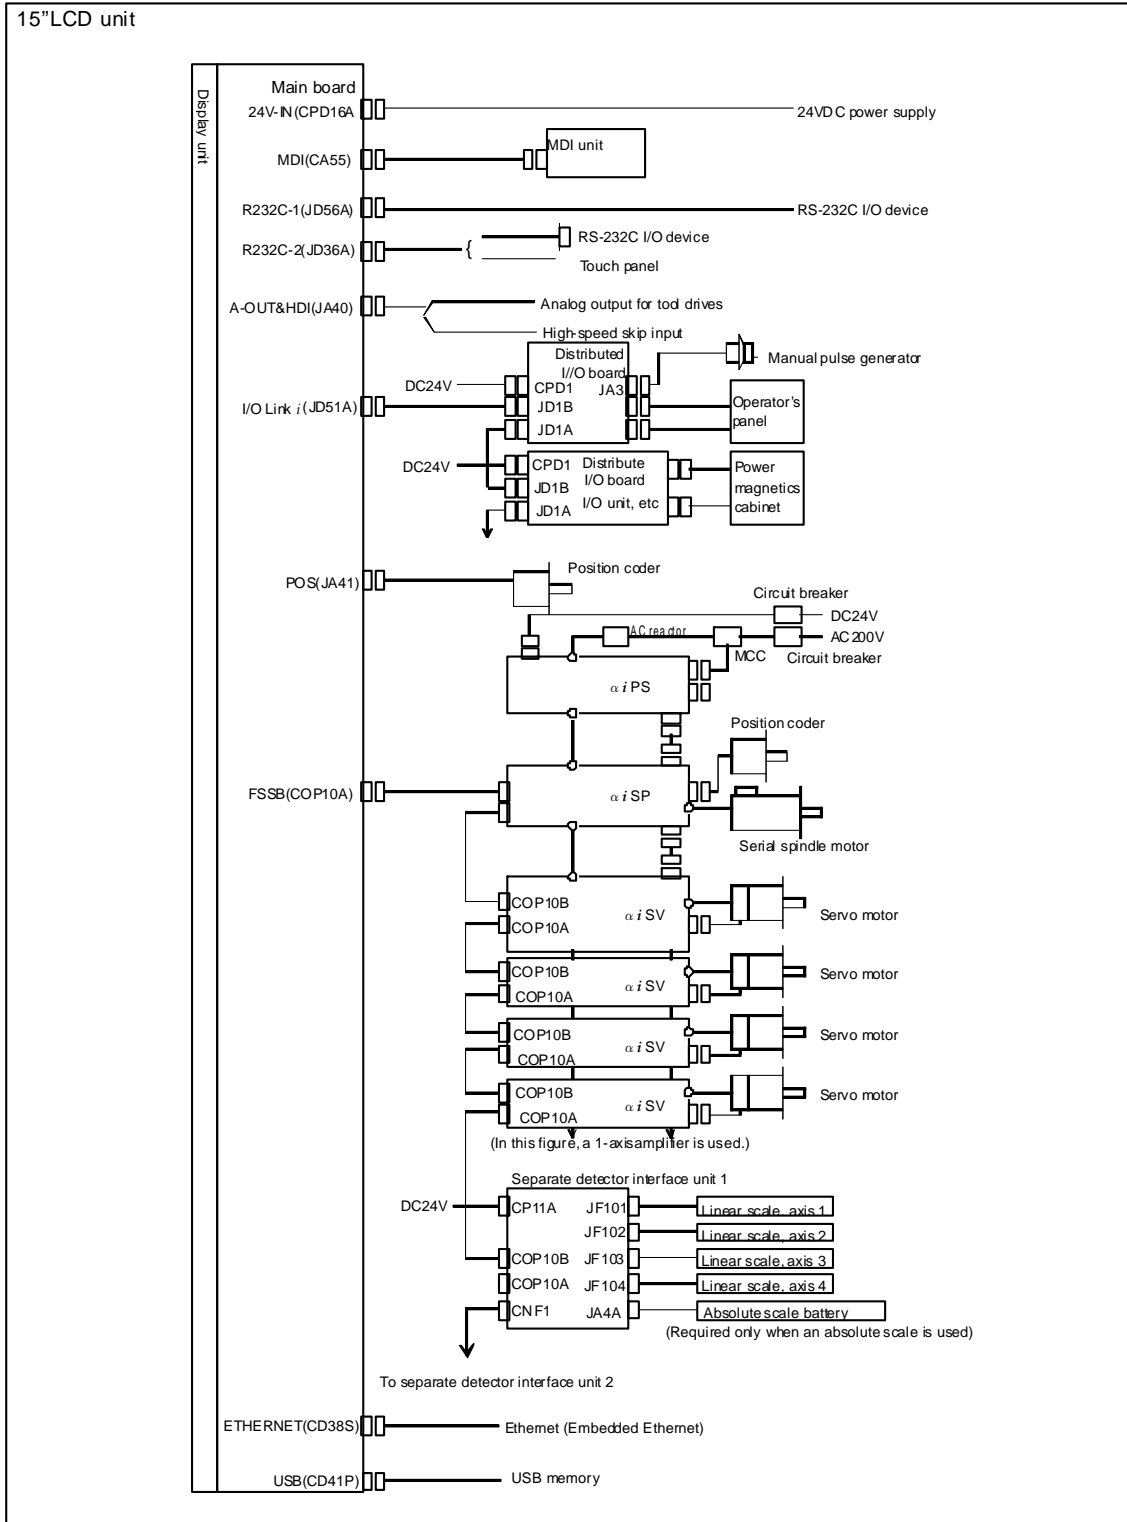

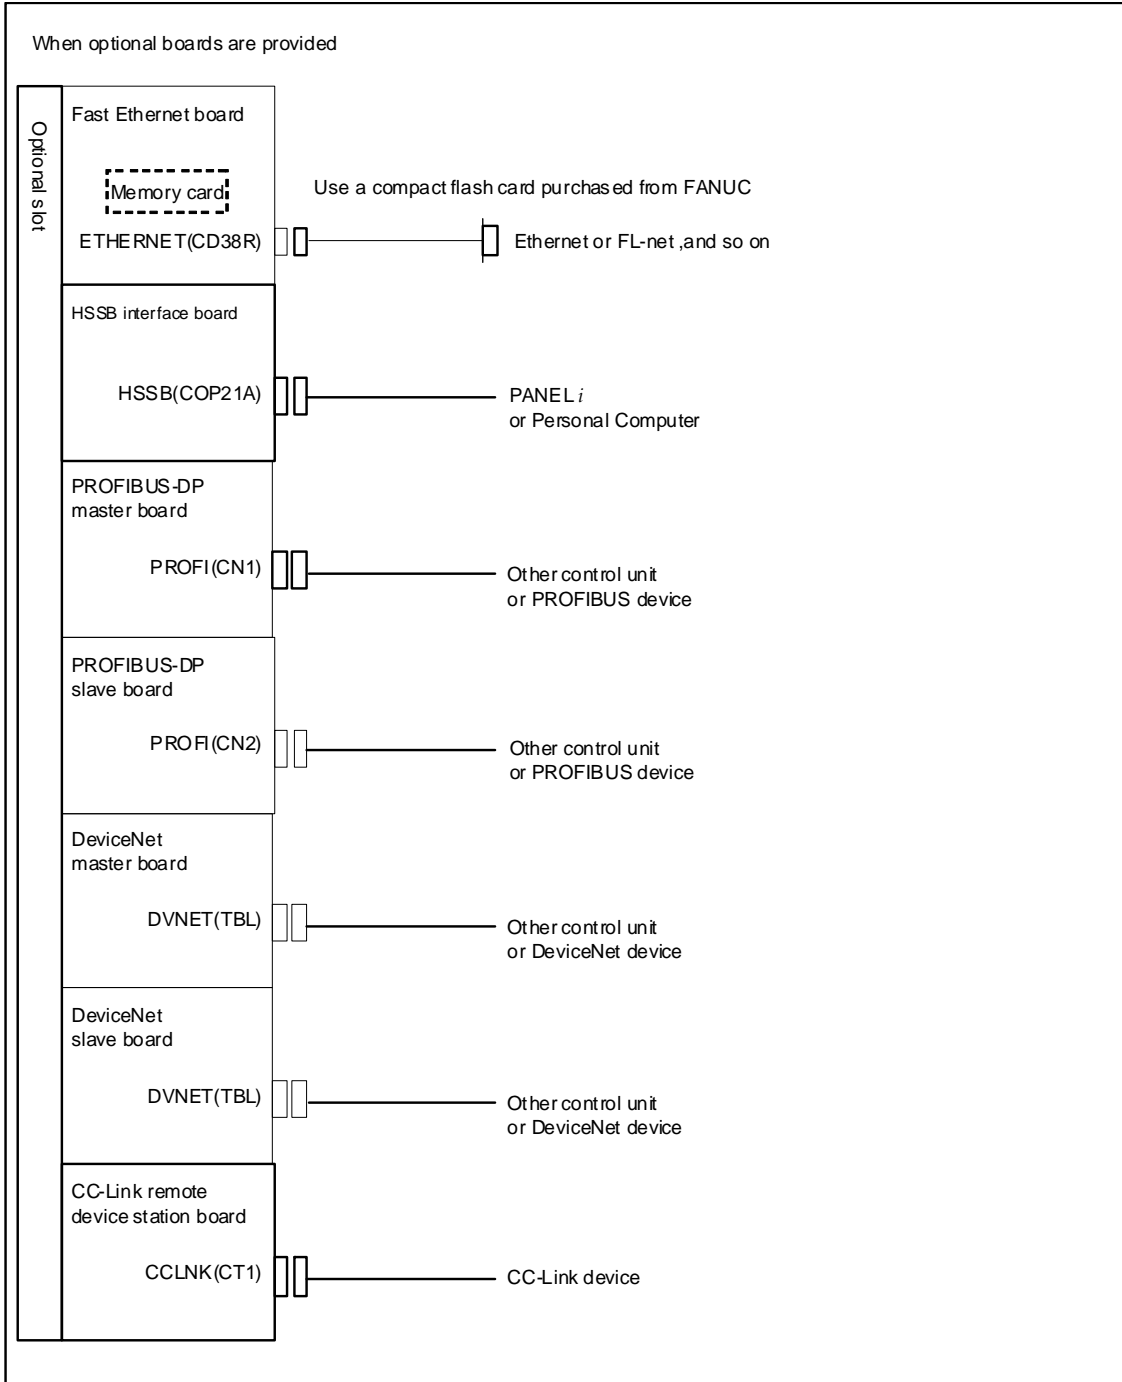

3 INSTALLATION

3.1 ENVIRONMENTAL REQUIREMENTS OUTSIDE THE CABINET

3.1.1 Environmental Conditions outside the Cabinet

The control unit and the peripheral units have been designed on the assumption that they are housed in closed cabinets. In this manual "cabinet" refers to the following:

- Cabinet manufactured by the machine tool builder for housing the control unit or peripheral units;
- Operation pendant, manufactured by the machine tool builder, for housing the MDI unit, or operator's panel.
- Equivalent to the above.

The following table lists the environmental conditions required in installing these cabinets. Section 3.3 of this connection manual explains the design conditions regarding installation of cabinets that will meet the environmental conditions.

Ambient temperature of the cabinet	Operating	0°C to 45°C
	Nonoperating (including storage and transportation)	-20°C to 60°C
	Temperature change	0.3°C/minute or less
Humidity	Normal	75%RH or less, no condensation
	Short period (less than 1 month)	95%RH or less, no condensation
Vibration	Operating	4.9m/s ² (0.5G) or less
	Nonoperating (including storage and transportation)	9.8m/s ² (1.0G) or less
Meters above sea level	Operating	Up to 1000 m <small>(see Note 1 in the Subsec. 3.1.2.)</small>
	Nonoperating (including storage and transportation)	Up to 12000 m
Environment	Normal machine shop environment (The environment must be considered if the cabinets are in a location where the density of dust, coolant, organic solvent, and/or corrosive gas is relatively high.)	

3.1.2 Installation Conditions of the Control Unit

Condition		LCD-mounted type control unit and display unit
Ambient temperature	Operating	0°C to 58°C
	Nonoperating (including storage and transportation)	-20°C to 60°C
	Temperature change	0.3°C/minute or less
Humidity	Normal	75%RH or less, no condensation
	Short period (less than 1 month)	95%RH or less, no condensation

Condition		LCD-mounted type control unit and display unit
Vibration	Operating	4.9m/s ² (0.5G) or less FANUC's evaluation test was conducted under the following conditions complying with IEC 60068-2-6. 10 to 58Hz: 0.075mm (amplitude) 58 to 500Hz: 9.8m/s ² (1.0G) Direction of vibration: Each of the X, Y, and Z directions Number of sweep cycles: 10
	Nonoperating (including storage and transportation)	9.8m/s ² (1.0G) or less
Meters above sea level	Operating	Up to 1000m ^(Note 1)
	Nonoperating (including storage and transportation)	Up to 12000m
Environment		Coolant, lubricant, or cutting chips shall not be sprinkled directly over the CNC or servo unit. No corrosive gas shall be allowed.

NOTE

- 1 If the control unit is installed 1000 m or higher above sea level, the allowable upper ambient temperature of the control unit in the cabinet is changed as follows. Assume that the allowable upper ambient temperature of the control unit in the cabinet installed 1000 m or higher above sea level decreases by 1.0°C for every 100 m rise in altitude.
Example)
When a control unit whose required operating ambient temperature range is 0°C to 55°C is installed 1750 m above sea level:
55°C-(1750m-1000m)/100m × 1.0°C = 47.5°C
Therefore, the allowable ambient temperature range is from 0°C to 47.5°C.
- 2 When using a unit having additional installation conditions, be sure to meet also these conditions.

3.2 CAUTIONS REGARDING THE INSTALLATION DESIGN OF MACHINE TOOL POWER MAGNETICS CABINETS


When a cabinet is designed, it must satisfy the environmental conditions described in Section 3.1. In addition, the magnetic interference on the screen, noise resistance, and maintenance requirements must be considered. When mounting FANUC-supplied units, such as displays and operator's panels, use packing and fasten the mounting screws with the specified tightening torque. When designing magnetics cabinets, pay due consideration to each item stated in the following "CAUTION".

⚠ CAUTION

- 1 The cabinet must be fully closed. The cabinet must be designed to prevent the entry of airborne dust, coolant, and organic solvent.
- 2 The cabinet must be designed so that the permissible temperature of each unit is not exceeded. (See Section 3.3.)
- 3 A closed cabinet must be equipped with a fan to circulate the air within. (This is not necessary for a unit with fan.) The fan must be adjusted so that the air moves at 0.5 m/sec along the surface of each installed unit. However, do not blow air from the fan directly to the unit, because doing so can readily make dust attach the portion where the air flow hits, leading to possible trouble. (This is not necessary for a unit with fan.)


⚠ CAUTION

- 4 For the air to move easily, a clearance of 100 mm is required between each unit and the wall of the cabinet.
- 5 Each FANUC-supplied unit, such as a display or operator's panel, has been designed on the assumption that they will be mounted using packing and with the specified screw tightening torque. Failing to mount them as specified can lead to unit damage and/or malfunction. Be sure to use packing and observe the specified screw tightening torque. (See Sections 3.6 and 3.7.)
- 6 Failing to use packing or to provide complete sealing, or using any packing not resistant to coolant in use will allow dust, coolant, and organic solvent to get in the cabinet, leading to possible equipment trouble. Be sure to use an appropriate packing and a secure sealing.
In addition, use an appropriate packing and a secure sealing for the cable outlets and doors of the machine builder-provided units, such as displays, operator's panels, and cabinet pendant boxes. (See Section 3.7.)
- 7 The LCD must not be installed in such a place that coolant would directly fall onto the unit. Be sure to attach a protection cover to the LCD if it will be used in an environment where it is anticipated that coolant may come into contact with it, for example, an environment with a relatively dense oil mist.
- 8 Noise must be minimized. As the machine and the control unit are reduced in size, the parts that generate noise may be placed near noise-sensitive parts in the magnetics cabinet.
The control unit is built to protect it from external noise. Cabinet design to minimize noise generation and to prevent it from being transmitted to the control unit is necessary. (See Section 3.4.)
- 9 When placing units in the cabinet, also consider ease of maintenance. The units should be placed so that they can be checked and replaced easily when maintenance is performed.
- 10 The hard disk drive and floppy disk drive must not be installed near the source of a strong magnetic field.
- 11 The installation conditions of the I/O unit and connector panel I/O module must be satisfied. In order to secure ventilation in the equipment, mount the I/O unit and connector panel I/O module in the specified orientation. Clearances of 100 mm or more both above and below the I/O unit are required for wiring and ventilation.
Equipment radiating too much heat must not be put below the I/O unit and connector panel I/O module.

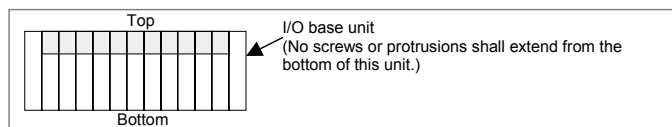

**CAUTION**

By a machine tool of a machine door adjacent to operator's panel, large shock will be applied to the operator's panel every time of opening or closing the door. CNC control unit and I/O unit on the operator's panel are deteriorated by repeated large shock for a prolonged period every time opening and closing of the door. So, attach a packing rubber or damper on the door to prevent damage by direct large shock. Use the rubber for measures of the door and high tolerance to a cutting fluid. Also, use the rubber even if repetition shock is applied, form does not change and vibration absorption effect does not deteriorate. When the rubber deteriorates, describe exchange method of the rubber, make the structure which can be exchanged by an end user. Describe the exchange method to manual of a machine tool.

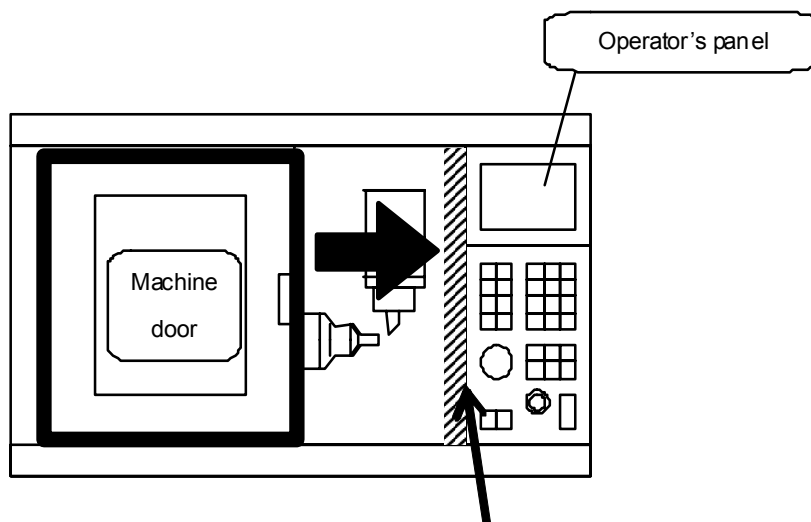

A machine tool of the door and the operator's panel are contiguous, please attach the rubber or a damper for the measures of shock when opening and closing the door.

3.3 THERMAL DESIGN OF THE MACHINE TOOL MAGNETIC CABINET

The internal air temperature of the cabinet increases when the units and parts installed in the cabinet generate heat. Since the generated heat is radiated from the surface of the cabinet, the temperature of the air in the cabinet and the outside air balance at certain heat levels. If the amount of heat generated is constant, the larger the surface area of the cabinet, the less the internal temperature rises. The thermal design of the cabinet refers to calculating the heat generated in the cabinet, evaluating the surface area of the cabinet, and enlarging that surface area by installing heat exchangers in the cabinet, if necessary. Such a design method is described in the following subsections.

3.3.1 Temperature Rise within the Machine Tool Magnetic Cabinet

The cooling capacity of a cabinet made of sheet metal is generally 6 W/°C per 1m² surface area, that is, when the 6W heat source is contained in a cabinet having a surface area of 1 m², the temperature of the air in the cabinet rises by 1°C. In this case the surface area of the cabinet refers to the area useful in cooling, that is, the area obtained by subtracting the area of the cabinet touching the floor from the total surface area of the cabinet. There are two preconditions : The air in the cabinet must be circulated by the fan, and the temperature of the air in the cabinet must be almost constant. For example, the operator's panel cabinet may contain an LCD-mounted type control unit. To keep the temperature in the cabinet at 58°C or below when the ambient temperature is 45°C, the equation below must be satisfied.

Internal heat loss P [W] ≤

$6[\text{W}/\text{m}^2 \cdot ^\circ\text{C}] \times \text{surface area } S[\text{m}^2] \times 13[^\circ\text{C}]$ of rise in temperature

(A cooling capacity of 6 W/°C assumes the cabinet is so large that agitation with the fan motor does not make the temperature distribution uniform. For a small cabinet like the operator's panel, a cooling capacity of 8 W/°C, indicated in Subsection 3.3.3, may be used.)

For example, a cabinet having a surface area of 4m² has a cooling capacity of 24W/°C. To limit the internal temperature increase to 13°C under these conditions, the internal heat must not exceed 312W. If the actual internal heat is 360W, however, the temperature in the cabinet rises by 15°C. When this happens, the cooling capacity of the cabinet must be improved using the heat exchanger.

3.3.2 Heat Output of Each Unit

Table 3.3.2 Heat output

Unit		Heat output	Remarks	
LCD-mounted type control unit	8.4"LCD unit	Option 0 slot	32W	Note 1)
		Option 2 slots		
	10.4"LCD unit	Option 0 slot	32W	Note 1)
		Option 2 slots		
	15"LCD unit	Option 0 slot	37W	Note 1)
		Option 2 slots		
Optional board	Fast Ethernet board (when used as data server functions)		3W (3.3W)	
	HSSB interface board		4W	
	PROFIBUS-DP master board		5W	
	PROFIBUS-DP slave board		2W	
	DeviceNet master board		3W	
	DeviceNet slave board		3.5W	
	CC-Link remote device station board		3W	
MDI units		0W		

NOTE

- 1 The values listed above do not include any heat output of the option boards. To obtain the total heat output of the control unit, add the heat output from the any option boards.
- 2 See Chapter 6 for the heat output of the separate detector interface unit.
- 3 See Chapter 8 for the heat output of each I/O unit.
- 4 Refer to the PANEL *i* Connection and Maintenance Manual (B-64223EN) for the heat output of the PANEL *i*.

3.3.3 Thermal Design of Operator's Panel

With a small cabinet like the operator's panel, the heat dissipating capacity of the cabinet is as shown below, assuming that there is sufficient mixing of the air inside the cabinet.

Coated metal surfaces: 8 W/m²·°C

Plastic surfaces: 3.7 W/m²·°C

An example of the thermal design for the cabinet shown in Fig. 3.3.3 is shown below.

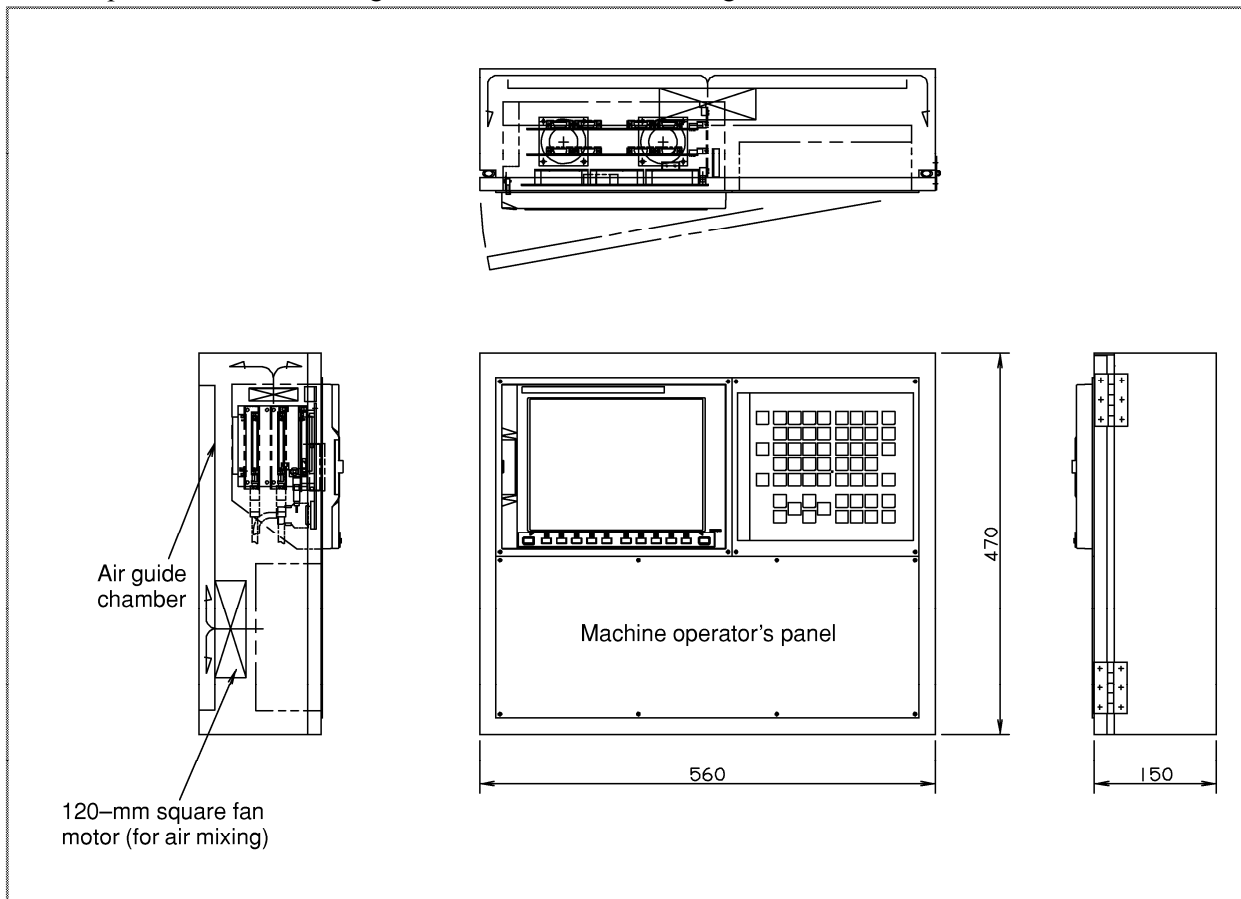


Fig. 3.3.3

Assume the following.

Thermal exchange rates

Coated metal surfaces : 8 W/m²·°C

Plastic surfaces : 3.7 W/m²·°C

Allowable temperature rise : 13°C higher than the exterior temperature

Also, assume the following.

Dimensions of pendant type cabinet shown in Fig. 3.3.3: 560(W) × 470(H) × 150(D) mm

Surface area of metallic sections : 0.5722 m²
 Surface area of plastic sections : 0.2632 m²

In this case, the allowable total heat dissipation for the cabinet is:

$$8 \times 0.5722 \times 13 + 3.7 \times 0.2632 \times 13 = 72 \text{ W.}$$

In consequence, it can be concluded that the units shown in Table 3.3.3 on the next page can be installed in this cabinet.

Table 3.3.3

LCD-mounted type control unit (with 10.4"LCD unit)	32W
Standard machine operator's panel	15W ^(Note)
120-mm square fan motor for air mixing	8W
Total heat dissipation of the above	55W

NOTE

The 15 W quoted for the standard machine operator's panel represents an example heat output value when half of all the input signals are turned on. This value varies, depending on the mechanical configuration.

3.4 COUNTERMEASURES AGAINST NOISE AND GROUNDING

In general, noise can occur because of electrostatic coupling, electromagnetic induction, and ground loop and get in a control unit.

On the control unit side, due consideration is paid to a protective measure for external noise. However, it is hard to measure the magnitude and frequency of noise quantitatively and there are lots of uncertainties with noise. So, it is important to take measures for minimizing noise occurrence and keeping any noise from entering the control unit in order to enhance stability in CNC-based machine tool system operation.

Grounding the power magnetics cabinet and devices is very important to prevent an electric shock and suppress a noise influence. The CNC system uses the following three types of grounding:

- (1) Signal grounding
This type of grounding is used to supply a reference potential (0 V) for the electrical signal system.
- (2) Frame grounding
This type of grounding is used for safety reasons as well as to suppress external and internal noise. For example, grounding is provided for the device frames, panels, and shielding on the interface cables connecting the devices.
- (3) System grounding (PE)
This type of grounding is used to connect frame grounds, which are provided for the individual devices or between the units, to the ground as a system at a single point.

When designing the power magnetics cabinet, guard against noise in the machine as described in the following section.

3.4.1 Grounding as Noise Suppression Measures

3.4.1.1 Grounding methods

Typically, noise that becomes a problem is high-frequency noise. To suppress high-frequency noise, it is important that the devices are grounded at low impedance^(NOTE). The grounding schemes for this purpose are described below.

NOTE
 Impedance includes a resistance component that converts electric current to heat as well as a component called “reactance”, and indicates a characteristic of resistance to the flow of alternating current at a certain frequency.

(1) Multipoint grounding scheme

In this grounding scheme, when grounded at sufficiently low impedance, the cabinet metal plates are used as ground plates, to which grounding is provided in the vicinity of each device. This scheme has a great effect of suppressing high-frequency noise because it enables grounding to the low-impedance metal plates of the cabinet in the shortest distance. However, the noise suppression effect depends on the cabinet structure because the cabinet metal plates are used as ground plates. See Subsection 3.4.1.2 for the cabinet. Fig. 3.4.1.1 (a) is a schematic wiring diagram.

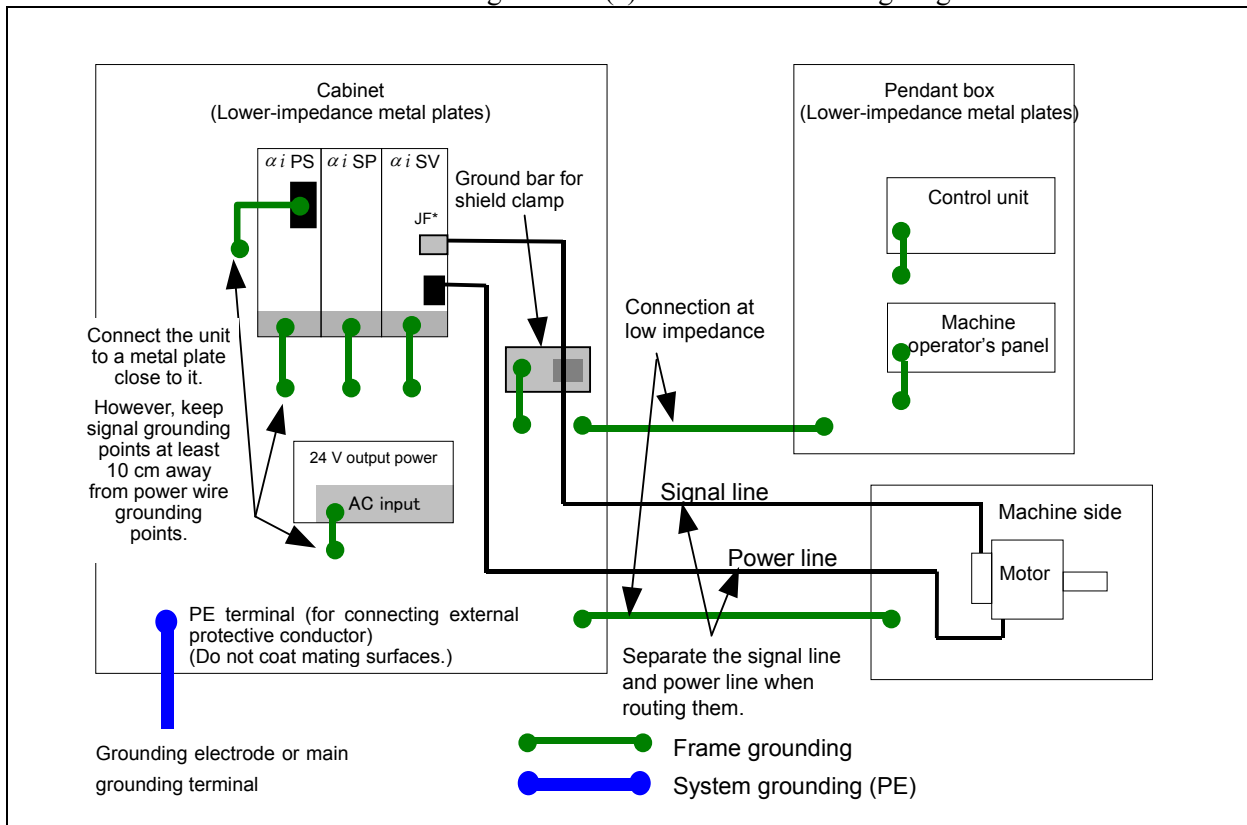


Fig. 3.4.1.1 (a) Schematic diagram for multipoint grounding scheme

When the multipoint grounding scheme is adopted, the units can be grounded at low impedance, and ground wires (wires from the unit’s ground terminal to a grounding plate) can be shortened, so that wiring may be simplified. So, FANUC recommends the multipoint grounding scheme.

⚠ CAUTION
 If it is impossible to configure cabinet metal plates with a low impedance, it is likely that noise may effect grounding circuits shared by power wires and signal wires.

(2) Single–point grounding scheme

In this grounding scheme, grounding separation is achieved between the signal system and power system, and grounding is provided at a single point to suppress the noise influence of the power system on the signal system.

This scheme tends to need longer connection wires for grounding the devices. To produce a sufficient effect of suppressing high–frequency noise, it is therefore necessary to use larger–diameter wires or use two or more wires for each connection. Fig. 3.4.1.1 (b) is a schematic wiring diagram.

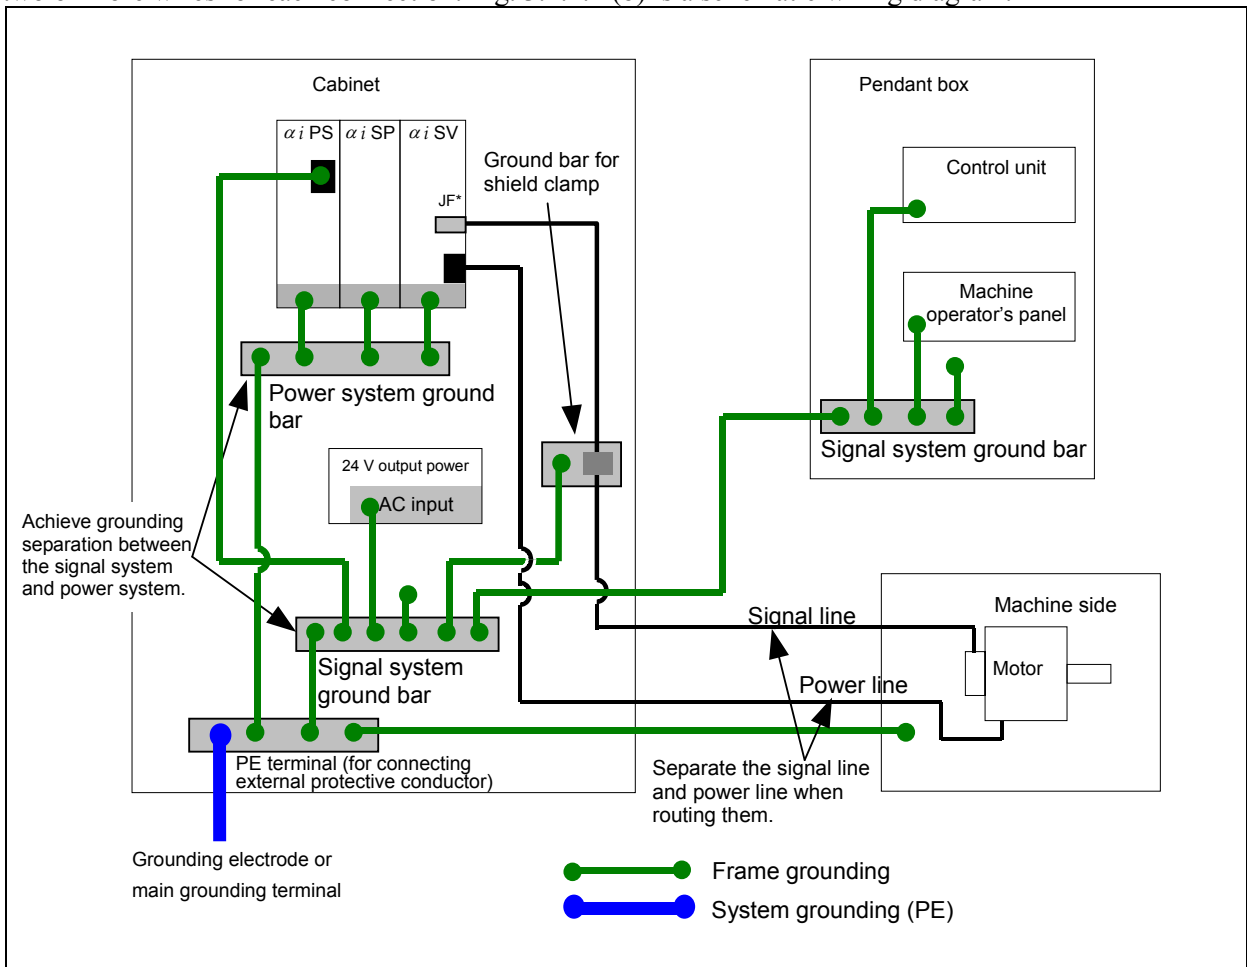


Fig. 3.4.1.1 (b) Schematic diagram for multipoint grounding scheme

3.4.1.2 Cabinet

A cabinet is an important element in improving noise immunity and suppressing radiated noise. One of the causes of problems related to noise immunity and radiated noise is faulty electrical continuity between the metal plates that make up the cabinet. Typically, noise that becomes a problem is high–frequency noise, against which measures must be taken in the cabinet design.

(1) Basic cabinet structure

A cabinet should basically be made of metal.

To improve noise immunity, there must be low-impedance electrical continuity between the metal plates that make up the cabinet, which are the side plates, top plate, and bottom plate, and a welding-type cabinet structure is recommended.

As for a cabinet welding method, bead welding is more suitable than spot welding for providing low-impedance electrical continuity between the metal plates.

For an assembly-type cabinet structure, provide electrical continuity by bringing the metal plates into direct contact with each other, without applying a coating to their joint surface areas.

In a structure that has the metal plates connected only with wires because of structural constraints, low-impedance connections are more difficult to make than in a structure in which welding is made or the metal plates are brought into direct contact with each other. It is necessary to maintain sufficient levels of items such as the cross-sectional area of a wire to use, continuity of connections, and contact areas.

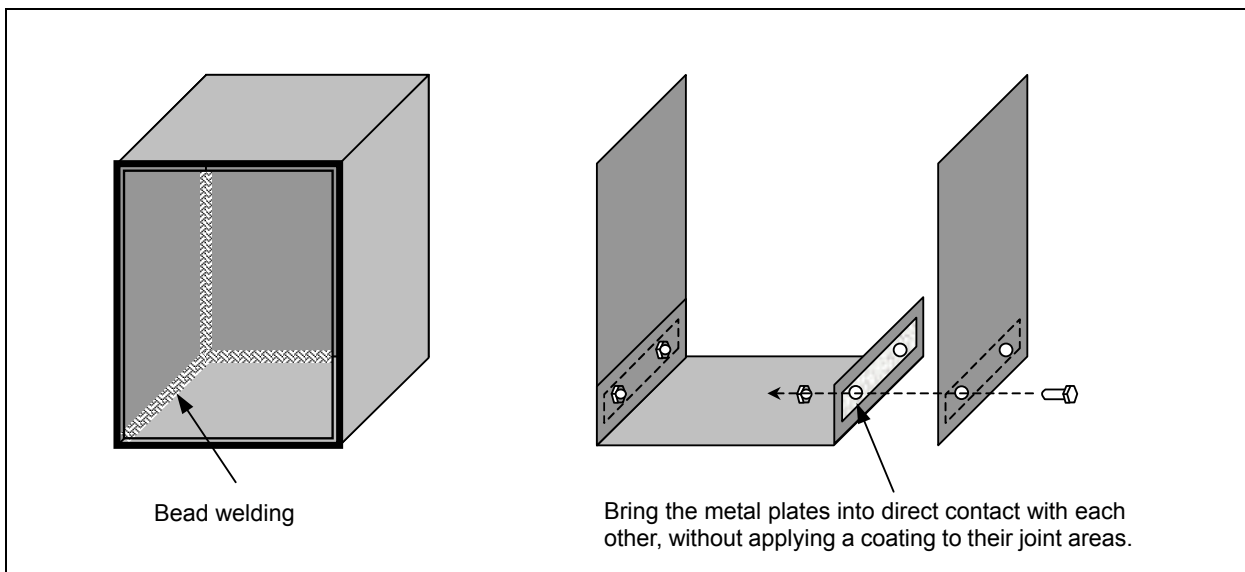


Fig. 3.4.1.2 (a) Cabinet structure

NOTE

Explained above is how to provide cabinets with low-impedance electrical continuity so as to increase noise immunity and to suppress noise radiation. See Subsection 3.4.2 for conditions required to configure protective grounding circuits.

(2) Mounting units on the cabinet

The shortest possible lengths of unit ground wires (wires from the unit's ground terminal to a grounding plate) should be used to make connections. A ground wire with a small conductor diameter causes impedance to high-frequency noise to become particularly higher, leading to an insufficient grounding effect. For the location of the ground terminal of each unit, refer to the manual relevant to the unit. The following shows the recommended method by which the metal plate with the unit mounted is installed on the cabinet. Care should be taken so that the cabinet and metal plate are connected to each other on their broad areas with no coating. It is not recommended that electrical continuity be provided only by screws, because impedance to high frequency cannot be sufficiently low.

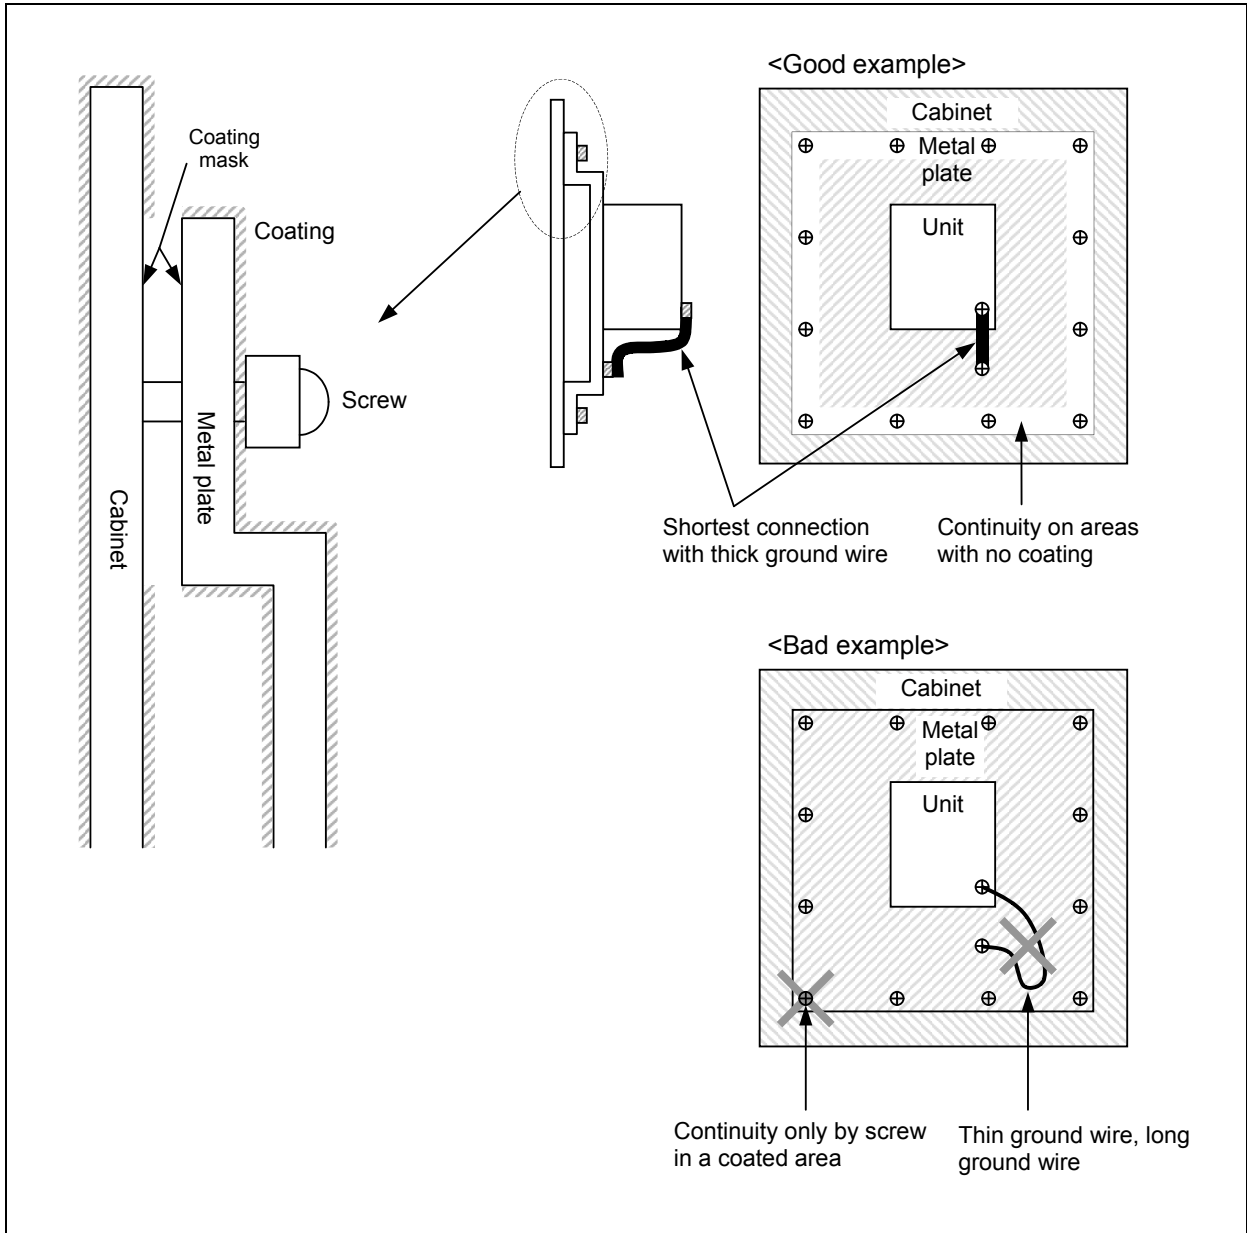


Fig. 3.4.1.2 (b) Installing a unit in a cabinet

3.4.2 Protective Ground (Grounding for Protection against Indirect Contact)

Protection against indirect contact is intended to prevent the risk that may occur in a conductive portion which is not charged with electricity (applied with voltage) during normal operation but may be charged with electricity if insulation is accidentally destroyed. It must be implemented by:

- measures to prevent the occurrence of a touch voltage, or
- automatic disconnection of the supply before the time of contact with a touch voltage can become hazardous

As for protective grounding in “automatic disconnection of the supply before the time of contact with a touch voltage can become hazardous”, follow any standards the machine tool is supposed to meet. Some standard examples follow:

Regarding protective grounding

IEC 60364-4-41:2005 and JIS C 60364-4-41:2010 (Low-voltage electrical installations - Part 4-41: Protection for safety - Protection against electric shock) 411

Regarding the minimum cross-sectional area of protective conductors

IEC 60204-1:2005/A1:2008 and JIS B 9960-1:2008/A1:2011 (Safety of Machinery – Electrical Equipment of Machines – Part 1: General Requirements) 8.2.2

NFPA 79:2012 (Electrical Standard for Industrial Machinery) 8.2.2 Equipment Grounding (Protective) Conductors and Bonding Jumpers

NFPA 79:2012 (Electrical Standard for Industrial Machinery) 18.2 Continuity of the Equipment Grounding (Protective Bonding) Circuit

Regarding the cross-sectional area of a protective conductor shared by multiple circuits

IEC 60364-5-54:2011 and JIS C 60364-5-54:2006 (Electrical installations of buildings – Part 5-54: Selection and erection of electrical equipment – Earthing arrangements, protective conductors and protective bonding conductors) 543.1.4

Regarding use of enclosures (cabinets) or frames as protective conductors

IEC 60204-1:2005/A1:2008 and JIS B 9960-1:2008/A1:2011 (Safety of Machinery – Electrical Equipment of Machines – Part 1: General Requirements) 8.2.3

IEC 60364-5-54:2011 and JIS C 60364-5-54:2006 (Electrical installations of buildings – Part 5-54: Selection and erection of electrical equipment – Earthing arrangements, protective conductors and protective bonding conductors) 543.2.2, 543.2.3;

NFPA 79:2012 (Electrical Standard for Industrial Machinery) 12.2.1 Conductor Material

3.4.3 Connecting the Ground Terminal of the Control Unit

Continuity between the control unit's and a 0 V terminals



CAUTION

In each control unit, the 0 V and ground terminals are electrically connected to each other. So, do not connect any external unit's 0 V connected to the control unit's 0 V to any other line's grounding electrode that can have an electrical potential different from that of the grounding electrode connected to the control unit.

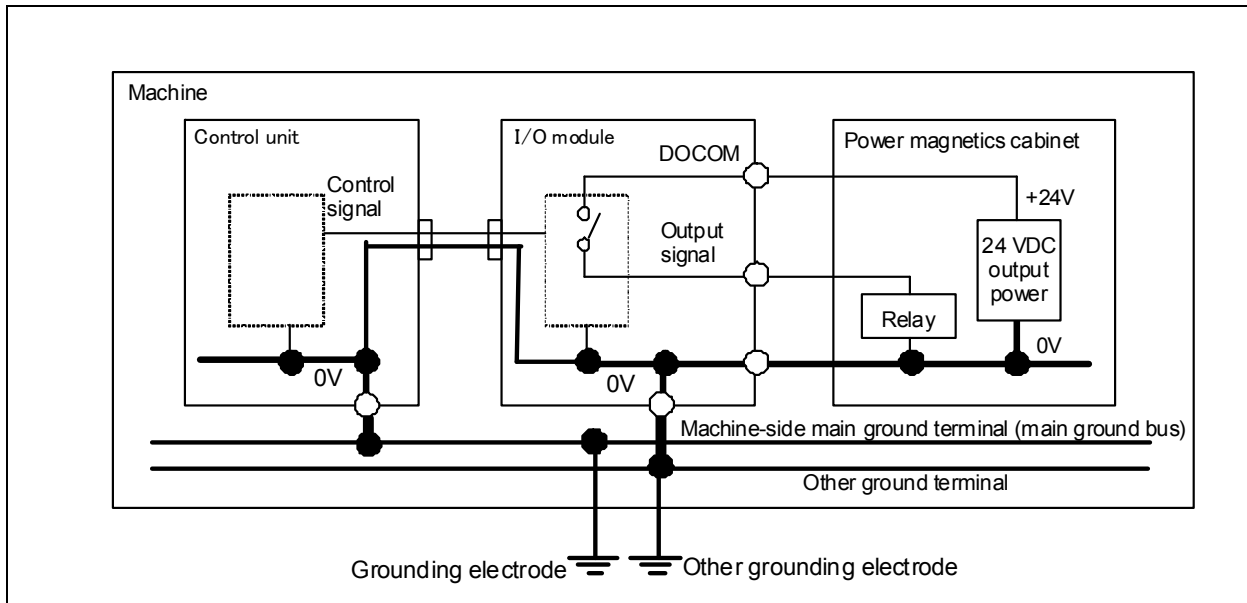


Fig. 3.4.3 (a) Undesired example of using other ground terminal

Connecting the ground terminal of an LCD-mounted type control unit

Connect the 0 V line in the control unit to the cabinet's metal plate or signal system ground bar nearby via the protective ground terminal (see below).

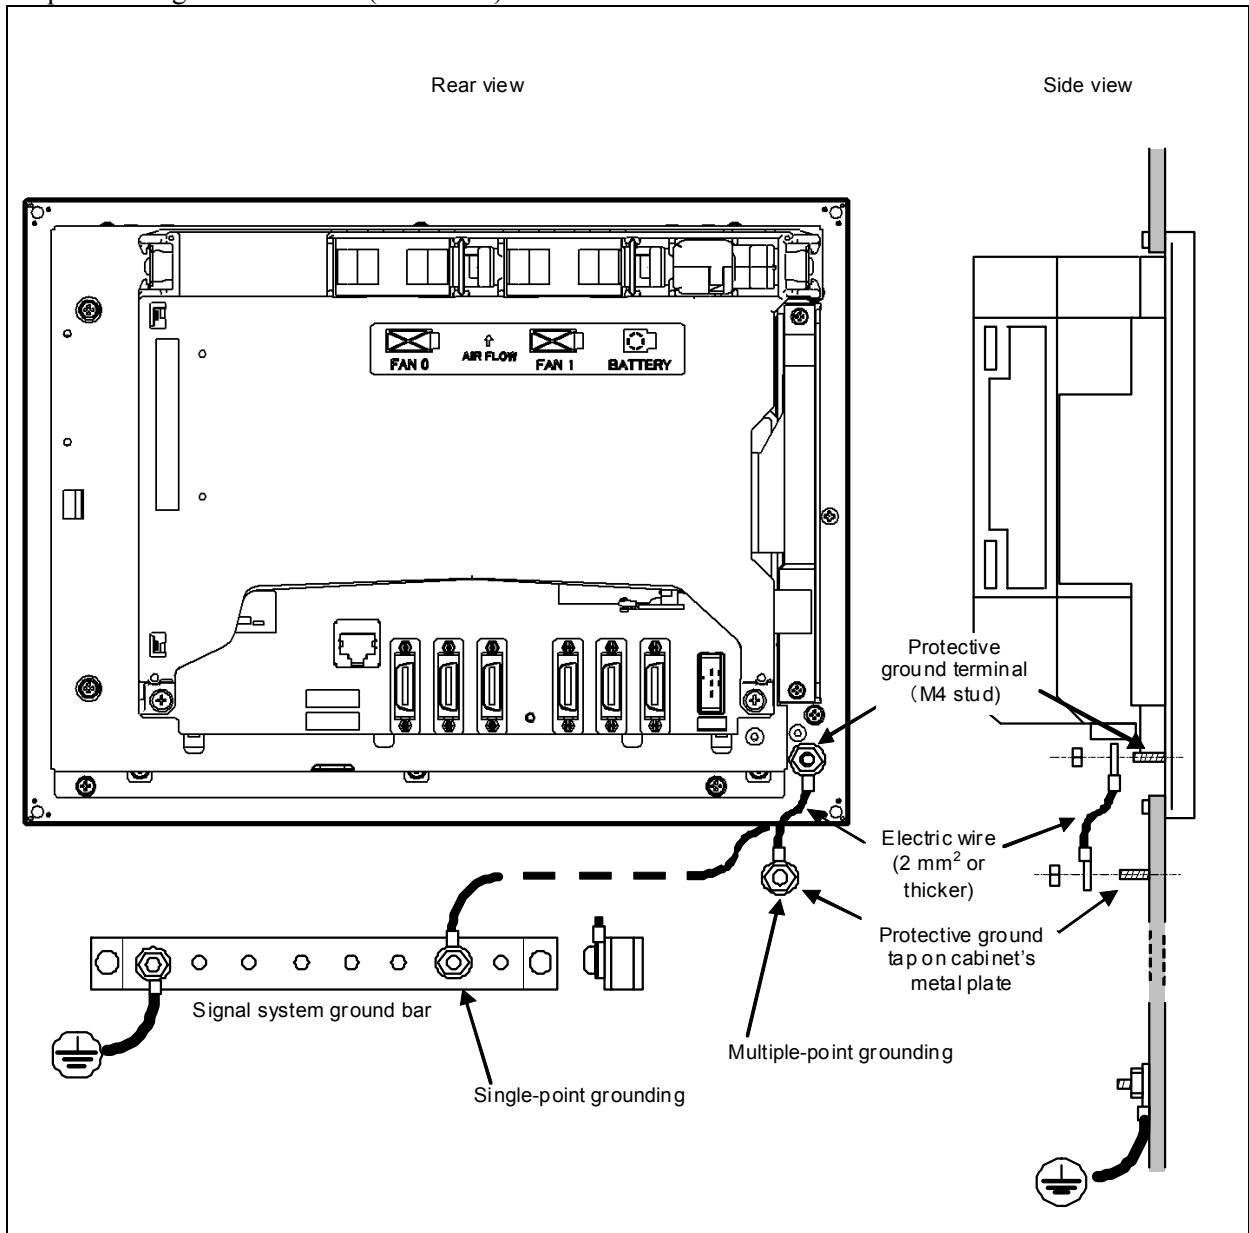


Fig. 3.4.3 (b) Ground terminal connection

3.4.4 Separating Signal Lines

The cables used for the CNC machine tool are classified as listed in the following table. Process the cables in each group as described in the action column.

Table 3.4.4 Cable grouping

Group	Signal line	Action
A	Primary AC power line	Bind the cables in group A separately ^(Note 1) from groups B and C, or cover group A with an electromagnetic shield ^(Note 2) . See Subsection 3.4.5 and connect spark killers or diodes with the solenoid and relay.
	Secondary AC power line	
	AC/DC power lines (containing the power lines for the servo and spindle motors)	
	AC/DC solenoid	
	AC/DC relay	

Group	Signal line	Action
B	DC solenoid (24 VDC)	Connect diodes with the DC solenoid and relay. Bind the cables in group B separately from group A, or cover group B with an electromagnetic shield. Separate group B as far from group C as possible. It is desirable to apply shield processing described in Subsection 3.4.6.
	DC relay (24 VDC)	
	DI/DO cable between the I/O unit and power magnetics cabinet	
	DI/DO cable between the I/O unit and machine	
	24 VDC input power cables connected to the control unit and its peripherals	
C	I/O Link <i>i</i> cable	Bind the cables in group C separately from group A, or cover group C with an electromagnetic shield. Separate group C as far from group B as possible. Be sure to perform shield processing as described in Subsection 3.4.6.
	Cable for the position coder	
	Cable for the manual pulse generator	
	Cable for the MDI ^(Note 3)	
	RS-232C interface cable	
	Cable for the battery	
	Cable for the Ethernet	
	Other cables for which shield processing is specified	

NOTE

- 1 Binding the cables in one group separately from another means that the groups are placed 10 cm or more apart from one another.
- 2 Covering a group with an electromagnetic shield means that shielding is provided between groups with grounded steel plates.
- 3 The shield is not required when the cable for the MDI is no more than 50 cm in length.

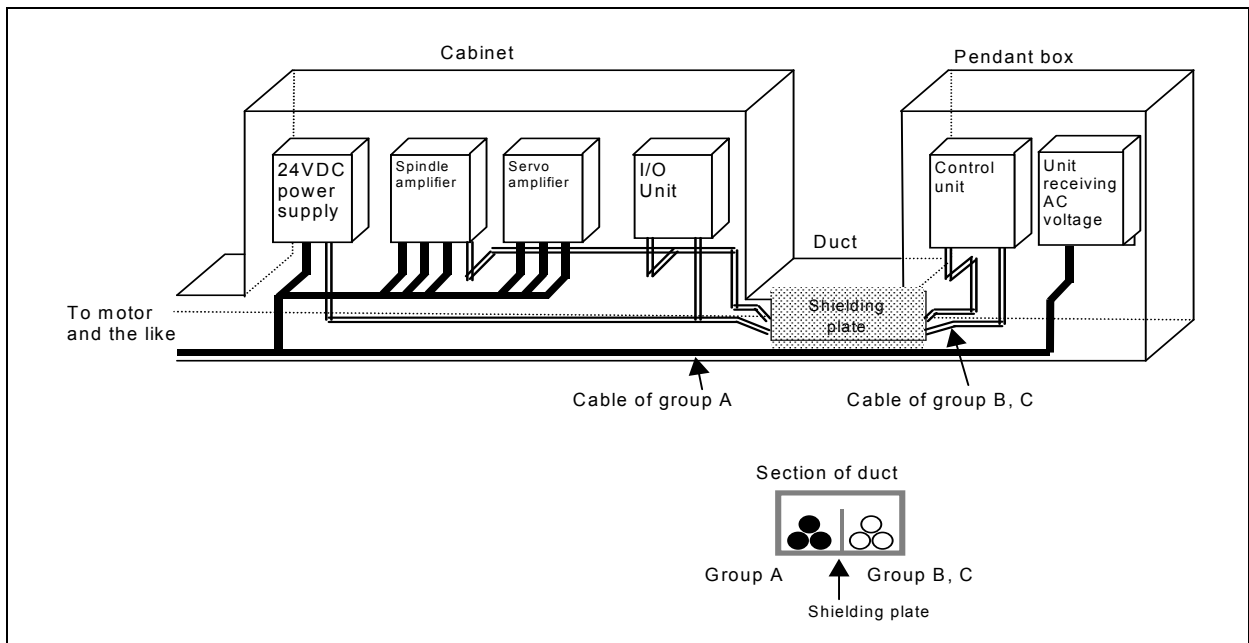


Fig. 3.4.4 Cable layout example

3.4.5 Noise Suppressor

Actuators, such as solenoids and relays, used in power magnetics cabinets need a noise suppressor.

Because an actuator, which converts electrical energy to mechanical action, is an inductive load, it resonates with the parasitic capacitance in a circuit containing it, when it works on and off, thus generating intermittent arcs accompanied by abrupt voltage rises and falls at its contacts, hence electromagnetic waves interfering with electronics circuits. As a remediation measure, treat the inductive load as described below.

- 1) While referencing the processing for cable groups A and B described in Subsection 3.4.4, “Separating Signal Lines”, apply a CR snubber circuit and a diode, respectively, to an inductive load in an AC circuit and that in a DC circuit.
- 2) When selecting a CR snubber or diode, observe the following cautions.

Cautions for selecting and using a CR snubber

- Use a CR snubber in an AC circuit.
A varistor, voltage clamping element, can limit the peak of an oscillating voltage waveform but cannot relax an abrupt voltage transition. For this reason, we recommend using a CR snubber rather than the varistor.
- Determine the rating of the resistor and capacitor in the CR snubber according to the steady-state current I (A) and DC resistance R_L (Ω) of the inductive load as follows:
 - 1) CR snubber resistance: $R \cong R_L(\Omega)$
 - 2) CR snubber capacitance: $\frac{I^2}{10} \leq C \leq \frac{I^2}{20}$ (μF)
- Place the CR snubber close to the inductive load to minimize its wiring.

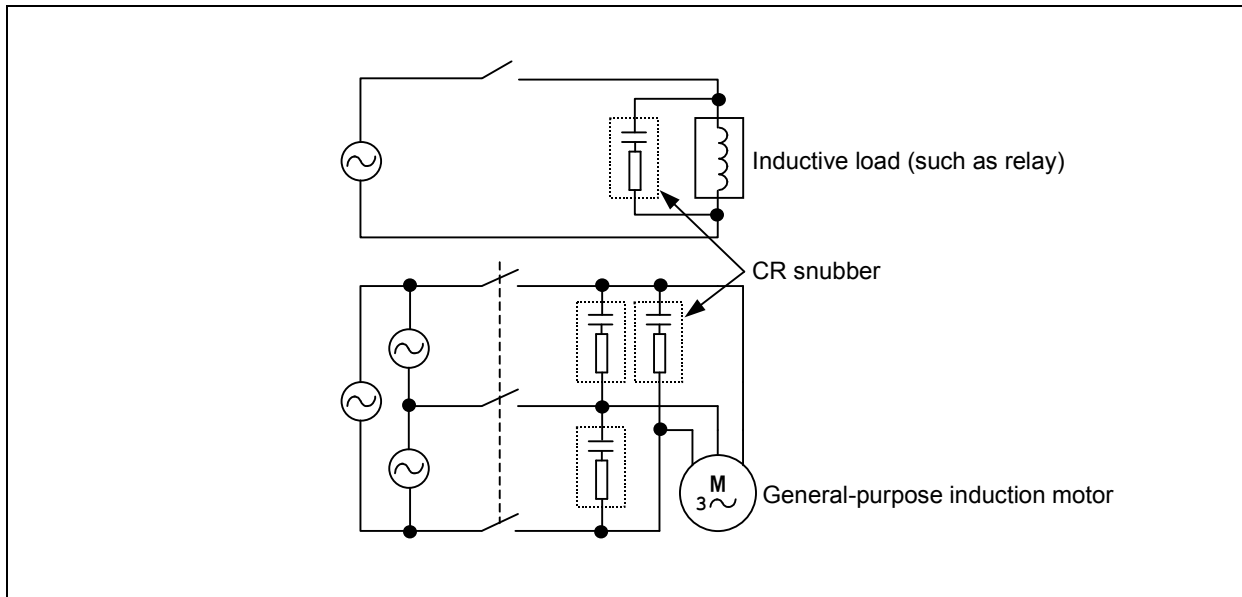


Fig. 3.4.5 (a) Example of applying a CR snubber

Cautions for selecting and using a diode

- A diode (freewheeling diode) can be used as a noise suppressor for a DC driver circuit.
- Determine the ratings of the diode according to the drive voltage and current for the inductive load (such as a solenoid coil, relay, or motor) as follows:
 - 1) Voltage rating: Approximately twice the voltage applied to the inductive load
 - 2) Current rating: Approximately twice the steady-state current flowing through the inductive load
- Place the diode close to the inductive load in order to minimize its wiring.

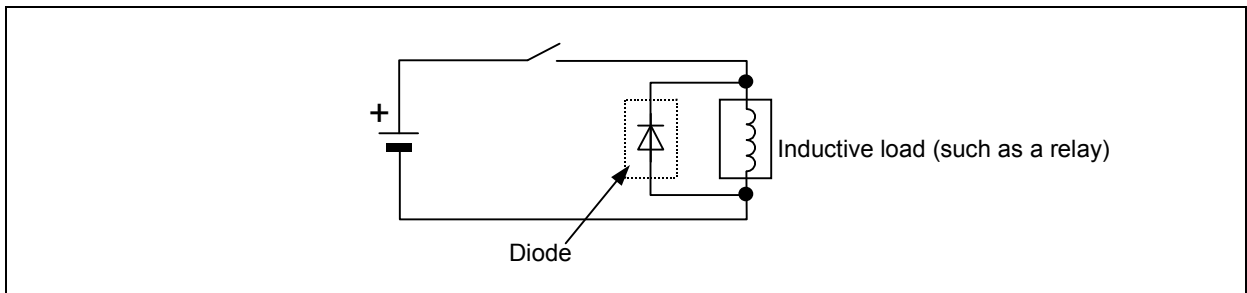


图3.4.5 (b) Example of applying a diode

3.4.6 Cable Clamp and Shield Processing

Some cables that are drawn into the control unit, servo amplifier, or spindle amplifier need shielding (basically, every signal line needs shielding). Clamp all these cables in the way shown below. This type of clamping works for both cable supporting and shielding. Be sure to make clamping because it is quite important to make system operation stable. Clamping shield correctly can suppress effect from external noise.

Partially peel the sheath off a cable and expose the shield, and press the exposed portion against the ground bar with the clamp. Care should be taken so that the ground bar and shield have a surface contact in a larger area. (See the figure below.)

The machine builder is requested to prepare the ground bar for cable clamping and place it as shown below.

When the multipoint grounding scheme is used, care should be taken so that the ground bar for the shield clamp and cabinet are connected at low impedance by, for example, preventing the cabinet side contact surface from being coated.

When using an in-line connector or the like to split a cable, it is necessary to connect the shield of one portion of the cable and that of the other portion and to keep the total impedance of the two cable portions from becoming high. Even if the connector is placed at the inlet of the cabinet, it is also necessary to use the shield for the intra-cabinet portion of the cable all the way to the other end of the cable.

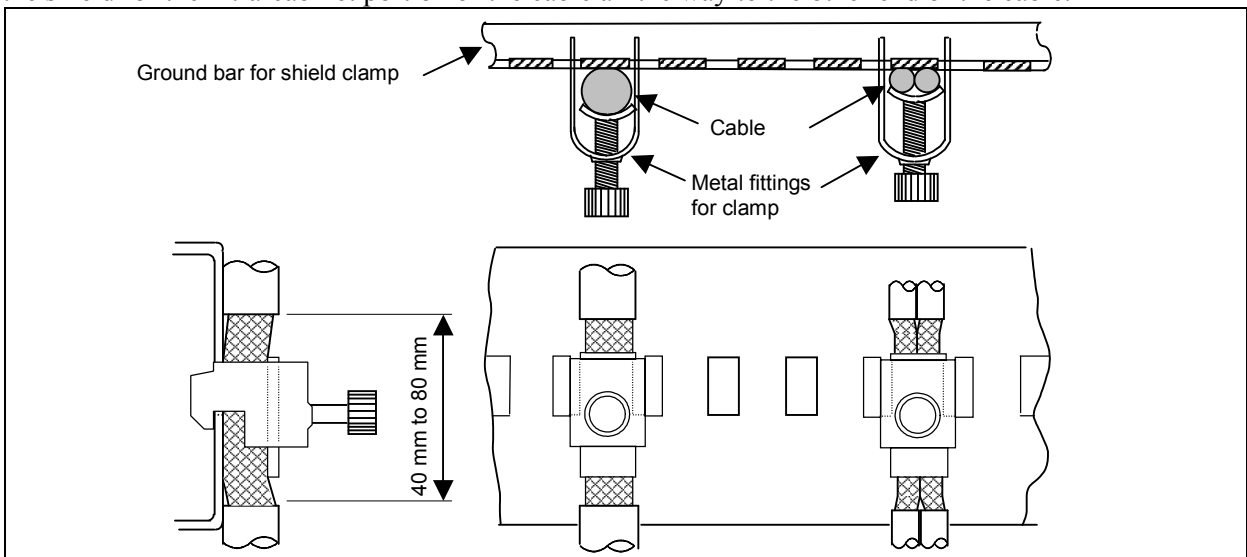


Fig. 3.4.6 (a) Cable clamp (1)

NOTE

- 1 Select a cable with a proper length.
- 2 If the cable is too long, the noise immunity may be reduced or noise may be caused on other cables. In addition, when the excess length is coiled, the inductance is increased and a high voltage is induced during turning on or off of signals. This may cause a failure or a malfunction due to noise.
- 3 Bundle and clamp the shields of cables that lead into the control unit or amplifier at a point, respectively, close to the unit or amplifier.

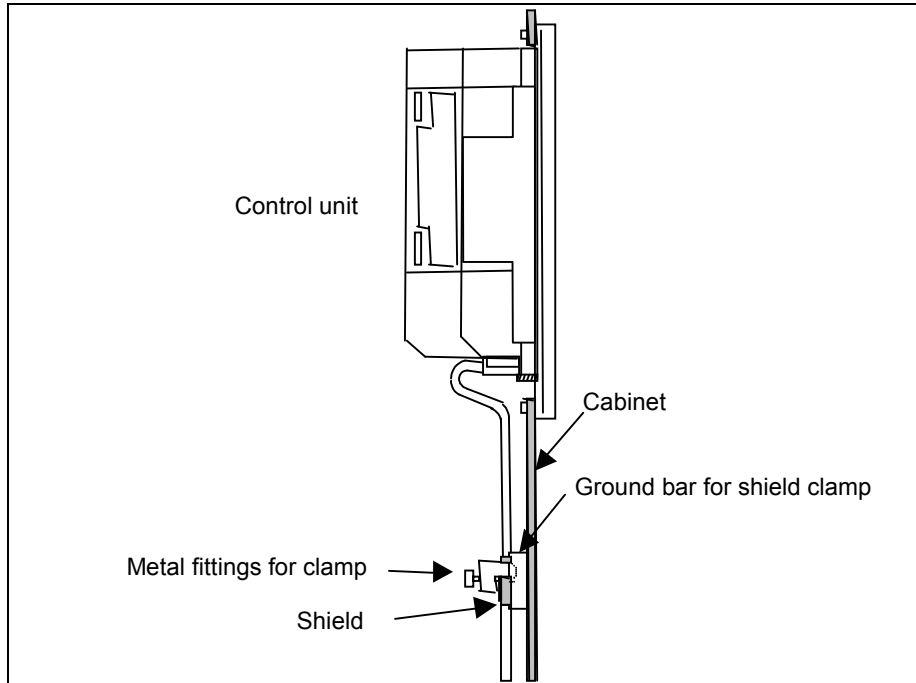


Fig. 3.4.6 (b) Cable clamp (2)

Prepare a ground bar for cable clamping shown below.

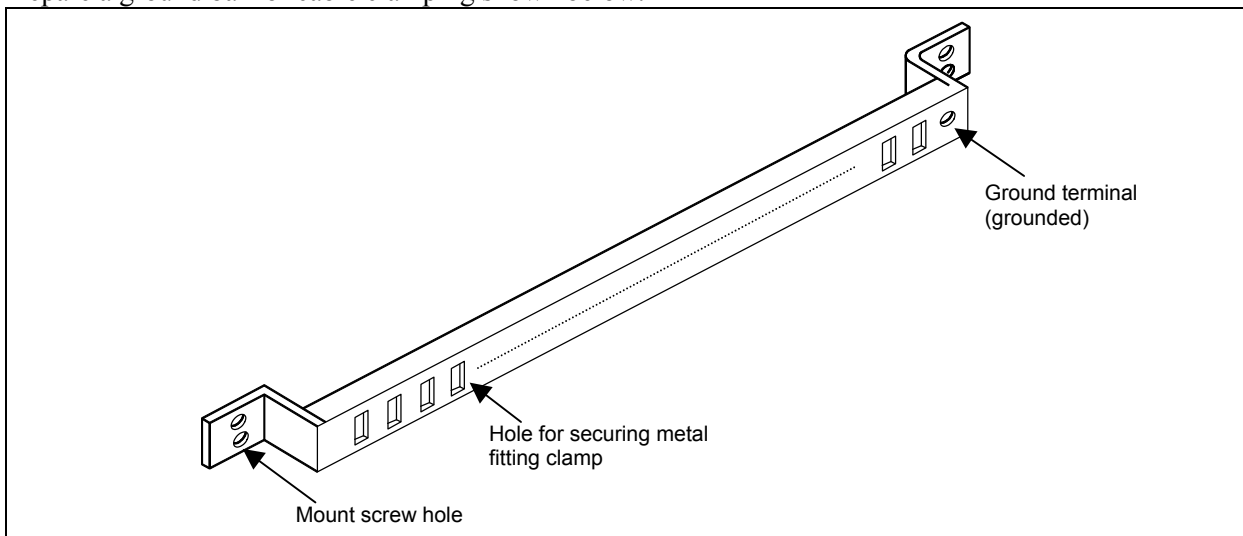


Fig. 3.4.6 (c) Ground bar for shield clamp (outline drawing)

The ground bar for cable clamping must be made of a steel plate at least 2 mm thick and plated with nickel.

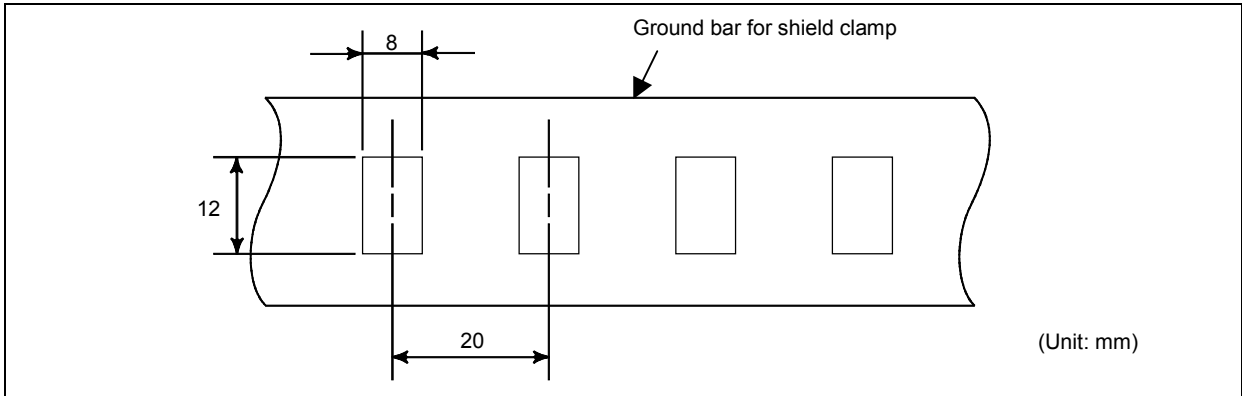


Fig. 3.4.6 (d) Ground bar for shield clamp (hole arrangement and dimension drawing)

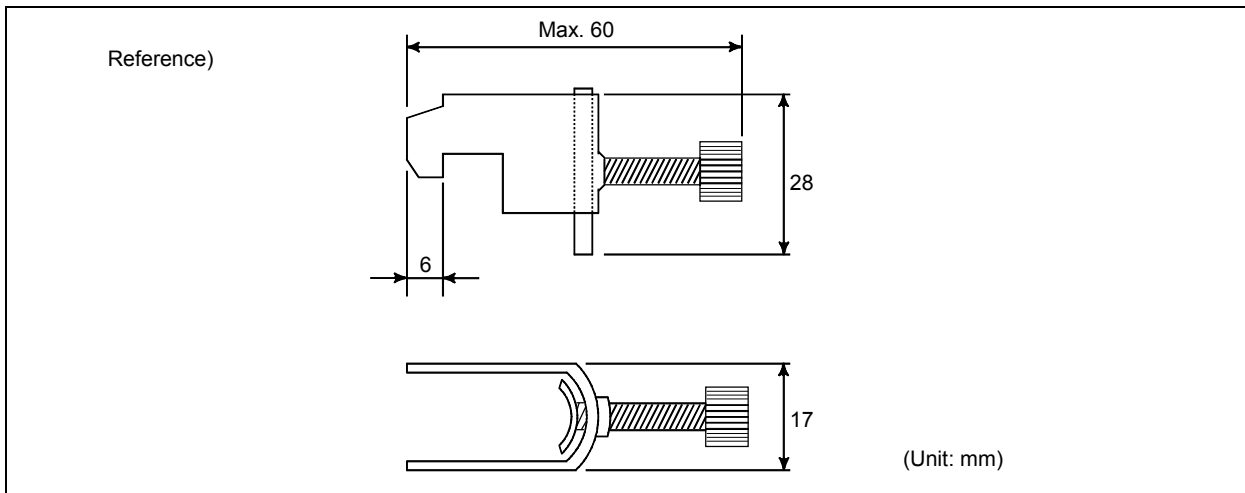


Fig. 3.4.6 (e) Clamping metal fixture (outline drawing)

Ordering specification for metal fittings for clamp
 A02B-0303-K001 (8 pieces)

3.4.7 Lightning Surge Absorber Installation

It is recommended to install a surge absorber between input power lines and between input power lines and the ground in order to protect equipment from thunderbolt-caused voltage surges. However, installing a surge absorber does not always ensure protection from lightning surges.

For recommended lightning surge absorbers, refer to your respective servo amplifier descriptions.

Installation procedure

The surge-absorbing elements used for measures against surges due to lightning must be installed in the input power unit as shown in the figure below. The figure below shows an example in which an insulating transformer, shown by dotted lines, is not installed. If an insulating transformer is installed, surge-absorbing element 2 (between line and ground) is not required.

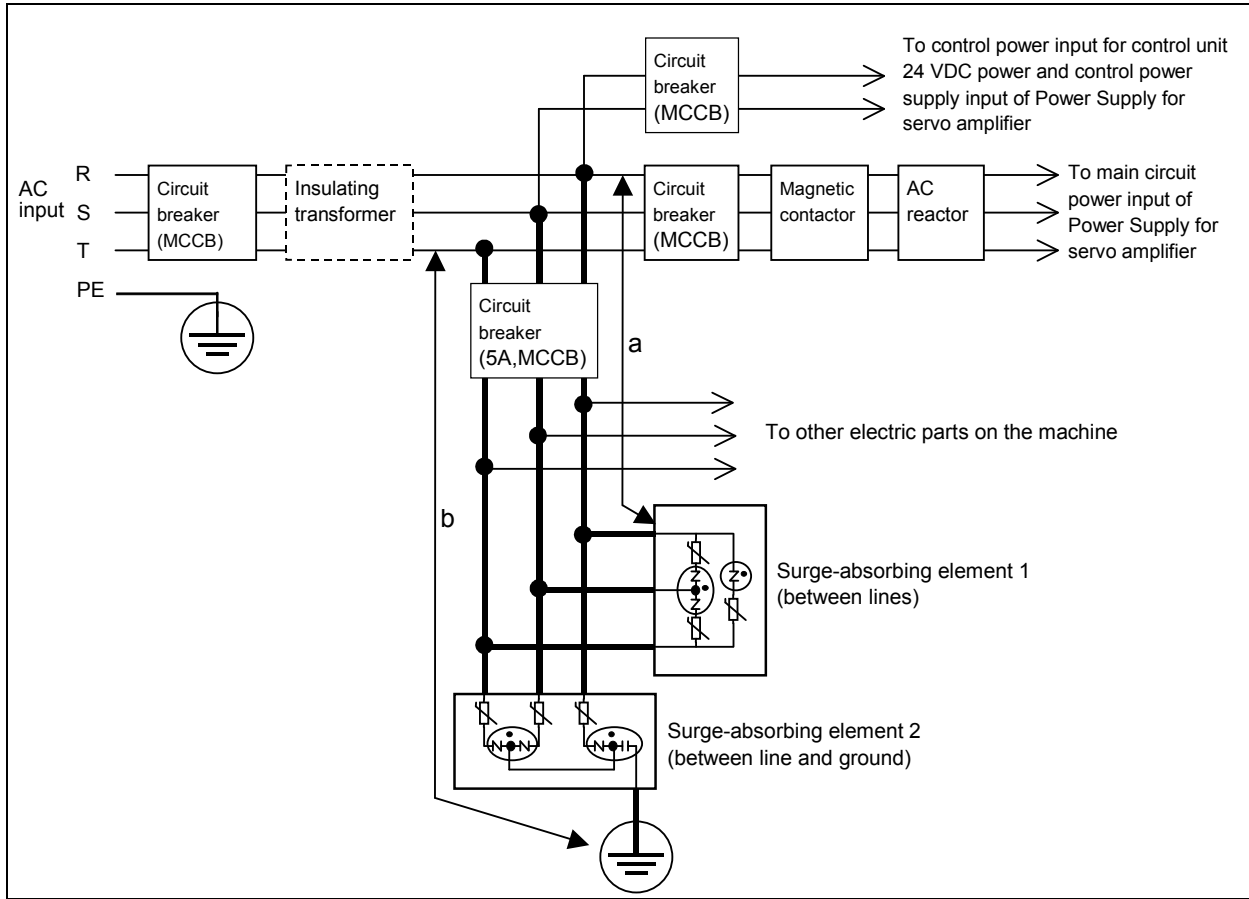


Fig. 3.4.7 Example of installing lightning surge absorbers on 200 VAC lines

⚠ CAUTION

- 1 For a better surge absorbing effect, the wiring shown by heavy line must be as short as possible.
 Wire size : Cross-sectional area at least 2 mm² large
 Wire length: The sum of the length (a) of the wire for the connection of surge-absorbing element 1 and that (b) of surge-absorbing element 2 must be 2 m or less.
- 2 If conducting dielectric strength tests by applying overvoltages (1000 VAC and 1500 VAC) to the power line, remove surge-absorbing element 2. Otherwise, the overvoltages would activate the element.
- 3 The circuit breaker (5A) is a short circuit protection of lines if the surge-absorbing elements result in short circuit breakdown due to the absorption of an excessive amount of energy.

NOTE

The circuit breaker (5A) can be used also for other electric parts on the machine because no current flows through surge-absorbing elements 1 and 2 in the normal state. The “other electric parts on the machine” can be the control power supply of Power Supply for servo unit and the power supply for the fan motor for a spindle motor.

3.5 INSTALLING THE CONTROL UNIT

⚠ CAUTION
 The control unit has a built-in fan motor. Failing to secure a space sufficient to maintain a satisfactory air flow in the control unit can lead to abnormal heat generation and faults.

3.5.1 Installing the LCD-mounted Type Control Unit

Air enters the control unit through the bottom and is drawn through the fan motor which is located on the top of the control unit.

Space **(A)**, shown in Fig. 3.5.1, must be provided to ensure unrestricted air flow. Also, space **(B)** should be provided whenever possible. When space **(B)** cannot be provided, ensure that nothing is placed in the immediate vicinity which could obstruct the air flow.

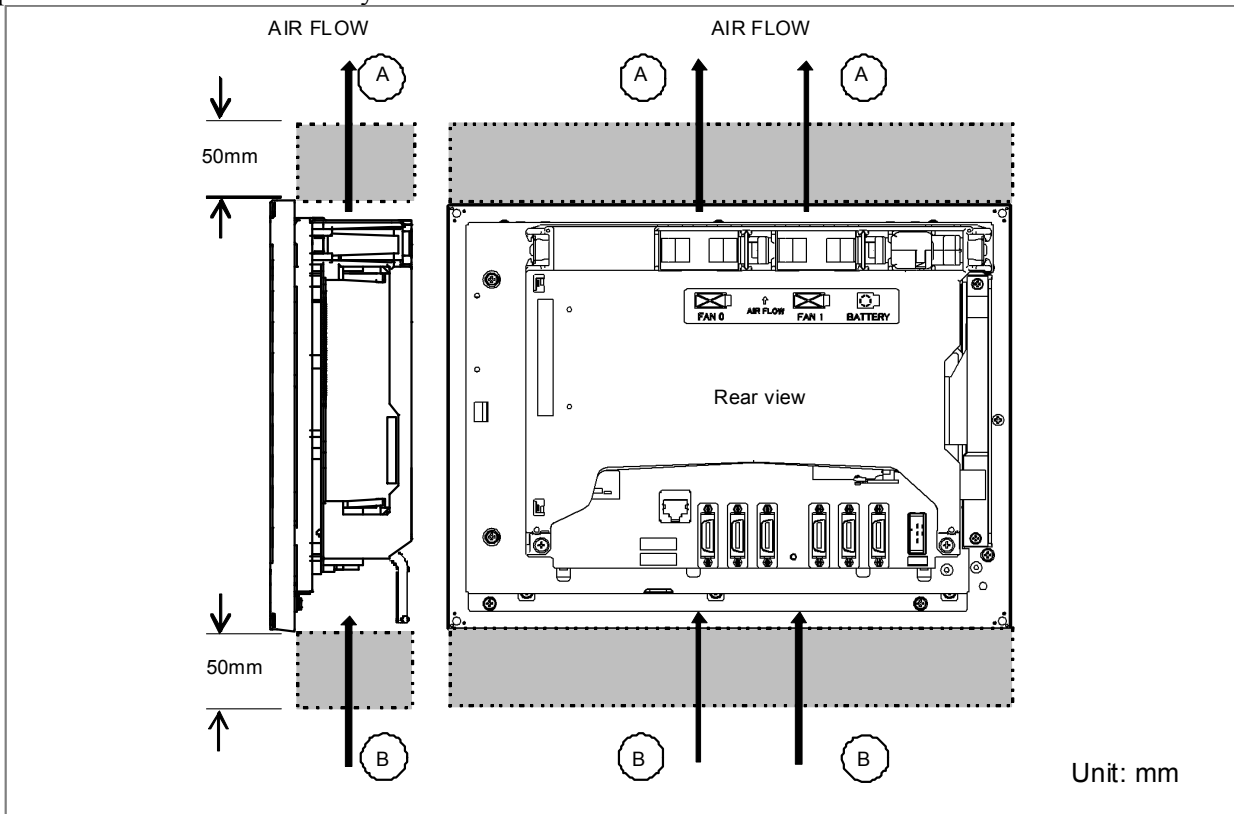


Fig. 3.5.1

3.6 TIGHTENING TORQUE FOR FASTENING UNITS AND GROUND TERMINALS

The following table lists the tightening torque for screws and nuts used to fasten the units (except those having molded mounting parts) explained herein and ground terminals in the units.

Screw and nut diameter	Tightening torque
M3	0.8 to 1.0 N·m
M4	1.6 to 2.0 N·m

The following table lists the tightening torque for screws and nuts used to fasten those units having molded mounting parts, such as separate detector interface units.

Screw and nut diameter	Tightening torque
M4	1.1 to 1.5 N·m
M5	2.4 to 2.8 N·m

CAUTION

Be sure to observe the rules listed above when tightening screws. If screws are tightened too weakly or too strongly, it is likely that the unit may drop, break, or malfunction.

For units having a touch panel in particular, be sure to observe the above rules. Failing to observe them can cause the touch panel to malfunction.

NOTE

For units having different installation conditions specified herein, observe them first.

3.7 DUSTPROOF MEASURES FOR CABINETS AND PENDANT BOXES


When designing and manufacturing cabinets or pendant boxes for housing displays and operator's panels, they are requested to observe the following cautions to make their structures resistant to intrusion of dust, cutting chips, coolant, organic solvent, and oil mist because these cabinets and pendant boxes are susceptible to them.

- 1) The cabinet and pendant box must be of a hermetically sealed structure.
- 2) Apply packing to the panel mounting surface to which a display and operator's panel are to be mounted.
- 3) Make sure that the door packing of the cabinet and pendant box is sealed firmly.
- 4) For a cabinet or pendant box with a rear cover, apply packing to the mounting surface.
- 5) Make sure that the cable entrance is sealed with packing, connectors for conduits, etc.
- 6) Make sure that all other openings are blocked, if any.
- 7) Pay due consideration to keep the display and operator's panel from direct exposure to cutting chips and coolant; do not let any coolant come into contact with them.
- 8) Coolant can readily form puddles on the cabinet and pendant box and may drop on the panel surface of the display and operator's panel. Use such a structure that can prevent coolant from forming puddles on the display and operator's panel or dropping on the panel surface.


⚠ WARNING

Coolants containing sulfur or chlorine at a high activation level, oil-free coolants called synthetic, and water-soluble coolants at a high alkali level, in particular, can largely affect the CNC and peripheral units. Please note that, even if consideration is taken to protect them from direct exposure to these coolants, the following trouble is likely to occur.

- Coolants containing sulfur or chlorine at a high activation level
Some coolants containing sulfur or chlorine are at an extremely high activity level. If such a coolant adheres to the CNC or peripheral units, it reacts chemically with a material, such as resin, of equipment, possibly leading to corrosion or deterioration. If it gets in the CNC or a peripheral unit, it corrodes metals, such as copper and silver, used as component materials, possibly leading to a defective component.
- Synthetic-type coolants having a high permeability
Some synthetic-type coolants whose lubricating component is, for example, PAG (polyalkylene glycol) have an extremely high permeability. If such a coolant is used even in equipment having a high closeness, it can readily flow into the equipment through, for example, gaskets, or packing. It is likely that, if the coolant gets in the CNC or a peripheral unit, it may deteriorate the insulation and damage the components.
- Water-soluble coolants at a high alkali level
Some coolants whose pH is increased using alkanolamine are so strong alkali that its standard dilution will lead to pH10 or higher. If such a coolant spatters over the surface of the CNC or peripheral unit, it reacts chemically with a material, such as resin, possibly leading to corrosion or deterioration.

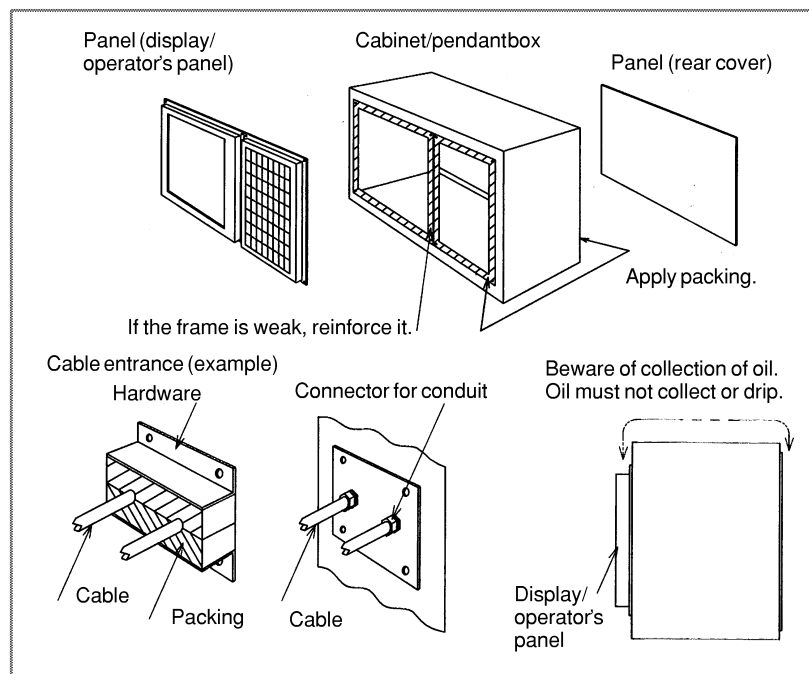

When making screw holes in packing, be careful not to cut to the edge of the packing. Any extra cut can let coolant get in the cabinet through the screw hole, causing trouble.

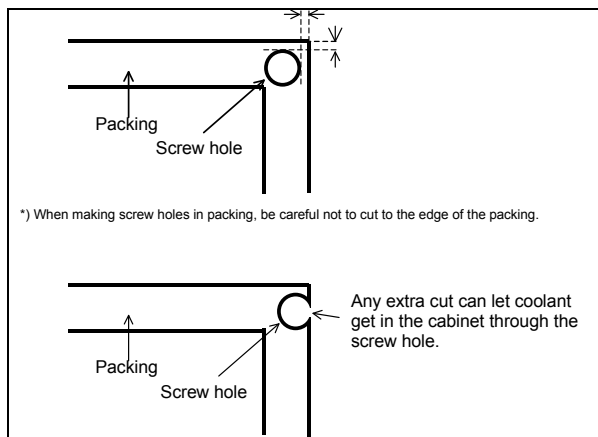

Packing for LCD units, MDI units, and machine operator’s panels

Observe the following rough standards for the thickness and hardness of packing used with LCD units (included LCD-mounted control units or display units), MDI units, and machine operator’s panels.

- Thickness : 1.4mm(including double-stick tape)
- Hardness : 8(Asker C)


The following models of packing can be purchased from FANUC. These models are electrically conductive. When they are used to mount a unit on a cabinet or pendant box, they leave no electrical gap between the unit and cabinet or pendant box, being effective in electromagnetic wave shielding and EMC measures.

Ordering information	Use
A02B-0319-K150	For 8.4” LCD/MDI (horizontal)
A02B-0319-K151	For 8.4” LCD/MDI (vertical)
A02B-0323-K302	For standard MDI unit (ONG) (200x260mm)
A02B-0323-K301	For 10.4” LCD unit, for standard MDI unit (ONG vertical type) (220x290mm)
A02B-0323-K304	For 15” LCD unit
A02B-0323-K310	For standard MDI unit (ONG vertical type) (220x230mm)
A02B-0323-K313	For small MDI unit (ONG) (200x140mm)
A02B-0323-K314	For standard MDI unit (QWERTY) (160x290mm)
A02B-0323-K315	For standard MDI unit (QWERTY type B) (145x400mm)
A02B-0323-K320	For main panel of standard machine operator’s panel or safety machine operator’s panel (140x290mm)
A02B-0323-K321	For safety machine operator’s panel type B

⚠ CAUTION

- 1 We have evaluated the above models of packing for many different coolants. However, we do not necessarily guarantee that they are resistant to all coolants. They are not resistant to, for example, coolants containing sulfur or chlorine at a high activation level and water-soluble coolants at a high alkali level.
- 2 When attaching these models of packing, observe the cautions provided together with them.

When using packing to install a LCD unit, MDI unit, or machine operator’s panel in a cabinet or pendant box, be careful not to pinch the packing between the mounting surface of the cabinet or pendant box and the brim of the unit being installed.

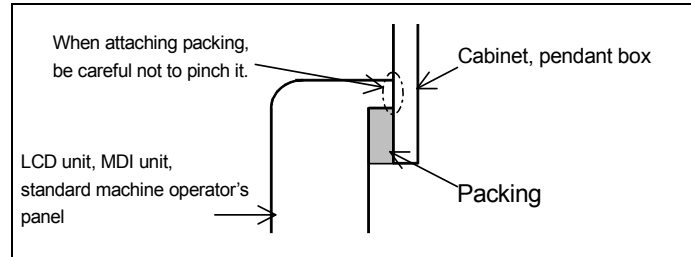

3.8 LCD PROTECTION COVER


FANUC offers LCD-mounted control units and display units having a protection cover for the LCD screen and soft keys on their front surface. The protection cover can be purchased also on an unbundling basis.

⚠ CAUTION

Do not install the LCD-mounted control unit and the display unit in such a place that coolant would directly fall onto the unit. Be sure to attach a protection cover to the LCD-mounted control unit and the display unit if they will be used in an environment where it is anticipated that coolant may scatter over them, for example, an environment with a relatively dense oil mist.

3.9 ATTACHING SCREW CAPS

After mounting any of the LCD-mounted control unit, display unit, MDI unit, and machine operator's panel main panel, which are supposed to be mounted on the front of a cabinet or pendant box using M3 screws, attach screw caps to the screw mounting hole at every corner.

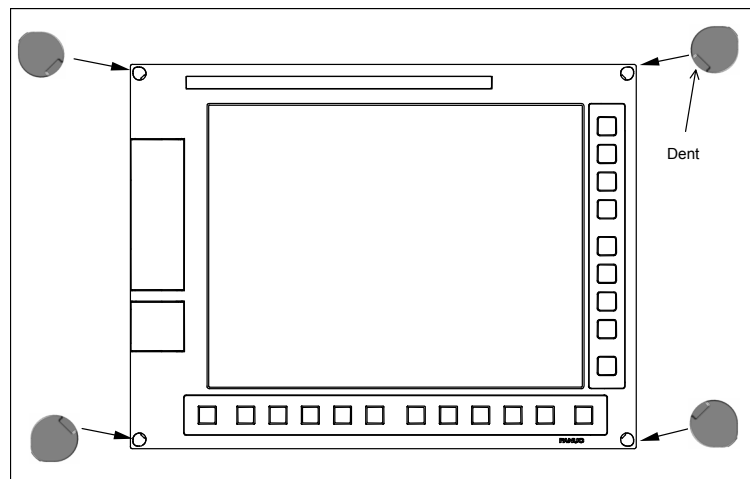

⚠ CAUTION

When attaching screw caps, pay due attention to the dent in them and be careful not leave any gap. Otherwise, coolant may get in the equipment, causing trouble.

3.10 INSTALLATION CONDITION FOR UL RECOGNITION

1. Outline

For UL recognition of the product, installed after due considerations on UL requirements.

2. Notes on the installation conditions for UL recognition

- Set up the LCD-mounted type control unit, display unit and MDI unit on a flat surface of a Type 1 Enclosure *1.

(*1. Type 1 Enclosure is defined in standard UL 50 as follows.

TYPE 1 - Enclosures constructed for indoor use to provide a degree of protection to personnel against incidental contact with the enclosed equipment and to provide a degree of protection against falling dirt.)

- Use CNC, Display and MDI unit in Pollution degree 2 *2 environment or cleaner environment, except for part exposed on the outside of enclosure.

(*2. Pollution degree is a classification according to the amount of pollution and condensation present in the environment.

"Pollution Degree 2" is defined in the standard UL 508 as follows.

Normally, only nonconductive pollution occurs; however, temporary conductivity caused by condensation may be expected.)

- Maximum surrounding air temperature rating: +60°C *3

(*3. This temperature rating is a condition of UL evaluation for recognition. However, for long-term reliability, the cabinet should be actually designed in accordance with the maximum operating surrounding air temperature that described in the subsection 3.1.2 in the connection manual (B-64603EN).)

- Power supply unit for this unit must have an isolating device and the DC 24 Volt output must be isolated from AC mains supply.

(This isolation can be achieved with the use of the isolating DC power supply unit that complies with UL standard.)

DC 24 Volt power cable needs to be used with 14AWG or 16AWG size conductors.

4 POWER SUPPLY CONNECTION

4.1 24 VDC POWER (INSULATION AC/DC CONVERTOR)

4.1.1 Connecting 24 VDC Power

Prepare a 24 VDC power supply (insulation AC/DC converter) and supply power to the 24 VDC input of the control unit and peripheral units, such as I/O units.

It is recommended to provide an ON/OFF circuit external to the 24 VDC power supply as shown in Fig. 4.1.1(a) so that it can turn on and off the AC input to the 24 VDC power supply.

It is also recommended to use a separate 24 VDC power supply for any unit whose load fluctuates largely or which may generate noise, in order to minimize effect of noise and voltage variation to the control unit or peripheral unit.

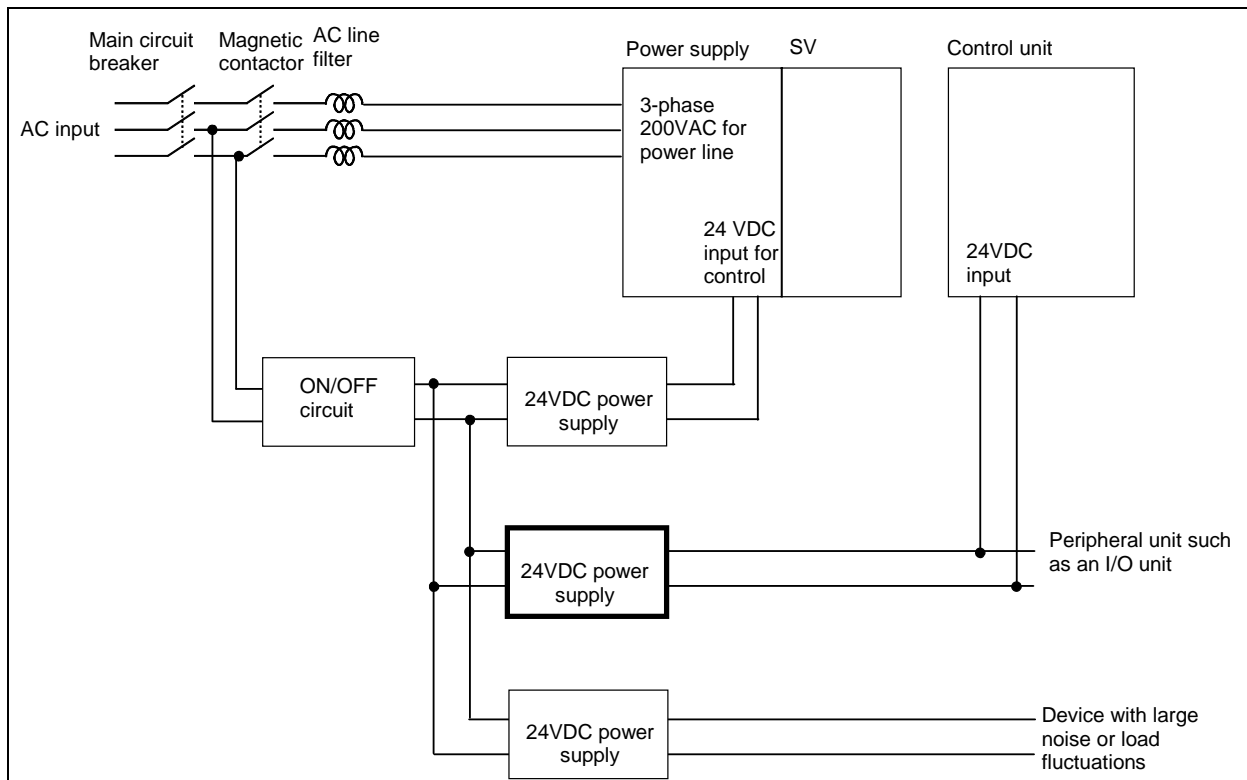


Fig. 4.1.1 (a) Example of recommended 24 VDC power supply connection

**CAUTION**

When the ON/OFF circuit is provided on the DC side of a 24 VDC power supply, on-time rush current imposes an extremely heavy burden on the relay contact in the ON/OFF circuit compared with the time when the ON/OFF circuit is provided on the AC side. So, it is necessary to select a relay that is highly resistant to rush current. In general, a relay having a high current rating and being large in size should be selected.

In the connection shown in Fig. 4.1.1(b), for example, use a separate 24 VDC power supply if voltage variation due to abrupt changes in the load or rush current may transiently exceed the rated input voltage range (24 VDC \pm 10%) for the control unit or peripheral unit.

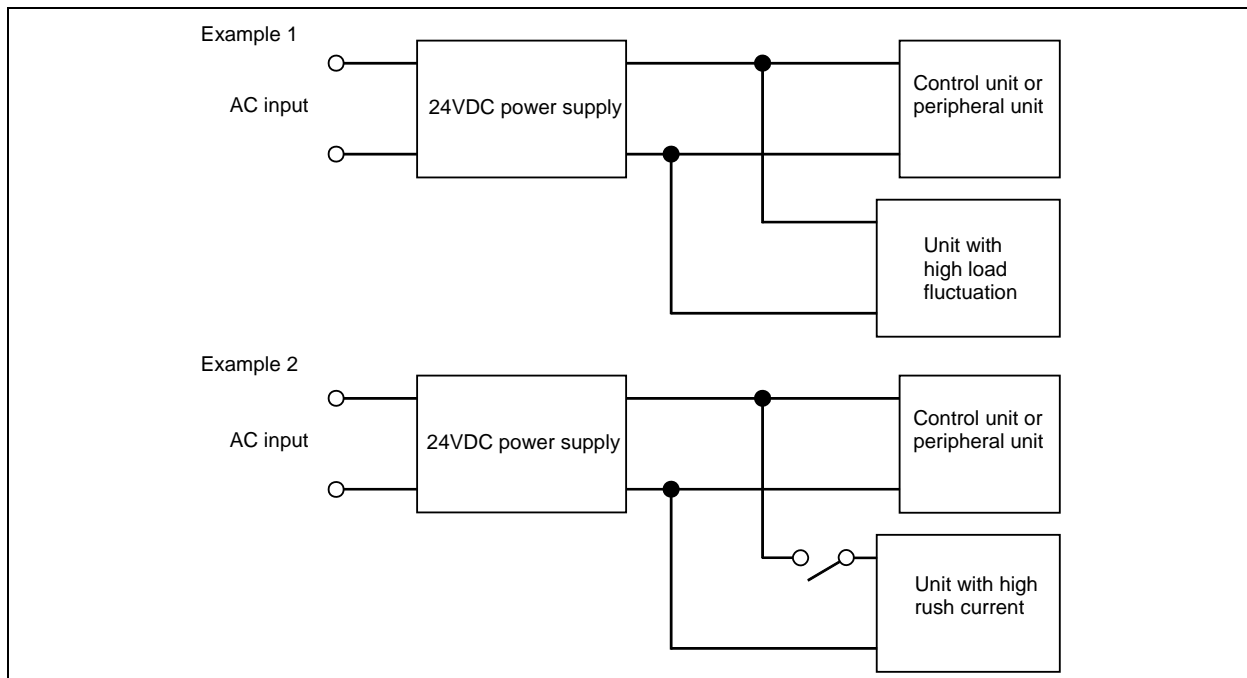


Fig. 4.1.1 (b) Example of connection with high transient voltage variation

NOTE

Try as much as possible to avoid the configuration shown in Fig. 4.1.1(b) even when load fluctuation and rush current are low.

In a configuration where two or more units are connected to the same 24 VDC power supply, the control unit will not be able to start, thus failing to issue an alarm, if the power supply fails to operate because of a fault in a unit other than the control unit. For this reason, it is likely that it may take time to locate the fault. If the 24 VDC power supply for the control unit and peripheral units must be connected also to another unit because of a limited space in the power magnetics cabinet, insert a noise filter, example: ZGB2203-01U manufactured by TDK, before the 24 VDC input for the control unit and peripheral units in order to prevent noise from the 24 VDC power supply from entering the control unit and peripheral units after paying due consideration to the voltage variation resulting from load fluctuation or rush current. In case of using a noise filter, enough inspect workings of the control unit and peripheral units, because there may be influenced of another noise by the noise filter.

4.1.2 24 VDC Power Supply Specification

Specifications of recommended 24 VDC power supply:

Output voltage: $+24V \pm 10\%$ (21.6V to 26.4V)

(In the 24 VDC input for the control unit and peripheral units, ripple voltage and noise are contained. See Fig. 4.1.2.)

Output current:

The continuous load current of the 24 VDC power supply is higher than or equal to the current used by the control unit and peripheral units that are connected to the power supply.

(At the maximum temperature inside the power magnetics cabinet in which the power supply is located. See Subsection 4.1.3.)

Load fluctuations (including rush current):

The output voltage must not go out of the above range due to load fluctuations by external DO and other factors.

Instantaneous input interruption retention time: 10 ms or more (for -100%), 20 ms or more (for -50%)

Safety standard

UL 60950-1, CSA-C22.2 No. 60950-1, EN60950-1 approved

Noise voltage at terminal/electrical field intensity of noise

EN55011/EN55022-B, FCC-B, VCCI-B compliant

NOTE

Safety standard and Noise voltage at terminal/electrical field intensity of noise are recommended for selecting the 24 VDC power supply on the market. However, the required standards may be different from above standards by the machine, an importing country, revision of the standard, or etc, prepare the 24 VDC power supply that is conformed to required standards.

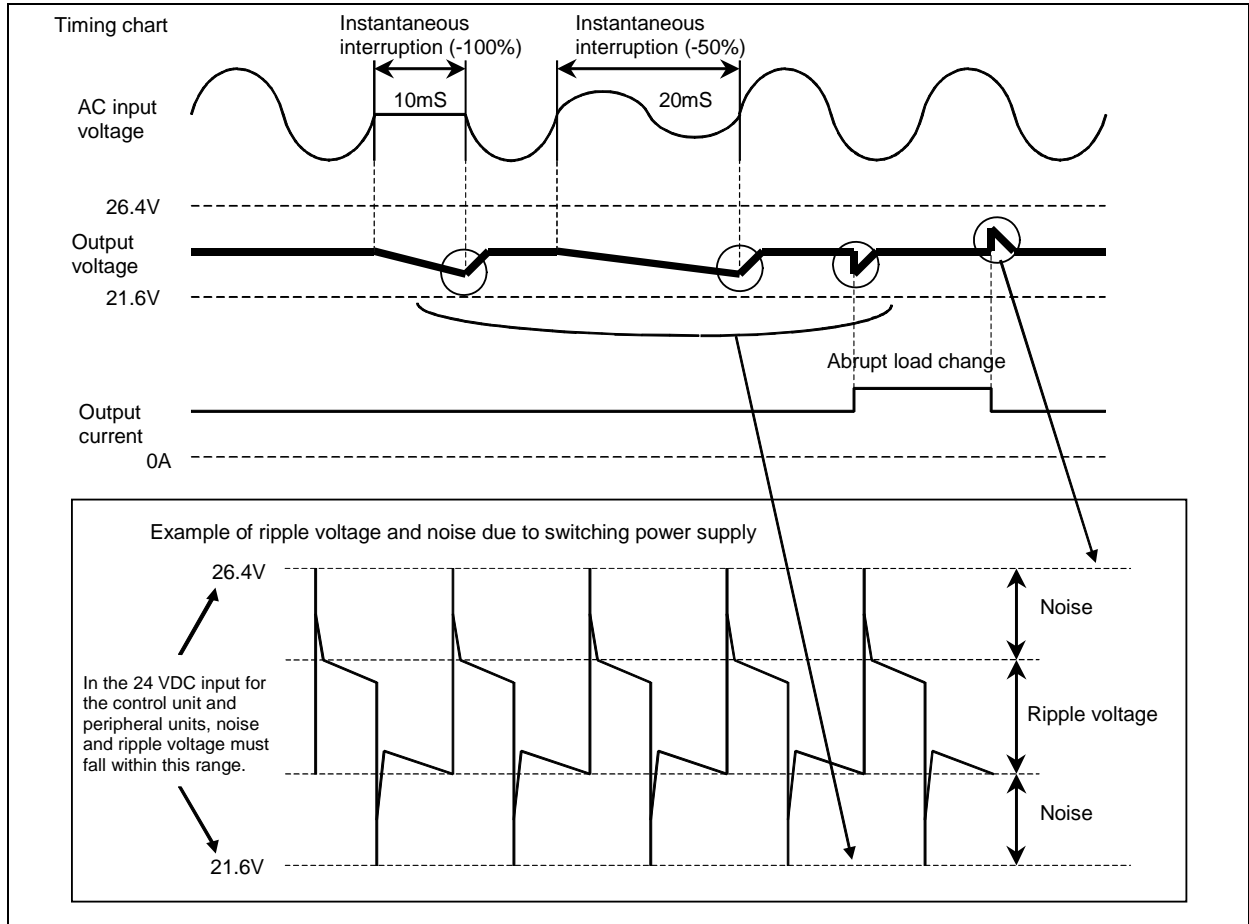


Fig. 4.1.2 (a) Timing chart

⚠ CAUTION
 Do not use any power supply circuit, consisting of a capacitor and rectifier circuit, like one shown in Fig. 4.1.2 (b), because it cannot maintain a voltage of 24 VDC (the voltage falls to 21.6 V or below in each 24 VDC input for the control unit and peripheral units) due to instantaneous interruption or voltage variation in the AC input. Instead, use a voltage regulator.

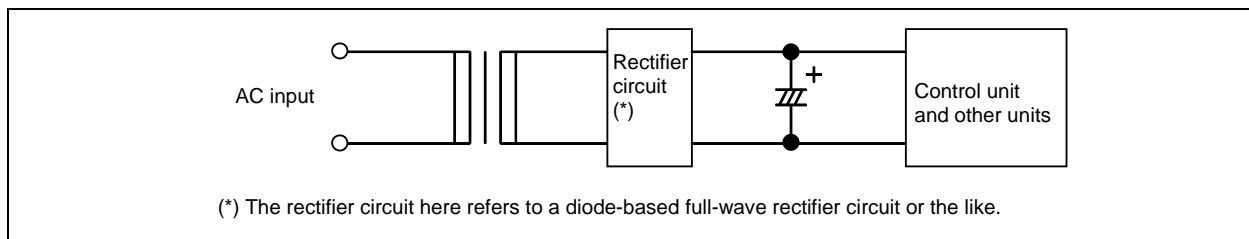


Fig. 4.1.2 (b) Example of a power supply circuit that cannot maintain 24 VDC

4.1.3 Power Capacity of 24 VDC Power Supplies

The 24 VDC power supply for the control unit and peripheral units must have the power capacity that can supply current required by them.

Calculate the power capacity required of each 24 VDC power supply according to what control unit and options are connected to the power supply while referencing Table 4.1.3.

Table 4.1.3 Power capacity

Unit		Power capacity	Remarks	
LCD-mounted type control unit	8.4" LCD/MDI unit	Option 0 slot	1.4A	Note 1)
		Option 2 slots		
	10.4"LCD unit	Option 0 slot	1.4A	Note 1)
		Option 2 slots		
	15"LCD unit	Option 0 slot	2.0A	Note 1)
		Option 2 slots		
Option board	Fast Ethernet board		0.1A	
	HSSB interface board		0.2A	
	PROFIBUS-DP master board		0.2A	
	PROFIBUS-DP slave board		0.1A	
	DeviceNet master board		0.1A	
	DeviceNet slave board		0.1A	
	CC-Link remote device station board		0.1A	
MDI units		0A		

NOTE

- 1 Each power capacity listed above does not include that of option boards.
- 2 When connecting the RS-232C device which will draw power from the control unit, add the power capacity that the device requires to the listed power capacity.
- 3 Limit the total power consumption of memory cards and USB memories to within 2 W.
- 4 See Chapter 6 for the power capacity of the separate detector interface unit.
- 5 See Chapter 8 for the power capacity of I/O units.
- 6 Refer to the PANEL *i* Connection and Maintenance Manual (B-64223EN) for the power capacity of the PANEL *i*.
- 7 Selecting 24 VDC power supplies impose restrictions besides their power capacity. Be sure to read also Subsection 4.1.2.

WARNING

If the machine tool of interest has a vertical axis, it is necessary to select a 24 VDC power supply that can hold its output of 24 VDC for a prolonged time even after the AC input has been interrupted (including power failure and instantaneous power interruption) in order to keep a possible fall along the vertical axis within an acceptable range. The control unit deenergizes servo circuits if its 24 VDC input falls to 21.6 V or below. For this reason, failing to maintain the 24 VDC input to the control unit for a satisfactory period after the AC input has been interrupted may lead to a larger amount of fall along the vertical axis, depending on a peripheral circuit in use, because the servo for the vertical axis is deenergized before the peripheral circuit detects an AC input interruption and activates the brake. In general, selecting a 24 VDC power supply having a power capacity with a wide margin would prolong the hold time of the 24 VDC output after an AC input interruption.

4.2 TURNING ON AND OFF THE POWER TO THE CONTROL UNIT

4.2.1 Power-on Sequence

Turn on the power to all the units at the same time, or in the following sequence:

- 1 Power to the overall machine (AC input)
- 2 Servo amplifier control power supply (24VDC)
- 3 Power to the slave I/O units connected via the I/O Link *i*, the separate detector interface unit, and power to the control unit (24 VDC), power to the separate detector (scale)

The expression “the same time” here means that the power to the units mentioned in Steps 1 and 2 above has been turned on at least within 500 ms after the 24 VDC power supply for the control unit mentioned in Step 3 above has been turned on. The power to each unit mentioned in Step 3 must have been turned on within a period between 200 ms before the 24 VDC power supply for the control unit is turned on and 500 ms after that time.

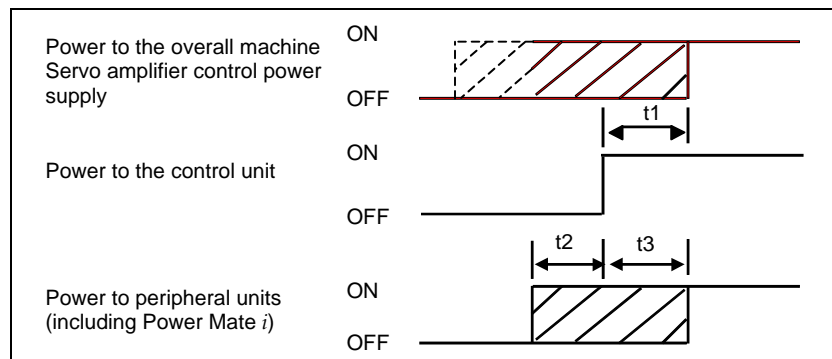


Fig. 4.2.1

t1:-500ms It is meant that the power to the overall machine and the servo amplifier control power are turned on at least within 500 ms after the control unit power has been turned on.

t2: 200ms It is meant that the power to peripheral units (including Power Mate *i*) is turned on not earlier than 200 ms before the control unit power is turned on.

t3:-500ms It is meant that the power to peripheral units (including Power Mate *i*) is turned on not earlier than 500 ms before the control unit power is turned on.

NOTE

Leave each of the memory backup battery (3 VDC) and separate absolute pulse coder battery (6 VDC) connected regardless of whether the control unit power is on or off. Removing these batteries with the control unit power turned off can corrupt parameters and programs in the control unit as well as position data in the pulse coder.

See Subsection 4.4.1 for explanations about how to replace the memory backup battery.

See Subsection 4.4.2 for explanations about how to replace the separate absolute pulse coder battery.

4.2.2 Power-off Sequence

Turn off the power to all the units at the same time, or in the following sequence:

- 1 Power to the slave I/O units connected via the I/O Link i , the separate detector interface unit, and power to the control unit (24 VDC)
- 2 Servo amplifier control power supply (24 VDC), power to the separate detector (scale)
- 3 Power to the overall machine (AC input)

The expression “the same time” here means that there is no problem even if the power to the units mentioned in Steps 5 and 6 above is turned off not earlier than 500 ms before the power to the control unit mentioned in Step 4 above is turned off. If the power to the units mentioned in Steps 5 and 6 is turned off earlier, alarm information is left in the control unit. In addition, the power to each peripheral unit mentioned in Step 4 above must be turned off not earlier than 500 ms before the power to the control unit is turned off. Otherwise, alarm information is left in the control unit.

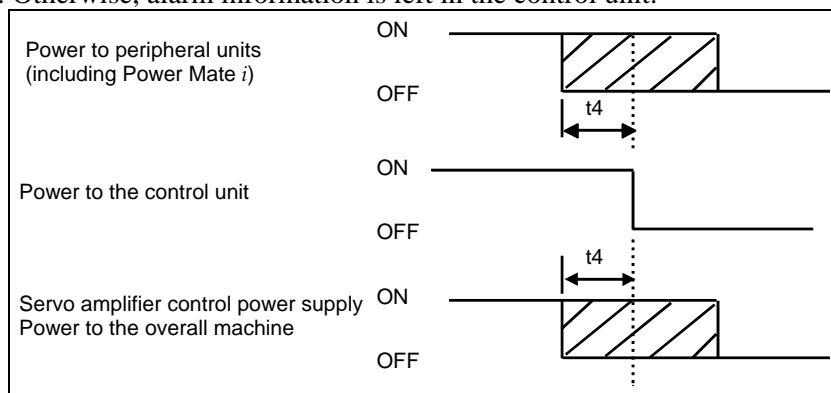


Fig. 4.2.2

t_4 :500ms It is meant that the power of interest is turned off not earlier than 500 ms before the power to the control unit is turned off.

CAUTION

The power to the control unit cannot be turned on or off with peripheral units supplied with power.

Before turning off the power to the control unit, be sure to turn off the power to the units (such as slave I/O units connected via the I/O Link i , the I/O Link i , I/O Link i -equipped βi series servo amplifier, Power Mate i , separate detector I/F units, servo amplifier control power, and separate detectors (scale)) connected to the control unit.

 **WARNING**

It is impossible for the control side to control motors if the power supply is off or there is no AC input (including power failure). It is necessary for the machine side to perform any necessary processing.


If the control unit is used to control a vertical axis, for example, provide the motor with a brake mechanism to prevent a fall along the vertical axis. The brake should be controlled in such a way that the motor is clamped when the servo has not been started or when the motor is not supposed to rotate and unclamped only when it is supposed to rotate. It is common practice to clamp servo motors when the servo axes cannot be controlled because of the power supply being off or of a power failure. Even with this common practice, a fall may occur along a controlled axis before the relay works. So, it is necessary to examine whether the fall distance poses any problem.

Power-off: Before turning off the control unit power, be sure to apply the brake to clamp the motor.

Power failure: On detecting a power failure, apply the brake quickly. Turning off the control unit power results in the servo being deenergized. So, select a 24 VDC power supply that can maintain its 24 VDC output for a prolonged time after an AC input interruption.

4.3 CABLE FOR POWER SUPPLY TO CONTROL UNIT

Supply the power to the control unit from a 24 VDC power supply.

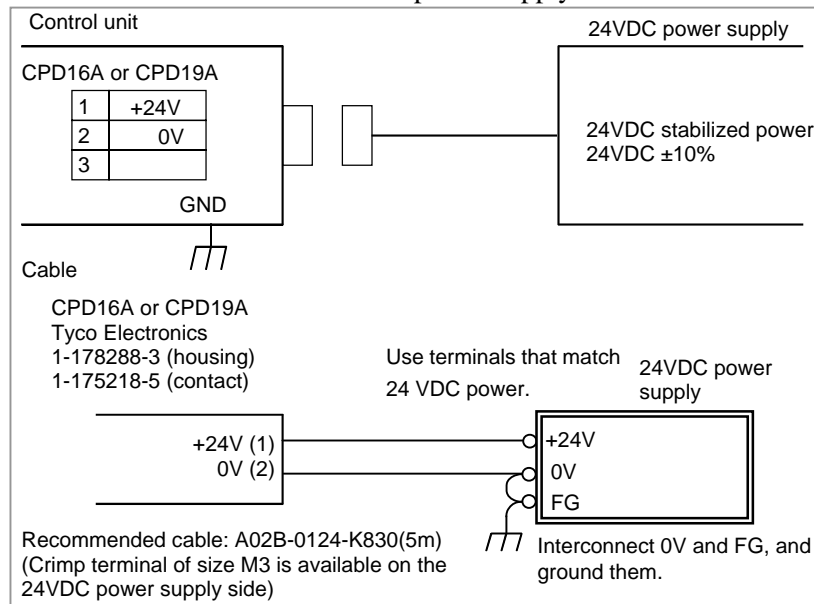

4.4 BATTERIES

A system using this control unit uses batteries in the places listed below. Refer to the FANUC PANEL *i* Connection and Maintenance Manual (B-64223EN) for explanations about the batteries used for the PANEL *i*. Used batteries must be discarded according to appropriate local ordinances or rules. When discarding batteries, insulate them by using tape and so forth to prevent the battery terminals from short-circuiting.

Use	Component connected to battery
Memory backup in the control unit	Control unit
Preservation of the current position indicated by the separate absolute pulse coder	Separate detector interface unit
Preservation of the current position indicated by the absolute pulse coder built into the motor	Servo amplifier

4.4.1 Battery for Memory Backup in the Control Unit (3 VDC)

Offset data, and system parameters are stored in SRAM in the control unit. The SRAM power is backed up with the memory backup batteries held in the control unit.

When the voltage of the battery becomes low, alarm message "BAT" blinks on the LCD screen and the battery alarm signal is output to the PMC. Upon the alarm, replace the battery as soon as possible. The rough standard for the replacement limit is one week. However, how long the battery lasts after the alarm varies, depending on the system configuration of interest.

If the voltage of the battery becomes any lower, memory can no longer be backed up. Turning on the power to the control unit in this state causes system alarm to occur because the contents of memory are lost. Clear the entire memory and reenter data after replacing the battery.

FANUC thus recommends that the battery be replaced periodically, once a year, regardless of whether a battery alarm is issued.

The following two kinds of batteries can be used.

- Lithium battery built into the CNC control unit.
- Alkaline dry cell (size D) inserted in an external battery case attached to the control unit.

NOTE


Before shipped from FANUC, the control unit is equipped with a lithium battery set as default. With this lithium battery, memory contents can be preserved for one year.

4.4.1.1 Replacing the lithium battery


For LCD-mounted type control unit

Prepare a new lithium battery (ordering code: A02B-0323-K102).

- (1) Turn on the power to the machine (control unit). After about 30 seconds, turn off the power.
- (2) Take out the lithium battery from the rear of the control unit (by holding the latch of the lithium battery and pulling it up while unlatching the claw held in the case).

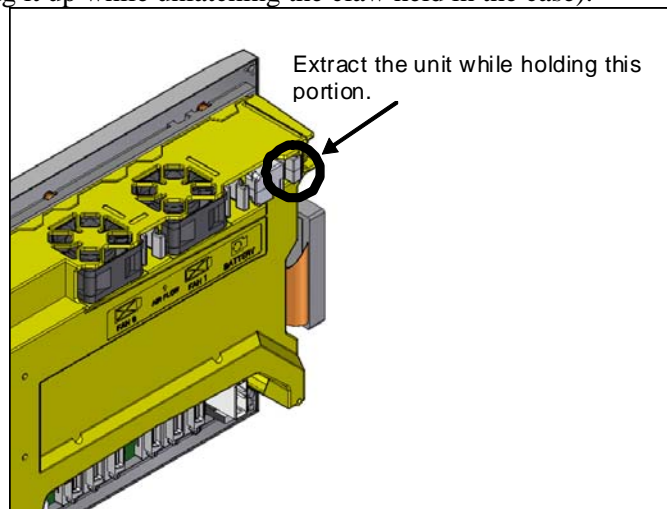

- (3) Insert a new lithium battery, prepared in advance, into the battery case (by pushing it in until the claw of the lithium battery fits in the case). Make sure that the claw is latched securely.

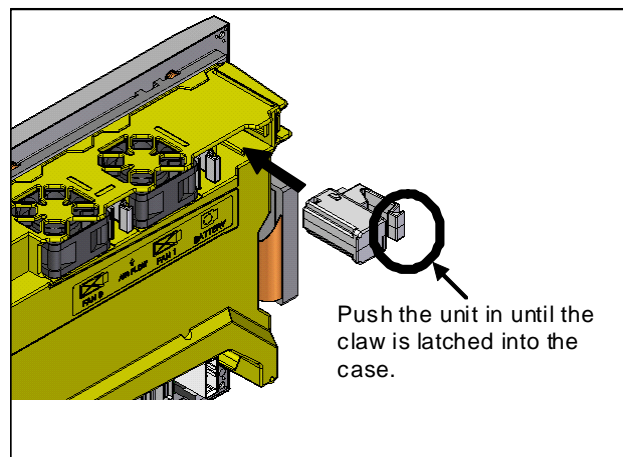

⚠ WARNING

It is likely that the lithium battery may explode unless it is replaced correctly. Do not use any battery other than the specified one (A02B-0323-K102).

**CAUTION**

Steps (1) to (3) should be completed within 30 minutes.
 Do not leave the control unit without a battery for any longer than the specified period. Otherwise, the contents of SRAM may be lost.
 Before starting battery replacement, save the SRAM contents in a batch. They can be restored easily even if they are lost.
 Refer to the Maintenance Manual (B-64605EN) for explanations about how to save and restore SRAM contents in a batch.

NOTE


Discard used batteries as “industrial waste” according to the rules and ordinances of the country where the machine is installed and of the local government that has jurisdiction over the location of the machine. When discarding them, insulate the battery terminals with tape or the like to protect them from short-circuiting.

4.4.1.2 Replacing commercially available alkaline dry cells (size D)

In place of the built-in lithium battery in the control unit, commercially available alkaline dry cells (size D) can be used by installing a battery case outside the control unit and inserting the dry cells in the case.

How to connect the battery case to the control unit

For the LCD-mounted type control unit, connect the battery cable (A02B-0323-K103) to the battery case (A02B-0236-C282). For the stand-alone type control unit, use the battery case (A02B-0236-C281), which comes with the battery cable attached.

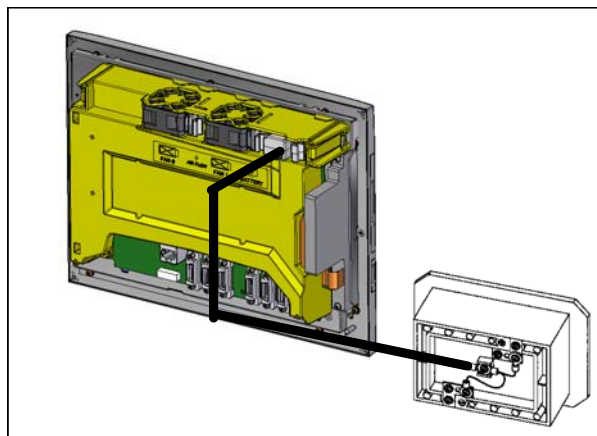


Example of connecting the battery case to the control unit (LCD-mounted type)

NOTE

- 1 The battery cable is engaged with its connector using a simple lock mechanism. Fasten the cable at a length of 500 mm or smaller measured from the connector with some slack so that the connector will not be disengaged due to the weight or tension of the cable.
- 2 Keep the battery cable away from any possible noise source, such as power wires.


Battery cable for LCD-mounted type control unit

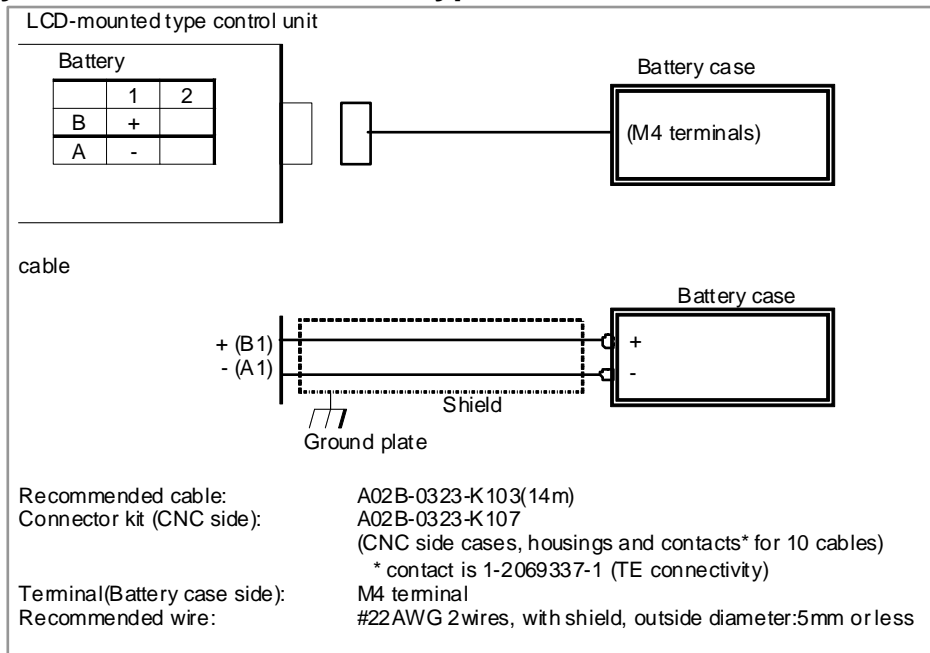

Battery cable for LCD-mounted type control unit

NOTE

- 1 In case of assemble this cable, please keep loosening the cable length in the case and clamp with nylon band etc. as bellow figure in order to prevent tension to the contacts directly.
- 2 Special tool provided by connector manufacture is required to assemble this cable.

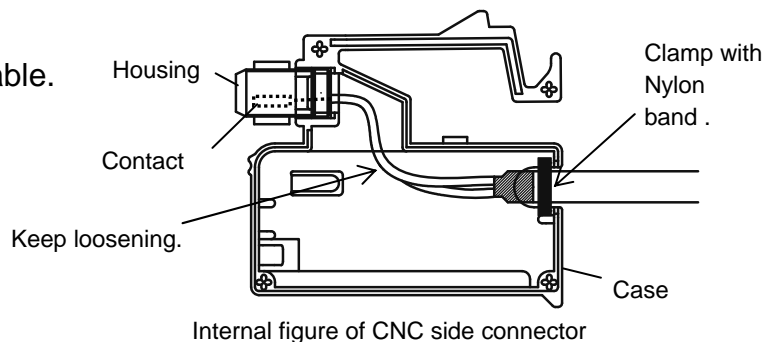


Replacing the alkaline dry cells (size D)

- (1) Prepare two new alkaline dry cells (size D).
- (2) Turn on the power to the machine (control unit).
- (3) Remove the battery case cover.
- (4) Replace the batteries, paying careful attention to their orientation.
- (5) Replace the battery case cover.

CAUTION

To replace the battery when the power is off, follow the same procedure as that for the replacement of a lithium battery, described above.
Pay attention to the battery polarity. If a battery is installed with incorrect polarity, the battery may overheat, blow out, or catch fire

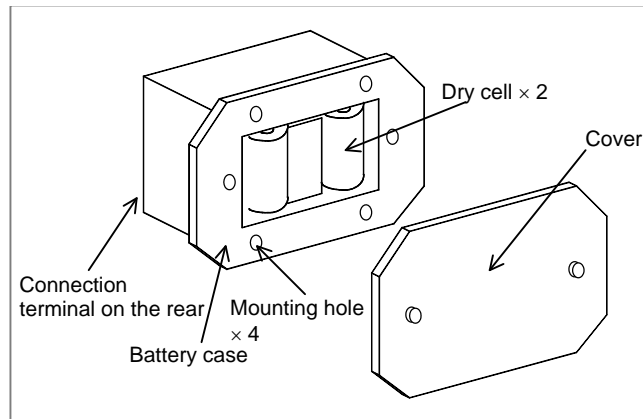

4.4.2 Battery for Separate Absolute Pulsecoders (6VDC)

- The absolute Pulsecoder uses a battery because it must hold data on absolute positions. When the voltage of the batteries for absolute Pulsecoders becomes low, alarm 307 or 306 occurs, with the following indication in the CNC state display at the bottom of the CNC screen.
Alarm 308 (alarm 2 indicating the voltage of the battery becomes low) :
The indication "APC" blinks in reversed display.
Alarm 307 (alarm indicating the voltage of the battery becomes low) :
The indication "APC" blinks in reversed display.
Alarm 306 (battery zero alarm) :
The indication "ALM" blinks in reversed display.
- When alarm 307 (alarm indicating the voltage of the battery becomes low) occurs, replace the battery as soon as possible. In general, the battery should be replaced within one or two weeks, however, this depends on the number of Pulsecoders used.
- When alarm 306 (battery zero alarm) occurs, Pulsecoders are reset to the initial state, in which absolute positions are not held. Alarm 300 (reference position return request alarm) also occurs, indicating that reference position return is required.
- In general, replace the batteries periodically within the service life listed below.
 - A06B-6050-K061 or D-size alkaline dry cells (LR20) : Two years (for each six-axis configuration)
 - A06B-6073-K001 : Two years (for each three-axis configuration)
 - A06B-6114-K504 : One year (for each three-axis configuration)

NOTE

The above values indicate the estimated service life of batteries used with FANUC absolute Pulsecoders. The actual battery service life depends on the machine configuration based on, for example, detector types. For details, contact the machine tool builder.

Replacing batteries

To prevent absolute position information in absolute Pulsecoders from being lost, turn on the machine power before replacing the battery. The replacement procedure is described below.

- <1> Ensure that the power to the servo amplifier is turned on.
- <2> Ensure that the machine is in the emergency stop state (the motor is inactive).
- <3> Ensure that the DC link charge LED of the servo amplifier is off.
- <4> Detach the old batteries and attach new ones.


⚠ WARNING

- The absolute Pulsecoder of each of the $\alpha i/\alpha i$ S series servo motors and the βi S series servo motors (βi S0.4 to βi S22) has a built-in backup capacitor. Therefore, even when the power to the servo amplifier is off and the batteries are replaced, reference position return is not required if the replacement completes within less than 10 minutes. Turn the power on and replace the batteries if the replacement will take 10 minutes or more.
- To prevent electric shock, be careful not to touch metal parts in the power magnetics cabinet when replacing the batteries.
- Because the servo amplifier uses a large-capacitance electrolytic capacitor internally, the servo amplifier remains charged for a while even after the power is turned off. Before touching the servo amplifier for maintenance or other purposes, ensure your safety by measuring the residual voltage in the DC link with a tester and confirming that the charge indication LED (red) is off.
- Be sure to replace the batteries with specified ones. Pay attention to the battery polarity. If a wrong type of battery is used or a battery is installed with incorrect polarity, the battery may overheat, blow out, or catch fire, or the absolute position information in the absolute Pulsecoders may be lost.
- Ensure that the battery connector is inserted in the correct position.

How to insert batteries into the battery case

Use the following procedure to replace the batteries in the battery case.

- <1> Loosen the screws on the battery case and detach the cover.
- <2> Replace the batteries in the case (pay attention to the polarity).
- <3> Attach the cover to the battery case.

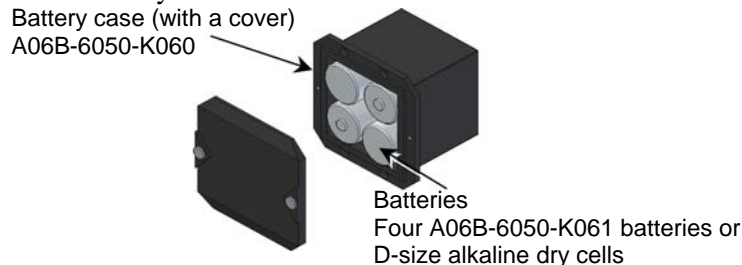**⚠ CAUTION**

- Four D-size alkaline dry cells (LR20) that are commercially available can be used as batteries. A set of four A06B-6050-K061 batteries is optionally available from FANUC.
- Replace all the four batteries with new ones. If old and new batteries are mixed, the absolute position information in the absolute Pulsecoders may be lost.
- When connecting batteries, pay due attention to their polarity. If they are connected in reverse polarity, it is likely that they may get hot, explode, or catch fire. In addition, it is also likely that information on absolute positions may be lost from the absolute Pulsecoder.

4.4.3 Battery for Absolute Pulse Coder Built into the Motor (6VDC)

The battery for the absolute pulse coder built into the motor is installed in the servo amplifier. Explanations about how to connect and replace the battery, refer to the maintenance manual for the servo amplifier in use.


5 CONNECTION TO CNC PERIPHERALS

5.1 CONNECTION BETWEEN THE LCD-MOUNTED TYPE CONTROL UNIT AND MDI UNIT

5.1.1 Overview


A MDI is embedded in 8.4" LCD/MDI unit of Basic unit A, therefore it is not necessary to connect the MDI cable by a machine maker.

Connection of the MDI cable of a control unit without the MDI is described below.

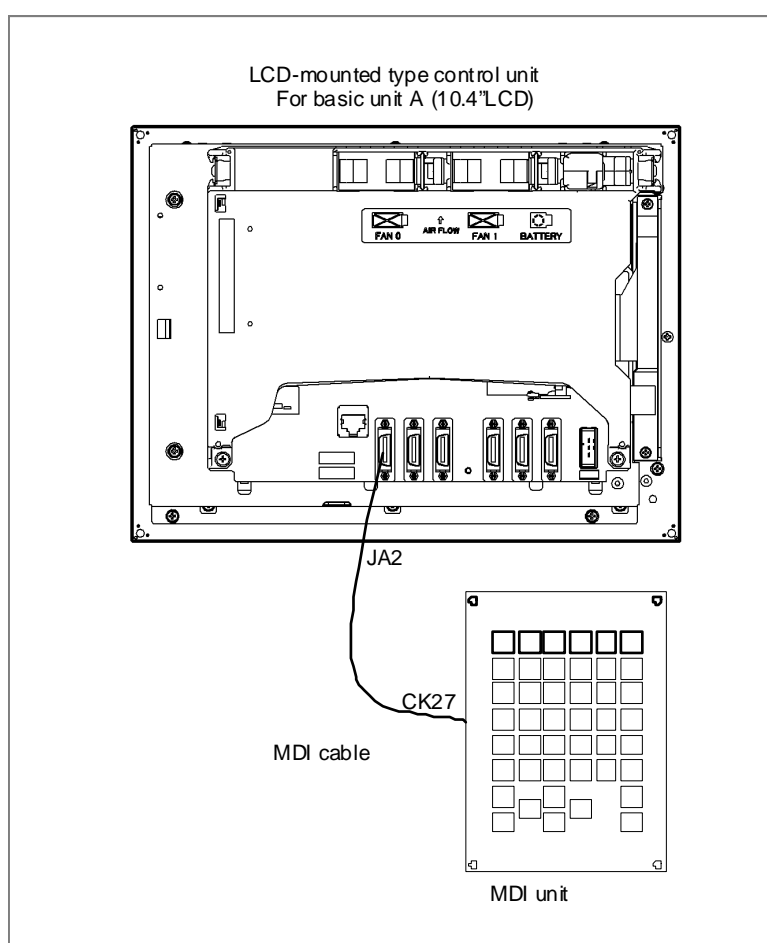

5.1.2 Connection with the MDI Unit


• For basic unit A (10.4”LCD)

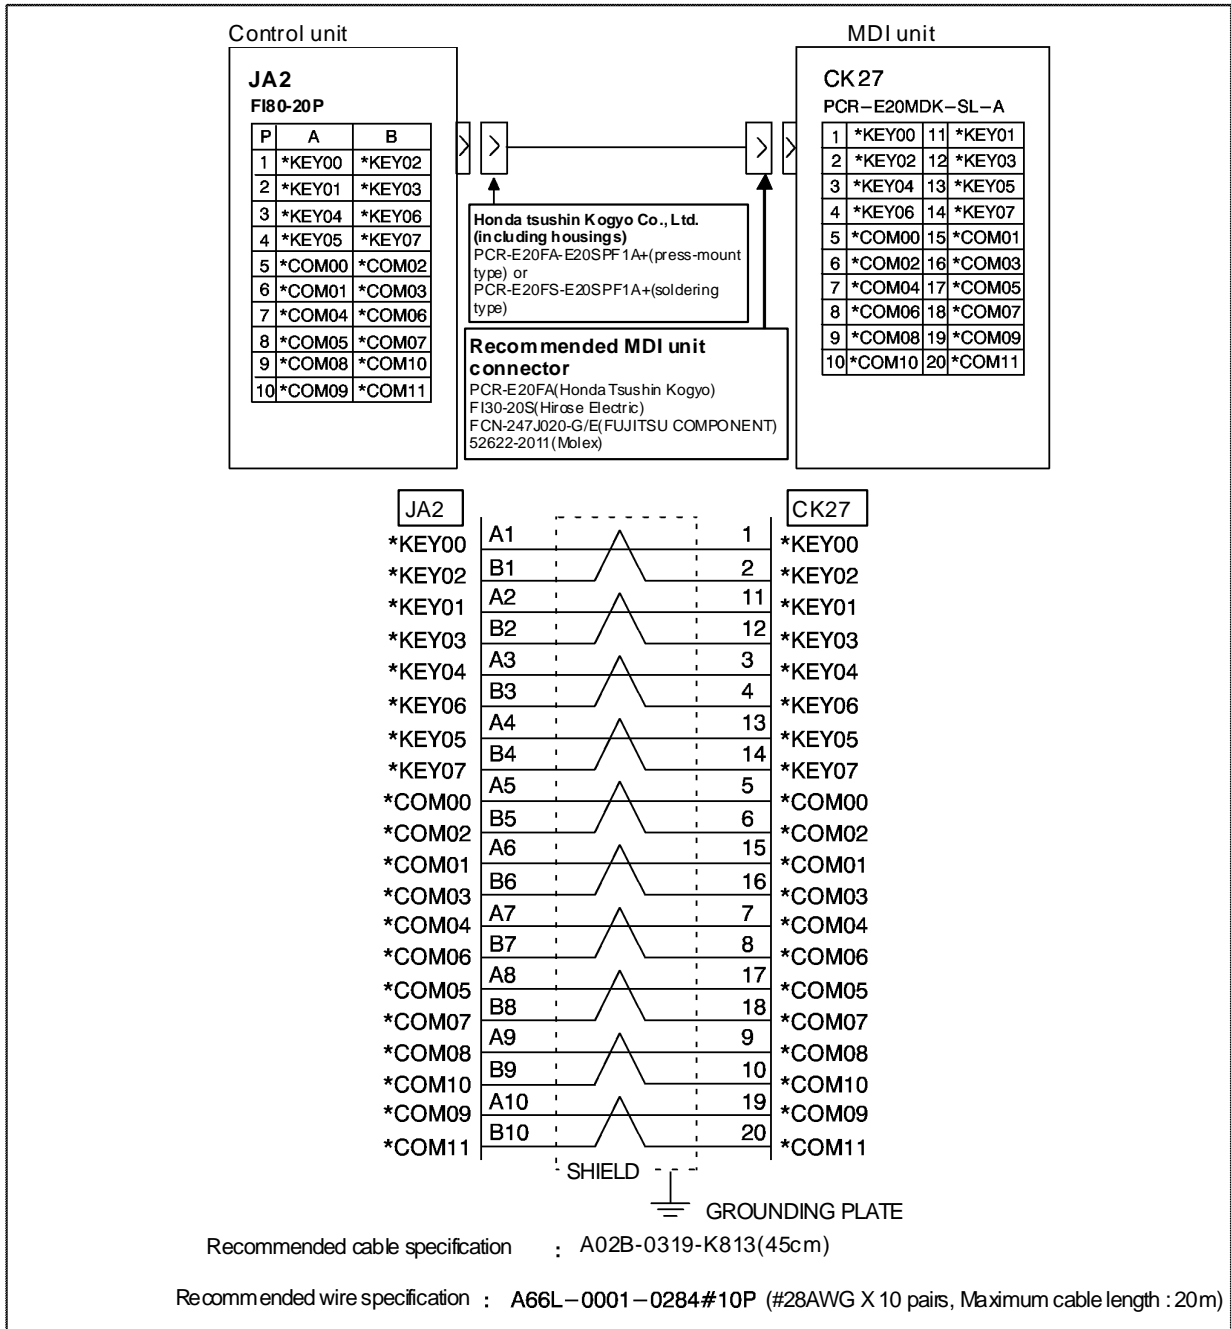

NOTE

Clamp the cable so that excessive force is not applied due to vibration. However, shielding and clamping are not required for a cable of up to 50 cm.

• For basic unit G (15.4”LCD)

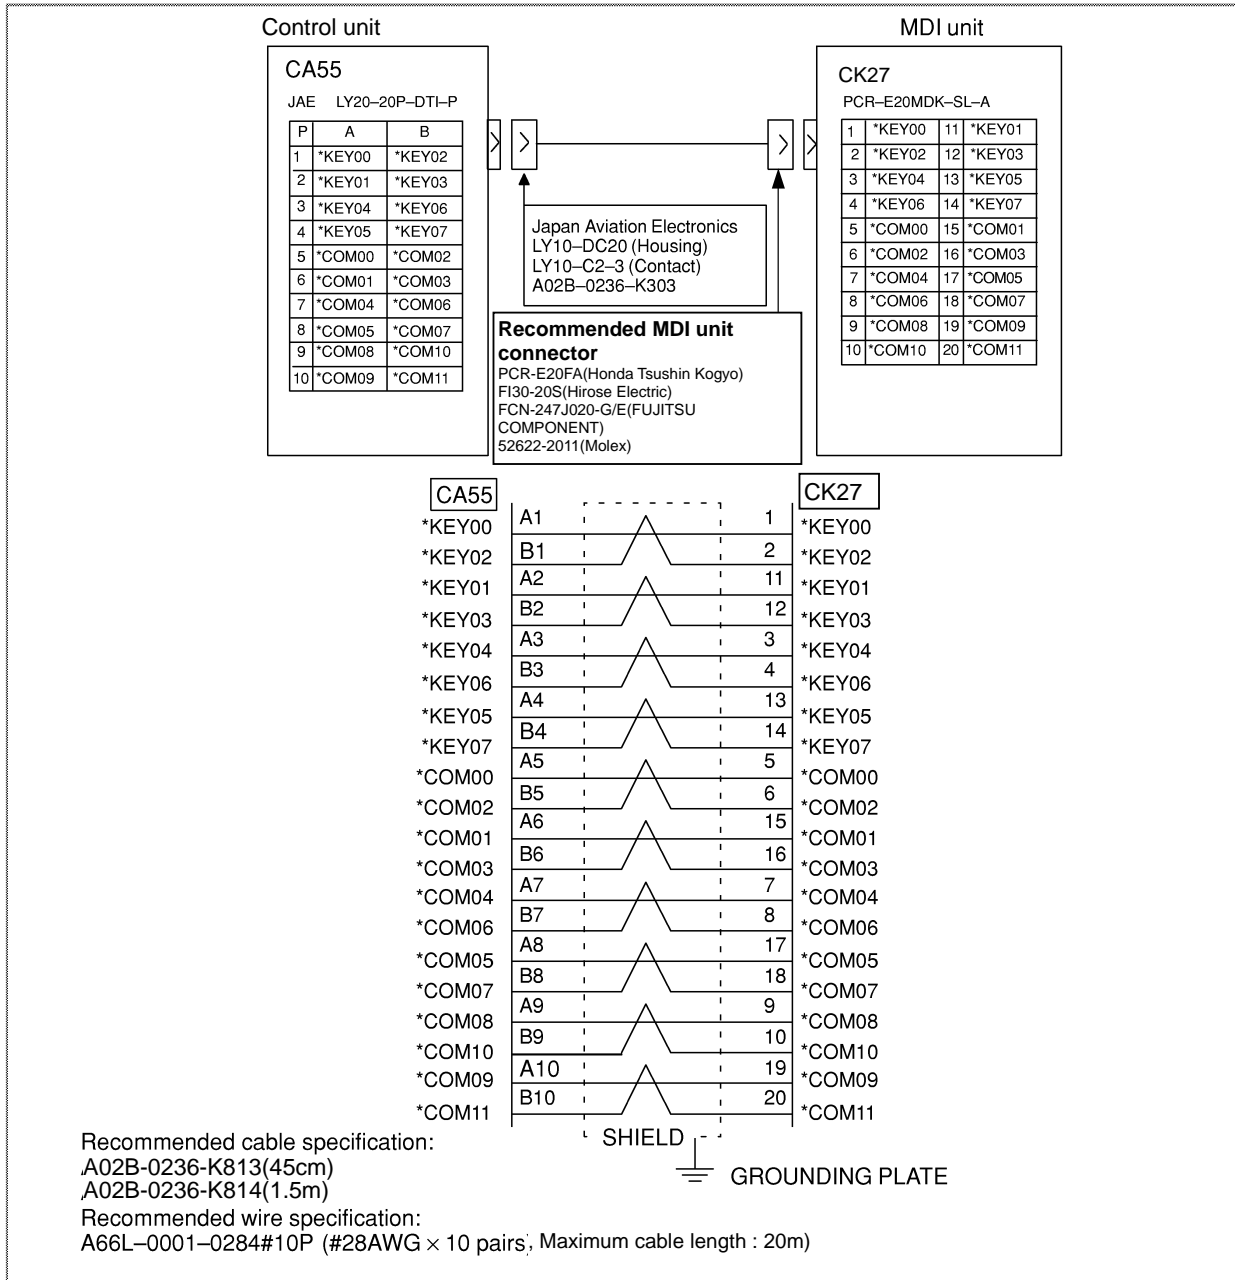


NOTE

For MDI cable connector mating on the CA55 side, a simple lock mechanism is employed. Ensure that a load greater than 1 kg is not applied to the connectors. Moreover, clamp the cable so that excessive force is not applied due to vibration. However, shielding and clamping are not required for a cable of up to 50 cm.


5.1.3 Key Layout of MDI Unit

For Lathe (T series)


- Standard MDI unit (ONG keys)

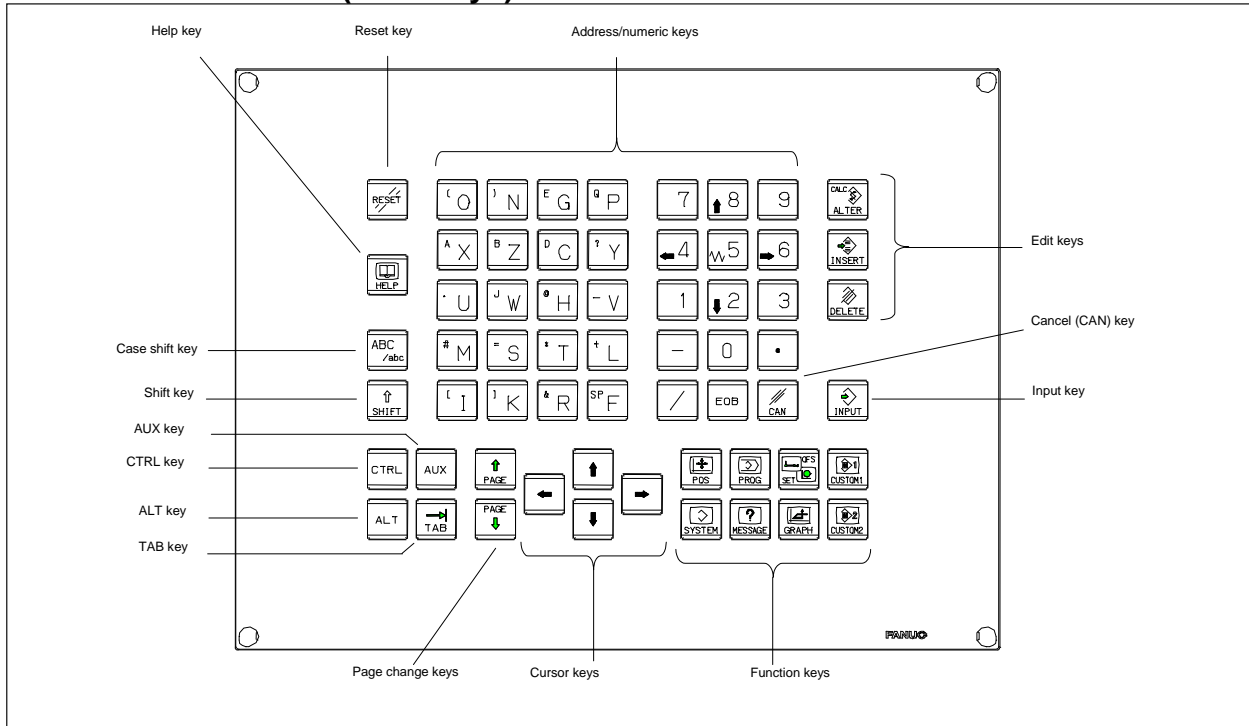


- Small MDI unit (ONG keys)

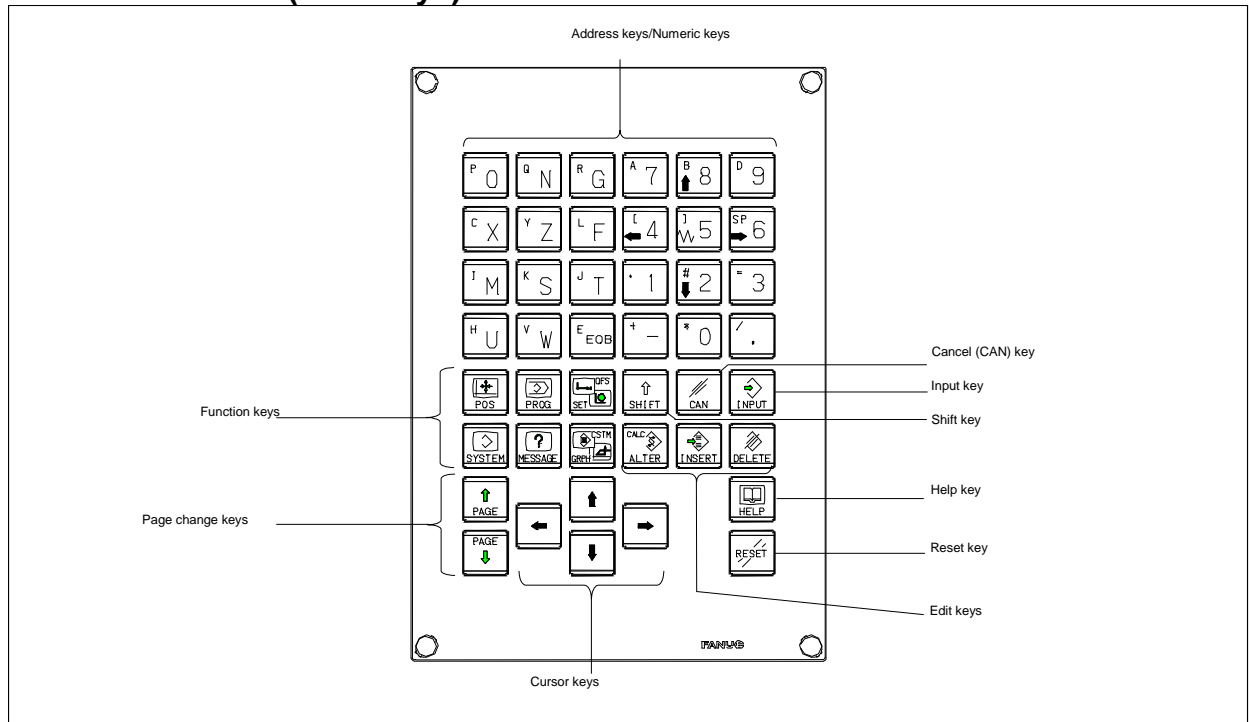

For Machining center (M series)
- Standard MDI unit (ONG keys)

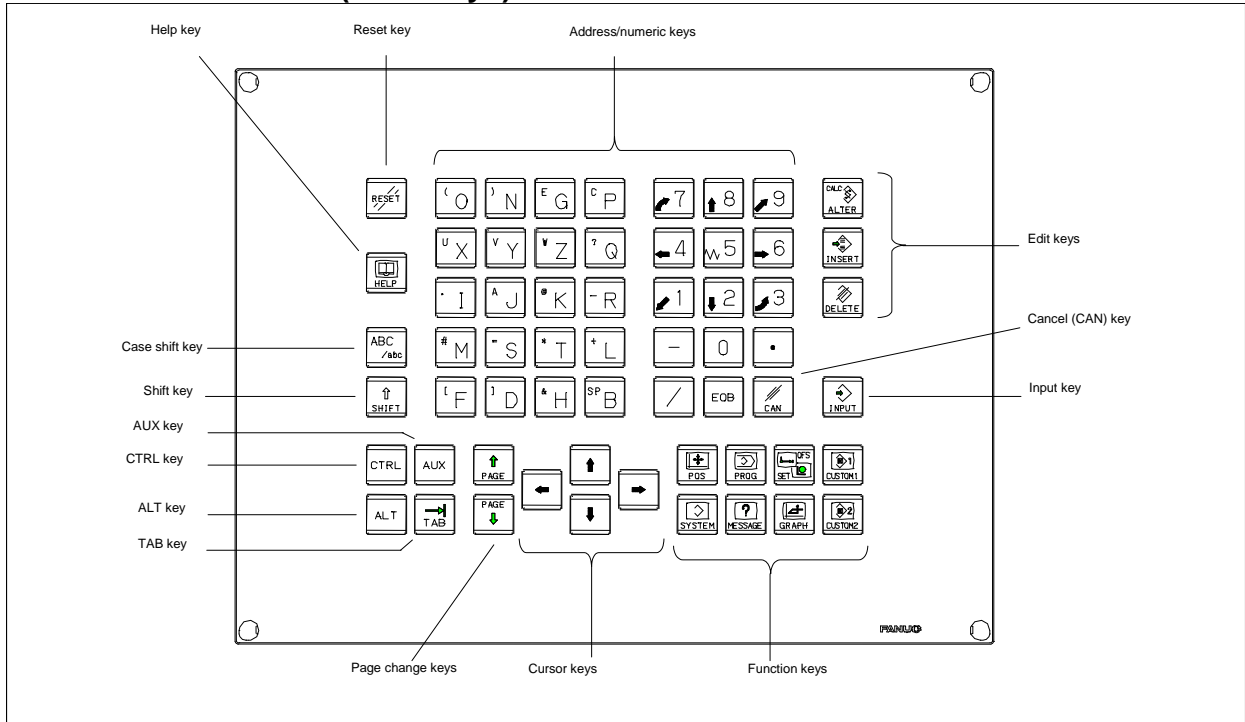


- Small MDI unit (ONG keys)

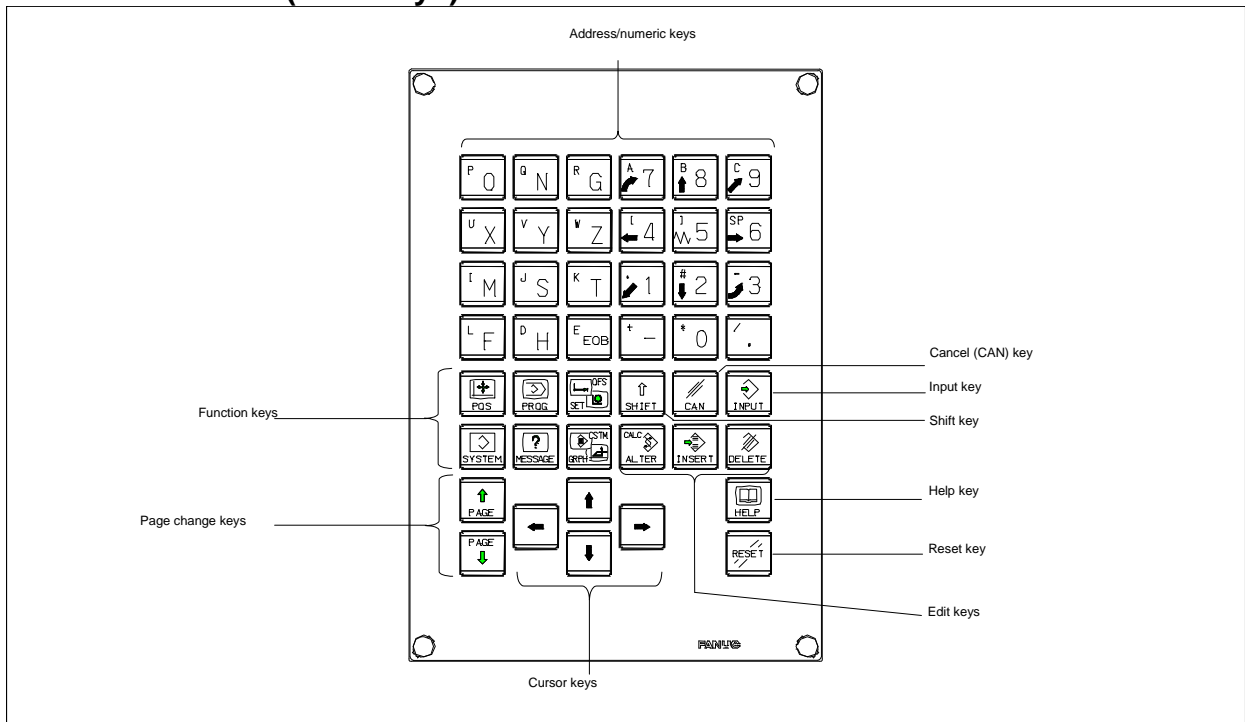


Common to lathe system / machining center system

- Standard MDI unit (QWERTY keys)

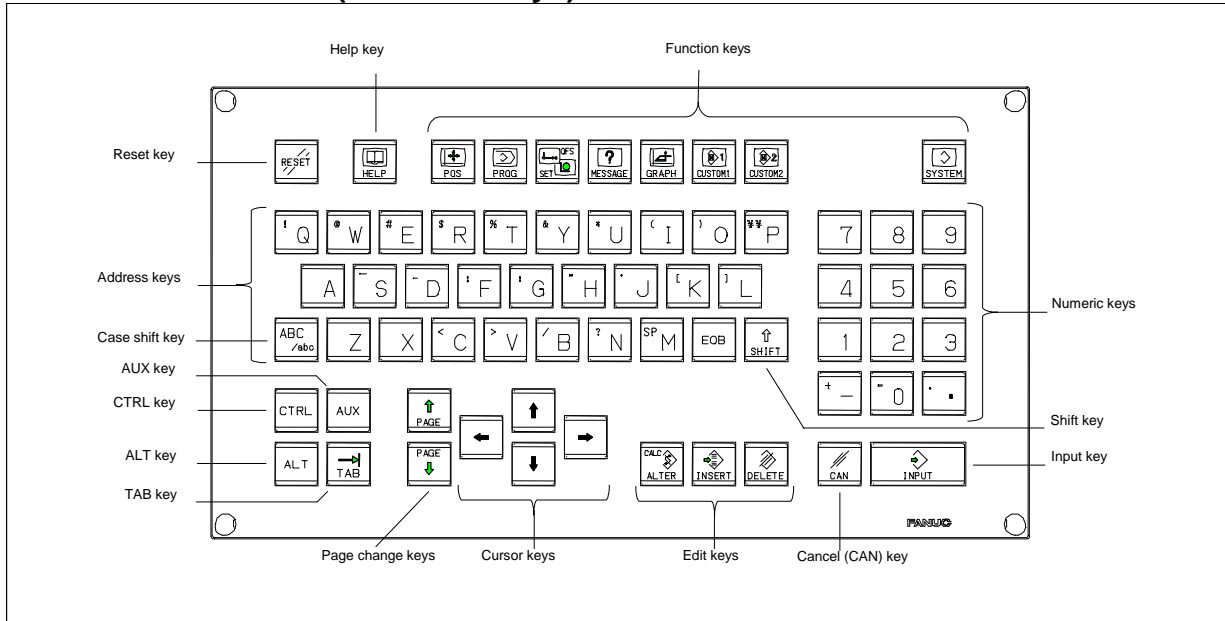

- Standard MDI unit (QWERTY type B keys)

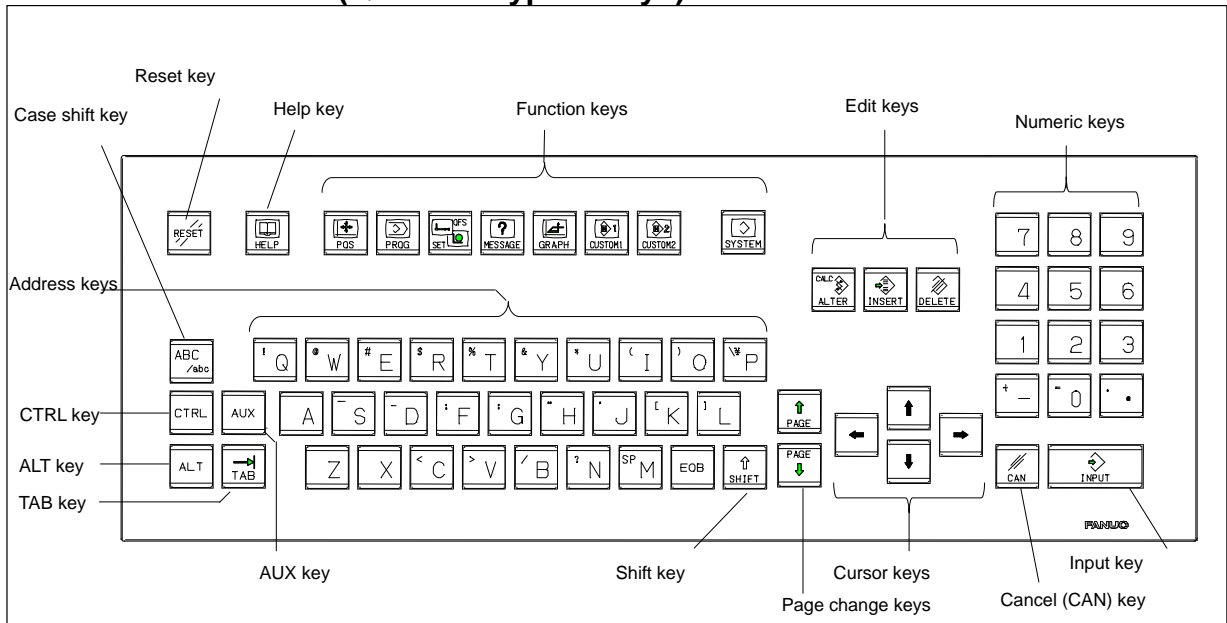

5.1.4 Keyboard Cover

Use the keyboard cover when using the system under environments with higher degree of dust or coolant. Refer Appendix F about how to setting.

⚠ WARNING
 Use the keyboard cover, when it may become impossible to operate key switch because the dust, cutting chips, etc. get in the crevice between keyboards.

5.2 CONNECTION WITH INPUT/OUTPUT DEVICES

5.2.1 Overview

An input/output device is used to enter information such as control unit programs and parameters from an external device to the control unit, or to output information from the control unit to an external device.

The input/output devices usable with this control unit include Handy File.

The interface of the input/output devices electrically conforms to RS232-C, so that a connection can be made with a device that has an RS232-C interface.

The tables below indicate the serial ports of this control unit.

Port name	Interface location	
1CH (JD36A)	Main control unit	
2CH (JD36B)	Main control unit	Note


The serial ports of the 15" LCD LCD-mounted type control unit are as listed in the table below, however.

Port name	Interface location	
1CH (JD56A)	Main control unit	
2CH (JD36A)	Main control unit	Note

NOTE

When a touch panel is used, this serial port is used for touch panel communication on the control unit side, so that this port cannot be used as a general-purpose port.

5.2.2 Connecting I/O Devices

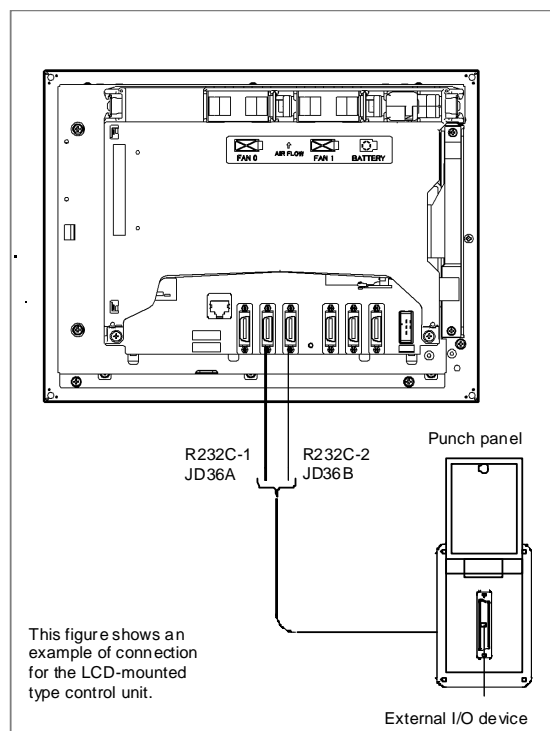


NOTE

This interface is the RS232-C interface on the control unit side.
 For these devices, the RS232-C interface on the control unit is used for the following cases:


- Ladder monitoring, storing, or loading using FANUC LADDER III
- DNC operation via RS232-C, external I/O device control
- Input/output of parameters and programs by using the control unit screen display function

5.2.3 RS232-C Serial Port

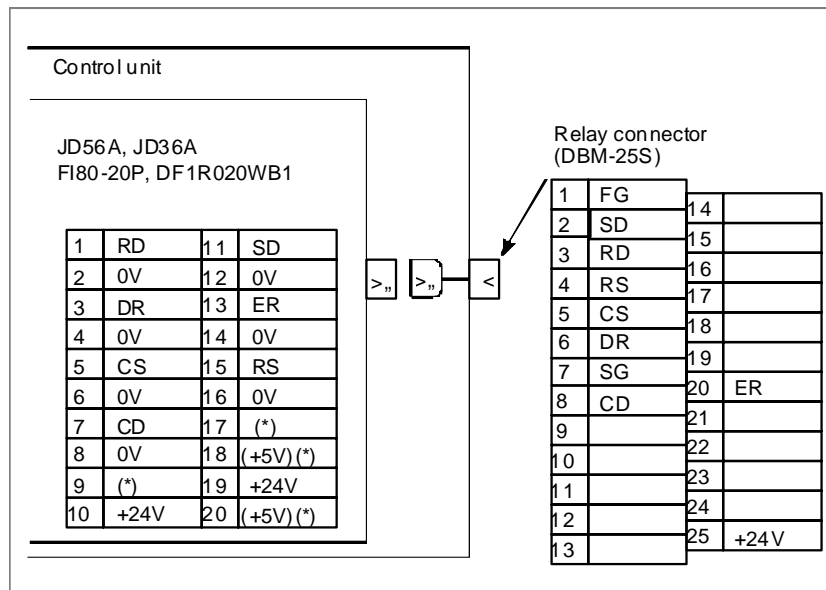

NOTE

- 1 Do not connect anything to those pins for which signal names are not indicated.
- 2 Pins 18 and 20 (+5V) are provided for touch channel connection.

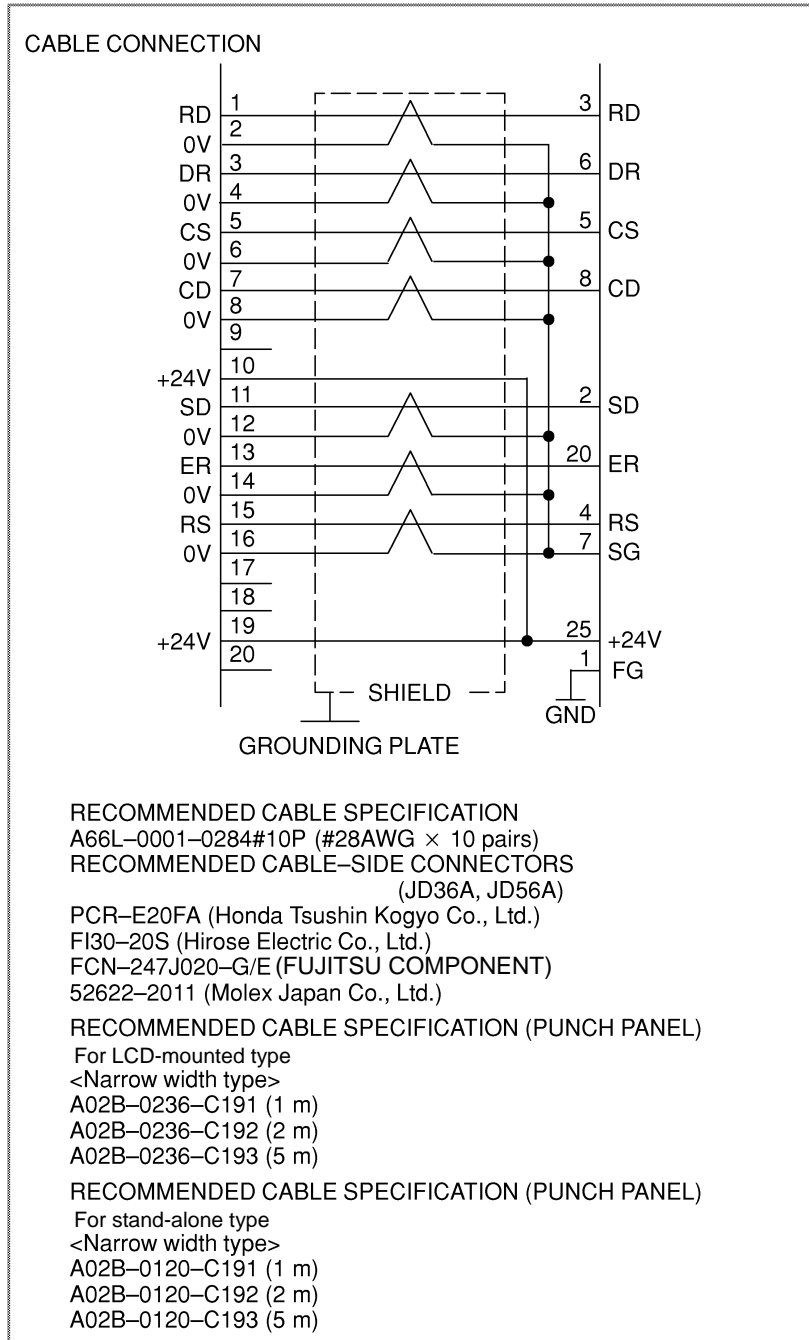

NOTE
 1 Do not connect anything to those pins for which signal names are not indicated.

5.2.4 RS232-C Interface Specification

RS232-C Interface signals

Generally signals as follows are used in RS232-C interface.

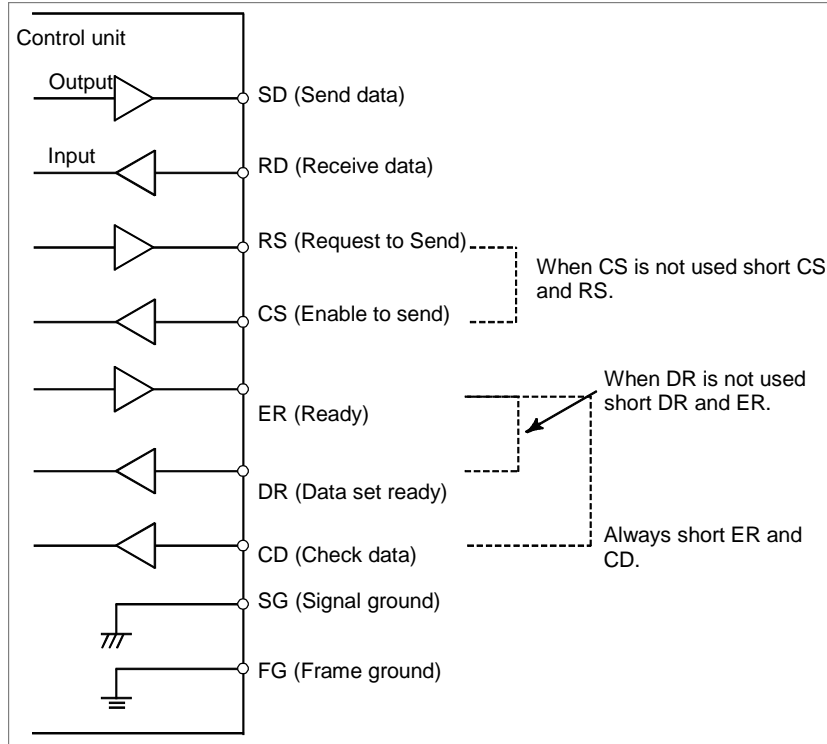
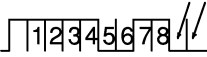


Fig. 5.3.4 RS232-C interface

Signal description of RS232-C interface

Signal	I/O	Description	
SD	Output	Sending data	Start bit Stop bits ON  OFF (When ISO code 0 is sent)
RD	Input	Receiving data	
RS	Output	Sending request	This signal is set to on when control unit starts sending data and is turned off when transmission ends.
CS	Input	Sending permitted	When both this signal and the DR signal are set, the control unit can send data. If I/O device processing is delayed by a punching operation, etc., control unit data sending can be stopped by turning off this signal after sending two characters, including the data being sent currently. If this signal will not be used, make sure to strap this signal circuit to the RS signal circuit.
DR	Input	Data set ready	When I/O device is ready to operate, this signal is set. This signal should usually be connected to the signal indicating I/O device power supply being on. (ER signal ^(Note) of I/O device). See Note below. The control unit transfers data when this signal is set. If the signals turned off during data transfer, alarm 086 is issued. If the DR signal will not be used, make sure to strap this signal circuit to the ER signal circuit.
ER	Output	Control unit ready to operation	This signal is set when the control unit is ready to operate. External device should regard the SD signal as being significant when the ER signal is set.
CD	Input	Signal Condition	Since this signal is not used in connections with I/O device, the signal circuit must be strapped, inside the connecting cable, to the ER signal circuit.
SG		Signal grounding	
FG		Frame grounding	

NOTE

Signal on/off state is defined as follows;

	-3V or lower	+3V or higher
Function	OFF	ON
Signal Condition	Marking	Spacing

Transmission Method of RS232-C interface


- Start-stop

Generally, two transmission methods are available at the serial interface. This control unit uses the start-stop method.

NOTE

Start-stop method:

With this method, start and stop signals are output before and after each data bit.

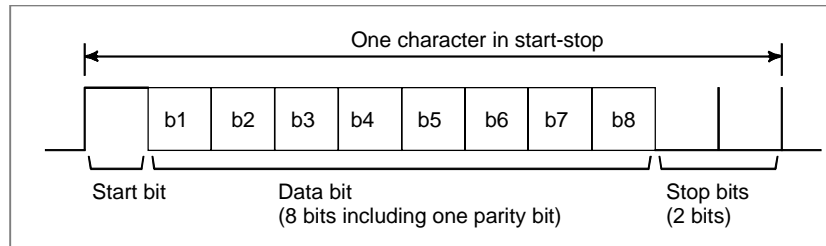

- Codes

Transmission codes are as follows:

- (1) EIA code and Control codes DC1 to DC4.
- (2) ISO code and Control codes DC1 to DC4

The connected I/O device must be able to recognize the following control codes, sent from control unit.

Control code		8	7	6	5	4	3	2	1
DC1	Tape reader start				○	○			○
DC2	Tape punch designation				○	○		○	
DC3	Tape reader stop	○			○	○		○	○
DC4	Tape punch release				○	○	○		

NOTE

The listed control codes are used for both EIA and ISO.

In this interface, control codes DC1 to DC4 are used.

- (a) Control unit can control I/O device by issuing codes DC1 to DC4.
- (b) If processing is delayed at the I/O device (when the control unit outputs data)
 - (i) External device can temporarily stop control unit data output by using the control unit's CS signal. Data output stops within two characters including a currently transmitting character when CS OFF signal is input to control unit. When CS signal is turned on again, data transmission start.
 - (ii) If control code DC3 is input to control unit, control unit stops data output within ten characters. When control code DC1 is input to control unit, control unit starts sending data again.


- (c) When the external device is equipped with an ISO/EIA converter, the external device must satisfy the specification shown in Table 5.3.4.

Table 5.3.4

ISO code									EIA code									Remarks
Character	8	7	6	5	4	3	2	1	Character	8	7	6	5	4	3	2	1	
0			○	○		●			0			○			●			Number 0
1	○		○	○		●		○	1						●		○	Number 1
2	○		○	○		●		○	2						●		○	Number 2
3			○	○		●		○	3				○		●		○	Number 3
4	○		○	○		●		○	4						●		○	Number 4
5			○	○		●		○	5				○		●		○	Number 5
6			○	○		●		○	6				○		●		○	Number 6
7	○		○	○		●		○	7						●		○	Number 7
8	○		○	○	○	●			8				○		●			Number 8
9			○	○		●		○	9				○		●		○	Number 9
A		○				●		○	a		○	○			●		○	Address A
B		○	○			●		○	b		○	○			●		○	? Address B
C	○	○				●		○	c		○	○	○		●		○	Address C
D		○	○			●		○	d		○	○	○		●		○	? Address D
E	○	○				●		○	e		○	○	○		●		○	? Address E
F	○	○				●		○	f		○	○	○		●		○	Address F
G		○	○			●		○	g		○	○	○		●		○	Address G
H		○	○		○	●		○	h		○	○	○	○	●		○	Address H
I	○	○			○	●		○	i		○	○	○	○	●		○	Address I
J	○	○			○	●		○	j						●		○	? Address J
K	○	○			○	●		○	k		○	○	○		●		○	Address K
L	○	○			○	●		○	l		○	○	○		●		○	? Address L
M		○	○		○	●		○	m		○		○		●		○	Address M
N		○	○		○	●		○	n		○				●		○	Address N
O	○	○			○	●		○	o						●		○	Address O
P		○	○		○	●		○	p		○		○		●		○	Address P
Q	○	○			○	●		○	q		○		○		●		○	Address Q
R	○	○			○	●		○	r		○		○		●		○	Address R
S		○	○		○	●		○	s			○	○		●		○	Address S
T	○	○			○	●		○	t			○	○		●		○	Address T
U		○	○		○	●		○	u			○	○		●		○	Address U
V		○	○		○	●		○	v			○	○		●		○	? Address V
W	○	○			○	●		○	w			○	○		●		○	Address W
X	○	○			○	●		○	x			○	○		●		○	Address X
Y		○	○		○	●		○	y			○	○		●		○	? Address Y
Z		○	○		○	●		○	z			○	○		●		○	Address Z
DEL	○	○	○	○	○	●		○	Del		○	○	○	○	●		○	*
NUL						●			Blank						●			*
BS	○					●			BS			○		○	●		○	*
HT						●		○	Tab			○	○	○	●		○	*
LF or NL					○	●		○	CR or EOB		○				●			*
CR	○				○	●		○							●			*
SP	○		○			●			SP						●			*
%	○		○			●		○	ER				○		●		○	
(○	○		●			(2-4-5)				○	○	●		○	
)	○		○	○		●		○	(2-4-7)				○	○	●		○	
+			○			●		○	+		○	○	○		●			*
-			○			●		○	-		○				●			*
:			○	○		●									●			*
/	○		○	○		●		○	/			○			●		○	
.			○			●		○	.		○	○		○	●		○	
#	○		○			●		○							●			*
\$			○			●		○	\$						●		○	*
&	○		○			●		○	&				○		●		○	*
∇			○			●		○							●		○	*
*	○		○		○	●		○							●		○	*
,	○		○			●		○	,			○	○		●		○	*
;	○		○			●		○							●		○	*
<	○		○			●		○							●		○	*
=	○		○			●		○							●		○	*
>	○		○			●		○							●		○	*
?			○	○		●		○							●			*
@	○	○				●									●			*
"			○			●		○							●			*

NOTE

- 1 When the external device is equipped with an ISO/EIA converter, the following items must be noted in Table 5.3.4.

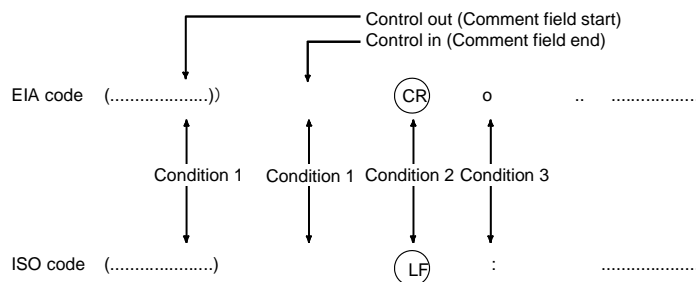

Condition1 Left parenthesis "(" of the ISO code punches holes at bits 2, 4 and 5 when used in the EIA code.

Right parenthesis ")" of the ISO code punches holes at bits 2, 4 and 7 when used in the EIA code.

Condition2 EIA code $\text{\textcircled{CR}}$ is $\text{\textcircled{LF}}$ in ISO code.

Condition3 EIA code O is : in ISO code.

- 2 Control codes DC1 to DC4 are transmission codes output from the control unit. So they need not to be punched on the control unit tape.

- (3) Transmission rate (Baud rate)

The transmission rate (Baud rate) is the number of bits transferred per second.

The following baud rates are available depending on the system parameter.

50, 100, 110, 150, 200, 300, 600, 1200, 2400, 4800, 9600

[Example] Baud rate : 110

When using one start bit and two stop bits (totaling 11 bits per character):

Transmission characters/second = $110/11 = 10$ characters/second (Max.)

- (4) Cable length

The cable length depends on the external device type. Consult with the device manufacturers for actual connecting cable lengths.


Cable length is as follows by the specification of control unit.

RS232-C Baud rate 4800 or less: Up to 100 m

Baud rate 9600 or less: Up to 50 m

Time chart when the control unit receives data (Read into memory)

- (1) Control unit outputs DC1.
- (2) The I/O device starts sending data upon receiving DC1.
- (3) Control unit sends DC3 when control unit processing is delayed.
- (4) The I/O device stops sending data to control unit after receiving DC3.
The device may send up to 10 characters after receiving DC3. If it sends more than 10 characters, alarm 087 will occur.
- (5) Control unit reissues DC1 upon completing delayed processing.
- (6) The I/O device restarts data output upon receiving the DC1 code (the data must be the next data to the preceding.)
- (7) Control unit sends DC3 upon completing data read.
- (8) The I/O device stops sending data.

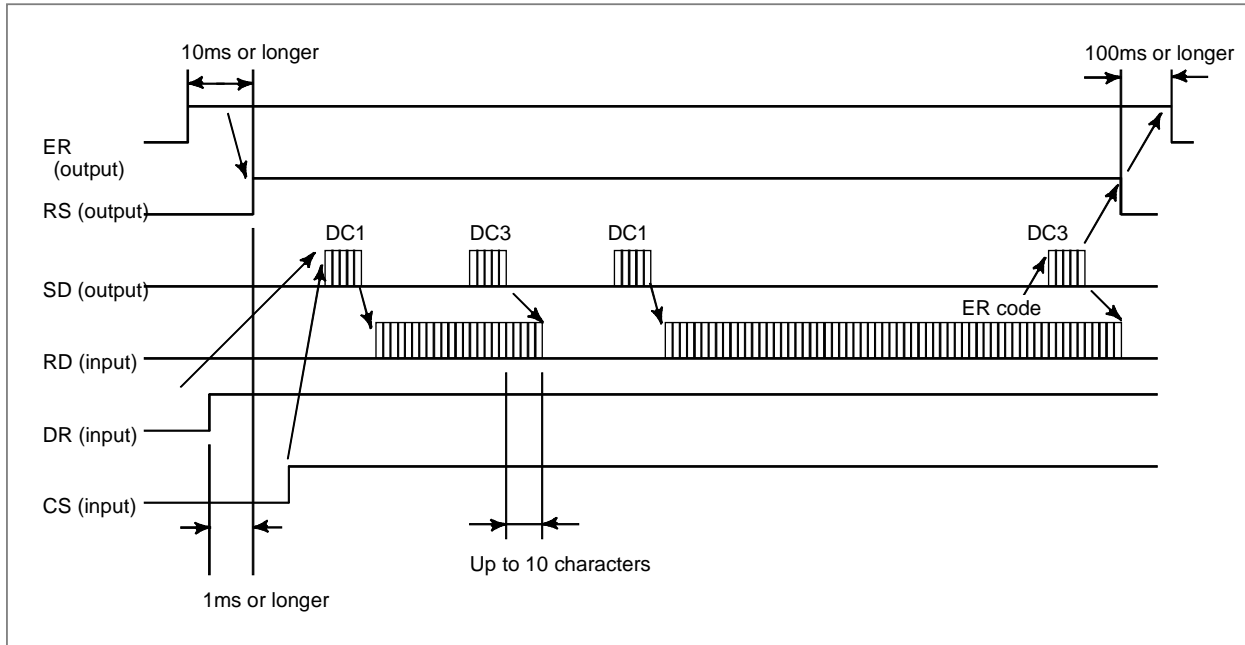

Time chart when the control unit send data (Punch out)

- (1) Control unit output DC2.
- (2) Control unit outputs punch data in succession.
- (3) When data processing is delayed at the I/O device.
 - (a) Data output stops within two characters including a currently transmitting character when CS signal is turned off. When CS signal is turned on again, data transmission starts. (See Fig. 5.3.4 (b))
 - (b) If control code DC3 is input to control unit, control unit stops data output within ten characters. When control code DC1 is input to control unit, control unit starts sending data again. (See Fig. 5.3.4 (c))
- (4) The control unit starts sending the next data if the CS signal is turned on after the I/O device completes data processing.
- (5) The control unit issues DC4 upon completing data output.

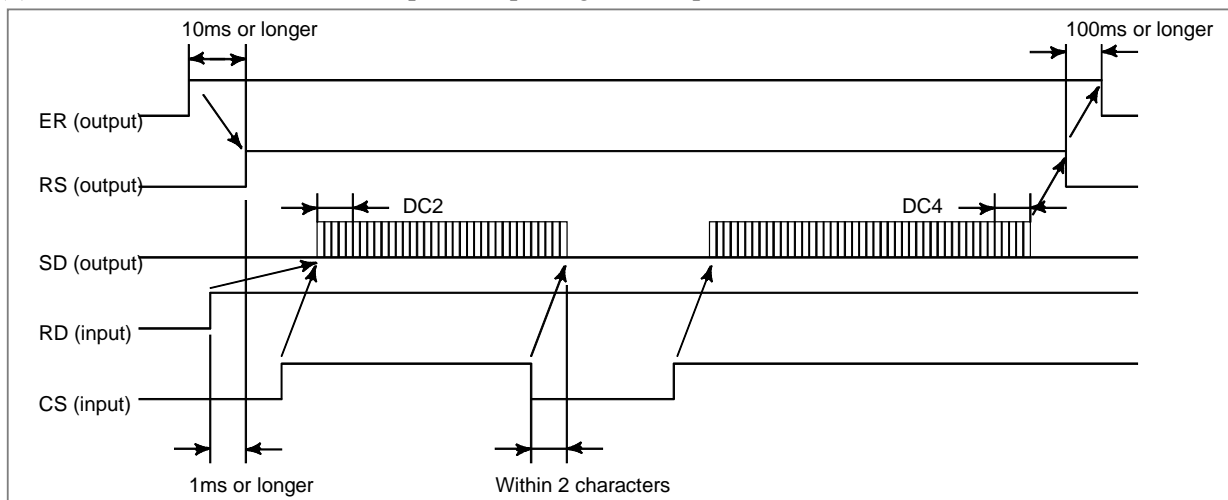


Fig. 5.3.4 (b)



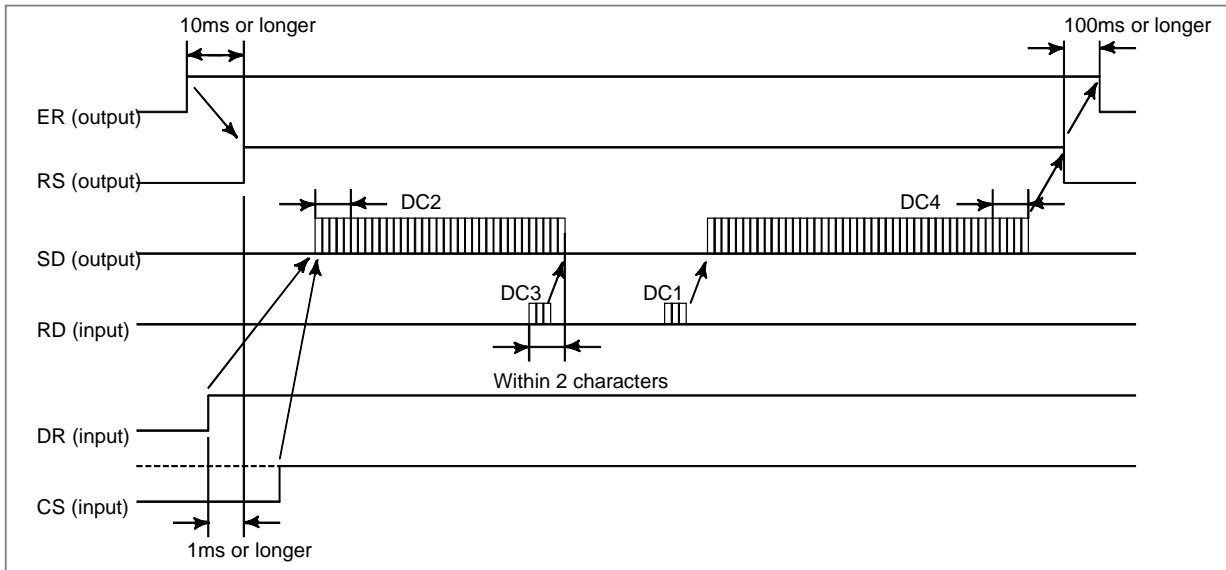


Fig. 5.3.4 (c)


Connection between RS232-C interface and external device

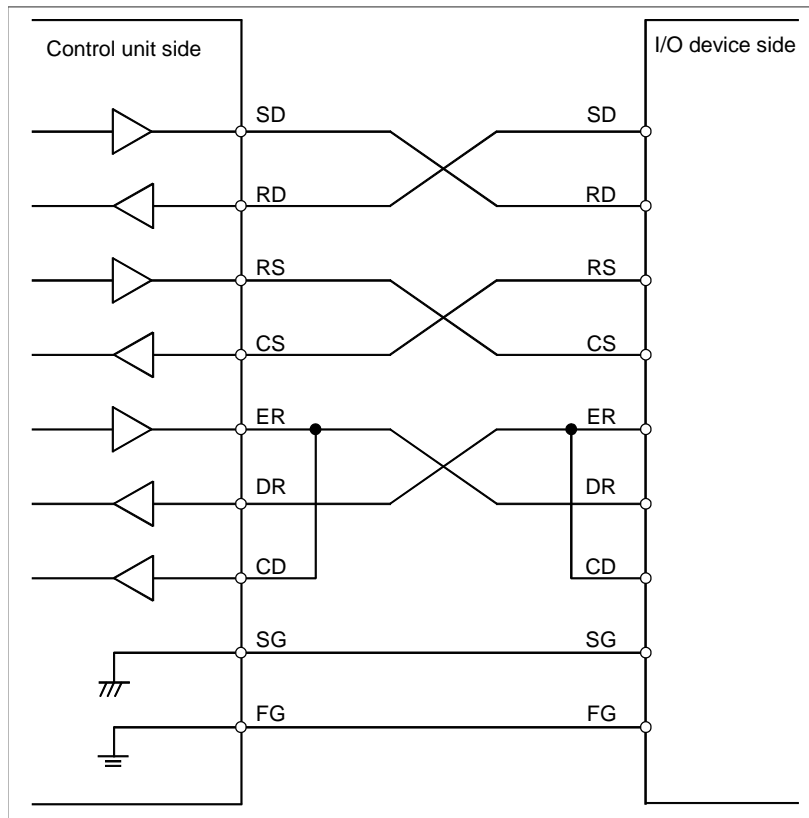

- Use the connection shown in the figure below when the ER and DR signals are not used for handshaking.

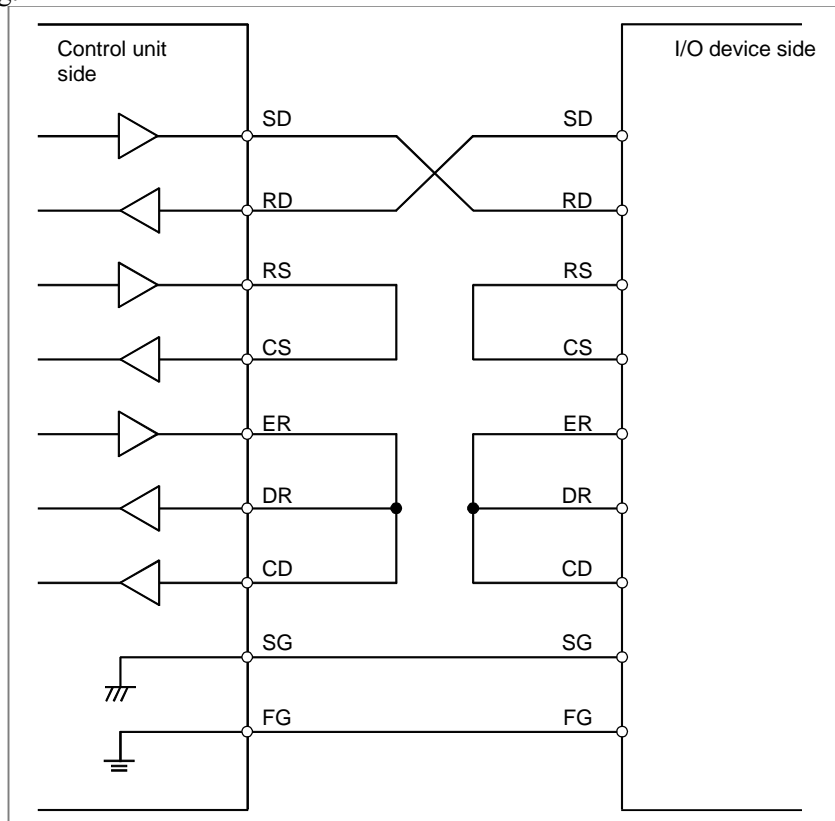


The cable for connecting the I/O device to the control unit should be connected as shown in the below diagram.

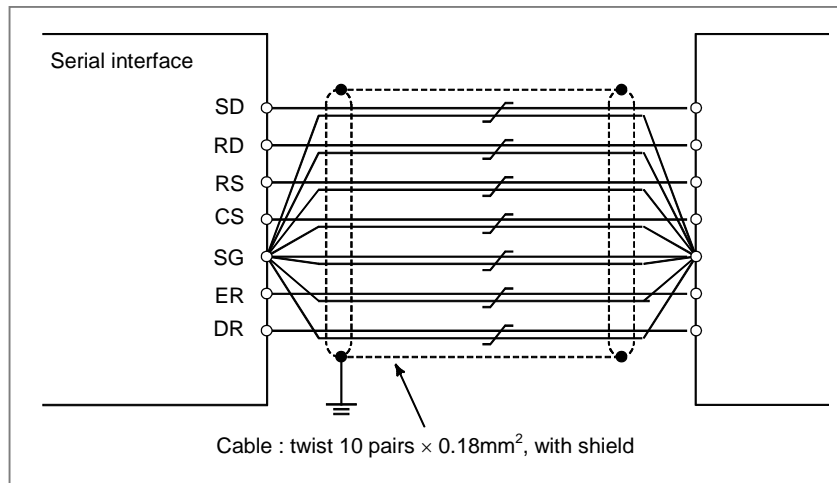

5.3 CONNECTING THE HIGH-SPEED SKIP (HDI)


5.3.1 Connecting the High-speed Skip (HDI)

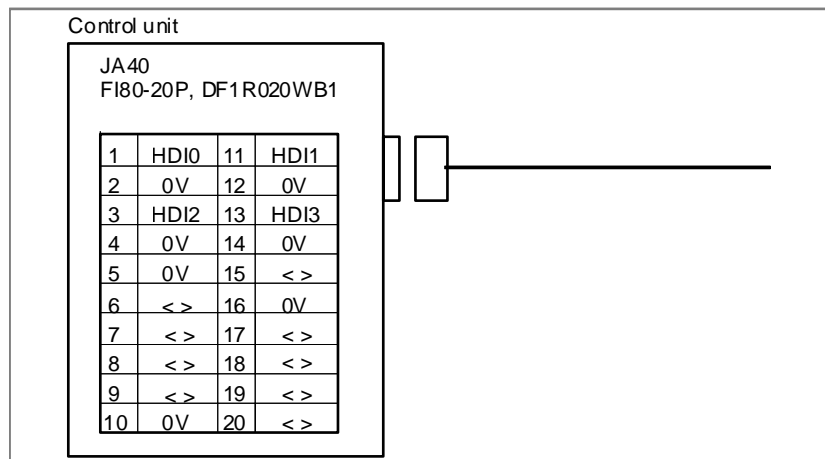

NOTE


- 1 No connections must be made to the pins with angle brackets (<>) because they are reserved for expansions.

Cable connections

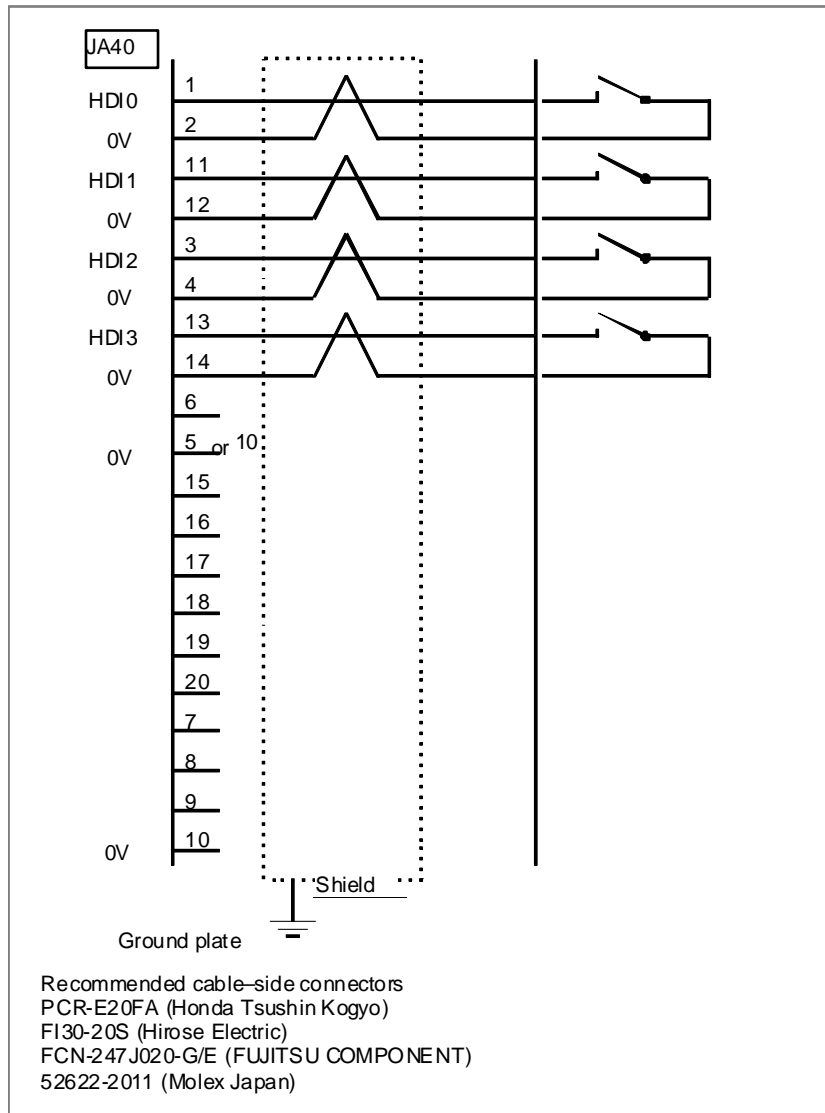

5.3.2 Input Signal Rules for the High-speed Skip (HDI)

Circuit configuration

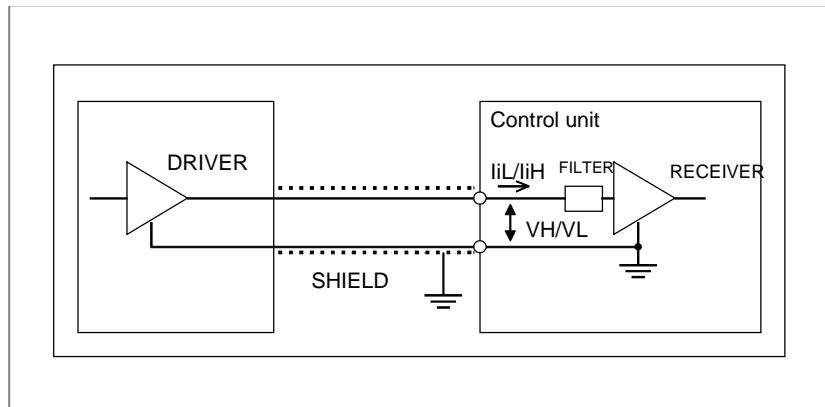

Absolute maximum rating
 Input voltage range V_{in} : -3.6V to +13.6V

Input characteristics

Unit	Symbol	Specification	Unit	Remarks
High level input voltage	VH	3.6 to 11.6	V	
Low level input voltage	VL	0 to 1.0	V	
High level input current	liH	2 (max)	mA	Vin=5V
		11 (max)	mA	Vin=10V
Low level input current	liL	-8.0 (max)	mA	Vin=0V
Input signal pulse duration		20 (min)	μs	
Input signal delay or variations		0.02 (max)	ms	

NOTE

- 1 The plus (+) sign of liH/liL represents the direction of flow into the receiver. The minus (-) sign of liH/liL represents the direction of flow out of the receiver.
- 2 The high-speed skip signal is assumed to be 1 when the input voltage is at the low level and 0 when it is at the high level.
- 3 The input level for the control unit receiver is high when the circuit is open. So, the input level for the external driver must be low.

5.4 LINKING THE ETHERNET INTERFACE

CAUTION


Before attaching or removing cables, power off the control unit main unit, and confirm that the power is off.

Ask the respective manufacturers for explanations about how to build a network and about conditions for using units (such as a media converter, hub, transceiver, and cable) other than the control unit. When installing network cables, exercise sufficient caution so that the network will not be affected by any noise source. Electrically separate the network wiring sufficiently from noise sources like motors and their power lines. Also, ground each unit as required. If the grounding impedance is high, it may cause trouble in communication. Once the equipment is installed, conduct communication tests to verify normal operation before starting actual use of the equipment.

FANUC is not liable to any damage related to trouble arising from any unit other than the control unit.


5.4.1 Connection to the Ethernet Interface

A hub (line concentrator) is used to connect the control unit to a system. A typical example of connection is shown below. For the connection of the control unit with the FANUC PANEL *i* and a commercially available personal computer using Ethernet, see also Chapter 11.

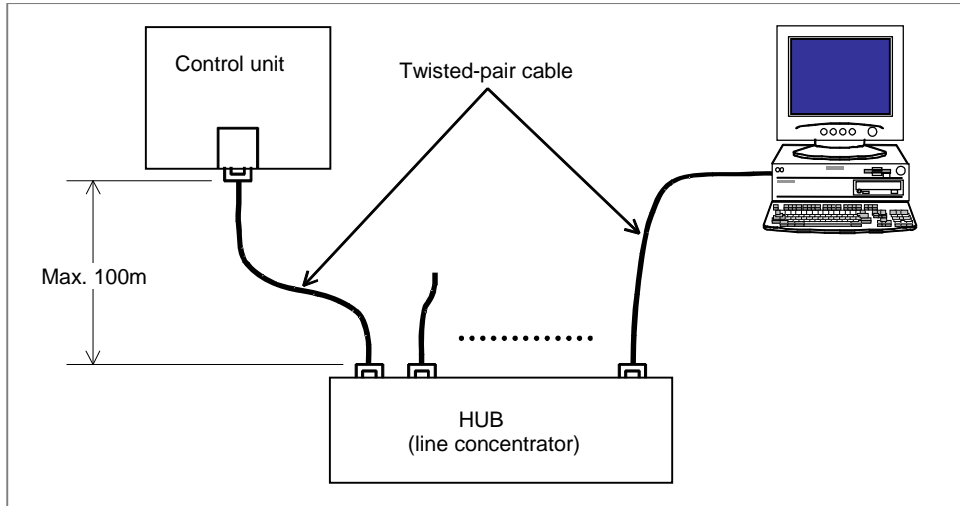

NOTE

- 1 To connect the control unit to the 10BASE-T Ethernet interface, use a hub which satisfies the following conditions:
 - Supports 100BASE-TX.
 - Has an auto-negotiation function.
 - Supports store-and-forward switching.
- 2 The cable can be up to 100 m long (for the FANUC- recommended cable for movable sections, up to 50 m). Do not make the cable longer than necessary.
- 3 An Ethernet cable needs clamping to make system operation stable. For details of clamping, see Subsection 3.4.6, "Cable Clamp and Shield Processing". The clamp for grounding the shield of the cable can also fix the cable.

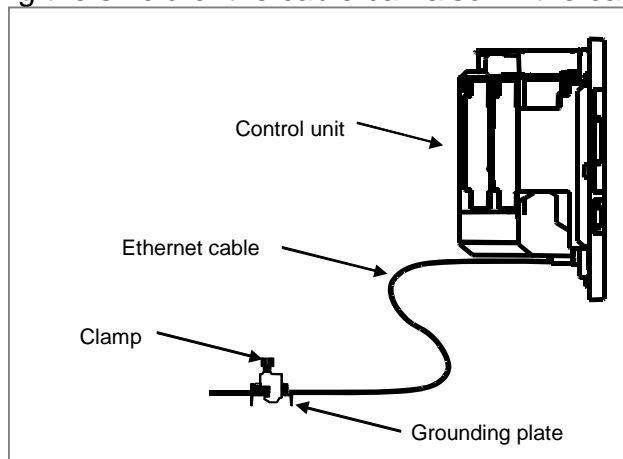

- 4 Some of the units (hub, transceiver, etc.) required to build a network are not dust-proof. They should be enclosed in a dust-proof cabinet. Using them in an atmosphere with dust or oil mist may lead to a communication error or failure.

Pin arrangement of the Ethernet connector (CD38A, CD38S)

CD38A, CD38S


Pin No.	Signal name	Description
1	TX+	Transmit +
2	TX-	Transmit -
3	RX+	Receive +
4		Not used
5		Not used

Pin No.	Signal name	Description
6	RX-	Receive -
7		Not used
8		Not used

5.4.2 Specification of Twisted-Pair Cable

Cable connection

The connectors of a cable for connecting between the Ethernet interface (CD38A, CD38S) and the hub have the pin arrangement shown below.

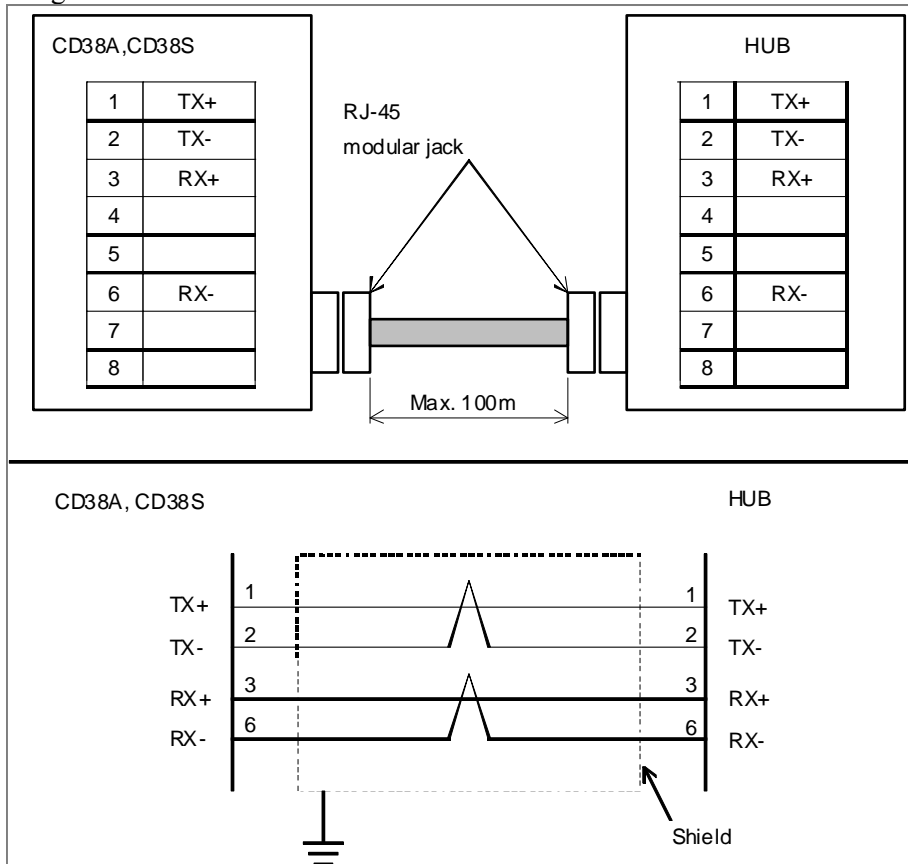

NOTE
The cable can be up to 100 m long (for the FANUC- recommended cable for movable sections, up to 50 m). Do not make the cable longer than necessary.

Cable Wires

Many cables without a shield (UTP cables) are commercially available as twisted pair cables conforming to 10BASE-T or 100BASE-TX. To improve noise immunity in factory automation environments, however, be sure to use twisted pair cables (STP cables) with a common shield in category 5.

Recommended cable wire (for fixed parts)

Manufacturer	Specification	Remark
Nissei Electric Co., Ltd.	F-4PMMWMMF	Single-wire cable

NOTE

No cable recommended for use in fixed sections shall be used in movable sections.
For movable sections, be sure to use the recommended cables for movable sections listed below.

Recommended cable wire (for movable sections)

Manufacturer	Specification	Remark
Oki Electric Cable Co., Ltd.	AWG26 4P TPMC-C5-F (SB)	Dedicated to FANUC products, with no connector
SHINKO ELECTRIC INDUSTRIES CO., LTD.	FNC-118	

Specification

- Ordering specifications : A66L-0001-0453
- Electrical characteristic : Complying with EIA/TIA 568A categories 3 and 5
- Structure : Common-shield braided cable with drain wire
The conductors of the cable are AWG26 annealed-copper strand wire, with a sheath 0.8 mm thick and an outer diameter of 6.7 ± 0.3 mm
- Fire resistance : UL1581 VW-1
- Oil resistance : As per FANUC's internal standard (Equivalent to conventional oil-resistant electrical cable)
- Flex resistance : Million or more bending cycles with a bending radius of 50 mm (U-shaped bend test)
- UL style No. : AWM20276 (80°C/30V/VW-1)

NOTE

When using this cable, keep the length between the control unit and hub within 50 m because of its attenuation performance. Be sure to use the TM21CP-88P(03) connector manufactured by Hirose Electric Co., Ltd.

About cable assemblies

Oki Electric Cable Co., Ltd. can offer a cable assembly that uses the TM21CP-88P(03) connector made by Hirose Electric Co., Ltd. To get this cable assembly, negotiate directly with the manufacturer on its specifications (cable length, shipping test, package, etc.).

Connector specification

An 8-pin modular connector called the RJ-45 is used with a twisted-pair cable for Ethernet interfaces. Use the connector listed below or equivalent.

	Manufacturer's model number	Manufacturer	Remark
Connector used with cable AWG26 4P TPMC-C5-F(SB)	TM21CP-88P(03)	Hirose Electric Co., Ltd.	(Note)


NOTE

About TM21CP-88P(03)
 Ordering specifications: A63L-0001-0823#P
 Complying with EIA/TIA 568A categories 3 and 5
 Ask Hirose Electric Co., Ltd. for explanations about how to attach the connector to a cable. (Hirose Electric Co., Ltd. offers the TM21CP-88P(03) Wiring Procedure Specification (Engineering Specification No. ATAD-E2367) to explain the related technical information.)

5.4.3 Network Installation

Even when the machine satisfies its grounding requirements, noise from the machine may get on communication lines depending on the way the machine is installed and its environment, resulting in a communication error. Separating and isolating the Ethernet backbone cable and PC from the machine can prevent noise from getting on the communication lines.

An example of connection is shown below.

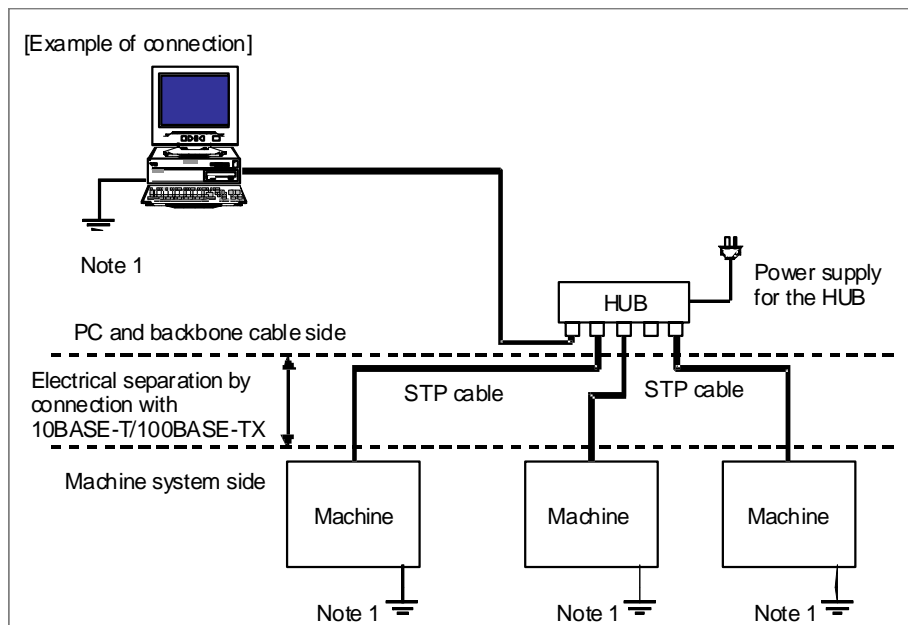**NOTE**

- 1 Ground the PC and backbone cable separately from the machine system. If this is impossible because there is only one grounding point, use separate grounding wires for the PC/backbone cable and the machine system up to the grounding point. The grounding resistance must not be higher than 100Ω (class 3 grounding). The grounding wire must not be thinner than the AC power line conductor, and its cross-sectional area must not be smaller than 5.5 mm^2 .
- 2 In some cases, the aforementioned isolation/separation method based on 10BASE-T/ 100BASE-TX cannot assure normal communication because of influence by noise. In such worst environments, use optical fiber media to completely isolate the machine from the PC.


5.4.4 Ethernet Connector Panel

Ethernet Connector Panel enables user to connect/disconnect Ethernet cable at the front panel of the cabinet with ease.



Specification

Name	Specification	
Ethernet Connector Panel	A02B-0303-C194	with 1m cable
	A02B-0303-C195	with 2m cable
	A02B-0303-C196	with 5m cable
Ethernet Cable for Connector Panel	A02B-0303-K820	cross cable 1.5m
	A02B-0303-K821	cross cable 5m
	A02B-0303-K822	straight cable 1.5m
	A02B-0303-K823	straight cable 5m


Component

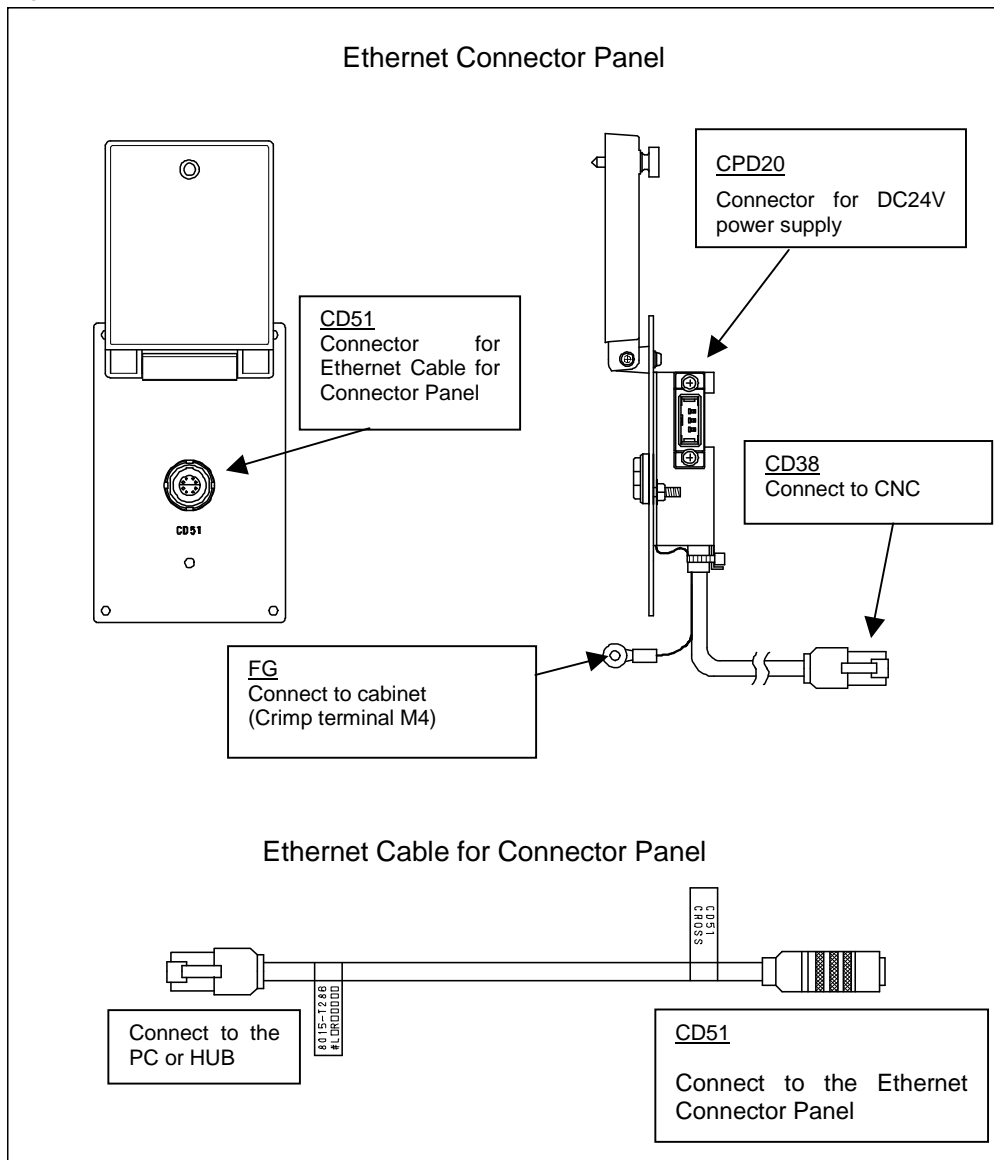

Connection of Ethernet Connector Panel

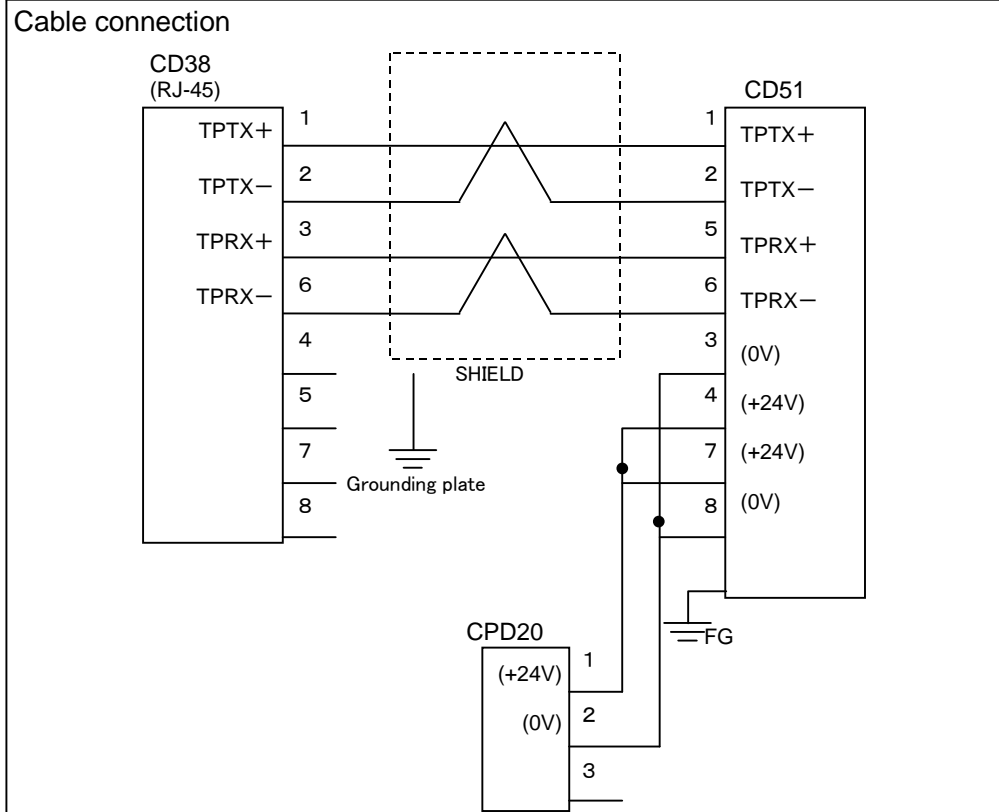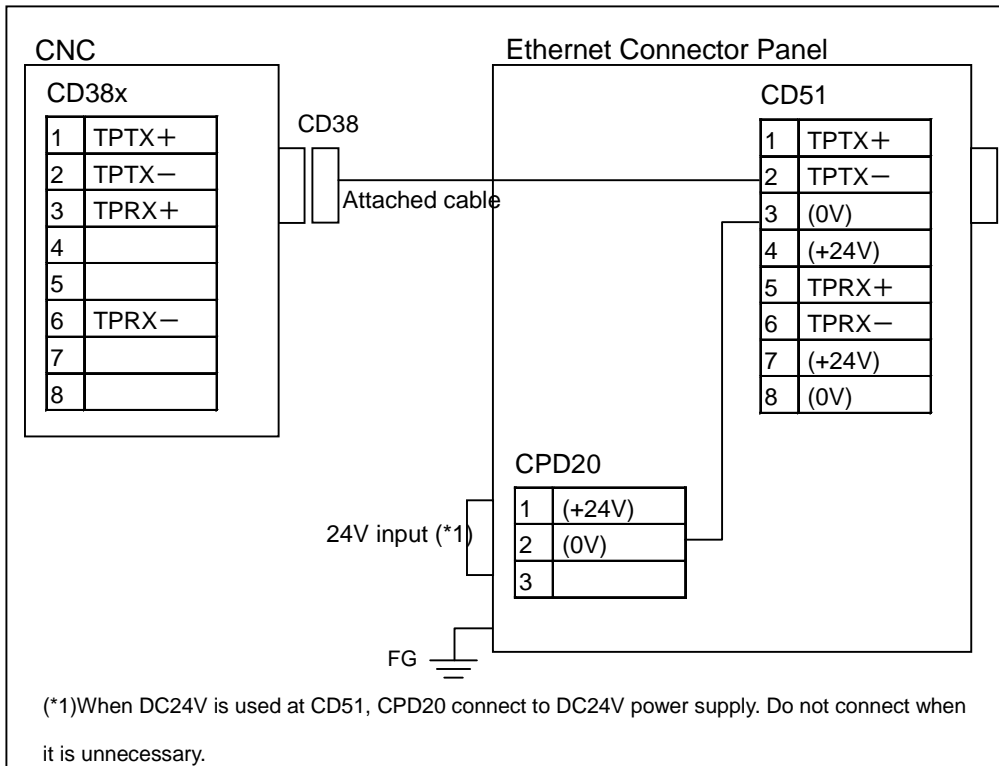

Connection of Ethernet Cable for Connector Panel

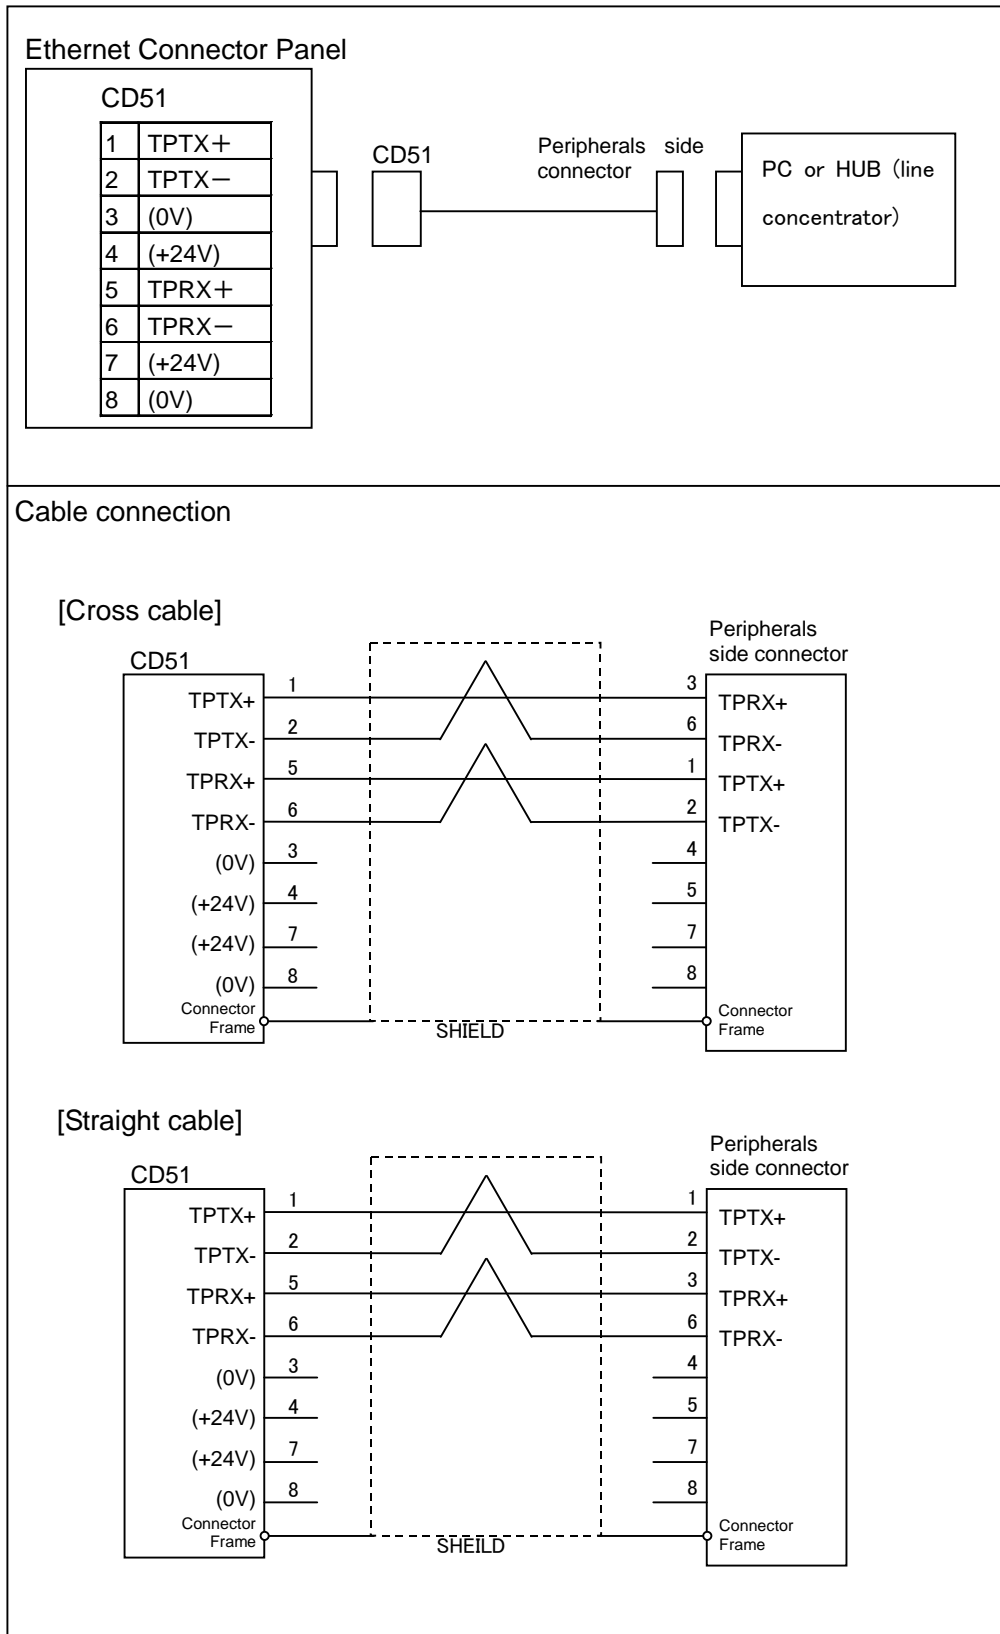

- Recommended cable side connector
 CD51 side: JB5DT08YN121 (Japan Aviation Electronics)
 Peripheral side: TMP21P-88P (Hirose Electric)
- Recommended cable conductor : A66L-0001-0453

- Maximum cable length: 40m (in case of recommended cable)
Do not make the cable longer than necessary.
- Recommended cable specification
 - [Cross cable]
 - A02B-0303-K820 (Cable length: 1.5m)
 - A02B-0303-K821 (Cable length: 5m)
 - [Straight cable]
 - A02B-0303-K822 (Cable length: 1.5m)
 - A02B-0303-K823 (Cable length: 5m)

NOTE


Technical information about connecting wires and the assembly of the connector is prepared. Refer to this information.

- Japan Aviation Electronics: JB5DT08YN121 Operator's Manual (No. JAHL-50007)
- Hirose Electric: TM21CP-88P(03) Wiring Procedure Specification (Engineering Specification No.ATAD-E2367)

5.5 USB PORT

The LCD-mounted type control unit have a USB port for a USB memory. Via the USB port, data can be input to the control unit and output from it.

Refer to the next paragraph for the USB port of basic unit G (15"LCD).

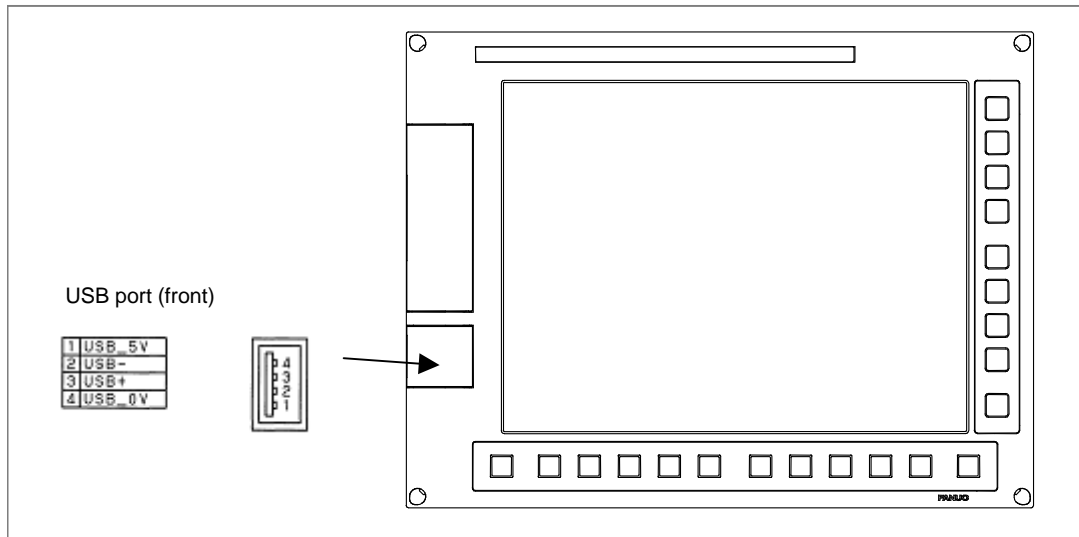

NOTE

- 1 This USB port is dedicated to a USB memory. Do not connect other USB devices to the port.
- 2 It is not guaranteed that every commercially available USB memory can operate normally. For example, a USB memory with a security function does not operate. Some commercially available USB memories may not be designed for the use in an FA environment.


⚠ CAUTION

- 1 While the control unit is accessing the USB memory, do not turn the power to the control unit off or remove the USB memory.
- 2 Close the cover of the USB port when no USB memory is inserted.
- 3 The maximum USB power supply (USB_5V) current is 500 mA in total.

Basic unit G (15"LCD)

Basic unit G (15" LCD) has two USB ports for a USB memory.

Via the USB port, data can be input to the control unit and output from it.

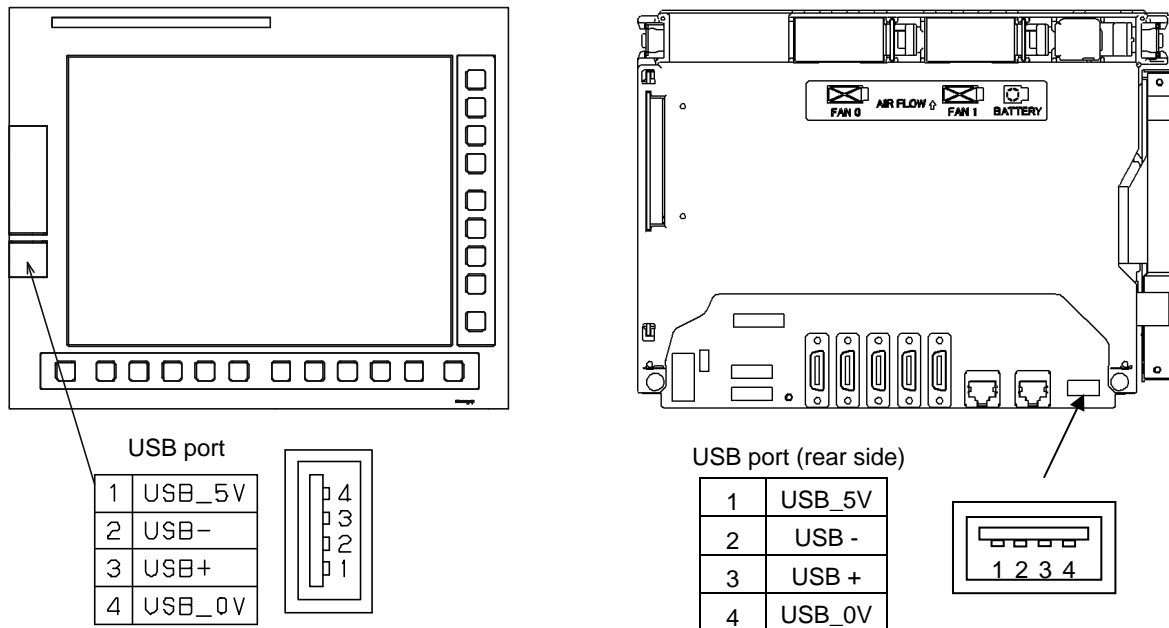**NOTE**


- 1 The connected USB cable must not become longer than 5m surely. When using USB device through the relay cable, confirm the operation enough in the machine maker.
- 2 These USB ports are dedicated to a USB memory. Do not connect other USB devices to the port.
- 3 It is not guaranteed that every commercially available USB memory can operate normally. For example, a USB memory with a security function does not operate. Some commercially available USB memories may not be designed for the use in an FA environment.

CAUTION

- 1 While the control unit is accessing the USB memory, do not turn the power to the control unit off or remove the USB memory.
- 2 Close the cover of the USB port when no USB memory is inserted in front USB port.
- 3 The maximum USB power supply (USB_5V) current on the front and rear sides is 500mA in total.

6 SERVO AND SPINDLE INTERFACES

6.1 OVERVIEW

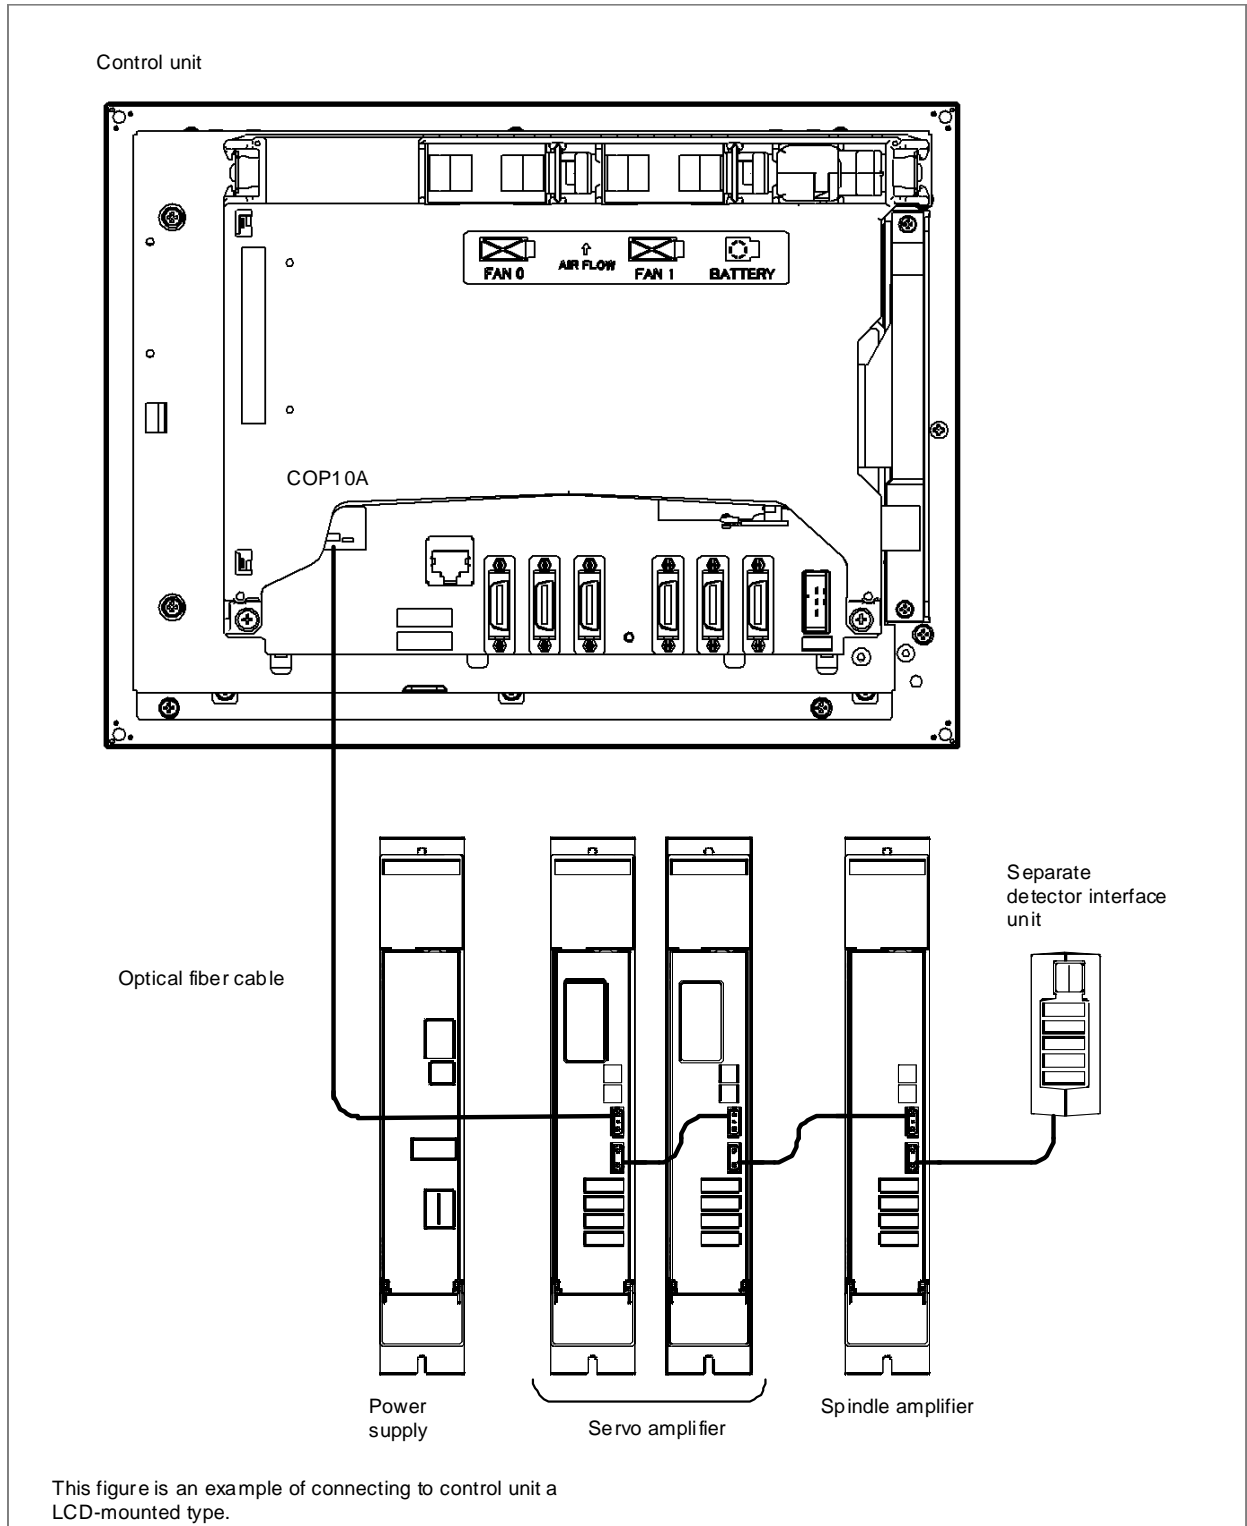


This chapter describes how to connect the control unit to the servo amplifiers, spindle amplifiers, and separate detector interface units.

The control unit is connected to servo amplifiers, spindle amplifiers, and separate detector interface units via serial buses using optical fiber cables (called FSSBs below). A FSSB lines can be connected to the control unit. For the FSSB lines, optical connectors are located on the main board.

Slave units to be connected to the control unit must support the 30i-B series. Slave units include servo amplifiers, spindle amplifiers, and separate detector interface units.

6.2 Interface to the Amplifiers

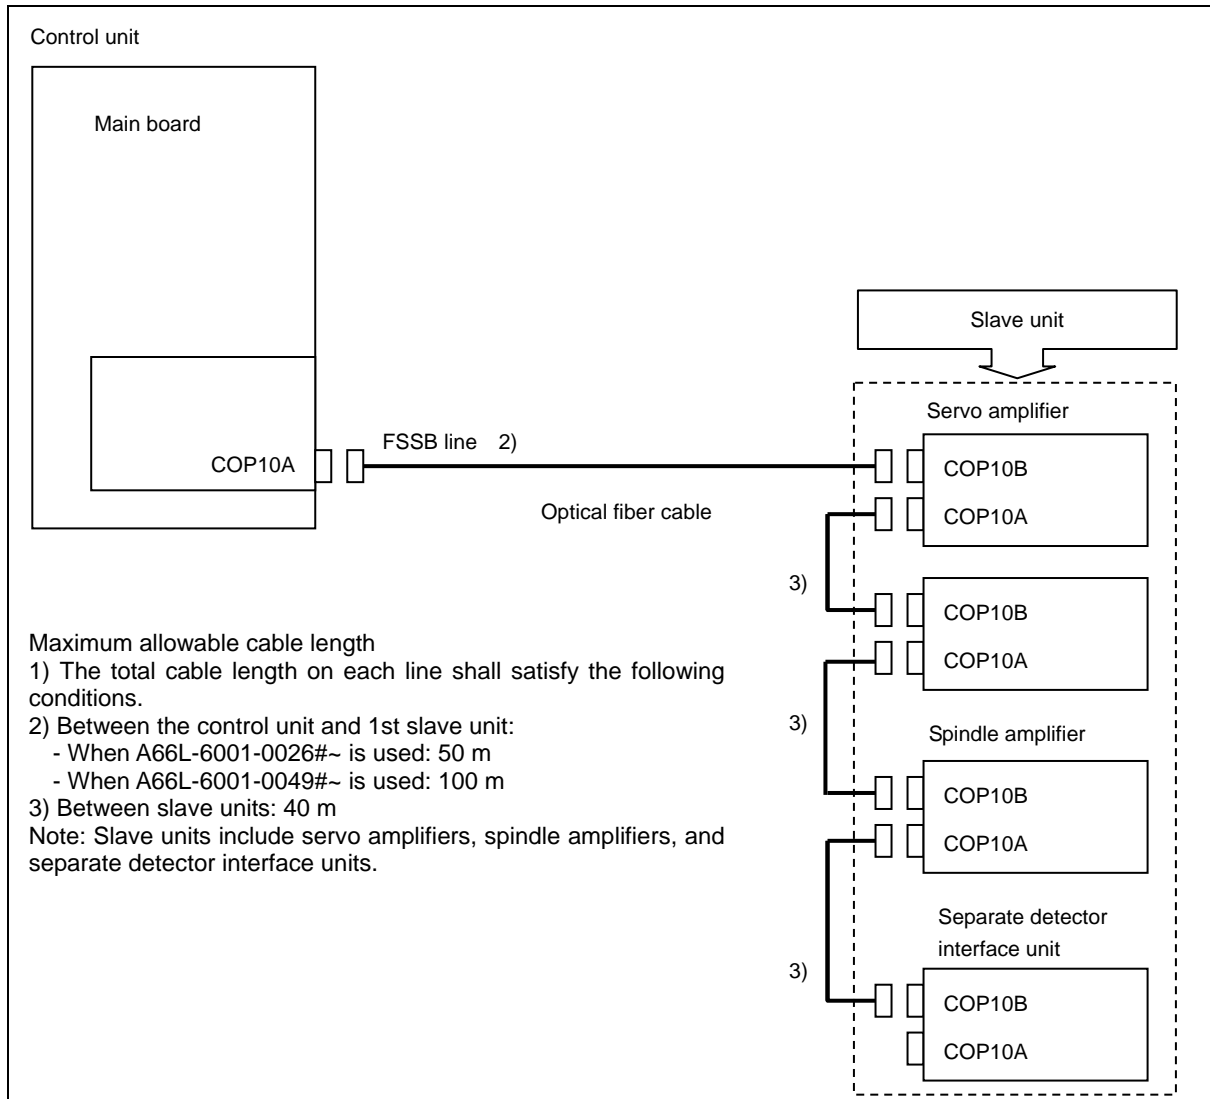

<Total cable length on each line>

Control mode	Maximum total cable length
HRV2	500m
HRV3	200m

<Optical fiber cable types>

Usage	Cable drawing number	Cable length
For internal connection	A02B-0236-K851 to -K856 and -K860 to -K862 (A66L-6001-0023#~)	Length of 10 m or less

Usage	Cable drawing number	Cable length
For external connection	A66L-6001-0026#~	Length of 50 m or less (40 m or less between slave units)
	A66L-6001-0049#~	Length of 100 m or less (40 m or less between slave units)

6.2.1 Number of Units That Can Be Connected

The maximum total number of servo and spindle axes is the table below.

			FS0i-TF	FS0i-MF
Without loader control	1path system	maximum total control axes (Note)	9 (Note)	9 (Note)
		maximum feed axes	7 (Note)	7 (Note)
		maximum spindle axes	3	2
	2path system	maximum total control axes (Note)	11 (Note)	11 (Note)
		maximum feed axes	9 (Note)	9 (Note)
		maximum spindle axes	4	4
With loader control	1path system	maximum total control axes with loader (Note)	15(HRV2) 13(HRV3)	14(HRV2) 12(HRV3)
		2path system	maximum total control axes with loader (Note)	16(HRV2) 14(HRV3)
		maximum total connection axes of servo motor with loader	12(HRV2) 10(HRV3)	12(HRV2) 10(HRV3)


NOTE

No count Cs axis and virtual axis for number of feed axes.

Maximum total control axes are number of axes with feed axes and spindle axes.

6.3 SEPARATE DETECTOR INTERFACE

6.3.1 Overview

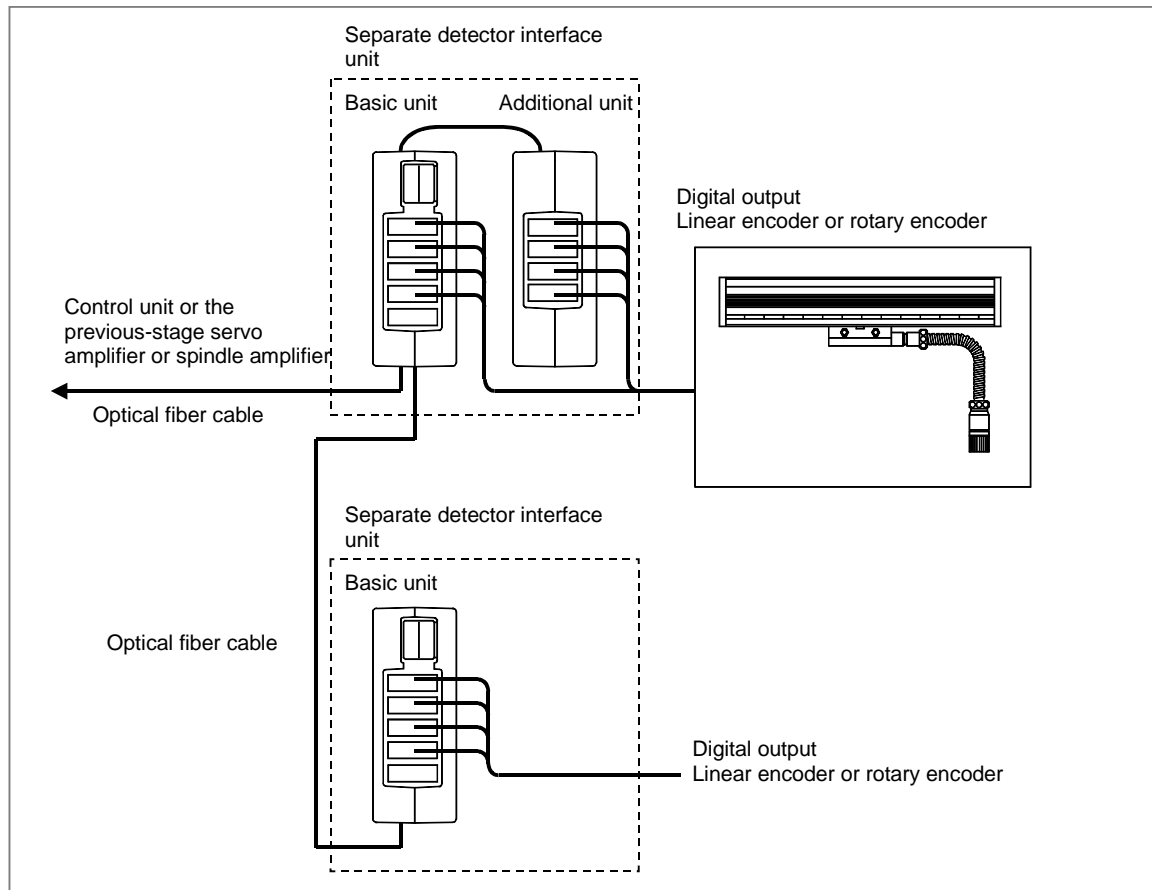

When a separate detector such as a separate rotary encoder or linear encoder is used, a separate detector interface unit is required. The separate detector interface unit is connected through an optical fiber cable as an unit on an FSSB line.

A separate detector interface unit consists of a separate detector I/F unit for basic four axes (called a basic unit below) and a separate detector I/F unit for additional four axes (called an additional unit below) (the additional unit may not be provided). The basic and additional units are connected through a flat cable.

Up to four separate detectors can be connected for each of the basic and additional units. A separate detector refers to a detector that outputs A and B rectangular waveforms (parallel) or a FANUC serial interface output detector (serial).

The maximum number of separate detector interface units that can be connected to an FSSB line is description below.

4 for HRV2, 2 for HRV3, and 1 for HRV4 regardless of the control unit model and software series type.

Therefore, for HRV2, up to 32 separate detectors can be connected for each line.


In case of 5 servo motors connected in HRV3, separate detector interface unit can to connect max three units. In case from 6 to 10 servo motors connected in HRV3, separate detector interface unit can to connect max six units. In case of HRV2, separate detector interface unit can to connect max 8 units.

In addition to the digital input type of parallel/serial basic unit as described above, the analog input type of analog basic unit is also available.

When a basic unit is solely described in this chapter, it refers to a basic unit of the digital input type.

NOTE
 1 All units of a separate detector interface unit must support the 30i-B series (Refer to Item 6.3.3).

6.3.2 Connection Diagram

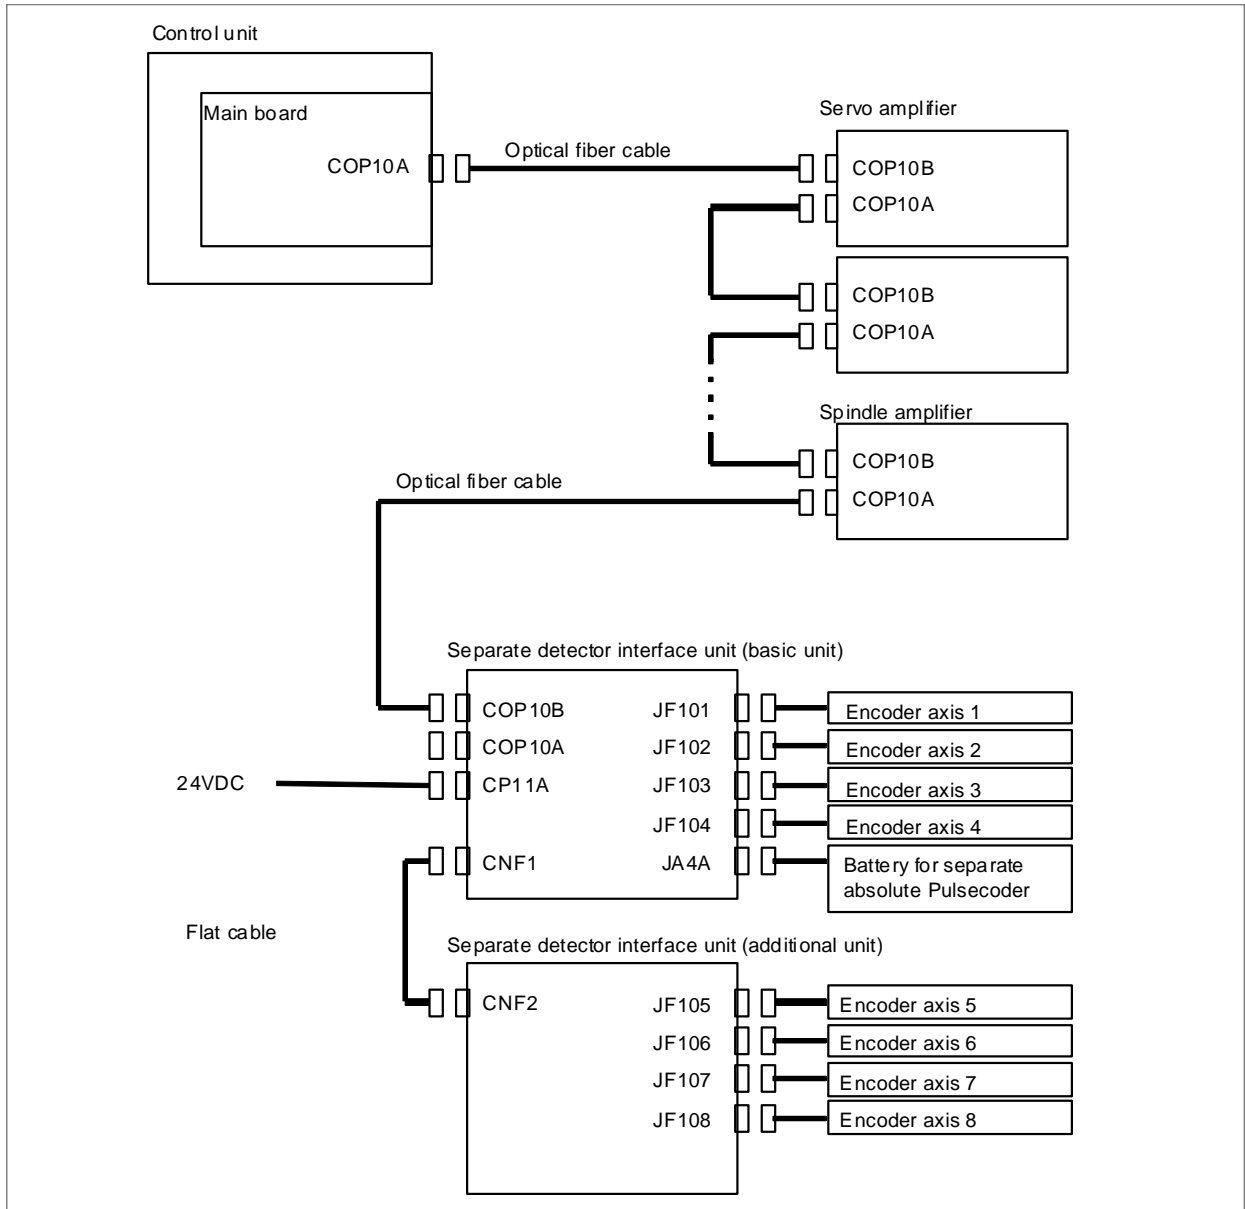


6.3.3 Separate Detector Interface Unit Specification

Item	Specification
Power supply capacity	Voltage 24 VDC \pm 10% Current: 0.9 A (basic unit only), 1.5 A (basic unit + additional unit) Includes the power to be supplied to the detectors.
Consumption power	9W (for basic four axes) 14W (for basic four axes + additional four axes)
Ordering information	Basic unit : A02B-0323-C205 (Separate detector I/F unit for basic four axes) Additional unit : A02B-0323-C204 (Separate detector I/F unit for additional four axes) Analog basic unit : A06B-6061-C202 (Analog input separate detector I/F unit for basic four axes)
Method of installation	An interface unit can be installed by using screws or a DIN rail.

6.3.4 Connection of Power Supply


Power to the separate detector interface unit should be supplied from an external 24 V DC power supply. An additional unit is powered by a basic unit.

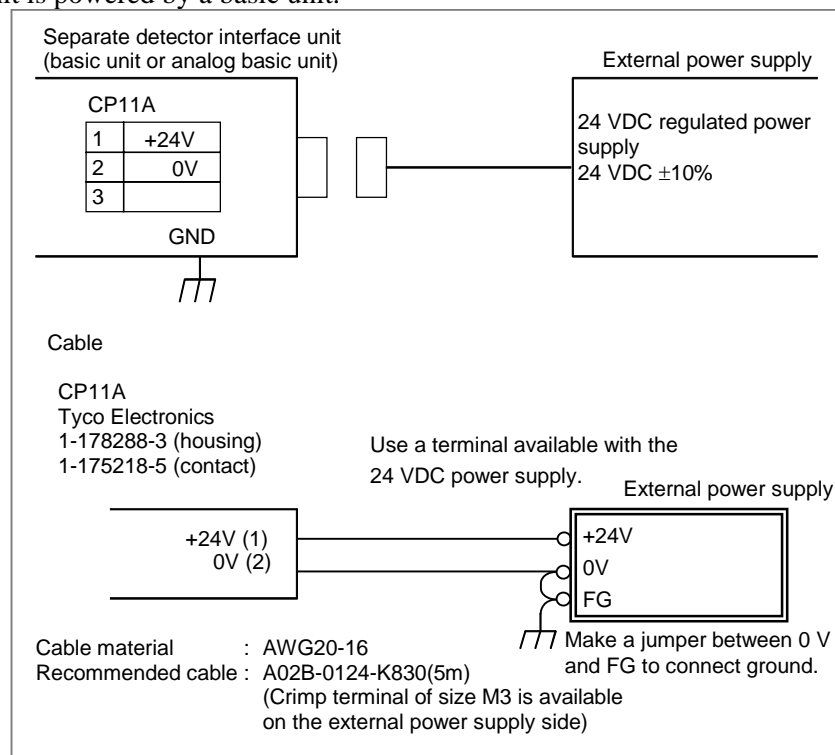

The 24 VDC input to CP11A can be output at CP11B for use in branching. A cable with the same specifications as for CP11A can be connected to connector CP11B. In this case, the power supplied to CP11A should be equal to the sum of the rating of the separate detector interface unit and that of the units after CP11B. A current of up to 1.5 A can be supplied via CP11A.

Be sure to ground the 0-V line of the power supply to the separate detector interface unit. In addition, keep any noise source (such as an AC power cable and contactor) away from the power line of the separate detector interface unit as far as possible to prevent noise from being picked up through the power line.

For all units of the separate detector interface unit, secure the ground line to the ground terminal (GND) for signals, which is located at the bottom of each unit, with an M3 screw as shown in the figure below. Connect the ground line to the ground plate of the cabinet.

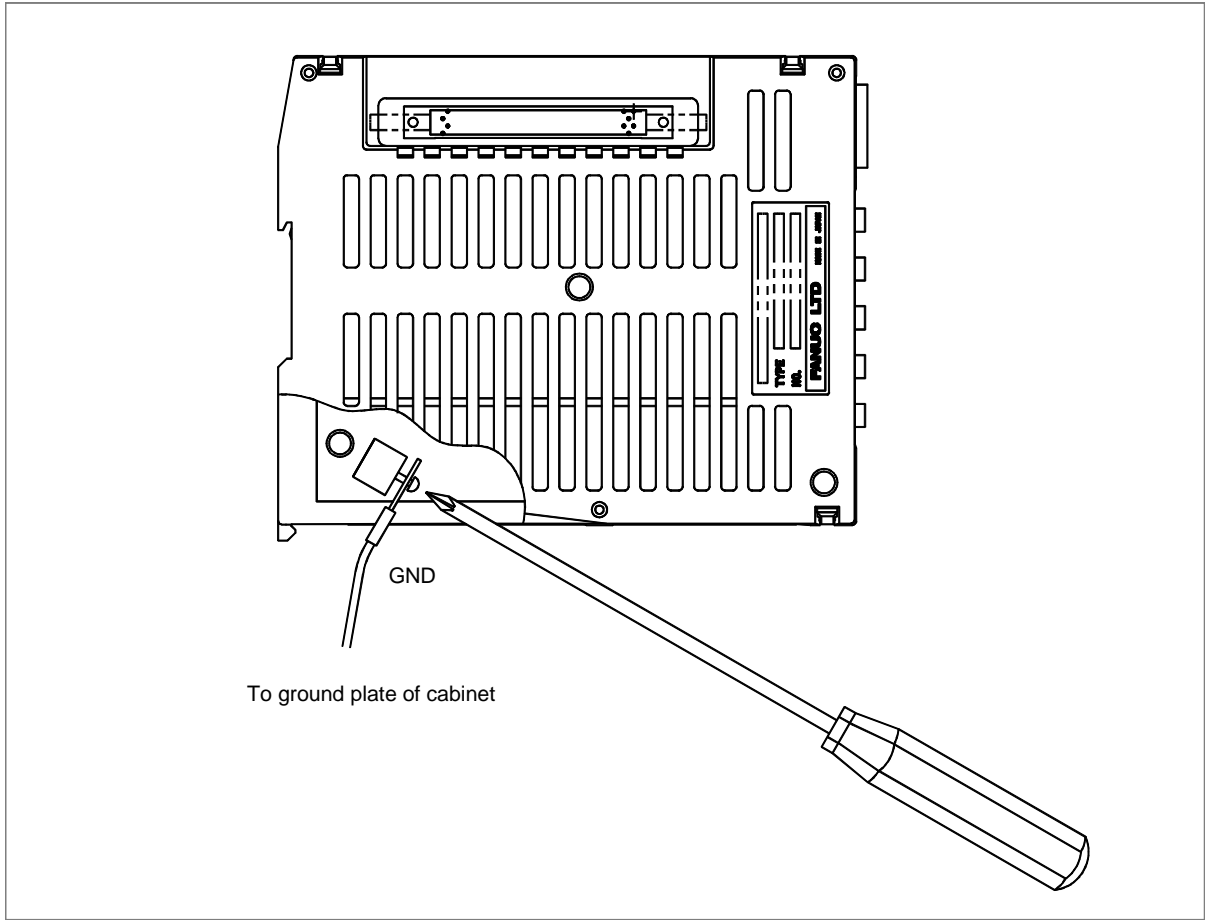


NOTE

The torque with which a screw is tightened is 0.5 N·m or less.

6.3.5 Separate Detector Interface (Digital Input)

6.3.5.1 FANUC serial interface

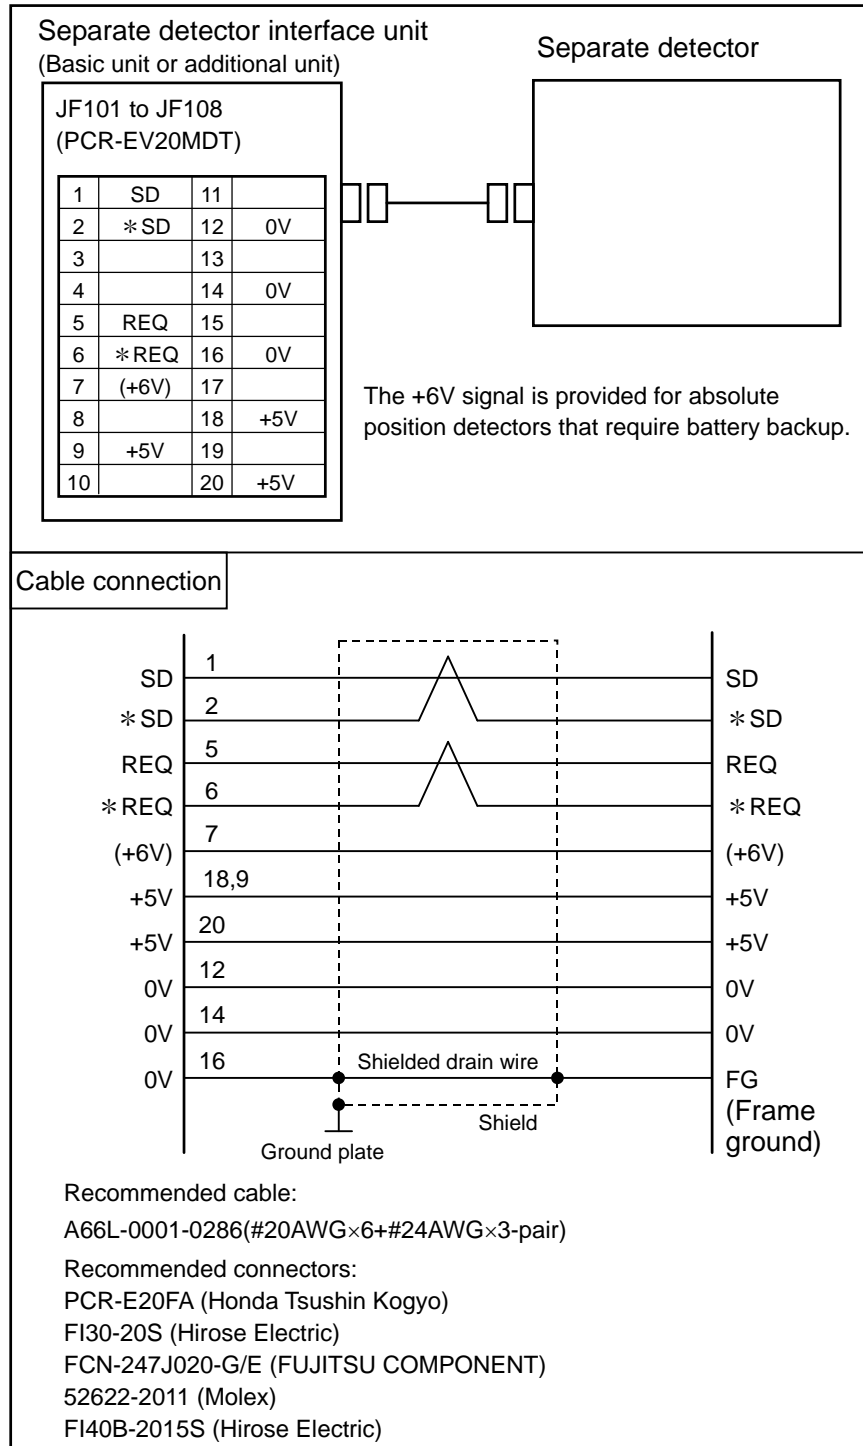


NOTE

- 1 The +5V signals above can be used to feed power to the detectors. The supply current per detector is 0.35 A maximum. The lower limit of the 5V signals is 4.95 V for the basic unit or 4.9 V for the additional unit. Determine the specifications and length of the cable to be used so that the specification of the detector is not exceeded.

NOTE

2 Ask the manufacturer of each detector whether it supports the FANUC serial interface.

6.3.5.2 Parallel interface

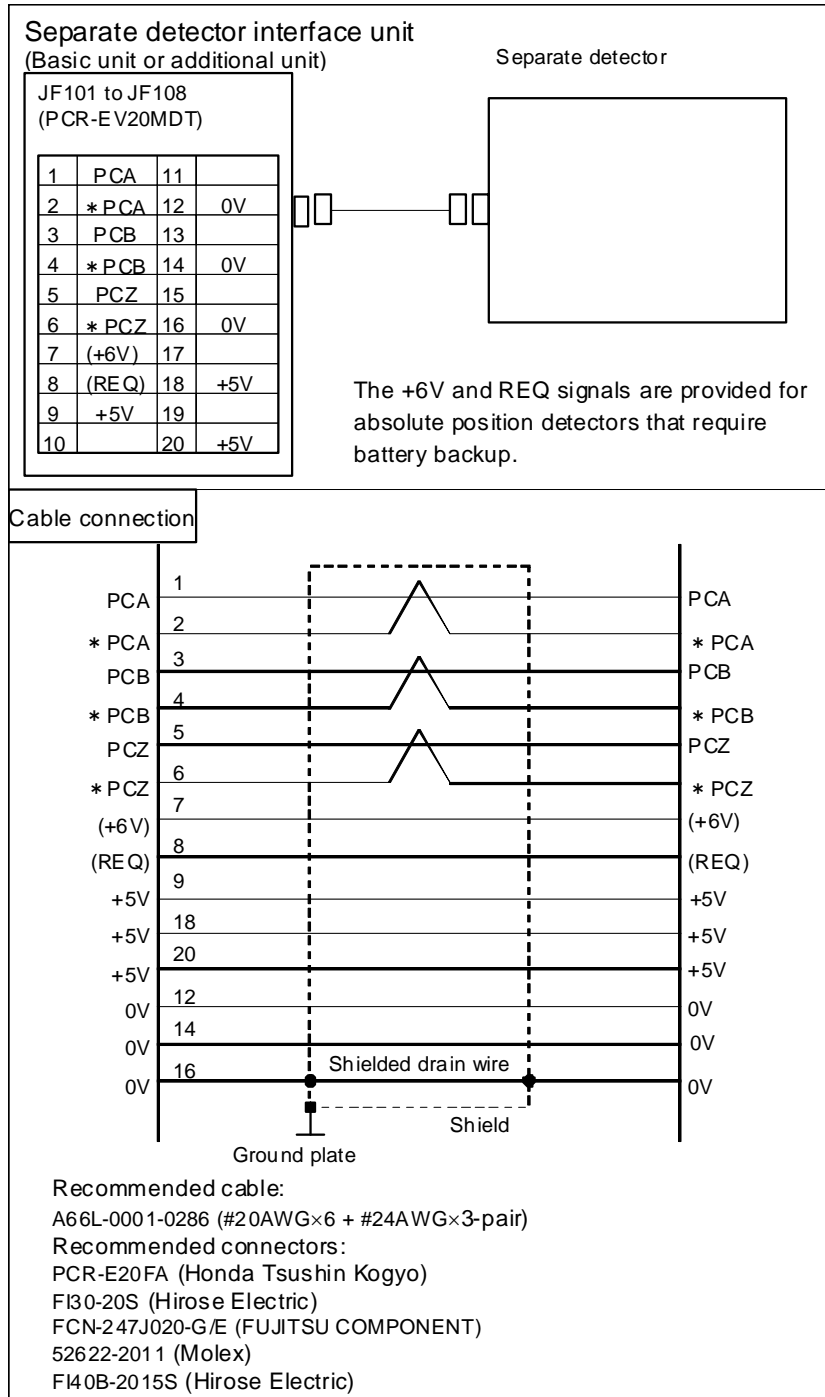

NOTE

The +5V signals above can be used to feed power to the detectors. The supply current per detector is 0.35 A maximum.
 The lower limit of the 5V signals is 4.95 V for the basic unit or 4.9 V for the additional unit. Determine the specifications and length of the cable to be used so that the specification of the detector is not exceeded.


6.3.5.3 Input Signal Requirements (Parallel interface)

The feedback signals from the separate detectors connected via the parallel interface are defined as follows:


(1) A and B phase signal input

This is a method to input position information by the mutual 90 degree phase slip of A and B phase signals.


Detection of the position is performed with the state in which the B phase is leading taken as a shift in the plus direction, and the state in which the A phase is leading as a shift in the minus direction.

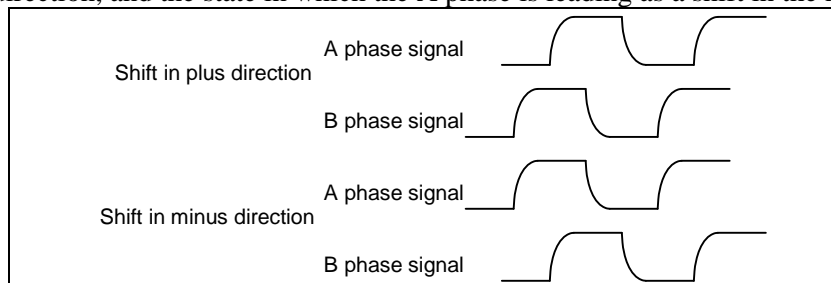

(2) Phase difference and minimum repeat frequency

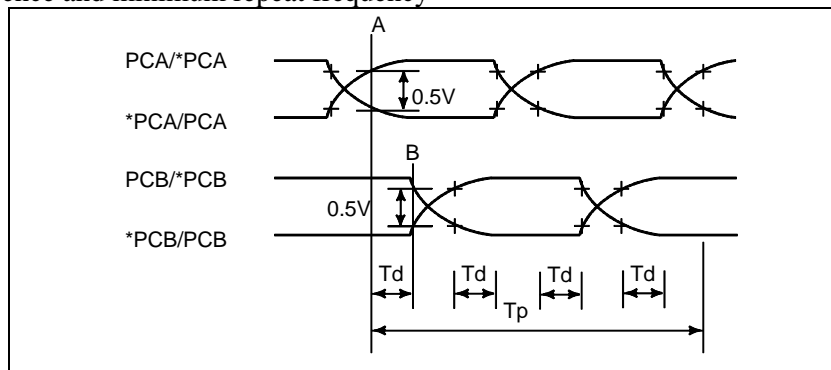

(3) Z phase signal input

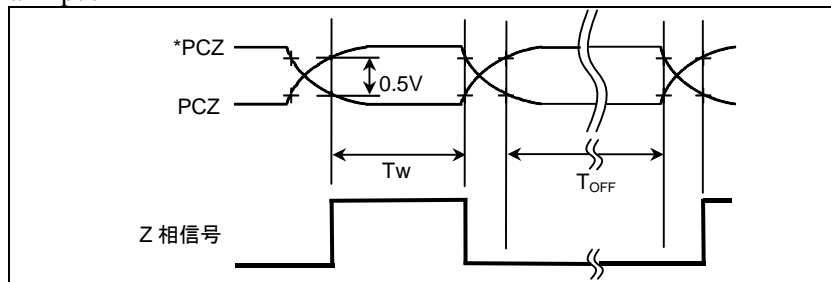

Time requirements

Requirements for the signals at the input pins of input connectors JF101 to JF108. The signals for these connectors are differential input signals with A and B phases. An important factor is time T_d from point A, when the potential difference between PCA and *PCA exceeds 0.5V, to point B, when the potential difference between PCB and *PCB becomes lower than 0.5V. The minimum value of T_d is 0.15 μ s. The period and pulse width of the signals must be long enough to satisfy the above requirements.

The Z phase signals are also differential signals. There are the following requirements for the time from when the potential difference between PCZ and *PCZ exceeds 0.5 V to when it becomes lower than 0.5 V:

$$T_w \geq 1/4 \text{ frequency of the A or B phase signals}$$


$$TOFF > 1.5 \text{ msec}$$

Input voltage requirements

The voltage of the A and B phase signals must meet the following requirements:

- High level: 2.4 V or more
- Low level: 0.8 V or less

Receiver circuit

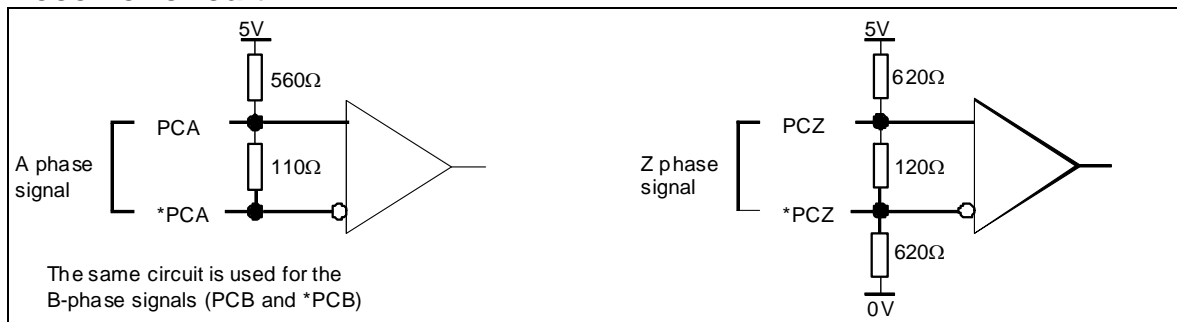

Rotation directions of a servo motor and separate Pulsecoder


If a separate Pulsecoder rotates in a direction opposite to the direction of servo motor rotation when the servo motor is rotating, the connection of the feedback cable from the separate Pulsecoder must be changed as follows:

- (1) Exchange signal PCA with signal PCB.
- (2) Exchange signal *PCA with signal *PCB.

The rotation direction can also be changed using a parameter.

For details, refer to the servo parameter manual.

6.3.6 Overview of the Analog Basic Unit

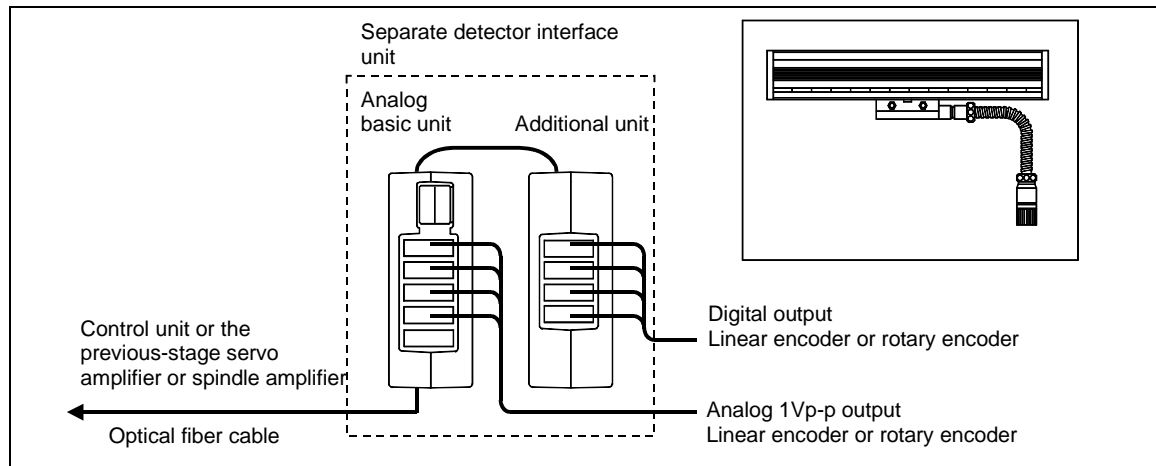

To use a separate detector with an analog output of 1 Vp-p requires an analog basic unit, which is a basic unit of the analog input type. The analog basic unit is connected as a unit on the FSSB line via an optical fiber cable.


Up to four separate detectors with an analog output of 1 Vp-p can be connected to an analog basic unit. Four separate detectors with digital output can be connected to the additional unit regardless of whether an analog or digital basic unit is used.

NOTE


- 1 All units of a separate detector interface unit must support the 30*i*-B series (Refer to Item 6.3.3).
- 2 No 1-Vp-p output detector can be connected to additional units.

6.3.7 Connection Diagrams of an Analog Basic Unit


(1) When encoders with an analog output of 1 Vp-p are connected to the 1st to 4th axes

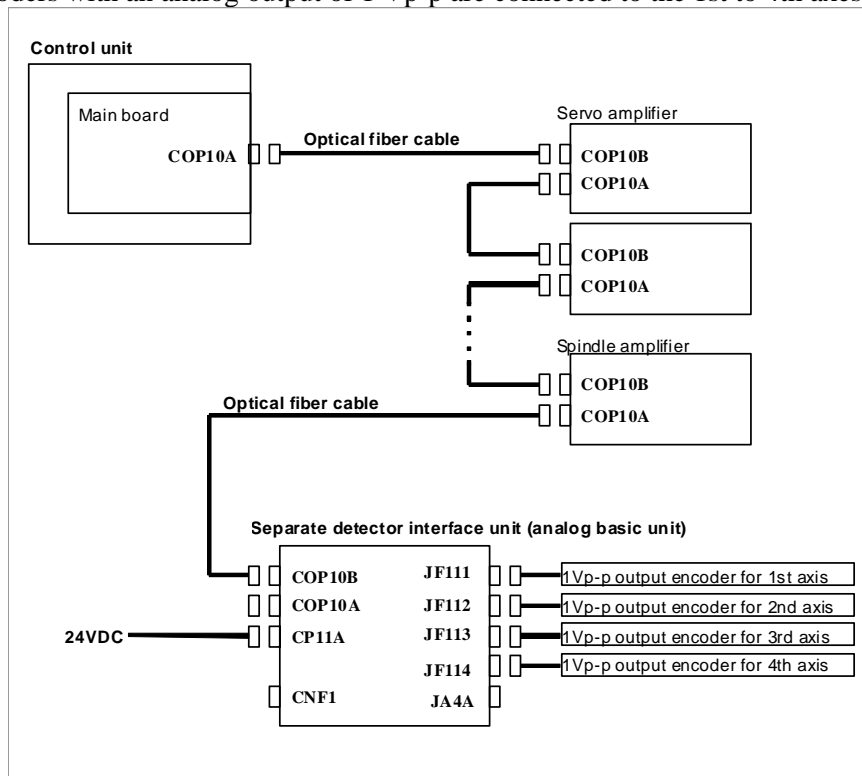


(2) When encoders with an analog output of 1 Vp-p are connected to the 5th to 8th axes

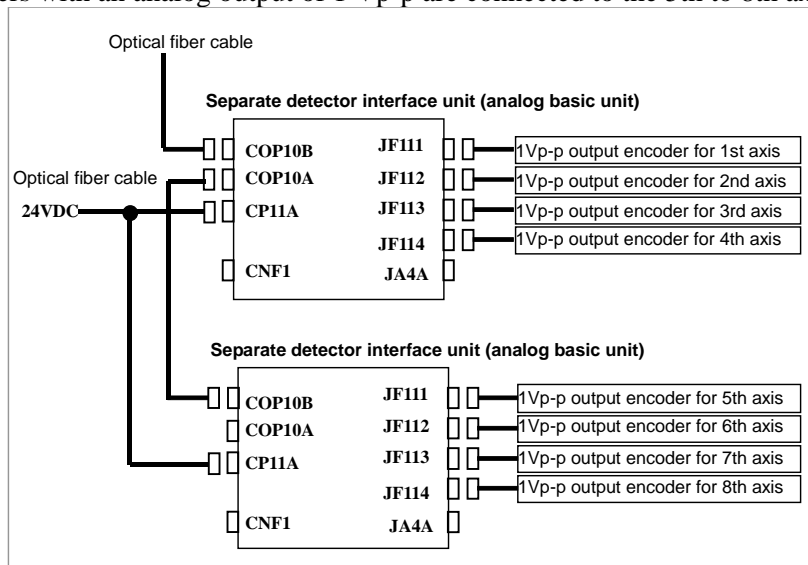

- (3) When encoders with an analog output of 1 Vp-p are connected to the 1st to 4th axes and digital output encoders are connected to the 1st to 4th axes

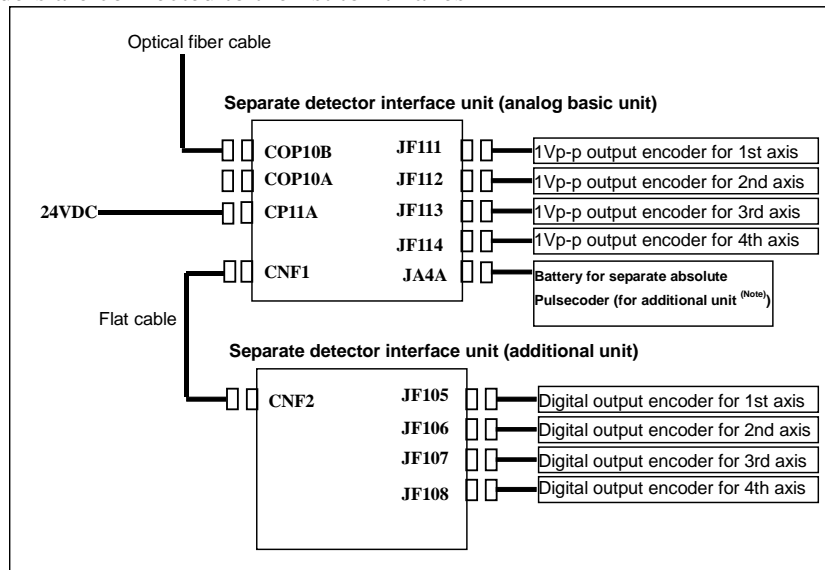

- (4) When encoders with an analog output of 1 Vp-p are connected to the 1st to 4th axes and digital output encoders are connected to the 5th to 8th axes

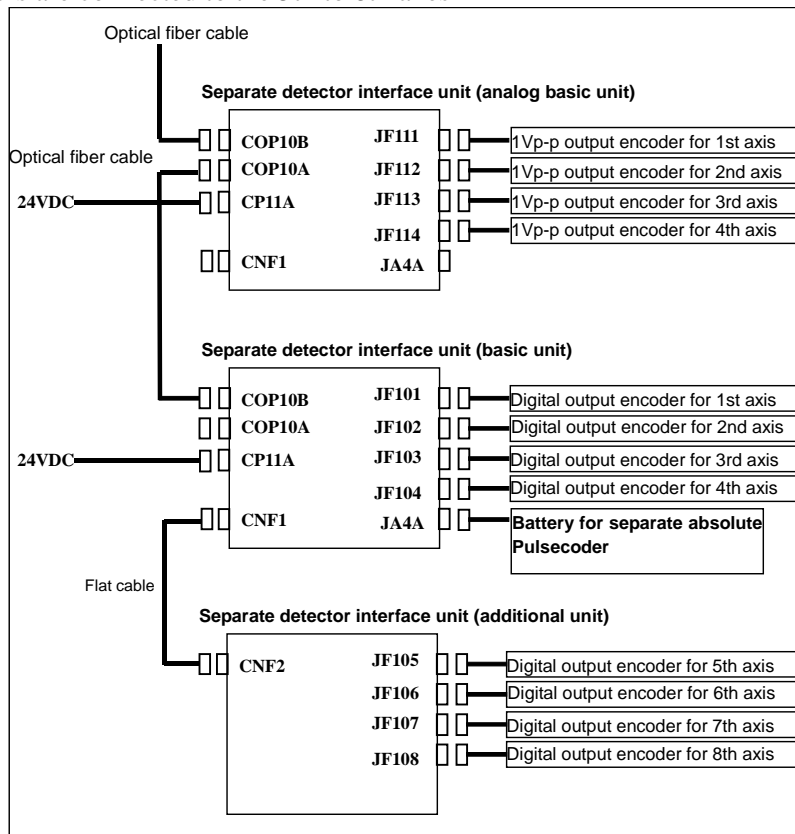


NOTE

When a separate absolute position detector that requires battery backup is connected to an additional unit, a battery case for the separate absolute pulse coder must be connected to JA4A on the analog basic unit. The battery voltage is supplied to the additional unit via the flat cable.

6.3.8 Separate Detector Interface (Analog Input)

6.3.8.1 Analog 1Vp-p Interface

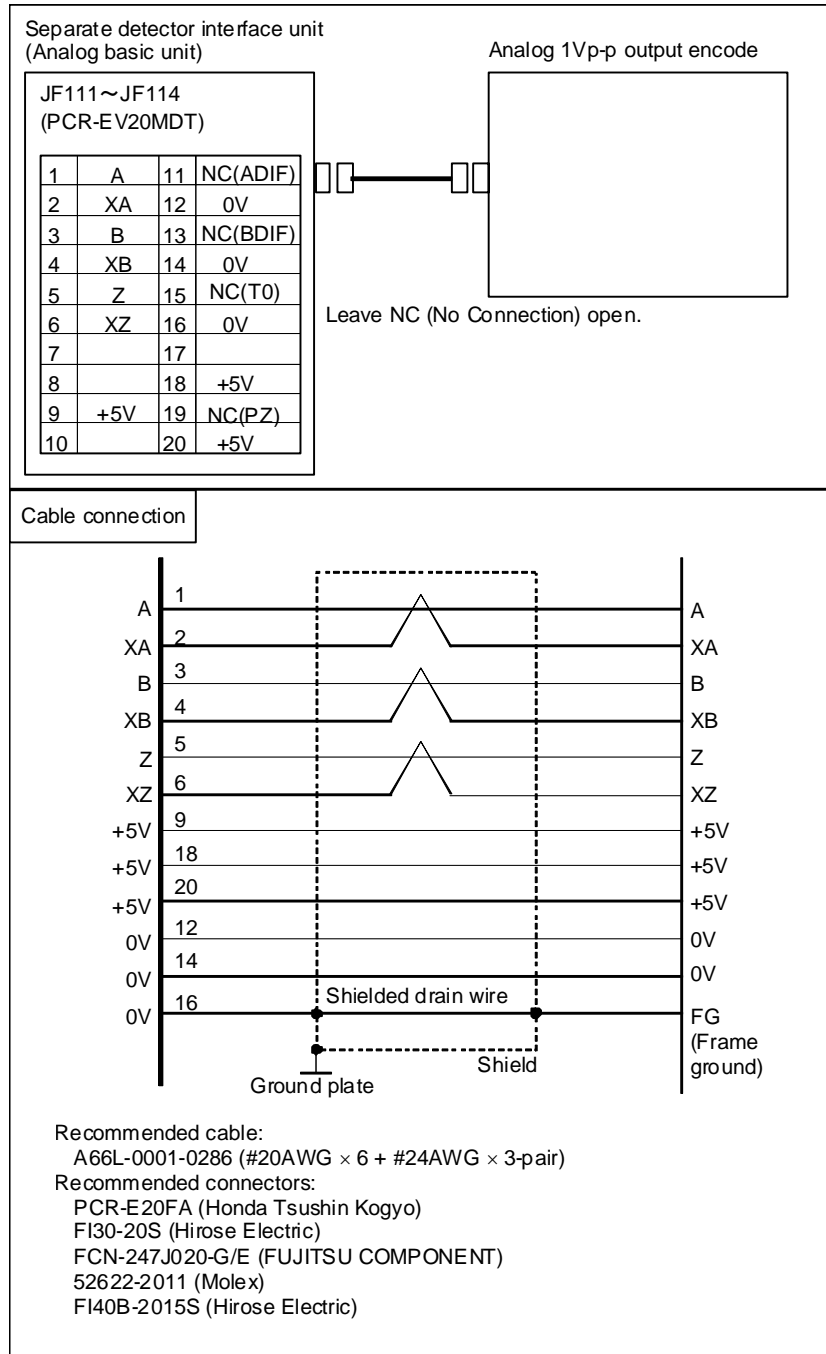


NOTE

The +5V signals above can be used to feed power to the detectors. The supply current per detector is 0.35 A maximum.


The lower limit of the 5V signals is 4.95 V for the basic unit or 4.9 V for the additional unit. Determine the specifications and length of the cable to be used so that the specification of the detector is not exceeded.

6.3.8.2 Input signal requirements (analog 1Vp-p interface)

A/B (Type I)

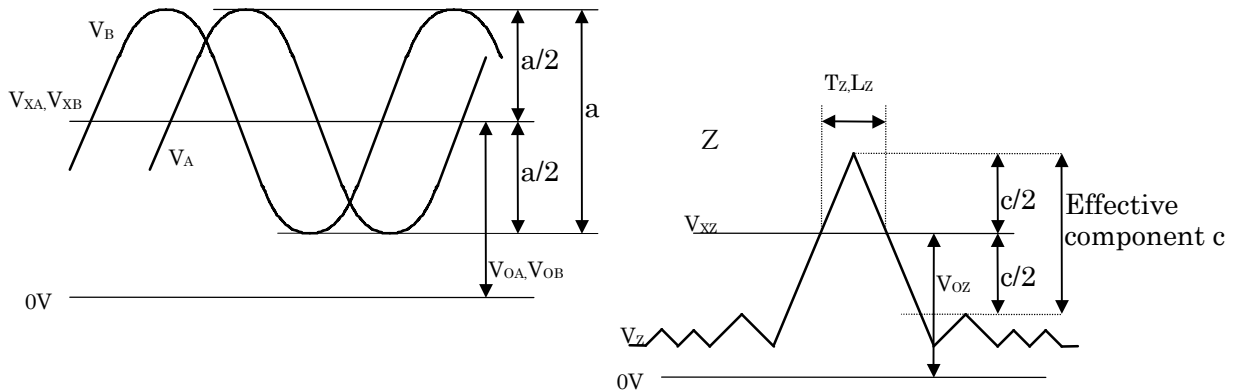

A/B (Type II)

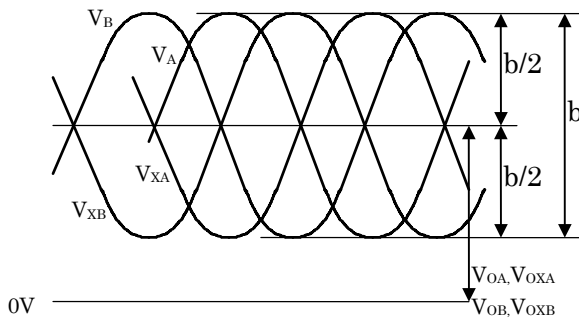

Item	Symbol	Min. spec.	Standard spec.	Max. spec.	Unit
Amplitude (phase A/B)	Type I a of phase A and phase B Type II Sum of b of phase A and b of phase XA Sum of b of phase B and b of phase XB	0.6	1.0	1.5	V _{P-P}
Amplitude (phase Z)	Sum of c of Z and c of XZ (analog signal)	0.2	0.4	-	V
Center value (DC level)	Type I V _{OA} , V _{XA} , V _{OB} , V _{XB} Type II V _{OA} , V _{OXA} , V _{OB} , V _{OB} V _{OZ} , V _{OZX}	2.0	2.5	3.0	V
Offset voltage (phase A/B)	Type I V _{OA} -V _{XA} , V _{OB} -V _{XB} Type II V _{OA} -V _{OXA} , V _{OB} -V _{OB}	-0.1	0	+0.1	V
Offset voltage (phase Z)	V _{OZ} -V _{OZX}	-0.05	0	+0.05	V
Pulse width of phase Z	T _Z	600	-	-	nSec
Length of phase Z	L _Z	1/4	-	-	Pitch of A (or B)
Input impedance		100	120	140	Ω
Input frequency		-	-	200	kHz

* The detection precision depends on the precision of signals from the encoder.

6.3.8.3 Method for checking the encoder signals


The check pin board can be used to observe ADIF (differential amplified signal from A and XA input signals), BDIF (differential amplified signal from B and XB input signals), T0 (reference voltage), and PZ (compared digital signal from Z and XZ input signals).

- (1) Ordering specifications A06B-6071-K290
Details


A20B-1005-0340 Printed circuit board with check pins
A660-2042-T031#L200R0 200-mm cable

- (2) Connection

Connect the check pin board to the cable of which axis you want to observe the signals.

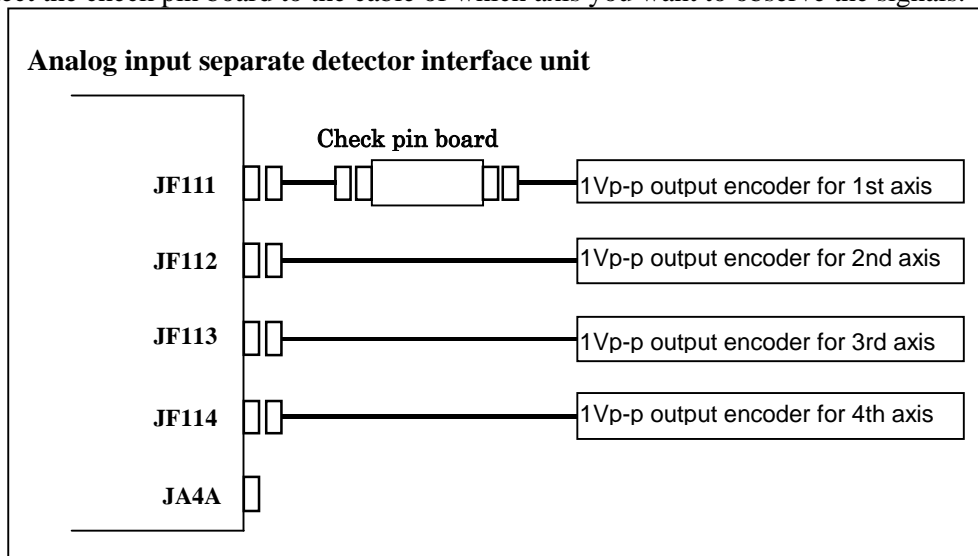


- (3) Signal output

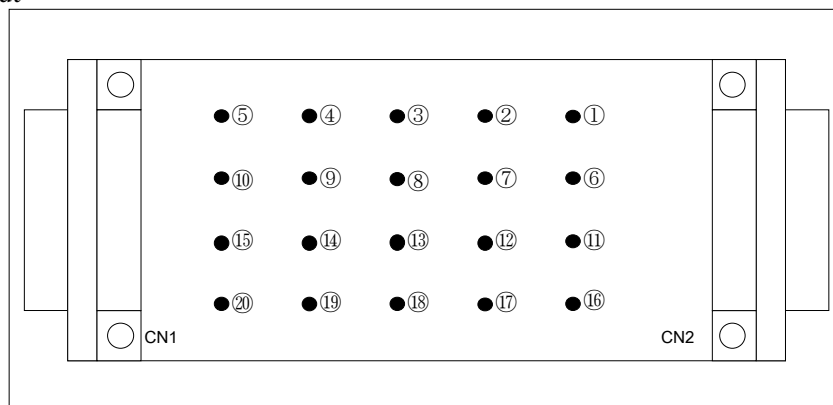



Pin number	Signal name	Remarks
①	ADIF	Differential amplified signal from A and XA input signals ADIF = 2 × (XA - A)
⑬	BDIF	Differential amplified signal from B and XB input signals BDIF = 2 × (XB - B)
⑮	T0	Reference voltage 2.5VDC (=1/2Vcc)
⑰	PZ	Compared digital signal from Z and XZ input signals
⑨、⑱、⑳	+5V	Power
⑫、⑭、⑯	0V	Signal ground

6.3.9 Connection of Battery for Absolute Position Detector

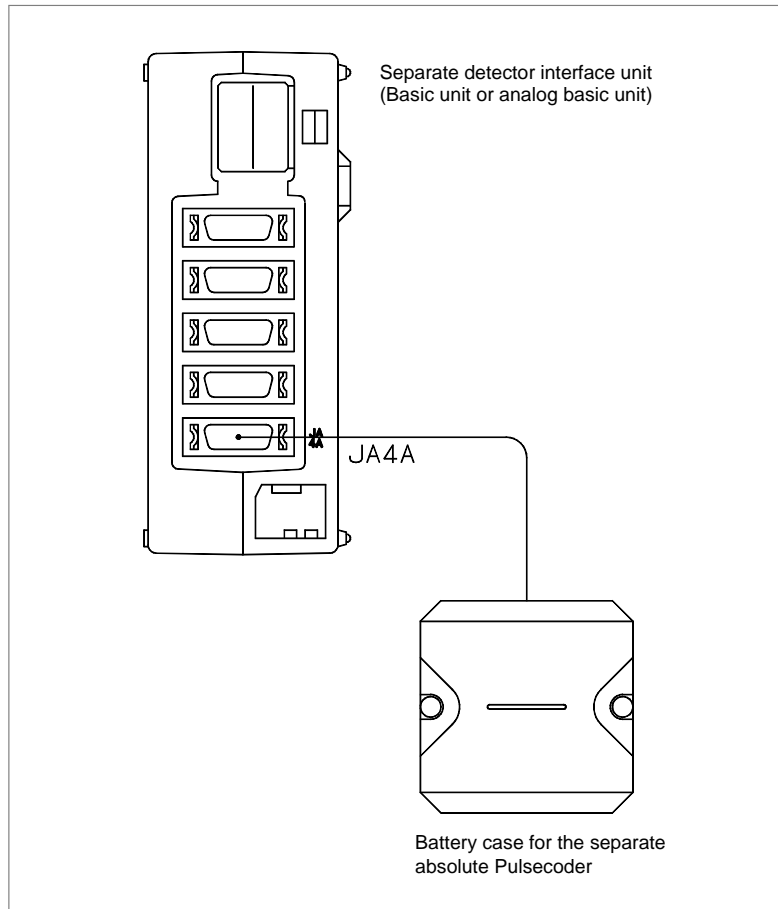

When a separate absolute position detector that requires battery backup is connected, a battery case for the separate absolute pulse coder must be connected to JA4A on the basic unit (or analog basic unit). The battery voltage is supplied to the additional unit via the flat cable.

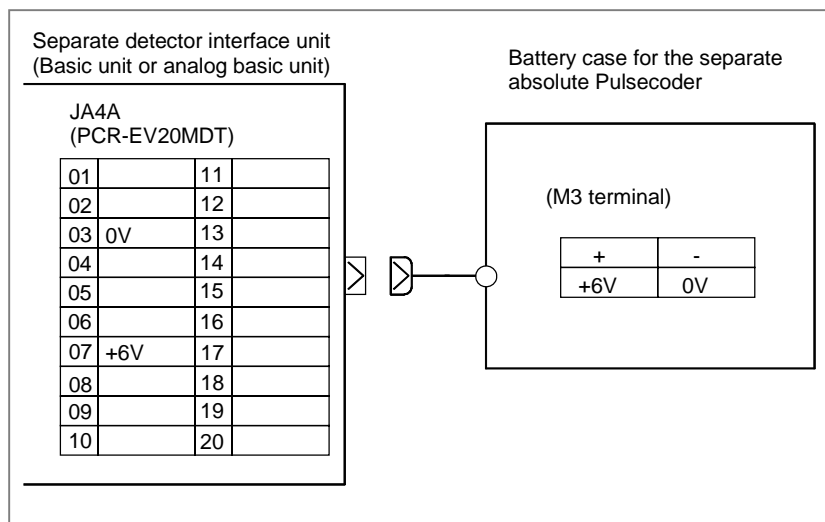

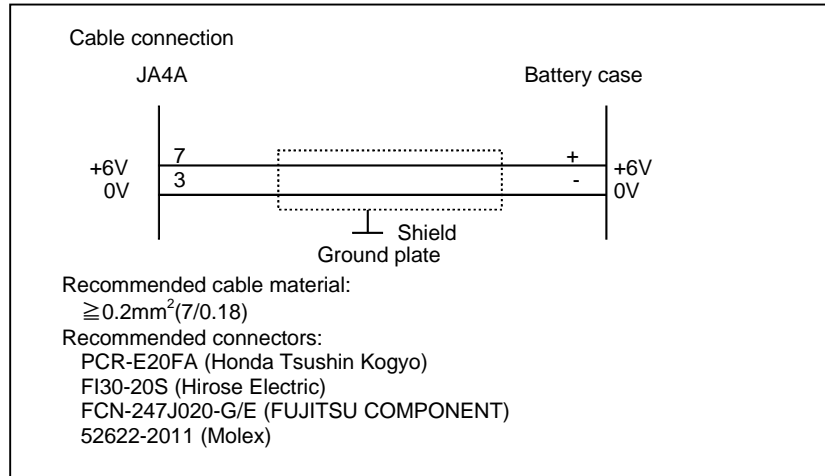


CAUTION

If the cable is connected to JA4A when the separate absolute pulse coder battery case contains the battery, the battery voltage is applied to the battery power supply pin (+6V) for each of the feedback connectors (JF105 to JF108). In this case, if the battery line and 0 V are short-circuited, the battery may heat up or the protection circuit within the separate detector interface unit may fail. First, make sure the battery case contains no battery or the cable is not connected to JA4A. Then, complete all cabling work and confirm cables are correctly connected. Finally, place the battery or connect the cable to JA4A.

6.3.10 Connection Between the Basic Unit and Additional Unit


A flat cable is used to connect the basic unit (or analog basic unit) and additional unit as shown below. The flat cable is 100 mm long.

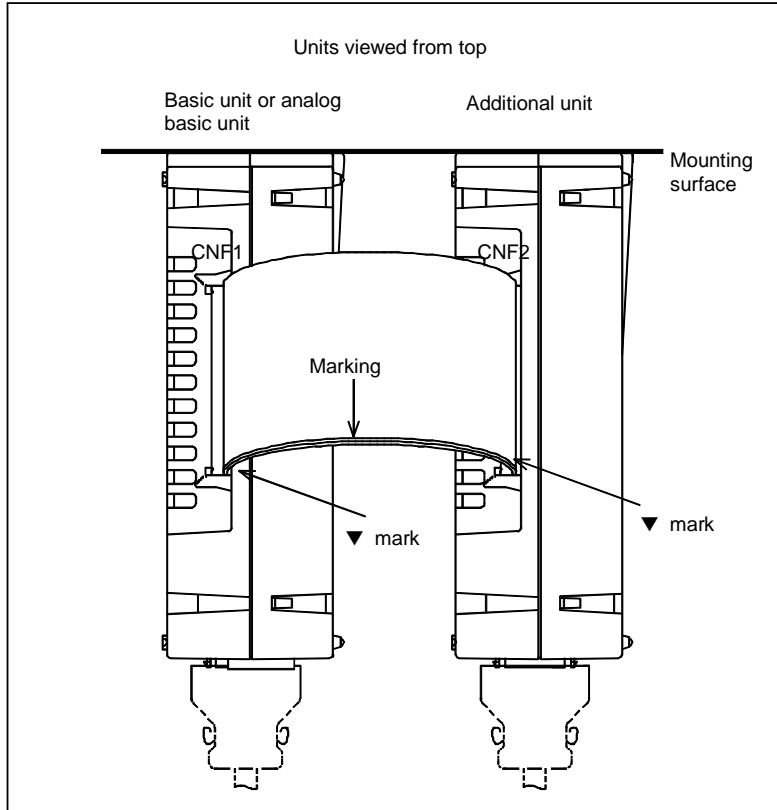


Place an order on a flat cable together with separate detector interface units.

6.3.11 Connector Locations


Connector locations on the basic unit

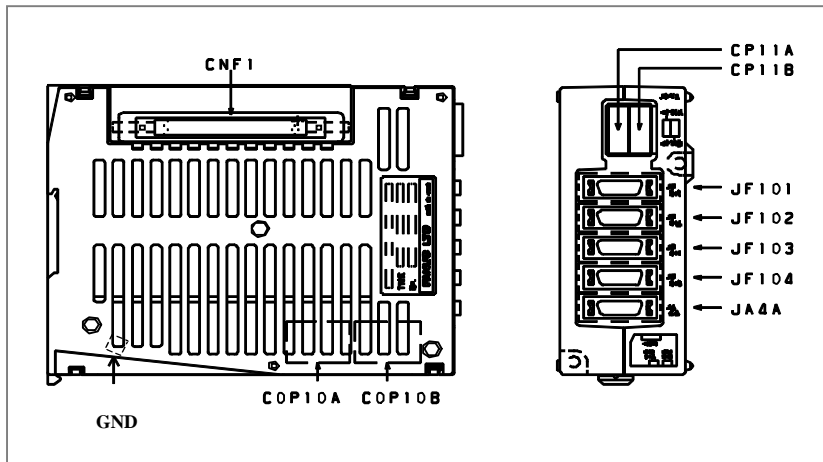

Connector locations on the additional unit

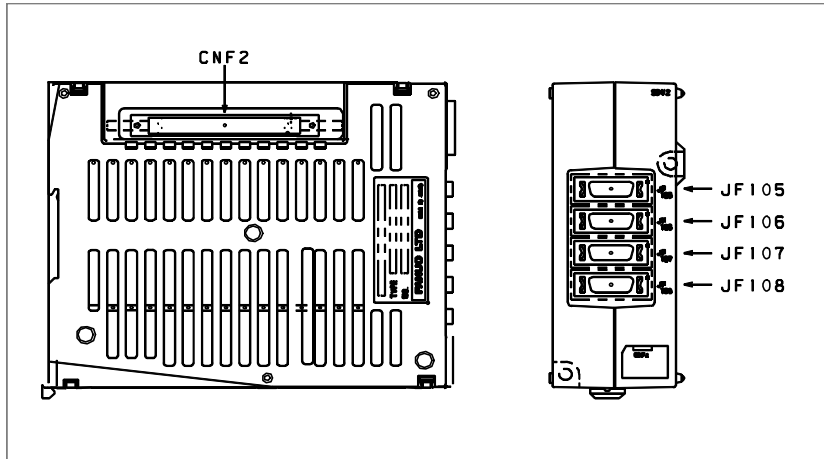

Connector locations on the analog basic unit

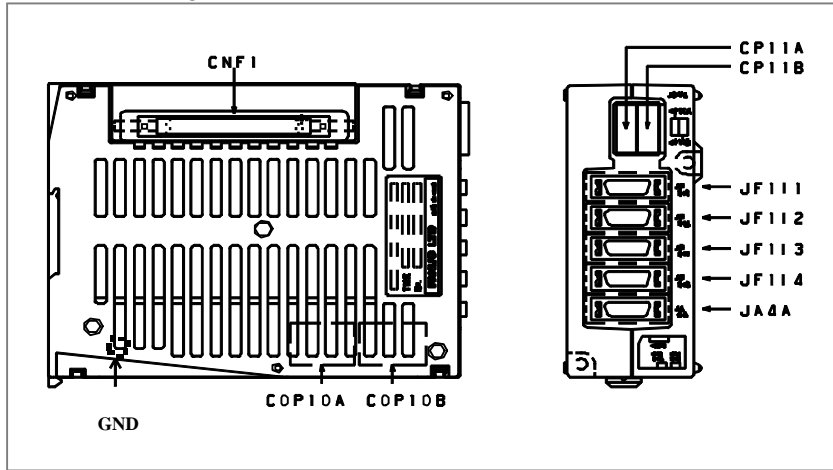


For the outside dimensions, see Appendix A, "OUTLINE DRAWINGS OF UNITS AND CONNECTORS".


6.3.12 Installation

1) Notes on installation

- (1) Use an interface unit in a completely enclosed cabinet.
- (2) Install an interface unit on a vertical surface, and provide a space of 100 mm above and below the unit. Below an interface unit, do not place equipment that generates a large amount of heat.
- (3) When using a basic unit (or analog basic unit) and additional unit, place the units as shown below so that the flat cable connecting the units does not block the vent holes on the basic unit (or analog basic unit). A flat cable not longer than 100 mm must be used.

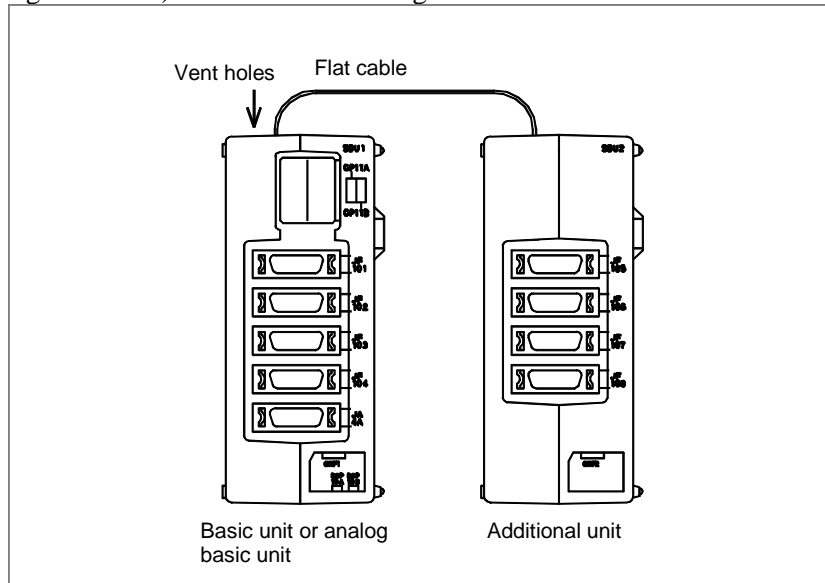

2) Installation using screws

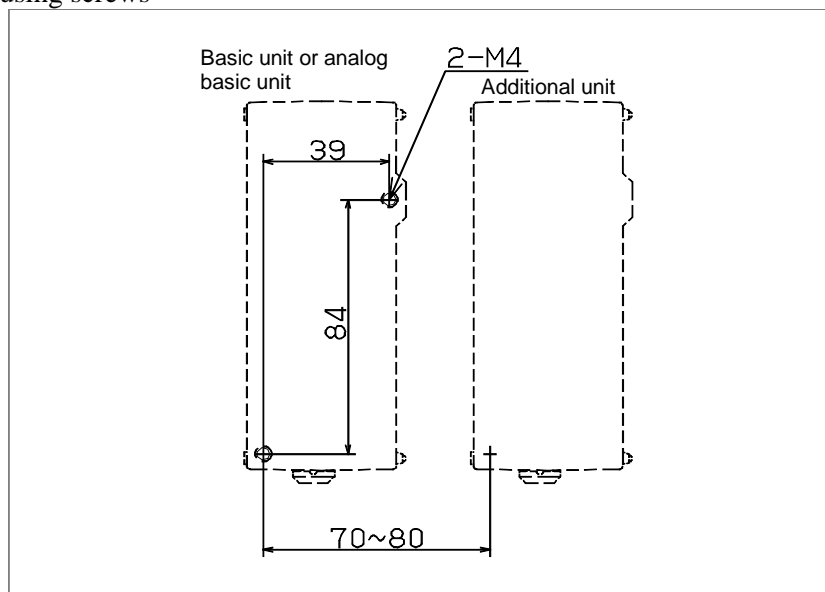

When using both a basic unit (or analog basic unit) and additional unit, install the units as shown above, with the mounting holes horizontally separated by 70 to 80 mm.


6.3.13 Notes on Installing a Separate Detector Interface Unit

NOTE


Since a screwdriver must be inserted obliquely to install or remove this unit and heat is radiated from the sides of the unit, sufficient access clearances are required on both sides of the unit.

As a guideline, if the front of an adjacent unit appears flush with the unit or slightly set back, allow a clearance of about 20 mm between the unit and the adjacent unit. If the front of an adjacent unit protrudes beyond the front of the unit, allow a clearance of about 70 mm between the unit and the adjacent unit.

Also, when installing the unit near a side of the cabinet, allow a clearance of about 70 mm between the unit and the side of the cabinet.

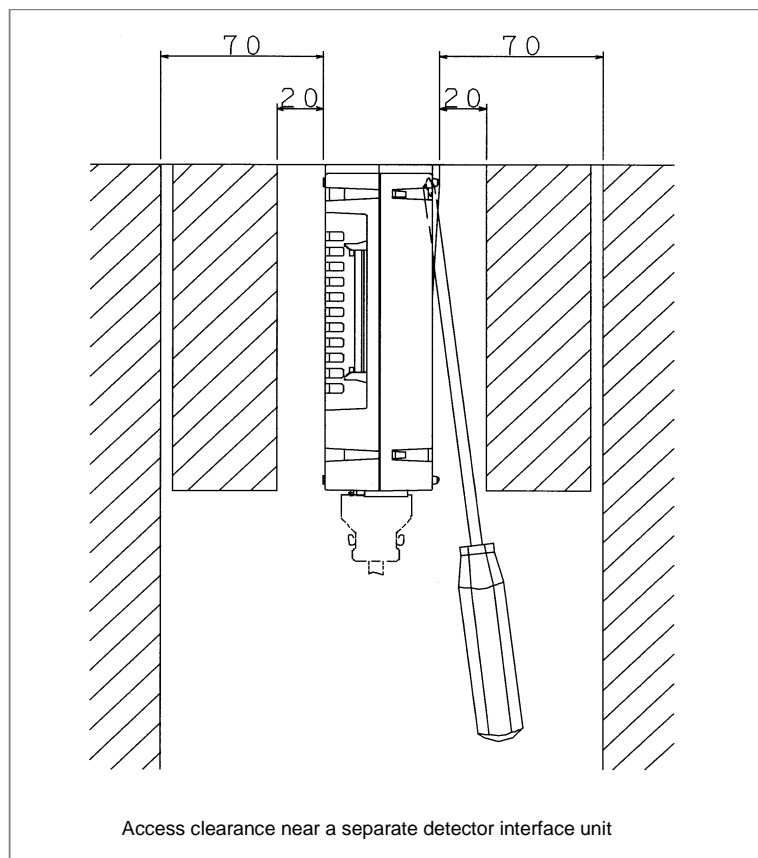

Installing the unit on the DIN rail

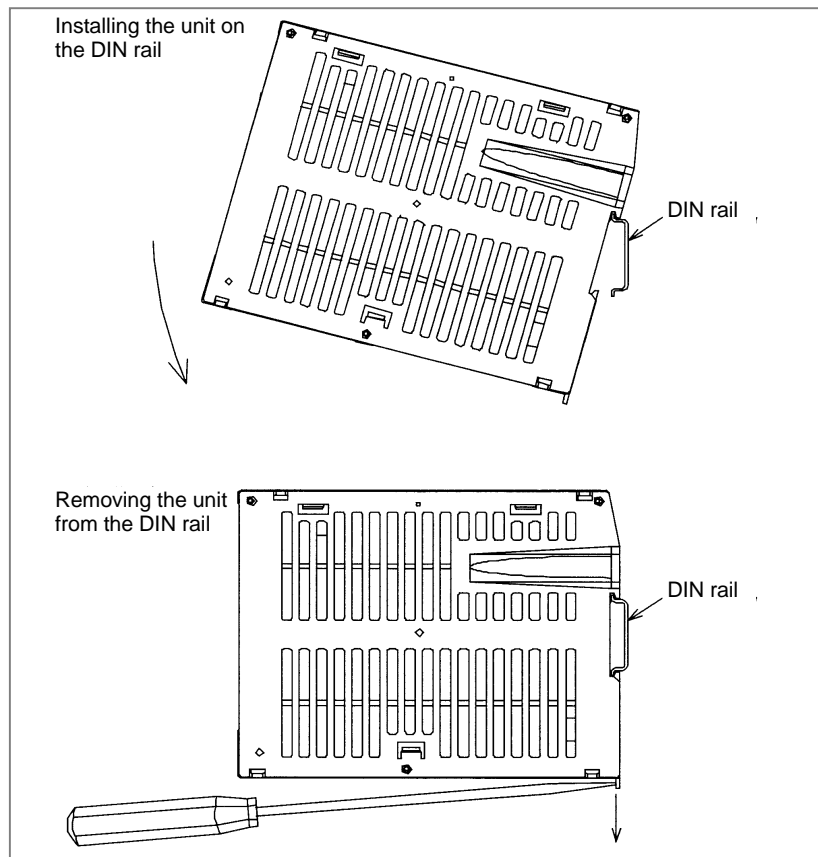


Installing the unit:

1. Hook the unit on the top of the DIN rail.
2. Push the unit in until it clicks.

Removing the unit:

1. Push down the lock by using a screwdriver.
2. Remove the unit by pulling the lower end of the unit towards you.

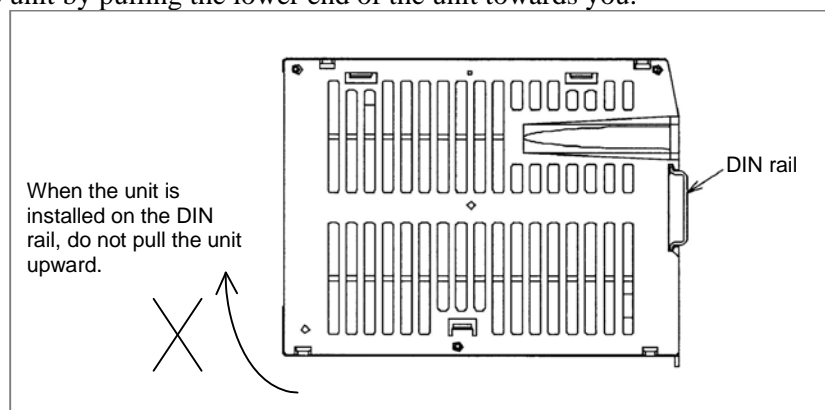

⚠ CAUTION

Be careful not to damage the lock by applying excessive force to the installed unit. When installing and removing the unit, hold the upper and lower ends of the unit so that stress is not applied to the side (surface with the slits) of the unit. When the unit is installed on the DIN rail, do not pull the unit upward, or the case may be damaged.

7 CONNECTION TO FANUC I/O Link *i*

WARNING

An I/O unit may not operate normally due to a control unit, I/O unit, or input power failure, or communication error. To prevent accidents even in this case, design the machine to operate safely by making a safety circuit outside the I/O unit.

All DO signals of an I/O unit are designed to be turned off if a system alarm occurs in the control unit which controls the I/O unit, or if the power to the control unit or I/O unit is turned off. However, it cannot be guaranteed that DO signals of the I/O unit will certainly be turned off. Therefore, manage the signals related to safety by making a safety circuit outside of the I/O unit. The dual check safety function can be used to detect a single failure in the safety-related section. For details of the dual check safety function, refer to the FANUC Series 30*i*/31*i*/32*i*-MODEL B Dual Check Safety Connection Manual (B-64483EN-2).

7.1 OVERVIEW

The I/O Link *i* is a serial interface which connects the control unit, I/O Unit-MODEL A, Power Mate, and other units and transfers I/O signals (bit data) at high speed between units. In I/O Link *i* control, this is the master station and its slave stations. The master is the control unit, and the slaves are other I/O units.

The status of input signals from the slaves is sent to the master at specified intervals. Output signals from the master are also sent to the slaves at specified intervals.

With the I/O Link *i*, the communication transfer rate is increased. More signals and slaves (groups) can be connected.

Specification of the I/O Link *i*

Item	I/O Link <i>i</i>	
Transfer cycle	2 ms	(normal mode)
	0.5 ms	(high-speed mode)
Maximum number of I/O signals (per channel)	2048/2048	(normal mode)
	512/512	(high-speed mode)
Maximum number of I/O signals (per group)	512/512	
Maximum number of groups (per channel)	24 groups	(normal mode)
	5 groups	(high-speed mode)
Number of channels required for dual check safety	1 channel	

- * The normal and high-speed modes can be used simultaneously. For the setting of the high-speed mode, refer to the FANUC Series 30*i*/31*i*/32*i*-MODEL B PMC Programming Manual (B-64513EN).
- * The transfer cycle means the cycle of DI/DO transfer between the master and slaves. For the actual delay time, the slave driver and receiver delay times and ladder scan period must be considered.
- * When dual check safety (safety I/O mode) is used, the maximum number of I/O signals that can be used is limited to 28 bytes per group. For details, refer to the FANUC Series 30*i*/31*i*/32*i*-MODEL B PMC Programming Manual (B-64513EN).
- * The high-speed mode is applied to I/O module for connector panel, I/O module for power magnetics cabinet and Terminal type I/O module.

It is a total of two channels of I/O Link *i* interfaces.

Number of channels available for the I/O Link *i*

Item	I/O Link <i>i</i>
Number of available channels	Up to 2

7.2 CONNECTION

Interface connector for the I/O Link *i* JD51A (for two channels) is located on the main board.

In I/O control, there are the master station and its slave stations. The master is the control unit, and the slaves are other I/O units. The slaves are divided into groups. Up to 24 slave groups can be connected to one channel with the I/O Link *i*.

The I/O Link *i* is connected in different ways depending on the types of units actually used and the number of I/O signals. Therefore, the assignment and addresses of the I/O signals have been made programmable with the PMC program. The maximum number of I/O signals available for each channel is 2048/2048 for the I/O Link *i*.

Up to 2048/2048 signals in total can be used for the entire system.

NOTE

1 The total number of I/O signals that can be used differs depending on the model.

An I/O unit has I/O Link *i* interface connectors JD1A and JD1B. All units with the I/O Link *i* function have these connectors. A cable must always be connected from JD1A to JD1B. Although connector JD1A on the last unit is not used and left open, it is not necessary to connect JD1A with a terminator. The pin assignments of connectors JD1A and JD1B are common to all units with the I/O Link *i* function. They are described in Subsection 7.2.1. Fig. 7.2 shows a connection diagram of the I/O Link *i*.

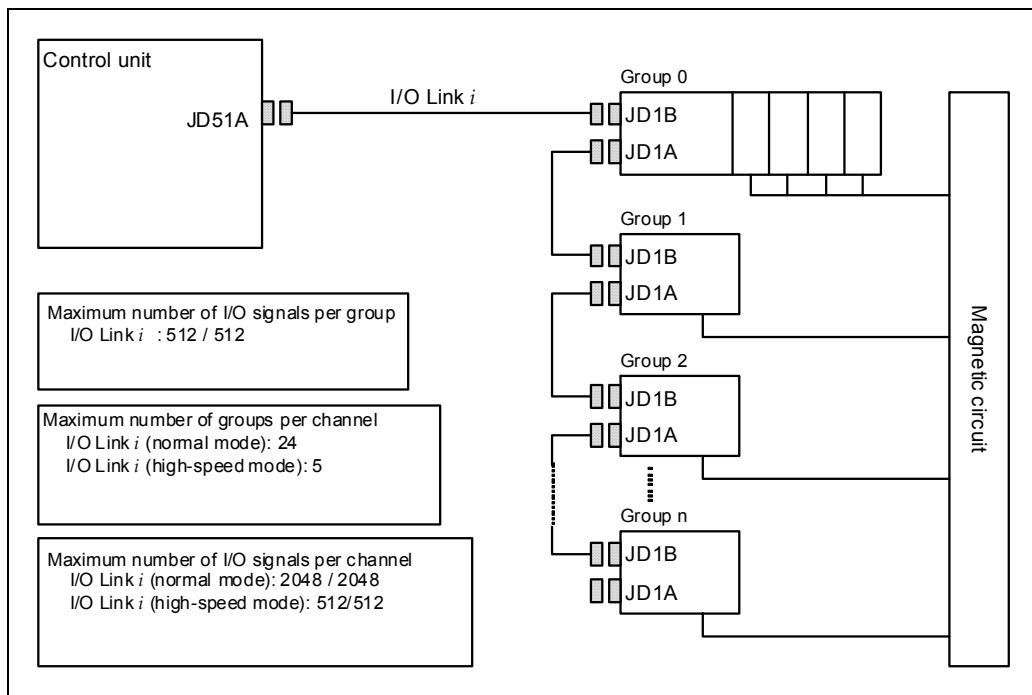


Fig. 7.2 I/O Link *i* connection diagram

The I/O Link *i* is connected by an electric cable (Subsection 7.2.1) or by an optical fiber cable (Subsection 7.2.2). When an electric cable is used, the maximum cable length between units is 10 m. When the cable is laid within the same cabinet^(NOTE), however, the maximum length is 15 m. The maximum cable length between units can be extended to 200 m with optical fiber cables using an optical adapter.

If any of the following conditions is satisfied, use an optical fiber cable for connecting units:

- The cable laid within the same cabinet is longer than 15 m.
- The cable is run between different cabinets and is longer than 10 m or the cabinets cannot be connected with each other via a ground wire of 5.5 mm² or more.
- The cable may be influenced by strong noise.
For example, there is a strong electromagnetic noise source such as a welding machine beside the cable or a noise generating cable such as a power cable or power magnetic cable runs for a long distance in parallel with the cable.


NOTE

Different cabinets connected at low impedance by a closed metal duct can be assumed to be one cabinet.

7.2.1 Connection of I/O Link *i* by Electric Cable


When an electric cable is used, the maximum cable length between units is 10 m.

When the cable is laid within the same cabinet, however, the maximum length is 15 m.

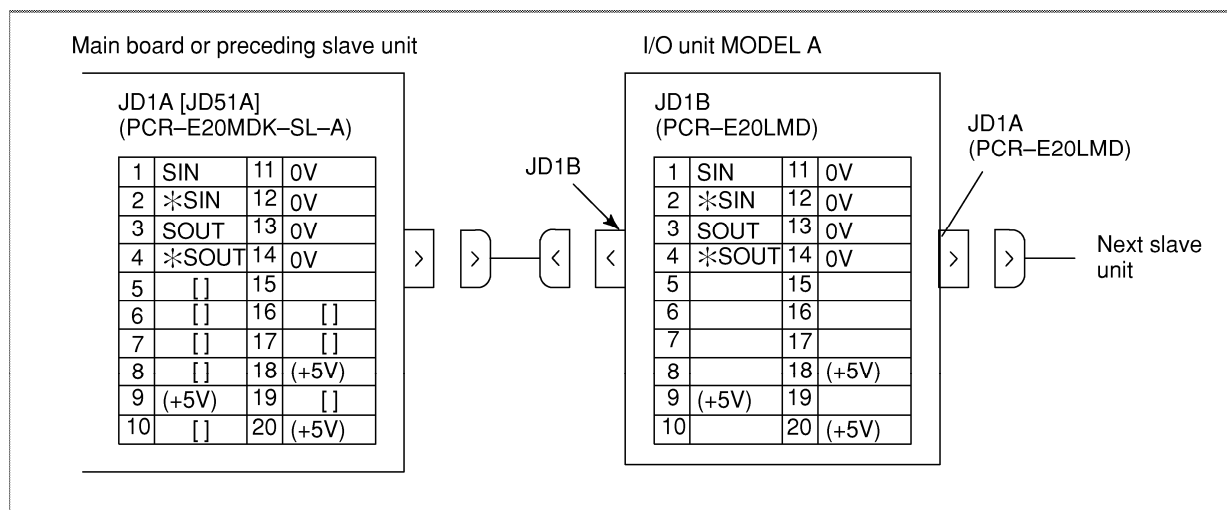

NOTE

- 1 The +5 V terminals in parentheses are for supplying the power to an optical adapter to be used for connection by an optical fiber cable. Do not connect the +5 V terminals when using no optical adapter.
- 2 Do not connect the pins in brackets. They are used for connecting channels 2 with JD51A.
- 3 Do not connect any pin for which no signal is assigned.
- 4 Take sufficient measures against noise. See Section 3.4, "Countermeasures against Noise and Grounding".

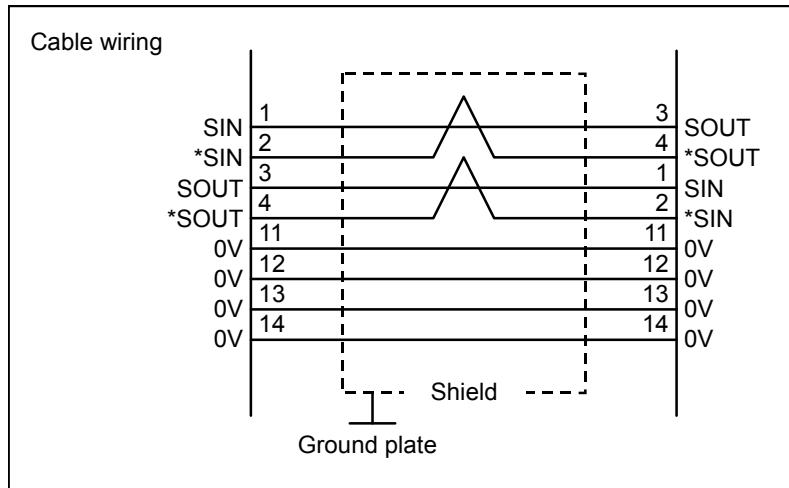


Recommended wire material A66L-0001-0284#10P (#28AWG × 10 pairs)

Recommended cable connectors PCR-E20FA (Honda Tsushin Kogyo Co., Ltd.)
 FCN-247J020-G/E (FUJITSU COMPONENT)
 52622-2011 (Molex Japan Co., Ltd.)


7.2.2 Connection of FANUC I/O Link *i* by Optical Fiber Cable

The I/O Link *i* can be extended to a maximum length of 200 m with optical fiber cables using an optical adapter. The length of the electric cable connected to the optical adapter must not exceed 2 m (when the recommended wire material is used).

Connection

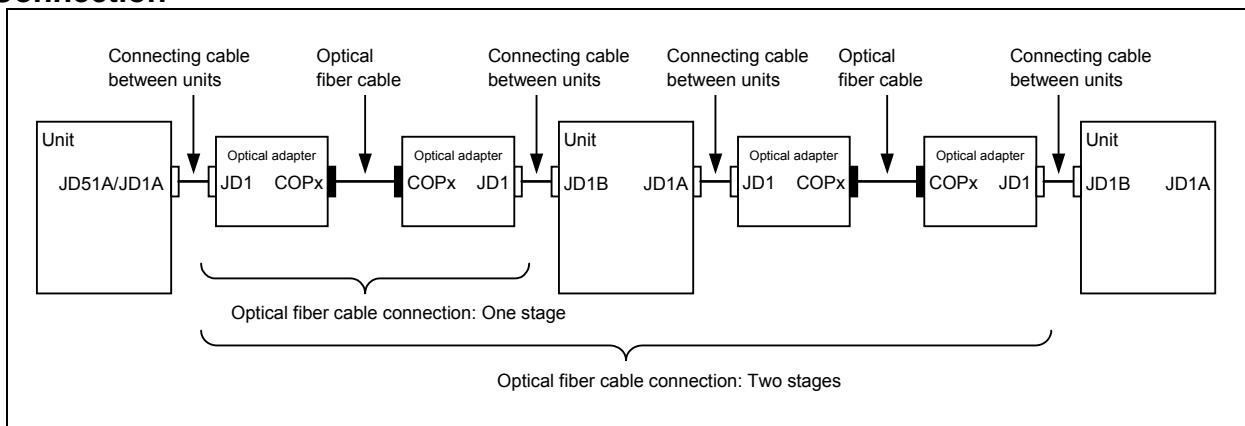

Connecting cable between units

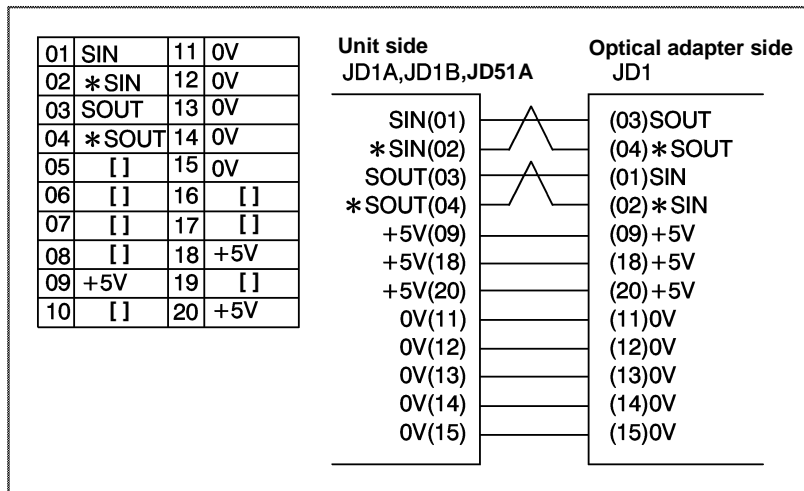

Recommended wire material A66L-0001-0284#10P (#28AWG × 10 pairs)

Recommended cable connectors PCR-E20FA (Honda Tsushin Kogyo Co., Ltd.)
 FCN-247J020-G/E (FUJITSU COMPONENT)
 52622-2011 (Molex Japan Co., Ltd.)

NOTE

- 1 The length of the cable for connecting units must not exceed 2 m (when the recommended wire material is used).
- 2 Do not connect the pins in brackets. They are used for connecting channels 2 with JD51A.
- 3 Do not connect any pin for which no signal is assigned.


Specifications of optical adapters and optical fiber cables

The following table lists the specifications of the optical adapter for the I/O Link i.

Specifications	Transfer mode	Maximum transmission distance	Maximum number of connectable stages	Relay with an optical fiber relay adapter	Weight
A13B-0154-B101	Normal mode	200m	5	None	About 100 g
		100m	16	Up to one point	
	High-speed mode	100m	10	Up to one point	


The specifications of the optical fiber cable are A66L-2001-0026#~. For details, see Appendix D.
 The specification of the optical fiber relay adapter is A63L-0020-0002. For its external dimensions, see Appendix D.

External dimension of optical adapter

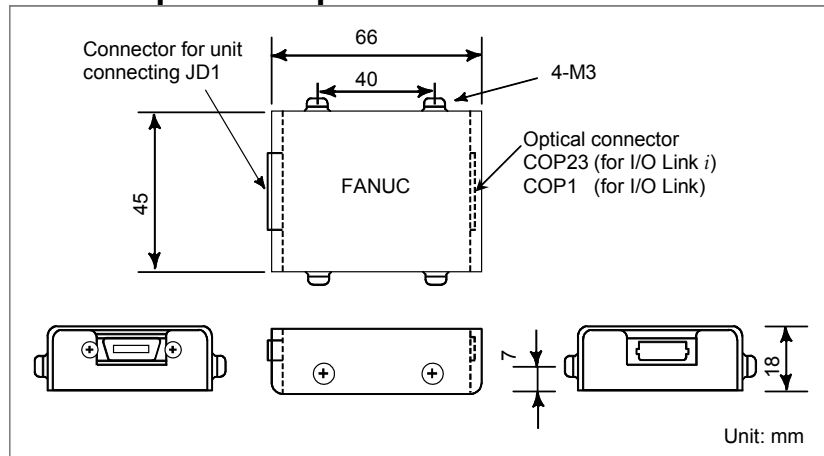

Optical adapter installation conditions

- The optical adapter enclosure is not fully sealed; install it with the control unit in the fully enclosed cabinet.
- Ground the case using the case fixing screw of the optical adapter.
- The optical adapter is light, and it may not be necessary to mount it with screws. However, keep it from coming in contact with other circuits to prevent possible short-circuits. When mounting the optical adapter in a cabinet, attach it with an L-type fitting using the case fixing screws (M3) of the optical link adapter.

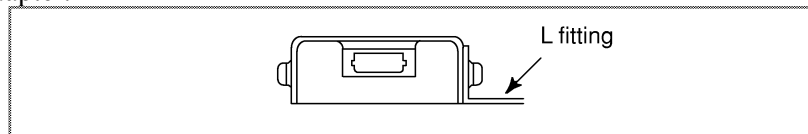

7.2.3 Connection When Multiple Channels of the I/O Link *i* is Used

Up to two channels of the I/O Link *i* interface can be used.


Signals for two channels are assigned to the connector (JD51A) on the main board. When using only channel 1, see Subsection 7.2.1.

When using the channel 2, use the I/O Link branching adapter for two channels to branch the I/O Link *i*.

Using the channel 2


When using channel 2, use the 2ch I/O Link signal divider for two channels to branch the I/O Link *i*.

Connection

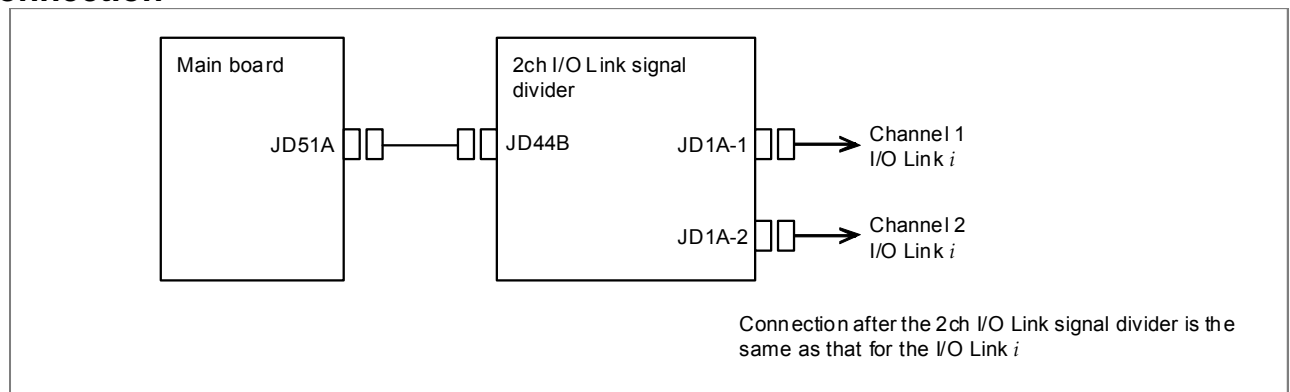

Specification of the 2ch I/O Link signal divider: A20B-1007-0680 (Weight: 60g)


Connection between the main board and 2ch I/O Link signal divider

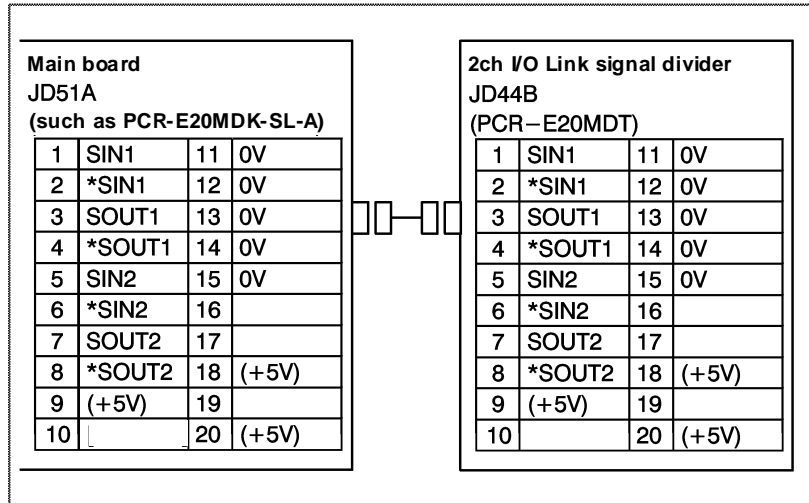

NOTE

- 1 The +5 V terminals in parentheses are for supplying the power to an optical adapter to be used for connection by an optical fiber cable. Do not connect the +5 V terminals when using no optical adapter.
- 2 Do not connect any pin for which no signal is assigned.

Cable connection

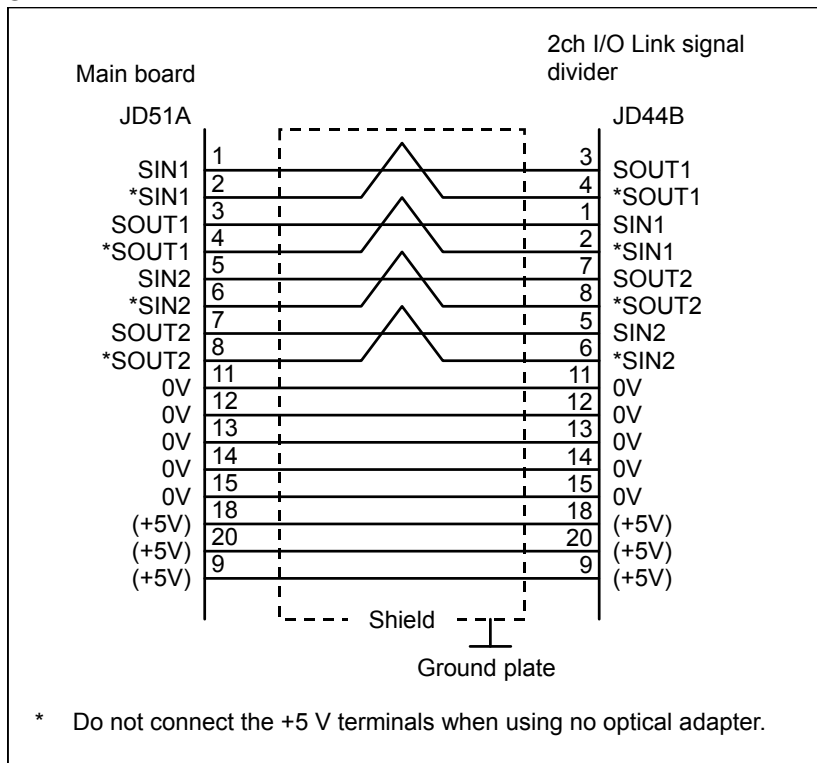


Recommended wire material: A66L-0001-0284#10P (#28AWG × 10 pairs)

Recommended cable connectors: PCR-E20FA (Honda Tsushin Kogyo Co., Ltd.)
 FCN-247J020-G/E (FUJITSU COMPONENT)
 52622-2011 (Molex Japan Co., Ltd.)

Connection between the 2ch I/O Link signal divider and I/O units

The 2ch I/O Link signal divider can be connected to I/O units in the same way as for the I/O Link *i*. See Subsection 7.2.1.

Cable length

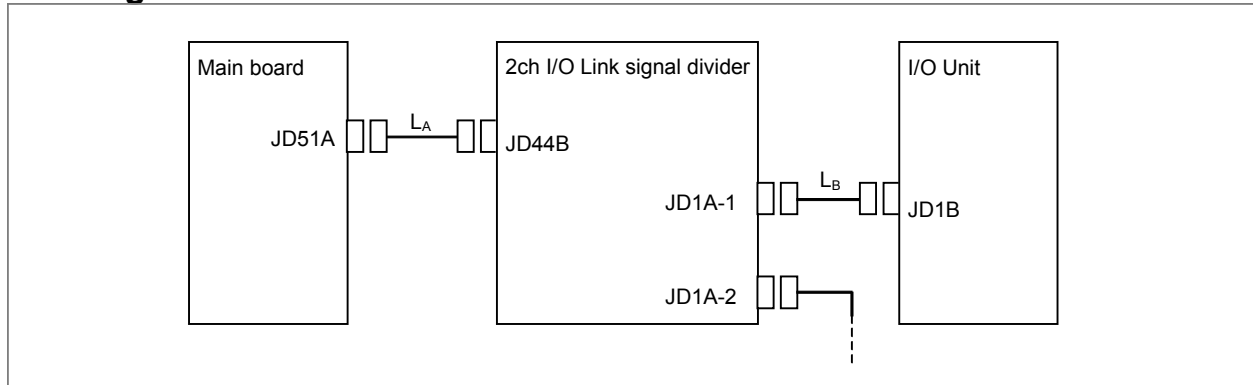


NOTE

The total of L_A and L_B must not exceed 10 m, where L_A is the length of the cable between connector JD51A on the main board and connector JD44B on the 2ch I/O Link signal divider, and L_B is the length of the cable between connector JD1A-1 or JD1A-2 on the 2ch I/O Link signal divider and connector JD1B on the I/O unit. When all cables are laid within the same cabinet, however, a total cable length of up to 15 m is allowed.

Installation of the 2ch I/O Link signal divider

Install the 2ch I/O Link signal divider in a hermetically sealed cabinet like the control unit.

External dimensions of the 2ch I/O Link signal divider

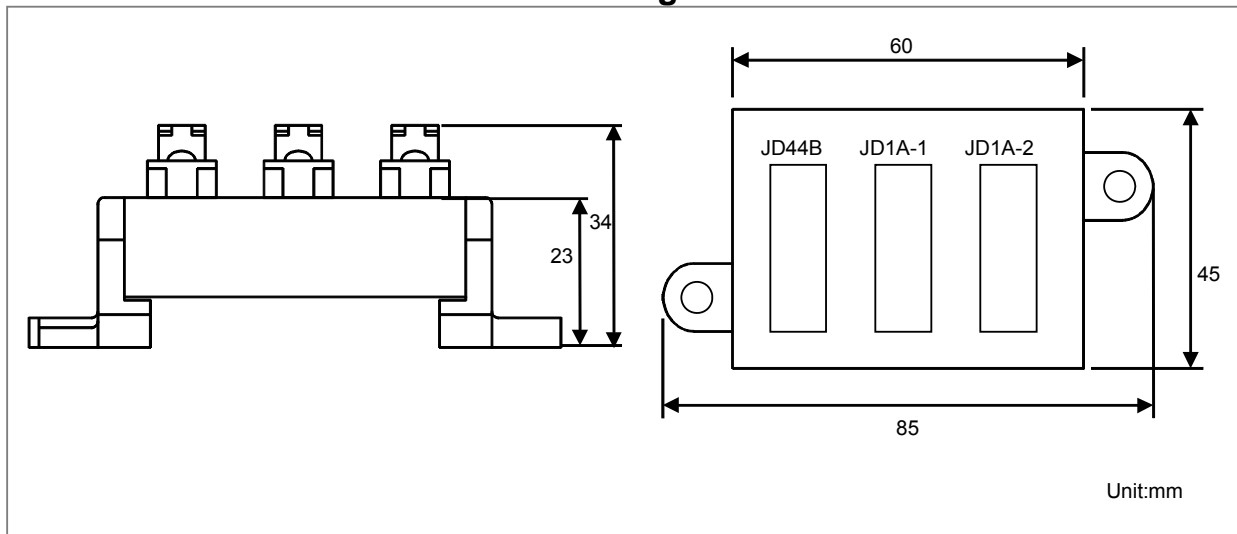


Allow a clearance of about 10 cm above the adapter for connection and routing of cables.

Installation of the 2ch I/O Link signal divider

- 1) Installation on the DIN rail


The following figure shows the external dimensions of a recommended DIN rail.

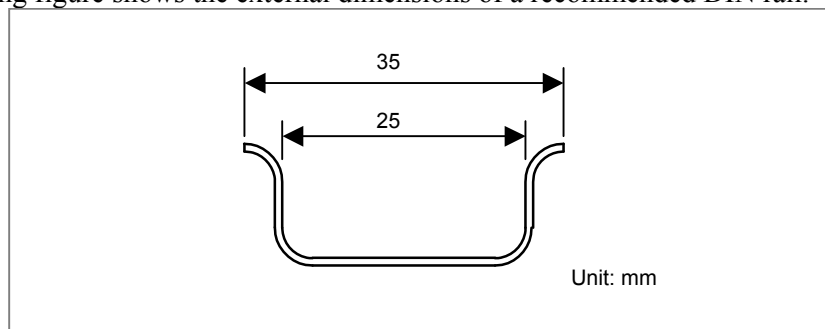

External dimensions of a recommended DIN rail

- 2) Screwing

The following figure shows drilling on the plate.

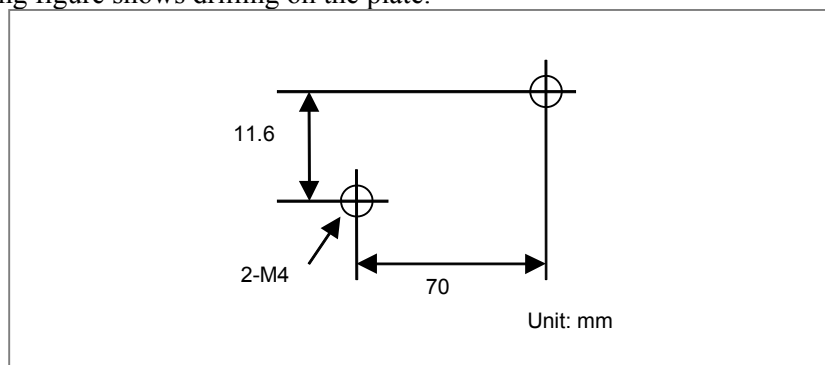

Drilling on the plate


7.3 ASSIGNMENT FOR I/O UNITS

7.3.1 Assignment of Signals

The unit of slaves connected to the I/O Link *i* is called a group. One group of connected I/O units may consist of multiple modules. This unit is called a slot.

On the I/O Link *i*, to allow the control unit as the master to control other I/O units as slaves, the I/O signals of each I/O unit must be assigned to X addresses (input) and Y addresses (output) of the control unit. Assign signals in units of slots for the I/O Link *i*.

In assignment for the I/O Link *i*, each of basic and extension modules connected to I/O modules for connector panel is treated as a slot.

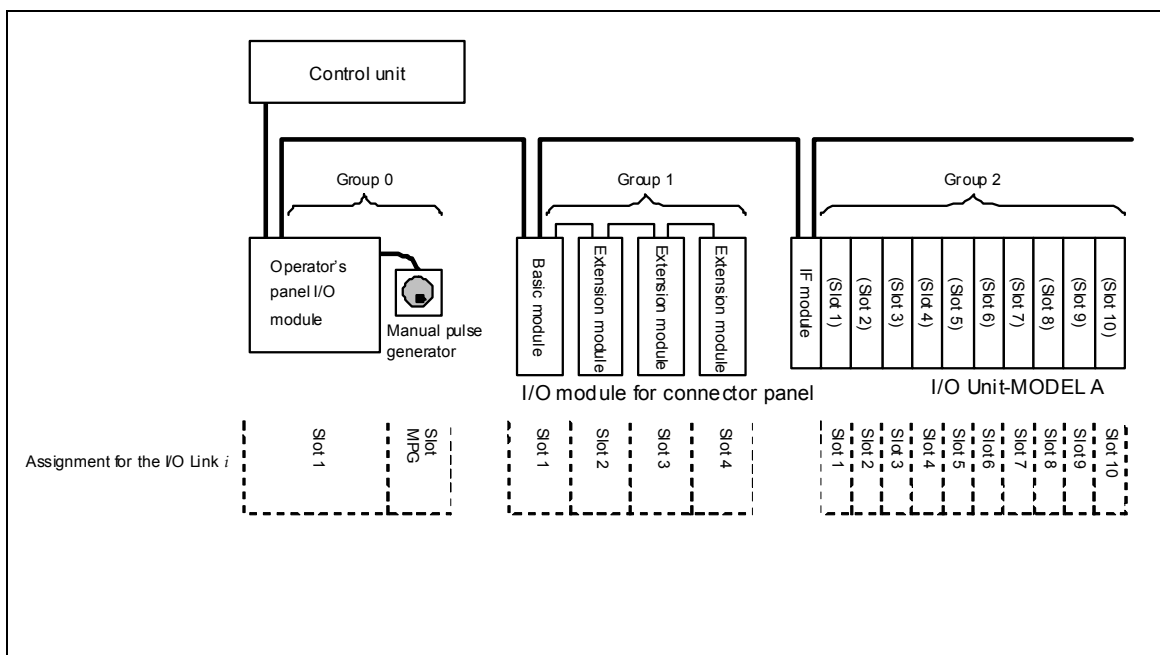

7.3.2 Fixed Signals

Some DI signals are monitored directly by the control unit. Fixed addresses are assigned to these directly monitored signals. Select I/O units and assign addresses with attention to the polarity of each signal.

Whether addresses are assigned to signals are determined according to the machine control type, number of controlled axes, and parameter setting. For details, refer to the FANUC Series 0i-MODEL F Connection Manual (Function) (B-64603EN-1).

CAUTION

The emergency stop signal (*ESP) must be a DI signal at an address for which the common voltage is fixed to 24 V so that it functions to the safety side if a failure such as cable disconnection occurs.

Examples of fixed addresses the control unit directly monitors

	7	6	5	4	3	2	1	0
X004	SKIP	SKIP6	SKIP5	SKIP4	SKIP3	SKIP2	SKIP8	SKIP7
X005								
X006								
X007								
X008				*ESP				
X009	*DEC8	*DEC7	*DEC6	*DEC5	*DEC4	*DEC3	*DEC2	*DEC1

7.3.3 Status Alarm

Some I/O units have a function which detects unit errors including DO alarms (DO ground faults) and DO common voltage errors.

With the I/O Link *i*, detected information is called a status alarm, and the CNC is notified of the status alarm separate from DI signals. For this reason, it is not necessary to assign the information to X addresses. If an error occurs, a PMC alarm message is displayed on the PMC alarm screen and the information is also output to the system relay (R or Z) area. The information only for one group per channel is output to the system relay area. Only the information for the first group in which a status alarm is detected is output.

The following figure shows an address map of a system relay area to which to output a status alarm. For details of status alarms actually detected by units, see the section for each unit in Chapter 8.

System relay area related to a status alarm address map

Channel 1	Channel 2	#7	#6	#5	#4	#3	#2	#1	#0
R9268(Z268)	R9276(Z276)	Status	Type						
R9269(Z269)	R9277(Z277)				Group number				
R9270(Z270)	R9278(Z278)				Slot number				
R9271(Z271)	R9279(Z279)	Alarm information number							
R9272(Z272)	R9280(Z280)	Y address							
R9273(Z273)	R9281(Z281)	Y address							
R9274(Z274)	R9282(Z282)					PMC path			
R9275(Z275)	R9283(Z283)	Alarm data							

Note : Status alarm information is output to either R address or Z address, which depends on selected PMC memory type. For relation between PMC memory type and R/Z address, refer to the FANUC Series 30i/31i/32i-MODEL B PMC Programming Manual (B-64513EN).

Simple description of signals in previous figure

Name	Description
Status	Indicates that a status alarm occurs when this signal is set to 1.
Type	Indicates the type of status alarm. 0: DO alarm (a ground fault), 1: Other alarm (such as a DO common voltage error)
Group number	Outputs a group number (0 to 23).
Slot number	Outputs a numeric value 1 to 32, which indicates slot number 1 to 32.
Alarm information number	Outputs the byte position in the slot or other alarm information When DO alarm occurs(Type=0), a numeric value 0 to 31 is output. When other alarm occurs(Type=1), the meaning of output number depends on each unit..
Y address	Outputs the Y address binary number of the relevant DO signal (R9273 : upper, R9272 : lower) (Yn : n=0 to 127, 200 to 327, 400 to 527, 600 to 727, 1000 to 1127) Valid when DO alarm occurs(Type=0) ex. Y511 : R9273 = "00000001", R9272 = "11111111"
PMC path	Outputs the PMC path at the Y address assigned to the relevant DO signal. (PMC1 to PMC5 : 1 to 5, DCSPMC : 9) Valid when DO alarm occurs(Type=0) Outputs 0 when other alarm occurs (Type=1)

Name	Description
Alarm data	Outputs information on the alarm which occurs or other alarm information. Outputs 1 to the bit corresponding to the alarm which occurs when DO alarm occurs(Type=0) When other alarm occurs(Type=1), the meaning of output number depends on each unit..


7.4 MANUAL PULSE GENERATOR

When multiple I/O units having a manual pulse generator interface are connected, the manual pulse generator interface of the I/O unit nearest the control unit on the I/O Link *i* is enabled in the initial status. The manual pulse generator interface of a desired I/O unit can be enabled by setting the relevant parameter.

For the parameter setting, refer to the FANUC Series 0i-MODEL F Parameter Manual (B-64610EN).

7.4.1 Manual Pulse Generator Connection

The following figure shows an example in which three manual pulse generators are connected.

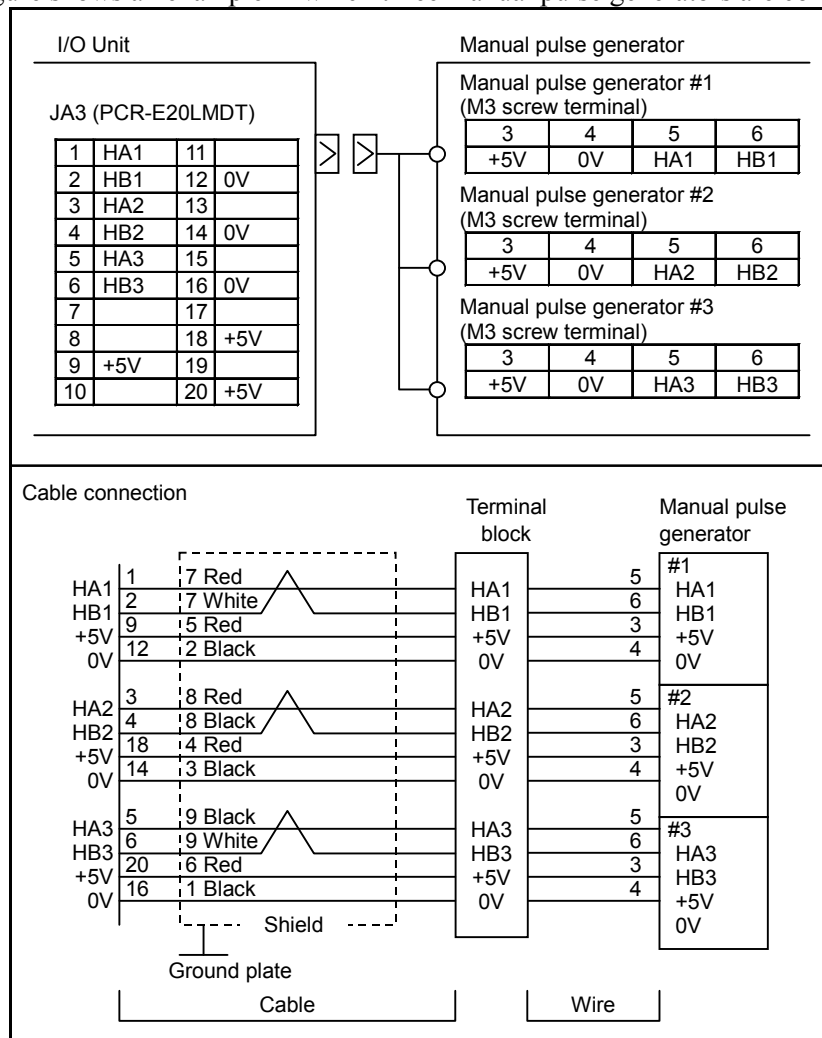

Recommended wire material : A66L-0001-0286 (#20AWG×6+#24AWG×3 pairs)
Recommended connector : A02B-0120-K303 (including the following connector and case)

(Connector: FI40-2015S (Hirose Electric Co., Ltd.)
(Case: FI40-20-CV5 (Hirose Electric Co., Ltd.))

Recommended cables : A02B-0120-K841 (7m) (for connecting three manual pulse generators)
A02B-0120-K848 (7m) (for connecting two manual pulse generators)

A02B-0120-K847 (7m) (for connecting one manual pulse generator)
(These cables do not include the wire shown in the above figure.)

NOTE

The number of connectable manual pulse generators depends on the option configuration.

7.4.2 Cable Length for Manual Pulse Generator

The manual pulse generator operates on 5 VDC. The supply voltage drop due to the cable resistance must be held below 0.2 V (when those of the 0-volt and 5-volt wires are combined), as expressed in the following expression:

$$0.2 \geq \frac{0.1 \times R \times 2L}{m}$$

where
 0.1 = manual pulse generator supply current (0.1 A)
 R = resistance per unit cable length (Ω/m)
 m = number of 0-volt and 5-volt wires
 L = cable length (m).

Therefore, the cable length can be determined using the following expression.

$$L \leq \frac{m}{R}$$

As an example, obtain the cable length when recommended cable wire A66L-0001-0286 is used.

This cable wire has three paired signal wires and six power connection wires. Since the electric resistance of a power connection wire is 0.0394 Ω/m , if three wires are used for 0 V and 5 V, the cable length is:

$$L \leq \frac{3}{0.0394} = 76.75[m]$$

According to the FANUC specifications, however, the maximum transmission distance of a pulse signal from a manual pulse generator must not exceed 50 m.

Therefore, when one manual pulse generator is connected, the maximum cable length is 50 m.

The maximum cable length is:


When two manual pulse generators are connected 38.37 m

When three manual pulse generators are connected 25.58 m


7.4.3 Manual Pulse Generator Signal Specifications

If the customer will use a manual pulse generator which is not manufactured by FANUC, the following conditions must be satisfied.

The relationship between signals HAn and HBn, and pulses issued to the control unit is as shown in the figure below. A cycle of a pulse T_1 must be at least 200 μsec and $T_1/4$ must be at least 50 μsec .

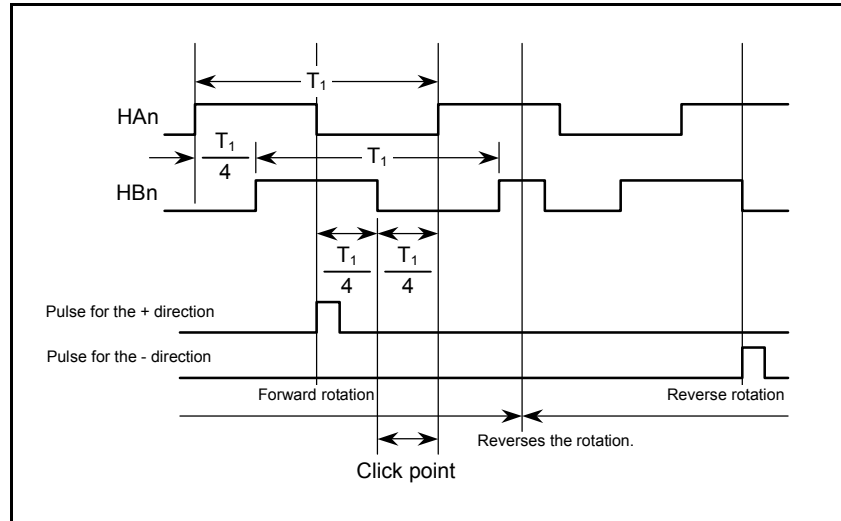

The following figure shows the receiver circuit for signals in the manual pulse generator.

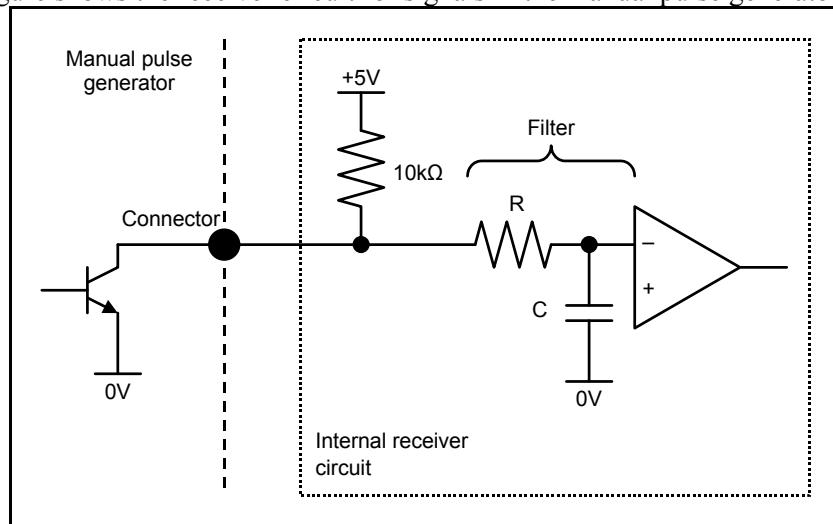

The points (thresholds) at which the input signal to the receiver changes are:

3.7 V or higher when the input signal state changes from the low level to the high level

1.5 V or lower when the input signal state changes from the high level to the low level

7.5 POWER SUPPLY

⚠ WARNING

- 1 Supply the +24V power to the slave I/O units connected with the I/O Link i when or before the power to the control unit is turned on at the power-on of the system. At the power-off of the system, turn the +24 V off when or after the power to the control unit is turned off. For detailed timing specifications at power-on and -off, see Section 4.2, "Turning On and Off the Power to the Control Unit". Do not turn the +24V power to any slave I/O unit off during operation, otherwise the control unit will be in the status of communication alarm.
- 2 For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If the power for the load (DOCOM) is supplied when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.

8 UNITS CONNECTED TO FANUC I/O Link *i*

8.1 GENERAL UNITS

Basically, *0i-F* can be connected to any unit that has a FANUC I/O Link *i* slave interface. The following table lists general units that can be connected. For detailed description of each unit, see the section or manual indicated in Detailed description in the table below.

General units that can be connected to 30i-B/31i-B/32i-B

Unit	Description	Detailed description
I/O module for connector panel	Distribution type I/O module that can flexibly support a combination of input/output signals required by a power magnetics circuit. Has a manual pulse generator interface.	Section 8.2
I/O module for operator's panel (for Matrix Input)	Unit having an interface with a machine operator's panel; it has an interface with a manual pulse generator.	Section 8.3
I/O module for operator's panel	Unit having an interface with a machine operator's panel that handles the input/output signals required by the power magnetics circuit; it has an interface with a manual pulse generator.	Section 8.4
I/O module for power magnetics cabinet	Unit that has an interface with the power magnetics cabinet. This unit can also handle input/output signals required for the power magnetics circuit.	Section 8.4
I/O module type-2 for connector panel	Distribution type I/O module that can flexibly support a combination of input/output signals required by a power magnetics circuit. Has a manual pulse generator interface.	Section 8.5
Terminal type I/O module	I/O module that is equivalent to a connector panel I/O module. Input/output signals are connected on a spring-type terminal block (ferrule terminal block).	Section 8.6
FANUC I/O Unit-MODEL A	I/O unit with a module configuration that can flexibly handle a combination of input/output signals required for the power magnetics circuit	Connection and Maintenance Manual B-61813E
FANUC I/O Unit-MODEL B	I/O unit of distribution type that can flexibly handle a combination of input/output signals required for the power magnetics circuit	Connection and Maintenance Manual B-62163E
Fanuc I/O Link connection unit	Unit that makes a connection with a FANUC I/O Link <i>i</i> master to transfer DI/DO signals	Section 8.7
Servo amplifier β <i>i</i> SV series (I/O Link <i>i</i> interface)	Unit that makes a connection with a control unit through the FANUC I/O Link <i>i</i> for servo motor control	Descriptions B-65322EN
Standard machine operator's panel	The appearance of this machine operator's panel is consistent. The panel can easily be customized.	Section 8.8
Handy machine operator's panel	Compact handy operation panel, used for operation on the machine side, that consists of the manual pulse generator, emergency stop switch, enable switch, display unit, and input key.	Connection Manual B-63753EN
Operator's panel connection unit (source DO)	Unit having an interface with a machine operator's panel.	Section 8.10
Safety IO unit	I/O unit to connect duplicated safety signals.	Section 8.11

Unit	Description	Detailed description
I/O module for operator's panel supporting safety function	I/O module for a machine operator's panel that has a terminal to input duplicated safety signals.	Section 8.12
I/O Unit for power magnetism cabinet	Unit that has an interface with the power magnetism cabinet. This unit can also handle input/output signals required for the power magnetism circuit.	Section 8.13
Mult Sensor Unit	I/O unit with the Shock Input, the Temperature Input, and the Analog Input for machine state monitoring.	

 **WARNING**


- 1 If the load current of a unit or module with no output protection function exceeds its rating continuously for a long time, it is likely that smoke or ignition may occur. In order to prevent burnout, it is recommended to use a fuse rated twice the output rating at every external terminal.
- 2 Some modules have a built-in fuse for each common. However, no such output module can be protected from overload. Be sure to use them within their rating. In order to protect modules from overload, it is recommended to attach an external fuse to each of them.
- 3 It is likely that, if a short circuit occurs, an external fuse (even if provided) for an output module may fail to protect its components. If an external load is short-circuited, ask for repair.
- 4 As for modules having an output protection element, the protection function is intended to protect the components internal to the modules rather than external units.
- 5 No protection function of modules can protect their internal components in all cases. Once any protection function has worked, remove the cause promptly. If an absolute maximum rating is exceeded, for example, it is likely that protection functions may not work or an IC may break down before the related protection function works, depending on the way or situation in which the modules are used.
- 6 If an output protection function is defective, it is likely that, if the load current exceeds its rating continuously for a long time, smoke or ignition may occur.

NOTE

- 1 To use a unit listed in the table above that supports, be sure to specify a unit of the ordering specifications described in the relevant section.

NOTE regarding Input module


- 1 Pay attention to the contact chattering and noise sufficiently may cause these input modules to read incorrect inputs.
- 2 If an input contact is connected to an input module and inductive load in parallel, a surge voltage that occurs across the load when the contact becomes off may cause the input module to malfunction. If this is the case, attach a surge arrester to the load in parallel to suppress the surge voltage.

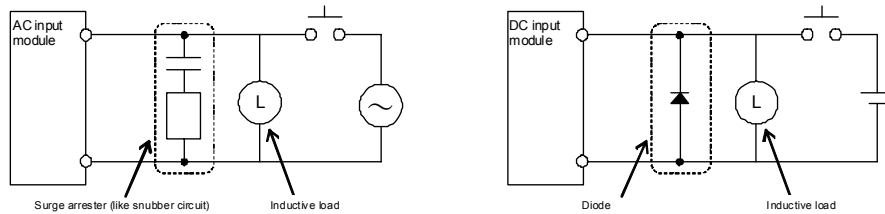


- 3 The maximum current described in Signal Specifications of each units includes the permissible rush current.

NOTE regarding Output module


- 1 Even if the sequence program has turned off an output module, its internal stray capacity may cause an output current to flow instantaneously through it when a voltage is applied abruptly to the load. In order to evade this symptom, use the configuration that the load power is turned on/off on the primary side, as shown below.



- 2 Be sure to connect the power supply and common pins. Otherwise, current flow may get in the output circuit, resulting in the output being turned on.
- 3 Measures for inductive loads
 - Do not turn on/off the output module repeatedly within a short period of time. The maximum permissible ON/OFF frequency is: ON for at least 1 second and OFF for at least 1 second.
 - If the output load is inductive, connect a protection circuit like a surge killer or diode to the load in parallel. Note, however, that, connection of a protection circuit may cause a delay in recovery time. If this is a problem, use a CR snubber circuit instead of a surge killer or diode.

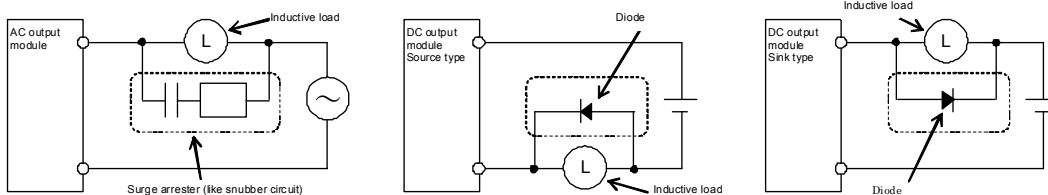

- 4 If the output module is used to control a lamp load, it is likely that output turn-on rush current may damage the output element. Do not even instantaneously fail to observe the current and voltage ratings. If a dark lighting resistor is used in the source type DC output module, connect a leakage prevention diode as shown below.

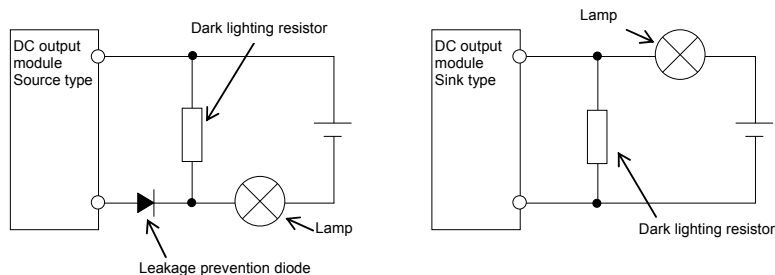


- 5 The maximum current described in Signal Specifications of each units includes the permissible rush current.

8.2 CONNECTION OF I/O MODULE FOR CONNECTOR PANEL

8.2.1 Configuration

As shown in the figure below, an I/O module for connector panel consists of the basic module and extension modules (up to three modules).

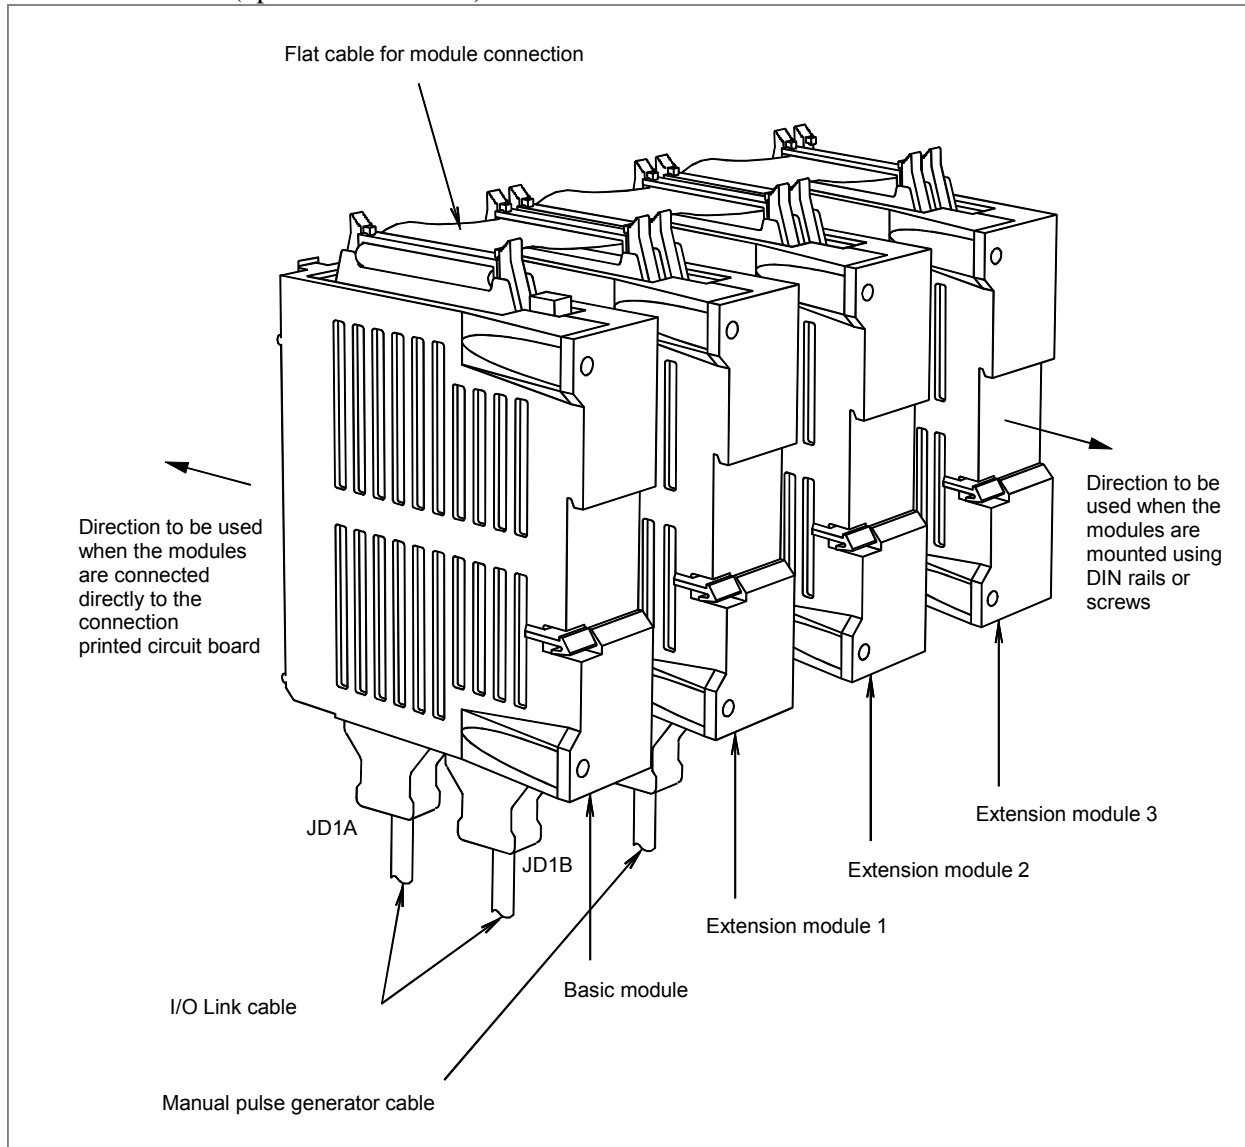

NOTE

Be sure to install I/O modules for connector panel so that the basic module and extension modules are placed as shown in the figure above.

When the modules are directly connected to the connection printed circuit board designed by the machine tool builder:


Install the extension modules to the right of the basic module on the installation plane.

When the modules are installed using DIN rails or screws:

Install the extension modules to the left of the basic module on the installation plane.

8.2.2 Connection Diagram

The following figure shows an example of connecting extension module A, extension module C, and extension module D as extension modules.

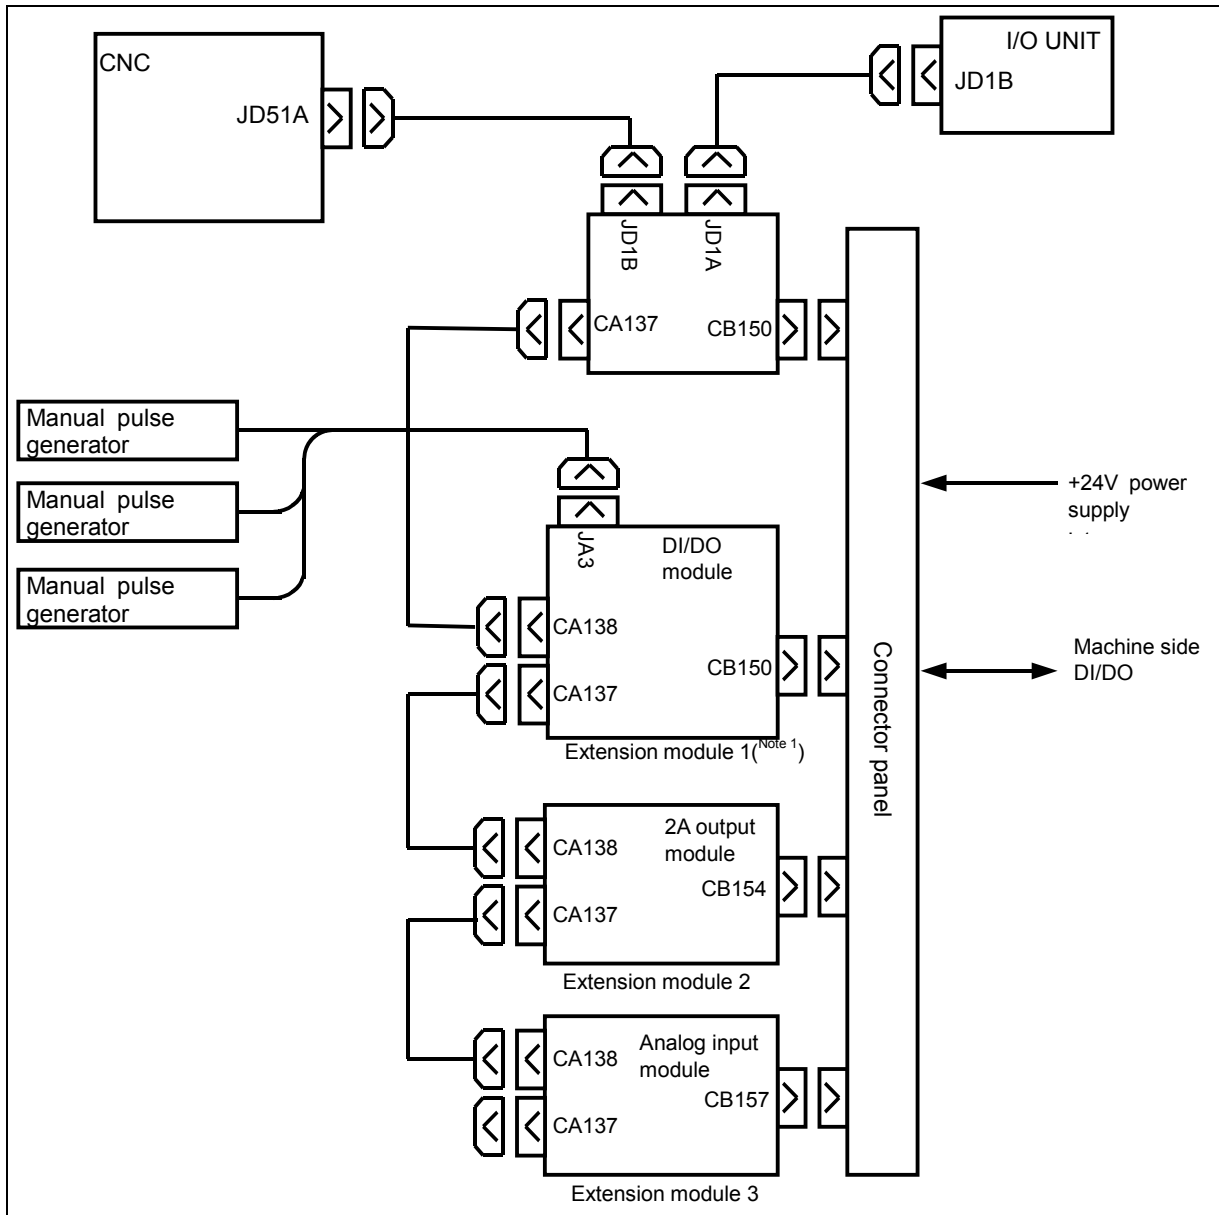

NOTE

Extension modules A, B, C, and D can be installed in any position of extension modules 1, 2, and 3. If a manual pulse generator interface is required, however, be sure to install extension module A in extension module 1. Other modules cannot be installed in extension module 1.

8.2.3 Module Specifications

Types of modules

Name	Ordering specifications	Specifications	Weight	Reference item
I/O module for connector panel (basic module)	A03B-0824-C001	DI/DO : 24/16	220g	Subsec. 8.2.4
I/O module for connector panel (extension module A)	A03B-0824-C002	DI/DO : 24/16 With MPG interface	210g	Subsec. 8.2.4
I/O module for connector panel (extension module B)	A03B-0824-C003	DI/DO : 24/16 Without MPG interface	200g	Subsec. 8.2.4
I/O module for connector panel (extension module C)	A03B-0824-C004	DO : 16 2A output module	230g	Subsec. 8.2.5
I/O module for connector panel (extension module D)	A03B-0824-C005	Analog input module	210g	Subsec. 8.2.6
Terminal conversion adapter TA1	A03B-0824-K151 (A20B-2005-0160)	For basic module and extension module A, B	60g	Subsec.8.2.13
Terminal conversion adapter TA2	A03B-0824-K152 (A20B-2005-0190)	For extension module C	45g	Subsec.8.2.13
Terminal conversion adapter TA3	A03B-0824-K153 (A20B-1009-0720)	For extension module D	50g	Subsec.8.2.13
Fuse (spare parts)	A03B-0815-K002	1A(For basic module)		
Flat cable between modules	A03B-0815-K100	20 mm long Suitable for a module interval of 32 mm		


NOTE

Be sure to use modules with the ordering specifications listed above in combination. Do not configure them with other modules not supported I/O Link *i*.

For the specifications (such as signal input requirements) specific to each module, see the relevant pages of each item.

Installation conditions

- (1) Use each I/O module in a completely sealed cabinet.
- (2) Use the units under the following ambient temperature conditions:
 Operation: 0°C to 55°C
 Storage and transportation: -20°C to 80°C
- (3) For other installation conditions, conform to the CNC installation conditions.
- (4) For ventilation within each I/O module, each module must be installed in shown below. Moreover, for ventilation and wiring, allow a clearance of 100 mm or more above and below each module. Never place a device that generates a large amount of heat below an I/O module.
- (5) Install the basic module and extension modules so that the connection flat cables lie on the top of them. Also ensure that the flat cable does not block the vent holes on the basic unit. (See Subsection 8.2.8.)

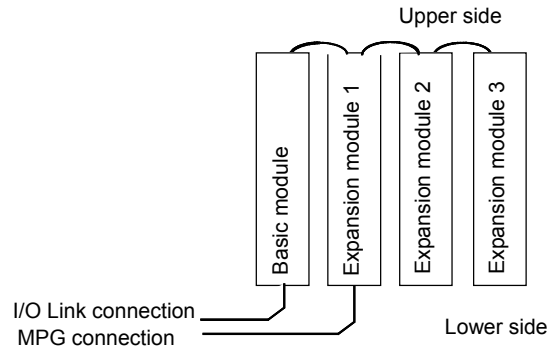

- (6) Install the basic module and extension modules so that they are placed as shown in the figure in Subsection 8.2.1.
- When the modules are directly connected to the connection printed circuit board designed by the machine tool builder:
Install the extension modules to the right of the basic module on the installation plane.
 - When the modules are installed using DIN rails or screws:
Install the extension modules to the left of the basic module on the installation plane.

Power supply rating

Module	Power supply voltage	Power supply rating	Remarks
Basic module	24 VDC $\pm 10\%$ is fed through the I/O connector (CB150) of the basic module; $\pm 10\%$ includes momentary variations and ripples.	0.2A+7.3mA \times DI	Number of DI points with DI=ON
Expansion modules A and B		0.1A+7.3mA \times DI	Number of DI points with DI=ON
Expansion module C (2A output module)		0.1A	
Expansion module D (analog input module)		0.1A	

As a guideline for the heat dissipation, assume [above power supply capacity \times 24 (W)].

NOTE

- 1 The above power supply rating does not include that to be input to DOCOM for DO output.
- 2 To connect an optical adapter for the I/O Link i to both connectors JD1A and JD1B on the basic module, the above power supply rating + 70 mA is required for the power supply of the basic module.
- 3 If the Terminal conversion adapter is used, in order to light the LED, the power supply rating will increase as follow.
TA1: The power supply rating of 24VDC power supply will increase up to 5.5mA.
The power supply rating of DOCOM will increase up to 95mA.
TA2: The power supply rating of DOCOM will increase up to 95mA.
TA3: There is no LED.

8.2.4 Connection of the Basic Module, and Extension Modules A and B

8.2.4.1 Connector pin arrangement

The following figure shows the connector pin arrangement of the basic module and extension modules A and B.

CB150(HONDA MRH-50RMAST)					
33	DOCOM			01	DOCOM
34	Yn+0.0	19	0V	02	Yn+1.0
35	Yn+0.1	20	0V	03	Yn+1.1
36	Yn+0.2	21	0V	04	Yn+1.2
37	Yn+0.3	22	0V	05	Yn+1.3
38	Yn+0.4	23	0V	06	Yn+1.4
39	Yn+0.5	24	DOCOM0	07	Yn+1.5
40	Yn+0.6	25	Xm+1.0	08	Yn+1.6
41	Yn+0.7	26	Xm+1.1	09	Yn+1.7
42	Xm+0.0	27	Xm+1.2	10	Xm+2.0
43	Xm+0.1	28	Xm+1.3	11	Xm+2.1
44	Xm+0.2	29	Xm+1.4	12	Xm+2.2
45	Xm+0.3	30	Xm+1.5	13	Xm+2.3
46	Xm+0.4	31	Xm+1.6	14	Xm+2.4
47	Xm+0.5	32	Xm+1.7	15	Xm+2.5
48	Xm+0.6			16	Xm+2.6
49	Xm+0.7			17	Xm+2.7
50	+24V			18	+24V

50 male pins with fittings for fixing the connector covers


CAUTION


Pins 18 and 50 (+24V) of connector CB150 are used to apply +24 V externally to a module. Be sure to connect these pins because the +24 V is used internally. Also be sure to connect pins 19 to 23 (0V).

8.2.4.2 DI (Input Signal) Connection

This subsection describes the DI (input signal) connections of the basic module and expansion modules A and B.

The following figures show DI connection per module. A maximum of 96 signals are available in a configuration of one basic module (24 signals) and three extension modules (24 signals each).

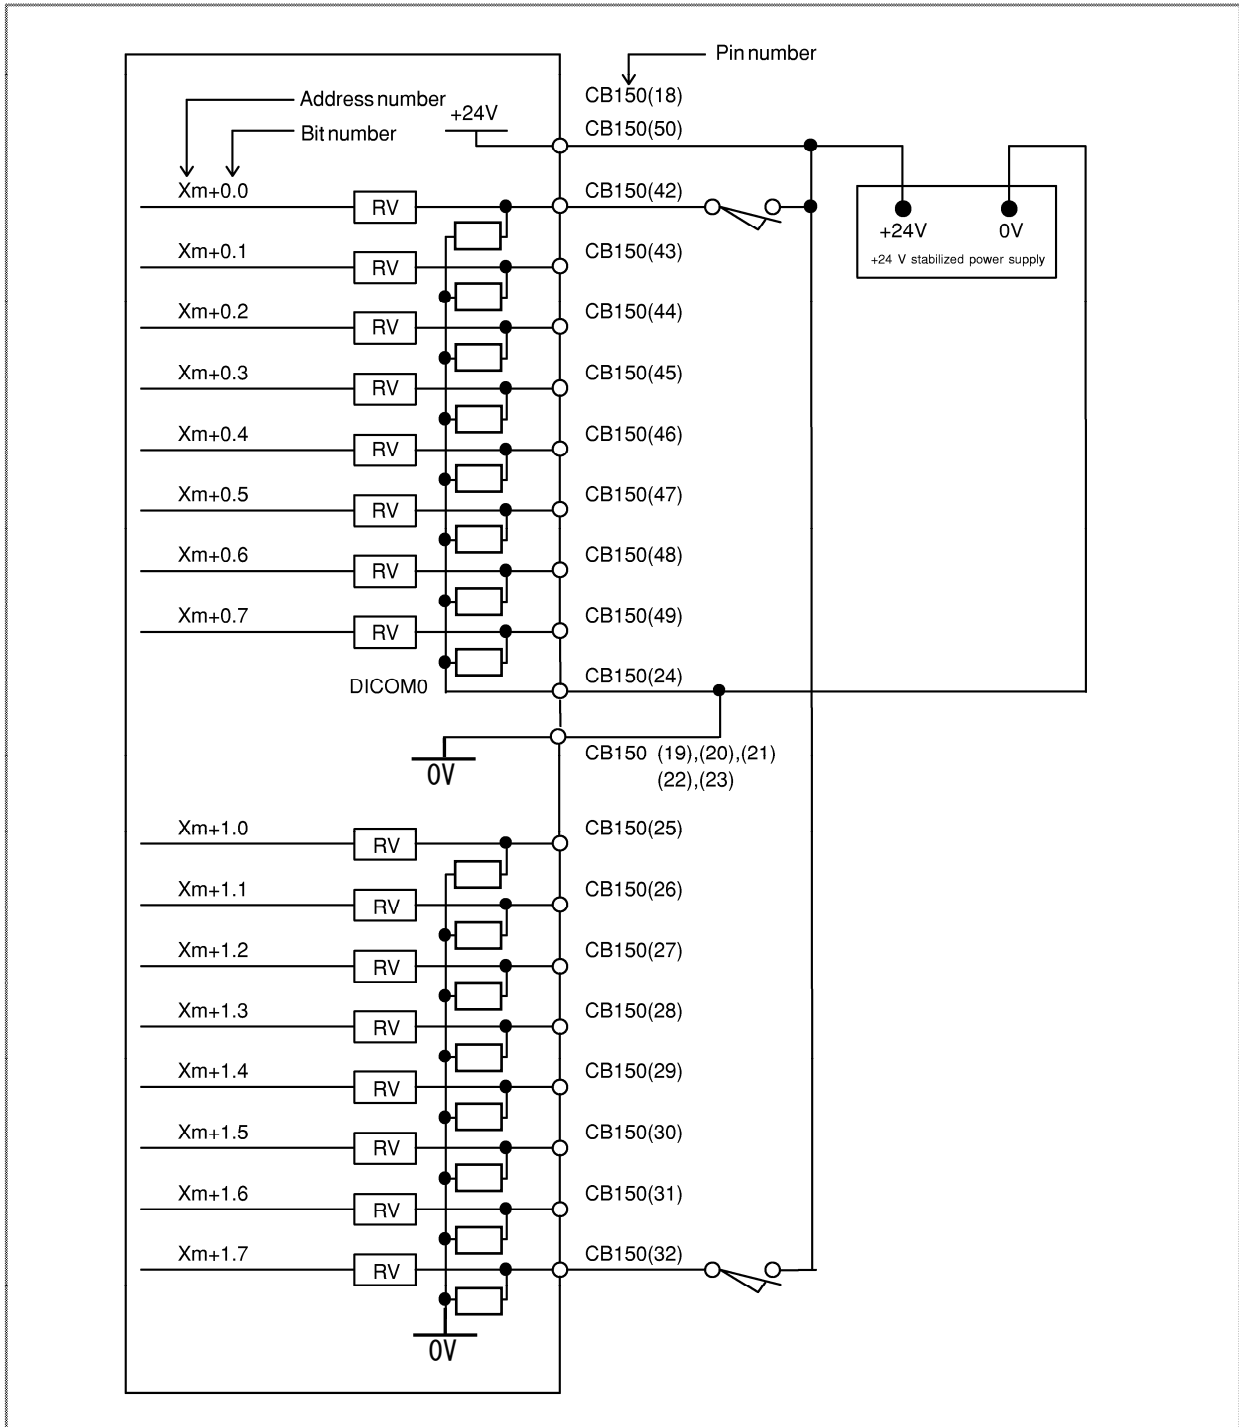

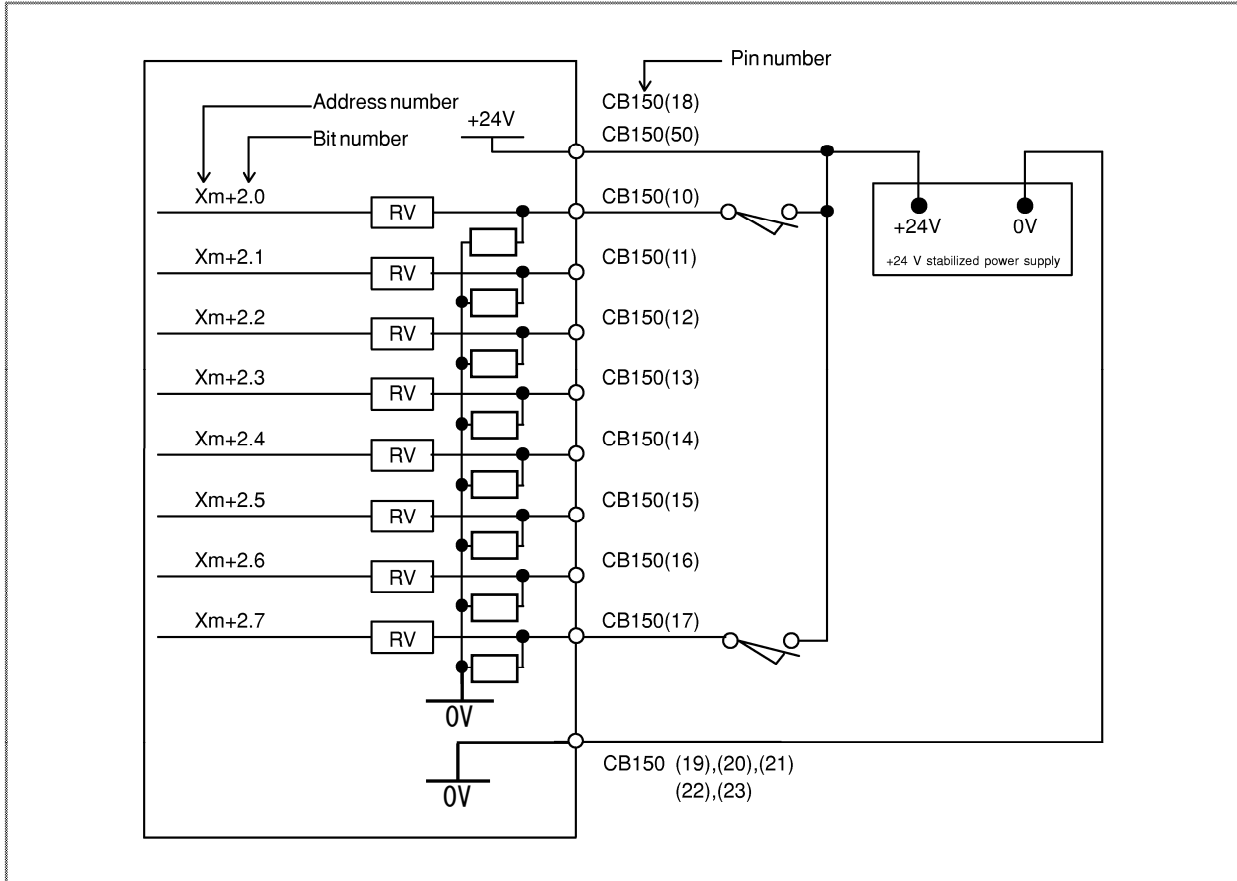

NOTE

As listed in the table below, $Xm+0.0$ through $Xm+0.7$ are DI pins for which a common voltage can be selected. That is, by connecting the DICOM0 CB150(24) pin to the +24 V power supply, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. To prevent such accidents, the connection of the DICOM0 CB150(24) pin to the 0 V power supply is recommended wherever possible.

For the unconnected pins at the addresses for which the common voltage is fixed (from $Xm+1.0$ to $Xm+1.7$ and from $Xm+2.0$ to $Xm+2.7$), the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected (from $Xm+0.0$ to $Xm+0.7$), the input is "0" when the DICOM0 CB150(24) pin is connected to the 0 V power supply or "1" when it is connected to the +24 V power supply. Connect DICOM0 when used. When addresses from $Xm+0.0$ to $Xm+0.7$ are not used, connect DICOM0 to the 0 V power supply.


Common voltage for the basic module, and extension modules A and B

Address	Common voltage
Xm	Can externally be selected with DICOM0.
$Xm+1$	Cannot be selected.
$Xm+2$	Cannot be selected.

8.2.4.3 DO (Output Signal) Connection

This subsection describes the DO (output signal) connections of the basic module and expansion modules A and B.

The following figures show DI connection per module. A maximum of 64 signals are available in a configuration of one basic module (16 signals) and three extension modules (16 signals each).

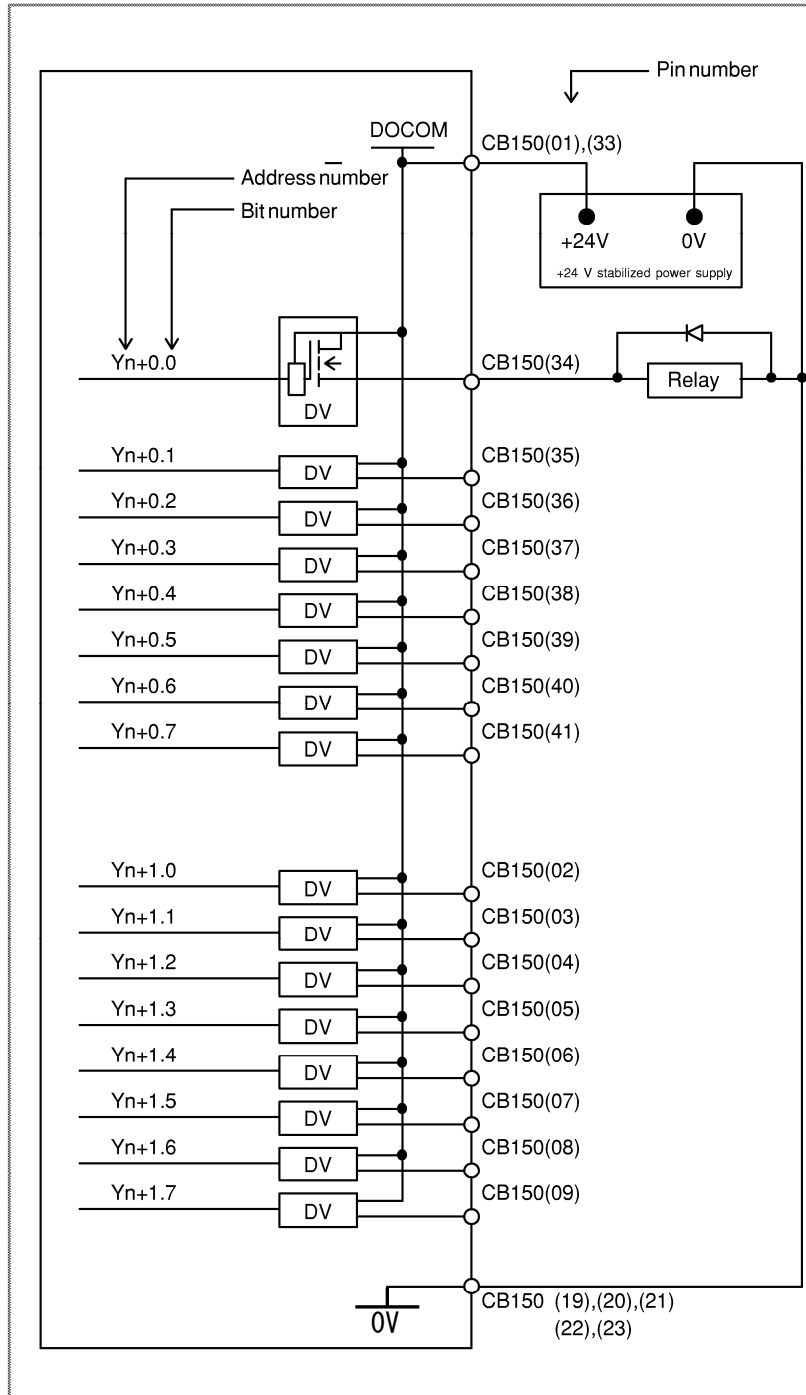

8.2.4.4 DI/DO Signal Specifications

This section describes the specifications of the DI/DO signals used with the basic module and expansion modules A and B.

DI (input signal specifications)

Number of points	24 points (per module)
Rated input	DC24V, 7.3mA
Delay time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

DI (contact specification)

Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1mA or less (26.4V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)

DO (output signal specifications)

Number of points	16 points (per module)
Maximum load current when ON	200 mA or less including momentary variations
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

CAUTION

- 1 When inductive load is connected to DO terminal, connect a diode in parallel in order to reduce the noise.
- 2 When capacitive load is connected to DO terminal, connect a resistor in series in order to diminish the rush current.

Power supply for DO load (DOCOM)

Input voltage range : min 0V, max 26.4V

Be sure to connect all power supply for DO load (DOCOM) pins.


Turn on the power supply for DO load (DOCOM) at the same time as the power for the control unit.

Turn off the power supply for DO load (DOCOM) when or before the power for the control unit is turned off.

Warning

For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If the power for the load (DOCOM) is supplied when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.

By turning off (opening) the power supply (DOCOM) for the DO signals (output signals), all the DO signals of each module can be turned off at the same time. At this time, the DO state is as shown below.

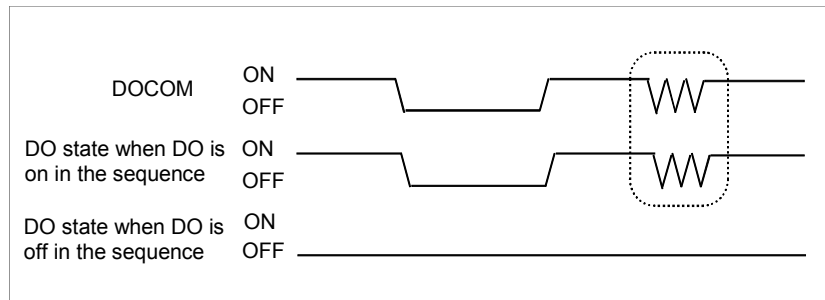


NOTE
 When DO is on in the sequence, the ON/OFF state of DOCOM is directly reflected in the DO state as indicated above by the dashed box.
 Don't connect the inductive load or the capacitive load to the power supply for DO load (DOCOM). If the power supply for DO load (DOCOM) is turned on/off in the condition that it is connect to the inductive load or the capacitive load, it will cause the DO to malfunction.

Parallel DO (output signal) connection

A DO load current of twice the level can be obtained by connecting DO points in parallel and exercising ON/OFF control at the same time in the sequence. Namely, the maximum load current per DO point is 200 mA. By connecting two DO points in parallel and turning on the two DO points at the same time, 400 mA can be obtained. In this case, however, the leakage current is doubled up to 40 mA when the DO points are turned off.

CAUTION
 Be sure to connect the bit at the same address for parallel connection.
 Do not connect three or more signals in parallel.

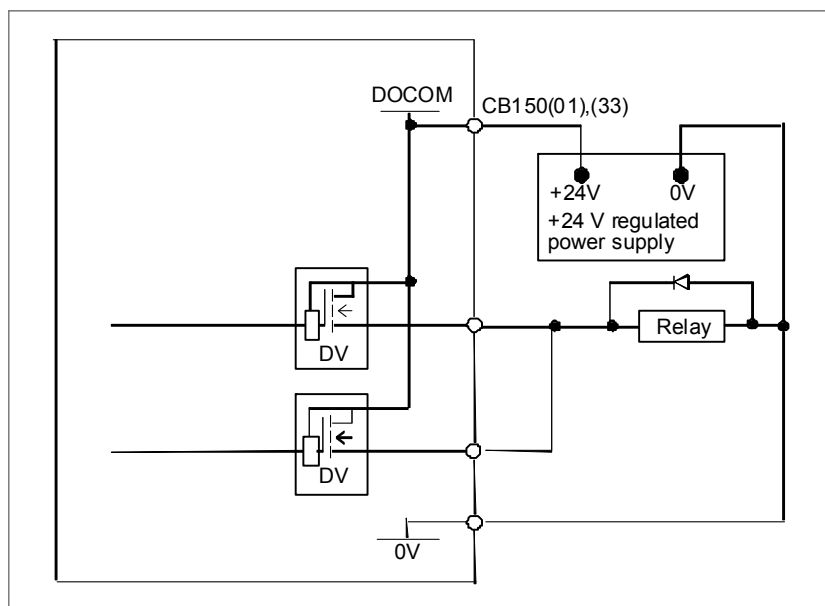

8.2.5 Connection of Extension Module C (2A Output Module)

8.2.5.1 Connector pin arrangement


The following figure shows the connector pin arrangement of the extension module C (2A output module).

CB154(HONDA MRH-50RMAST)					
33	DOCOMA		01	DOCOMA	
34	Yn+0.0		02	Yn+1.0	
35	Yn+0.1	19	GND	03	Yn+1.1
36	Yn+0.2	20	GND	04	Yn+1.2
37	Yn+0.3	21	GND	05	Yn+1.3
38	Yn+0.4	22	GND	06	Yn+1.4
39	Yn+0.5	23	GND	07	Yn+1.5
40	Yn+0.6	24		08	Yn+1.6
41	Yn+0.7	25		09	Yn+1.7
42		26		10	
43		27		11	
44		28		12	
45		29		13	
46		30		14	
47		31		15	
48		32		16	
49	DOCOMA			17	DOCOMA
50	DOCOMA			18	DOCOMA

50 pins, male,
with a metal fitting for securing
the connector cover

8.2.5.2 2A Output Signal Connection

This subsection describes the connection of extension module C (2A output module).

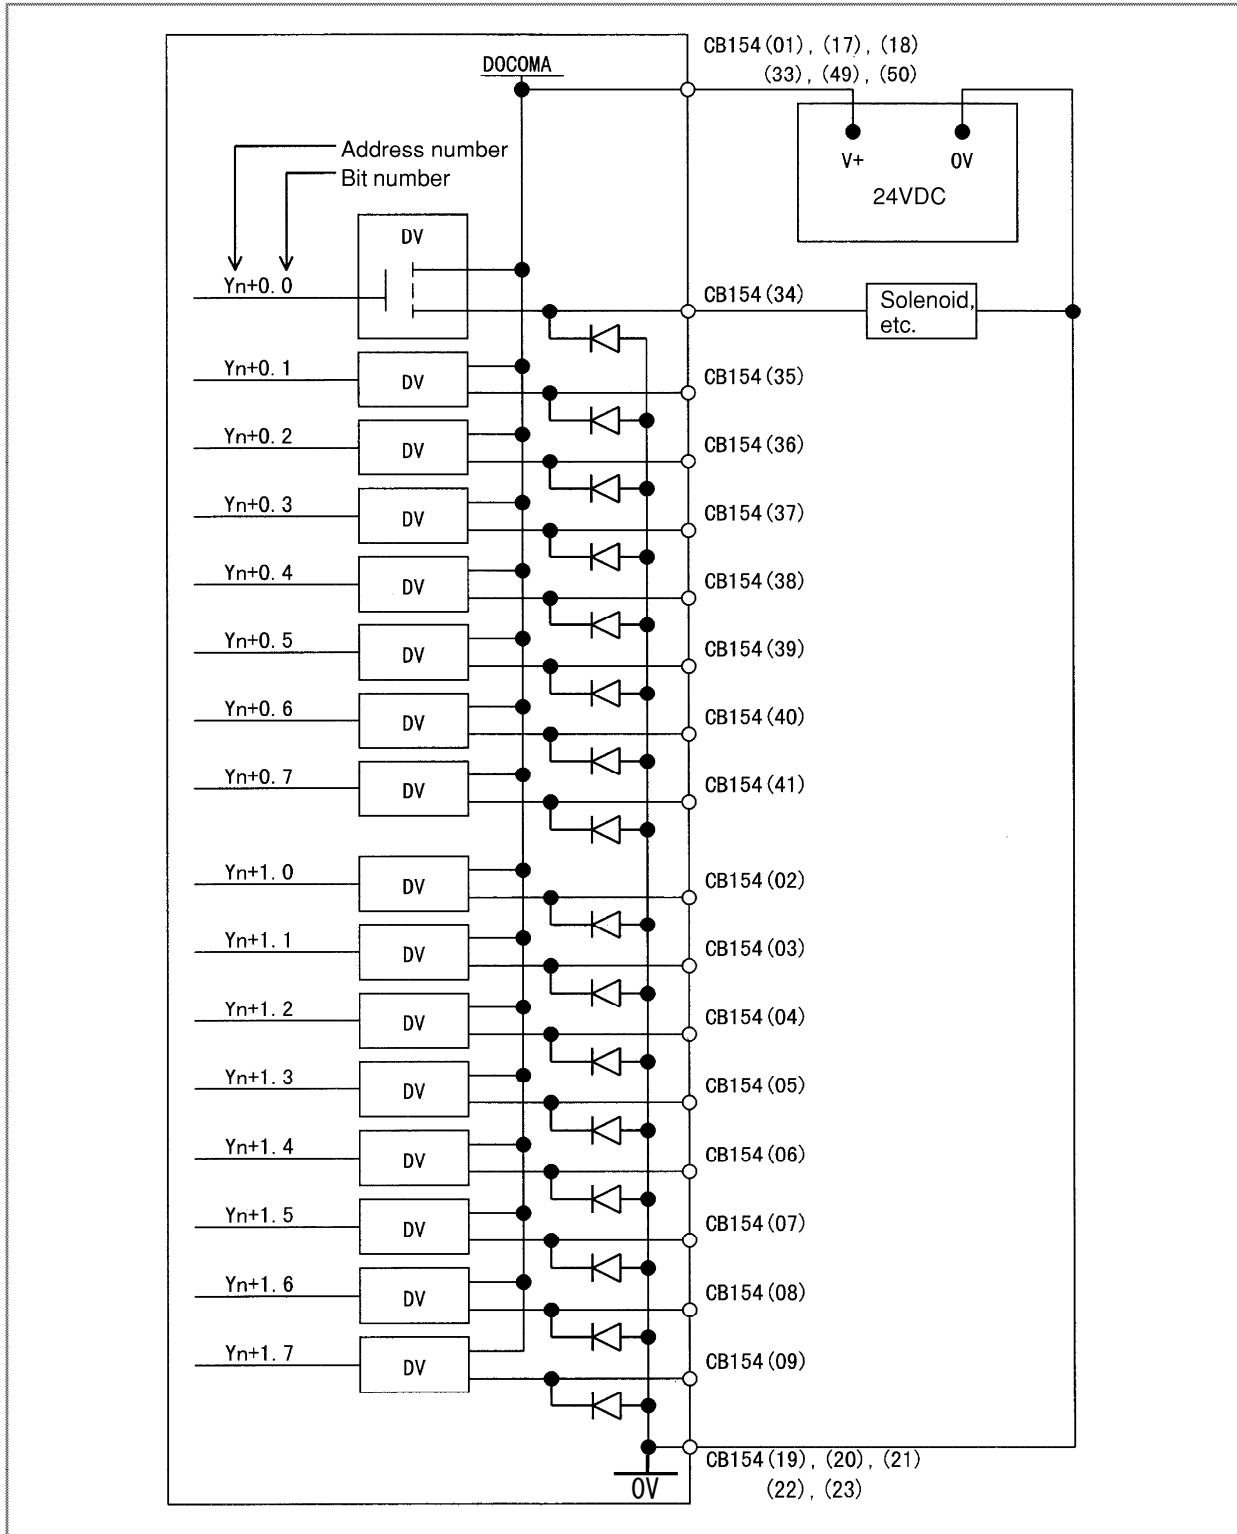

8.2.5.3 2A output signal specifications

This subsection describes the specifications of the signals used with extension module C (2A output module).

DO (output signal specifications)

Number of points	16 points (per module)
Maximum load current when ON	2 A or less per point. 12 A maximum for the entire module (DO: 16 points) (including momentary variations).
Withstand voltage	24 V +20% or less (including momentary variations)
Leakage current when OFF	100 μA or less
Delay time	The driver delay time is 120ns(MAX). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

⚠ CAUTION

If the over current is continued for a long time, 2A module might emit smoke or take fire.
It is recommend to connect a fuse about two times rating of the rated output to each output for burnout prevention.
However, the fuse can't protect the device in any case when short-circuit is occurred. Replace the module if short-circuit is occurred because the device might be broken.


Parallel DO (output signal) connection

The 2A output module does not allow parallel DO connections.

8.2.6 Connection of Extension Module D (Analog Input Module)


8.2.6.1 Analog Input Connector Pin Allocation

This subsection describes the pin allocation of extension module D (analog input module).

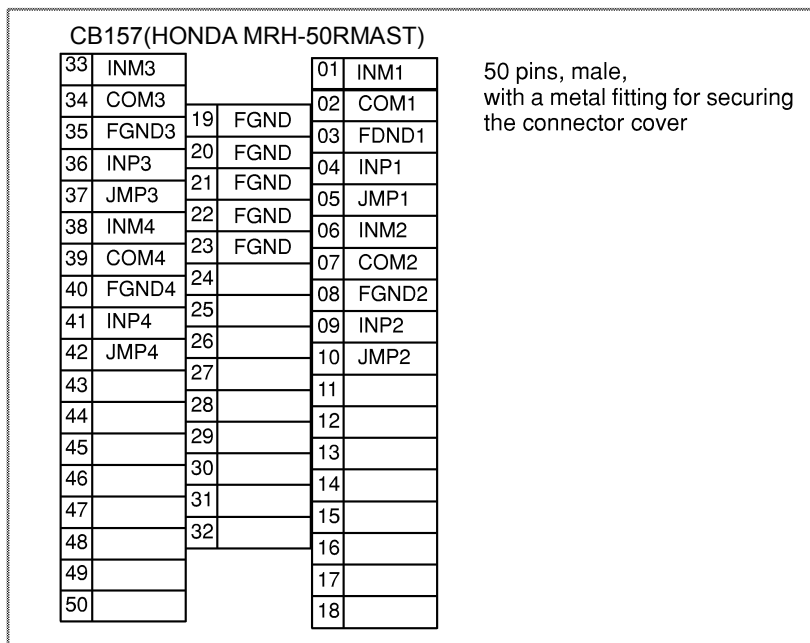

8.2.6.2 Analog Input Signal Connections

This subsection provides a connection diagram of extension module D (analog input module).

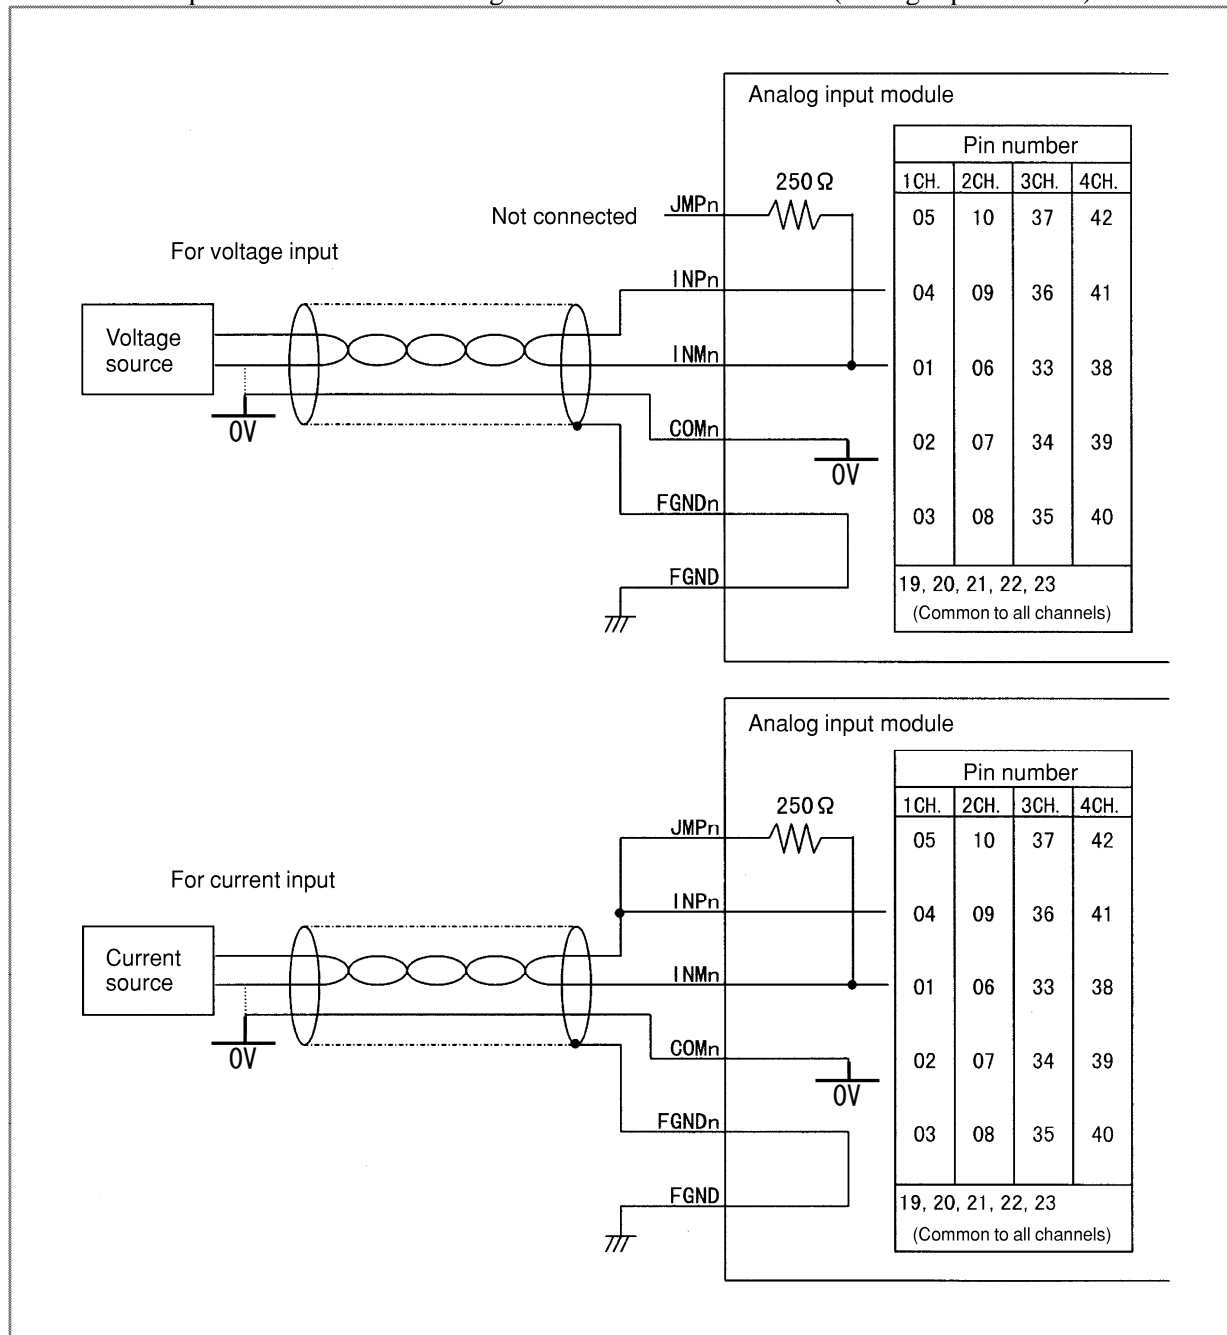

NOTE

- 1 In the diagram above, n represents each channel (n = 1, 2, 3, 4).
- 2 Current input or voltage input can be selected on a channel-by-channel basis. For current input, be sure to connect JMP_n to INP_n.
- 3 For the connection, use a shielded twisted pair.
- 4 In the diagram above, the shield of each channel is connected to FGND_n, and FGND is used for shield processing of all channels. However, the shield of a channel may be directly connected to frame ground with a cable clamp, instead of using FGND_n.

NOTE

5 If the voltage (current) source has a GND pin, as shown in the figure above, connect COMn to this pin. Otherwise, connect INMn and COMn together in the analog input module.

8.2.6.3 Analog Input Signal Specifications

This subsection describes the specifications of the input signals used with extension module D (analog input module).

Item	Specifications	Remarks												
Number of input channels (Note)	Four channels													
Analog input	DC -10 to +10 V (Input resistance: 4.7 M Ω) DC -20 to +20 mA (Input resistance: 250 Ω)	Voltage input or current input can be selected on channel-by-channel basis.												
Digital output (Note)	12 bits (binary)	Represented as two's complement												
Input/output correspondence	<table border="1"> <thead> <tr> <th>Analog input</th> <th>Digital output</th> </tr> </thead> <tbody> <tr> <td>+10V</td> <td>+2000</td> </tr> <tr> <td>+5V or +20mA</td> <td>+1000</td> </tr> <tr> <td>0V or 0mA</td> <td>0</td> </tr> <tr> <td>-5V or -20mA</td> <td>-1000</td> </tr> <tr> <td>-10V</td> <td>-2000</td> </tr> </tbody> </table>	Analog input	Digital output	+10V	+2000	+5V or +20mA	+1000	0V or 0mA	0	-5V or -20mA	-1000	-10V	-2000	
Analog input	Digital output													
+10V	+2000													
+5V or +20mA	+1000													
0V or 0mA	0													
-5V or -20mA	-1000													
-10V	-2000													
Resolution	5 mV or 20 μ A													
Overall precision	Voltage input: $\pm 0.5\%$ Current input: $\pm 1\%$	With respect to full scale												
Maximum input voltage/current	$\pm 15V/\pm 30mA$													
Minimum conversion time	[I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.													
Number of occupied input/output points (Note)	DI = 3 bytes, DO = 2 bytes													

NOTE

Extension module D (analog input module) has four input channels. The digital output section consists of a group of 12 bits within the three-byte occupied input points. This means that the channel to be used can be dynamically selected by the ladder. The channel switching DO point for channel selection is included in the two-byte occupied output points.

8.2.6.4 Channel selection and A/D conversion data

NOTE

For allocation, see Subsection 8.2.10.

(Channel selection)

With extension module D (analog input module), which of the four analog input channels is to be the target of A/D conversion must be determined with a PMC program. The DO points used for this selection are CHA and CHB (two-byte occupied output points). These are mapped as indicated below.

Address in the module	7	6	5	4	3	2	1	0
Yn	X	X	X	X	X	X	X	X
Yn+1	X	X	X	X	X	X	CHB	CHA

Yn is the first address to which the analog input module is allocated.

By writing the values indicated below to CHA and CHB, the corresponding channel is selected, and the A/D converted data of the channel and the data of the selected channel can be read as DI data. The character X indicated above represents an unused bit, so that either 1 or 0 may be written in place of X.

CHB	CHA	Channel selected
0	0	Channel 1
0	1	Channel 2
1	0	Channel 3
1	1	Channel 4

(Address)

A/D conversion data of the channel selected by the above setting is output to two bytes of the three bytes of DI (input signals) of the slot to which this module is allocated. The A/D conversion data output addresses are as shown below, depending on where extension module D (analog input module) is installed.

⚠ CAUTION

Be sure to allocate the start address of the slot as shown below, according to where the analog input module is installed:

- When connected to extension module 1 (slot 2):
Xm₂ must always be allocated at an odd-numbered address.
- When connected to extension module 2 (slot 3):
Xm₃ must always be allocated at an even-numbered address.
- When connected to extension module 3 (slot 4):
Xm₄ must always be allocated at an odd-numbered address.

- When extension module D (analog input module) is installed in extension module 1 (slot 2)

Address	7	6	5	4	3	2	1	0
Xm ₂ (odd-numbered address)	Undefined							
Xm ₂ +1(even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Xm ₂ +2(odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08

Xm₂ is the start address of slot 2.

- When extension module D (analog input module) is installed in extension module 2 (slot 3)

Address	7	6	5	4	3	2	1	0
Xm ₃ (even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Xm ₃ +1(odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08
Xm ₃ +2(even-numbered address)	Undefined							

Xm₃ is the start address of slot 3.

- When extension module D (analog input module) is installed in extension module 3 (slot 4)

Address	7	6	5	4	3	2	1	0
Xm ₄ (odd-numbered address)	Undefined							
Xm ₄ +1(even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Xm ₄ +2(odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08

Xm₄ is the start address of slot 4.

(A/D conversion data)

A/D conversion data for the selected channel is output to the above address as 12-bit data in the following format.

Address in the module	7	6	5	4	3	2	1	0
Xm	D07	D06	D05	D04	D03	D02	D01	D00
Xm+1	0	0	CHB	CHA	D11	D10	D09	D08

D00 to D11 represent 12-bit digital output data. D00 corresponds to weighting of 2^0 and D10 corresponds to that of 2^{10} .

D11 is a sign bit expressed as a two's complement. CHA and CHB represent an analog input channel. This means that when the two bytes above are read with a PMC program, the A-D converted data of the input channel represented by CHA and CHB can be read from D11 to D00.(Refer to the following table)

Digital data			Analog data		
Decimal	Hexadecimal	Binary (D11~D00)	Voltage input	Current input	
2047	7 F F h	0 1 1 1 1 1 1 1 1 1 1 1	Outside of the specification range	Outside of the specification range	
2001	7 D 1 h	0 1 1 1 1 1 0 1 0 0 0 1			
2000	7 D 0 h	0 1 1 1 1 1 0 1 0 0 0 0			10V
1999	7 C F h	0 1 1 1 1 1 0 0 1 1 1 1			9.995V
1001	3 E 9 h	0 0 1 1 1 1 1 0 1 0 0 1			5.005V
1000	3 E 8 h	0 0 1 1 1 1 1 0 1 0 0 0	5V	20mA	
999	3 E 7 h	0 0 1 1 1 1 1 0 0 1 1 1	4.995V	19.98mA	
2	0 0 2 h	0 0 0 0 0 0 0 0 0 0 1 0	10mV	40uA	
1	0 0 1 h	0 0 0 0 0 0 0 0 0 0 0 1	5mV	20uA	
0	0 0 0 h	0 0 0 0 0 0 0 0 0 0 0 0	0V	0mA	
-1	F F F h	1 1 1 1 1 1 1 1 1 1 1 1	-5mV	-20uA	
-2	F F E h	1 1 1 1 1 1 1 1 1 1 1 0	-10mV	-40uA	
-999	C 1 9 h	1 1 0 0 0 0 0 1 1 0 0 1	-4.995V	-19.98mA	
-1000	C 1 8 h	1 1 0 0 0 0 0 1 1 0 0 0	-5V	-20mA	
-1001	C 1 7 h	1 1 0 0 0 0 0 1 0 1 1 1	-5.005V	Outside of the specification range	
-1999	8 3 1 h	1 0 0 0 0 0 1 1 0 0 0 1	-9.995V		
-2000	8 3 0 h	1 0 0 0 0 0 1 1 0 0 0 0	-10V		
-2001	8 2 F h	1 0 0 0 0 0 1 0 1 1 1 1	Outside of the specification range		

NOTE
 When two-byte digital output addresses are to be referenced with a PMC program, a read must always be performed word-by-word (16 bits).

8.2.7 Manual Pulse Generator Connection


For an I/O module for connector panel, three manual pulse generators can be connected to extension module A. For the connection, see Subsection 7.4.1.

NOTE

To use extension module A having a manual pulse generator interface, connect the module next to the basic module.

8.2.8 Connection of Basic and Extension Modules

Modules can be connected in the same way, regardless of whether you are connecting the basic module to an extension module or connecting two extension modules. Connect the modules by using 34-pin flat cable connectors as shown in the figure below. Ensure that all 34 pins at one end of the cable are connected to the corresponding pins at the other end; e.g., connect the A1 pin to the pin having the same designation (A1) at the other end.

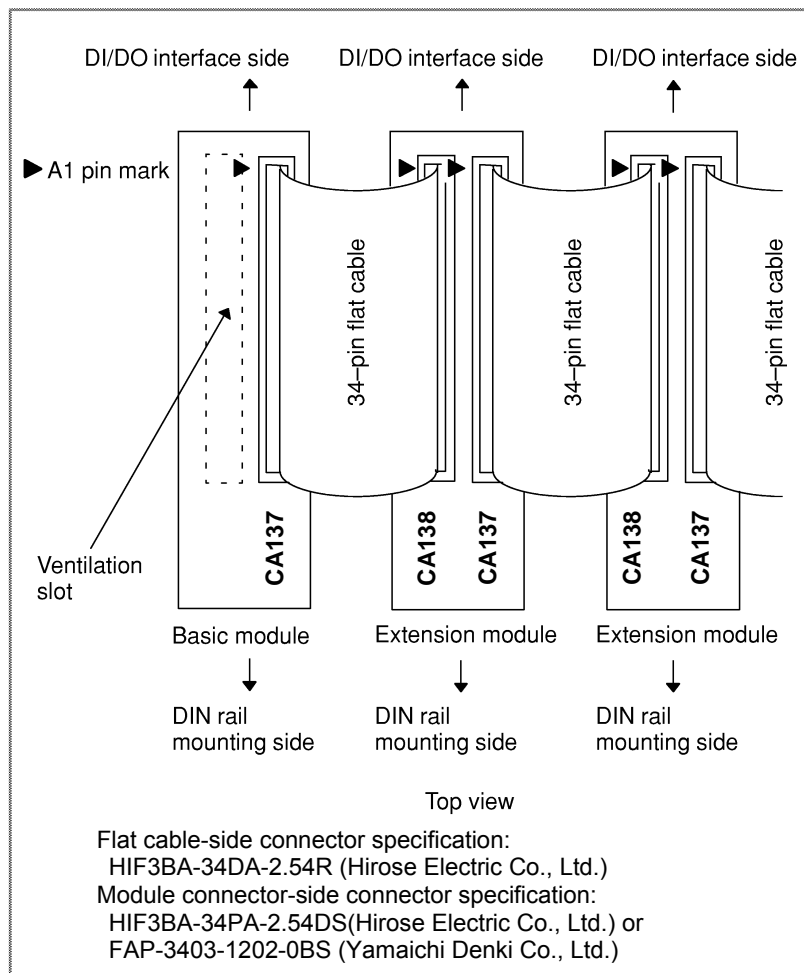

NOTE

Install the basic module and extension modules so that they are placed as shown in the figure above.


- When the modules are directly connected to the connection printed circuit board designed by the machine tool builder:
Install the extension modules to the right of the basic module on the installation plane.
- When the modules are installed using DIN rails or screws:
Install the extension modules to the left of the basic module on the installation plane.

Modules need to be spaced at least 32 mm apart, in which case a flat cable of about 20 mm in length is required. To install modules further away from each other, the cable length will be 20 mm plus the extra distance. Note that the maximum length of a flat cable is 300 mm.

To ensure adequate ventilation, install the modules in such a way that the flat cables lie on top of them. The basic module has a vent at the top (as indicated by the dotted lines in the above figure). Install the modules so that the flat cable does not block the vent.



Be sure to connect the flat cable from CA137 on a module to CA138 on the next module.

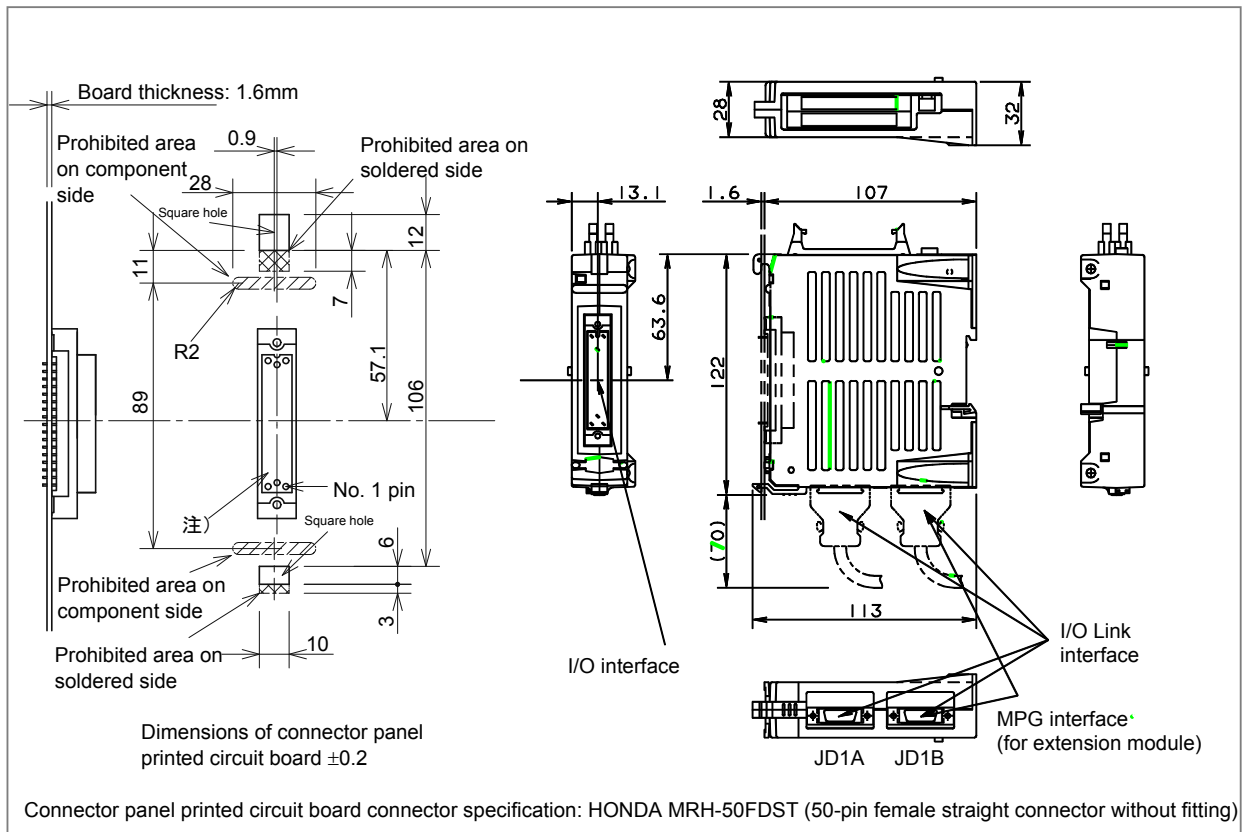
8.2.9 Module Installation



When connecting a connector panel printed circuit board directly (external module view and mounting diagram)

NOTE


- 1 A connector with a fitting (HONDA MRH-50RMAST) is used for the module-side I/O interface. Always use a connector having no fitting for the connector panel printed circuit board.
- 2 Area where pattern printing is prohibited
 - : Prohibited area on soldered side
 - : Prohibited area on component side

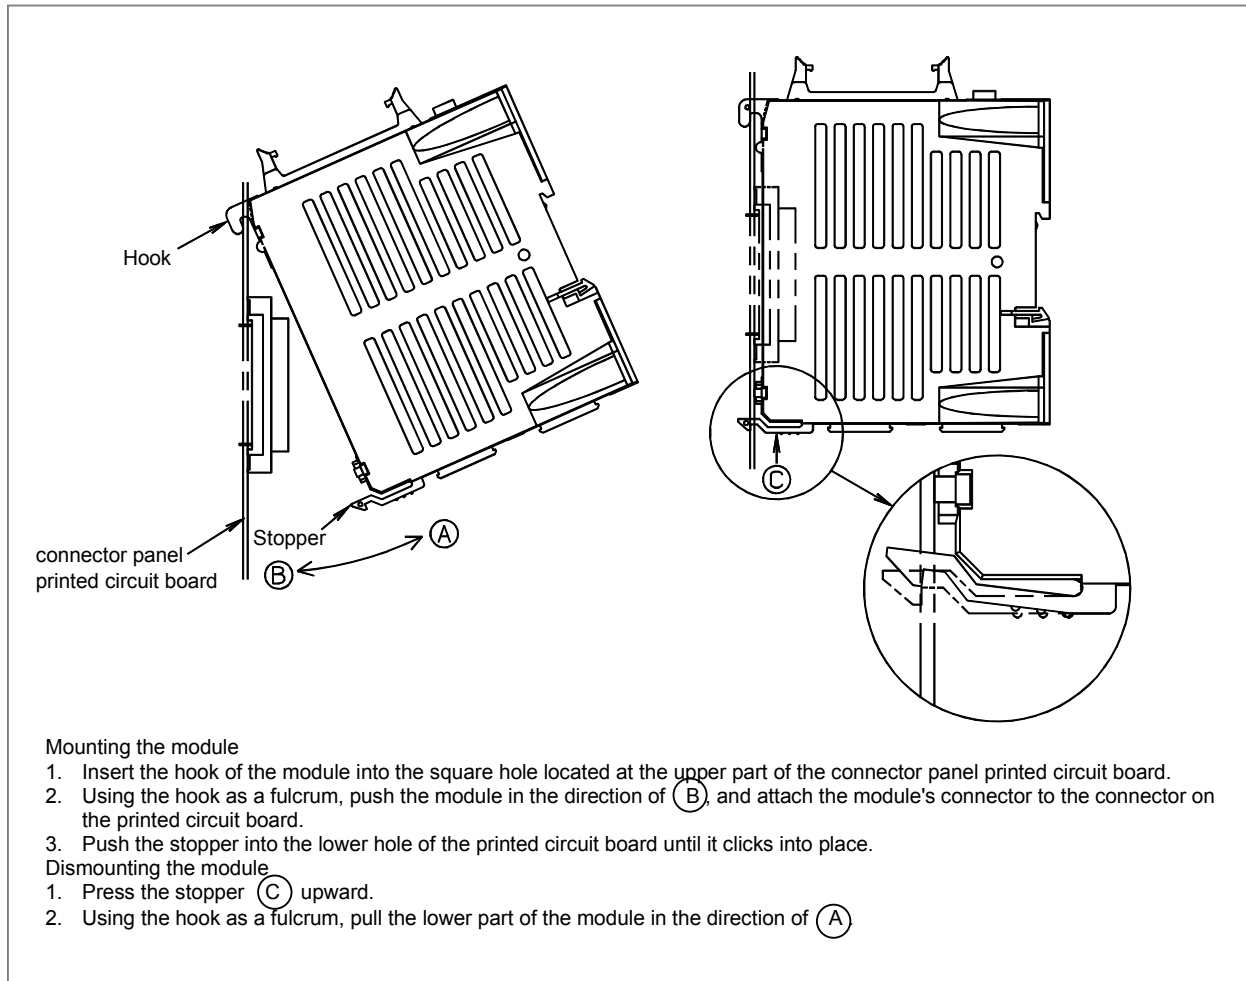

When connecting a connector panel printed circuit board directly (mounting and dismounting a module)

NOTE

When mounting and dismounting a module, hold the module by its top and bottom surfaces. Avoid applying force to the sides where there are slits.

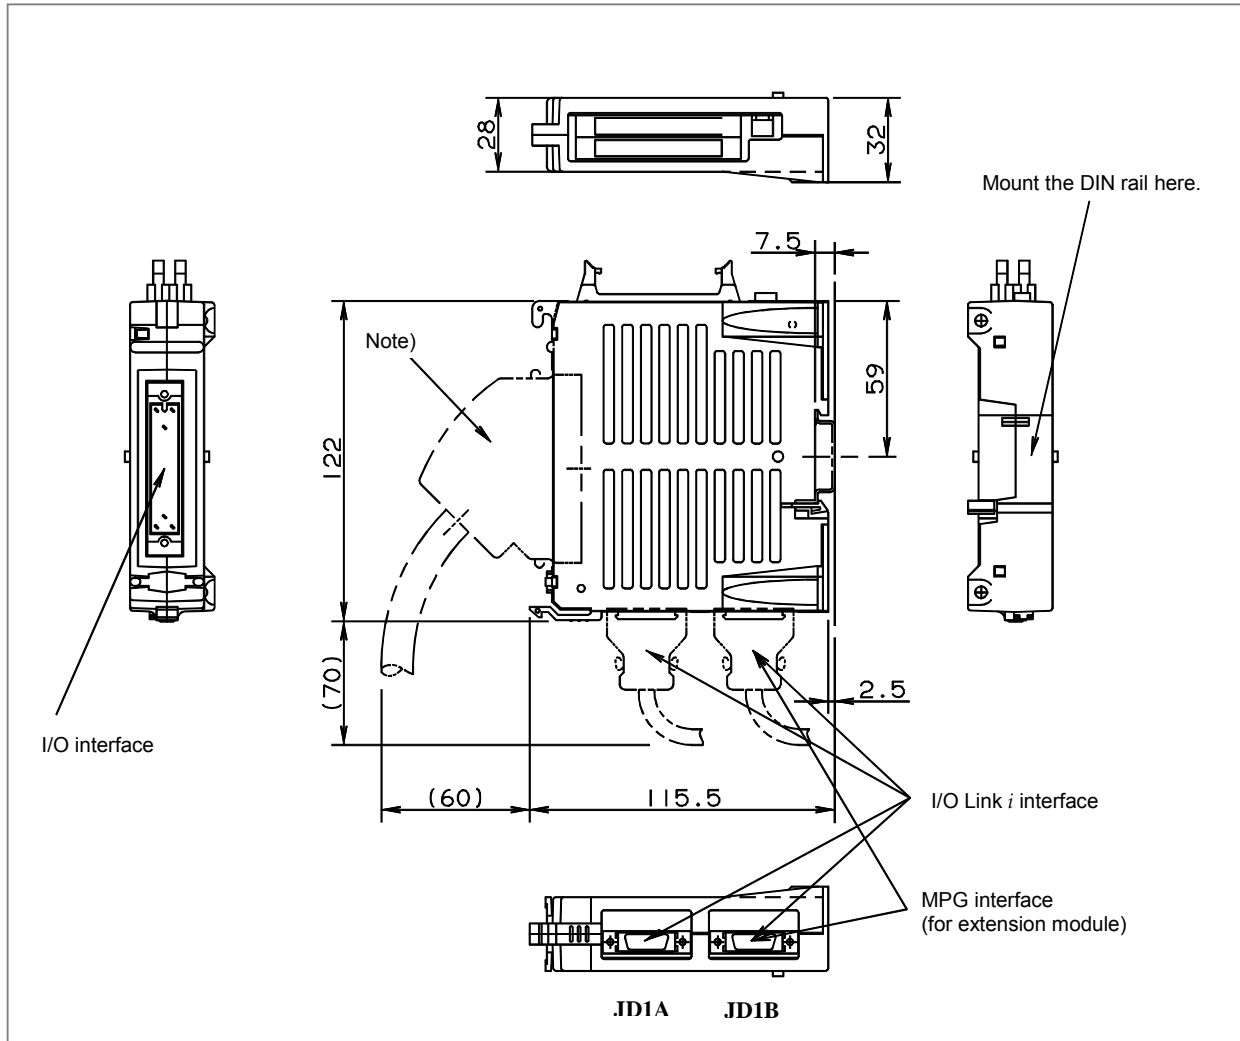

When mounting a DIN rail (external module view and mounting diagram)

NOTE

Recommended connector:


A02B-0098-K891 (including the following connector and case)

(Connector: HONDA MR-50F solder type)

(Case: HONDA MR-50NSB angled type)

Recommended wire material:

A66L-0001-0042(7/0.18, 50 pins)

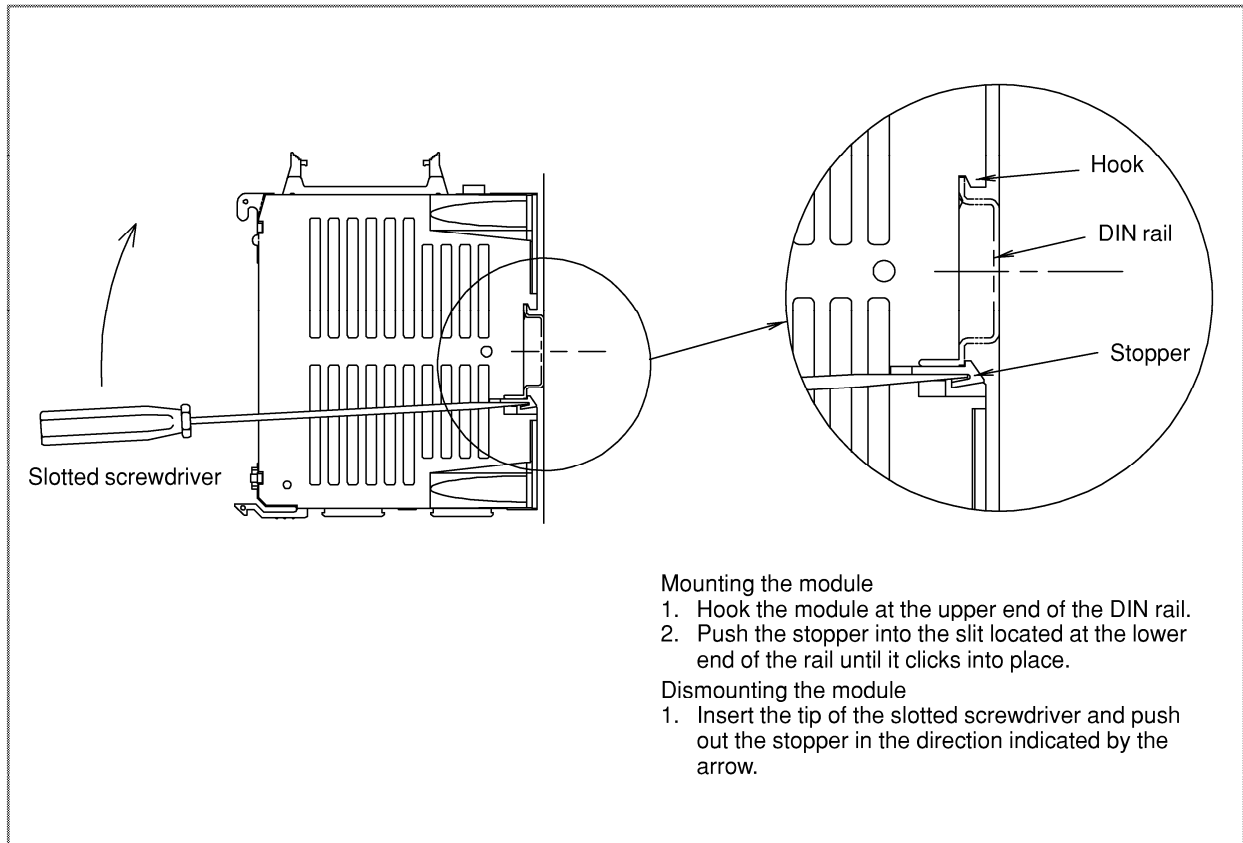


When mounting a DIN rail (mounting and dismounting a module)

NOTE

When dismounting the module, take care not to damage the stopper by applying excessive force with the screwdriver.

When mounting and dismounting a module, hold the module by its top and bottom surfaces. Avoid applying force to the sides where there are slits.

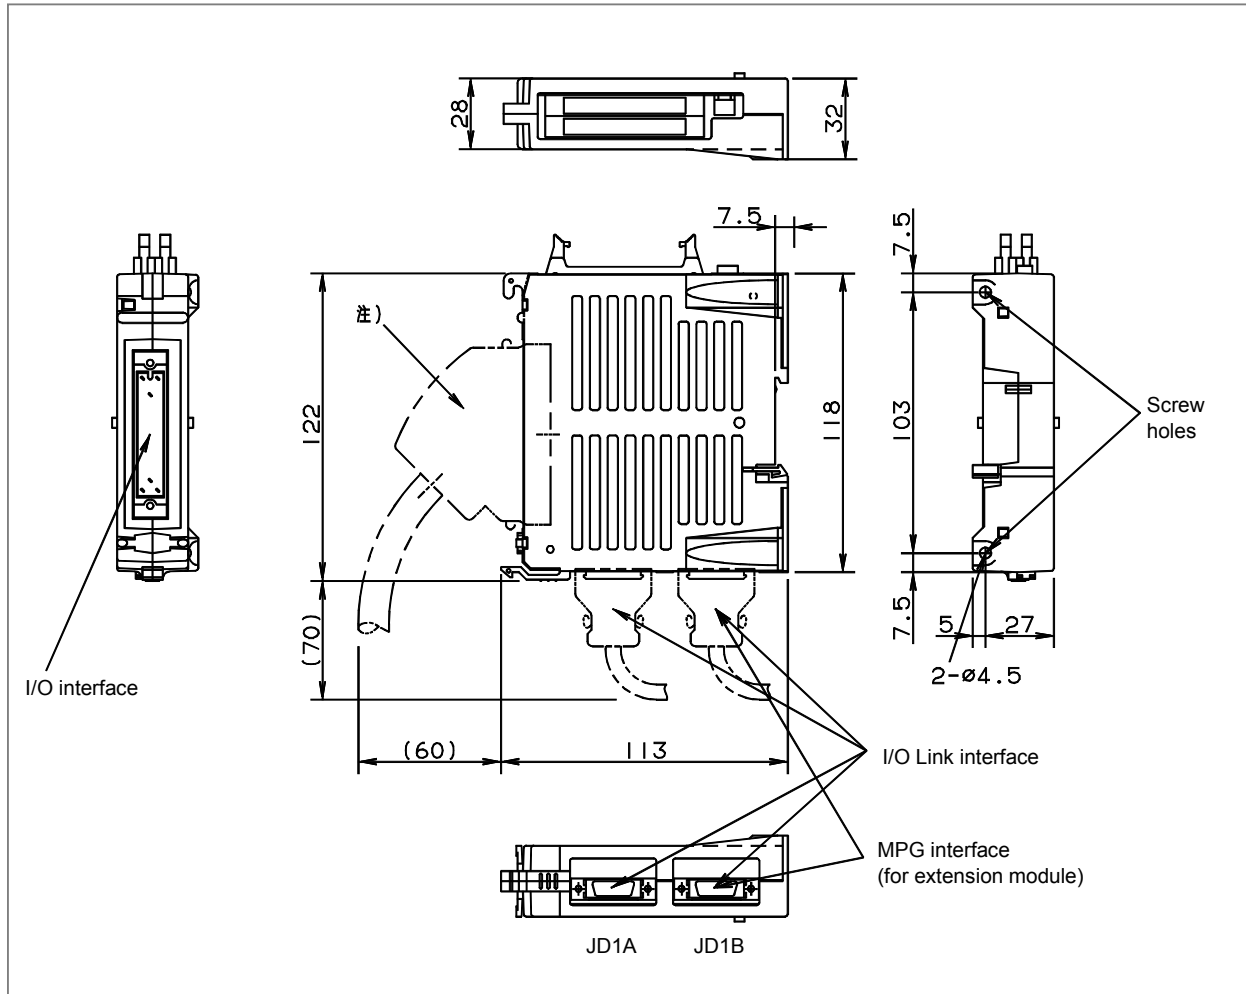

When mounting a module using screws (external module view and mounting diagram)


NOTE

Recommended connector:
 A02B-0098-K891 (including the following connector and case)
 (Connector: HONDA MR-50F solder type)
 (Case: HONDA MR-50NSB angled type)
 Recommended wire material:
 A66L-0001-0042(7/0.18, 50 pins)

8.2.10 Other Notes

Address allocation

For the I/O module for connector panel, I/O addresses are mapped as follows.

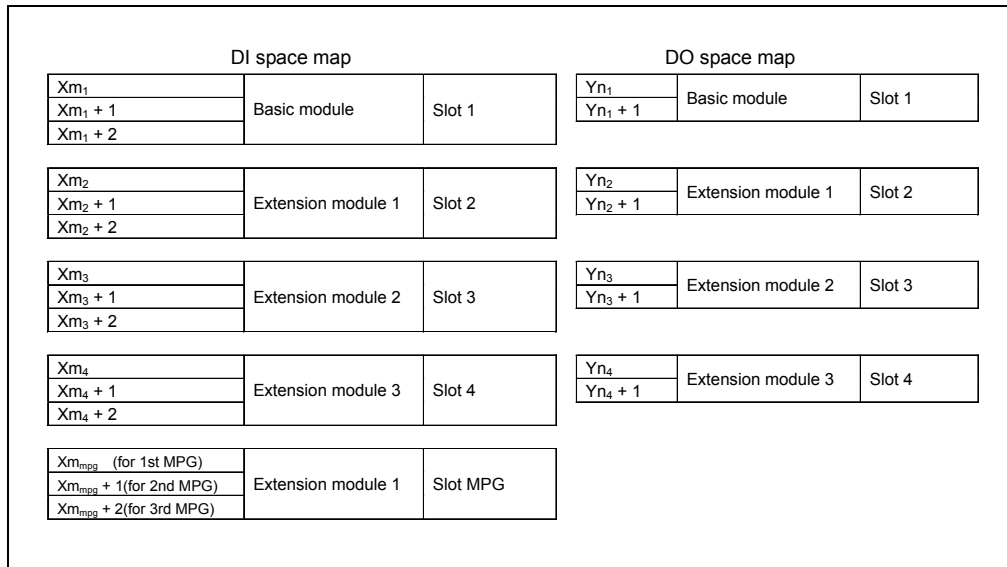

Xm₁, Xm₂, Xm₃, Xm₄, Xm_{mpg}, Yn₁, Yn₂, Yn₃, and Yn₄ indicate the start address at allocation.

Each module is treated as a slot and addresses are allocated for each module. When only the basic module is used, allocate 3-byte DI addresses and 2-byte DO addresses to slot 1. When extension modules are added, allocate 3-byte DI addresses and 2-byte DO addresses to slots 2, 3, and 4.

An I/O module for connector panel has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the DI space with the ladder because the CNC processes the manual pulse generator signals directly.

NOTE

- 1 Be sure to allocate addresses to the basic module. (DI: 3 bytes, DO: 2 bytes)
- 2 Extension module C (2A output module) has no DI signals. For connection to the I/O Link i, it is not necessary to allocate addresses to the DI section of extension module C.

DO (output signal) error detection

The DO driver of the Basic and Extension module A/B is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as the connecting of the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

A DO error such as a ground fault is detected for each signal. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Y_{n_1}	0th byte DO of Basic module
				1	Y_{n_1+1}	1st byte DO of Basic module
			2	0	Y_{n_2}	0th byte DO of Extension module1
				1	Y_{n_2+1}	1st byte DO of Extension module1
			3	0	Y_{n_3}	0th byte DO of Extension module2
				1	Y_{n_3+1}	1st byte DO of Extension module2
			4	0	Y_{n_4}	0th byte DO of Extension module3
				1	Y_{n_4+1}	1st byte DO of Extension module3

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Y_{n_1} , Y_{n_2} , Y_{n_3} and Y_{n_4} indicate the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

CAUTION


- 1 The output protection function is not for external equipment but for internal device of the module.
- 2 The output protection function can't protect the internal device in any case. If the output protection function is activated, remove the cause immediately. If the output exceed the absolute maximum rating, the output protection function may not operate normally or the internal device may break before the output protection function operates.
- 3 If the over current is continued with a condition that the output protection function can't operate normally, the internal device might emit smoke or take fire.

NOTE

This function is not supported by the extension module C (2A output module) or extension module D (analog input module).


8.2.11 Rotary Switch Setting

By changing the setting (rotary switch) for the expansion modules, connections can be made by omitting some expansion modules (slots) as shown below.

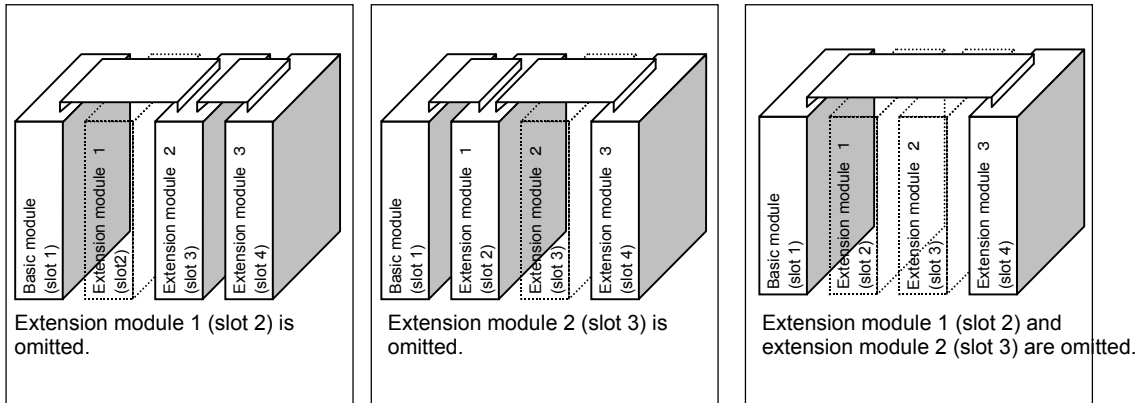


Method of setting (control and method of setting the control)

As shown below, the control (rotary switch) is located on an expansion module. To change the setting, turn the switch with a flat-bladed screwdriver with a tip width of about 2.5 mm.

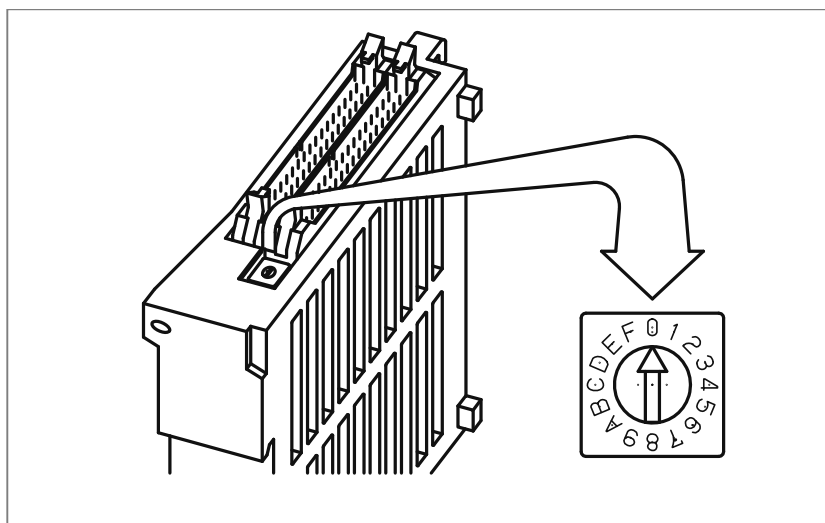

The setting position of the control (rotary switch) has the following meaning.

Setting position	Meaning of setting
0	This is the standard setting. The rotary switch is factory-set to this position. This setting is used when no expansion module is omitted.
1	Set the rotary switch on an expansion module to this position when the preceding expansion module is omitted.
2	Set the rotary switch on an expansion module to this position when the preceding two expansion modules are omitted.
3 to F	This setting is prohibited.

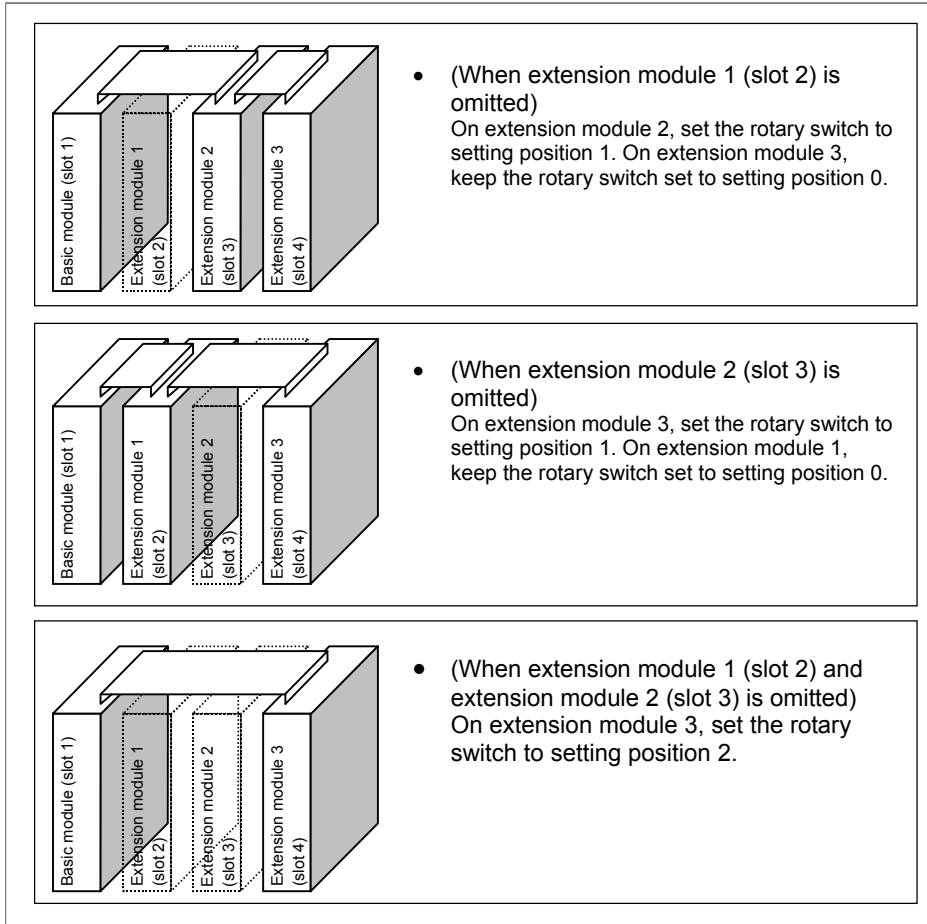
**NOTE**

Extension module A is fitted with an additional rotary switch as other types of modules are modified. However, extension module A is always mounted at the location of extension module 1, so that its factory setting need not be changed.

8.2.12 Connection of the Grounding Terminal of the Module

Connect the 0V line in the basic module to the cabinet's metal plate that is connected to ground or signal ground bar nearby via the protective ground terminal. About Multipoint grounding or Single-point grounding, refer to Item 3.4.1

Use fasten terminal for series 250 as cable terminal.

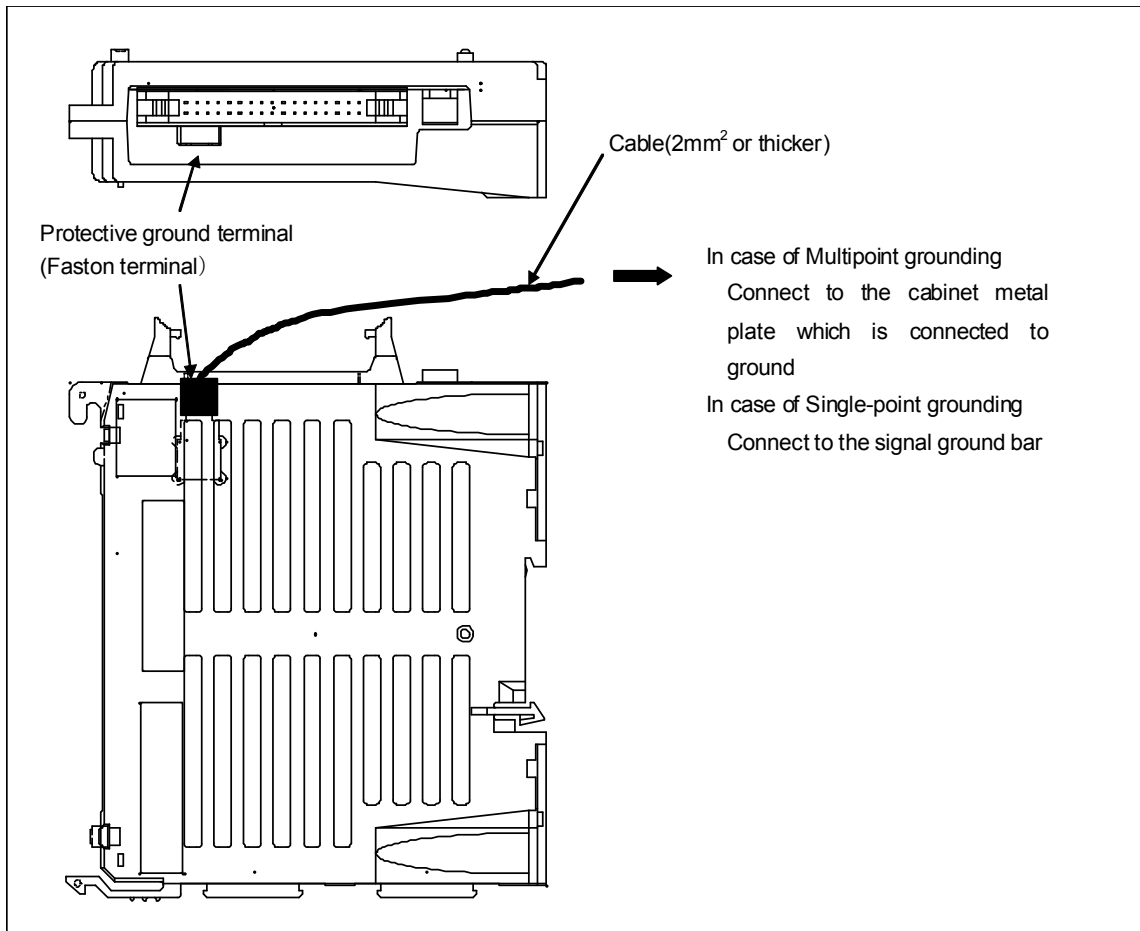


8.2.13 Terminal Conversion Adapter


TERMINAL CONVERSION ADAPTER converts method of cable connection of I/O MODULE FOR CONNECTOR PANEL to the terminal block connection from the connector connection.

TERMINAL CONVERSION ADAPTER has TA1 for Basic module and Extension module A, B, and TA2 for Extension module C, and TA3 for Extension module D, and has the following features:

- LED for state indication of +24V power supply is provided. (TA1)
- LED for state indication is provided for each I/O signal. (TA1, TA2)
- Since the terminal block for distribute signals and PCB for connector panel is not required, space saving is possible.
- Wiring time can be reduced compared to the screw type terminal block, because the push-in type terminal block is used.
- Possible to replace the I/O MODULE FOR CONNECTOR PANEL without removing wire.
- Even if user requests the terminal block connection, it is possible to use the I/O MODULE FOR CONNECTOR PANEL which space-saving.

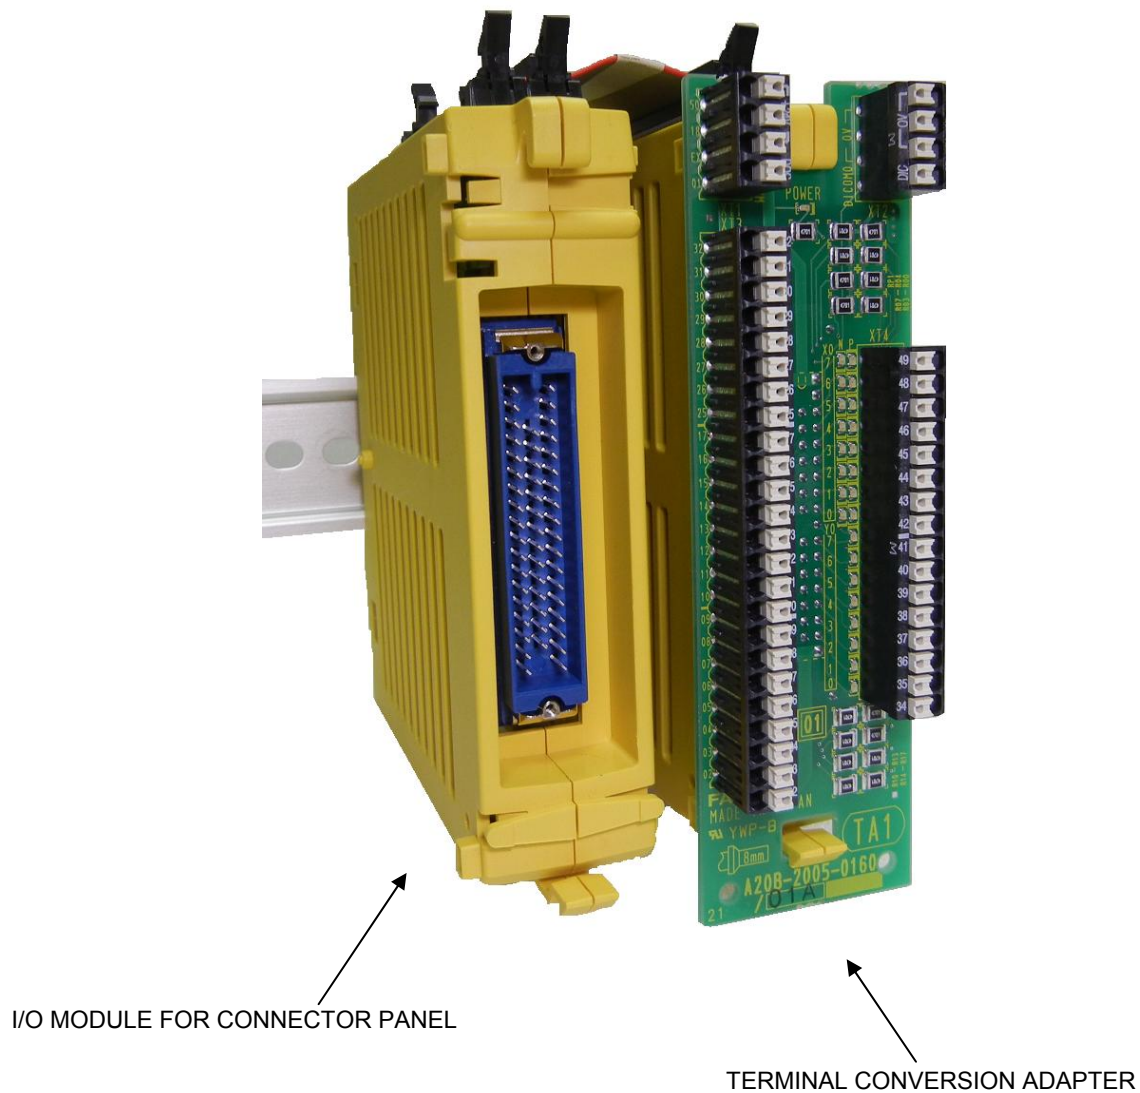


8.2.13.1 Connection diagram

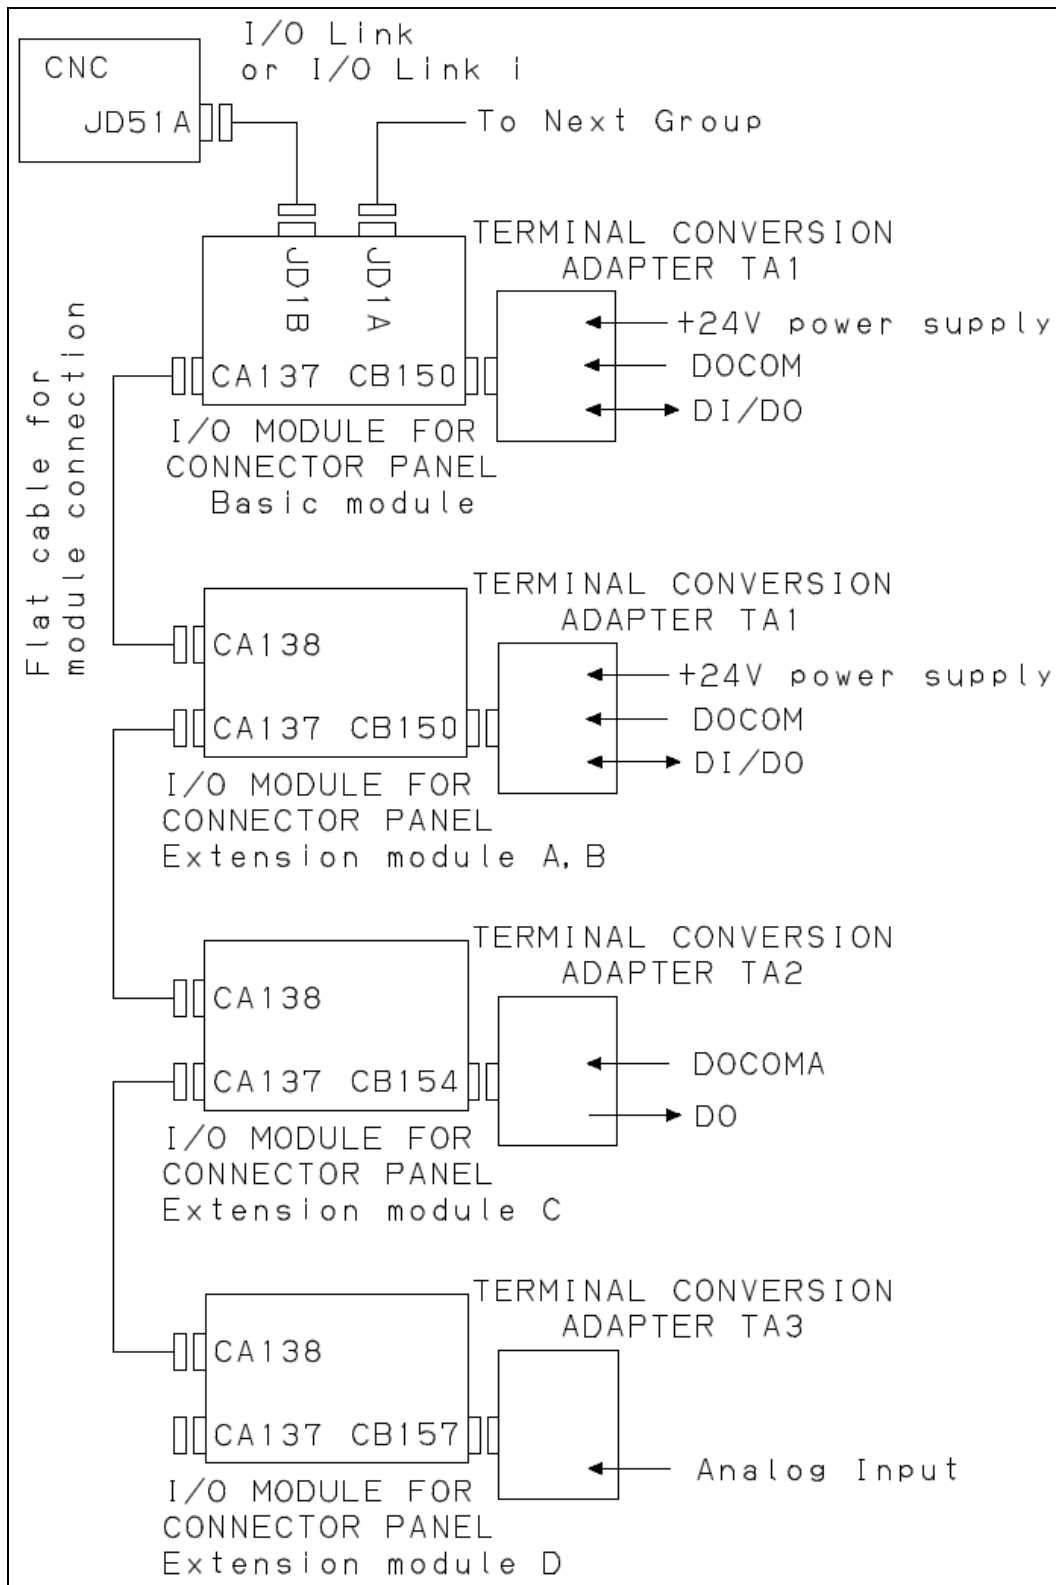

8.2.13.2 Component names


TERMINAL CONVERSION ADAPTER TA1

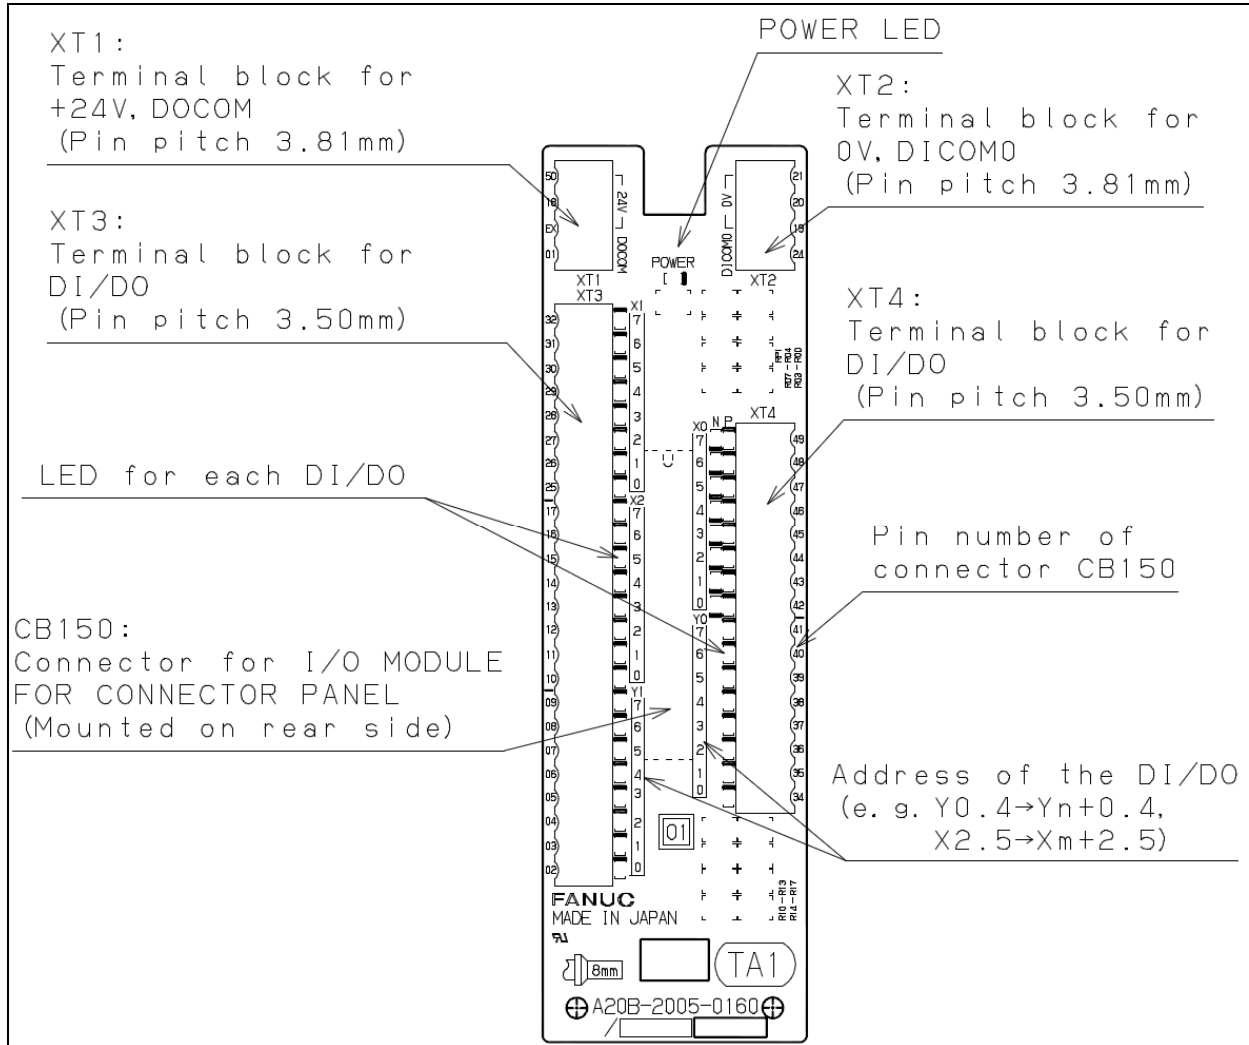

LED indication

Item	Function
Power LED	Lights when the +24V power supply is turned on.
LED for Xm+0.0 to Xm+0.7	Xm+0.0 to Xm+0.7 are DI that common voltage can be selected. If DICOM0 is connected to 0V, LED of P column indicate the state of Xm+0.0 to Xm+0.7. If DICOM0 is connected to 24V, LED of N column indicate the state of Xm+0.0 to Xm+0.7. When DI is ON, corresponding LED will light.
LED for other DI/DO	When DI/DO is ON, corresponding LED will light.


TERMINAL CONVERSION ADAPTER TA2

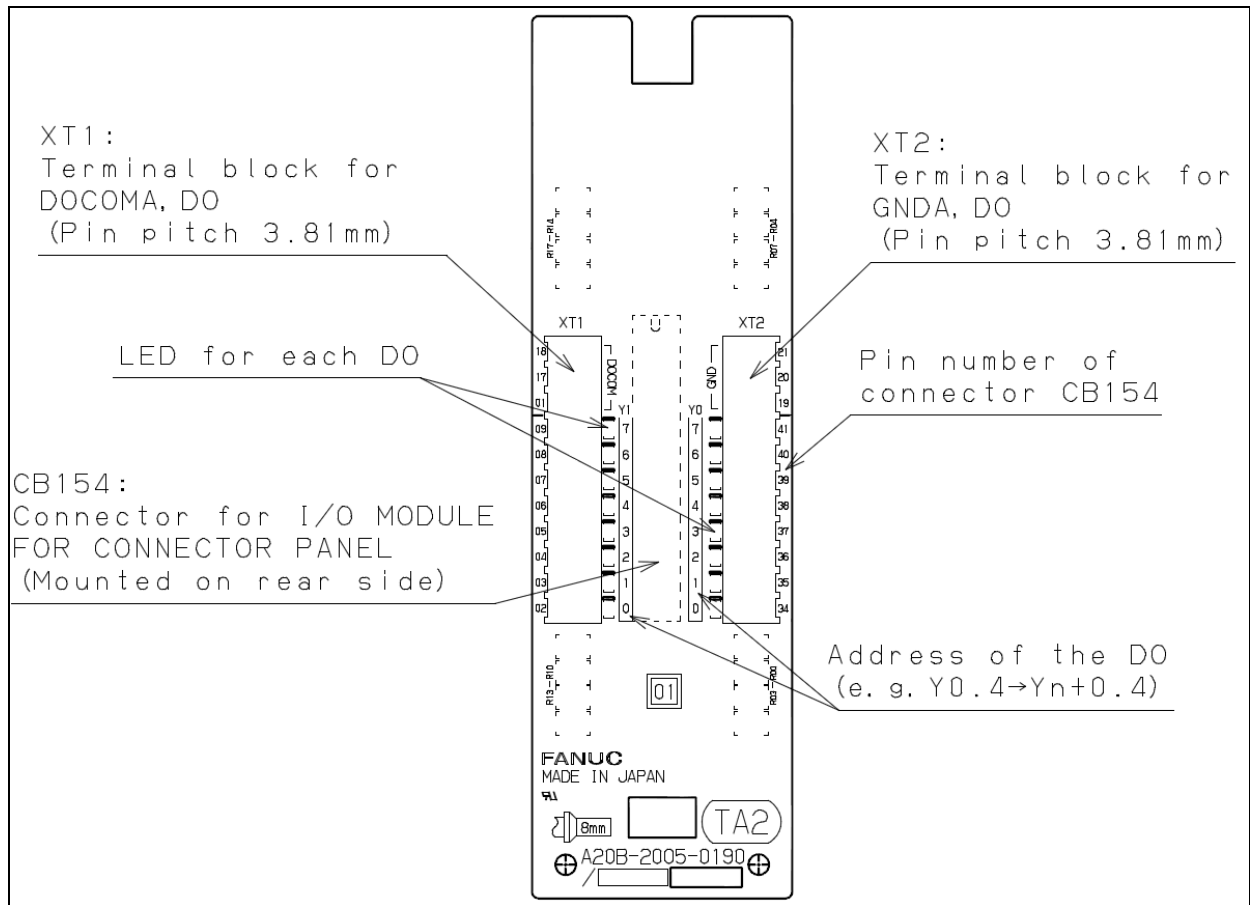

LED indication


Item	Function
LED for each DO	When DO is ON, corresponding LED will light.

TERMINAL CONVERSION ADAPTER TA3

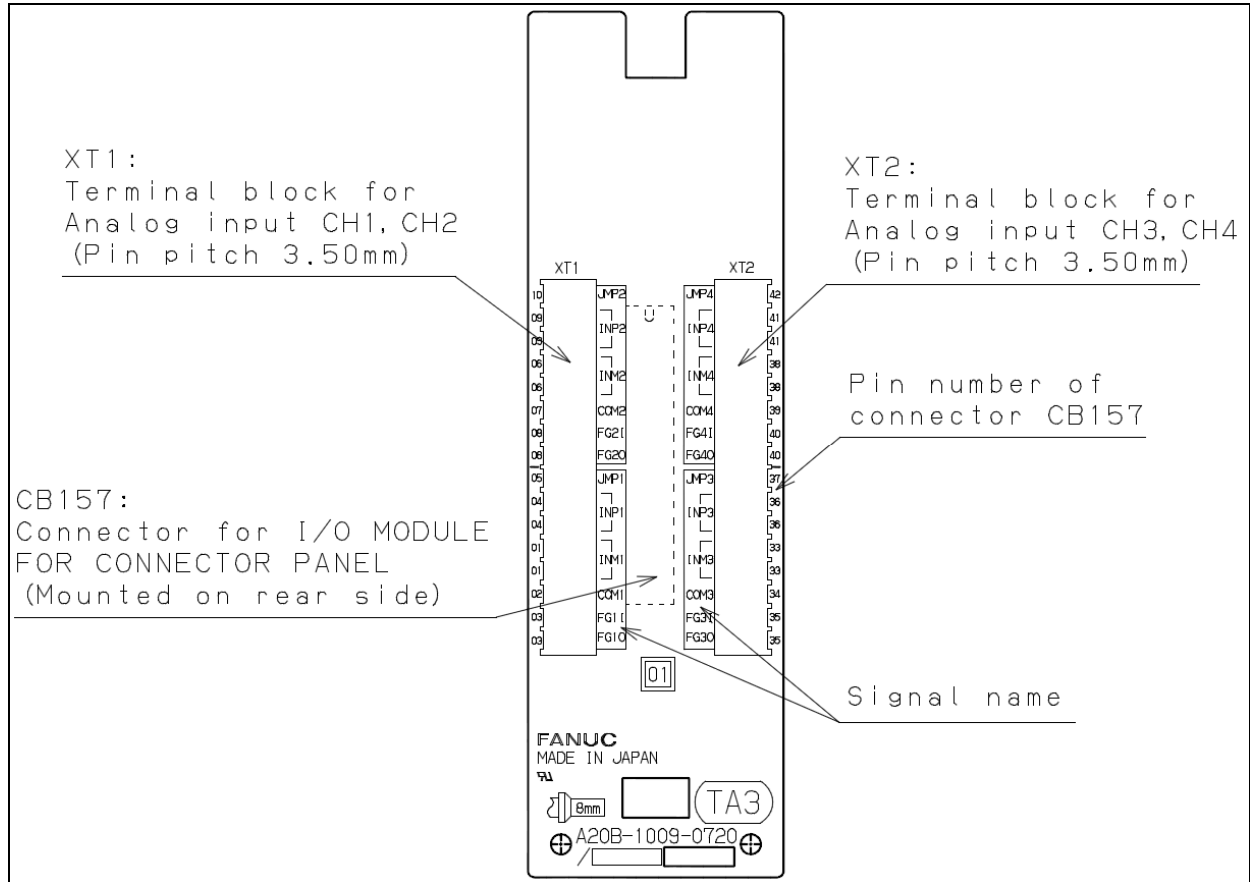

8.2.13.3 External view and dimensions

Dimensions when connect to the I/O MODULE FOR CONNECTOR PANEL is as follows.

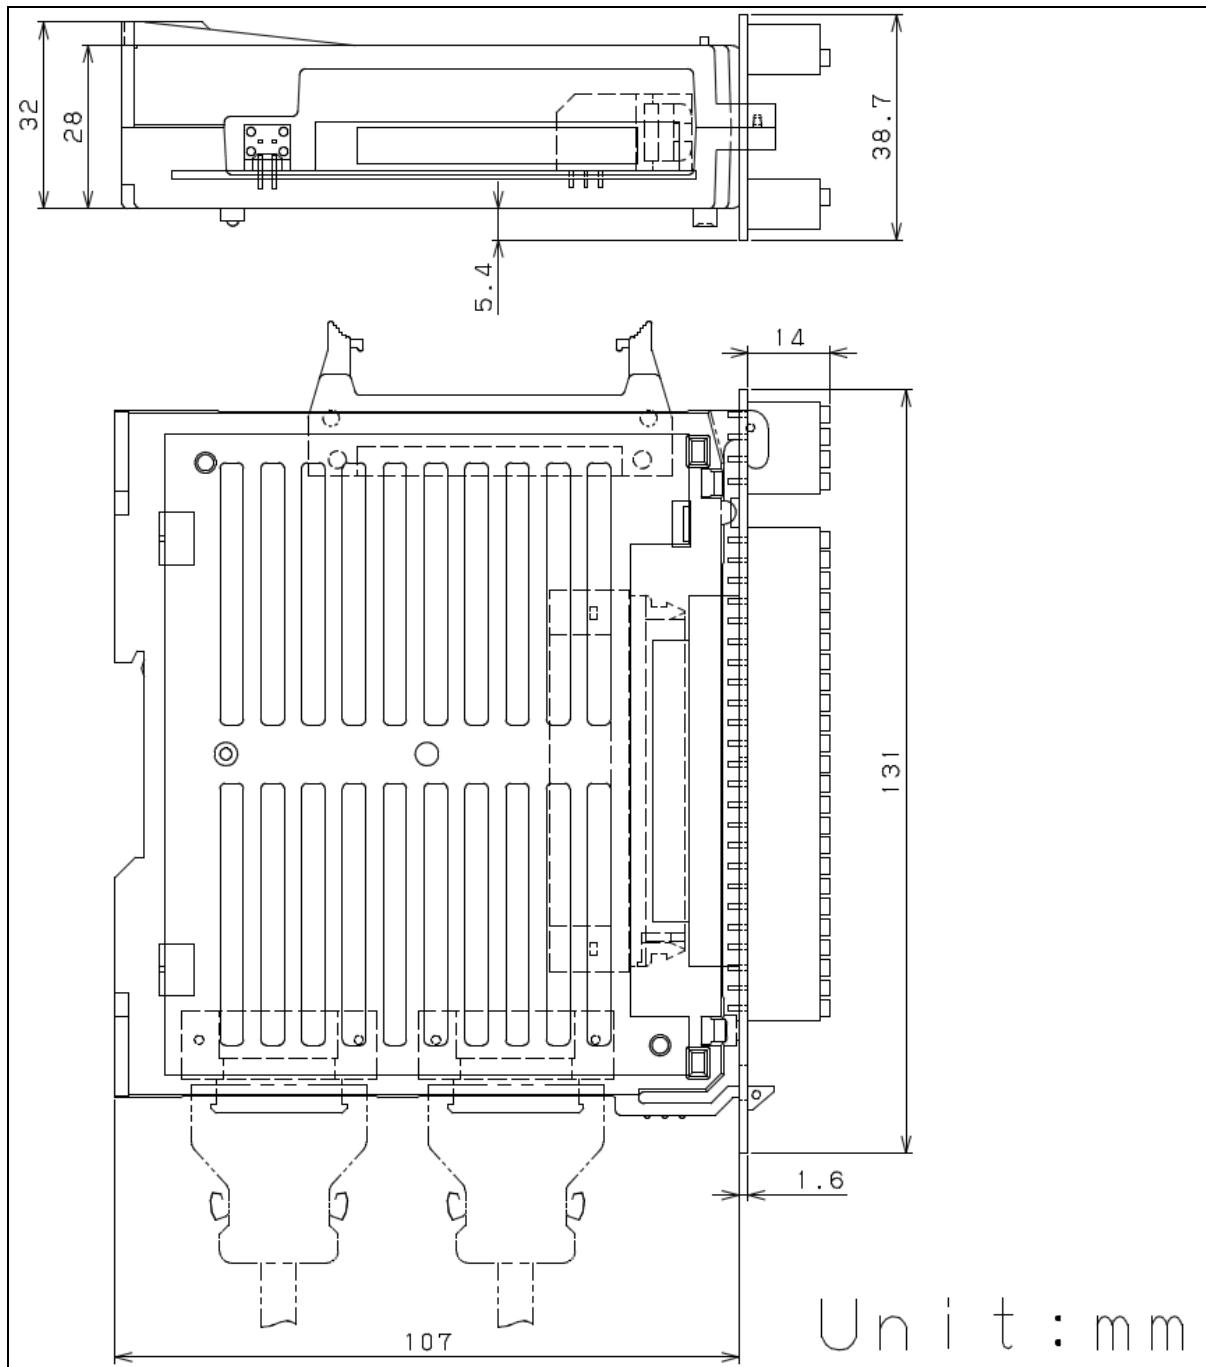


NOTE

The width of the adapter is wider than the width of I/O MODULE FOR CONNECTOR PANEL.

If the adapter is used, cable length of Flat cable for module connection needs 25mm or more.

8.2.13.4 Installation

Method of install to I/O MODULE FOR CONNECTOR PANEL is as follows.

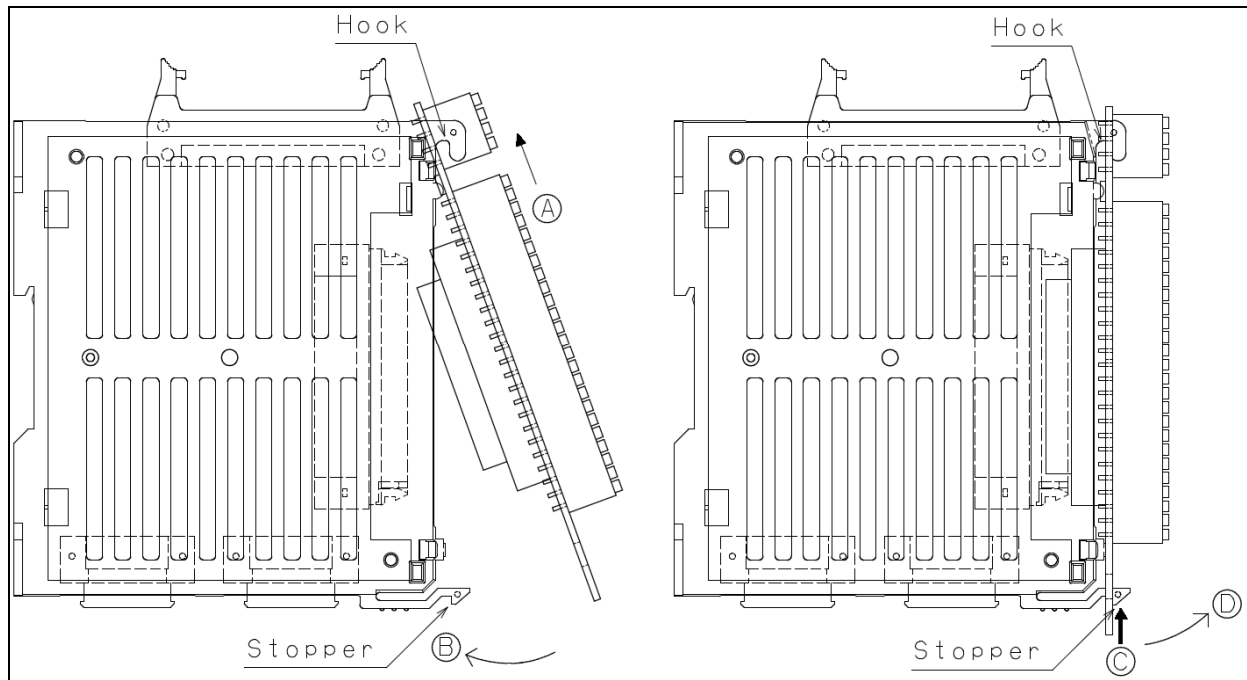

Mounting the ADAPTER

1. As "A", Hook the hollow of TERMINAL CONVERSION ADAPTER to the hook of I/O MODULE FOR CONNECTOR PANEL.
2. Using the hook as fulcrum, push the ADAPTER in the direction of "B", and attach the connector on the ADAPTER to the connector on the I/O MODULE.
3. Push the ADAPTER until it clicks into place.

Dismounting the ADAPTER

1. Press the stopper "C" upward.
2. Using the hook as a fulcrum, pull the lower part of the ADAPTER in the direction of "D".


NOTE

Leads of the terminal block are exposed.
Be careful to avoid injury.

8.2.13.5 Cable connection to the terminal block

The wire that cross-sectional area is from 0.3mm²(AWG22) to 0.75mm²(AWG18) can be connected to the terminal block of the ADAPTER.

Ferrules that have the size of following are suitable for connect to the terminal block of the ADAPTER.

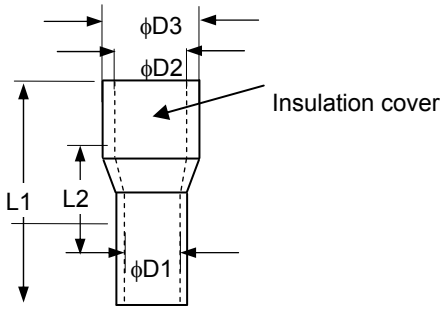Electric wire size		 <p style="text-align: center;">The dimensions indicated below are based on the products of Weidmuller Co.,Ltd.</p>					
Cross sectional area of electric wire (mm ²)	AWG	Electric wire sheath stripped length (mm)	Overall length L1(mm)	Length of metallic part L2(mm)	Inner diameter of conductor D1(mm)	Inner diameter of sheath D2(mm)	Outer diameter of sheath D3(mm)
0.3	22	10	14	8	0.8	2	2.5
0.5	20	10	14	8	1	2.6	3.1
0.75	18	10	14	8	1.2	2.8	3.3

NOTE

- Use a ferrule terminal from the viewpoint of long-term reliability.
- Use a ferrule terminal which length of metallic part L2 is 8mm.
- Pin pitch of the terminal block is as follows.
Use a ferrule terminal which outer diameter of sheath D3 is smaller than pin pitch


ADAPTER	Terminal block	Pin pitch
TA1	XT1, XT2	3.81mm
	XT3, XT4	3.50mm
TA2	XT1, XT2	3.81mm
TA3	XT1, XT2	3.50mm

Connect cable

Insert the cable with ferrule into the terminal block.

Disconnect cable

While pushing the button at the side of the terminal insertion hole, remove the cable.

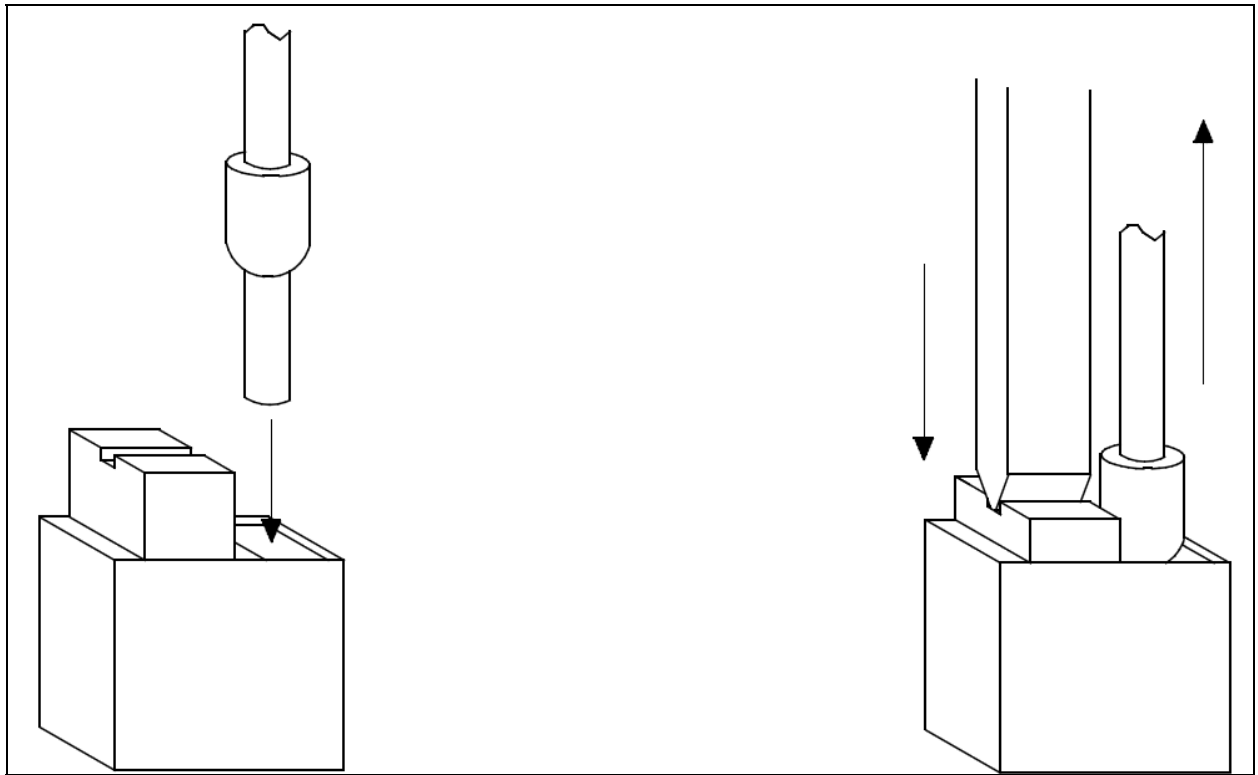

8.2.13.6 Connection

- Connection of TERMINAL CONVERSION ADAPTER TA1

TERMINAL CONVERSION ADAPTER TA1 distributes the signals of the connector CB150 of I/O MODULE FOR CONNECTOR PANEL Basic module and Extension module A,B to the terminal block XT1, XT2, XT3 and XT4

Pin number of the terminal block XT1, XT2, XT3 and XT4 is corresponding to the pin number of the connector CB150. (NOTE)

XT1

50	+24V
18	+24V
EX	+24V
01	DOCOM

XT2

21	0V
20	0V
19	0V
24	DICOM0

XT3

32	Xm+1.7
31	Xm+1.6
30	Xm+1.5
29	Xm+1.4
28	Xm+1.3
27	Xm+1.2
26	Xm+1.1
25	Xm+1.0
17	Xm+2.7
16	Xm+2.6
15	Xm+2.5
14	Xm+2.4
13	Xm+2.3
12	Xm+2.2
11	Xm+2.1
10	Xm+2.0
09	Yn+1.7
08	Yn+1.6
07	Yn+1.5
06	Yn+1.4
05	Yn+1.3
04	Yn+1.2
03	Yn+1.1
02	Yn+1.0

XT4

49	Xm+0.7
48	Xm+0.6
47	Xm+0.5
46	Xm+0.4
45	Xm+0.3
44	Xm+0.2
43	Xm+0.1
42	Xm+0.0
41	Yn+0.7
40	Yn+0.6
39	Yn+0.5
38	Yn+0.4
37	Yn+0.3
36	Yn+0.2
35	Yn+0.1
34	Yn+0.0

NOTE


- 24V pin is assigned at two-terminals (18pin and 50pin) in the connector CB150, but assigned at three-terminals (18pin, 50pin and EXpin) in the terminal block XT1.
18pin, 50pin and EXpin of the terminal block XT1 are connected to 18pin and 50pin of the connector CB150 in TERMINAL CONVERSION ADAPTER TA1.
- DOCOM pin is assigned at two-terminals (01pin and 33pin) in the connector CB150, but assigned at one-terminal (01pin) in the terminal block XT1.
01pin of the terminal block XT1 is connected to 01pin and 33pin of the connector CB150 in TERMINAL CONVERSION ADAPTER TA1.
- 0V pin is assigned at five-terminals (19-23pin) in the connector CB150, but assigned at three-terminal (19-21pin) in the terminal block XT2.
19-21pin of the terminal block XT2 are connected to 19-23pin of the connector CB150 in TERMINAL CONVERSION ADAPTER TA1.

NOTE

- As shown in the following figure, it is possible to branch external 24V to I/O MODULE FOR CONNECTOR PANEL Basic module or Extension module A, B. (It is not possible to branch to Extension module C, D. Possible branch number is up to one, cannot branch two or more.)
In addition, it is also possible to take out 24V for DOCOM from EX pin.

Sum of the current consumed in the I/O MODULE FOR CONNECTOR PANEL, and consumed in the branch-destination module, and consumed as DOCOM, must be supplied from external power supply. To connect to external power supply, please use wire that can tolerate the above current.

0V that is connected to terminal block XT2 is same as 24V.

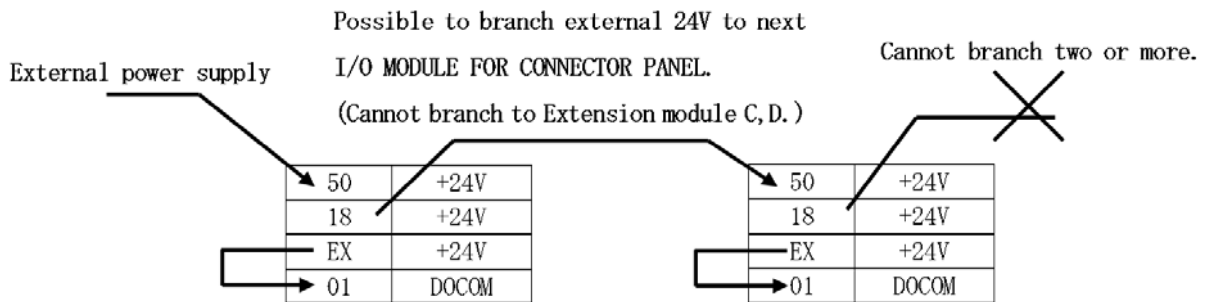

- Connection of TERMINAL CONVERSION ADAPTER TA2

TERMINAL CONVERSION ADAPTER TA2 distributes the signals of the connector CB154 of I/O MODULE FOR CONNECTOR PANEL Extension module C to the terminal block XT1, XT2.

Pin number of the terminal block XT1, XT2 is corresponding to the pin number of the connector CB154. (NOTE)

XT1		XT2	
18	DOCOMA	21	GNDA
17	DOCOMA	20	GNDA
01	DOCOMA	19	GNDA
09	Yn+1.7	41	Yn+0.7
08	Yn+1.6	40	Yn+0.6
07	Yn+1.5	39	Yn+0.5
06	Yn+1.4	38	Yn+0.4
05	Yn+1.3	37	Yn+0.3
04	Yn+1.2	36	Yn+0.2
03	Yn+1.1	35	Yn+0.1
02	Yn+1.0	34	Yn+0.0

NOTE

- DOCOMA pin is assigned at six-terminals (01,17,18,33,49,50pin) in the connector CB154, but assigned at three-terminal (01,17,18pin) in the terminal block XT1.
01,17,18pin of the terminal block XT1 is connected to 01,17,18,33,49,50pin of the connector CB154 in TERMINAL CONVERSION ADAPTER TA2.
- GNDA pin is assigned at five-terminals (19-23pin) in the connector CB154, but assigned at three-terminal (19-21pin) in the terminal block XT2.
19-21pin of the terminal block XT2 are connected to 19-23pin of the connector CB154 in TERMINAL CONVERSION ADAPTER TA2.
- Be sure to connect all DOCOMA pins.
Also be sure to connect all GNDA pins.


• Connction of TERMINAL CONVERSION ADAPTER TA3

TERMINAL CONVERSION ADAPTER TA3 distributes the signals of the connector CB157 of I/O MODULE FOR CONNECTOR PANEL Extension module D to the terminal block XT1, XT2.

Pin number of the terminal block XT1, XT2 is corresponding to the pin number of the connector CB157. (NOTE)

XT1		XT2	
10	JMP2	42	JMP4
09	INP2	41	INP4
09	INP2	41	INP4
06	INM2	38	INM4
06	INM2	38	INM4
07	COM2	39	COM4
08	FG2I	40	FG4I
08	FG2O	40	FG4O
05	JMP1	37	JMP3
04	INP1	36	INP3
04	INP1	36	INP3
01	INM1	33	INM3
01	INM1	33	INM3
02	COM1	34	COM3
03	FG1I	35	FG3I
03	FG1O	35	FG3O

Example of wiring (n=1,2,3,4)

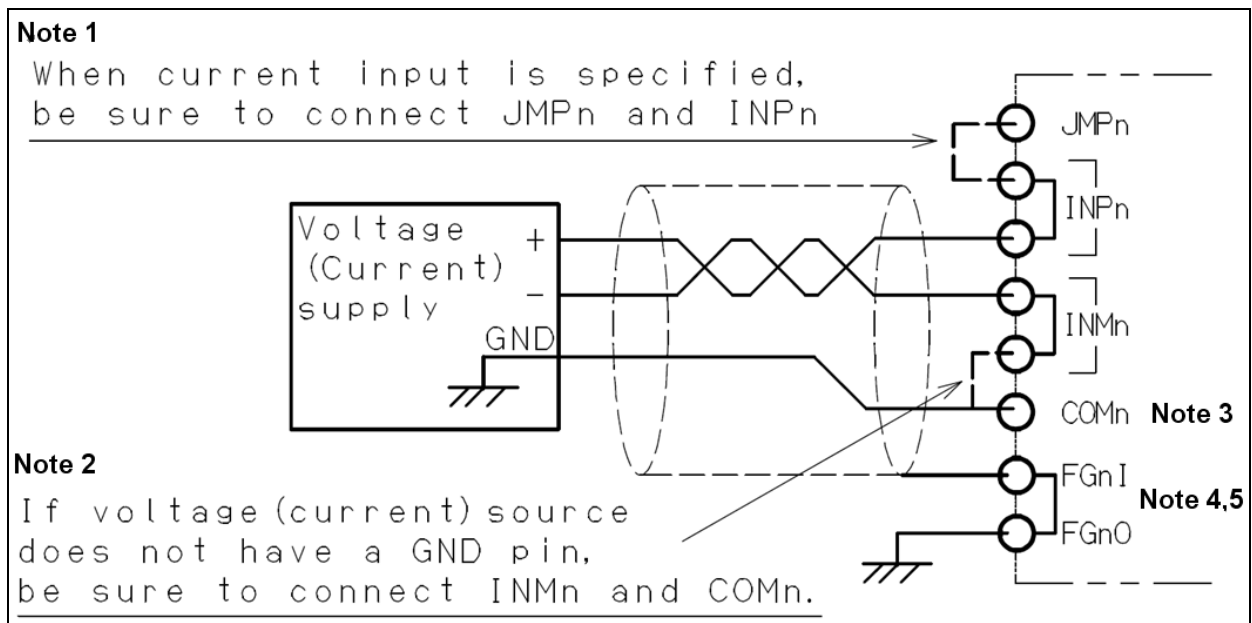


NOTE

- 1 Because when current input is specified, it is necessary to connect JMPn and INPn, there are two-INPn terminals in the terminal block XT1, XT2.
- 2 Because if voltage(current)source does not have a GND pin, it is necessary to connect INMn and COMn in order to fix the reference voltage, there are two-INMn terminals in the terminal block XT1, XT2.
- 3 COMn of each channel are connected to common analog GND in module through the adapter.
- 4 Connect the shield of the cable to FGnI, and be sure to ground at FGnO. Because FGnI of each channel is not connected each other, and FGnO of each channel is also not connected each other, be sure to ground at each channel. However, the shield may be directly connected to frame ground by using a cable clamp without using FGnI and FGnO.
- 5 However, both ends grounding or both ends opening may be more effective depending on the environment where the unit is used. Select one of the grounding types, whichever is appropriate, depending on what the ambient noise is like.

8.3 CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL (FOR MATRIX INPUT)

8.3.1 Overall Connection Diagram

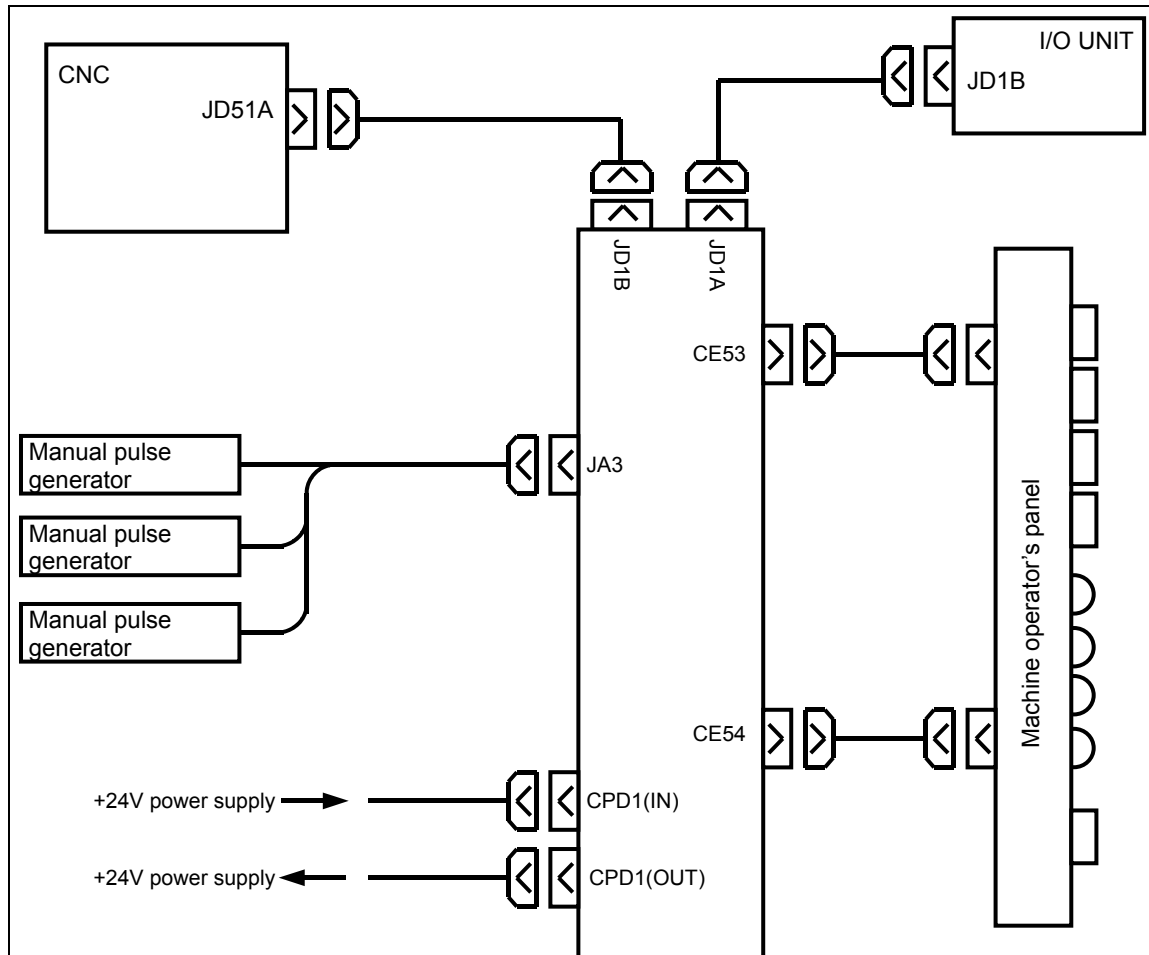

NOTE


The following screw type connectors, newly incorporated into the main board of control unit, cannot be used to connect the I/O Link *i* or manual pulse generator.

Connectors that cannot be used on the cable side

	Specification	Manufacturer
Connector case	FI-20-CV7	Hirose Electric Co., Ltd.
Connector case and connector	FI30-20S-CV7	Hirose Electric Co., Ltd.

8.3.2 Power Connection

Provide the CPD1 (IN) connector, shown below, with the power necessary for printed circuit board operation and that for DI operation. To facilitate power division, the power is output to CPD1 (OUT) exactly as it is input from CPD1 (IN). When power division is required, use CPD1 (OUT). Up to 1.0 A can be supplied by branching.

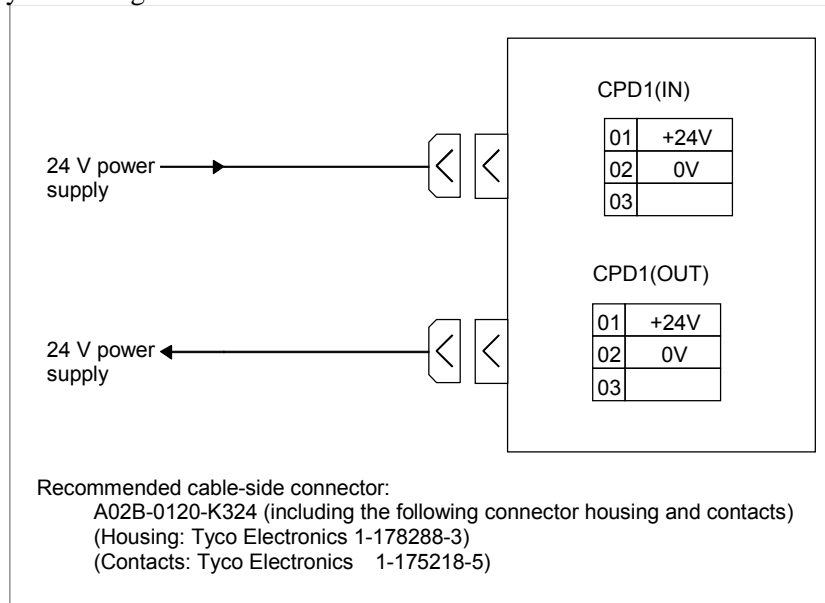

NOTE

The specification of the power supply connector CPD1 (IN) is the same as that for CPD1 (OUT). There are no indications on the printed circuit board to distinguish between the IN and OUT connectors.

8.3.3 DI/DO Connector Pin Arrangement

CE53			CE54		
	A	B		A	B
01	0V	0V	01	0V	0V
02	N.C.	+24V	02	COM1	+24V
03	Xm+0.0	Xm+0.1	03	Xm+1.0	Xm+1.1
04	Xm+0.2	Xm+0.3	04	Xm+1.2	Xm+1.3
05	Xm+0.4	Xm+0.5	05	Xm+1.4	Xm+1.5
06	Xm+0.6	Xm+0.7	06	Xm+1.6	Xm+1.7
07	Yn+0.0	Yn+0.1	07	Yn+3.0	Yn+3.1
08	Yn+0.2	Yn+0.3	08	Yn+3.2	Yn+3.3
09	Yn+0.4	Yn+0.5	09	Yn+3.4	Yn+3.5
10	Yn+0.6	Yn+0.7	10	Yn+3.6	Yn+3.7
11	Yn+1.0	Yn+1.1	11	Yn+4.0	Yn+4.1
12	Yn+1.2	Yn+1.3	12	Yn+4.2	Yn+4.3
13	Yn+1.4	Yn+1.5	13	Yn+4.4	Yn+4.5
14	Yn+1.6	Yn+1.7	14	Yn+4.6	Yn+4.7
15	Yn+2.0	Yn+2.1	15	Yn+5.0	Yn+5.1
16	Yn+2.2	Yn+2.3	16	Yn+5.2	Yn+5.3
17	Yn+2.4	Yn+2.5	17	Yn+5.4	Yn+5.5
18	Yn+2.6	Yn+2.7	18	Yn+5.6	Yn+5.7
19	KYD0	KYD1	19	Yn+6.0	Yn+6.1
20	KYD2	KYD3	20	Yn+6.2	Yn+6.3
21	KYD4	KYD5	21	Yn+6.4	Yn+6.5
22	KYD6	KYD7	22	Yn+6.6	Yn+6.7
23	KCM1	KCM2	23	KCM5	KCM6
24	KCM3	KCM4	24	KCM7	DOCOM
25	DOCOM	DOCOM	25	DOCOM	DOCOM

Flat cable-side connector specification:
A02B-0120-K342
(HIF3BB-50D-2.54R (Hirose Electric Co., Ltd.))
50 contacts


Cable material specification:
A02B-0120-K886
(61-meter, 50-pin cable
(Hitachi Cable, Ltd. or Oki Electric Cable Co., Ltd.))



CAUTION

An output DC voltage of +24 V at CE53 (B02) and CE54 (B02) is for DI signals.
Do not supply 24 VDC to these pins from the outside.

8.3.4 DI (General-purpose Input Signal) Connection

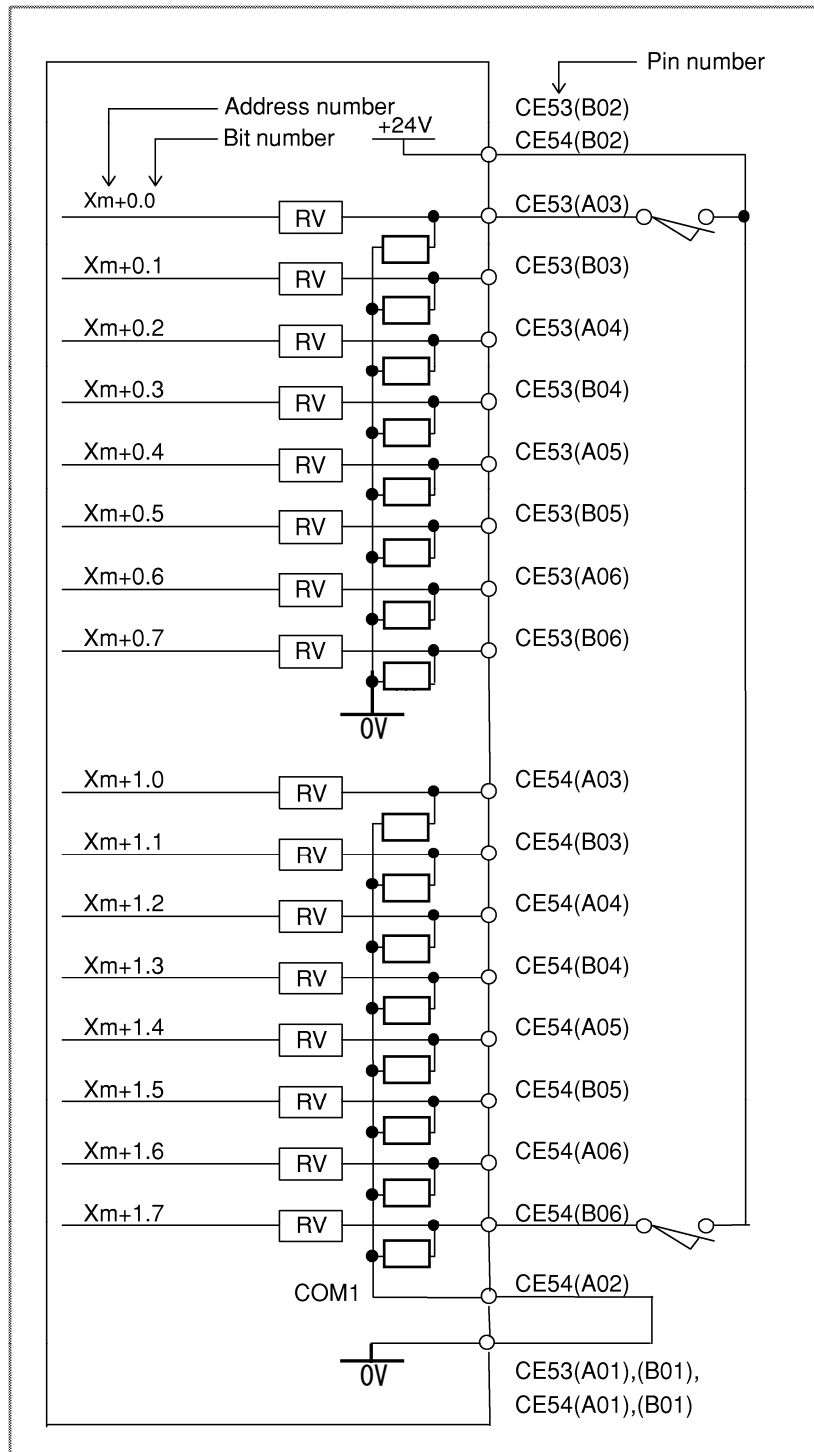

NOTE

Xm+1.0 through Xm+1.7 are DI pins for which a common voltage can be selected. That is, by connecting the COM1 CE54(A02) pin to the +24 V power supply, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. To prevent this from occurring, the connection of the COM1 CE54(A02) pin to the 0 V power supply is recommended wherever possible.

For the unconnected pins at the addresses for which the common voltage is fixed (from Xm+0.0 to Xm+0.7), the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected (from Xm+1.0 to Xm+1.7), the input is "0" when the COM1 CE54(A02) pin is connected to the 0 V power supply or "1" when it is connected to the +24 V power supply. Connect COM1 when used. When addresses from Xm+1.0 to Xm+1.7 are not used, connect COM1 to the 0 V power supply.

Common voltage for general-purpose DI


Address	Common voltage
Xm	Cannot be selected.
Xm+1	Can externally be selected with COM1.

**CAUTION**


An output DC voltage of +24 V at CD53 (B02) and CE54 (B02) is for DI signals. Do not supply 24 VDC to these pins from the outside.

8.3.5 DI (Matrix Input Signal) Connection

- A maximum of 56 points are provided.

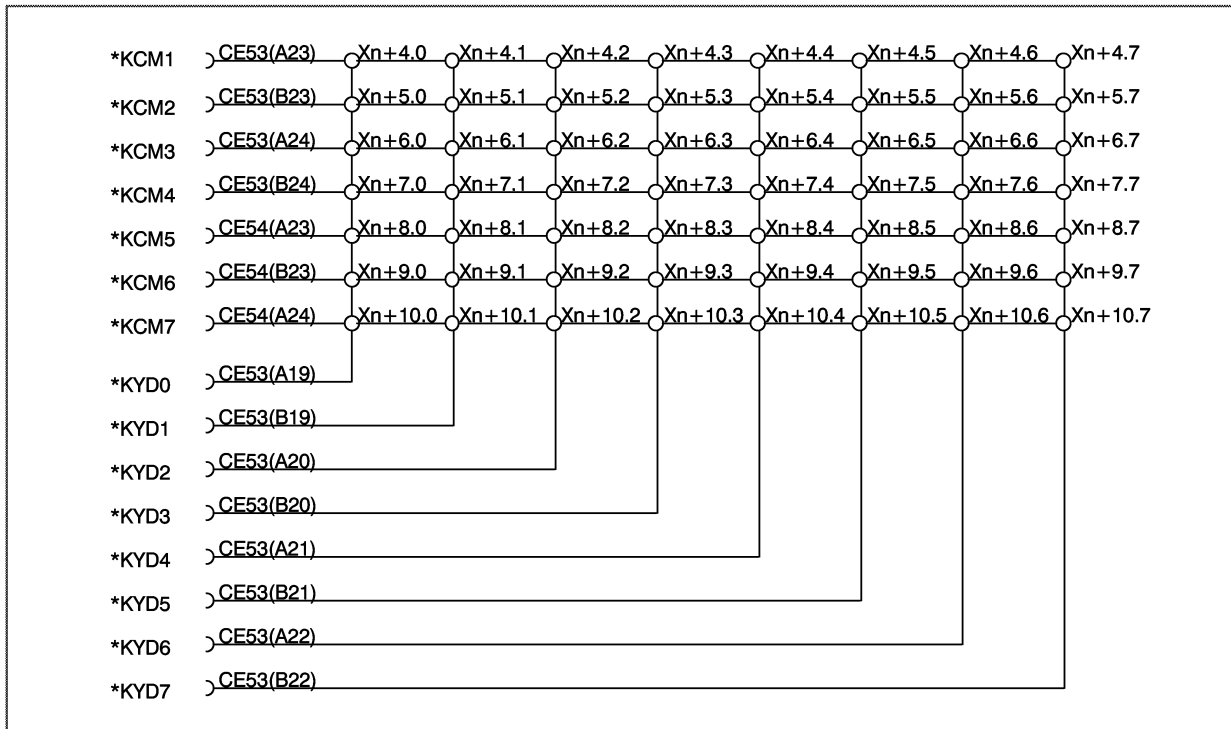



NOTE
 Detour prevention diodes must be incorporated for matrix signal input, as shown in the following figure. Otherwise, only two signals can be input at the same time. Inputting three or more signals simultaneously without using detour prevention diodes may result in data input errors.

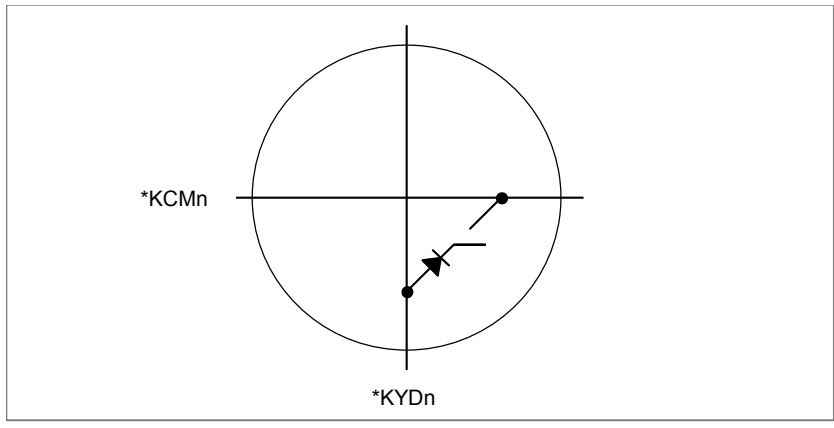



8.3.6 DO (Output Signal) Connection

- A maximum of 56 points are provided.

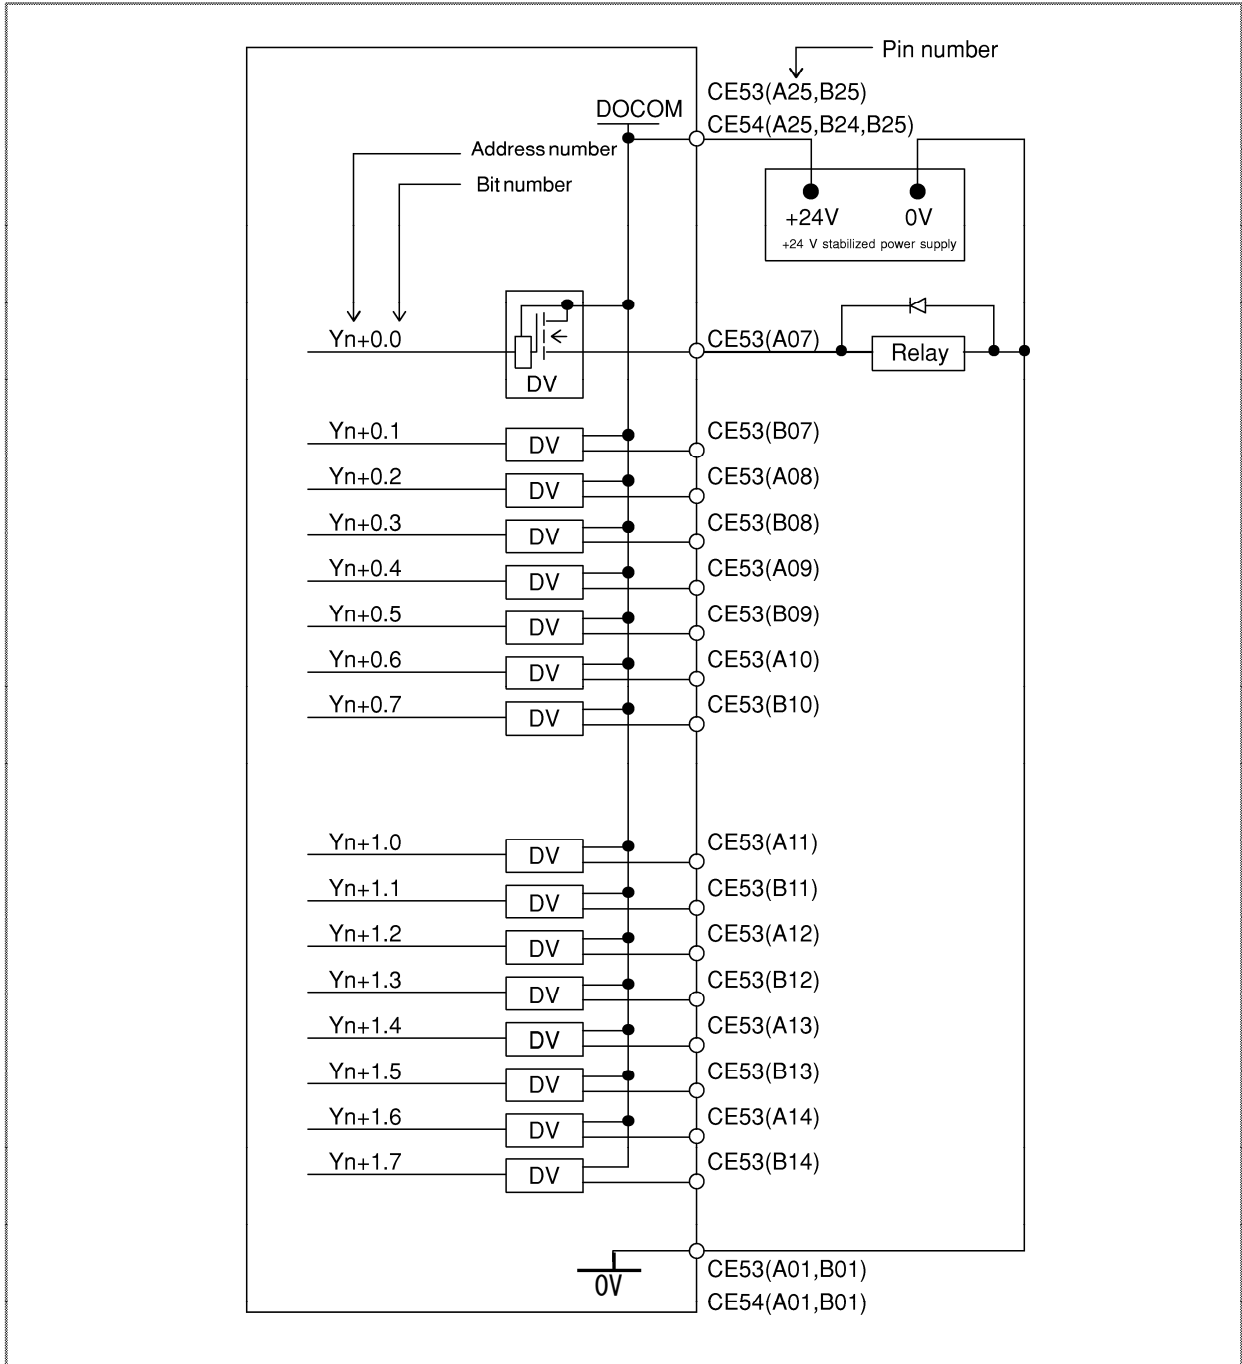

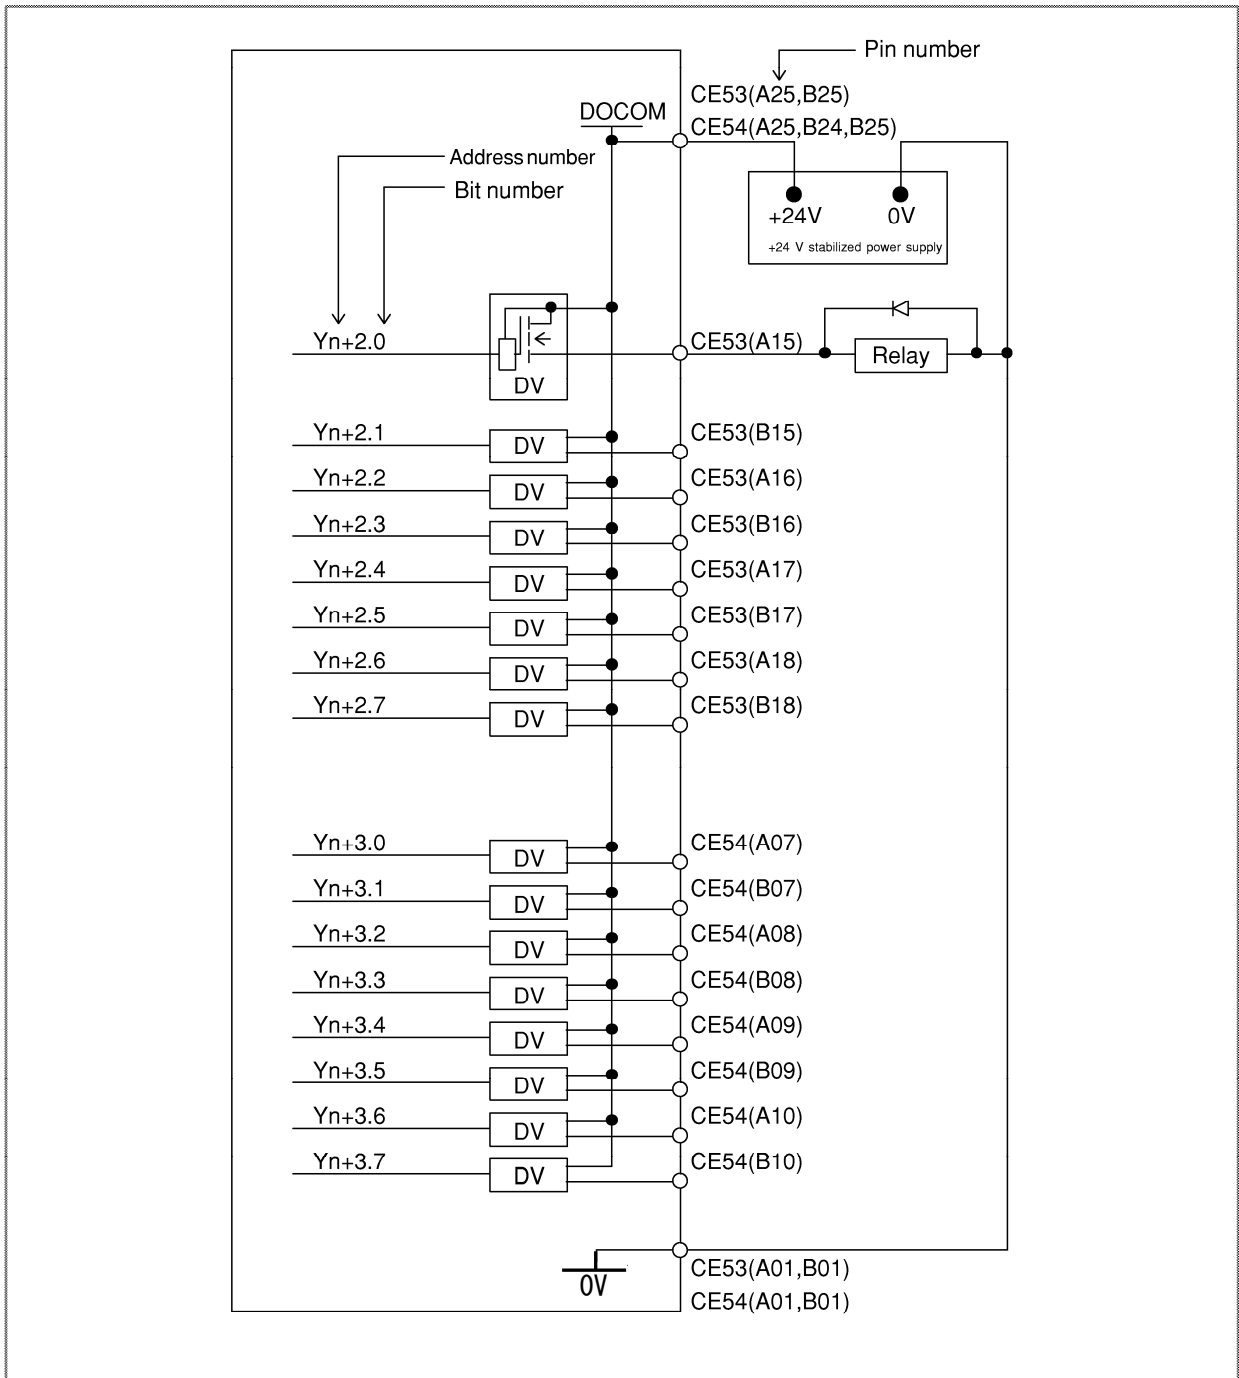

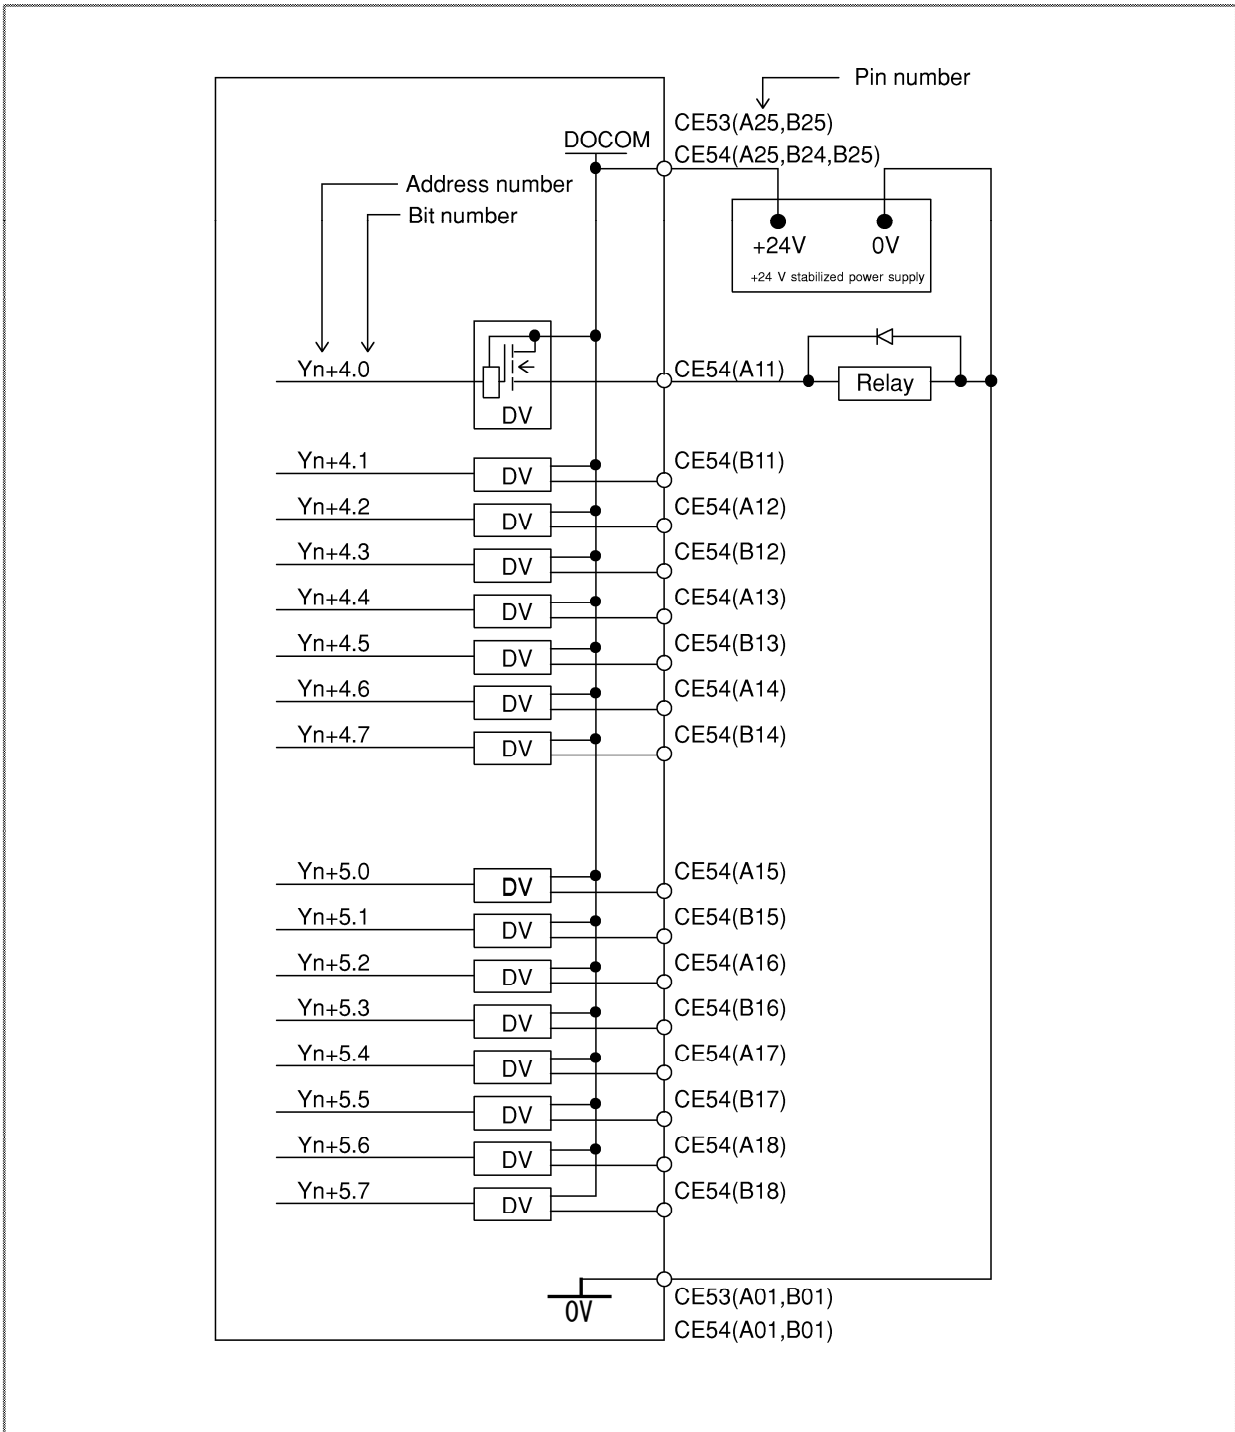


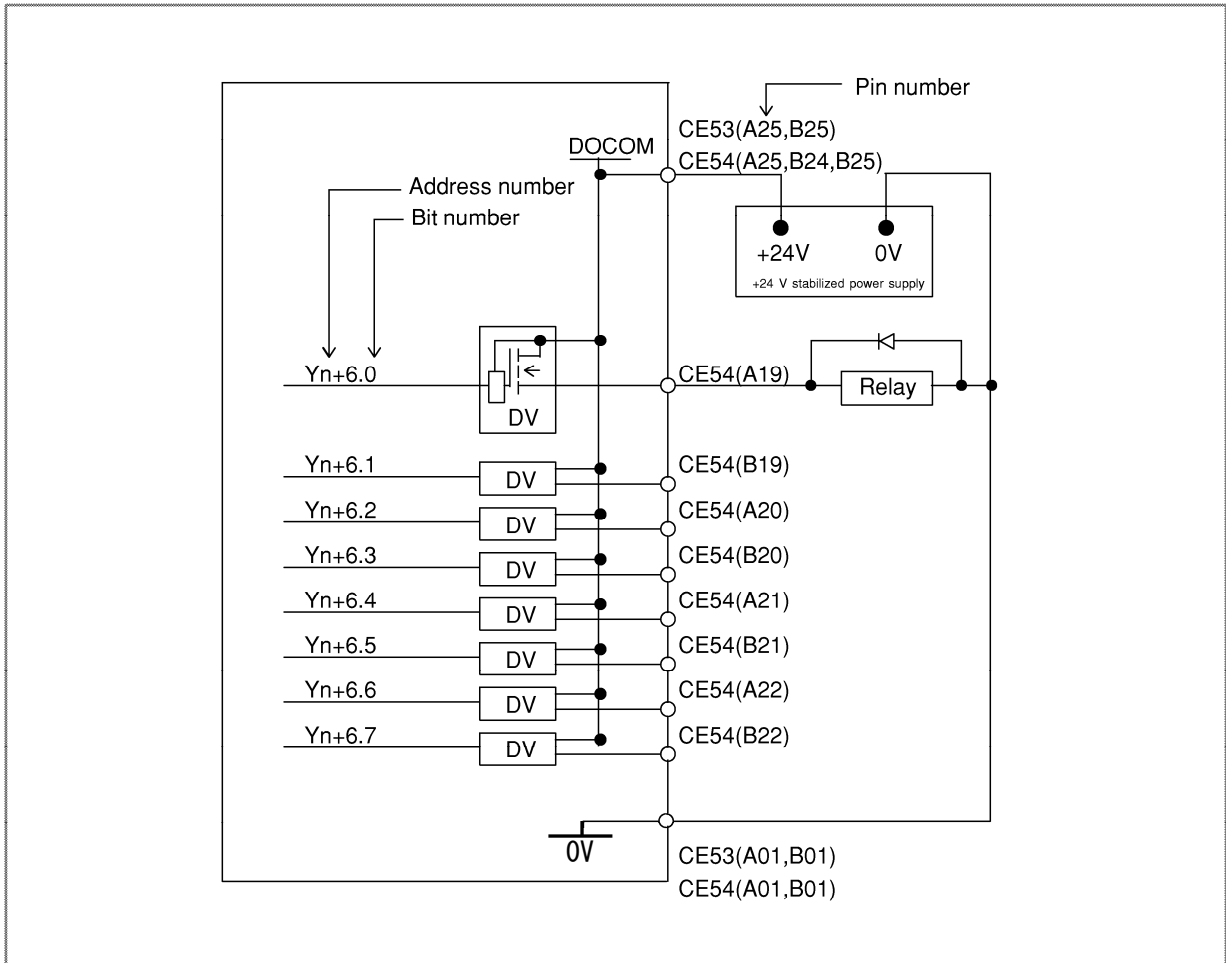

8.3.7 Manual Pulse Generator Connection

For an I/O module for operator's panel, three manual pulse generators can be connected. For the connection, see Subsection 7.4.1.

8.3.8 External View

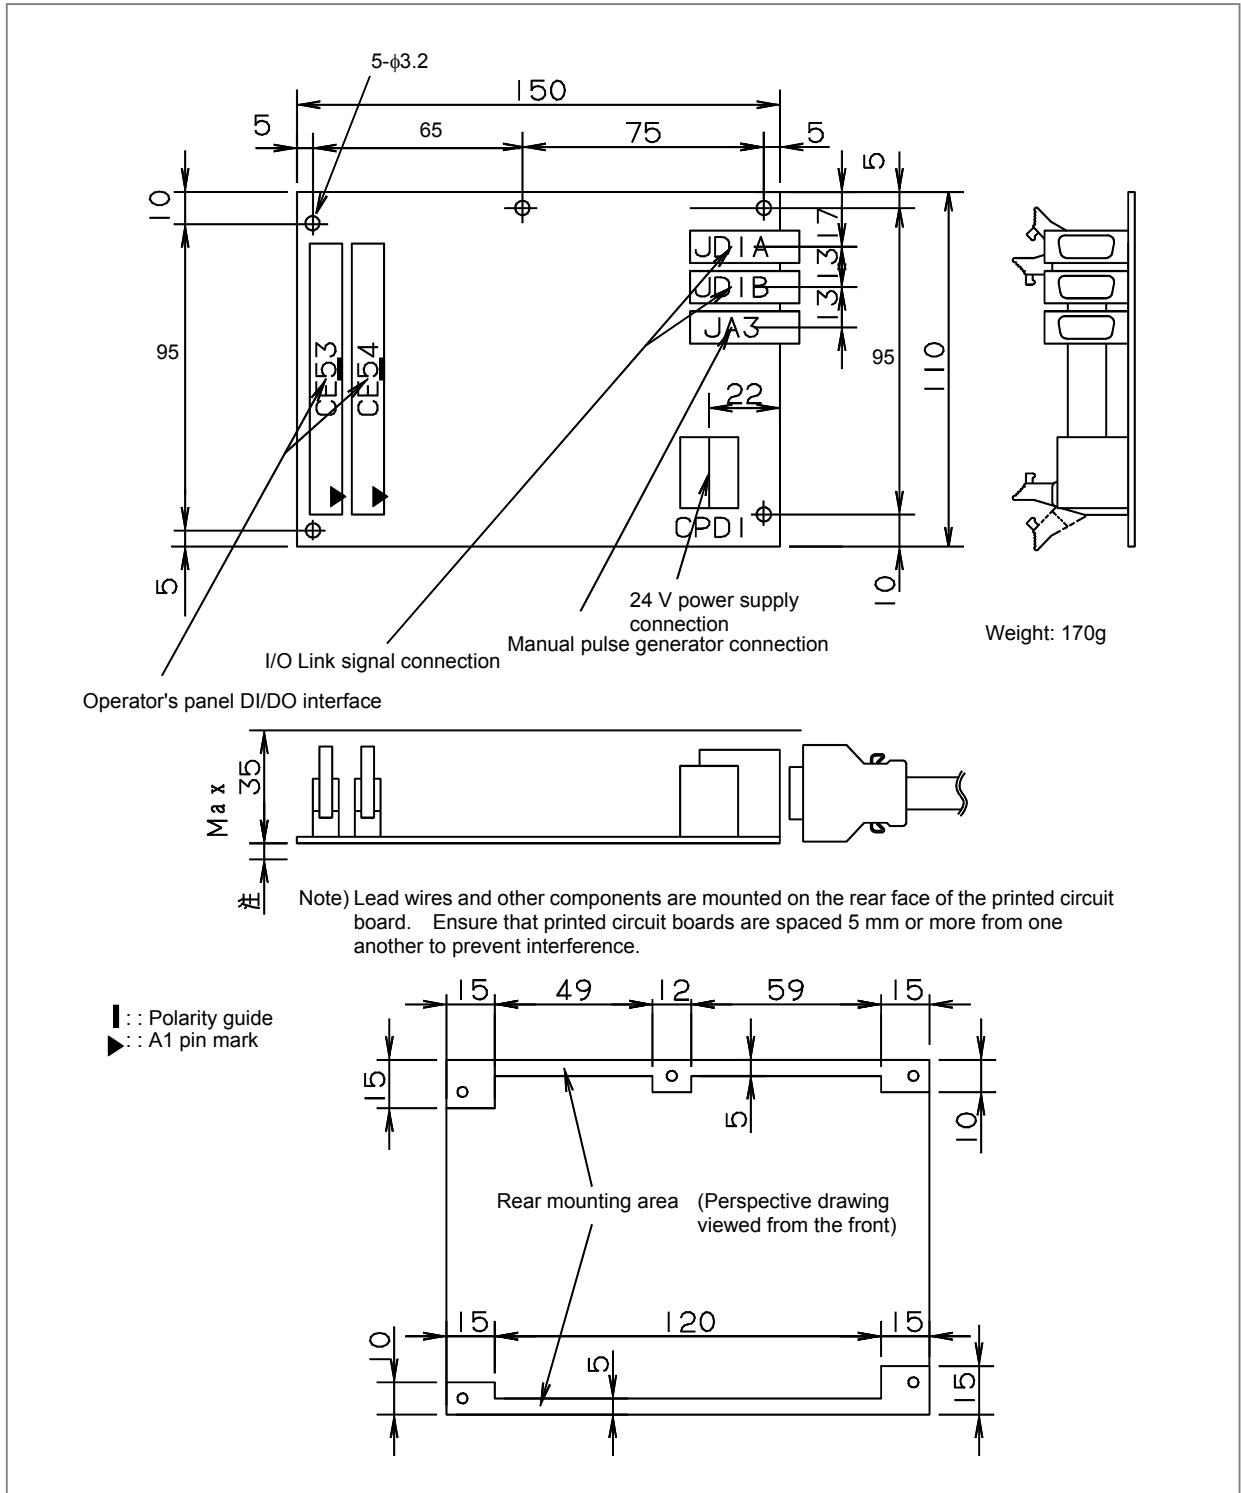

8.3.9 Specifications

Installation specifications

Install the I/O module in a fully enclosed cabinet.

For other installation conditions, conform to the CNC installation conditions.

Ordering specifications

Item	Ordering specifications	Remarks
I/O module for operator's panel	A03B-0824-K200	
Fuse (spare parts)	A03B-0815-K001	1A

Module specifications

Item	Specification	Remarks
General-purpose DI	16 points	24-V input
Matrix DI	56 points (8 × 7)	5-V input
DO points	56 points (8 × 7)	24 V source type output
MPG interface	Max. 3 units	

Power supply rating

Module	Supply voltage	Current rating	Remarks
I/O module for operator's panel	24 VDC ±10% supplied from the power supply connector CPD1. The allowance of ±10% should include instantaneous voltage and ripple voltage.	0.35A	The total power consumption of DI points is included. (This is true when all general-purpose DI points are turned on.) The power consumption of DO points is not included.

NOTE

To connect an optical adapter for the I/O Link *i* to both connectors JD1A and JD1B, the above power supply rating + 70 mA is required.

DI (input signal specifications) (General-purpose input signal)

Signal specifications

Number of points	16 points (per module)
Rated input	DC24V, 7.3mA
Delay time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

Contact specification

Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1mA or less (26.4V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)

(Matrix input signal)**Signal specifications**

Number of points	56 points (per module)
Delay time	The maximum matrix period of 16 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

Contact specification

Contact rating	6VDC, 2mA or more
Leakage current between contacts when opened	0.2mA or less(6V)
Voltage decrease between contacts when closed	0.9V or less(with a current 1mA)

NOTE

When detour prevention diodes are used, the voltage drop across closed contacts indicated above must be maintained, including the diode voltage drop.

DO (output signal specifications)

Maximum load current when ON	200 mA or less including momentary current per signal. 3.5 A or less for DO signals in all
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

⚠ CAUTION

- 1 When inductive load is connected to DO terminal, connect a diode in parallel in order to reduce the noise..
- 2 When capacitive load is connected to DO terminal, connect a resistor in series in order to diminish the rush current.

Power supply for DO load (DOCOM)

Input voltage : min 0V, max 26.4V

Be sure to connect all power supply for DO load (DOCOM) pins.

Turn on the power supply for DO load (DOCOM) at the same time as the power for the control unit.

Turn off the power supply for DO load (DOCOM) when or before the power for the control unit is turned off.


⚠ WARNING

For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If the power for the load (DOCOM) is supplied when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.

8.3.10 Other Notes

Address allocation

For the I/O module for operator's panel, I/O addresses are mapped as follows.

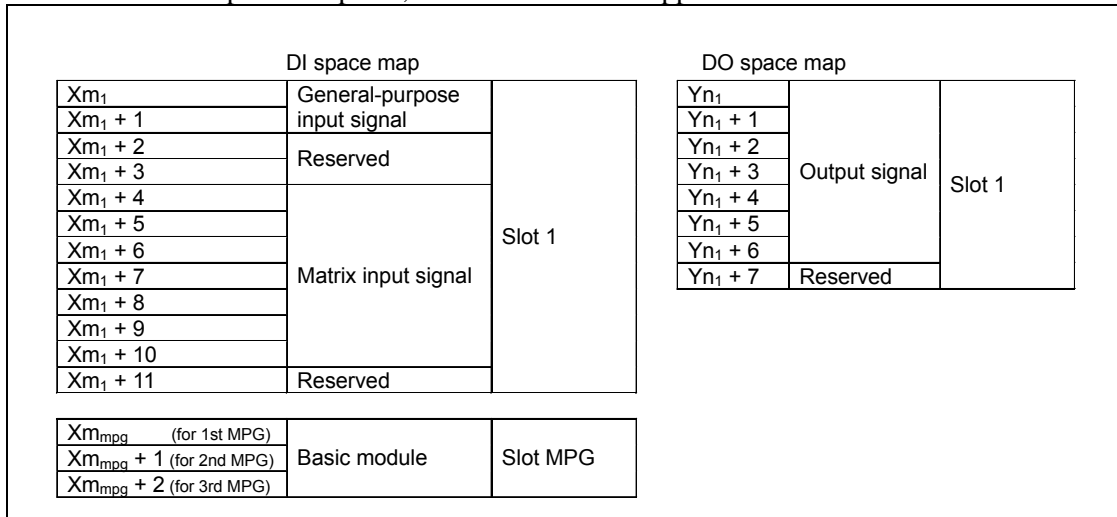

Xm₁, Xm_{mpg}, and Yn₁ indicate the start address at allocation.

Basically, for an I/O module for operator's panel, allocate 12-byte DI addresses to slot 1 and 8-byte DO addresses to slot 1.

An I/O module for operator's panel has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the addresses with the ladder because the CNC processes the manual pulse generator signals directly.

ON/OFF of the power supply (DO common) for DO signals (output signals)

For ON/OFF of the power supply pin (DOCOM) for the DO signals (output signals), see Subsection 8.2.4.4.

Parallel DO (output signal) connection

For parallel connections of DO signals (output signals), see Subsection 8.2.4.4.

DO (output signal) alarm detection

The DO driver of an I/O module for operator's panel is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as connecting the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated which keeps the DO signal for the relevant 1 byte in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

A DO error such as a ground fault is detected for each byte. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When alarm data bit 0 is set to "1", the DO driver indicated by the slot number and byte offset detects an error as listed in the table below. Also see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Yn	0th byte DO
				1	Yn+1	1st byte DO
				2	Yn+2	2nd byte DO
				3	Yn+3	3rd byte DO
				4	Yn+4	4th byte DO
				5	Yn+5	5th byte DO
				6	Yn+6	6th byte DO
				7	Yn+7	7th byte DO

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Yn indicates the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
0	0	0	0	0	0	0	1


Note : DO alarm is detected not for each bit but for each byte in this module. It cannot be detected in which bit a DO alarm occurs. “01H” is output to “Alarm data” in the system relay area whichever bit a DO alarm occurs.

CAUTION

- 1 The output protection function is not for external equipment but for internal device of the module.
- 2 The output protection function can't protect the internal device in any case. If the output protection function is activated, remove the cause immediately. If the output exceed the absolute maximum rating, the output protection function may not operate normally or the internal device may break before the output protection function operates.
- 3 If the over current is continued with a condition that the output protection function can't operate normally, the internal device might emit smoke or take fire.

8.3.11 Connection of the Grounding Terminal of the Module


Connect the 0V line in the basic module to the cabinet's metal plate that is connected to ground or signal ground bar nearby via the protective ground terminal. About Multipoint grounding or Single-point grounding, refer to Item 3.4.1

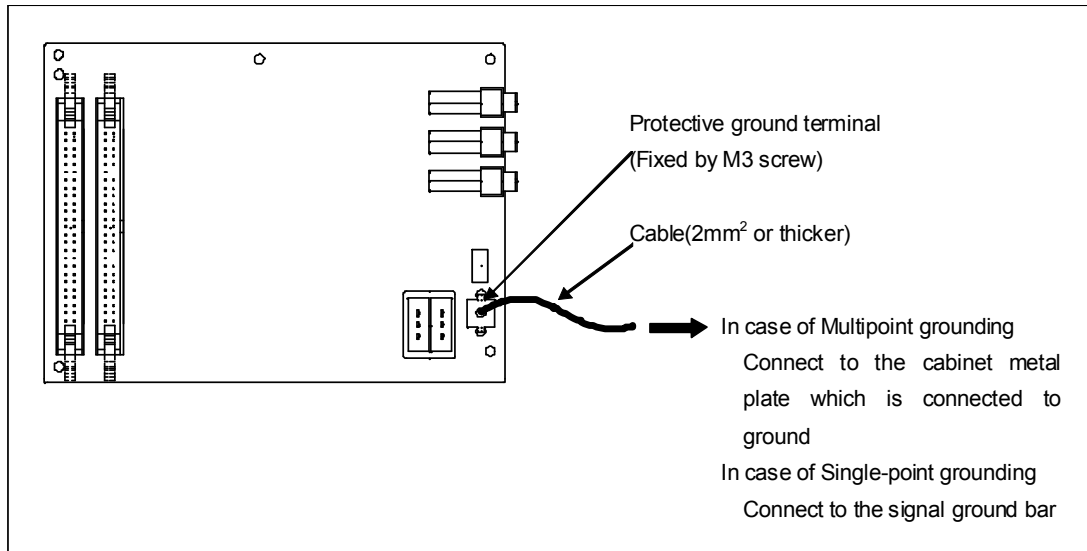

8.4 CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL AND I/O MODULE FOR POWER MAGNETICS CABINET

The difference between the I/O module for operator's panel and the I/O module for power magnetics cabinet lies in whether an interface to a manual pulse generator is provided. The power magnetics cabinet does not provide an interface to a manual pulse generator.

8.4.1 Overall Connection Diagram

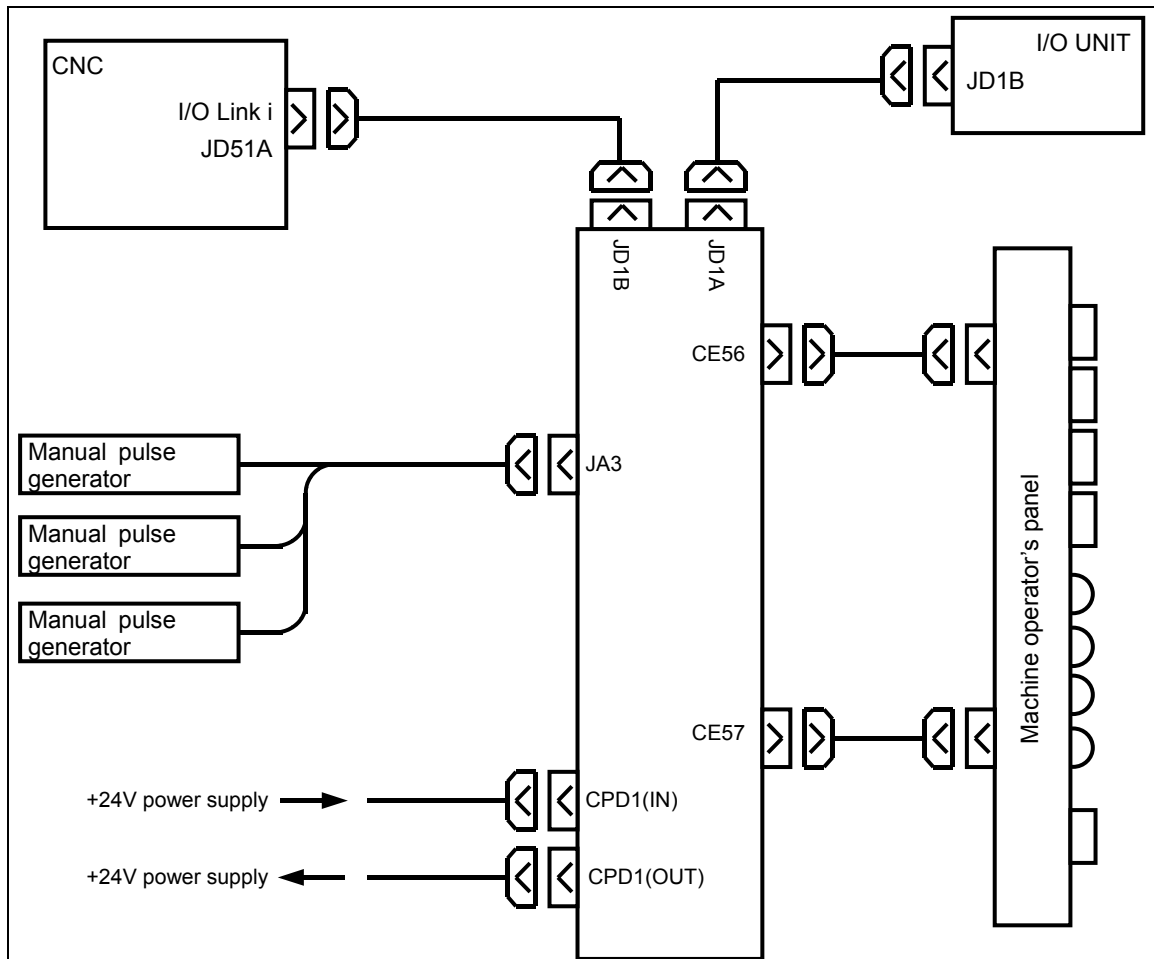

NOTE

The following screw type connectors, newly incorporated into the main board of control unit, cannot be used to connect the I/O Link *i* or manual pulse generator.


Connectors that cannot be used on the cable side

	Specification	Manufacturer
Connector case	FI-20-CV7	Hirose Electric Co., Ltd.
Connector case and connector	FI30-20S-CV7	Hirose Electric Co., Ltd.

8.4.2 Power Connection

Provide the CPD1 (IN) connector, shown below, with the power necessary for the printed circuit board operation and that for DI operation. To facilitate power division, the power is output to CPD1 (OUT) exactly as it is input from CPD1 (IN). When power division is required, use CPD1 (OUT).

Up to 1.0 A can be supplied by branching.

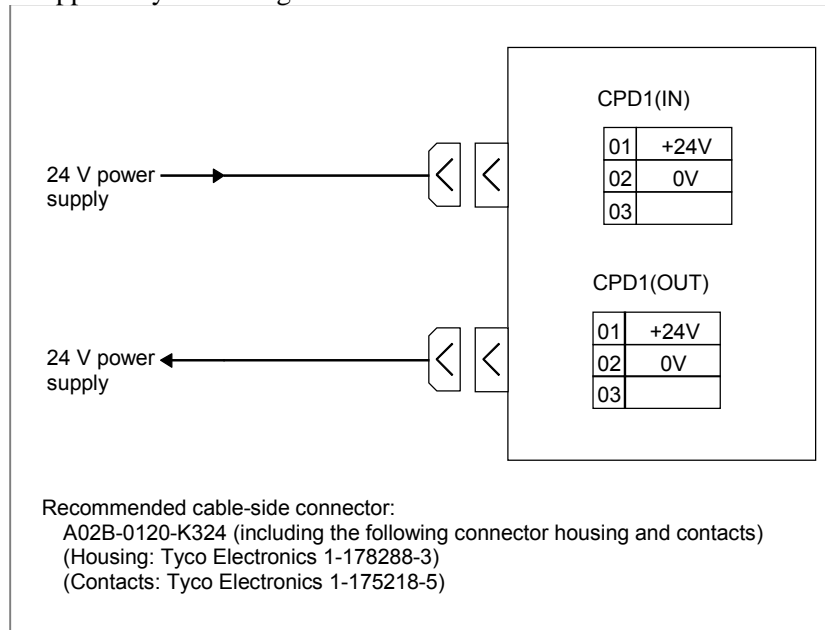

NOTE

The specification of the power supply connector CPD1 (IN) is the same as that for CPD1 (OUT). There are no indications on the printed circuit board to distinguish between the IN and OUT connectors.

8.4.3 DI/DO Connector Pin Arrangement

CE56			CE57		
	A	B		A	B
01	0V	+24V	01	0V	+24V
02	Xm+0.0	Xm+0.1	02	Xm+3.0	Xm+3.1
03	Xm+0.2	Xm+0.3	03	Xm+3.2	Xm+3.3
04	Xm+0.4	Xm+0.5	04	Xm+3.4	Xm+3.5
05	Xm+0.6	Xm+0.7	05	Xm+3.6	Xm+3.7
06	Xm+1.0	Xm+1.1	06	Xm+4.0	Xm+4.1
07	Xm+1.2	Xm+1.3	07	Xm+4.2	Xm+4.3
08	Xm+1.4	Xm+1.5	08	Xm+4.4	Xm+4.5
09	Xm+1.6	Xm+1.7	09	Xm+4.6	Xm+4.7
10	Xm+2.0	Xm+2.1	10	Xm+5.0	Xm+5.1
11	Xm+2.2	Xm+2.3	11	Xm+5.2	Xm+5.3
12	Xm+2.4	Xm+2.5	12	Xm+5.4	Xm+5.5
13	Xm+2.6	Xm+2.7	13	Xm+5.6	Xm+5.7
14	DICOM0		14		DICOM5
15			15		
16	Yn+0.0	Yn+0.1	16	Yn+2.0	Yn+2.1
17	Yn+0.2	Yn+0.3	17	Yn+2.2	Yn+2.3
18	Yn+0.4	Yn+0.5	18	Yn+2.4	Yn+2.5
19	Yn+0.6	Yn+0.7	19	Yn+2.6	Yn+2.7
20	Yn+1.0	Yn+1.1	20	Yn+3.0	Yn+3.1
21	Yn+1.2	Yn+1.3	21	Yn+3.2	Yn+3.3
22	Yn+1.4	Yn+1.5	22	Yn+3.4	Yn+3.5
23	Yn+1.6	Yn+1.7	23	Yn+3.6	Yn+3.7
24	DOCOM	DOCOM	24	DOCOM	DOCOM
25	DOCOM	DOCOM	25	DOCOM	DOCOM

Flat cable-side connector specification:
A02B-0120-K342
(HIF3BB-50D-2.54R (Hirose Electric Co., Ltd.))
50 contacts


Cable material specification:
A02B-0120-K886
(61-meter, 50-pin cable
(Hitachi Cable, Ltd. or Oki Electric Cable Co., Ltd.))





CAUTION

An output DC voltage of +24 V at CE56 (B01) and CE57 (B01) is for DI signals.
Do not supply 24 VDC to these pins from the outside.

8.4.4 DI (General-purpose Input Signal) Connection

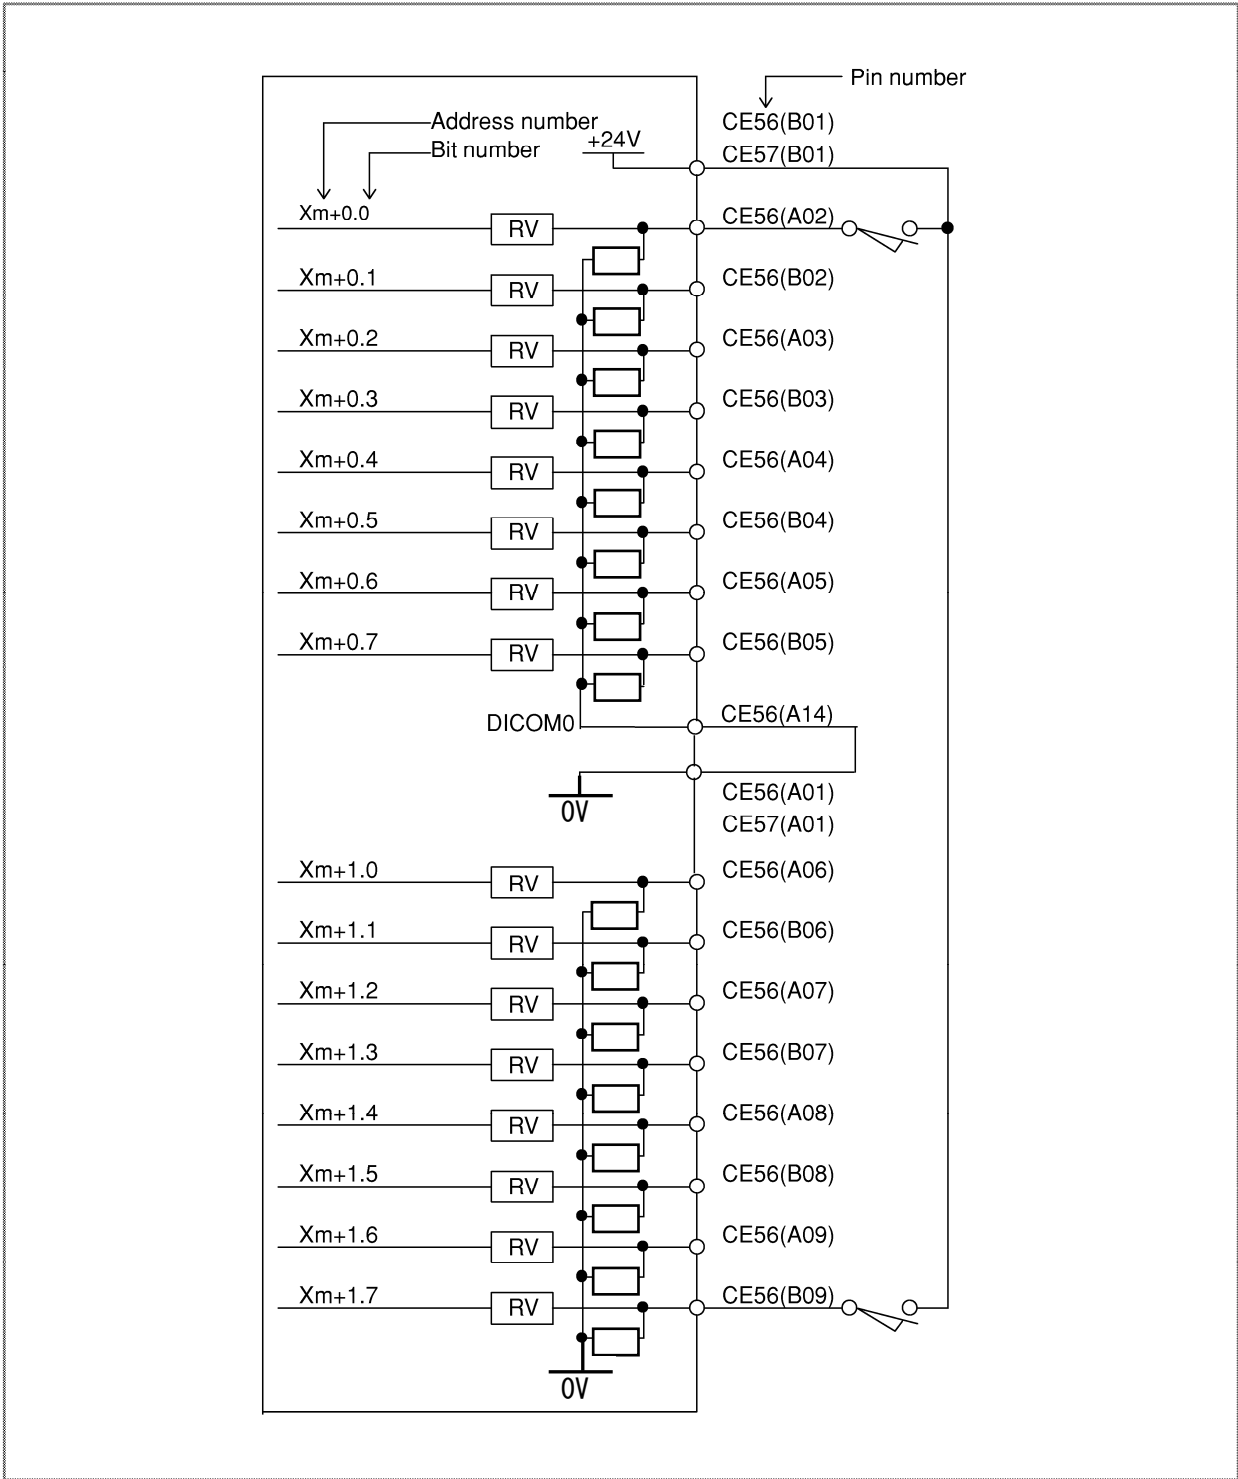

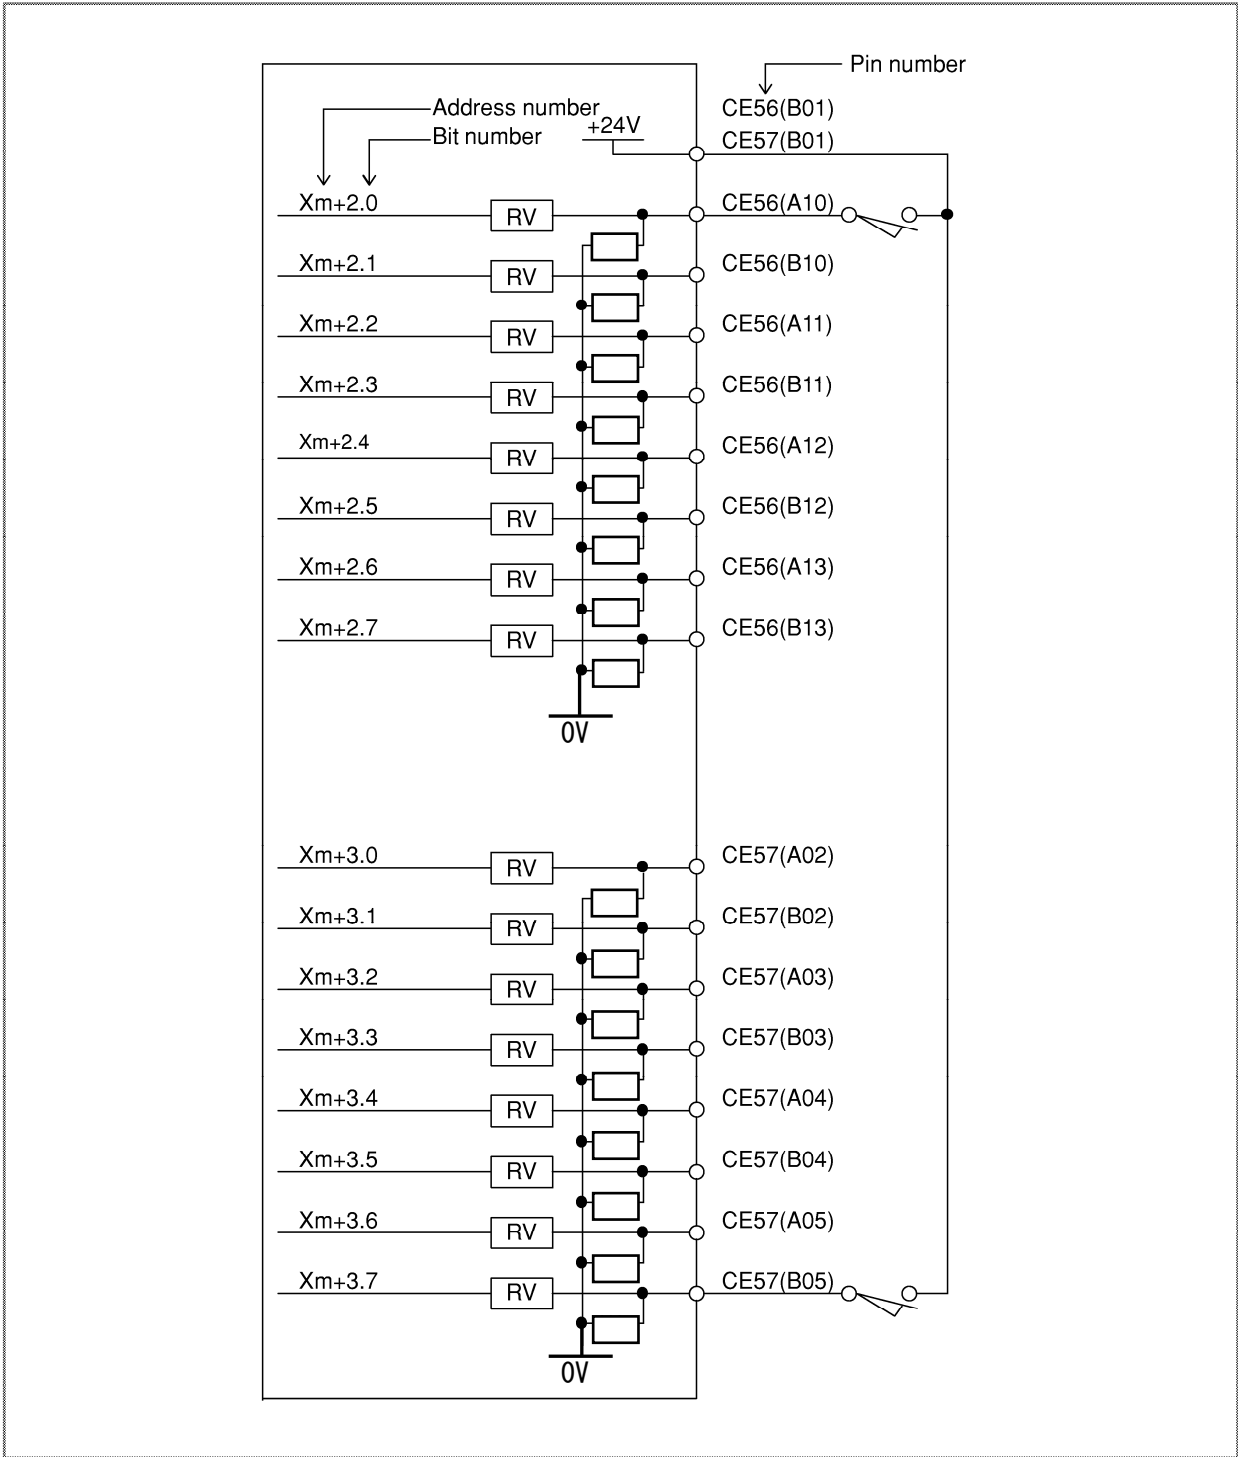

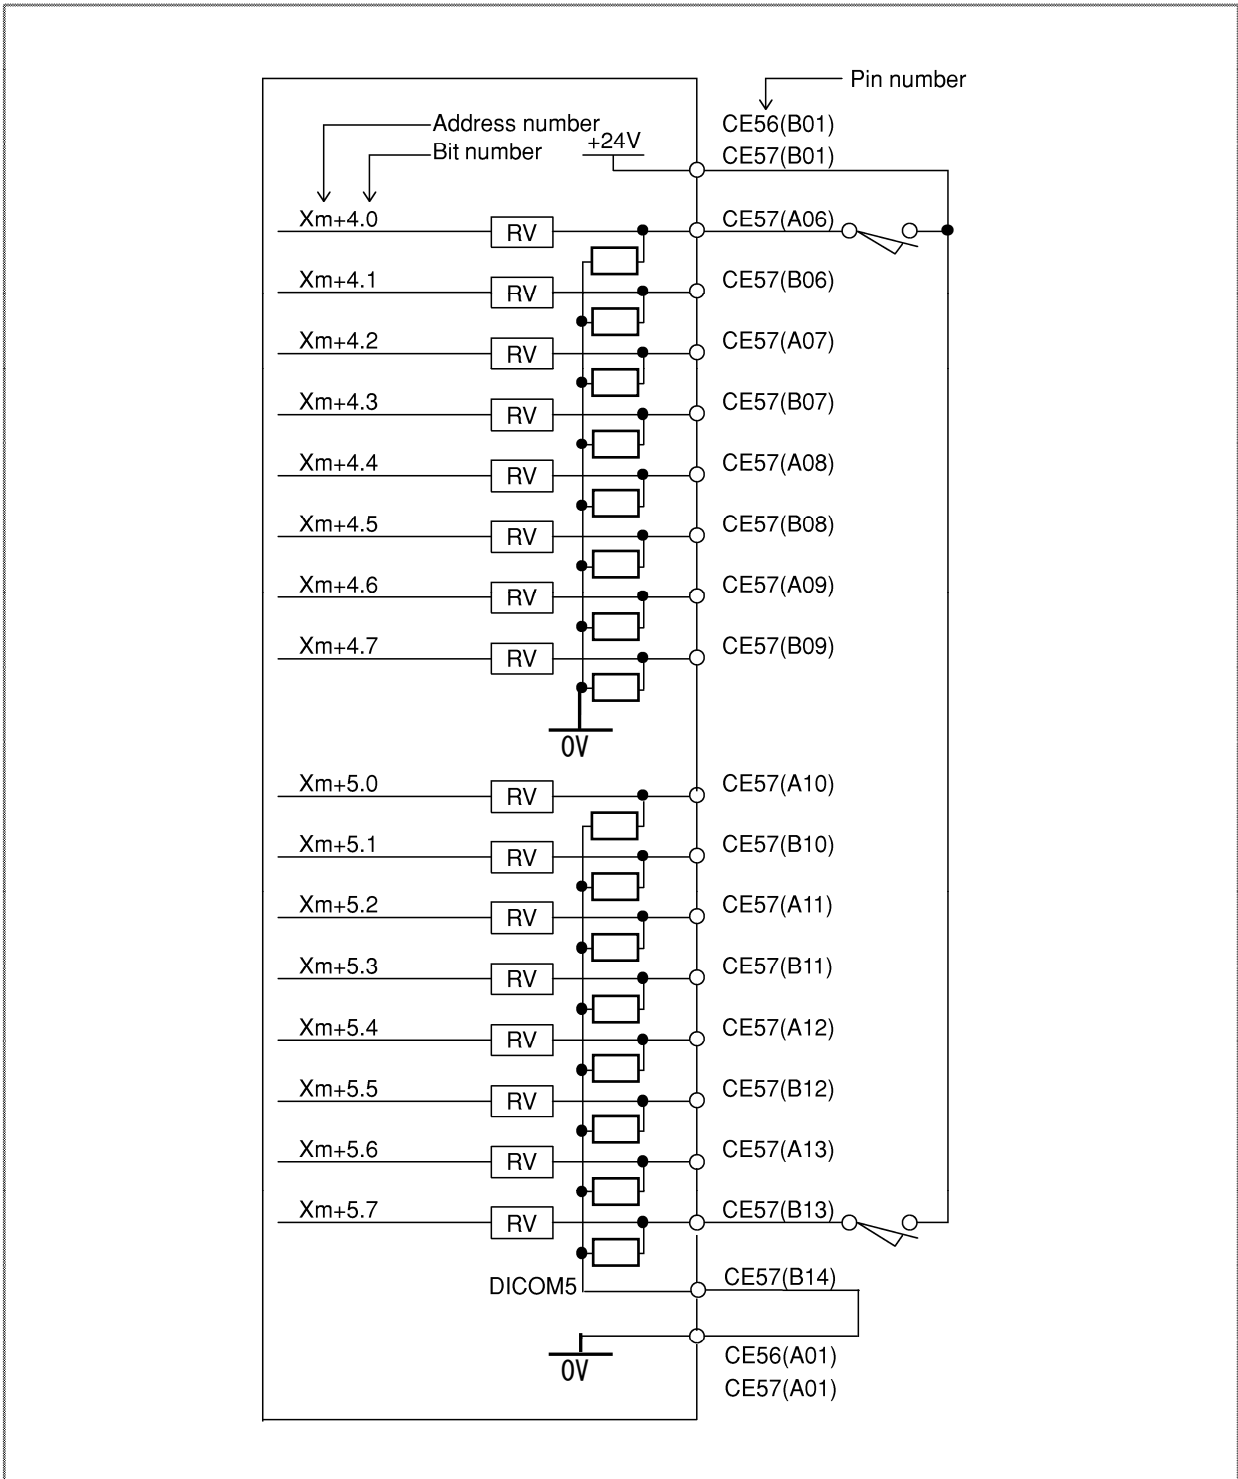

NOTE

Xm+0.0 through Xm+0.7 and Xm+5.0 through Xm+5.7 are DI pins for which a common voltage can be selected. That is, by connecting the DICOM0 CE56(A14) or DICOM5 CE57(B14) pin to the +24 V power supply, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. To prevent this from occurring, the connection of the DICOM0 CE56(A14) and DICOM5 CE57(B14) pins to the 0 V power supply is recommended wherever possible.

For the unconnected pins at the addresses for which the common voltage is fixed, the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected, the input is "0" when the DICOMx common select pin is connected to the 0 V power supply or "1" when it is connected to the +24 V power supply. Connect DICOM0 and DICOM5 when used. When addresses from Xm+0.0 to Xm+0.7 and Xm+5.0 to Xm+5.7 are not used, connect DICOM0 and DICOM5 to the 0 V power supply.


Common voltage for general-purpose DI


Address	Common voltage
Xm	Can be selected with DICOM0.
Xm+1	Cannot be selected.
Xm+2	Cannot be selected.
Xm+3	Cannot be selected.
Xm+4	Cannot be selected.
Xm+5	Can be selected with DICOM5.

**CAUTION**

An output DC voltage of +24 V at CE56 (B01) and CE57 (B01) is for DI signals. Do not supply 24 VDC to these pins from the outside.

8.4.5 DO (Output Signal) Connection

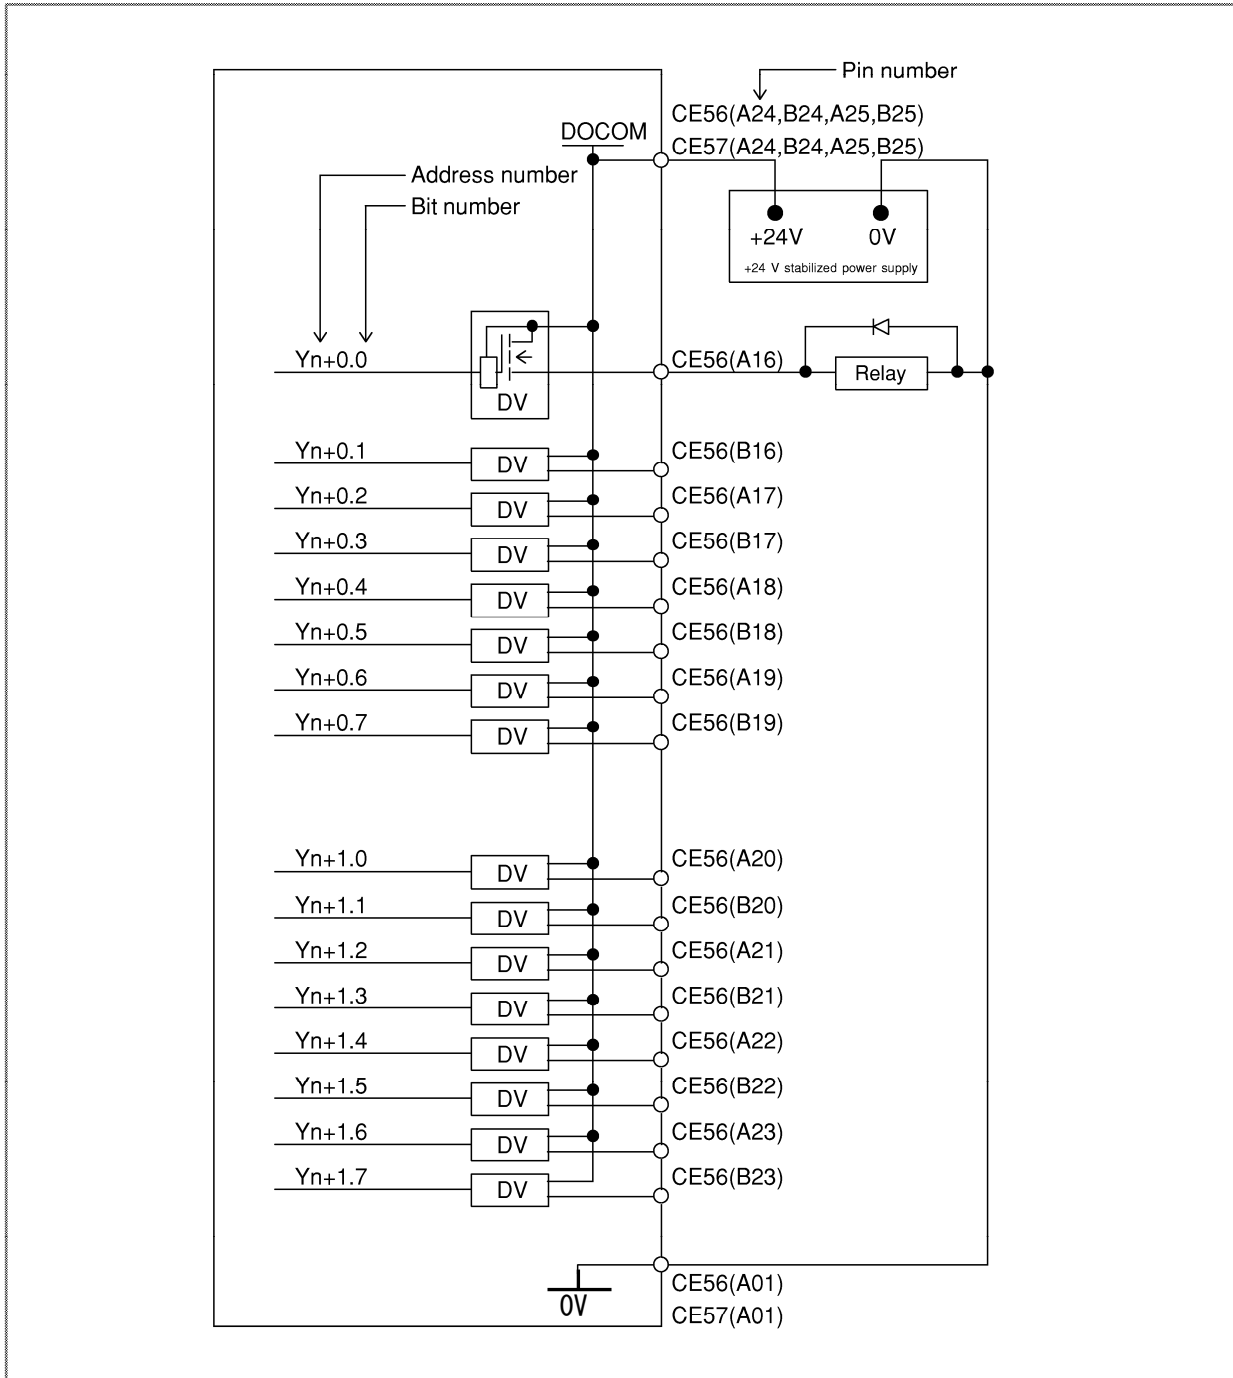


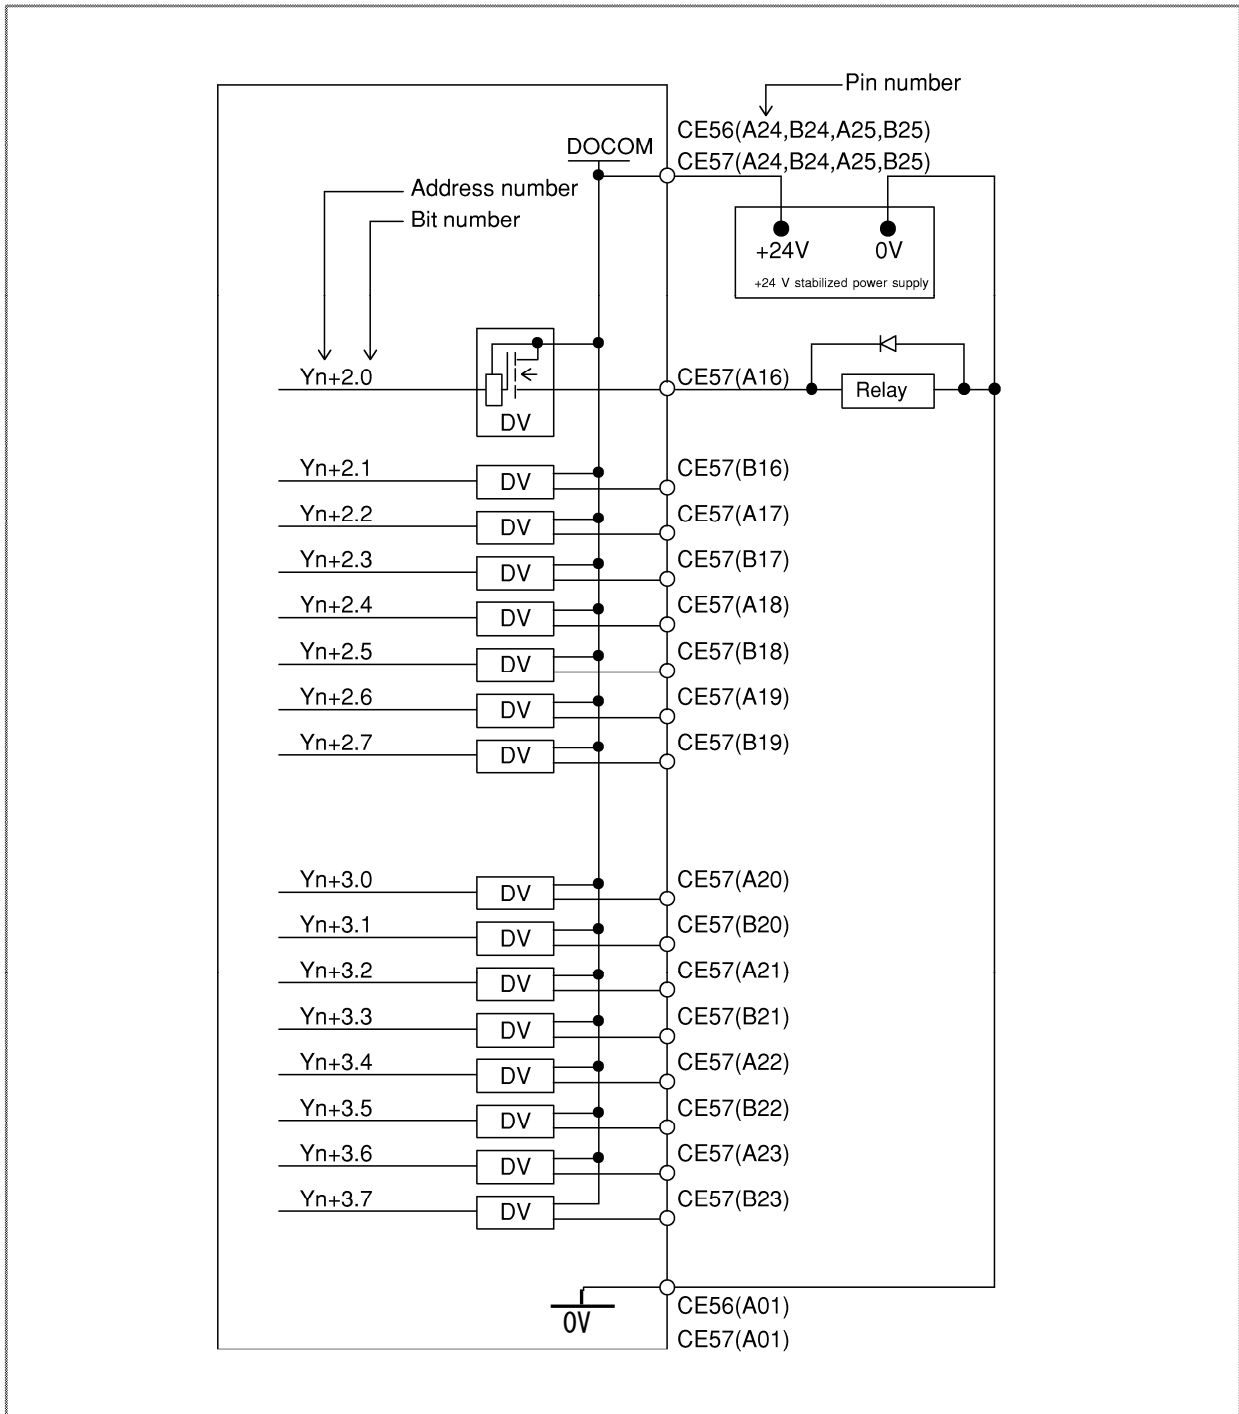

8.4.6 Manual Pulse Generator Connection

For an I/O module for operator's panel, three manual pulse generators can be connected. For the connection, see Subsection 7.4.1.

8.4.7 External View

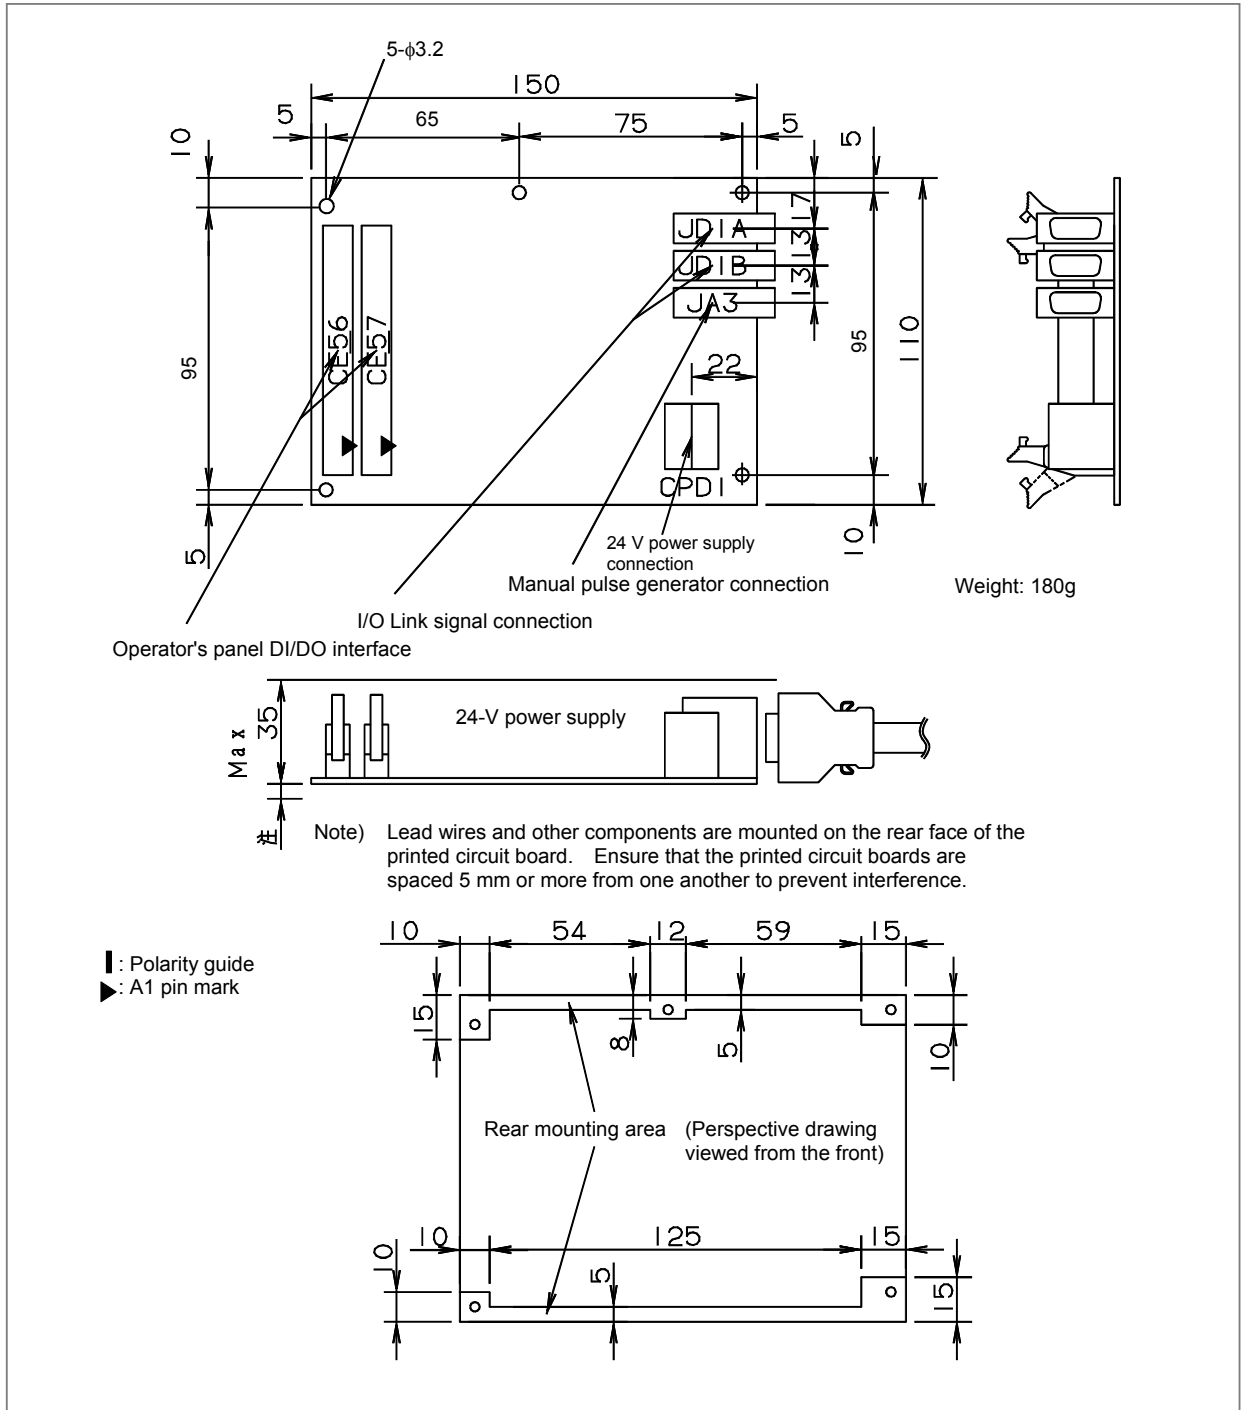

8.4.8 Specifications

Installation specifications

Install the I/O module in a fully enclosed cabinet.

For other installation conditions, conform to the CNC installation conditions.

Ordering specifications

Item	Ordering specifications	Remarks
I/O module for operator's panel B1 (with MPG interface)	A03B-0824-K202	DI : 48 points DO : 32 points With MPG interface
I/O module for power magnetism cabinet B2 (without MPG interface)	A03B-0824-K203	DI : 48 points DO : 32 points Without MPG interface
Fuse (spare parts)	A03B-0815-K001	1A

Module specifications

Item	Specification	Remarks
DI points	48 points	24-V input
DO points	32 points	24 V source type output
MPG interface	Max. 3 units	For A03B-0824-K202

Power supply rating

Module	Supply voltage	Power supply rating	Remarks
I/O module for operator's panel and I/O module for power magnetism cabinet	24 VDC $\pm 10\%$ supplied from the power supply connector CPD1. The allowance of $\pm 10\%$ should include instantaneous voltage and ripple voltage.	0.3A+7.3mA×DI	DI = number of DI points in the ON state

NOTE

To connect an optical adapter for the I/O Link i to both connectors JD1A and JD1B, the above power supply rating + 70 mA is required.

DI (input signal specifications) (General-purpose input signal)

Rated input	24 VDC, 7.3 mA
Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1 mA or less (26.4 V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)
Delay time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

DO (output signal specifications)

Maximum load current when ON	200 mA or less including momentary current per signal. 5.6 A or less for DO signals in all
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

⚠ CAUTION

- 1 When inductive load is connected to DO terminal, connect a diode in parallel in order to reduce the noise..
- 2 When capacitive load is connected to DO terminal, connect a resistor in series in order to diminish the rush current.

Power supply for DO load (DOCOM)

Input voltage : min 0V, max 26.4V

Be sure to connect all power supply for DO load (DOCOM) pins.

Turn on the power supply for DO load (DOCOM) at the same time as the power for the control unit.

Turn off the power supply for DO load (DOCOM) when or before the power for the control unit is turned off.

⚠ WARNING

For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If the power for the load (DOCOM) is supplied when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.

8.4.9 Other Notes

Address allocation

For this I/O module, I/O addresses are mapped as follows.

DI space map			DO space map		
Xm ₁	Input signal	Slot 1	Yn ₁	Output signal	Slot 1
Xm ₁ + 1			Yn ₁ + 1		
Xm ₁ + 2			Yn ₁ + 2		
Xm ₁ + 3			Yn ₁ + 3		
Xm ₁ + 4					
Xm ₁ + 5					
Xm _{mpg} (for 1st MPG)	Manual pulse generator	Slot MPG			
Xm _{mpg} + 1 (for 2nd MPG)					
Xm _{mpg} + 2 (for 3rd MPG)					

Xm₁, Xm_{mpg}, and Yn₁ indicate the start address at allocation.

Basically, for this I/O module, allocate 6-byte DI addresses to slot 1 and 4-byte DO addresses to slot 1. An I/O module for operator's panel has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use this area with the ladder because the CNC processes the manual pulse generator signals directly.

ON/OFF of the power supply (DO common) for DO signals (output signals)

For ON/OFF of the power supply pin (DOCOM) for the DO signals (output signals), see Subsection 8.2.4.4.

Parallel DO (output signal) connection

For parallel connections of DO signals (output signals), see Subsection 8.2.4.4.

DO (output signal) alarm detection

The DO driver of the I/O module is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as the connecting of the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal for the relevant 1 byte in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continues operating without entering the alarm status, but the DO driver which detected the error can be checked. If a DO error occurs, this information can be checked on the CNC DGN screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

For connection to the I/O Link i, a DO error such as a ground fault is detected for each point. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Y _n	0th byte DO
				1	Y _{n+1}	1st byte DO
				2	Y _{n+2}	2nd byte DO
				3	Y _{n+3}	3rd byte DO

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Y_n indicates the start address at allocation.

Description of “Alarm data” in the system relay area


Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

⚠ CAUTION

- 1 The output protection function is not for external equipment but for internal device of the module.
- 2 The output protection function can't protect the internal device in any case. If the output protection function is activated, remove the cause immediately. If the output exceed the absolute maximum rating, the output protection function may not operate normally or the internal device may break before the output protection function operates.
- 3 If the over current is continued with a condition that the output protection function can't operate normally, the internal device might emit smoke or take fire.

8.4.10 Connection of the Grounding Terminal of the Module


Connect the 0V line in the basic module to the cabinet's metal plate that is connected to ground or signal ground bar nearby via the protective ground terminal. About Multipoint grounding or Single-point grounding, refer to Item 3.4.1

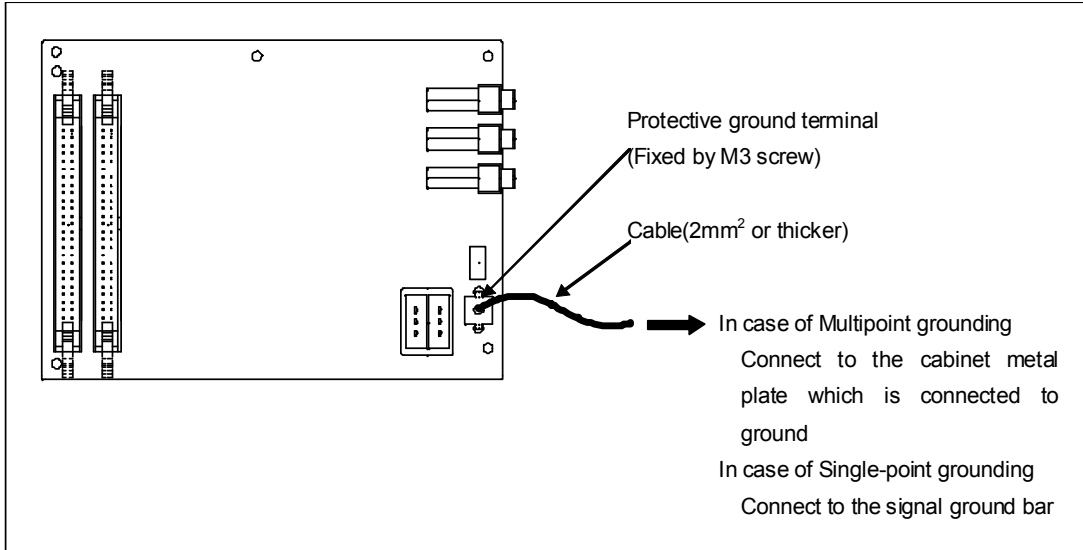

8.5 CONNECTION OF I/O MODULE TYPE-2 FOR CONNECTOR PANEL

8.5.1 Configuration

I/O module for connector panel type-2 consists of the basic module and up to one extension module as shown in the figure below.

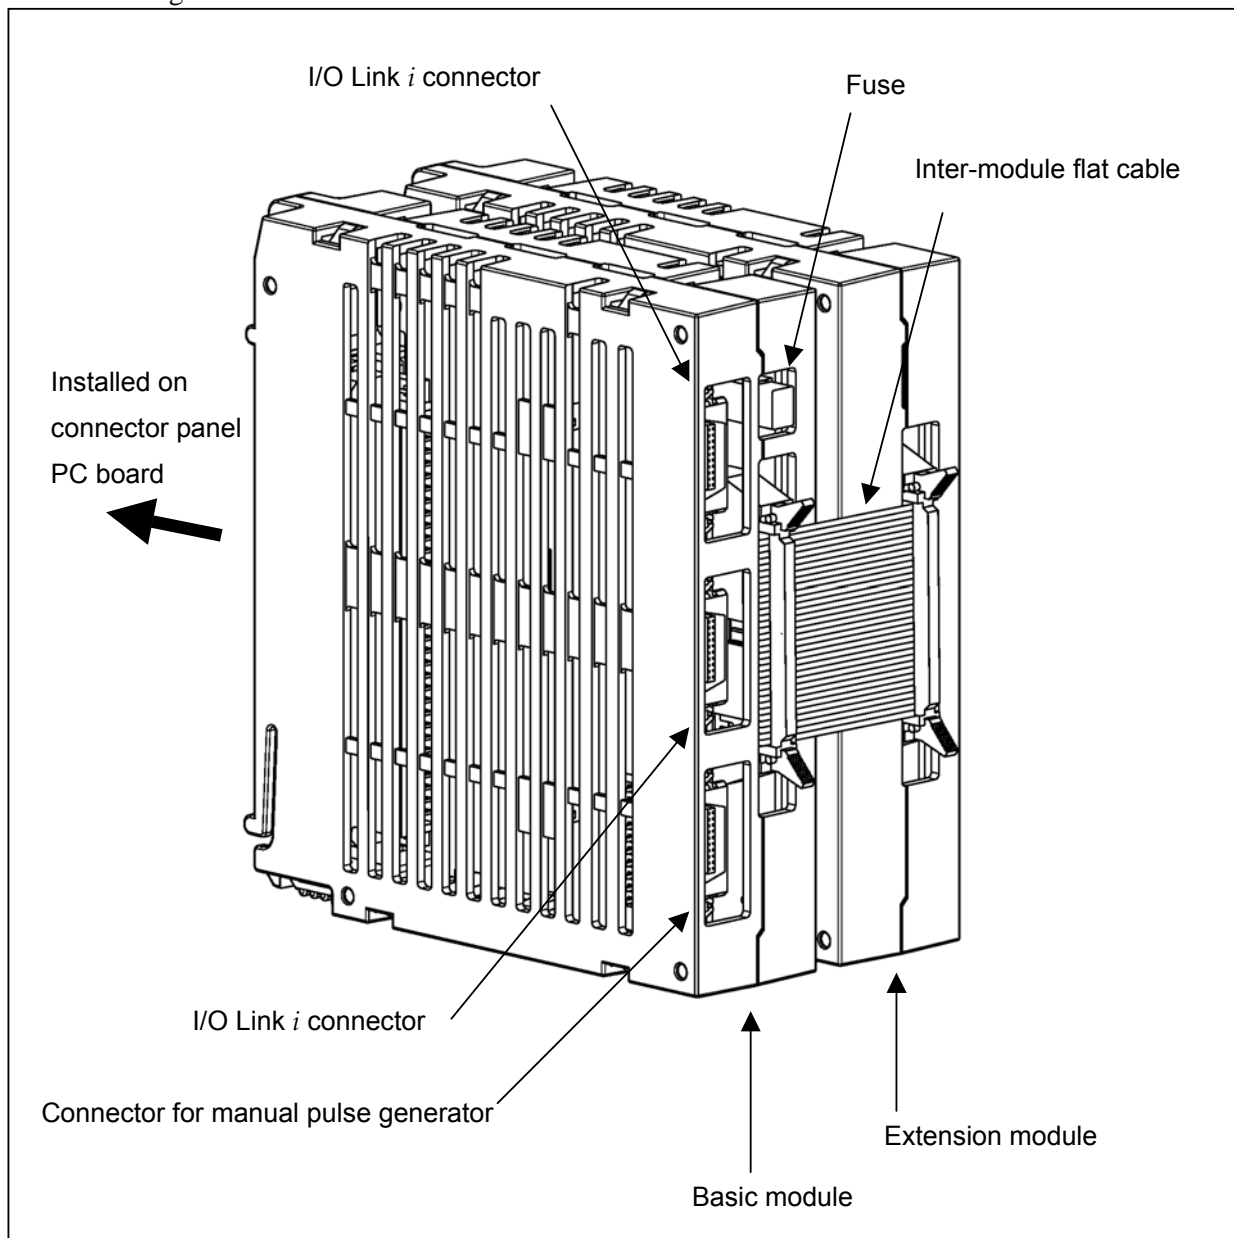


NOTE


As shown in the figure above, be sure to install the basic module to the left of the extension module, viewed from the side of the flat cable for connecting modules. This unit cannot be installed on the DIN rail.

In a maximum configuration, one basic module plus one expansion module can be installed per group as shown above (DI/DO=96/64).

8.5.2 Connector Layout Diagram

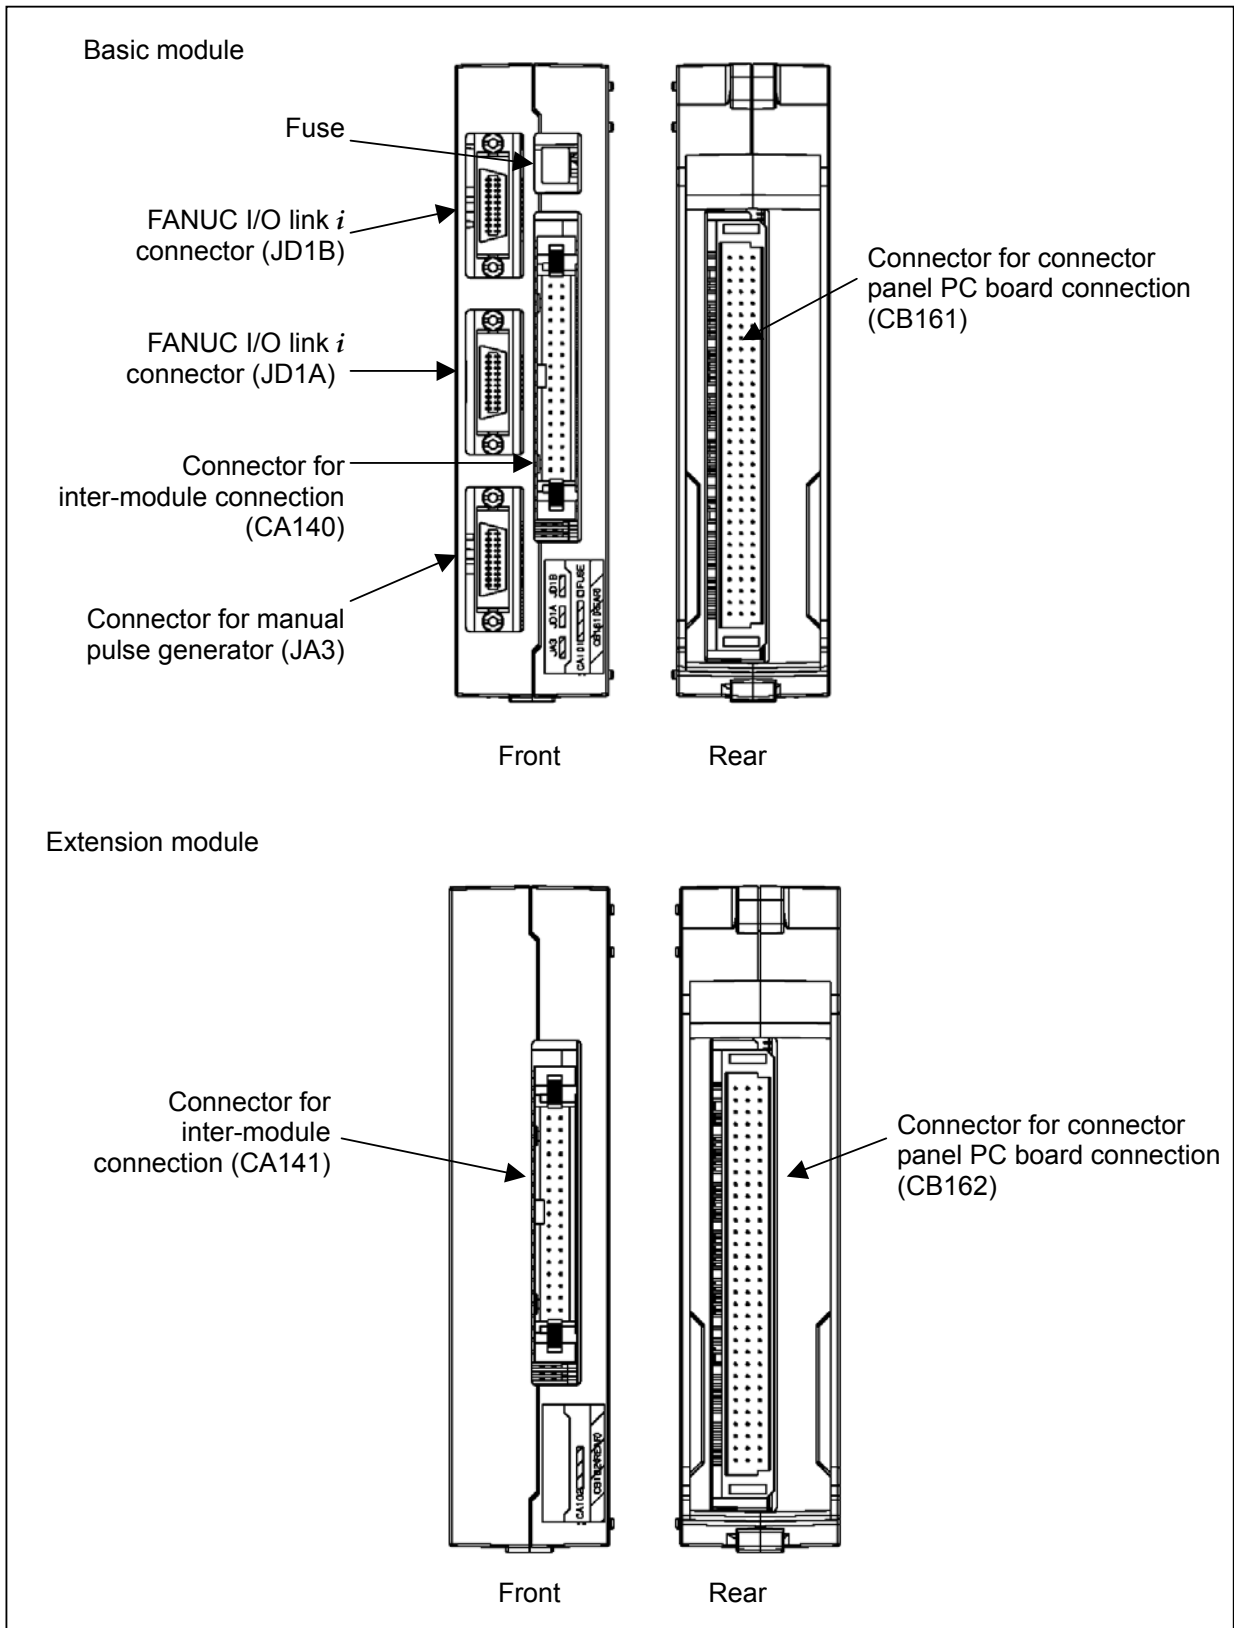

8.5.3 Connection Diagram

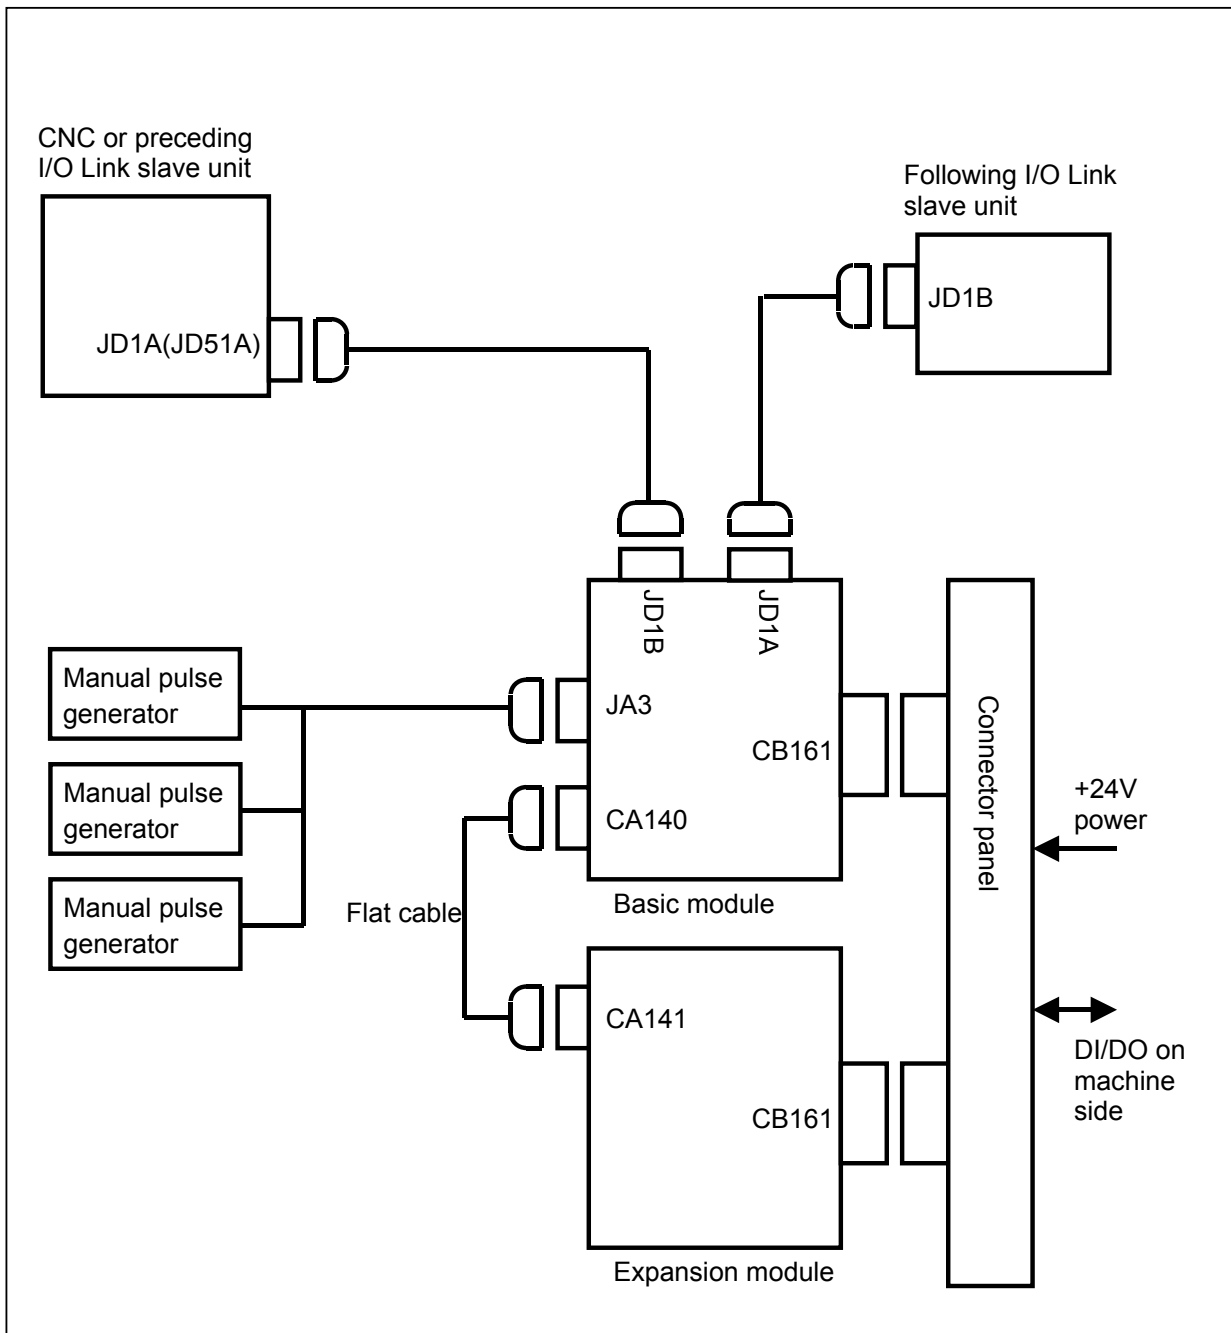

NOTE

The maximum configuration of a group consists of one basic module plus one expansion module as shown above. At this time, the number of input points is 96, and the number of output points is 64. To add points, connect an additional slave onto the I/O Link.

8.5.4 Module Specifications

Types of modules

Item	Ordering specifications	Specification
I/O module type-2 for connector panel (basic module B1)	A03B-0824-C040	DI/DO=48/32 With MPG interface
I/O module type-2 for connector panel (basic module B2)	A03B-0824-C041	DI/DO=48/32 Without MPG interface
I/O module type-2 for connector panel (extension module E1)	A03B-0824-C042	DI/DO=48/32
Fuse (spare parts)	A03B-0815-K002	1 A (for basic module)
Inter-module flat cable	A03B-0815-K102	Cable length: 35 mm Module interval: 5 mm

NOTE

Be sure to use modules with the ordering specifications listed above in combination. Do not use other modules.

Installation conditions

- (1) Use this I/O module in a completely sealed cabinet.
- (2) Use the units under the following ambient temperature conditions:
 Operation: 0°C to 55°C
 Storage and transportation: -20°C to 80°C
- (3) For other installation conditions, conform to the CNC installation conditions.
- (4) For ventilation within each I/O module, allow a clearance of 40 mm or more between modules. Moreover, allow a clearance of 50 mm or more above and below each module. Never place a device that generates a large amount of heat below an I/O module.
- (5) When mounting I/O modules, ensure that the basic module is mounted on the left side when viewed from the flat cable.

Power supply rating

Module	Supply voltage	Power supply rating	Remarks
Basic module	24 VDC $\pm 10\%$ is fed through CB161 and CB162; $\pm 10\%$ includes momentary variations and ripples.	0.3A+7.3mA \times DI	DI = number of DI points in the ON state
Extension module		0.2A+7.3mA \times DI	DI = number of DI points in the ON state

As a guideline for heat dissipation, assume [power supply rating \times 24 (W)].

NOTE

- 1 The above power supply rating does not include that to be input to DOCOM for DO output.
- 2 To connect an optical adapter for the I/O Link i to both connectors JD1A and JD1B on the basic module, the above power supply rating + 70 mA is required for the power supply of the basic module.

8.5.5 DI/DO Connector Pin Assignment

This subsection describes the DI/DO connector pin assignment of the basic module and extension modules.

Basic module
CB161(HONDA MRF-96MLST)

	A	B	C
32	+24V	+24V	+24V
31	0V	0V	0V
30	0V	0V	0V
29		DICOM0	Xm+0.0
28	Xm+0.1	Xm+0.2	Xm+0.3
27	Xm+0.4	Xm+0.5	Xm+0.6
26	Xm+0.7	Xm+1.0	Xm+1.1
25	Xm+1.2	Xm+1.3	Xm+1.4
24	Xm+1.5	Xm+1.6	Xm+1.7
23	Xm+2.0	Xm+2.1	Xm+2.2
22	Xm+2.3	Xm+2.4	Xm+2.5
21	Xm+2.6	Xm+2.7	Xm+3.0
20	Xm+3.1	Xm+3.2	Xm+3.3
19	Xm+3.4	Xm+3.5	Xm+3.6
18	Xm+3.7	Xm+4.0	Xm+4.1
17	Xm+4.2	Xm+4.3	Xm+4.4
16	Xm+4.5	Xm+4.6	Xm+4.7
15	Xm+5.0	Xm+5.1	Xm+5.2
14	Xm+5.3	Xm+5.4	Xm+5.5
13	Xm+5.6	Xm+5.7	DICOM3
12	Yn+3.5	Yn+3.6	Yn+3.7
11	Yn+3.2	Yn+3.3	Yn+3.4
10	Yn+2.7	Yn+3.0	Yn+3.1
9	Yn+2.4	Yn+2.5	Yn+2.6
8	Yn+2.1	Yn+2.2	Yn+2.3
7	DOCOM23	DOCOM23	Yn+2.0
6	Yn+1.5	Yn+1.6	Yn+1.7
5	Yn+1.2	Yn+1.3	Yn+1.4
4	Yn+0.7	Yn+1.0	Yn+1.1
3	Yn+0.4	Yn+0.5	Yn+0.6
2	Yn+0.1	Yn+0.2	Yn+0.3
1	DOCOM01	DOCOM01	Yn+0.0

Extension module
CB162(HONDA MRF-96MLST)

	A	B	C
32	+24V	+24V	+24V
31	0V	0V	0V
30	0V	0V	0V
29		DICOM6	Xm+6.0
28	Xm+6.1	Xm+6.2	Xm+6.3
27	Xm+6.4	Xm+6.5	Xm+6.6
26	Xm+6.7	Xm+7.0	Xm+7.1
25	Xm+7.2	Xm+7.3	Xm+7.4
24	Xm+7.5	Xm+7.6	Xm+7.7
23	Xm+8.0	Xm+8.1	Xm+8.2
22	Xm+8.3	Xm+8.4	Xm+8.5
21	Xm+8.6	Xm+8.7	Xm+9.0
20	Xm+9.1	Xm+9.2	Xm+9.3
19	Xm+9.4	Xm+9.5	Xm+9.6
18	Xm+9.7	Xm+10.0	Xm+10.1
17	Xm+10.2	Xm+10.3	Xm+10.4
16	Xm+10.5	Xm+10.6	Xm+10.7
15	Xm+11.0	Xm+11.1	Xm+11.2
14	Xm+11.3	Xm+11.4	Xm+11.5
13	Xm+11.6	Xm+11.7	DICOM9
12	Yn+7.5	Yn+7.6	Yn+7.7
11	Yn+7.2	Yn+7.3	Yn+7.4
10	Yn+6.7	Yn+7.0	Yn+7.1
9	Yn+6.4	Yn+6.5	Yn+6.6
8	Yn+6.1	Yn+6.2	Yn+6.3
7	DOCOM67	DOCOM67	Yn+6.0
6	Yn+5.5	Yn+5.6	Yn+5.7
5	Yn+5.2	Yn+5.3	Yn+5.4
4	Yn+4.7	Yn+5.0	Yn+5.1
3	Yn+4.4	Yn+4.5	Yn+4.6
2	Yn+4.1	Yn+4.2	Yn+4.3
1	DOCOM45	DOCOM45	Yn+4.0


NOTE


- 1 Each of Xm and Yn represents the start address of the module on the I/O Link.
- 2 The A32, B32, and C32 pins of each connector are used to feed 24 V to the module externally. Be sure to connect these pins. Be sure to connect the A30, A31, B30, B31, C30, and C31 pins to the 0 V power supply.


8.5.6 DI (Input Signal) Connection


This subsection describes the DI (input signal) connections of the basic module and extension modules.


- 96 points maximum (Up to 48 points (basic module) + 48 points (extension modules) can be connected.)

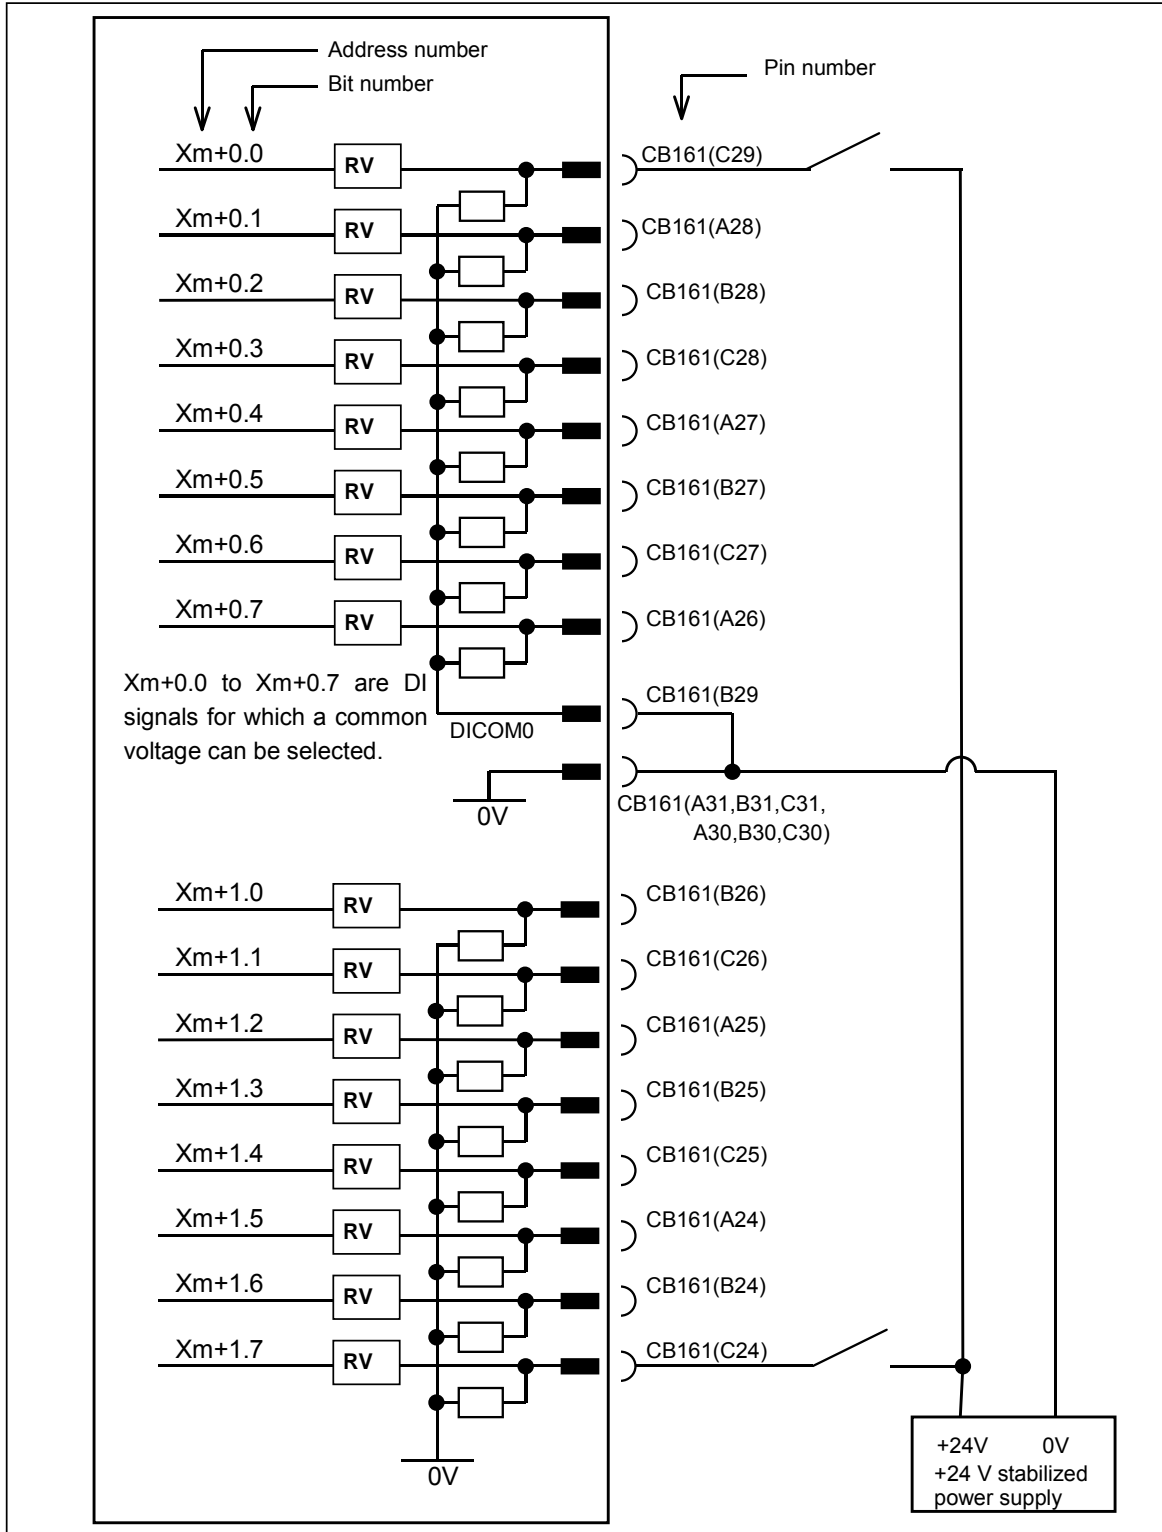


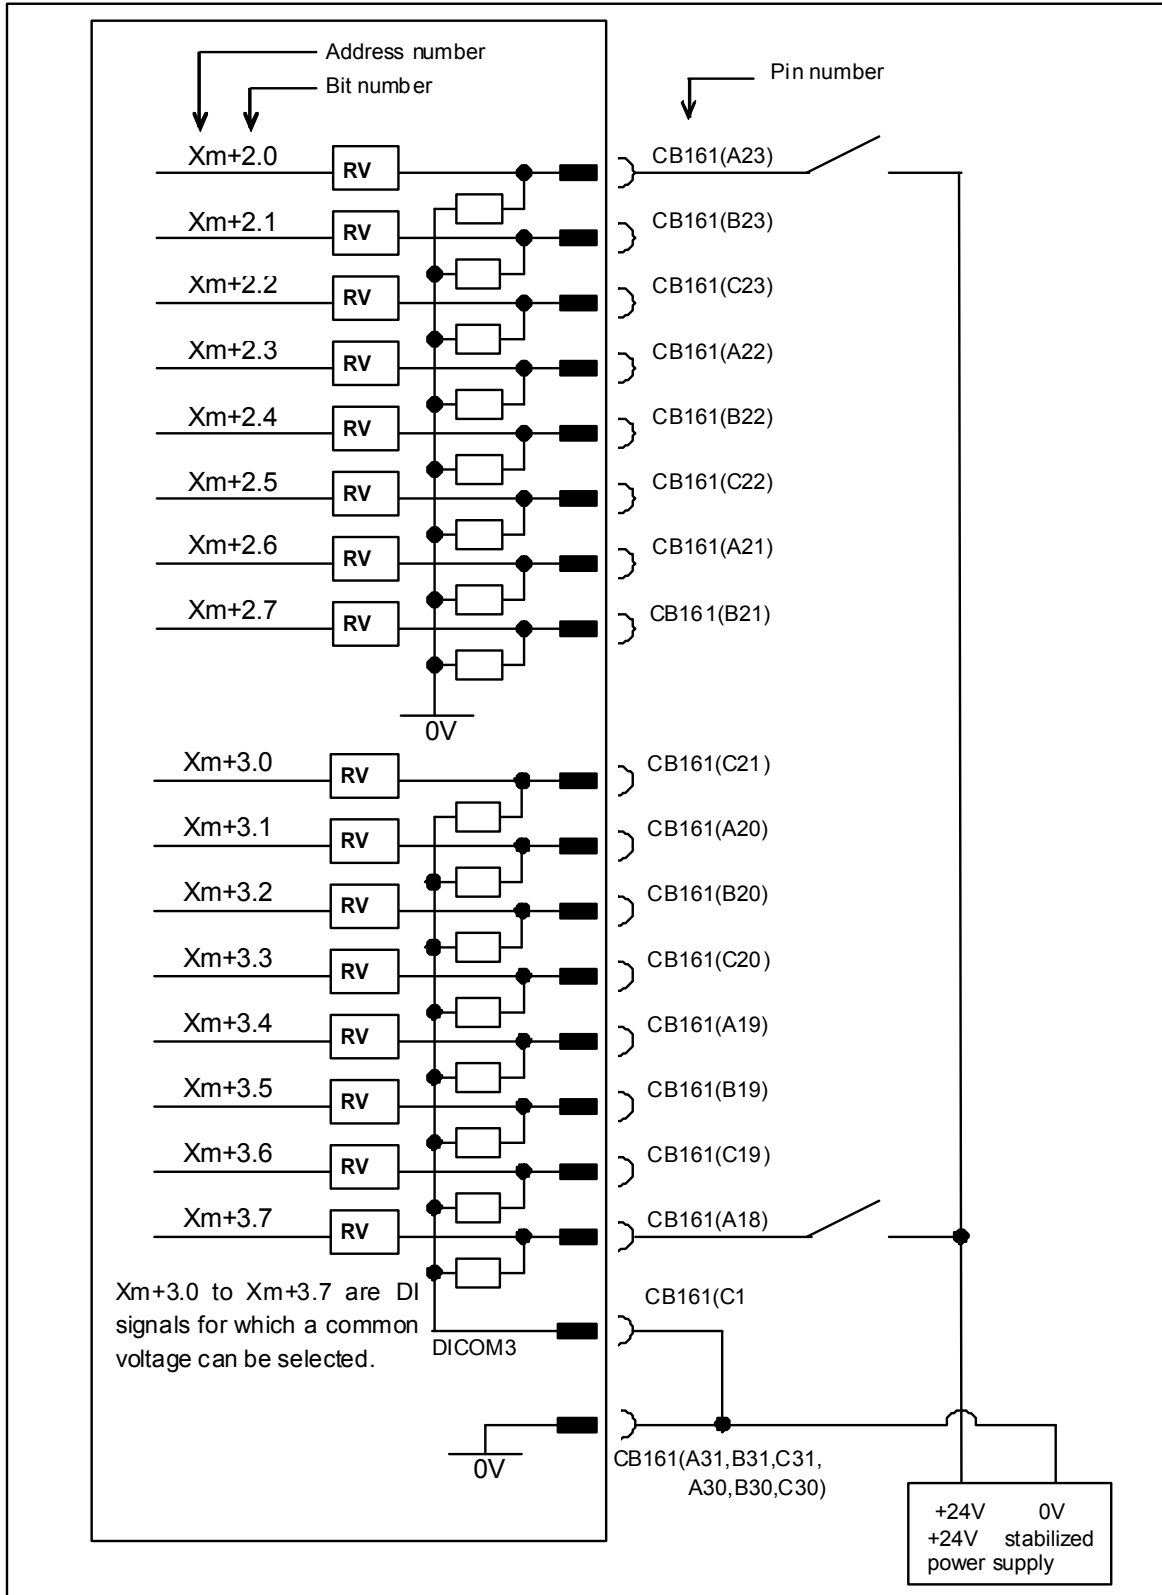

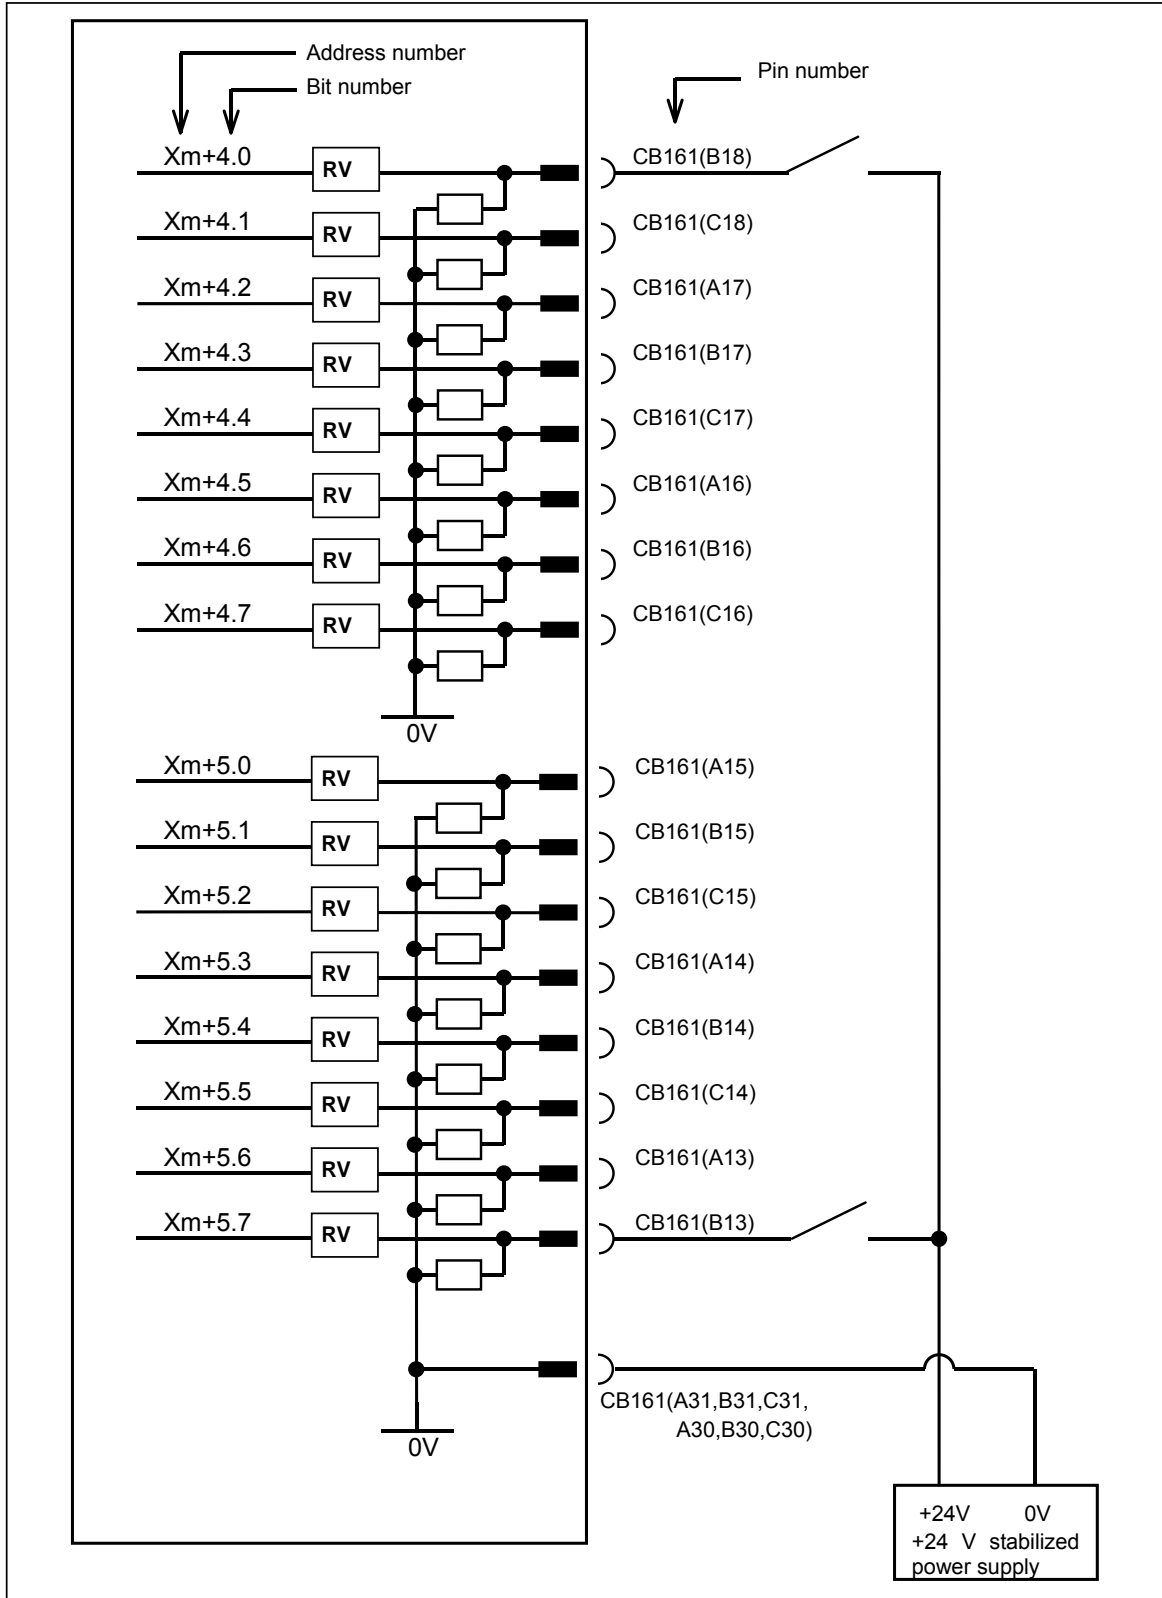

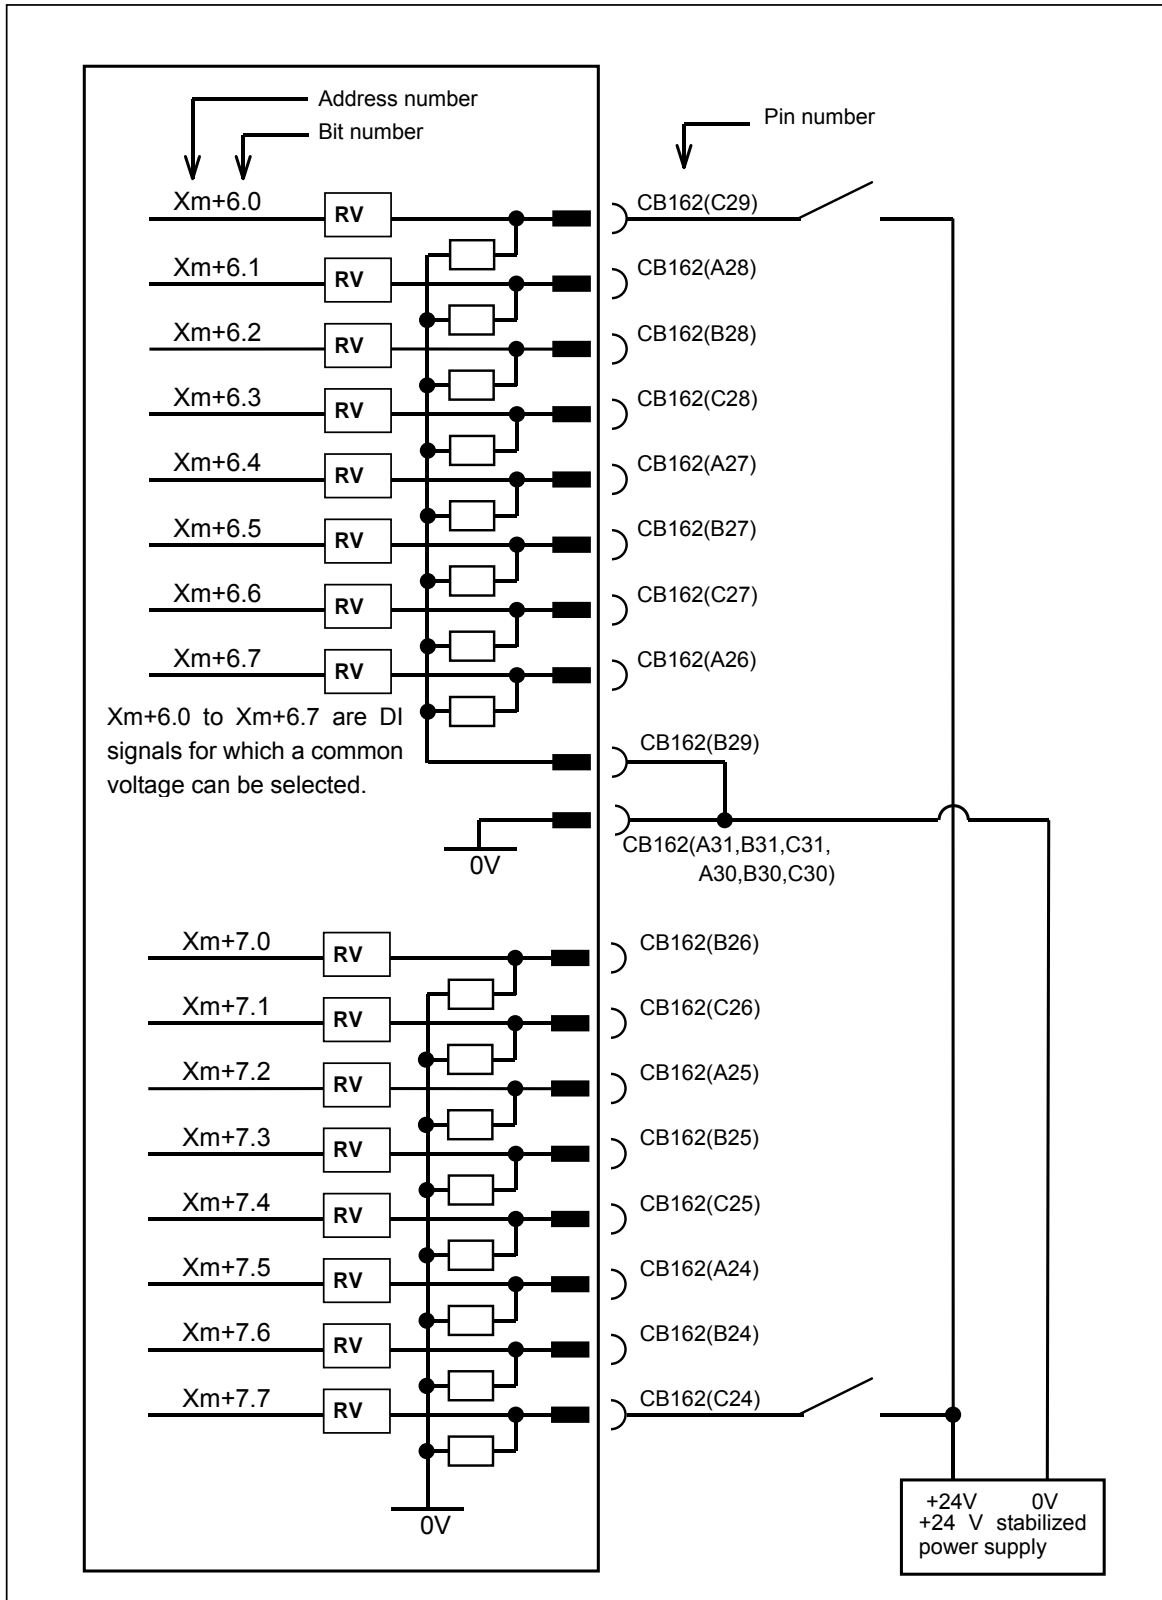

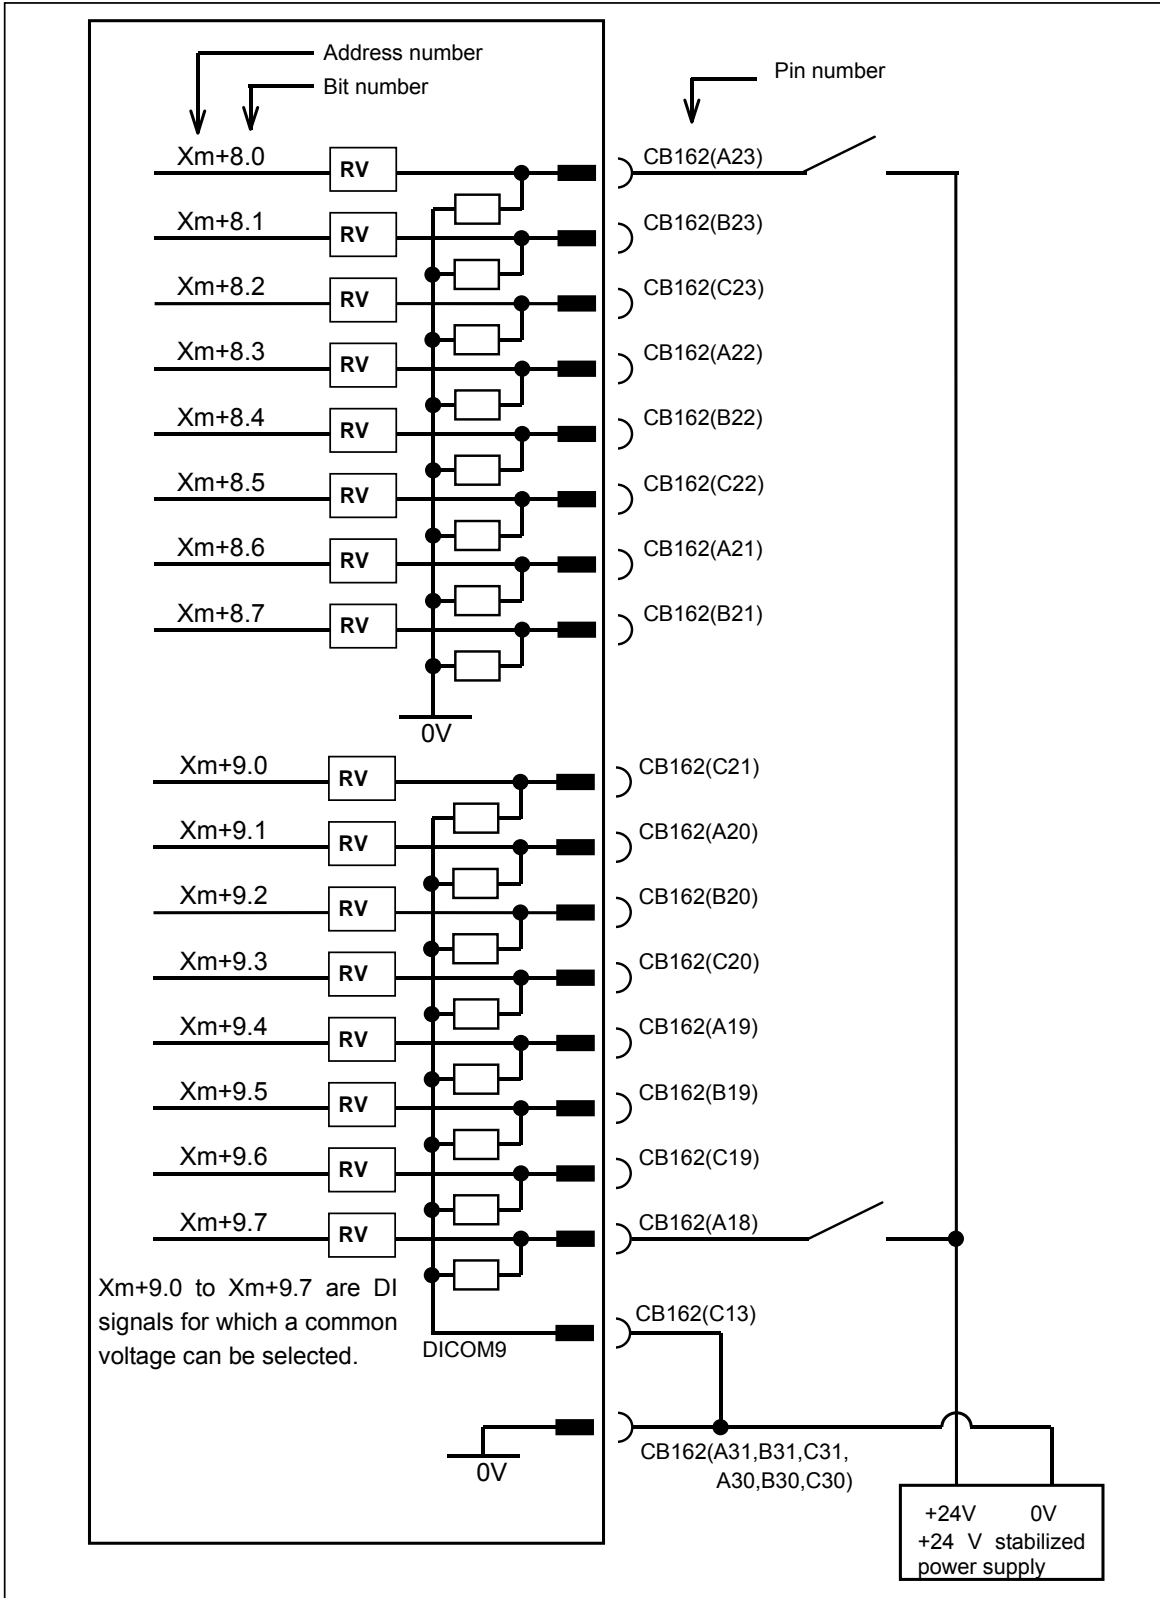

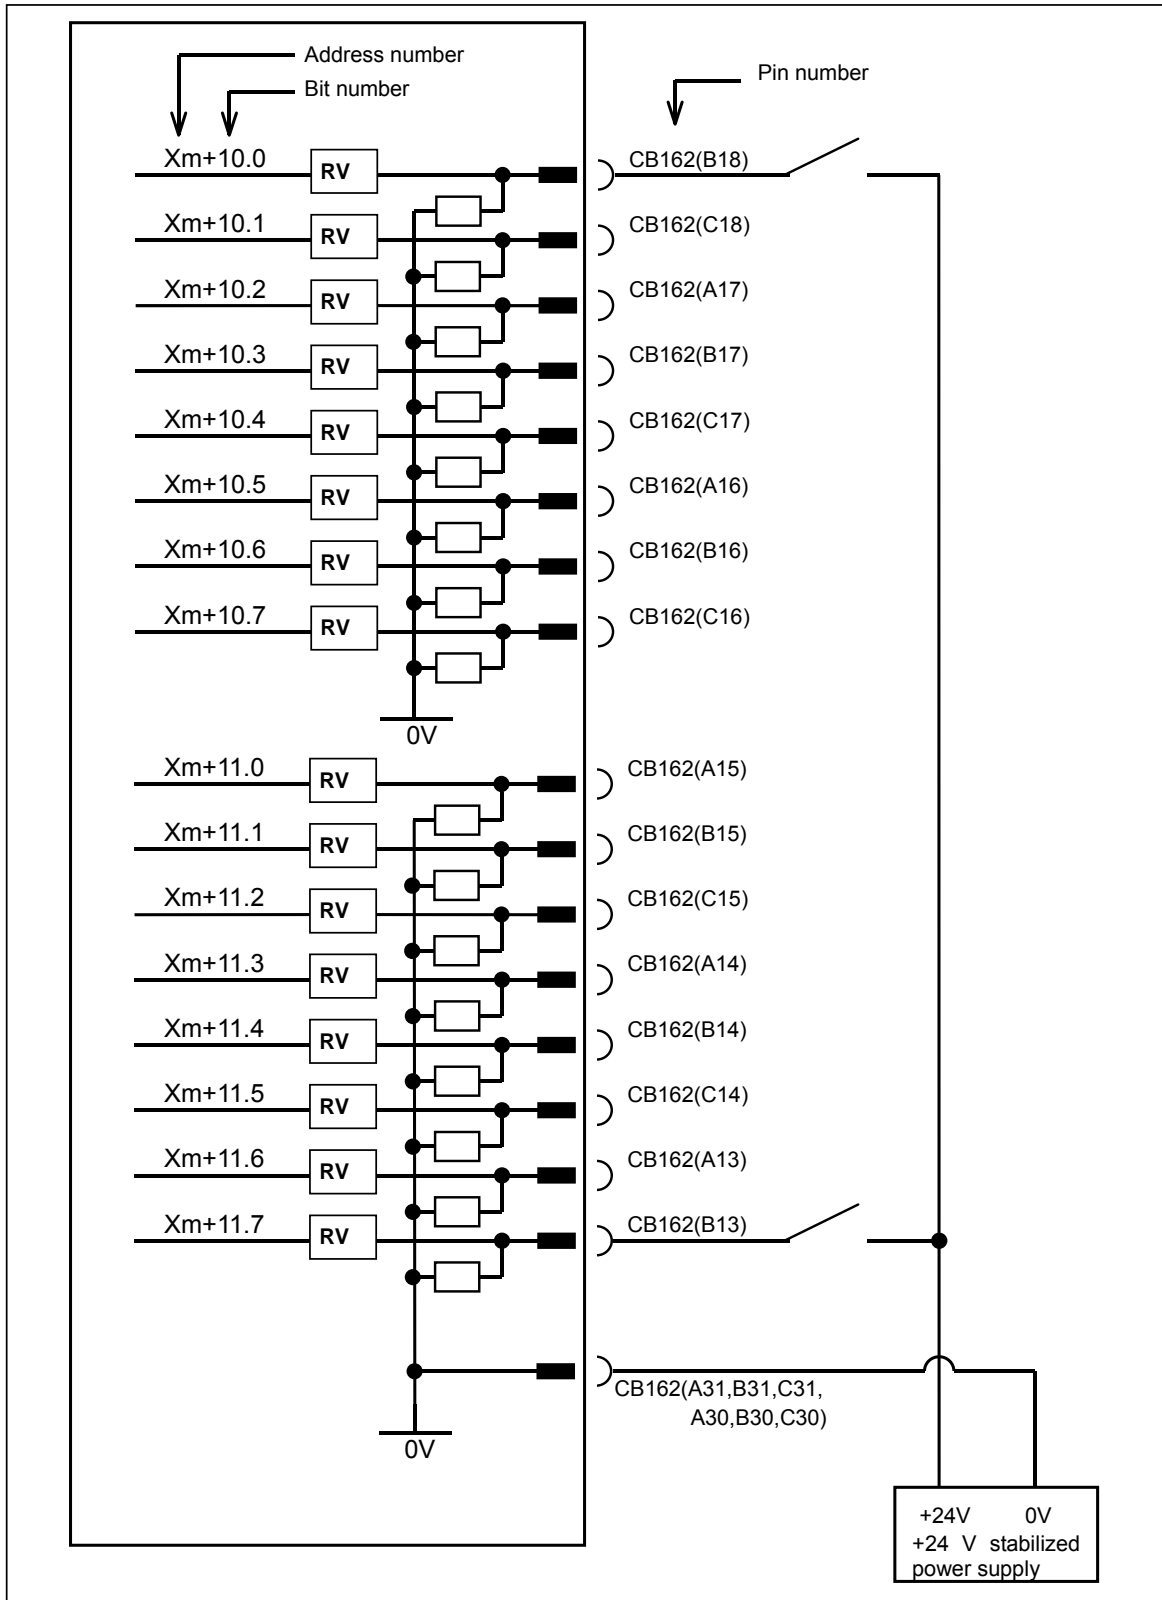

NOTE

A common voltage can be selected for DI signals at Xm+0.0 to Xm+0.7, Xm+3.0 to Xm+3.7, Xm+6.0 to Xm+6.7, and Xm+9.0 to Xm+9.7. That is, by connecting the DICOM0, DICOM3, DICOM6, and DICOM9 pins to the +24 V power supply, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. To prevent such accidents, the connection of these pins to the 0 V power supply is recommended wherever possible.


For the unconnected pins at the addresses for which the common voltage is fixed, the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected, the input is "0" when the DICOMx common select pin is connected to the 0 V power supply or "1" when it is connected to the +24 V power supply. Connect DICOM0, DICOM3, DICOM6, and DICOM9 when used. When the corresponding address input is not used, connect the DICOM pins to the 0 V power supply.


Common voltage for general-purpose DI


Address	Common voltage
Xm	Can be selected with DICOM0.
Xm+1	Cannot be selected.
Xm+2	Cannot be selected.
Xm+3	Can be selected with DICOM3.
Xm+4	Cannot be selected.
Xm+5	Cannot be selected.
Xm+6	Can be selected with DICOM6.
Xm+7	Cannot be selected.
Xm+8	Cannot be selected.
Xm+9	Can be selected with DICOM9.
Xm+10	Cannot be selected.
Xm+11	Cannot be selected.


8.5.7 DO (Output Signal) Connection

This subsection describes the DO (output signal) connections of the basic module and extension modules.
 ○ 64 points maximum (Up to 32 points (basic module) + 32 points (extension modules) can be connected.)

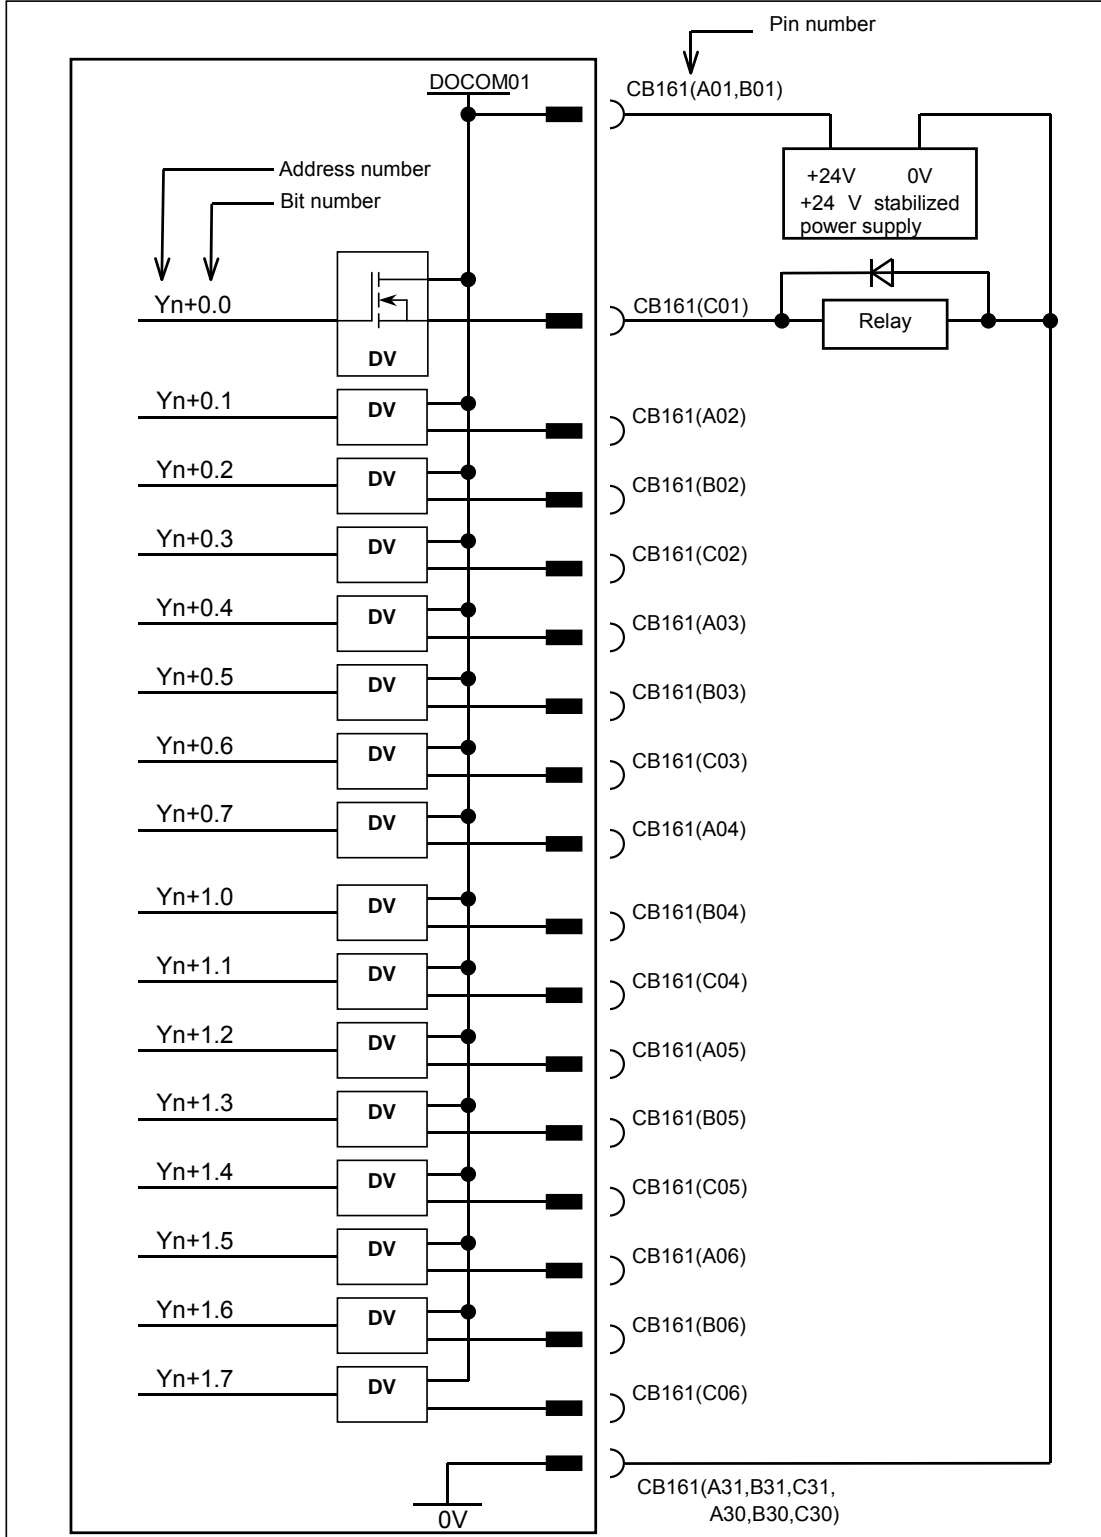

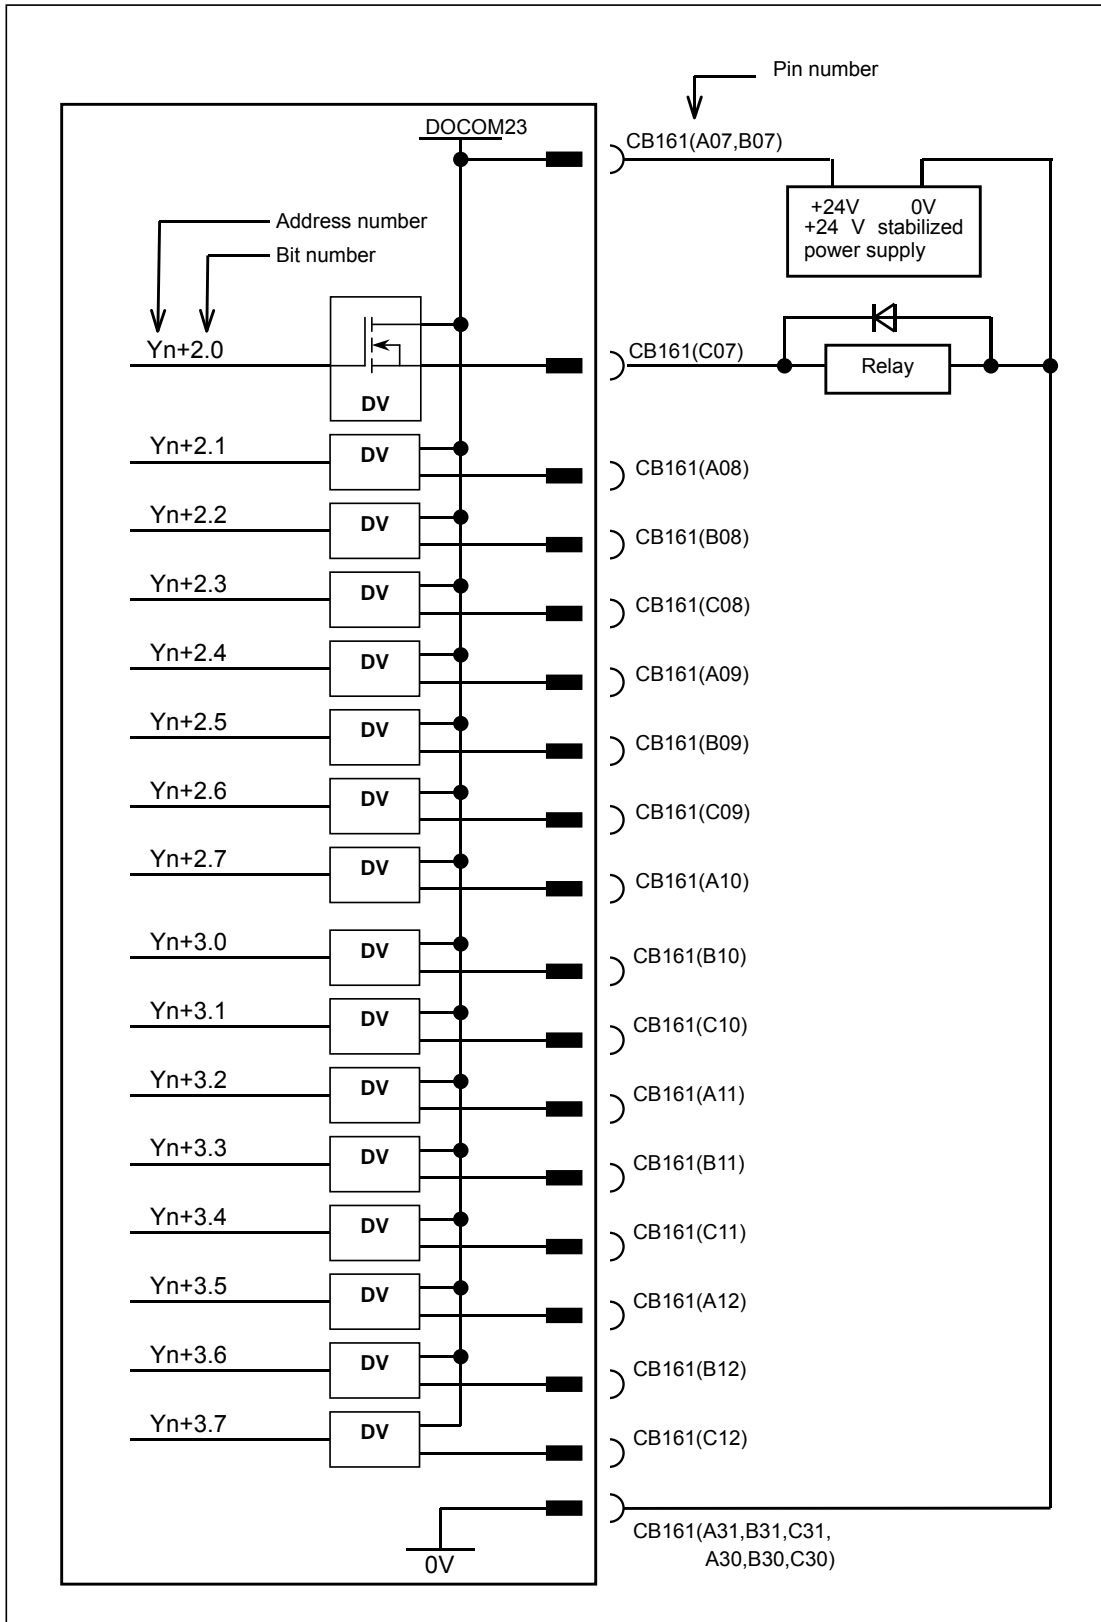

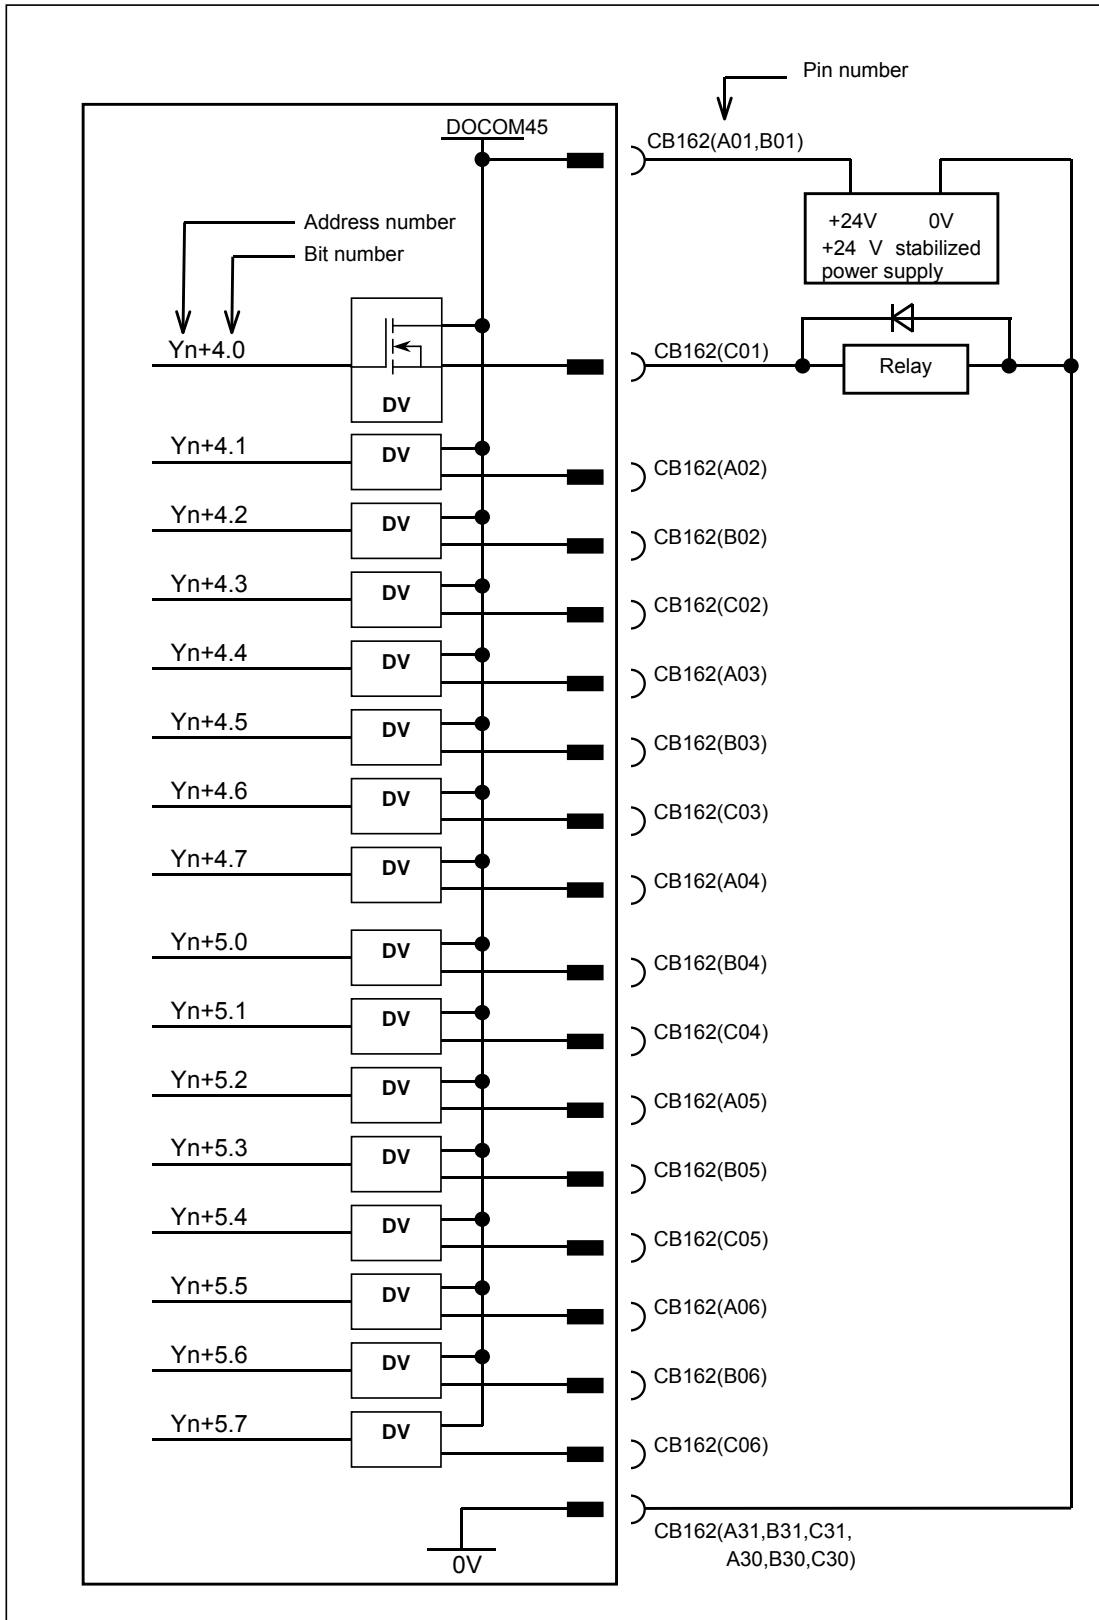

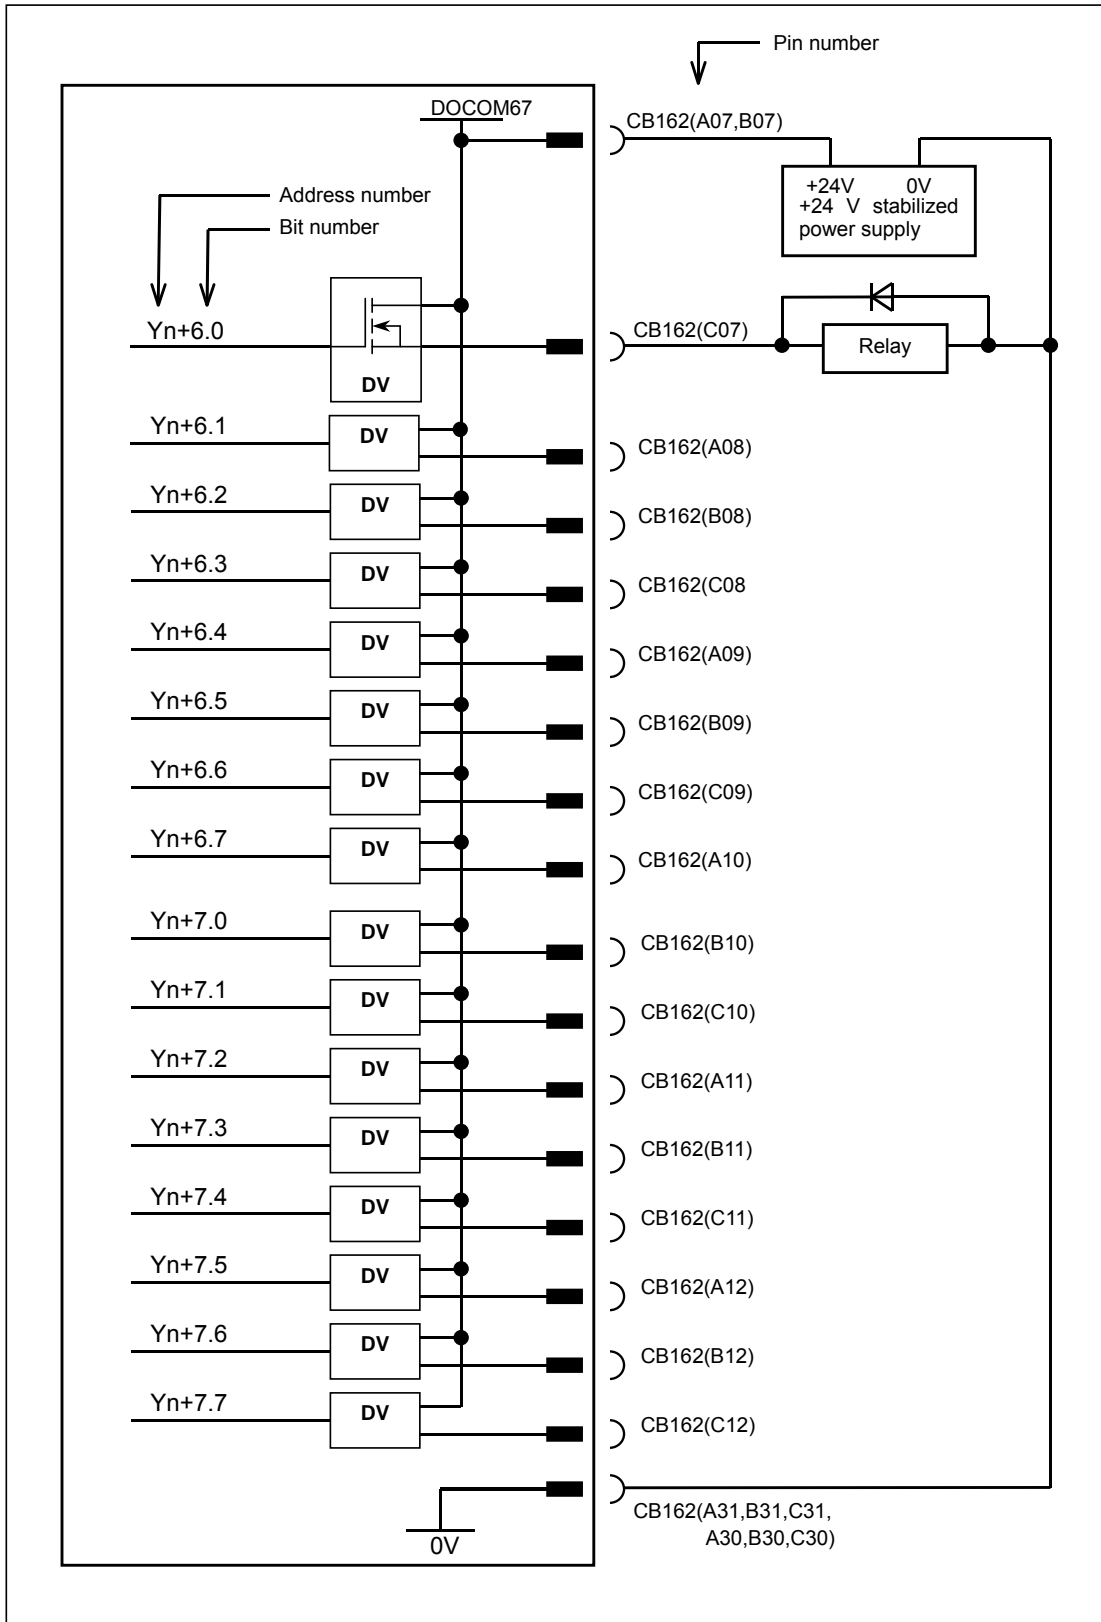

8.5.8 DI/DO Signal Specifications

This subsection describes the specifications of the DI/DO signals used with the basic module and extension modules.

DI (input signal specifications)

Number of points	48 points (per module)
Rated input	DC24V, 7.3mA
Delay time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

DI (contact specification)

Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1mA or less(26.4V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)

DO(output signal specifications)

Number of points	32 points (per module)
Maximum load current when ON	200 mA or less including momentary variations
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

CAUTION

- 1 When inductive load is connected to DO terminal, connect a diode in parallel in order to reduce the noise..
- 2 When capacitive load is connected to DO terminal, connect a resistor in series in order to diminish the rush current.

Power supply for DO load (DOCOM)

Input voltage : min 0V, max 26.4V

Be sure to connect all power supply for DO load (DOCOM) pins.

Turn on the power supply for DO load (DOCOM) at the same time as the power for the control unit.

Turn off the power supply for DO load (DOCOM) when or before the power for the control unit is turned off.

WARNING

For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If supply the power for the load (DOCOM) when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.


ON/OFF of the power supply (DO common) for DO signals (output signals)

For ON/OFF of the power supply pin (DOCOM) for the DO signals (output signals), see Subsection 8.2.4.4.

Parallel DO (output signal) connection

For parallel connections of DO signals (output signals), see Subsection 8.2.4.4.

8.5.9 Power Supply Connection

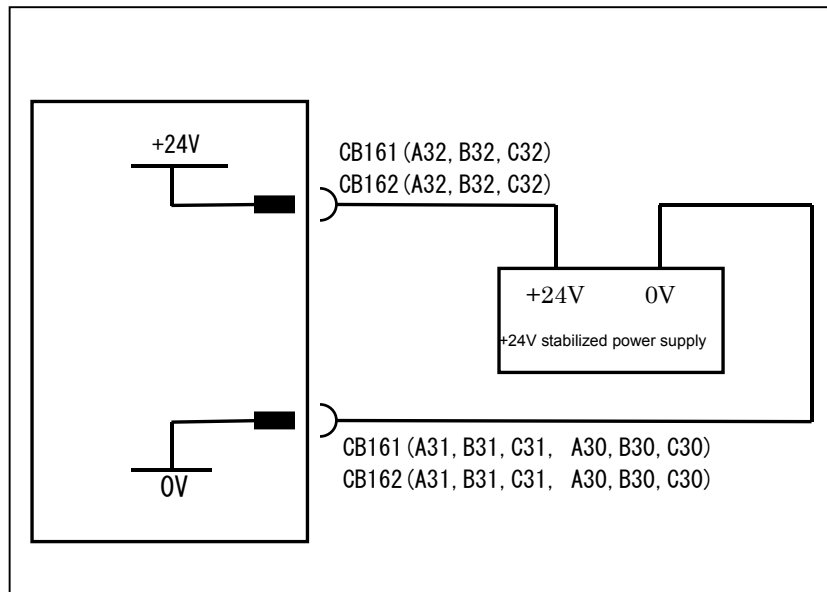


8.5.10 Manual Pulse Generator Connection

For I/O module for connector panel type-2, three manual pulse generators can be connected to the basic module.

For the connection, see Subsection 7.4.1.

8.5.11 Connection between Modules

Connect the basic module with an extension modules by using a 34-pin flat cable. At this time, install an extension modules on the right side of the basic module to prevent the I/O Link *i* connector from being covered by the flat cable.

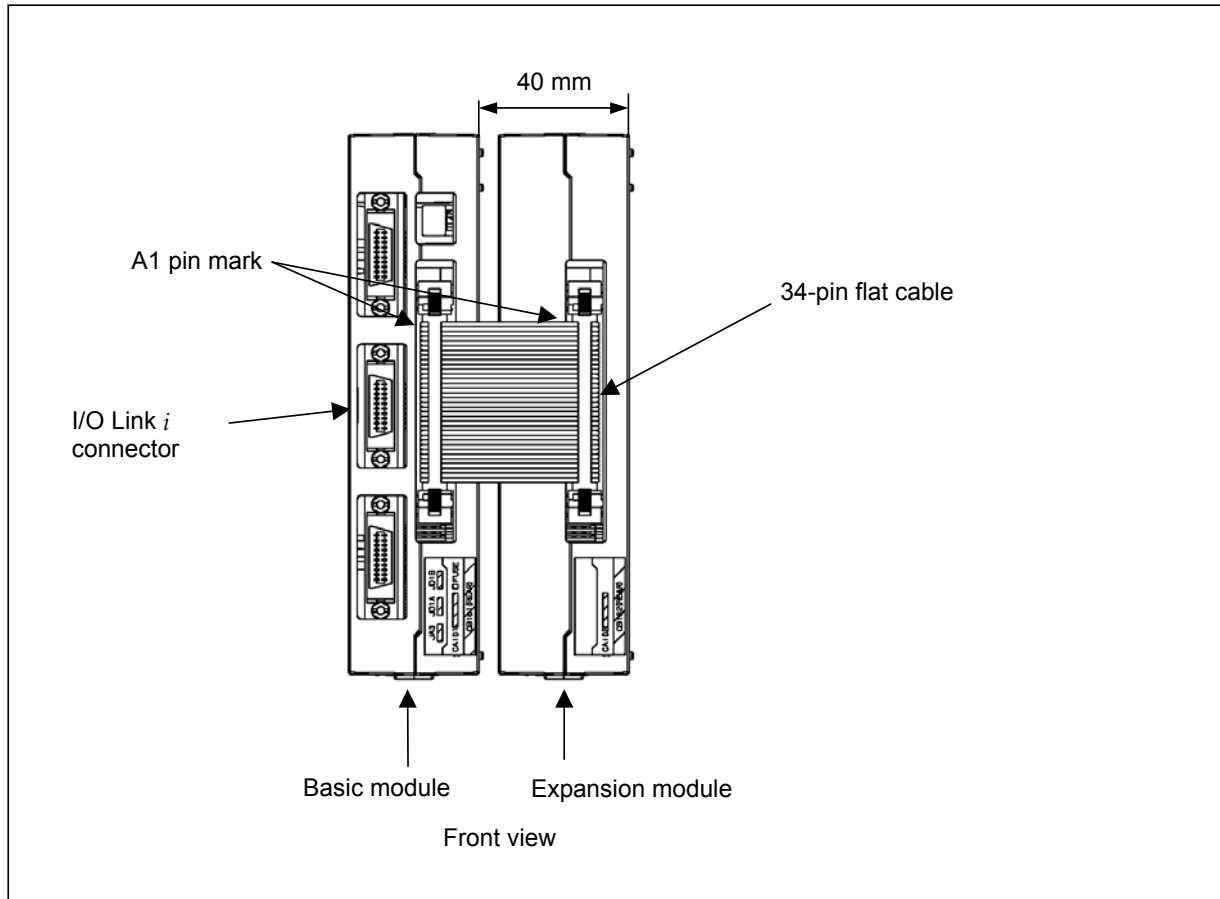

Flat cable-side connector : Hirose Electric:HIF3BA-34DA-2.54R
 Module-side connector : Hirose Electric:3BA-34PA-2.54DS or
 Yamaichi Denki:FAP-3403-1202-0BS

NOTE

When installing a flat cable, ensure that all pins are connected on a one-to-one basis.

The modules must be spaced at least 40 mm apart.


In this case, the length of the flat cable is about 35 mm. When the modules are separated furthermore, the length of the flat cable is:

$35 \text{ mm} + (\text{module spacing} - 40 \text{ mm})$

Note, however, that the maximum allowable flat cable length is 300 mm.

8.5.12 Unit Dimensions

The basic module and extension modules have the same dimensions.

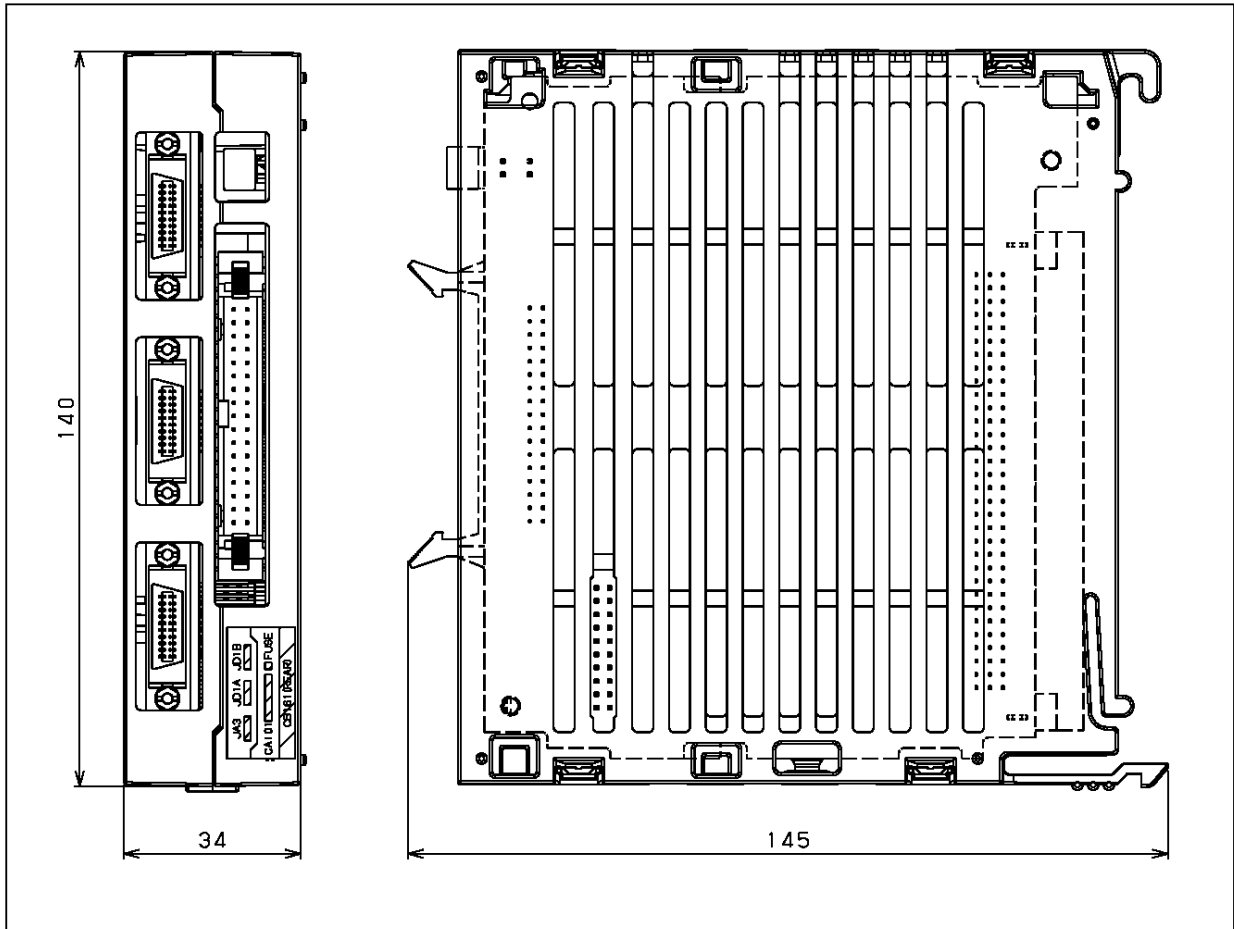

Weight: Basic module 280 g
 Extension modules 210 g

8.5.13 Mounting the Module

Mounting the module


1. Insert the hook of the module into the square hole located at the upper part of the connector panel printed circuit board.
2. Using the hook as a fulcrum, push the module in the direction of A and mate the module's connector with the connector on the printed circuit board.
3. Push the stopper into the square hole located at the lower part of the connector panel printed circuit board until it clicks into place.

Dismounting the module


1. Press point B of the stopper.
2. Using the hook as a fulcrum, pull the lower part of the module in the direction of C.


NOTE

When mounting and dismounting a module, hold the module by its top and bottom surfaces. Avoid applying force to the sides (where slits are provided).

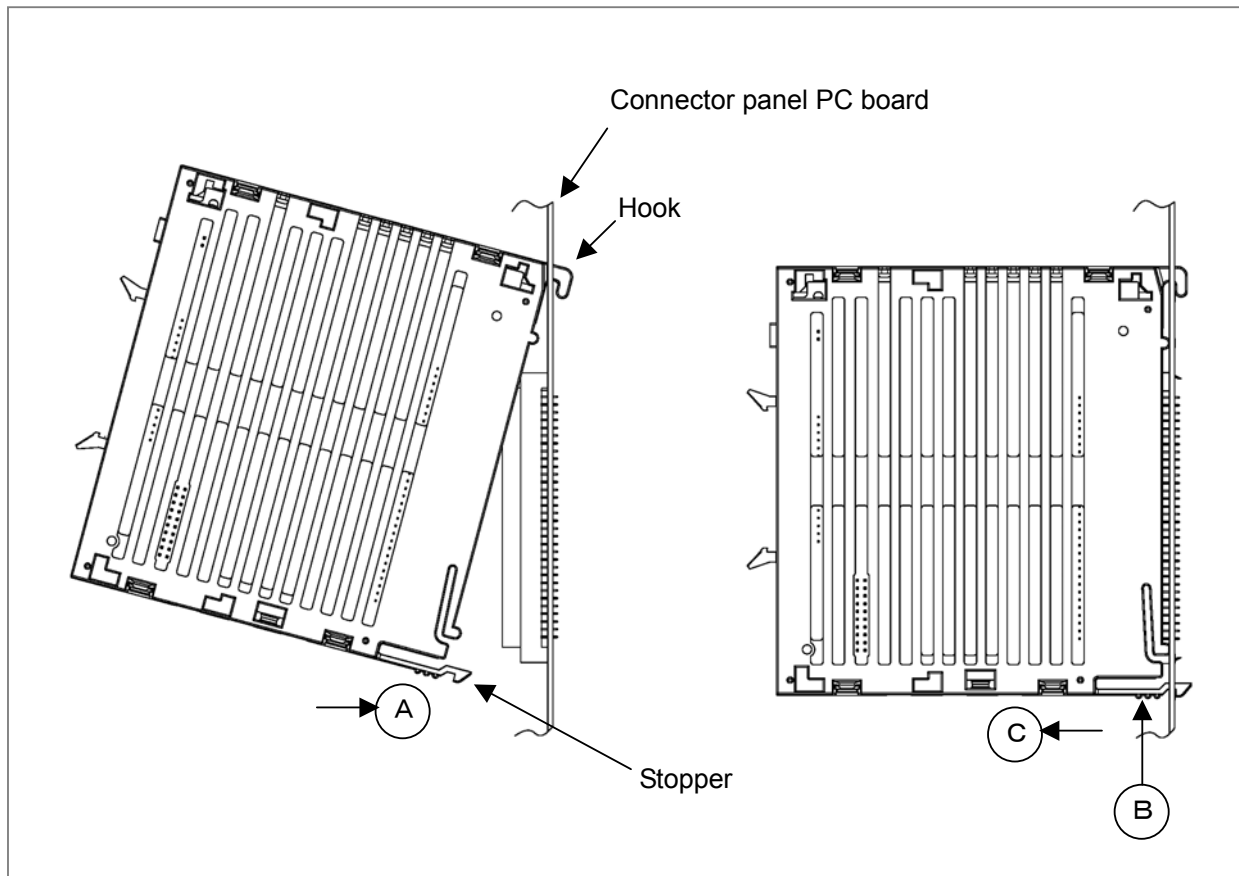


8.5.14 Connector Panel Printed Circuit Board

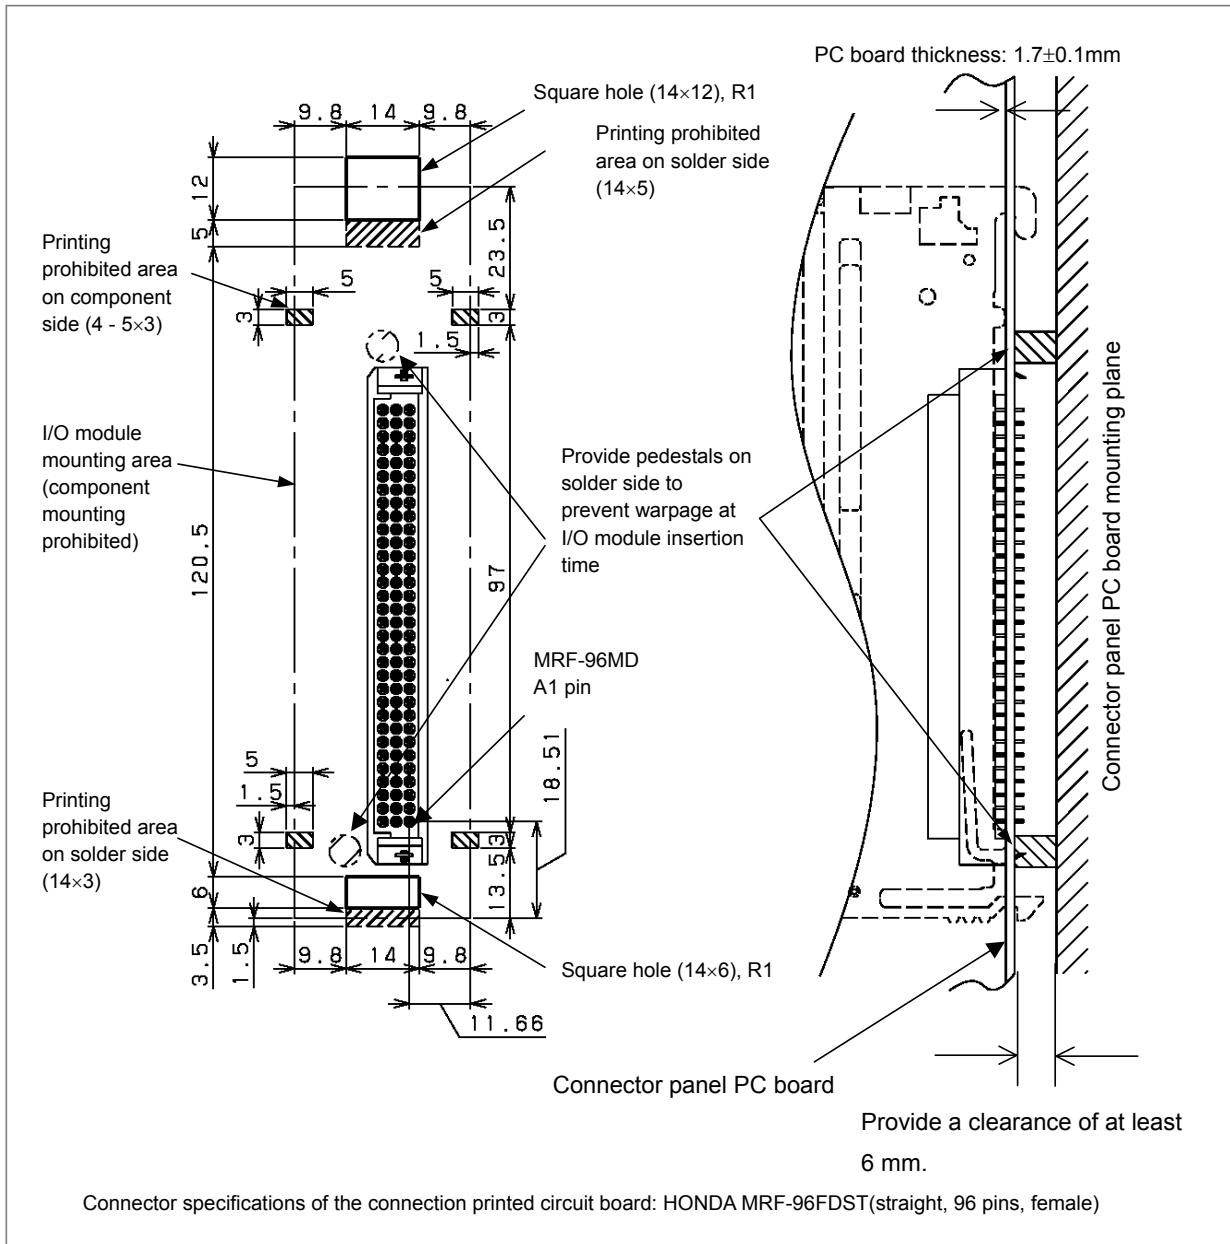

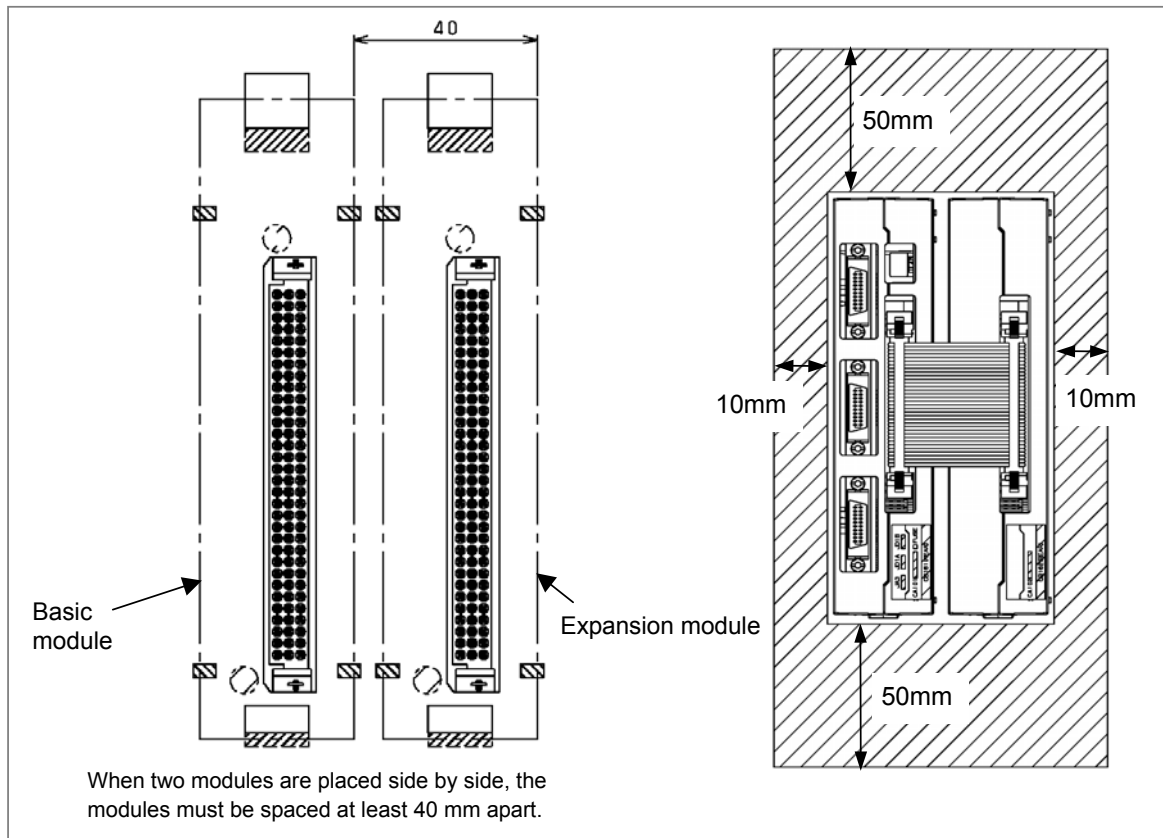**NOTE**

- 1 To ensure adequate ventilation within an I/O module, allow a clearance of 50 mm or more above and below the module and a clearance of 10 mm or more on the left and right sides. Never place a device that generates a large amount of heat below an I/O module.
- 2 To the front panel of an I/O module, the cables for the I/O Link *i* and manual pulse generator are connected.
For cabling, allow a clearance of about 70 mm at the front of an I/O module.
- 3 Space the basic module and extension modules at least 40 mm apart from each other.
- 4 An I/O module is secured to the connector panel by inserting the hook into a hole on the connector panel as with the current distribution I/O module. Allow a clearance for hooking on the rear side of the connector panel.
- 5 For securing an I/O module, four printing prohibited areas are provided on the surface of the connector panel, and a printing prohibited area is also provided beside the upper and lower square holes on the rear side.
- 6 When mounting the basic module and extension modules side by side, ensure that the basic module is mounted on the left side when viewed from the I/O Link *i* connector.
- 7 When inserting an I/O module into the connector panel, provide pedestals at positions nearest to the connector of the connector panel to support the top and bottom areas of the connector from the rear side to protect the connector panel from being warped.
- 8 Ensure that the thickness of the connector panel printed circuit board is 1.7 mm ± 0.1 mm.

Dimensions of the connector (HONDA MRF-96FDST) for the connector panel printed circuit board
 (Part order specification drawing number: A03B-0815-K030)

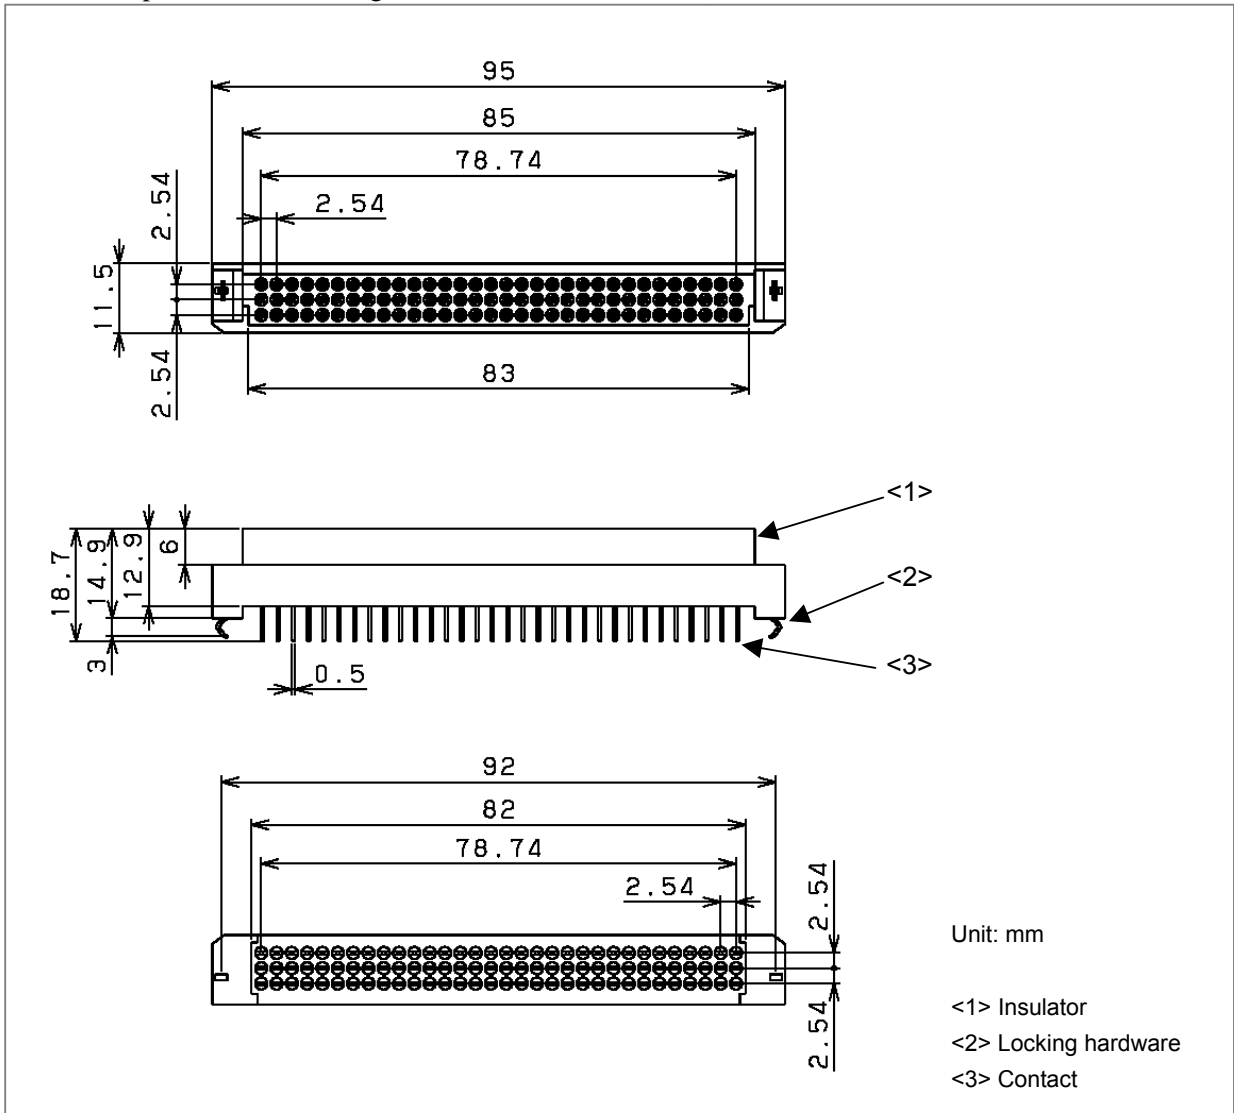

8.5.15 Other Notes

Address allocation

For this I/O module, I/O addresses are mapped as follow:

DI space map			DO space map		
Xm ₁	Basic module	Slot 1	Yn ₁	Basic module	Slot 1
Xm ₁ + 1			Yn ₁ + 1		
Xm ₁ + 2			Yn ₁ + 2		
Xm ₁ + 3			Yn ₁ + 3		
Xm ₁ + 4					
Xm ₁ + 5					
Xm ₂	Extension module	Slot 2	Yn ₂	Extension module	Slot 2
Xm ₂ + 1			Yn ₂ + 1		
Xm ₂ + 2			Yn ₂ + 2		
Xm ₂ + 3			Yn ₂ + 3		
Xm ₂ + 4					
Xm ₂ + 5					
Xm _{mpg} (for 1st MPG)	Basic module	Slot MPG			
Xm _{mpg} + 1 (for 2nd MPG)					
Xm _{mpg} + 2 (for 3rd MPG)					

Xm₁, Xm₂, Xm_{mpg}, Yn₁, and Yn₂ indicate the start address at allocation.

Each module of I/O module for connector panel type-2 is treated as a slot and addresses are allocated for each module. When only the basic module is used, allocate 6-byte DI addresses and 4-byte DO addresses to slot 1. When an extension module is used, allocate 6-byte DI addresses and 4-byte DO addresses to slot 2.

I/O module for connector panel type-2 has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators).

Do not use these addresses with the ladder because the CNC processes the manual pulse generator signals directly.

DO (output signal) alarm detection

The DO driver of this I/O module is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as connecting the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated which keeps the DO signal for the relevant 1 byte in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continues operating without entering the alarm status, but the DO driver which detected the error can be checked. If a DO error occurs, this information can be checked on the CNC DGN screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

A DO error such as a ground fault is detected for each point. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Y_{n_1}	0th byte DO of Basic module
				1	Y_{n_1+1}	1st byte DO of Basic module
				2	Y_{n_1+2}	2nd byte DO of Basic module
				3	Y_{n_1+3}	3rd byte DO of Basic module
			2	0	Y_{n_2}	0th byte DO of Extension module
				1	Y_{n_2+1}	1st byte DO of Extension module
				2	Y_{n_2+2}	2nd byte DO of Extension module
			3	Y_{n_2+3}	3rd byte DO of Extension module	

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Y_{n_1} and Y_{n_2} indicate the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0


CAUTION

- 1 The output protection function is not for external equipment but for internal device of the module.
- 2 The output protection function can't protect the internal device in any case. If the output protection function is activated, remove the cause immediately. If the output exceed the absolute maximum rating, the output protection function may not operate normally or the internal device may break before the output protection function operates.
- 3 If the over current is continued with a condition that the output protection function can't operate normally, the internal device might emit smoke or take fire.

8.5.16 Connection of the Grounding Terminal of the Module

Connect the 0V line in the basic module to the cabinet's metal plate that is connected to ground or signal ground bar nearby via the protective ground terminal. About Multipoint grounding or Single-point grounding, refer to Item 3.4.1

Use fasten terminal for series 250 as cable terminal.

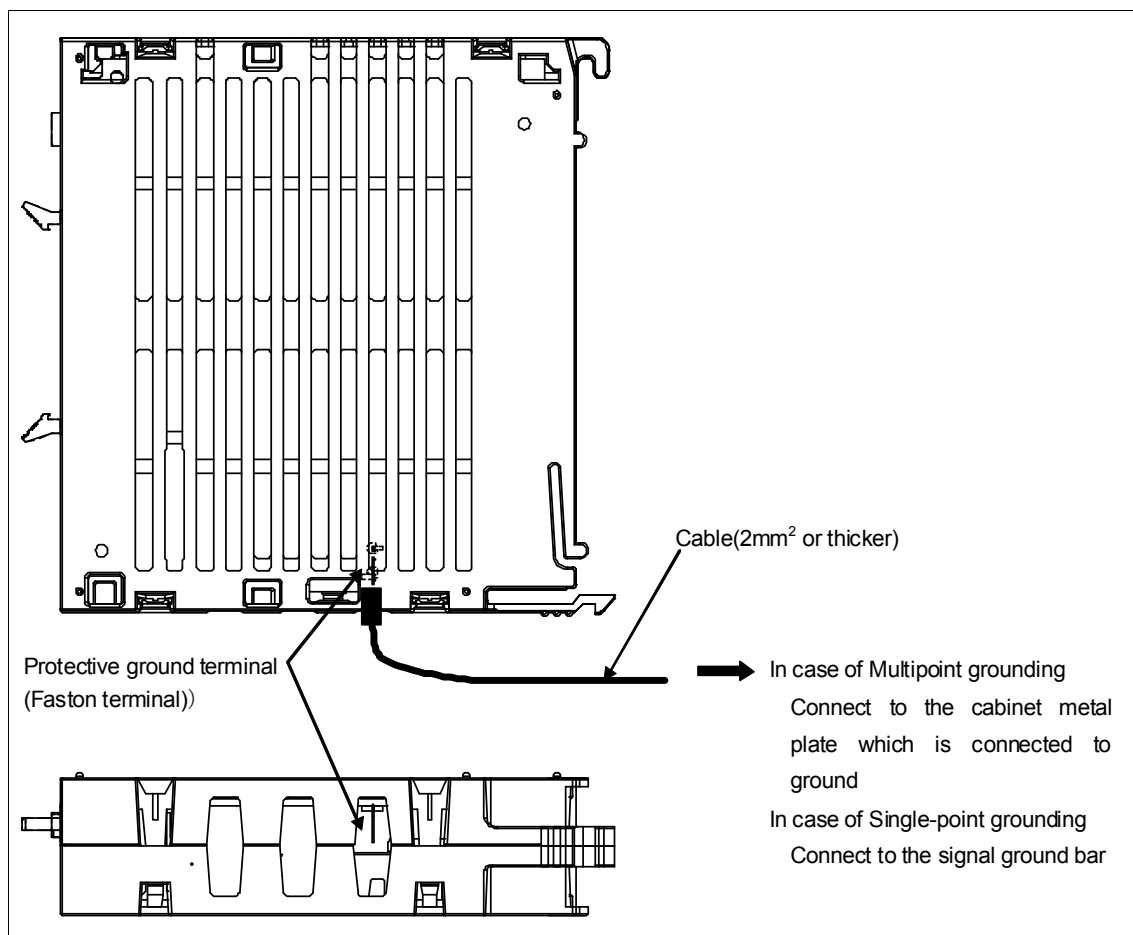

8.6 CONNECTION OF TERMINAL TYPE I/O MODULE


8.6.1 Overview

The terminal type I/O module has the following features:

- Input/output signals are connected on a spring-type terminal block (ferrule terminal block).
- A terminal block can be attached to or detached from the main body of the module.
- An LED for state indication is provided for each I/O signal.
- The terminal type I/O module can be installed on the DIN rail.
- By using extension modules, the maximum number of digital input points can be extended to 96 and the maximum number of digital output points can be extended to 64.
- An extension module with a manual pulse generator (MPG) interface is available.

NOTE

Extension modules D and E have no LED for state indication.

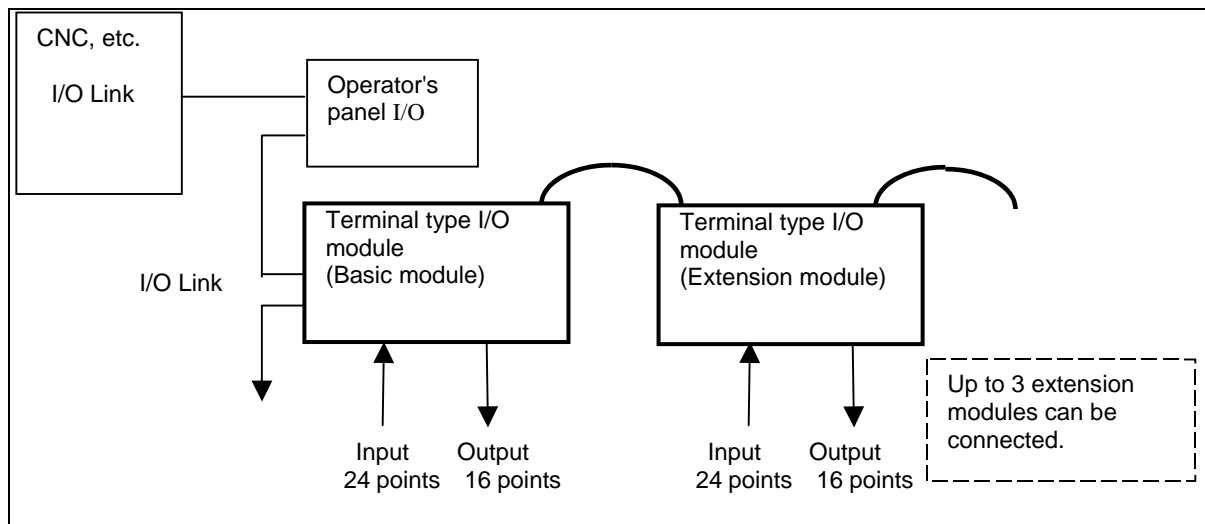

8.6.2 Module Specifications

8.6.2.1 Types of modules

Item	Ordering specifications	Specification
Basic module	A03B-0823-C011	DI/DO: 24/16
Extension module A	A03B-0823-C012	DI/DO : 24/16 With MPG interface
Extension module B	A03B-0823-C013	DI/DO : 24/16 Without MPG interface
Extension module C	A03B-0823-C014	DO : 16 2-A output module
Extension module D	A03B-0823-C015	Analog input module
Extension module E	A03B-0823-C016	Analog output module
Fuse (spare parts)	A03B-0823-K001	2A (for basic module)
Spare terminal block set (for basic module and extension module A/B)	A03B-0823-K020	Cable-side terminal block set (including each of T1 through T4)
Spare terminal block set (for extension module C)	A03B-0823-K011	Cable-side terminal block set (including each of T1 and T2)
Spare terminal block set (for extension module D)	A03B-0823-K012	Cable-side terminal block set (including each of T1 and T2)
Spare terminal block set (for extension module E)	A03B-0823-K013	Cable-side terminal block set (including each of T1 and T2)
Inter-module cable A	A03B-0823-K100	Cable length: 100 mm Used for extension module connection

NOTE

A cable-side terminal block is shipped with the main unit. Spare terminal blocks are used for replacement.

Module specifications (common items)

Item	Specification	Remarks
Interface between basic module and extension modules	Bus connection using a flat cable	Up to three extension modules connectable per basic module. Up to two extension modules D connectable, however.

For the specifications (such as signal input requirements) specific to each module, see the relevant pages of each item.

NOTE

Be sure to use modules with the ordering specifications listed above in combination. Do not use other modules.

8.6.2.2 Installation conditions

- (1) Use this I/O module in a completely sealed cabinet.
- (2) Use the units under the following ambient temperature conditions:
 - Operation: 0°C to 55°C
 - Storage and transportation: -20°C to 80°C
- (3) For other installation conditions, conform to the CNC installation conditions.
- (4) Be sure to install this module on a vertical surface and provide a clearance of 100 mm or more both above and below the module. Do not place equipment that generates a large amount of heat below the I/O module.

8.6.2.3 I/O signal specifications

Basic module, Extension modules A and B

Digital input	
Number of points	24 points
Common	8 points/common (6 common terminals)
Rated input voltage	24 VDC (+10%, -10%)
Rated input current	7 mA (average)
Polarity	Xm+0.0 to Xm+0.7: Sink or source type selectable Xm+1.0 to Xm+1.7, Xm+2.0 to Xm+2.7: Sink type
ON voltage/current	20 VDC or more, 6 mA or more
OFF voltage/current	8 VDC or less, 1.5 mA or less
Response time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

Digital output	
Number of points	16 points
Common	8 points/common (8 common terminals)
Rated output voltage	12 VDC to 24 VDC (+20%, -15%)
Rated output current	0.2A/pt
Polarity	Source type
Maximum voltage decrease when ON	0.63 V (load current × 1.25Ω)
Maximum leakage current when OFF	40 μA
Output protection function	Protection against overheat and overcurrent
Response time	The driver delay time is 50 μs (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

Output protection and abnormal detection

Connection	Module name	Unit of output protection	Unit of abnormal detection	Area of abnormal detection information
I/O Link i	Basic module	1point	1point	System relay area
	Extension module A	1point	1point	System relay area
	Extension module B	1point	1point	System relay area

⚠ CAUTION

- 1 The protection function is intended to protect the components internal to the modules rather than external units.
- 2 No protection function of modules can protect their internal components in all cases. Once any protection function has worked, remove the cause promptly. If an absolute maximum rating is exceeded, for example, it is likely that protection functions may not work or an IC may break down before the related protection function works, depending on the way or situation in which the modules are used.
- 3 If an output protection function is defective, it is likely that, if the load current exceeds its rating continuously for a long time, smoke or ignition may occur.

Extension module C

Digital output	
Number of points	16 points
Common	4 points/common
Rated output voltage	12 VDC to 24 VDC (+20%, -15%)
Rated output current	2 A/pt (4 A/common)
Polarity	Source type
Maximum voltage decrease when ON	0.18 V (load current × 0.09Ω)
Maximum leakage current when OFF	0.1mA
Insulation method	Photocoupler insulation
Output protection function	Protection against overheat, overcurrent, short-circuiting, and disconnection detection
Response time	The driver delay time is 50 μs (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

Output protection and abnormal detection

Connection	Unit of output protection	Unit of abnormal detection	Area of abnormal detection information
I/O Link <i>i</i>	1point	1point	DI area (See 8.6.6.4)

⚠ CAUTION

- 1 The protection function is intended to protect the components internal to the modules rather than external units.
- 2 No protection function of modules can protect their internal components in all cases. Once any protection function has worked, remove the cause promptly. If an absolute maximum rating is exceeded, for example, it is likely that protection functions may not work or an IC may break down before the related protection function works, depending on the way or situation in which the modules are used.
- 3 If an output protection function is defective, it is likely that, if the load current exceeds its rating continuously for a long time, smoke or ignition may occur.
- 4 For connection at Extension module C, the area of abnormal detection information is not system relay area, but DI area.

Extension module D

Analog input														
Number of input channels	4 channels													
Analog input range	-10 VDC to +10 VDC (Input resistance: 4.7 MΩ) -20 VDC to +20 mA (Input resistance: 250Ω)	Voltage input or current input can be selected on a channel-by-channel basis by wiring.												
Digital conversion range	12 bits (binary), two's complement representation See Subsection 8.6.6.2, "Channel selection and A/D conversion data for extension module D".													
Input/output correspondence	<table border="1"> <thead> <tr> <th>Analog input</th> <th>Digital output</th> </tr> </thead> <tbody> <tr> <td>+10V</td> <td>+2000</td> </tr> <tr> <td>+5V or +20mA</td> <td>+1000</td> </tr> <tr> <td>0V or 0mA</td> <td>0</td> </tr> <tr> <td>-5V or -20mA</td> <td>-1000</td> </tr> <tr> <td>-10V</td> <td>-2000</td> </tr> </tbody> </table>		Analog input	Digital output	+10V	+2000	+5V or +20mA	+1000	0V or 0mA	0	-5V or -20mA	-1000	-10V	-2000
Analog input	Digital output													
+10V	+2000													
+5V or +20mA	+1000													
0V or 0mA	0													
-5V or -20mA	-1000													
-10V	-2000													
Resolution	5 mV or 20 μA													
Overall precision	Voltage input: ±0.5% (with respect to full scale) Current input: ±1.0% (with respect to full scale)													
Maximum input voltage/current	±15 V/±30 mA													
A-D conversion time	2 ms or less													
Minimum update period of digital output	Ladder scan period of CNC connected													
Number of occupied input/output points	DI = 3 bytes, DO = 2 bytes ^(NOTE)													

NOTE

This module has four analog input channels but has only one 12-bit digital output channel within the occupied input points (3 bytes). Namely, a channel for conversion is selected dynamically using a ladder program. Channel switching DO points for selecting a channel are present in the occupied output points (2 bytes). (See Subsection 8.6.6.2, "Channel selection and A/D conversion data for extension module D".)

Extension module E

Analog output																						
Number of input channels ^(Note 1)	4 channels																					
Analog output range ^(Note 2)	-10 VDC to +10 VDC (external load resistance 10kΩ or more) 0 VDC to +20 mA (external load resistance 400Ω or less)																					
Digital conversion range	12 bits (binary), two's complement representation See Subsection 8.6.6.3, "Channel selection and D/A conversion data for extension module E".																					
Input/output correspondence	<table border="1"> <thead> <tr> <th rowspan="2">Digital input</th> <th colspan="2">Analog output</th> </tr> <tr> <th>Voltage output</th> <th>Current output</th> </tr> </thead> <tbody> <tr> <td>+2000</td> <td>+10V</td> <td>-</td> </tr> <tr> <td>+1000</td> <td>+5V</td> <td>+20mA</td> </tr> <tr> <td>0</td> <td>0V</td> <td>0mA</td> </tr> <tr> <td>-1000</td> <td>-5V</td> <td>-</td> </tr> <tr> <td>-2000</td> <td>-10V</td> <td>-</td> </tr> </tbody> </table>		Digital input	Analog output		Voltage output	Current output	+2000	+10V	-	+1000	+5V	+20mA	0	0V	0mA	-1000	-5V	-	-2000	-10V	-
Digital input	Analog output																					
	Voltage output	Current output																				
+2000	+10V	-																				
+1000	+5V	+20mA																				
0	0V	0mA																				
-1000	-5V	-																				
-2000	-10V	-																				
Resolution	5 mV or 20 μA																					
Overall precision	Voltage input: ±0.5% (with respect to full scale) Current input: ±1.0% (with respect to full scale)																					
D- A conversion time ^(Note 3)	1ms or less																					
Minimum update period of digital input	Ladder scan period of CNC connected																					
Number of occupied input/output points ^(Note 4)	For connection to the I/O Link i: DO = 2 bytes																					

NOTE

- 1 One of the four channels must be selected for output using a ladder program. (See Subsection 8.6.6.3, "Channel selection and D/A conversion data for extension module E".)
- 2 There is a choice between use for voltage output or use for current output during connection to the terminal section.
- 3 The conversion time refers to that only within the module. The actual response time includes the scan time determined depending on the system.

8.6.2.4 Power supply rating

Module name	Supply voltage	Current rating
Basic module	24 VDC $\pm 10\%$	0.2 A + 7.3 mA \times DI (DI: Number of DI points in the ON state)
Extension modules A, B	Supplied from the basic module	0.1 A + 7.3 mA \times DI (DI: Number of DI points in the ON state)
Extension module C	Supplied from the basic module	0.1A
Extension module D	Supplied from the basic module	0.1A
Extension module E	Supplied from the basic module	0.16A

NOTE

- 1 The above power supply rating does not include that to be input to DOCOM0 and DOCOM1 for DO output.
- 2 To connect an optical adapter for the I/O Link *i* to both connectors JD1A and JD1B on the basic module, the above power supply rating + 70 mA is required for the power supply of the basic module.

8.6.2.5 Heat dissipation

The heat dissipation of a module is the sum of "Basic heat dissipation" in the table below plus the total obtained by multiplying each of "Heat dissipation per input point" and "Heat dissipation per output point" in the table below by the number of points that are turned on at the same time.

Module name	Basic heat dissipation (W)	Heat dissipation per input point (W)	Heat dissipation per output point (W) IL: Output load current
Basic module	4.8	0.23	$0.04+0.9 \times IL^2$
Extension modules A, B	2.4	0.23	$0.04+0.9 \times IL^2$
Extension module C	2.4	-	$0.04+0.1 \times IL^2$
Extension module D	2.4	-	-
Extension module E	3.8	-	-

[Calculation example]

When 16 input points, eight 0.1-A output points, and four 0.2-A output points are used for the basic module, and eight 2-A output points are used for extension module C

$$P=4.8+0.23 \times 16+(0.04+0.9 \times 0.1^2) \times 8+(0.04+0.9 \times 0.2^2) \times 4+1.0+(0.04+0.09 \times 2^2) \times 8$$

$$=13.4W$$


8.6.2.6 Weight

Module name	Weight (g)
Basic module	420
Extension module A	400
Extension module B	380

Module name	Weight (g)
Extension module C	440
Extension module D	400
Extension module E	400

8.6.2.7 Applicable wire

Electric wires and ferrule terminals used for connection with a terminal block of this module should have the following dimensions:

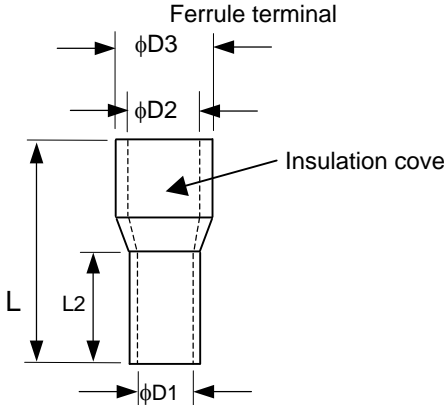
Electric wire size					 <p>The dimensions indicated below are based on the products of Weidmuller Color., Ltd.</p>					
Cross sectional area of electric wire (mm ²)	JIS VSF KIV (mm ²)	JIS IV (mm ²)	UL1007 (AWG)	UL1015 (AWG)	Electric wire sheath stripped length (mm)	Overall length L1 (mm)	Length of metallic part L2 (mm)	Inner diameter of conductor D1 (mm)	Inner diameter of sheath D2 (mm)	Outer diameter of sheath D3 (mm)
0.5	-	-	20	-	10	14	8	1	2.6	3.1
					12	16	10			
0.75	0.5	-	18	20	10	14	8	1.2	2.8	3.3
					12	16	10			
1.0	0.75	0.9	-	18	10	14	8	1.4	3	3.5
					12	16	10			

NOTE
Use a ferrule terminal from the viewpoint of long-term reliability.

8.6.3 External View and Dimensions


8.6.3.1 Dimensions (common to the modules)

Unit: mm

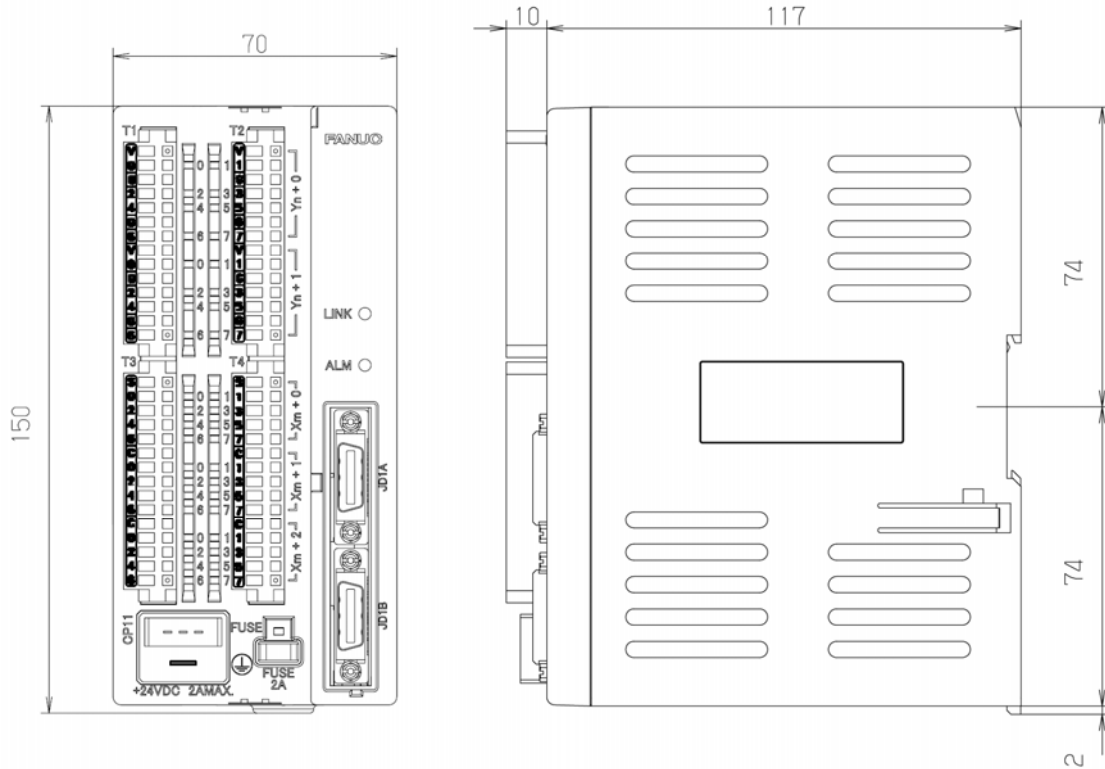

8.6.3.2 Dimensions in a maximum configuration (one basic module + three extension modules)



Unit: mm

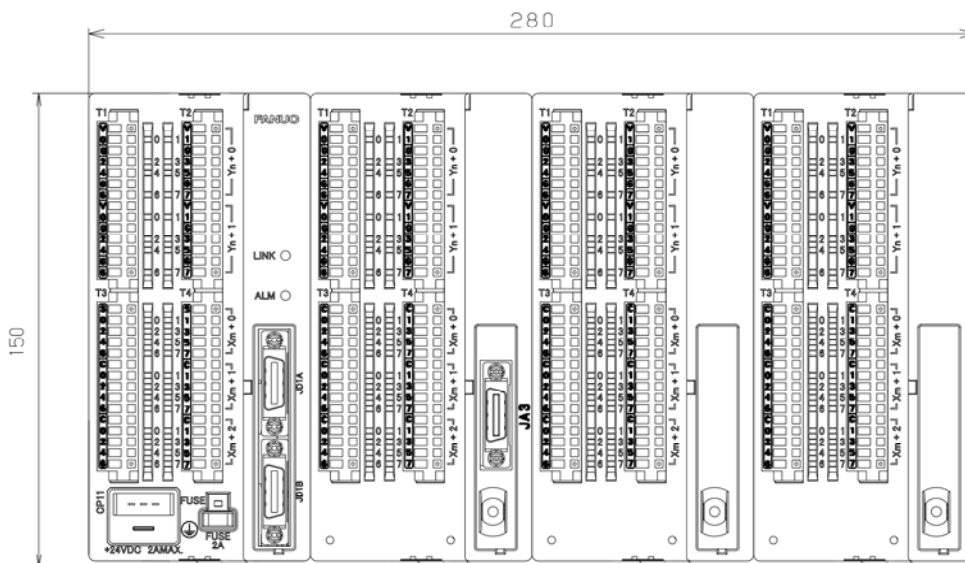

8.6.3.3 Component names


Basic module A03B-0823-C011

A (See figure at right.) DI/DO status display LED

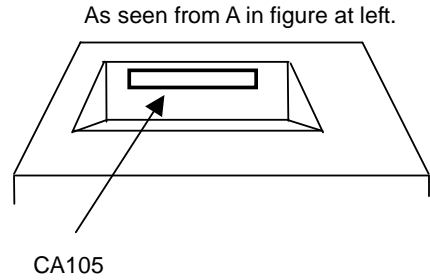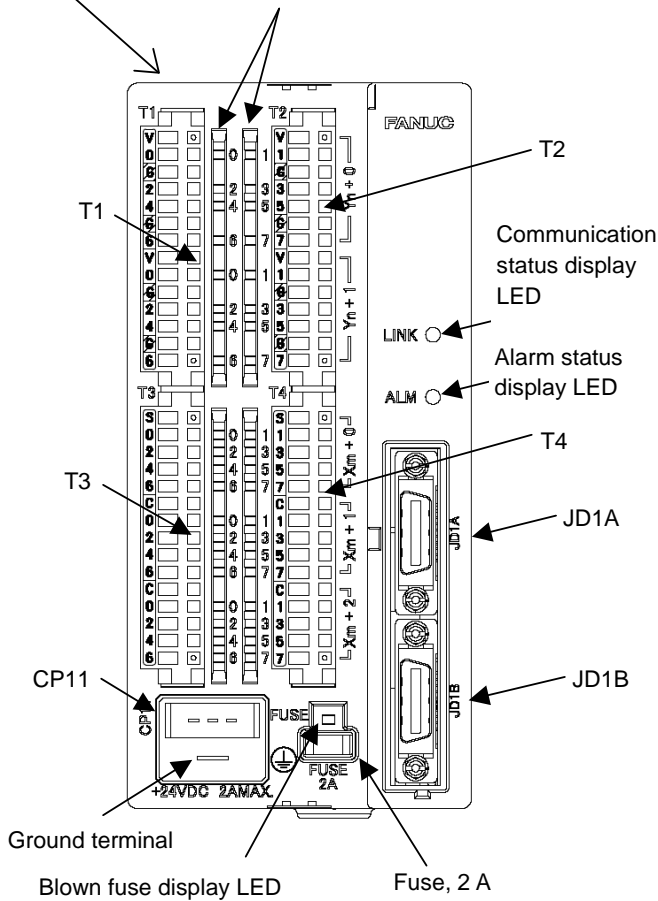


Connector / terminal board number	Use
CP11	24-VDC power supply input
JD1A	Second I/O link stage
JD1B	First I/O link stage
CA105	Extension module connection
T1	DO terminal board with aqua label
T2	DO terminal board with lime green label
T3	DI terminal board with yellow label
T4	DI terminal board with pink label

Extension module A A03B-0823-C012

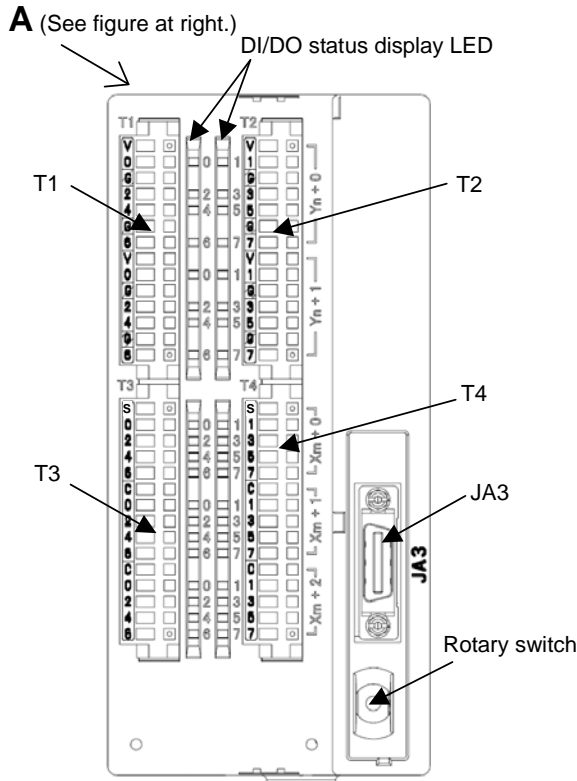


As seen from A in figure at left.

(Common to A03B-0823-C012 and A03B-0823-C013)

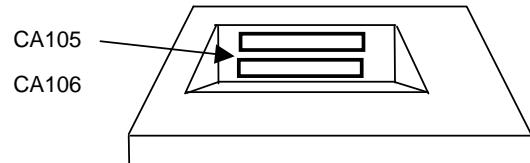

Connector / terminal board number	Use
JA3	MPG interface
CA105	Extension module connection (to next-stage extension module)
CA106	Extension module connection (to previous-stage basic module)
T1	DO terminal board with aqua label
T2	DO terminal board with lime green label
T3	DI terminal board with yellow label
T4	DI terminal board with pink label

Extension module B A03B-0823-C013


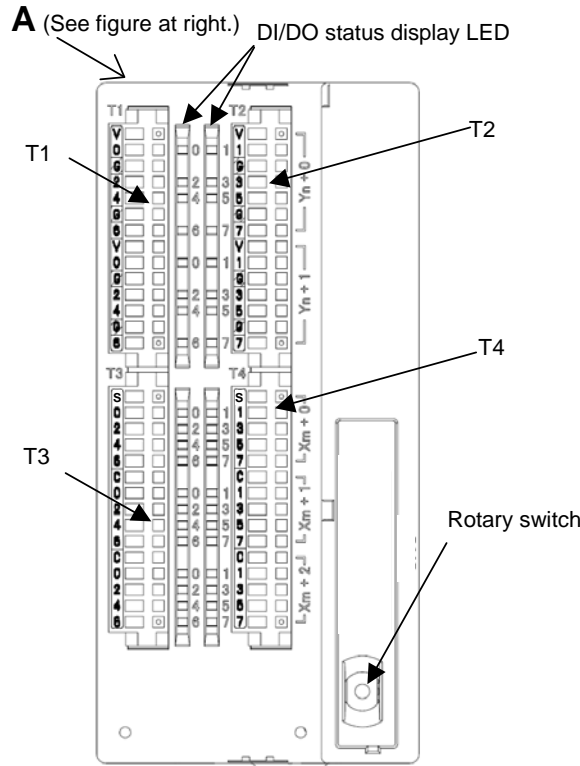


Connector / terminal board number	Use
CA105	Extension module connection (to next-stage extension module)
CA106	Extension module connection (to previous-stage basic module)
T1	DO terminal board with aqua label
T2	DO terminal board with lime green label
T3	DI terminal board with yellow label
T4	DI terminal board with pink label

NOTE
Be sure to connect extension module A next to the basic module.

Extension module C A03B-0823-C014


As seen from A in figure at left. (Common to A03B-0823-C014 and A03B-0823-C015)

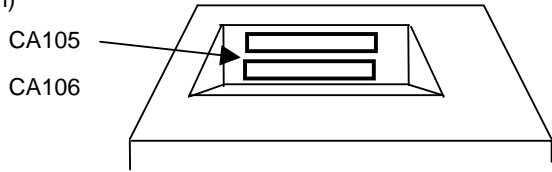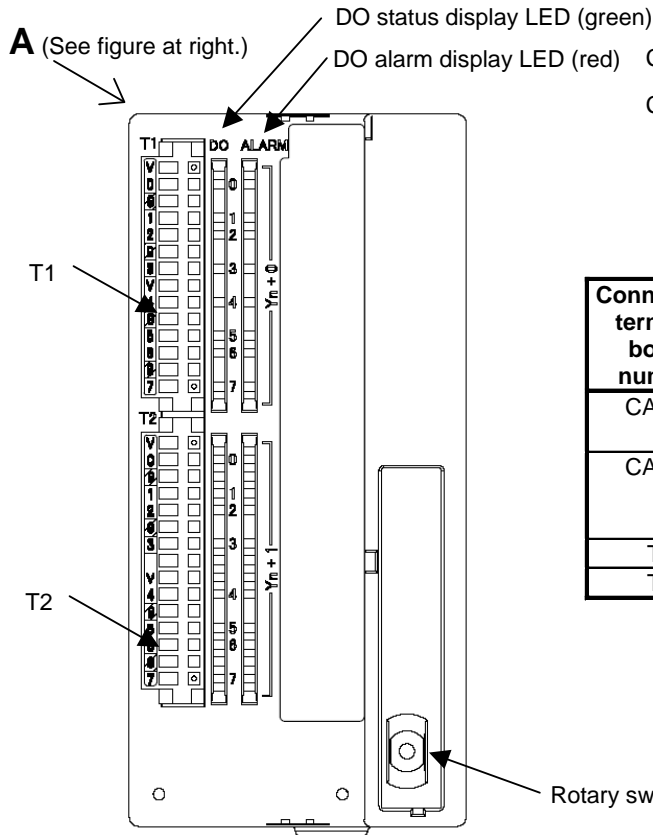


Connector / terminal board number	Use
CA105	Extension module connection (to next-stage expansion module)
CA106	Extension module connection (to previous-stage basic or extension module)
T1	DO terminal board with aqua label
T2	DO terminal board with lime green label

Extension module D A03B-0823-C015

A (See figure at right.)

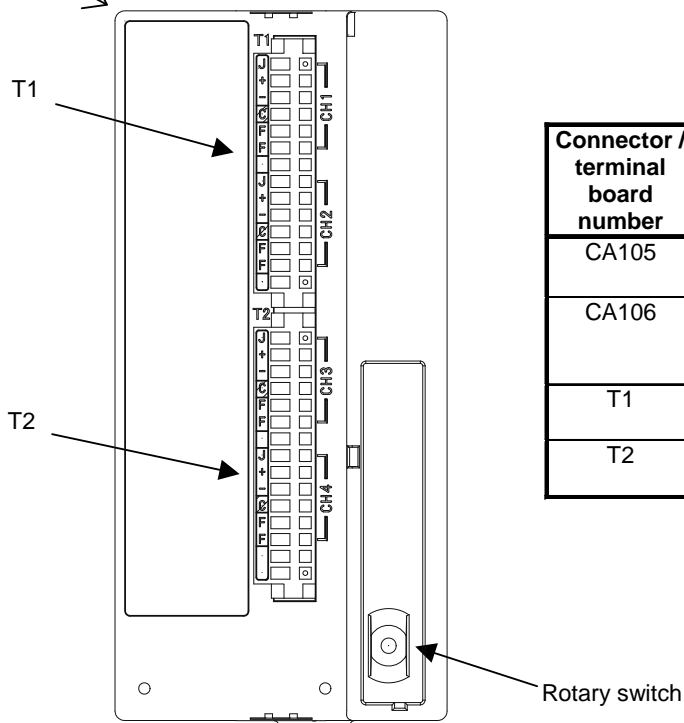


Connector / terminal board number	Use
CA105	Extension module connection (to next-stage expansion module)
CA106	Extension module connection (to previous-stage basic or extension module)
T1	Analog input CH1 and CH2 terminal board with yellow label
T2	Analog input CH3 and CH4 terminal board with pink label

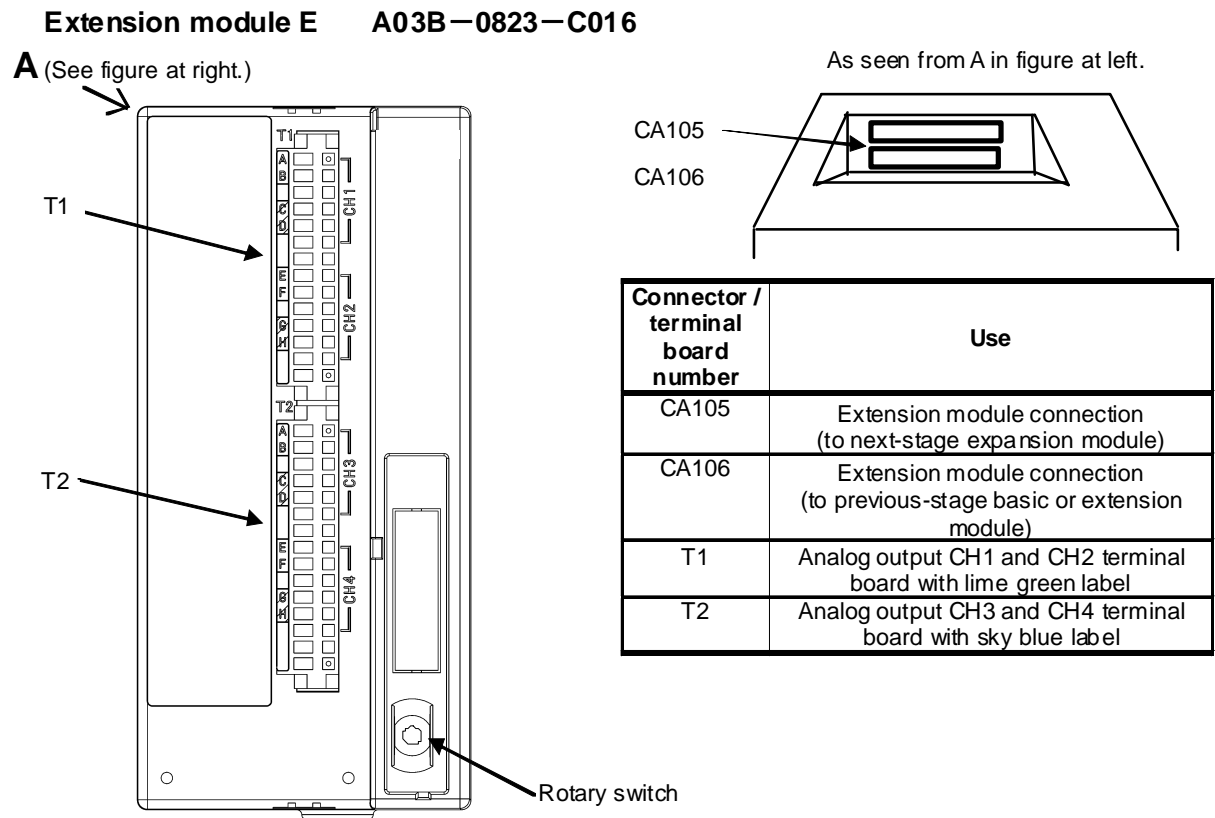


8.6.4 Installation

Mounting holes for screwing

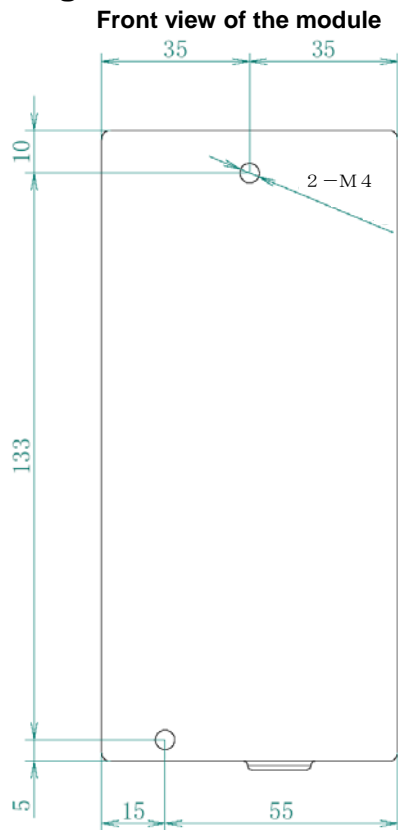

Using a DIN rail for mounting

1) Method of mounting

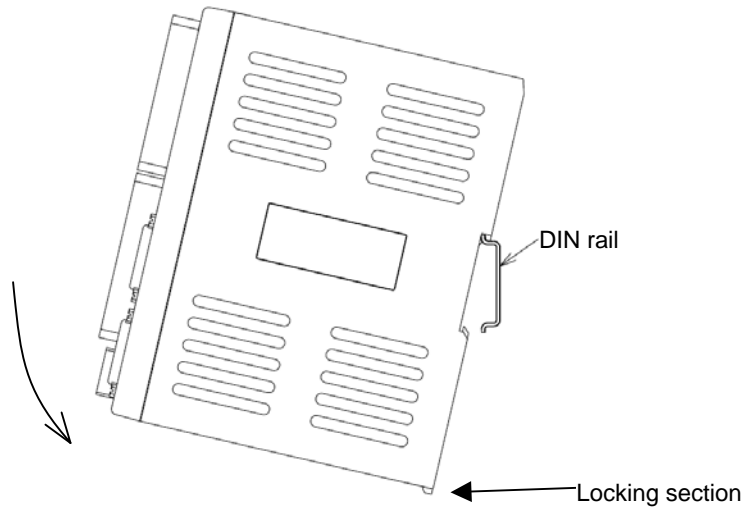


- 1) Place the hook of the module onto the top of the DIN rail.
- 2) Push the module until it clicks into place.

NOTE

Ensure that the locking section is not left lowered.

2) Method of dismounting

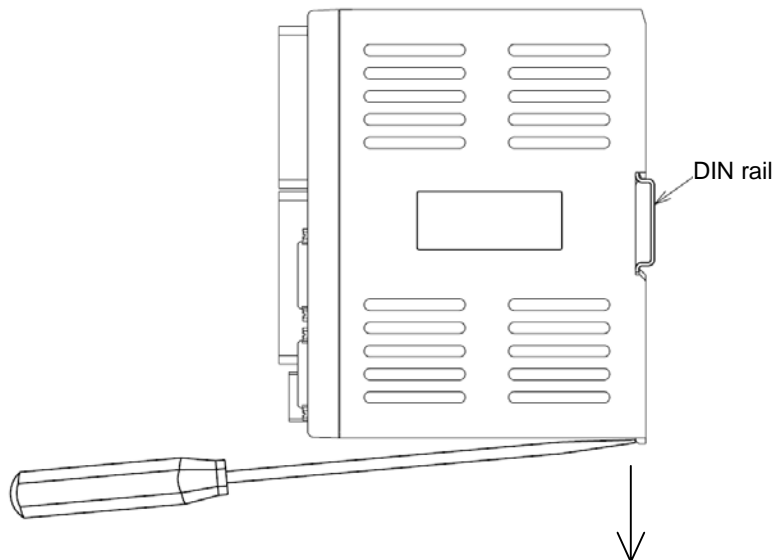


- 1) Lower the locking section with a flat-blade screwdriver.
- 2) Pull the lower part of the module toward you.

NOTE

When dismounting the module, be careful not to damage the locking section by applying an excessive force.

8.6.5 Connection

8.6.5.1 Overall connection diagram

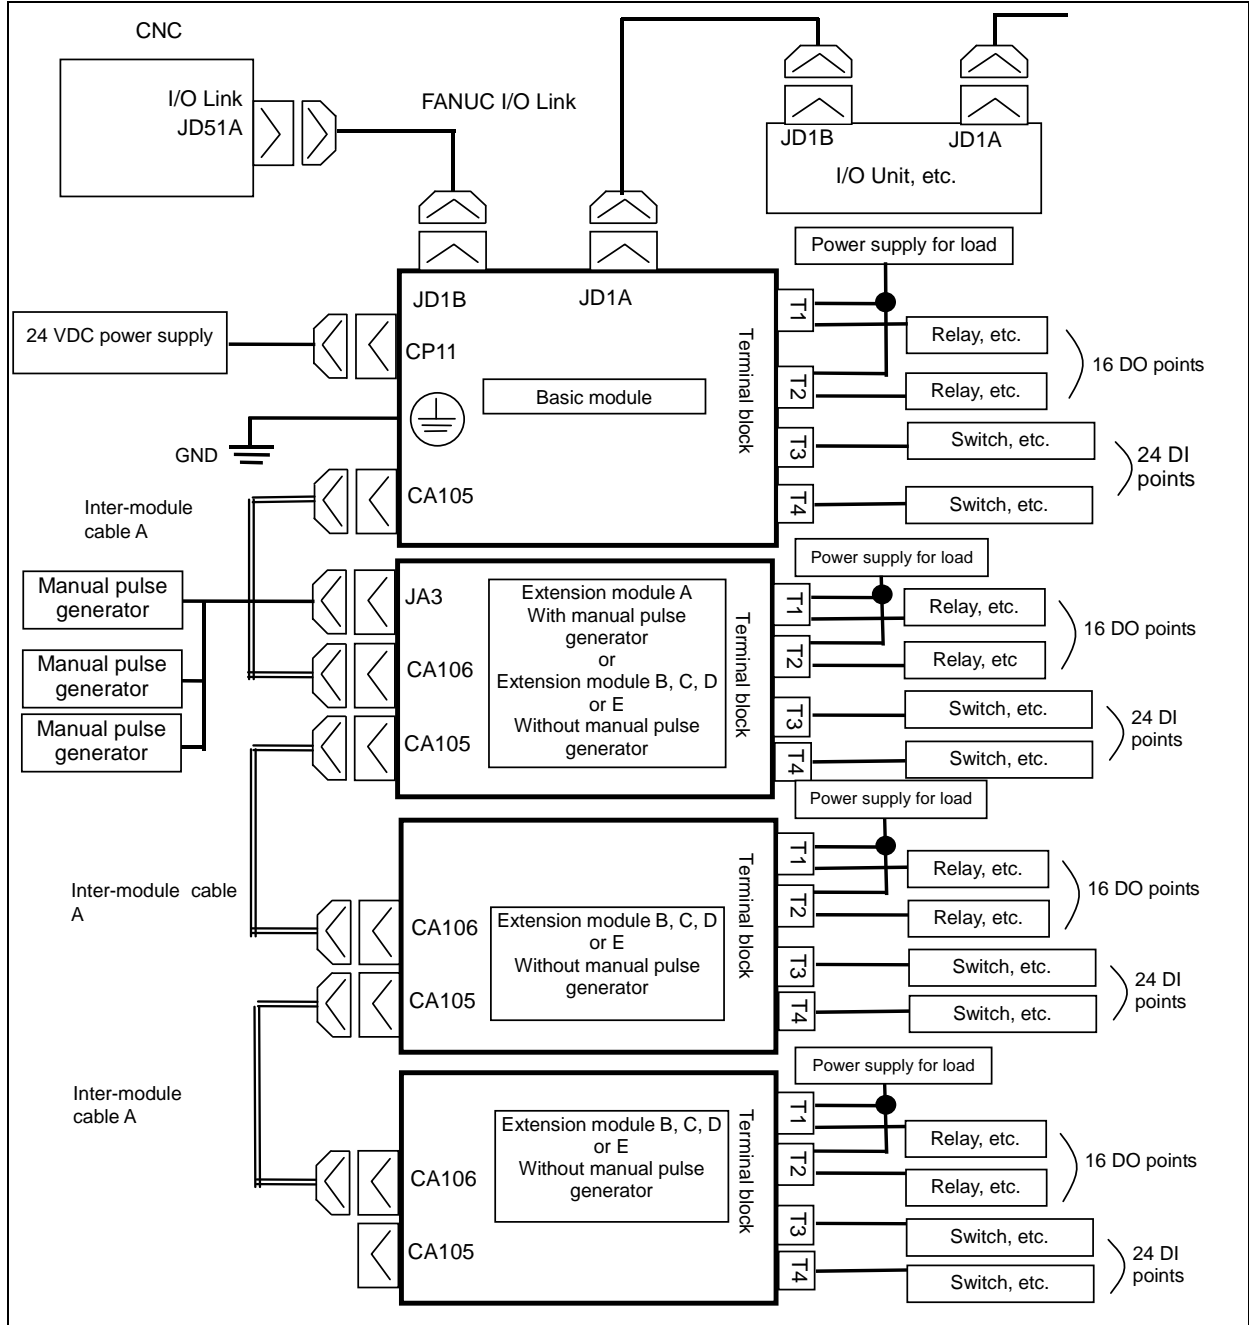


NOTE

- 1 Extension module C does not have DI points. Only the terminal blocks for DO, T1 and T2, are available.
- 2 With extension module D, only the terminal blocks for analog input, T1 and T2, are available.
- 3 With extension module E, only the terminal blocks for analog output, T1 and T2, are available.

8.6.5.2 Power connection

Supply power to the basic module from the CNC or an external 24 VDC regulated power supply.

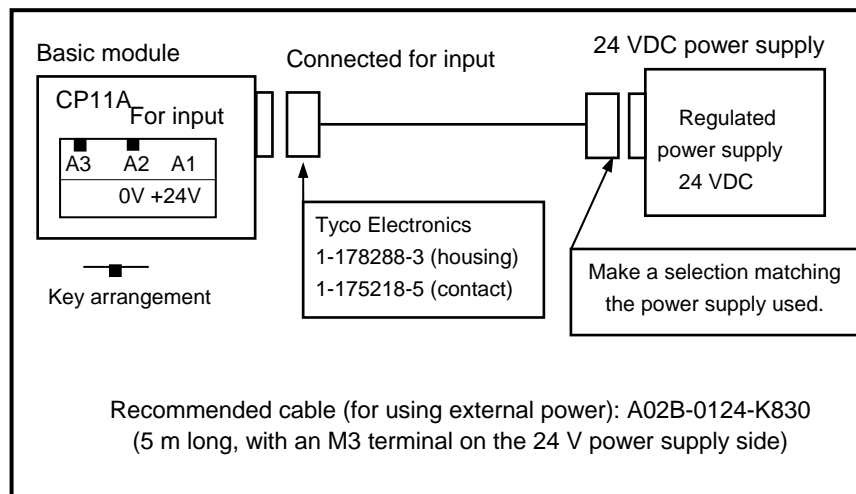

NOTE

- 1 Ensure that +24 V is supplied either when or before the power to the CNC is turned on, and that +24 V is removed either when or after the power to the CNC is turned off.
- 2 When turning off the power to the CNC control unit, be sure to turn off the power to the terminal type I/O module and other slave I/O units connected via the I/O Link as well.

8.6.5.3 Signal assignment on terminal blocks

Basic module, Extension modules A and B

- Assignment of signals for output

T1 (Label color: Light blue)		Label indication	T2 (Label color: Yellow green)		Label indication
1	DOCOM0	V	1	DOCOM0	V
2	Yn+0.0	0	2	Yn+0.1	1
3	0V	G	3	0V	G
4	Yn+0.2	2	4	Yn+0.3	3
5	Yn+0.4	4	5	Yn+0.5	5
6	0V	G	6	0V	G
7	Yn+0.6	6	7	Yn+0.7	7
8	DOCOM1	V	8	DOCOM1	V
9	Yn+1.0	0	9	Yn+1.1	1
10	0V	G	10	0V	G
11	Yn+1.2	2	11	Yn+1.3	3
12	Yn+1.4	4	12	Yn+1.5	5
13	0V	G	13	0V	G
14	Yn+1.6	6	14	Yn+1.7	7

- Assignment of signals for input

T3 (Label color: Yellow)		Label indication	T4 (Label color: Pink)		Label indication
1	DICOM0	S	1	DICOM0	S
2	Xm+0.0	0	2	Xm+0.1	1
3	Xm+0.2	2	3	Xm+0.3	3
4	Xm+0.4	4	4	Xm+0.5	5
5	Xm+0.6	6	5	Xm+0.7	7
6	DICOM1	C	6	DICOM1	C
7	Xm+1.0	0	7	Xm+1.1	1
8	Xm+1.2	2	8	Xm+1.3	3
9	Xm+1.4	4	9	Xm+1.5	5
10	Xm+1.6	6	10	Xm+1.7	7
11	DICOM1	C	11	DICOM1	C
12	Xm+2.0	0	12	Xm+2.1	1
13	Xm+2.2	2	13	Xm+2.3	3
14	Xm+2.4	4	14	Xm+2.5	5
15	Xm+2.6	6	15	Xm+2.7	7

- Terminal block specification

Terminal block name	Terminal block specification on cable side	Remarks
T1 T2	Weidmuller BLZF3.5/14F	Each of terminal blocks T1 and T2 has a different color assigned by the label attached to the main unit.
T3 T4	Weidmuller BLZF3.5/15F	Each of terminal blocks T3 and T4 has a different color assigned by the label attached to the main unit.

NOTE

The terminal blocks on the cable side are shipped with the terminal type I/O module.

Extension module C

- Assignment of signals for output

T1 (Label color: Light blue)

1	DOCOM0
2	Yn+0.0
3	0V-0
4	Yn+0.1
5	Yn+0.2
6	0V-0
7	Yn+0.3
8	DOCOM1
9	Yn+0.4
10	0V-1
11	Yn+0.5
12	Yn+0.6
13	0V-1
14	Yn+0.7

Label indication

V
0
G
1
2
G
3
V
4
G
5
6
G
7

T2 (Label color: Yellow green)

1	DOCOM2
2	Yn+1.0
3	0V-2
4	Yn+1.1
5	Yn+1.2
6	0V-2
7	Yn+1.3
8	
9	DOCOM3
10	Yn+1.4
11	0V-3
12	Yn+1.5
13	Yn+1.6
14	0V-3
15	Yn+1.7

Label indication

V
0
G
1
2
G
3
V
4
G
5
6
G
7

- Terminal block specification

Terminal block name	Terminal block specification on cable side
T1	Weidmuller BLZF3.5/14F
T2	Weidmuller BLZF3.5/15F

Extension module D

- Assignment of signals for analog input

T1 (Label color: Yellow)

1	JMP0
2	INP0
3	INM0
4	COM0
5	FG0I
6	FG0O
7	
8	JMP1
9	INP1
10	INM1
11	COM1
12	FG1I
13	FG1O
14	

Label indication

J
+
-
C
F
F
J
+
-
C
F
F

T2 (Label color: Pink)

1	JMP2
2	INP2
3	INM2
4	COM2
5	FG2I
6	FG2O
7	
8	JMP3
9	INP3
10	INM3
11	COM3
12	FG3I
13	FG3O
14	
15	

Label indication

J
+
-
C
F
F
J
+
-
C
F
F

- Terminal block specification

Terminal block name	Terminal block specification on cable side
T1	Weidmuller BLZF3.5/14F
T2	Weidmuller BLZF3.5/15F

NOTE

The terminal blocks on the cable side are shipped with the terminal type I/O module.

Extension module E

- Assignment of signals for analog output

T1 (Label color: Yellow green) Label indication

1	VP1	A
2	VN1	B
3		
4	IP1	C
5	IN1	D
6		
7		
8	VP2	E
9	VN2	F
10		
11	IP2	G
12	IN2	H
13		
14		

T2 (Label color: Light blue)

Label indication

1	VP3	A
2	VN3	B
3		
4	IP3	C
5	IN3	D
6		
7		
8	VP4	E
9	VN4	F
10		
11	IP4	G
12	IN4	H
13		
14		
15		

- Terminal block specification

Terminal block name	Terminal block specification on cable side
T1	Weidmuller BLZF3.5/14F
T2	Weidmuller BLZF3.5/15F

NOTE

The terminal blocks on the cable side are shipped with the terminal type I/O module.

8.6.5.4 DI/DO connection

Basic module, Extension modules A and B

DI connection (When sink type input is selected in X_m+0.0 to X_m+0.7.)

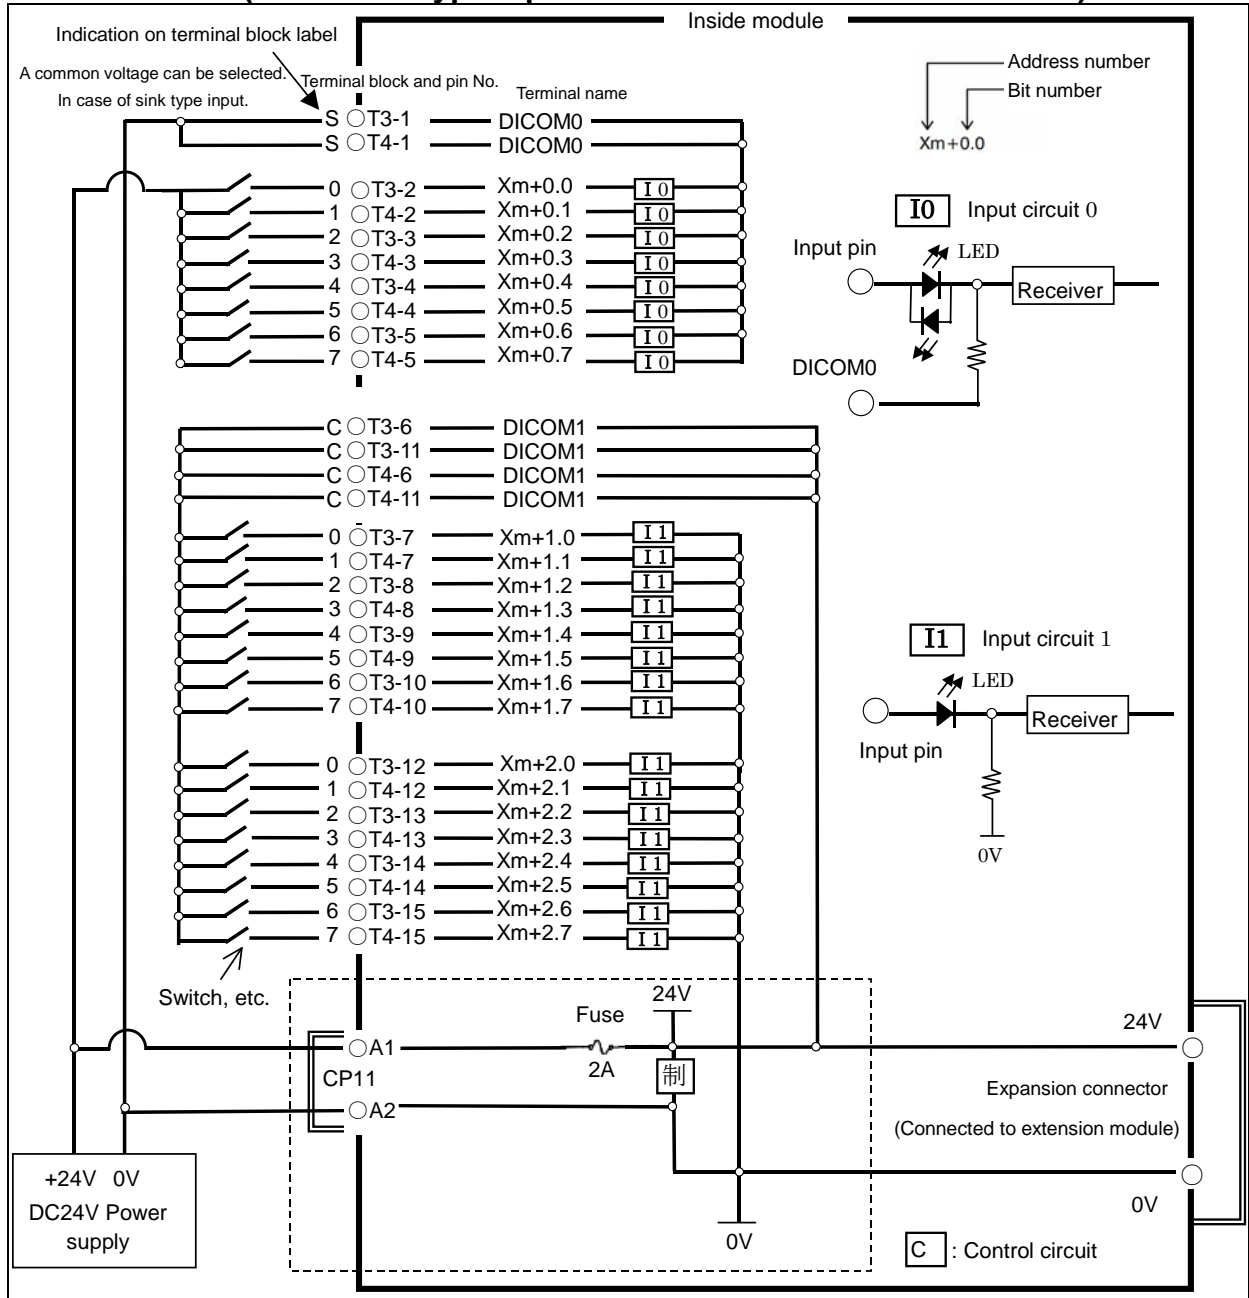
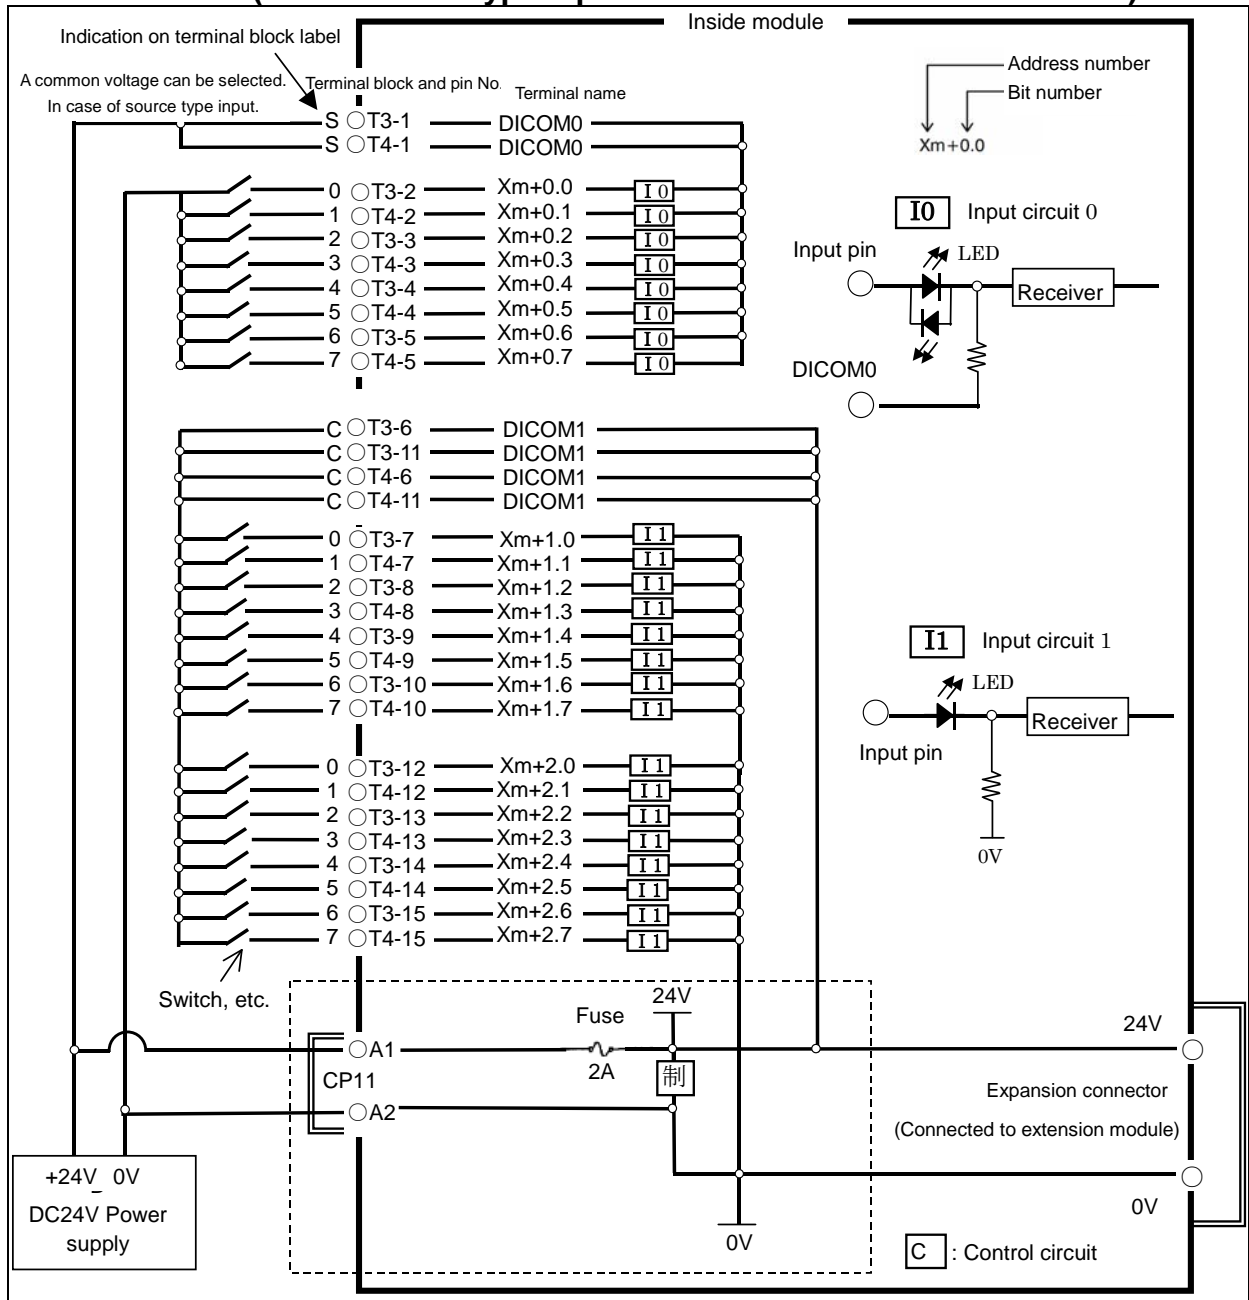


Fig.8.6.5.4 (a) DI connection of Basic module and Extension module A and B.
(When sink type input is selected in X_m+0.0 to X_m+0.7.)

NOTE

The circuitry enclosed in the dashed rectangle shown above is mounted on the basic module only. In the case of an extension module, 24 V for DICOM1 is supplied via the extension cable from the basic module or the extension module at the preceding stage.

DI connection (When source type input is selected in X_m+0.0 to X_m+0.7.)



**Fig.8.6.5.4 (b) DI connection of Basic module and Extension module A and B.
(When source type input is selected in X_m+0.0 to X_m+0.7.)**

NOTE

The circuitry enclosed in the dashed rectangle shown above is mounted on the basic module only. In case of an extension module, 24 V for DICOM1 is supplied via the extension cable from the basic module or the extension module at the preceding stage.

NOTE

As listed in the table below, $X_{m+0.0}$ through $X_{m+0.7}$ are DI terminals for which a common voltage can be selected. That is, by connecting DICOM0 (T3-1 and T4-1 pins) to +24 V, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. From the safety viewpoint, the connection of DICOM0 (T3-1 and T4-1 pins) to 0 V is recommended wherever possible.

For the unconnected pins at the addresses for which the common voltage is fixed (from $X_{m+1.0}$ to $X_{m+1.7}$ and from $X_{m+2.0}$ to $X_{m+2.7}$), the input is "0". For the unconnected terminals at the addresses for which a common voltage can be selected (from $X_{m+0.0}$ to $X_{m+0.7}$), the input is "0" when DICOM0 (T3-1 and T4-1 pins) is connected to 0 V or "1" when it is connected to +24. Connect DICOM0 when used. When addresses from $X_{m+0.0}$ to $X_{m+0.7}$ are not used, connect DICOM0 to the 0 V power supply.

Common voltage for the basic module, and extension modules A and B

Address	Common voltage
X_m	Can externally be selected with DICOM0.
X_{m+1}	Cannot be selected.
X_{m+2}	Cannot be selected.

DO connection

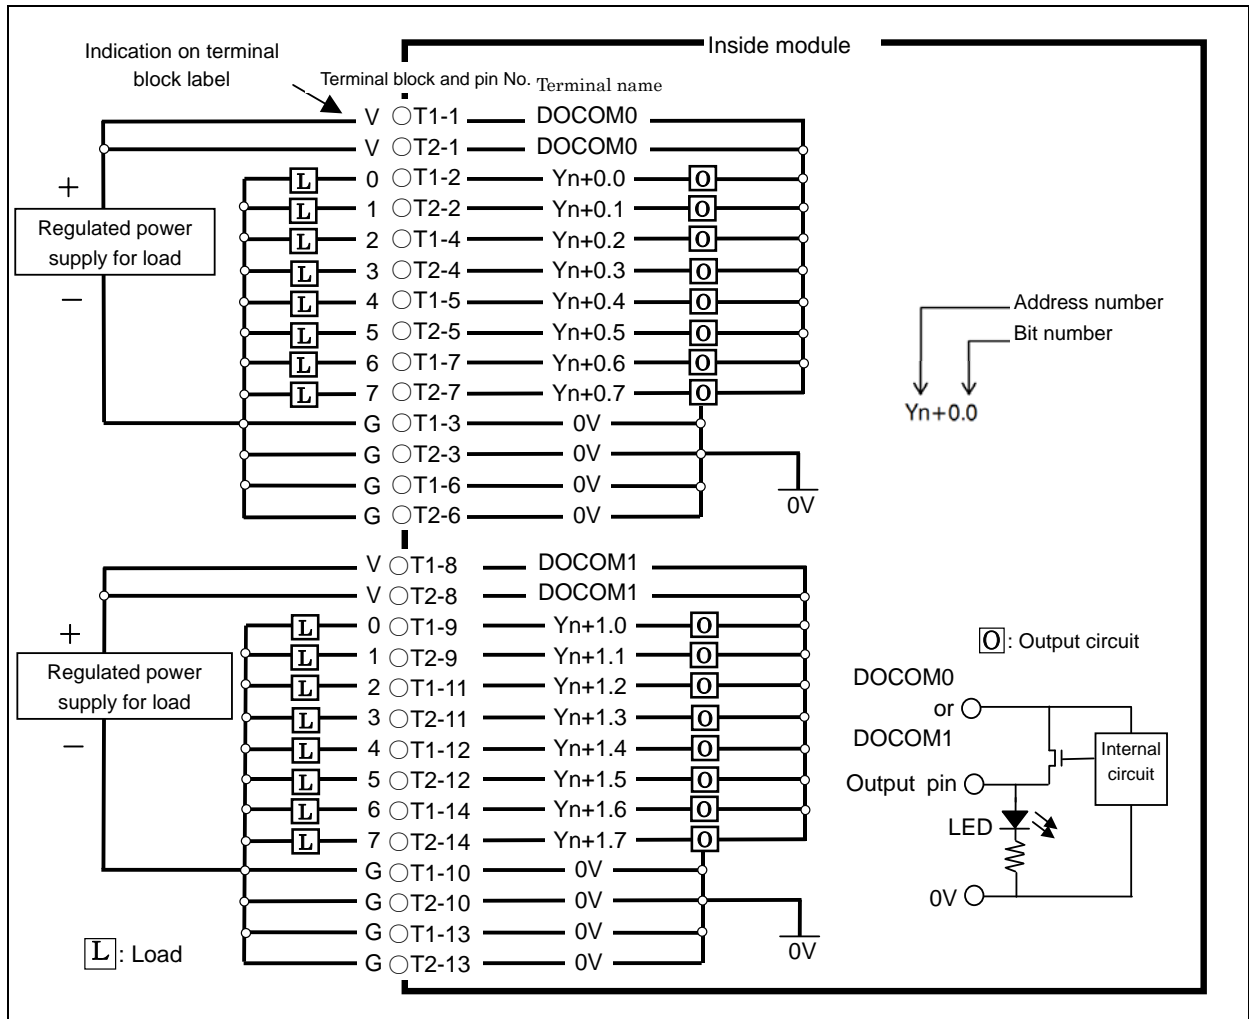


Fig.8.6.5.4 (c) DO connection of Basic module and Extension module A and B.

CAUTION

Be sure to connect the 0 V signal from the regulated power supply for load to the 0 V terminal (with label indication "G") of the module. Otherwise, a load error can occur.

Extension module C

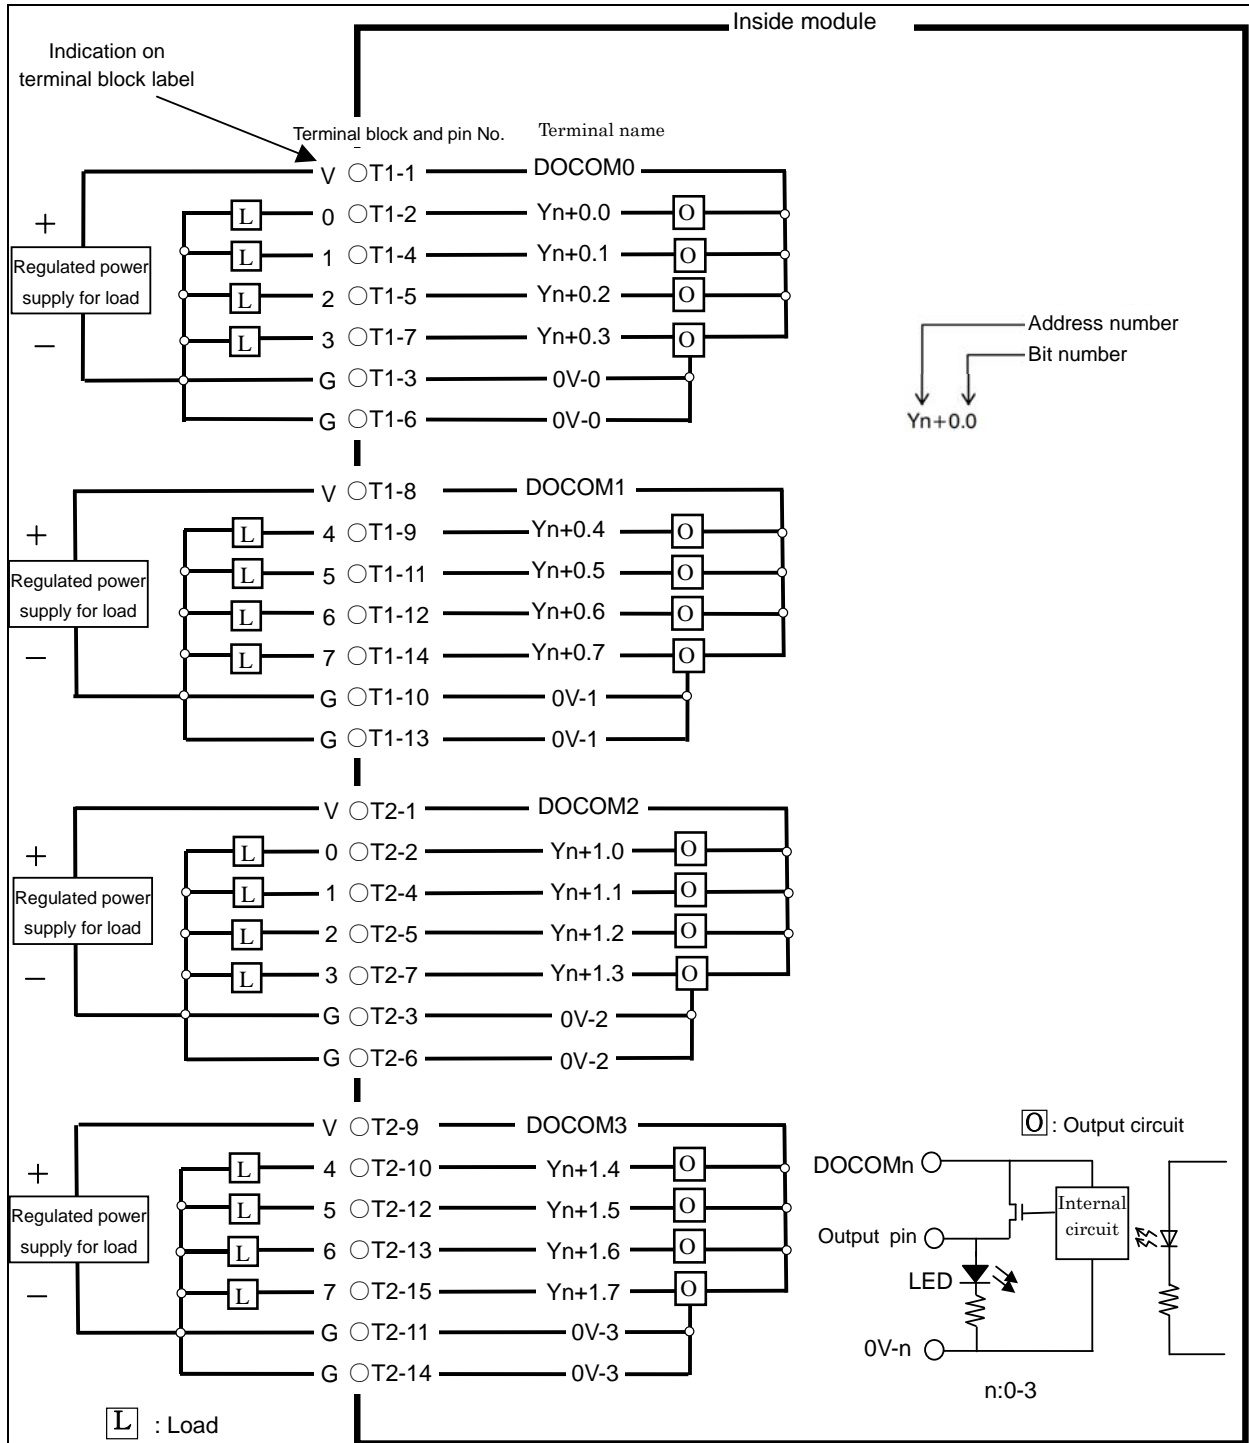


Fig.8.6.5.4 (d) DO connection of Extension module C.

CAUTION

Be sure to connect the 0 V signal from the regulated power supply for load to the 0 V terminal (with label indication "G") of the module. Otherwise, a load error can occur.

Extension module D

In the example of connection below, CH1 is used for voltage input, CH3 is used for current input, and CH2 and CH4 are not used.

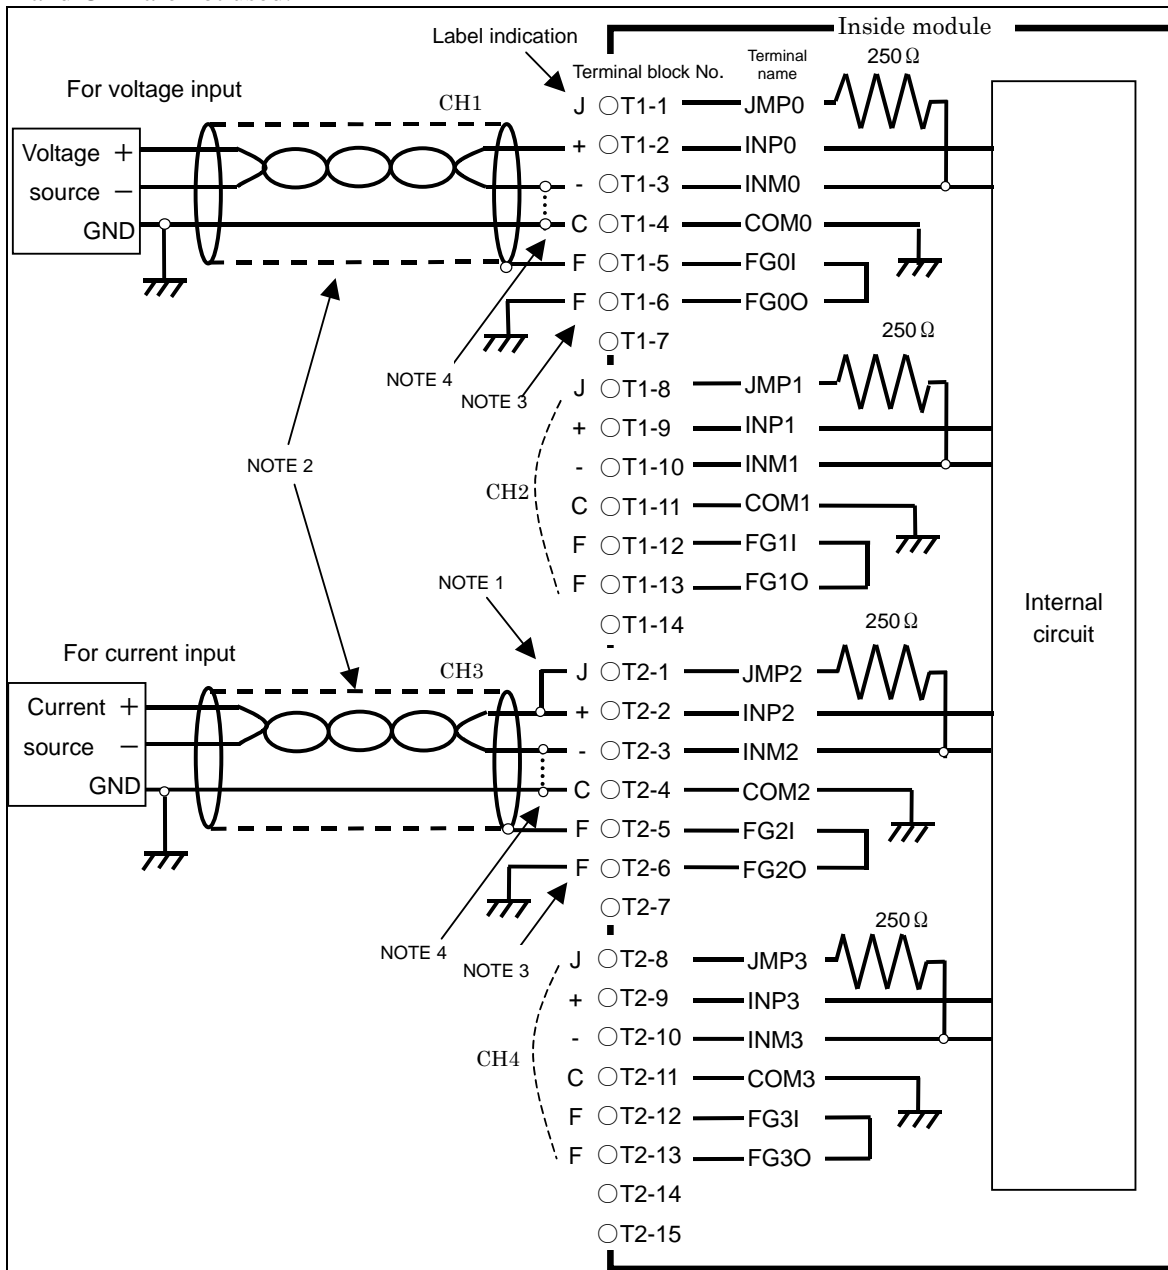


Fig.8.6.5.4 (e) Analog input connection of Extension module D.

NOTE

- 1 When JMPn and INPn (n=0, 1, 2, 3) are connected with each other, the channel becomes a current input channel.
- 2 For the connection cable, use a shielded twisted pair.
- 3 In the figure above, the shield is connected to FGnI for grounding to FGnO. However, the shield may be directly connected to frame ground by using a cable clamp without using FGnI and FGnO.
- 4 When a voltage source (current source) has a GND terminal as shown above, connect COMn to the terminal. When no GND terminal is provided, connect INMn and COMn with each other on the analog input module as indicated by the dotted line. COMn of each channel is connected to the common analog ground inside the module.

Extension module E

In the example of connection below, CH1 is used for voltage input, CH3 is used for current input, and CH2 and CH4 are not used.

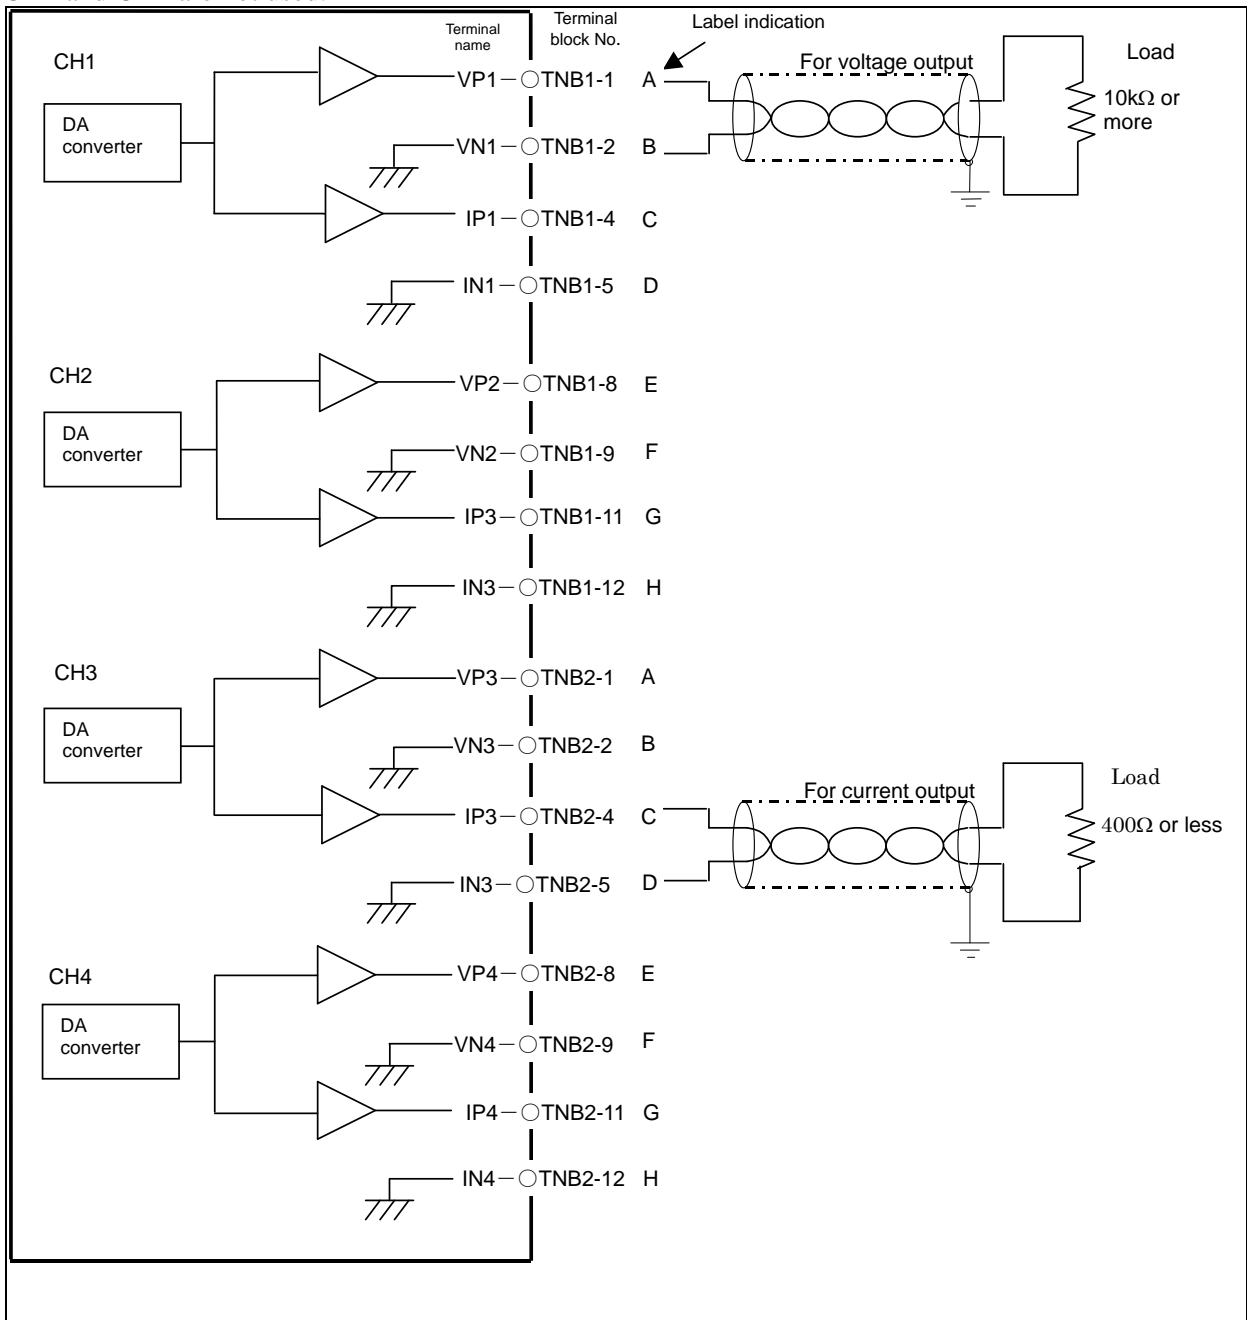


Fig.8.6.5.4 (f) Analog output connection of Extension module E.

⚠ CAUTION


- 1 For connection, use a shielded two-core twisted pair.
- 2 Ground the shield of the cable on the load side.
- 3 When another unit requiring a power supply is connected to this module, turn the power to the basic module on first. If the power to the unit connected to this module is turned on first, invalid output or malfunction may cause an accident.

8.6.5.5 Manual pulse generator connection


Up to three manual pulse generators can be connected to extension module A.
For details, see Subsection 7.4.1.

8.6.5.6 Inter-module connection

The same inter-module connection method is applied to between the basic module and an extension module and between extension modules. For inter-module connection, connect a 52-pin flat cable connector to the expansion connectors CA105 and CA106 provided on each module as shown below. At this time, connect all 52 pins, paying attention to the connector orientation.

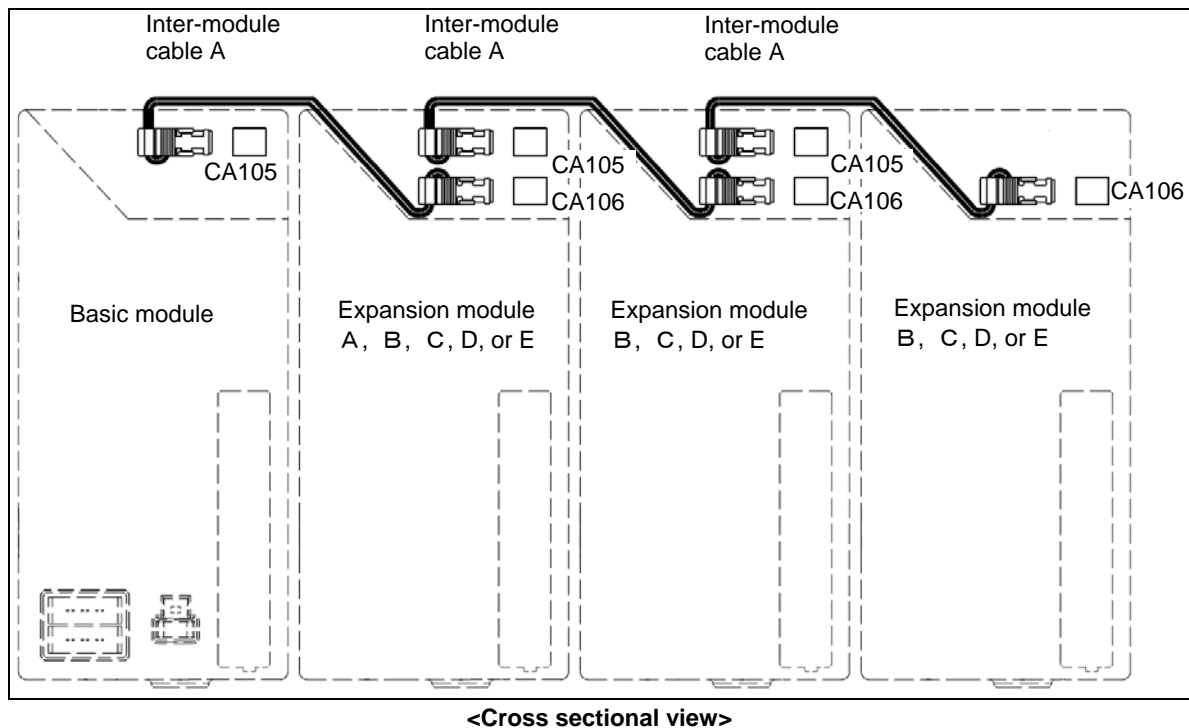


Method of detaching a connected cable

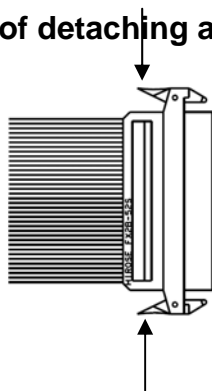

When detaching a connected cable from a module, release the lock by pushing the latch of the connector on the cable side in the arrow directions shown at the left.


8.6.5.7 Cable connection to a terminal block

- (1) Insert a flat-blade screwdriver with a tip width of about 2.5 mm into a clamp of a terminal block to open the fixing bracket.

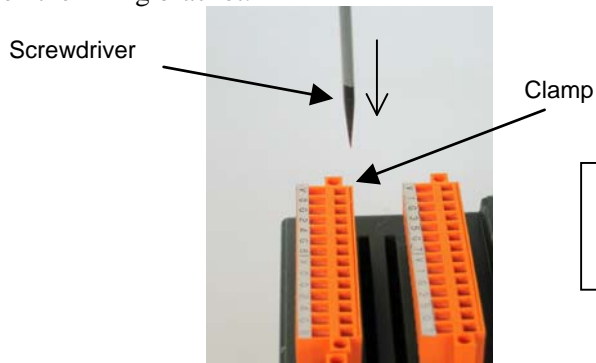


Recommended screwdriver
Weidmuller
Product number: SDI 0.4X2.5X80

- (2) Insert a cable with a ferrule terminal.

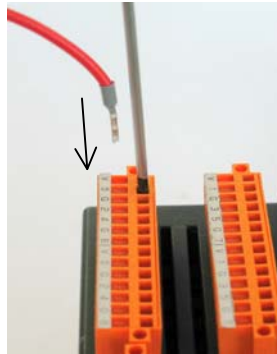


- (3) Extract the screwdriver from the clamp to complete cabling.

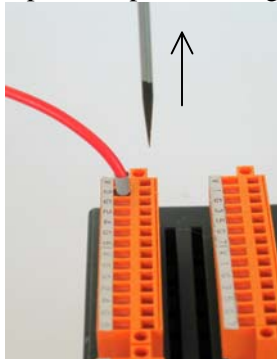**NOTE**

Do not pry the screwdriver in a clamp. Otherwise, the terminal block can be damaged.

8.6.5.8 Detaching a terminal block


A terminal block can be detached from the main module by loosening the mounting screws at the both ends of the terminal block.

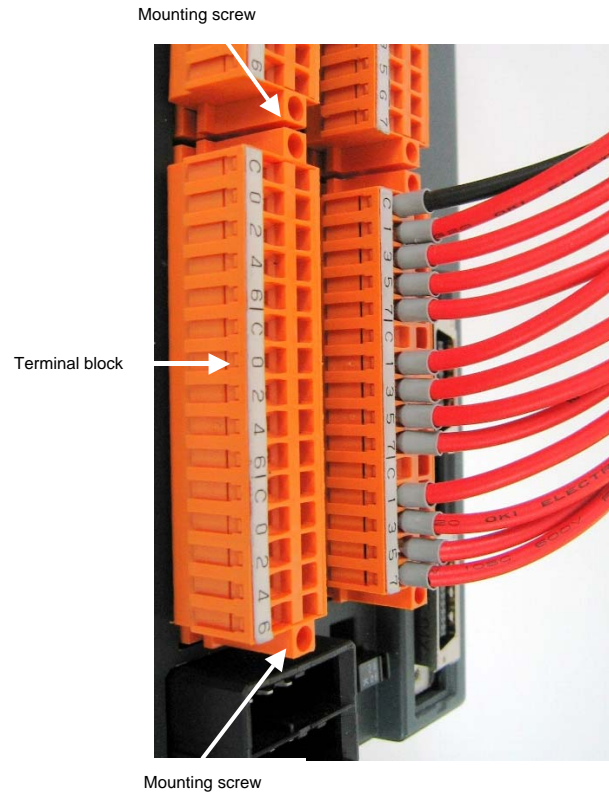

Tightening torque for the mounting screw: 0.4 Nm maximum

8.6.5.9 Connection of the ground terminal

Ground the ground terminal of a basic module.

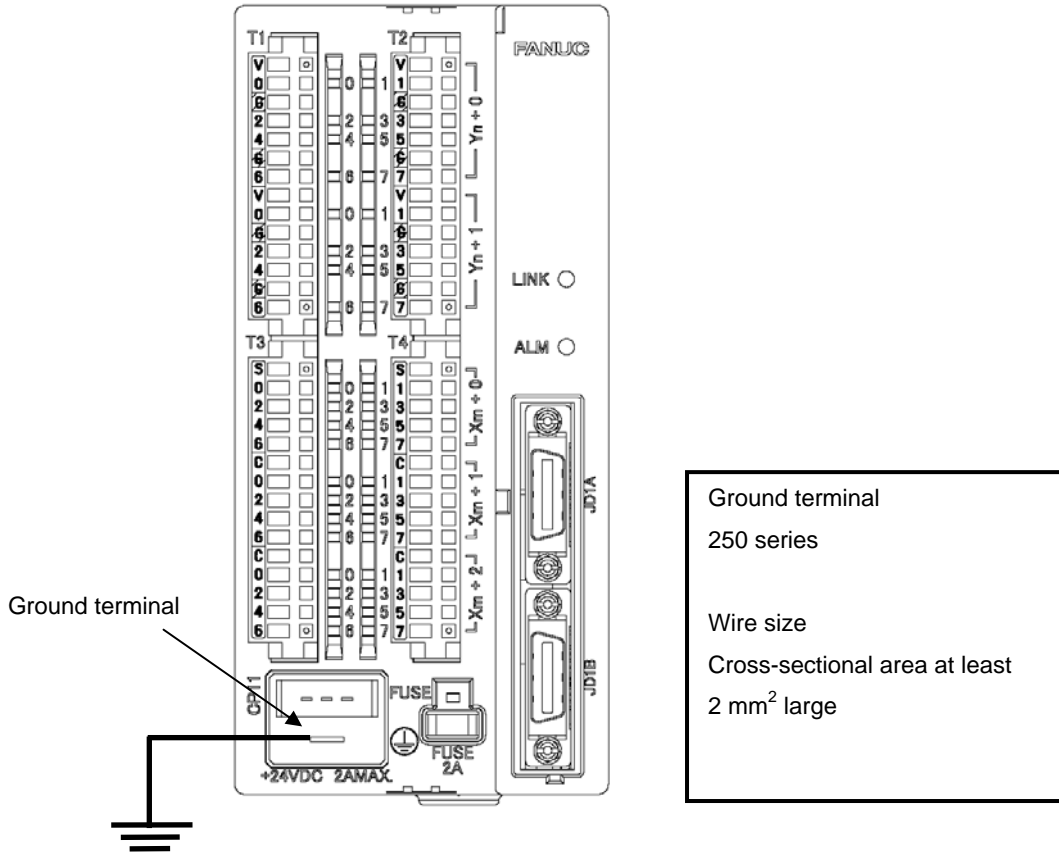

8.6.6 Settings

8.6.6.1 Address map

Address allocation

For terminal type I/O module, I/O addresses are mapped as follows.

DI space map			DO space map		
Xm ₁	Basic module	Slot 1	Yn ₁	Basic module	Slot 1
Xm ₁ + 1			Yn ₁ + 1		
Xm ₁ + 2					
Xm ₂	Extension module 1	Slot 2	Yn ₂	Extension module 1	Slot 2
Xm ₂ + 1			Yn ₂ + 1		
Xm ₂ + 2					
Xm ₃	Extension module 2	Slot 3	Yn ₃	Extension module 2	Slot 3
Xm ₃ + 1			Yn ₃ + 1		
Xm ₃ + 2					
Xm ₄	Extension module 3	Slot 4	Yn ₄	Extension module 3	Slot 4
Xm ₄ + 1			Yn ₄ + 1		
Xm ₄ + 2					
Xm _{mpg} (For 1st MPG)	Extension module 1	Slot MPG			
Xm _{mpg} + 1(For 2nd MPG)					
Xm _{mpg} + 2(For 3rd MPG)					

Xm₁, Xm₂, Xm₃, Xm₄, Xm_{mpg}, Yn₁, Yn₂, Yn₃, and Yn₄ indicate the start address at allocation.

Each module is treated as a slot and addresses are allocated for each module. When only the basic module is used, allocate 3-byte DI addresses and 2-byte DO addresses to slot 1. When extension modules are added, allocate 3-byte DI addresses and 2-byte DO addresses to slots 2, 3, and 4.

NOTE

- 1 Extension module A has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the DI space with the ladder because the CNC processes the manual pulse generator signals directly.
- 2 Extension modules C (2A output module) has no DI signals. However when a DO error occurs, the DO alarm is transferred in the area at the DI address in spite of connection to the I/O Link i. (With the I/O Link i, the DO alarm is not transferred to the system relay (R or Z) area.) For this reason, it is necessary to allocate addresses to the DI section of extension modules C.
- 3 Extension modules E (analog output module) have no DI signals. For connection to the I/O Link i, it is not necessary to allocate addresses to the DI section of extension modules E.

8.6.6.2 Channel selection and A/D conversion data for extension module D

<Channel selection>

With extension module D, which of the four analog input channels is to be the target of A/D conversion must be determined with a PMC program. The DO points used for this selection are CHA and CHB (two-byte occupied output points). These are mapped as indicated below.

Address in the module	7	6	5	4	3	2	1	0
Yn	x	x	x	x	x	x	x	x
Yn+1	x	x	x	x	x	x	CHB	CHA

Yn is the first address to which the analog input module is allocated.

By setting the values listed below to CHA and CHB, the corresponding channel is selected, and the A/D conversion data of the channel and the data of the selected channel are written in the DI area. The character X above represents an unused bit, so either 1 or 0 may be written in place of X.

CHB	CHA	Channel selected
0	0	Channel 1
0	1	Channel 2
1	0	Channel 3
1	1	Channel 4

<Address>

A/D conversion data of the channel selected by the above setting is output to two bytes of the three bytes of DI (input signals) of the slot to which this module is allocated. The A/D conversion data output addresses are as shown below, depending on where extension module D (analog input module) is installed.

NOTE

Be sure to allocate the start address of the slot as shown below, according to where the extension module D is installed:

When connected to extension module 1 (slot 2):

Xm₂ must always be allocated at an odd-numbered address.

When connected to extension module 2 (slot 3):

Xm₃ must always be allocated at an even-numbered address.

When connected to extension module 3 (slot 4):

Xm₄ must always be allocated at an odd-numbered address.

- When extension module D (analog input module) is installed in extension module 1 (slot 2)

Address	7	6	5	4	3	2	1	0
Xm ₂ (odd-numbered address)	Undefined							
Xm ₂ +1(even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Xm ₂ +2(odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08

Xm₂ is the start address of slot 2.

- When extension module D (analog input module) is installed in extension module 2 (slot 3)

Address	7	6	5	4	3	2	1	0
Xm ₃ (even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Xm ₃ +1(odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08
Xm ₃ +2(even-numbered address)	Undefined							

Xm₃ is the start address of slot 3.

- When extension module D (analog input module) is installed in extension module 3 (slot 4)

Address	7	6	5	4	3	2	1	0
X_{m_4} (odd-numbered address)	Undefined							
X_{m_4+1} (even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
X_{m_4+2} (odd-numbered address)	0	0	CHB	CHA	D11	D10	D09	D08

X_{m_4} is the start address of slot 4.

< A/D conversion data >

A/D conversion data for the selected channel is output to the above address as 12-bit data in the following format.

Address in the module D	7	6	5	4	3	2	1	0
X_m	D07	D06	D05	D04	D03	D02	D01	D00
X_{m+1}	0	0	CHB	CHA	D11	D10	D09	D08

X_m is the first address to which extension module D is allocated.

D00 to D11 represent 12-bit digital output data (complement representation). D00 corresponds to weighting of 2^0 and D11 corresponds to that of -2^{11} . That is, D11 is a sign bit represented as a two's complement. (Refer to following table.)

Digital data			Analog data	
Decimal	Hexadecimal	Binary (D11~D00)	Voltage input	Current input
2047	7 F F h	0 1 1 1 1 1 1 1 1 1 1 1	Outside of the specification range	Outside of the specification range
2001	7 D 1 h	0 1 1 1 1 1 0 1 0 0 0 1		
2000	7 D 0 h	0 1 1 1 1 1 0 1 0 0 0 0		
1999	7 C F h	0 1 1 1 1 1 0 0 1 1 1 1		
1001	3 E 9 h	0 0 1 1 1 1 1 0 1 0 0 1	5.005V	20mA
1000	3 E 8 h	0 0 1 1 1 1 1 0 1 0 0 0	5V	
999	3 E 7 h	0 0 1 1 1 1 1 0 0 1 1 1	4.995V	19.98mA
2	0 0 2 h	0 0 0 0 0 0 0 0 0 0 1 0	10mV	40uA
1	0 0 1 h	0 0 0 0 0 0 0 0 0 0 0 1	5mV	20uA
0	0 0 0 h	0 0 0 0 0 0 0 0 0 0 0 0	0V	0mA
-1	F F F h	1 1 1 1 1 1 1 1 1 1 1 1	-5mV	-20uA
-2	F F E h	1 1 1 1 1 1 1 1 1 1 1 0	-10mV	-40uA
-999	C 1 9 h	1 1 0 0 0 0 0 1 1 0 0 1	-4.995V	-19.98mA
-1000	C 1 8 h	1 1 0 0 0 0 0 1 1 0 0 0	-5V	-20mA
-1001	C 1 7 h	1 1 0 0 0 0 0 1 0 1 1 1	-5.005V	Outside of the specification range
-1999	8 3 1 h	1 0 0 0 0 0 1 1 0 0 0 1	-9.995V	
-2000	8 3 0 h	1 0 0 0 0 0 1 1 0 0 0 0	-10V	
-2001	8 2 F h	1 0 0 0 0 0 1 0 1 1 1 1	Outside of the specification range	
-2048	8 0 0 h	1 0 0 0 0 0 0 0 0 0 0 0	Outside of the specification range	

CHA and CHB represent the channel of which data is converted. This means that when the two bytes above are read with a ladder program, the A-D converted data of the input channel represented by CHA and CHB can be read from D11 to D00.

NOTE

When two-byte digital output addresses are to be referenced with a ladder program, a read must always be performed word-by-word (16 bits).

8.6.6.3 Channel selection and D/A conversion data for extension module E

<Channel selection>

Extension module E has four analog output channels. Which of the four analog output channels is to be output must be determined with a ladder program. CHA and CHB, which are used to select a channel, are allocated in the DO address area for the module as shown below.

Address in the module	7	6	5	4	3	2	1	0
Yn (even-numbered address)	D07	D06	D05	D04	D03	D02	D01	D00
Yn+1 (odd-numbered address)	CHB	CHA	0	0	D11	D10	D09	D08

Yn is the start address of the extension module E connected to this module.

By setting the values listed below to CHA and CHB, the corresponding channel is selected.

CHB	CHA	Channel selected
0	0	Channel 1
0	1	Channel 2
1	0	Channel 3
1	1	Channel 4

< D/A conversion data>

By writing 12-bit digital data in D00 to D11 in the above address map, desired voltage and current are output. D11 is a sign bit represented as a two's complement. (Refer to following table.)

Digital data			Analog data	
Decimal	Hexadecimal	Binary (D11~D00)	Voltage output	Current output
2047	7 F F h	0 1 1 1 1 1 1 1 1 1 1 1	Outside of the specification range	Outside of the specification range
2001	7 D 1 h	0 1 1 1 1 1 0 1 0 0 0 1	10V	
2000	7 D 0 h	0 1 1 1 1 1 0 1 0 0 0 0	9.995V	
1999	7 C F h	0 1 1 1 1 1 0 0 1 1 1 1	5.005V	
1001	3 E 9 h	0 0 1 1 1 1 1 0 1 0 0 1	5V	20mA
1000	3 E 8 h	0 0 1 1 1 1 1 0 1 0 0 0	4.995V	19.98mA
999	3 E 7 h	0 0 1 1 1 1 1 0 0 1 1 1	10mV	40uA
2	0 0 2 h	0 0 0 0 0 0 0 0 0 1 0	5mV	20uA
1	0 0 1 h	0 0 0 0 0 0 0 0 0 0 1	0V	0mA
0	0 0 0 h	0 0 0 0 0 0 0 0 0 0 0	-5mV	Outside of the specification range
-1	F F F h	1 1 1 1 1 1 1 1 1 1 1	-10mV	
-2	F F E h	1 1 1 1 1 1 1 1 1 1 0	-9.995V	
-1999	8 3 1 h	1 0 0 0 0 0 1 1 0 0 0 1	-10V	
-2000	8 3 0 h	1 0 0 0 0 0 1 1 0 0 0 0	Outside of the specification range	
-2001	8 2 F h	1 0 0 0 0 0 1 0 1 1 1 1	Outside of the specification range	
-2048	8 0 0 h	1 0 0 0 0 0 0 0 0 0 0		

NOTE

- When an extension module E is used, be sure to allocate the start address of the slot which assigned the extension module E at an even-numbered address.

NOTE

- 1 Be sure to write the target data for D-A conversion with a PMC program word-by-word (16 bits).
- 2 The output value of each channel is held until another data is written in that channel.
- 3 Multiple channels cannot be selected within the same ladder scan period. After selecting a channel, wait at least the ladder scan period before selecting another channel.

DO alarm detection

The DO driver of the basic module and extension modules A, B, and C is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as connecting the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

Eliminate a cause after checking the location of the detected error.

Basic module, Extension module A and B

A DO error such as a ground fault is detected for each signal. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to “1”, the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, “Status Alarm”.

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Y_{n_1}	0th byte DO of Basic module
				1	Y_{n_1+1}	1st byte DO of Basic module
			2	0	Y_{n_2}	0th byte DO of Extension module1
				1	Y_{n_2+1}	1st byte DO of Extension module1
			3	0	Y_{n_3}	0th byte DO of Extension module2
				1	Y_{n_3+1}	1st byte DO of Extension module2
			4	0	Y_{n_4}	0th byte DO of Extension module3
				1	Y_{n_4+1}	1st byte DO of Extension module3

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Y_{n_1} , Y_{n_2} , Y_{n_3} and Y_{n_4} indicate the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

Extension module C

With extension module C, a DO error such as a ground fault is detected for each signal. The DO error is input not in the PMC system relay area, but in the area at the DI address listed in the table below.

- DO alarm bit addresses when extension module C is allocated as extension modules 1 to 3 (0: No DO alarm issued, 1: DO alarm issued).

Address	Bit								Module
	7	6	5	4	3	2	1	0	
Xm ₁	Bit 7 of Yn ₁	Bit 6 of Yn ₁	Bit 5 of Yn ₁	Bit 4 of Yn ₁	Bit 3 of Yn ₁	Bit 2 of Yn ₁	Bit 1 of Yn ₁	Bit 0 of Yn ₁	DO alarm on extension module 1
Xm ₁ +1	Bit 7 of Yn ₁ +1	Bit 6 of Yn ₁ +1	Bit 5 of Yn ₁ +1	Bit 4 of Yn ₁ +1	Bit 3 of Yn ₁ +1	Bit 2 of Yn ₁ +1	Bit 1 of Yn ₁ +1	Bit 0 of Yn ₁ +1	
Xm ₂	Bit 7 of Yn ₂	Bit 6 of Yn ₂	Bit 5 of Yn ₂	Bit 4 of Yn ₂	Bit 3 of Yn ₂	Bit 2 of Yn ₂	Bit 1 of Yn ₂	Bit 0 of Yn ₂	DO alarm on extension module 2
Xm ₂ +1	Bit 7 of Yn ₂ +1	Bit 6 of Yn ₂ +1	Bit 5 of Yn ₂ +1	Bit 4 of Yn ₂ +1	Bit 3 of Yn ₂ +1	Bit 2 of Yn ₂ +1	Bit 1 of Yn ₂ +1	Bit 0 of Yn ₂ +1	
Xm ₃	Bit 7 of Yn ₃	Bit 6 of Yn ₃	Bit 5 of Yn ₃	Bit 4 of Yn ₃	Bit 3 of Yn ₃	Bit 2 of Yn ₃	Bit 1 of Yn ₃	Bit 0 of Yn ₃	DO alarm on extension module 3
Xm ₃ +1	Bit 7 of Yn ₃ +1	Bit 6 of Yn ₃ +1	Bit 5 of Yn ₃ +1	Bit 4 of Yn ₃ +1	Bit 3 of Yn ₃ +1	Bit 2 of Yn ₃ +1	Bit 1 of Yn ₃ +1	Bit 0 of Yn ₃ +1	

How to view the table above

DO alarm data assigned to bit 5 of address Yn₁+1 is written to bit 5 of Xm₁+1.

States when the protection function is activated in extension module C

The following table lists the DO output and alarm data states when a DO error occurs in extension module C and the protection function is activated.

State	PMC output	Module DO output	DO state indication LED (green)	DO alarm LED (red)	Alarm data
Normal operation	0	OFF	Turned off	Turned off	0
	1	ON	Turned on	Turned off	0
Overheat protection function operation	0	OFF	Turned off	Turned off	0
	1	OFF	Turned off	Turned on	1
Over voltage protection function operation	0	OFF	Turned off	Turned off	0
	1	OFF	Turned off	Turned off	0
Disconnection detection	0	OFF	Turned off	Turned off	0
	1	ON	Turned on	Turned on	1

NOTE

- 1 If the overheat protection function or over voltage protection function among the protection functions above is activated, the DO bit is kept OFF until the cause is eliminated. When the cause is eliminated, the DO bit is set to ON without restarting the system.
- 2 Disconnection detection is performed by monitoring, with an output element in the module, the current flowing through a load when DO output is ON. When the detected current value is about 200 mA or less, disconnection detection is assumed. So, when a device (such as an LED) with a small load current is connected, the DO alarm state results, assuming disconnection detection. Unlike the other protection functions, however, this function does not turn off DO output. If a connection is reactivated after the state of disconnection is once set, disconnection detection is canceled without restarting the system.

NOTE

- 3 When the ratings current value of the load is larger than the disconnection detection current value, and the rise time of the current that flows to the connected load (such as an solenoid) is late, the disconnection detection function might work. For that case, the disconnection detecting function when DO output is ON can be evaded by programming it to refer to DO alarm allocated to DI after the fixed time has passed since DO was turned on.


8.6.6.4 Setting the rotary switch**NOTE**

In the description in this subsection, slots are applicable only for the I/O Link *i*.

By changing the setting (rotary switch) for the extension modules, connections can be made by omitting some extension modules (slots). Use the same setting method as for I/O modules for connector panel. For details, see Subsection 8.2.11.

Location of the rotary switch


As shown below, the control (rotary switch) is located on an extension module. To change the setting, turn the switch with a flat-bladed screwdriver with a tip width of about 2.5 mm.

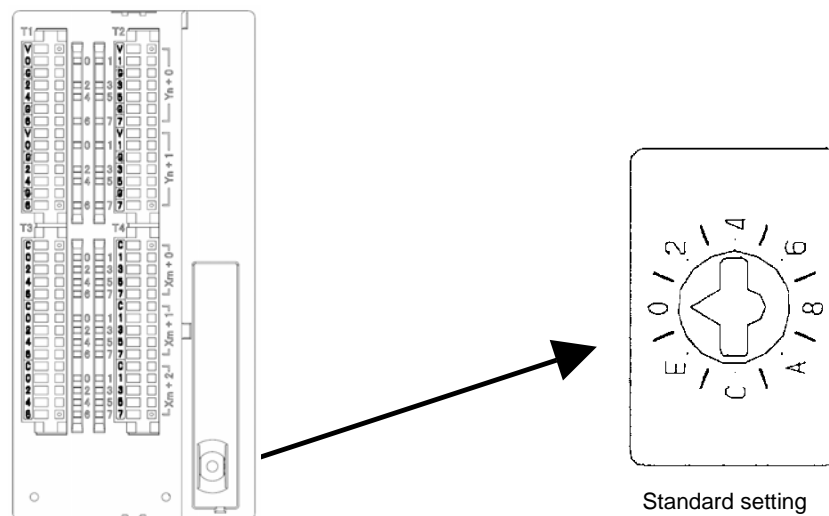

8.6.7 Others

8.6.7.1 Method of common pin expansion

Additional common pins can be provided by mounting (screwing) a commercially available terminal block on the top cover of an extension module.

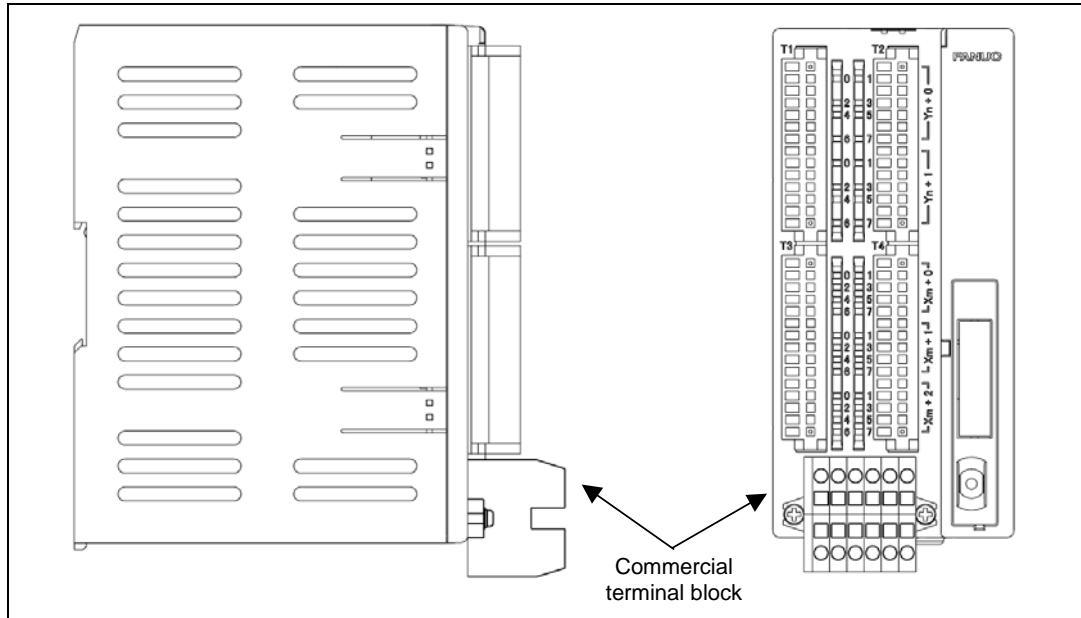


Examples of commercial terminal blocks

Manufacturer	Model	Maximum number of poles
WAGO	869 series	12
Weidmuller	ZDUB2.5 series	10
OSADA	TWM10B series	14

For details of the terminal blocks, contact the respective manufacturers.

Mounting dimensions of a commercial terminal block

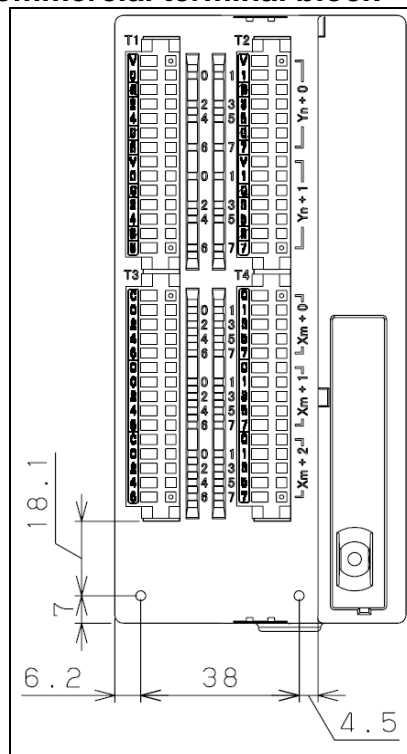

Unit: mm


NOTE

To fasten a terminal block, use M3 tap screws not longer than 10 mm.

8.6.7.2 Parallel DO (output signal) connection

Basic module, Extension modules A and B

With the basic module and extension modules A and B, a DO load current two times larger can be obtained by connecting DO points in parallel and exercising ON/OFF control at the same time in the sequence as shown below. Namely, the maximum load current per DO point is 200 mA, but 400 mA can be obtained by connecting two DO points in parallel and turning on the two DO points at the same time. In this case, however, the leakage current is also doubled up to 40 μ A when the DO points are turned off.

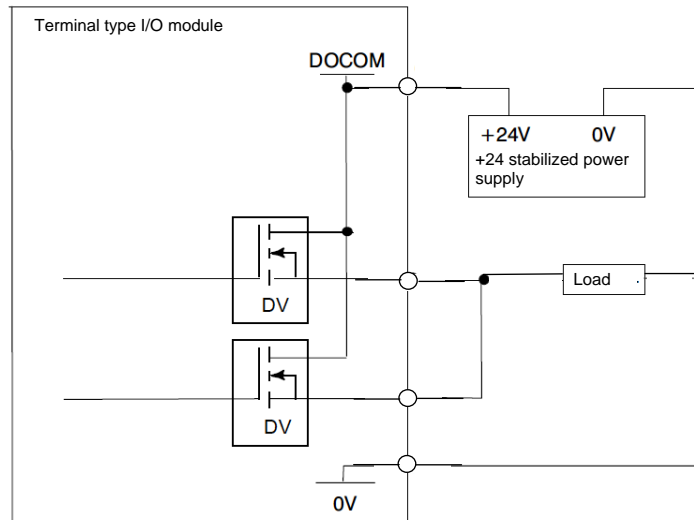


NOTE

- 1 Be sure to connect the bit at the same address for parallel connection. Three or more signals cannot be connected in parallel.
- 2 Extension module C does not allow parallel DO connection.

8.7 I/O Link CONNECTION UNIT

The I/O Link connection unit connects I/O Link *i* master devices such as CNCs via an I/O Link to enable the transfer of DI/DO data between I/O Link master devices on different systems.

8.7.1 Overview

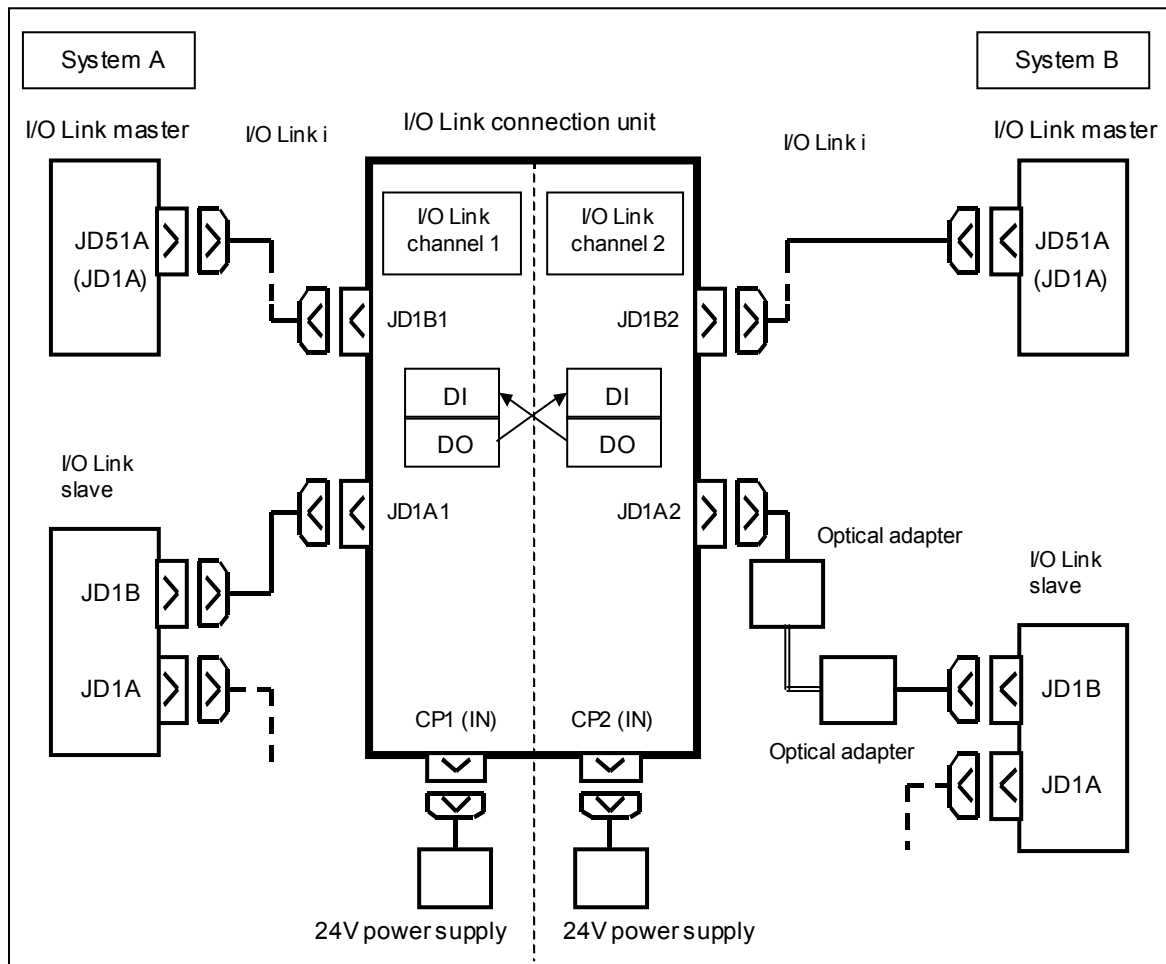

Specification of operation

- 1) The I/O Link connection unit has two channels of I/O Link slave interfaces.
- 2) The two I/O Link slave channels can independently operate, and the power to each channel can also be turned on and off independently.
- 3) When both systems operate normally, DO data of one system is transferred as DI data to the other system.
- 4) When either system stops (NOTE 1), DI data of the other system that is operating is automatically set to all zeros.
- 5) When both systems normally operate, then either system stops (NOTE 1), it takes up to 200 ms until DI data of the other system that is operating is automatically set to all zeros. During this period, DO data immediately before that system stops is transferred as DI data.
- 6) When either system that has stopped starts operation, DI data is transferred after the I/O Link communication is established.
- 7) If an alarm is issued due to a failure in the I/O Link connection unit itself, the I/O Link enters an alarm state in both I/O Link channels.

NOTE

- 1 The stopped state here means the status in which the power to the system is off for adjustment or maintenance or that in which the I/O Link stops due to an error in the I/O Link master device or another slave device.
- 2 The specification of operation does not guarantee that the system always operates according to the specification. Therefore, for the signals related to safety, configure a safety circuit outside the I/O Link connection unit.

8.7.2 Specification

Ordering information

Item	Specification
I/O Link connection unit	A02B-0333-C250
Fuse, 1A (one as a spare part)	A03B-0815-K001

Installation conditions

- (1) When installing the I/O Link connection unit, satisfy the CNC installation conditions.
- (2) Install this unit on a vertical surface, and provide a space of at least 100 mm above and below the unit. Do not place any device that generates a large amount of heat below this unit.

Power supply rating

Item	Specification	Remarks
Voltage	24VDC \pm 10%	\pm 10% includes momentary variations and ripples.
Current	0.3A/channel	When two or less optical adapters are connected
	0.4A/channel	When three or more optical adapters are connected
Heat output	7.5W	When two or less optical adapters are connected
	10W	When three or more optical adapters are connected

I/O Link specification


Item	Specification
Number of DI/DO data items	For each I/O Link slave channel DI: Up to 256, DO: Up to 256 (The number of data items actually used varies depending on the amount of data assigned in the I/O Link master device.)

NOTE


Note the following points when assigning DI/DO data items to each channel:

- The number of DI data items assigned to channel 1 is the same as that of DO data items assigned channel 2.
- The number of DO data items assigned to channel 1 is the same as that of DI data items assigned to channel 2.

External dimensions/weight

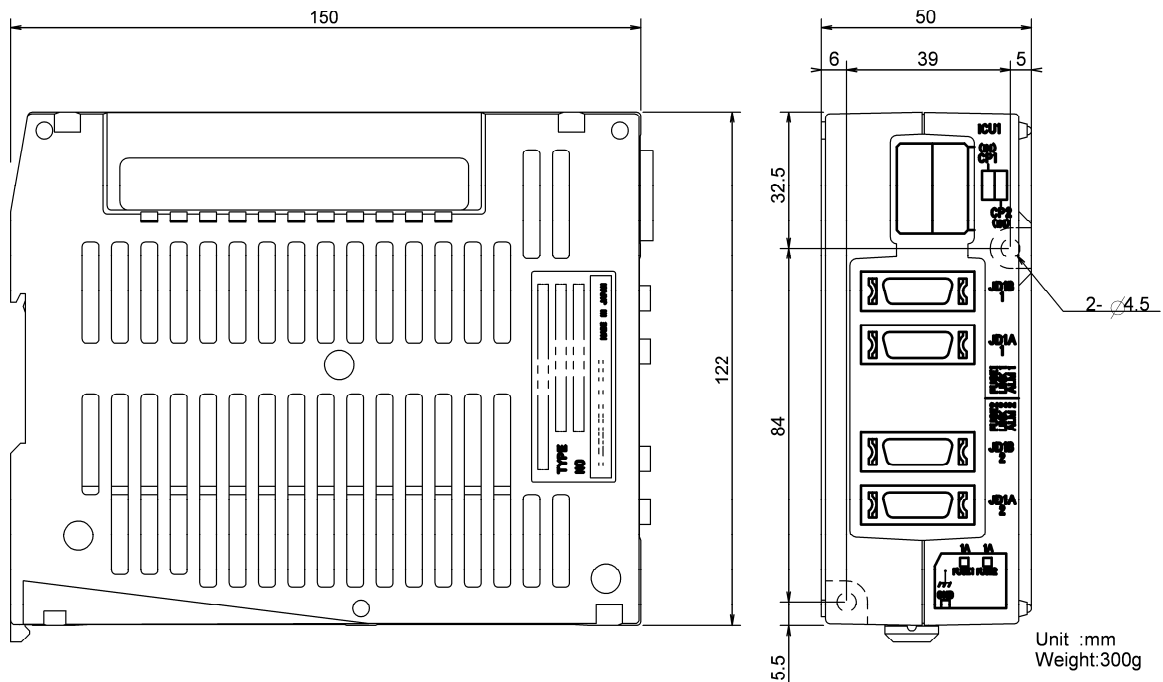


Connector layout

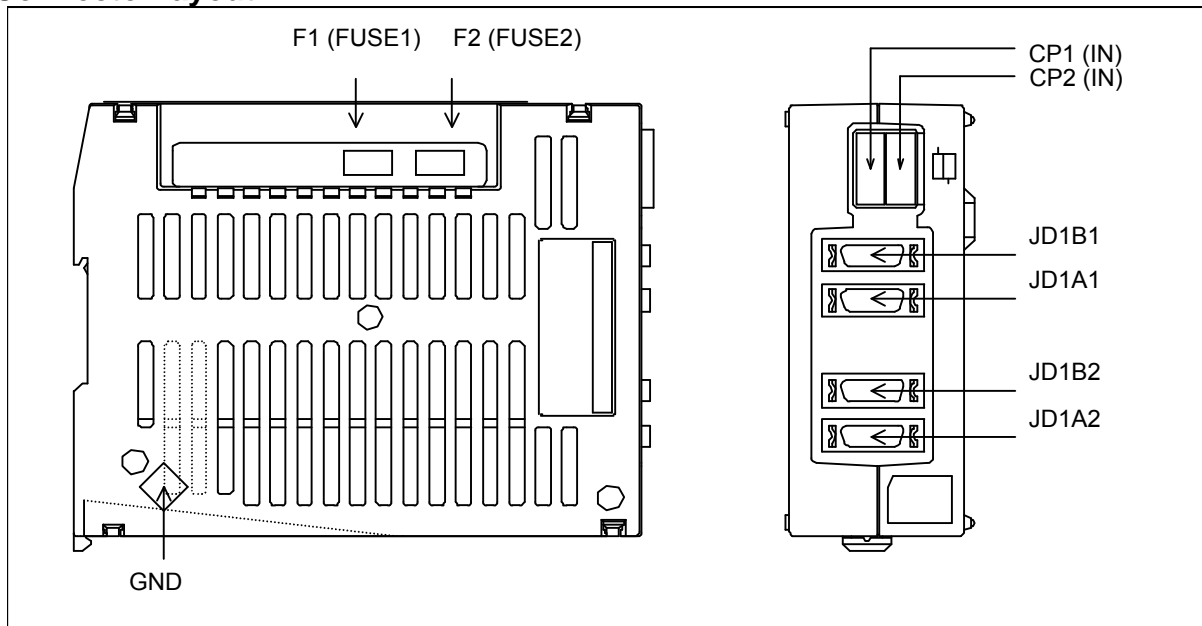

Connector number and fuse number	Purpose
CP1 (IN)	24VDC power input (channel 1)
CP2 (IN)	24VDC power input (channel 2)
JD1B1, JD1A1	I/O Link interface (channel 1)
JD1B2, JD1A2	I/O Link interface (channel 2)
GND	Ground terminal for signals
F1 (FUSE1)	Fuse for channel 1
F2 (FUSE2)	Fuse for channel 2


8.7.3 Installation

Mounting hole for screwing

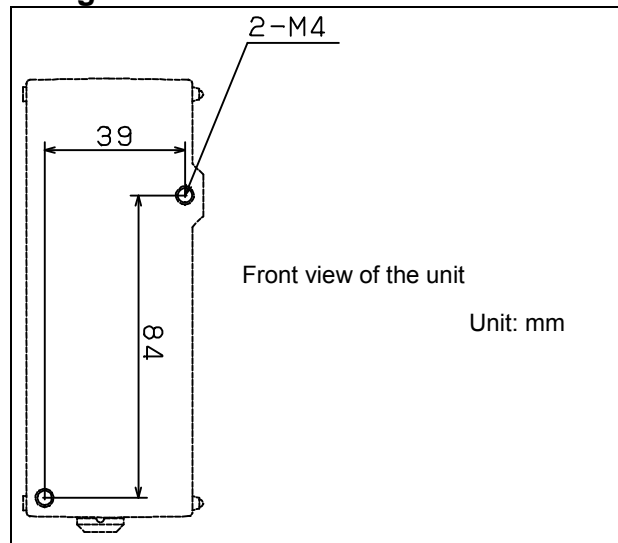


NOTE

- 1 A screwdriver is inserted on a slant to mount and dismount the unit, so that a sufficient maintenance space is required on both sides of the unit. When the front face of an adjacent unit is flush with the front face of the unit or is recessed, provide a clearance of about 20 mm from the adjacent unit. When the front face of an adjacent unit is more projected toward you than the front face of the unit, provide a clearance of about 70 mm from the adjacent unit.
- 2 When the unit is to be installed near a side plane of the cabinet, provide a clearance of about 70 mm between the unit and the side plane of the cabinet.

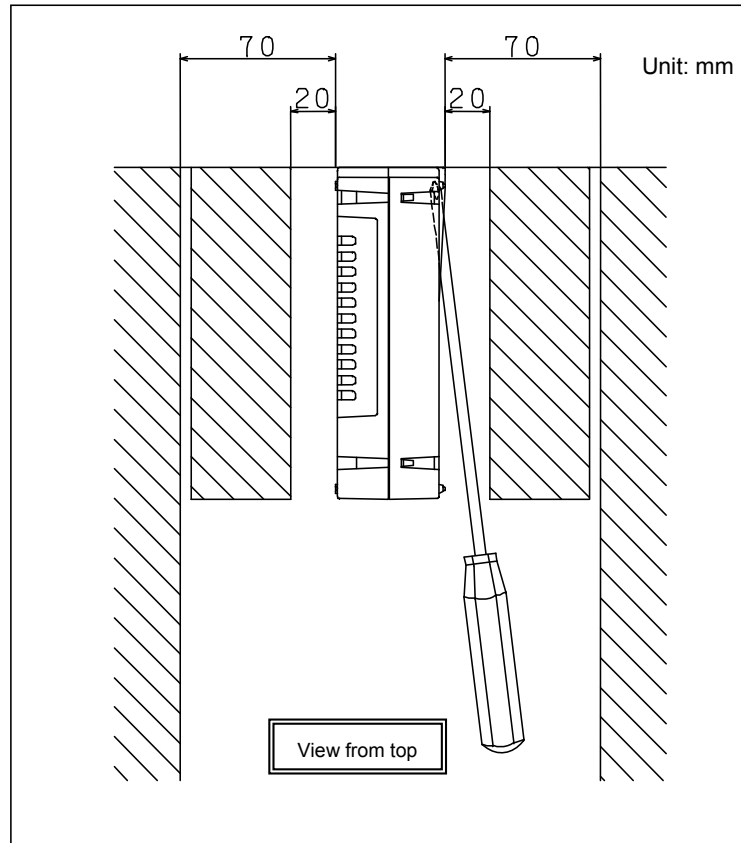

Using a DIN rail for mounting

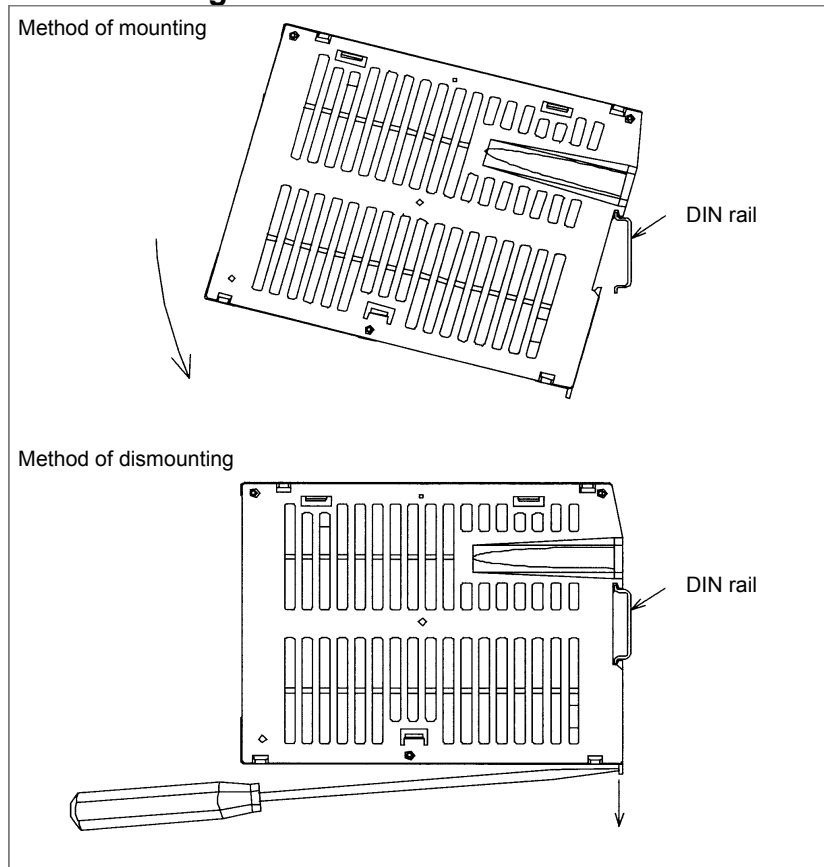


Method of mounting

1. Place the hook of the unit onto the top of the DIN rail.
2. Push the unit until it clicks into place.

Method of dismounting

1. Lower the locking section with a flat-blade screwdriver.
2. Pull the lower part of the unit toward you.

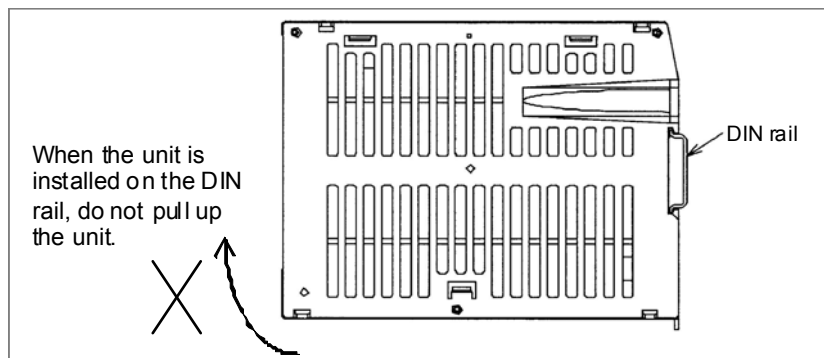

CAUTION

When the unit is installed, be careful not to damage the lock by applying excessive force.


When installing and removing the unit, hold the upper and lower ends of the unit so that stress is not applied to the side (that surface with the slits) of the unit.

When the unit is installed on the DIN rail, do not pull up the unit. Pulling up the unit may damage the case.

8.7.4 Connection

8.7.4.1 I/O Link connection

Sample connection

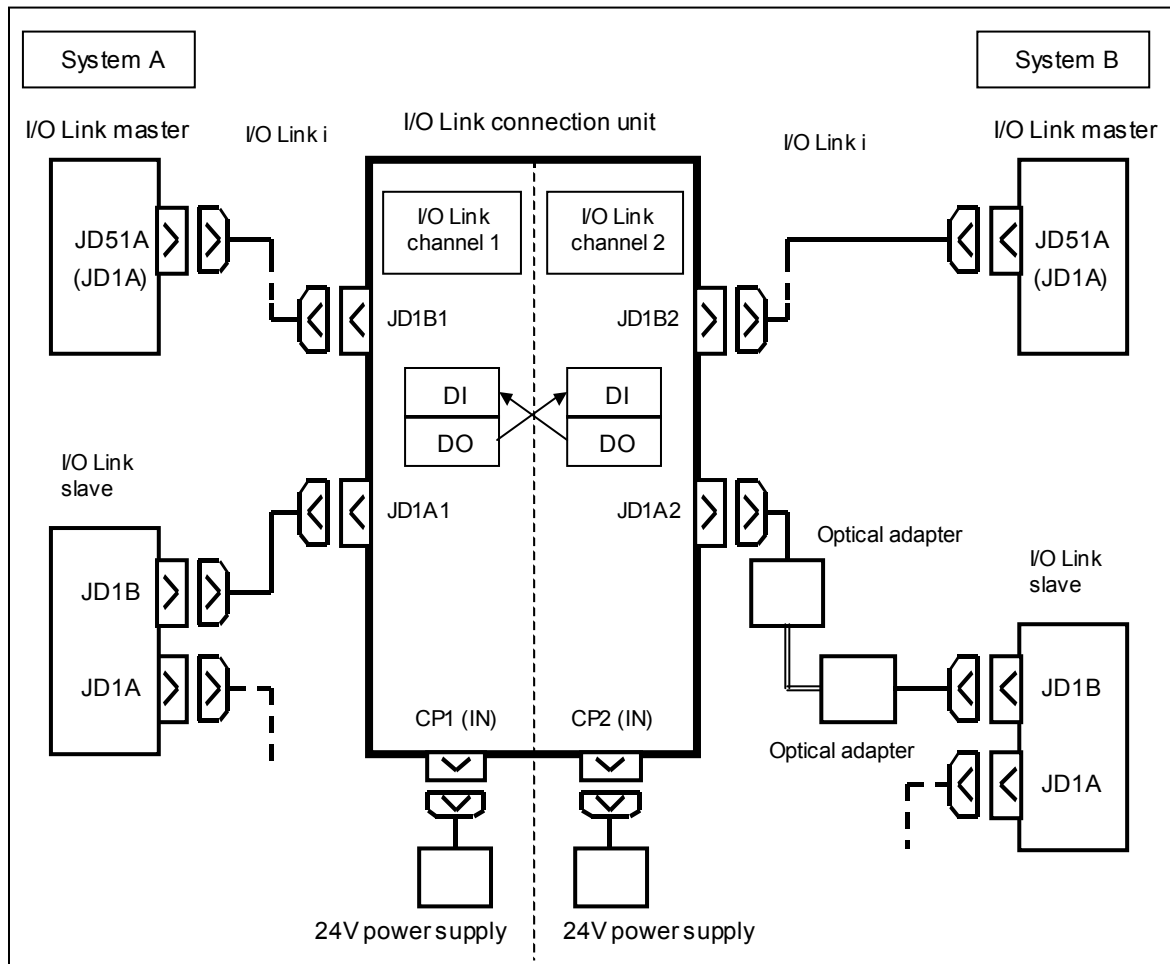

For details of I/O Link connection, see Section 7.2.

NOTE


- 1 A conventional I/O Link connection unit has an optical interface. This model has electric interfaces only. When an optical interface is required, use an optical adapter for connection.
- 2 To an electric interface on this unit, 5 V power is supplied for an optical adapter, though it is not supplied for an optical adapter to an electric interface on a conventional I/O Link connection unit.
- 3 When optical adapters are connected, the power supply rating of the 24 V power supply differs depending on the number of optical adapters connected to the I/O Link connection unit. For the power supply rating, see Subsection 8.7.2.

8.7.4.2 Power connection

Supply the power required for operation of this unit to the connectors shown in the figure below, CP1(IN) and CP2(IN).


Supplying the power to CP1(IN) operates the I/O Link of channel 1.

Supplying the power to CP2(IN) operates the I/O Link of channel 2.

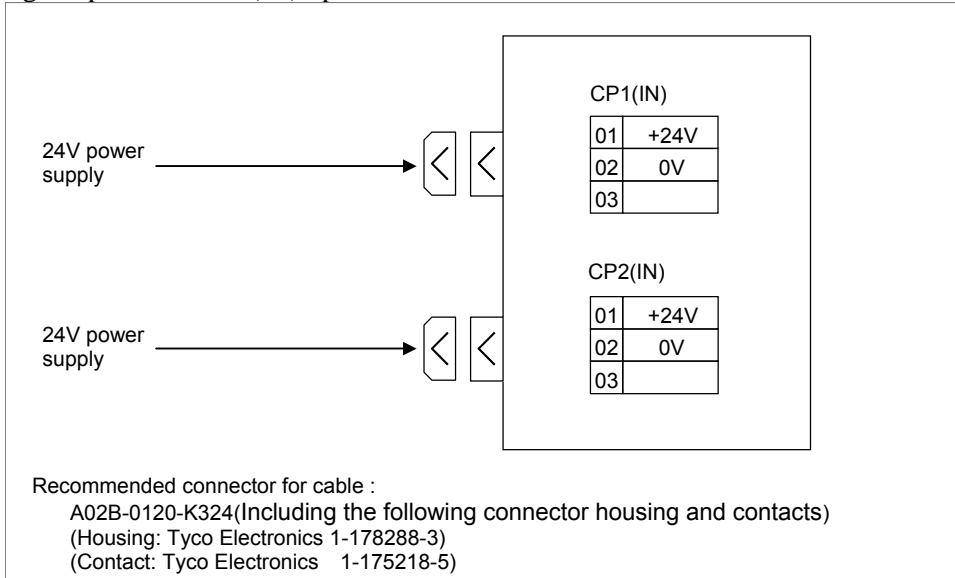

Ground terminal for signals

Secure the ground line to the ground terminal (GND) for signals, which is located at the bottom of each unit, with an M3 screw as shown in the figure below. Connect the ground line to the ground plate of the cabinet.

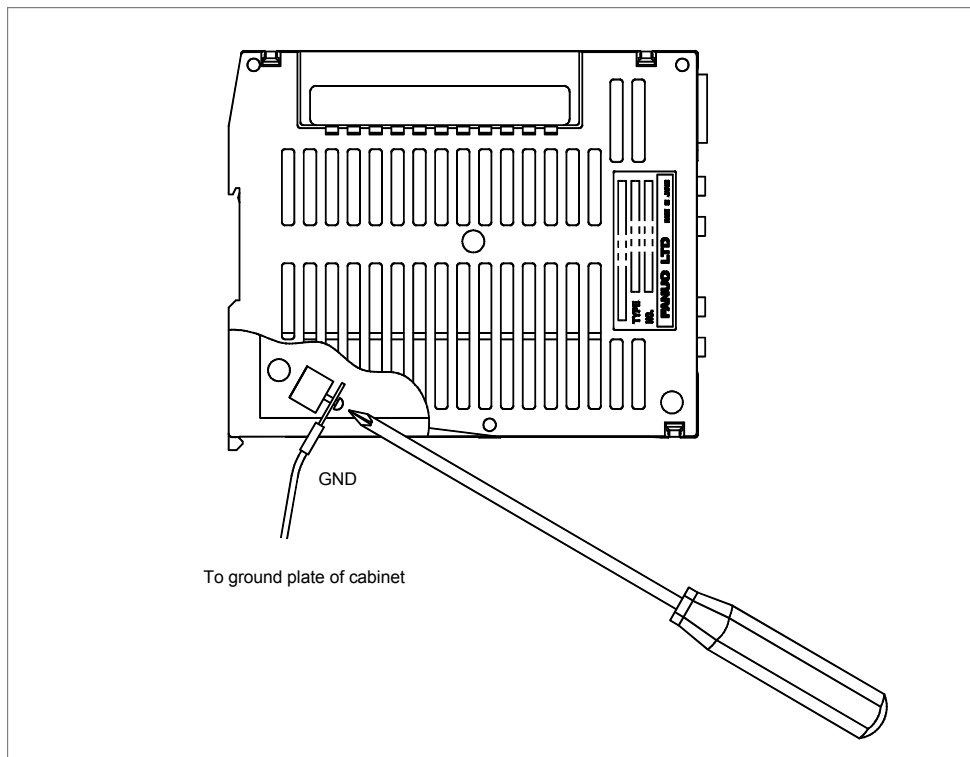


NOTE
 The torque with which a screw is tightened is 0.5 N.m or less.

8.8 CONNECTION TO MACHINE OPERATOR'S PANEL

8.8.1 Overview

0i-F can be using the following machine operator's panel.

- **Standard machine operator's panel main panel**
The standard machine operator's panel main panel is connected. It has 55 key switches and 55 LED displays. All key tops are detachable.
- **Safety machine operator's panel**
The safety machine operator's panel is connected. It has 55 key switches and 55 LED displays. All key tops are detachable.
Moreover, all the key switches are dual contacts.
The general-purpose input signals of 8 pair are inputted into dual circuit.
By using dual check safety function (DCS function), the signal of the key switch and the external dual input signal can use as the safety-related input signal.
Conforming with the safety standard like ISO23125 or EN12417 is easy.
- **Safety machine operator's panel type B**
Safety machine operator's panel type B has the same function as safety machine operator's panel.
Width is the same 400mm as 15"LCD. It is designed so that it can be used combining 15"LCD.
It has 55 key switches, 55 LED displays, an emergency stop switch, a power ON/OFF control switch, a feed rate override switch and a spindle override switch.

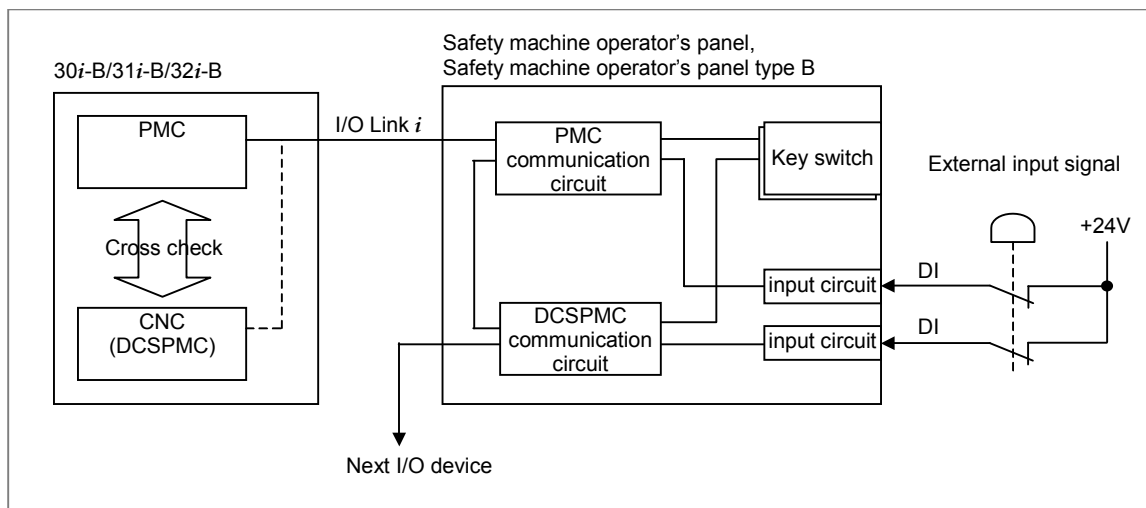


The standard machine operator's panel main panel and safety machine operator's panel can be use with the following sub panel.


- **Sub panel AA, D**
Sub panel AA and D are operator's panels with a power ON/OFF switch, an emergency stop switch, a program protect switch, a feed rate override switch and a spindle override switch.
The signal from each switch can be transmitted to the power magnetics cabinet via the main panel or safety machine operator's panel. ON-switch has a LED.

8. UNITS CONNECTED TO FANUC I/O Link i AND FANUC I/O Link

The following figure is the example of composition when using the standard machine operator's panel main panel or the safety machine operator's panel.

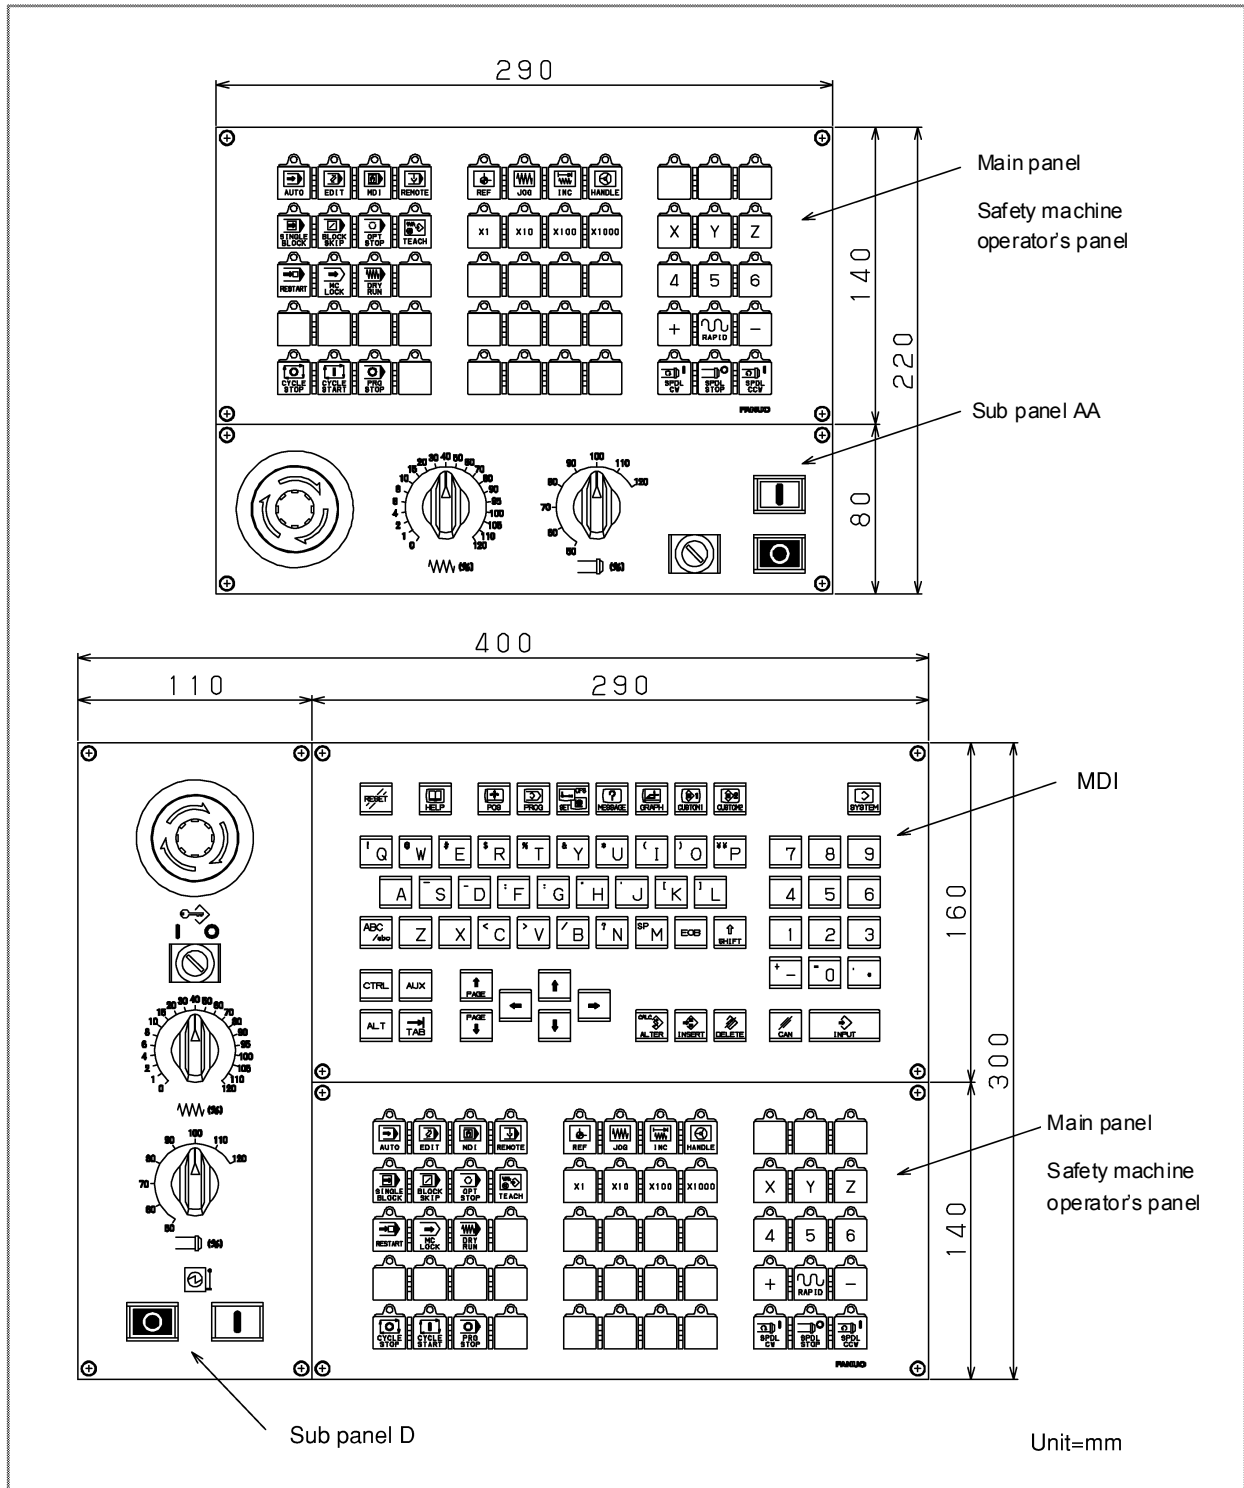


The following figure is the example of composition when using the safety machine operator's panel type B.

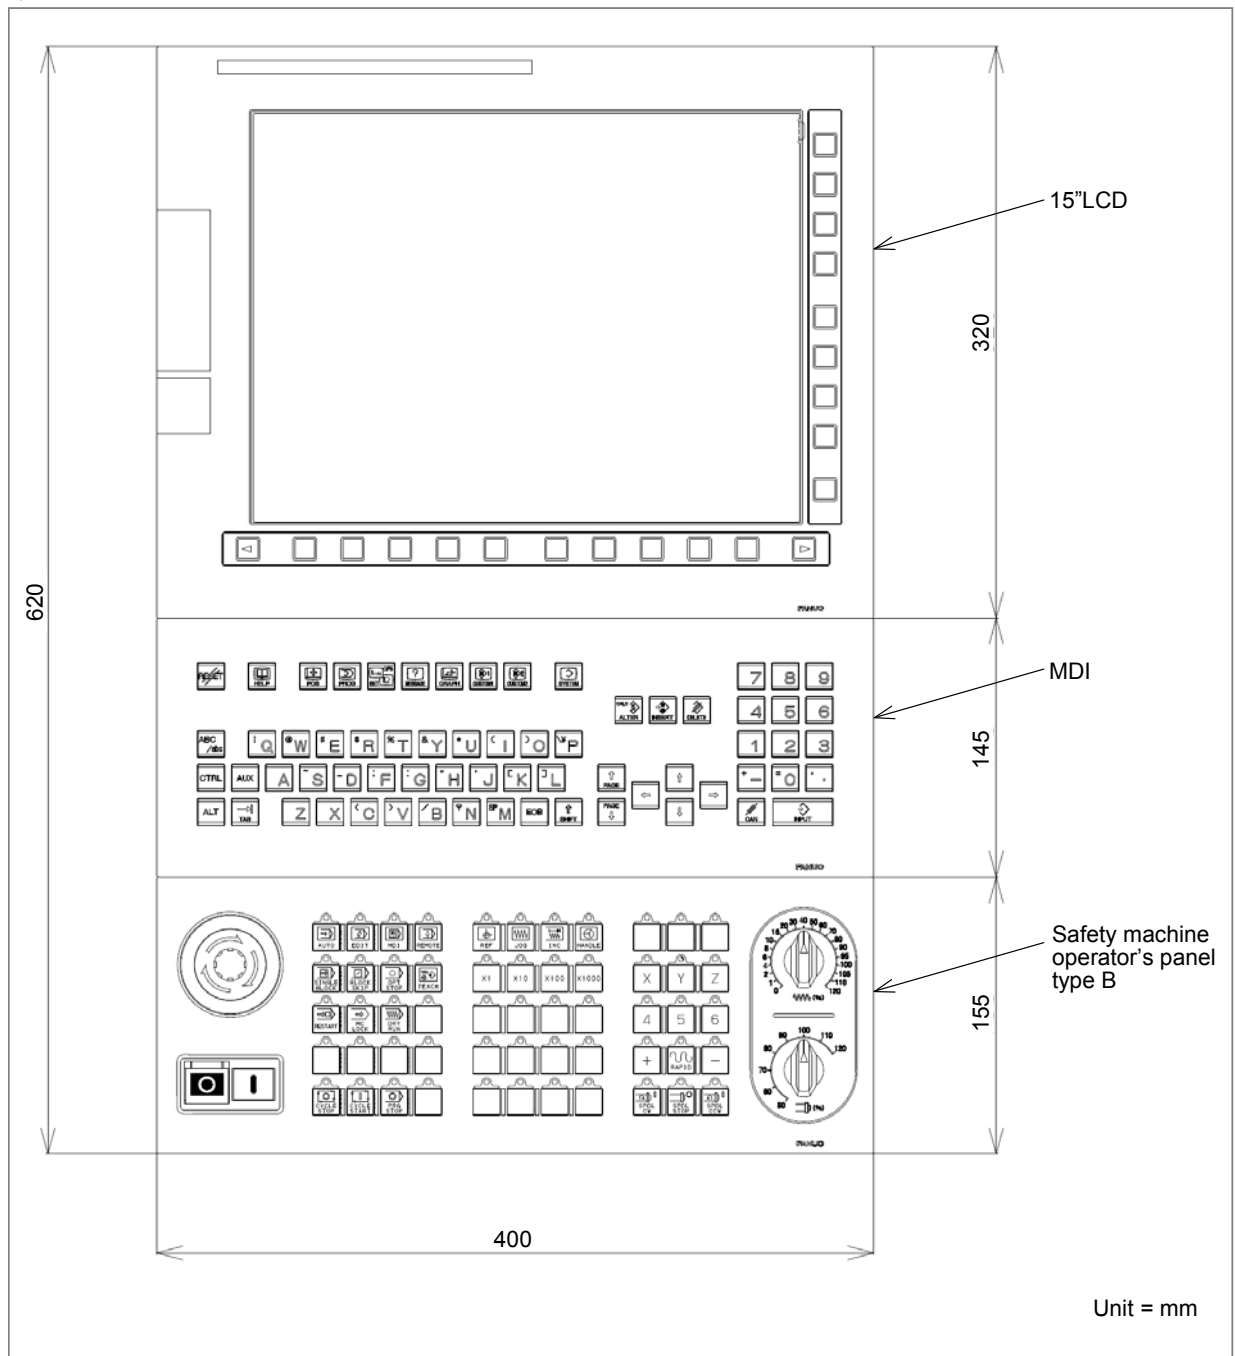

8.8.2 Total Connection Diagram


Standard machine operator's panel main panel

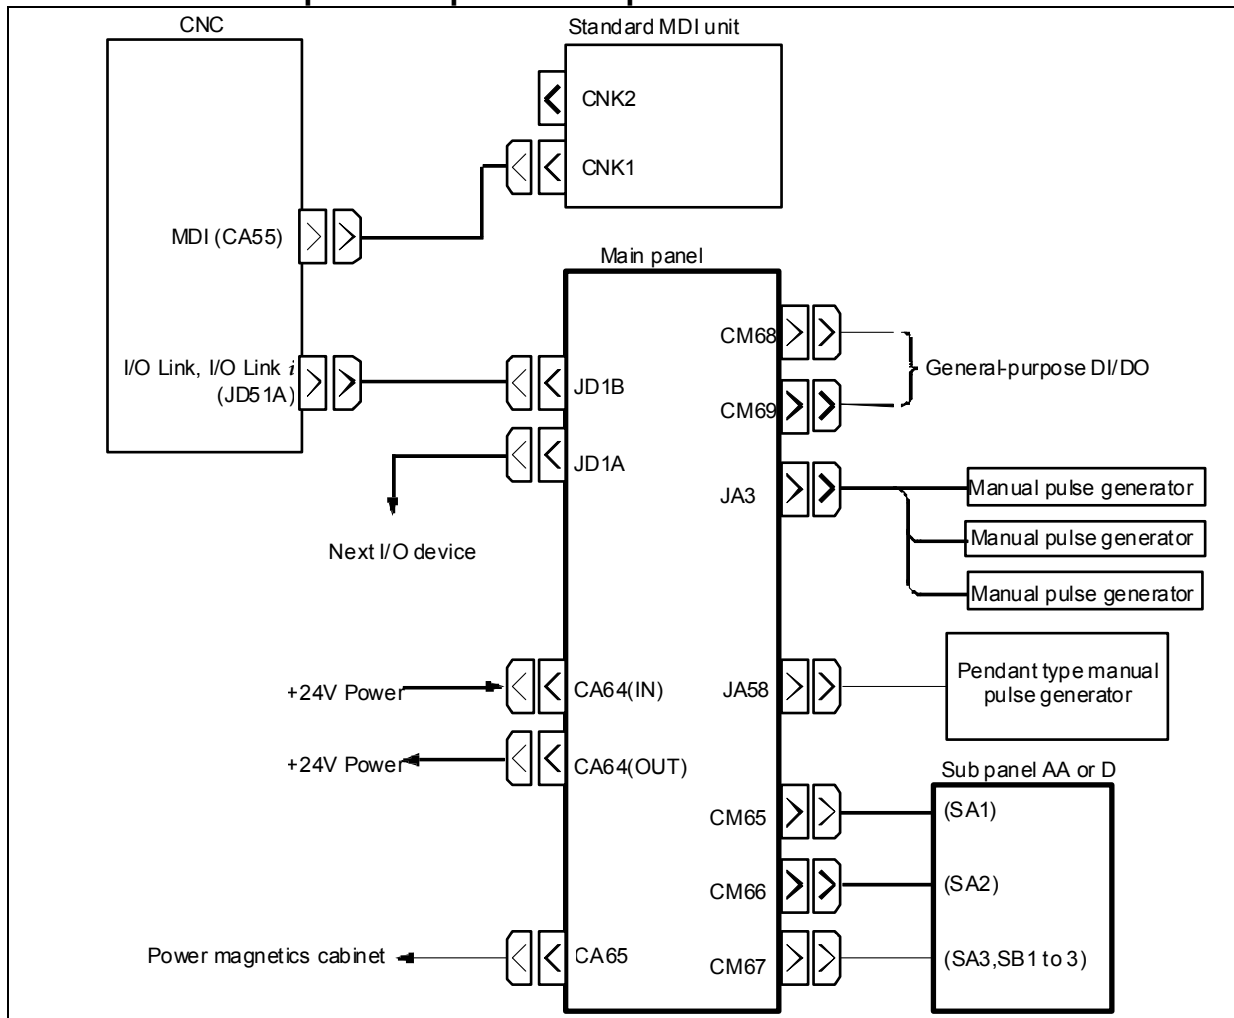

NOTE


Manual pulse generators cannot be connected to JA3 and JA58 simultaneously.

Safety machine operator's panel

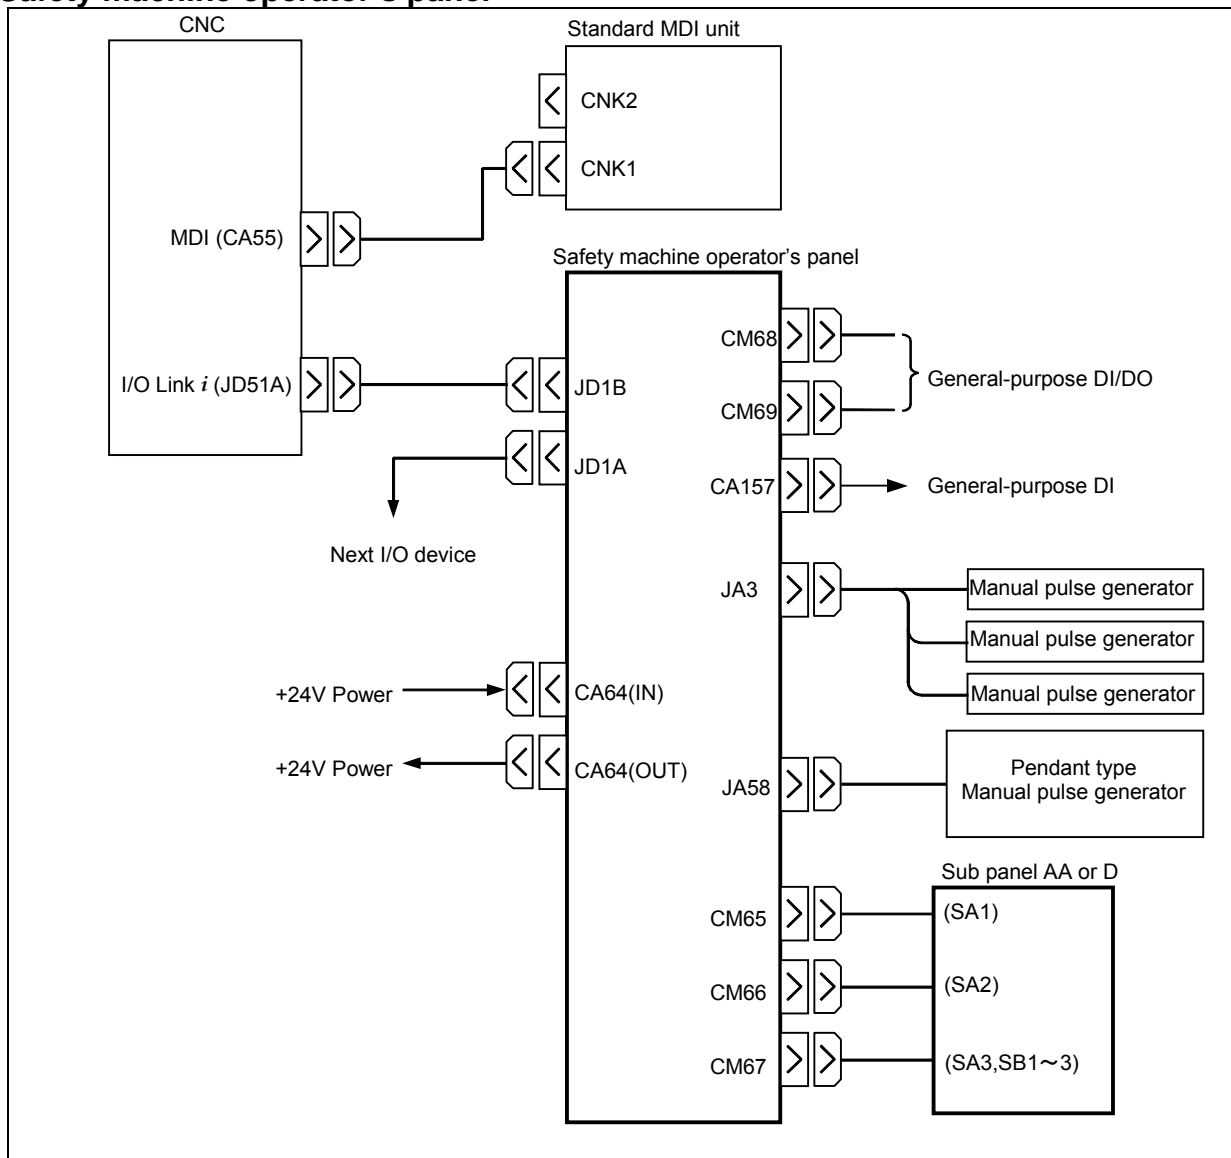

NOTE
Manual pulse generators cannot be connected to JA3 and JA58 simultaneously.


Safety machine operator's panel type B

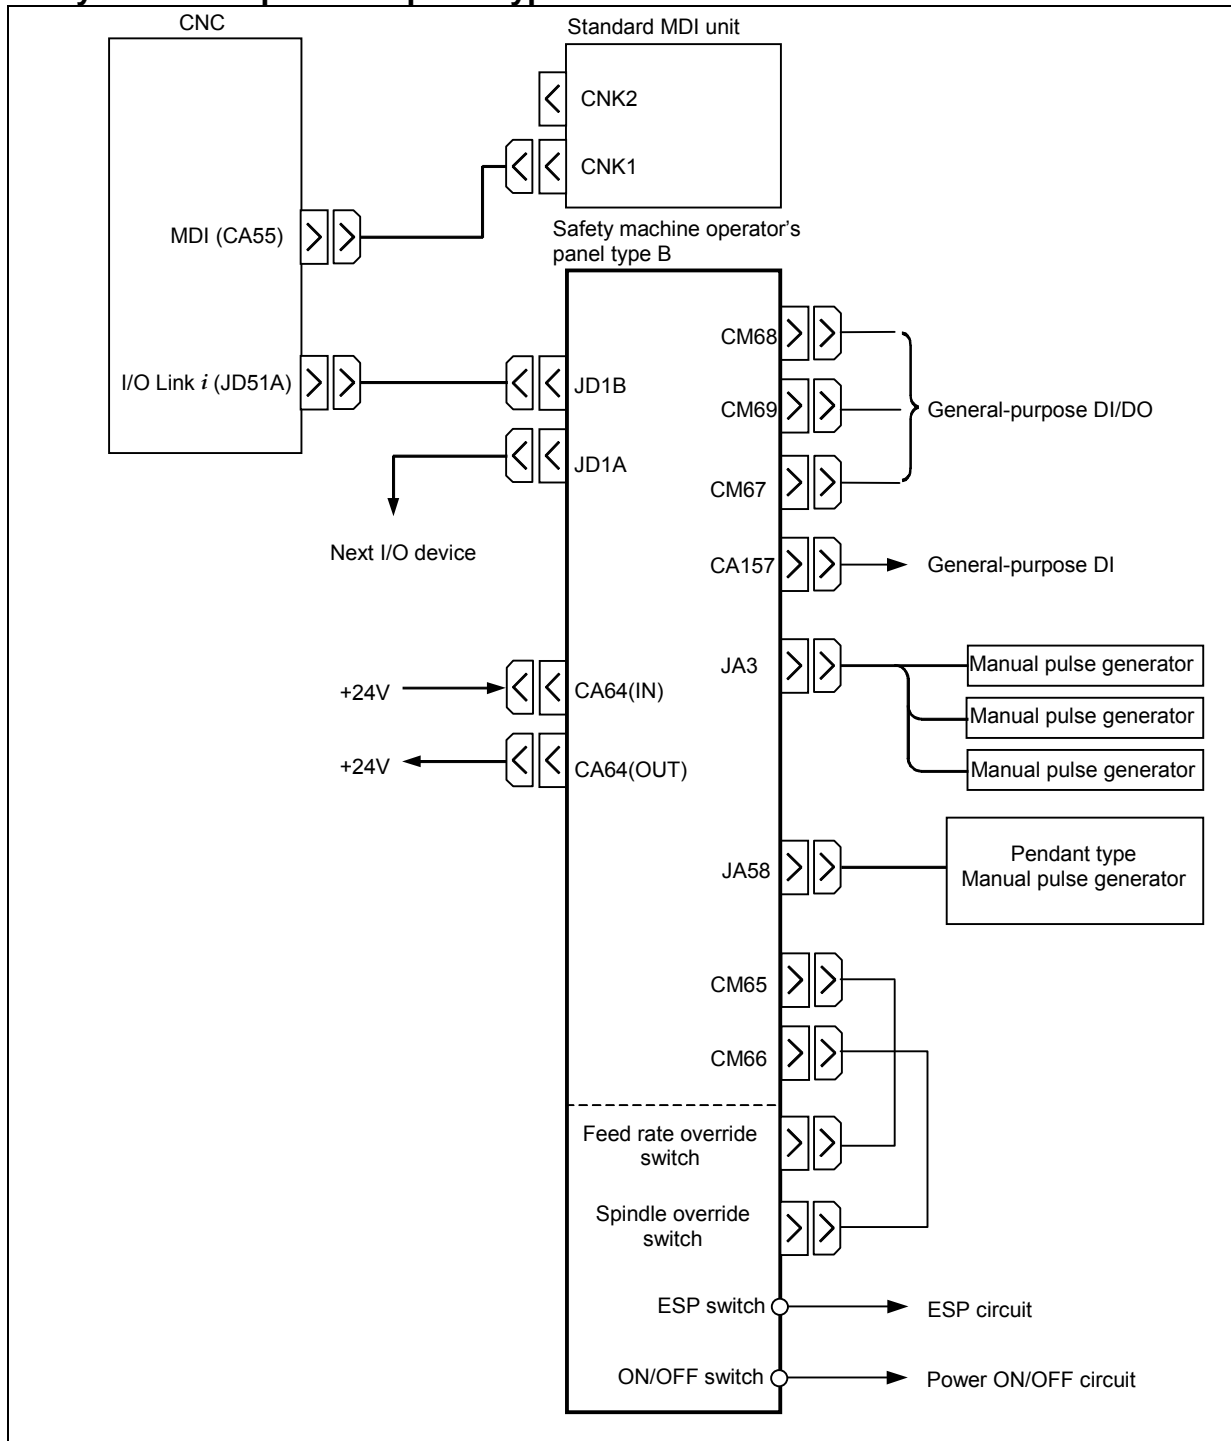

NOTE
Manual pulse generators cannot be connected to JA3 and JA58 simultaneously.

8.8.3 DI/DO Address Map

Standard machine operator's panel main panel

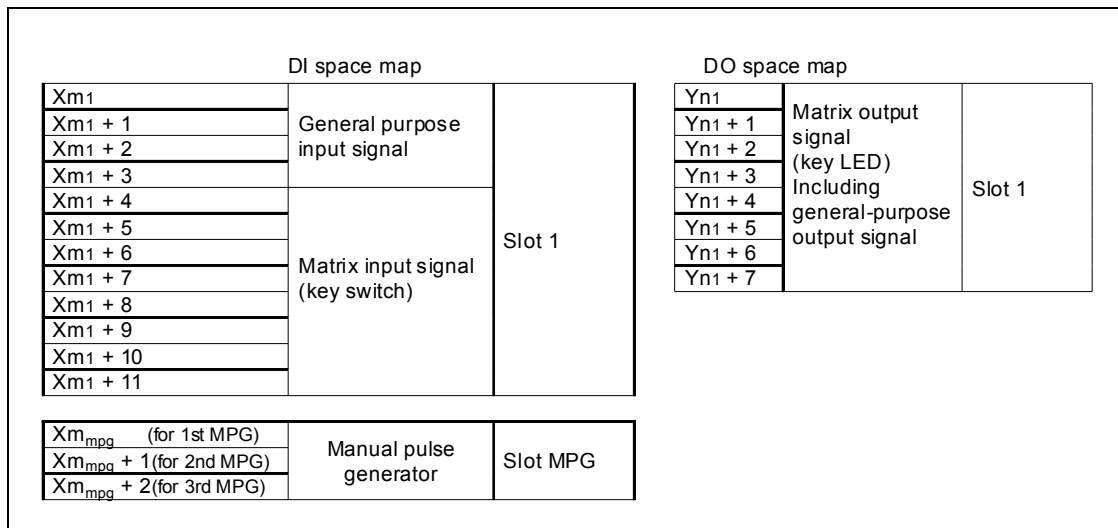


Xm1, Xm_{mpg}, and Yn1 indicate the start address at allocation.

For the main panel, allocate 12-byte DI addresses to slot 1 and 8-byte DO addresses to slot 1. The main panel has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the addresses with the ladder because the CNC processes the manual pulse generator signals directly.

Safety machine operator's panel, Safety machine operator's panel type B

1st group (PMC DI/DO) address

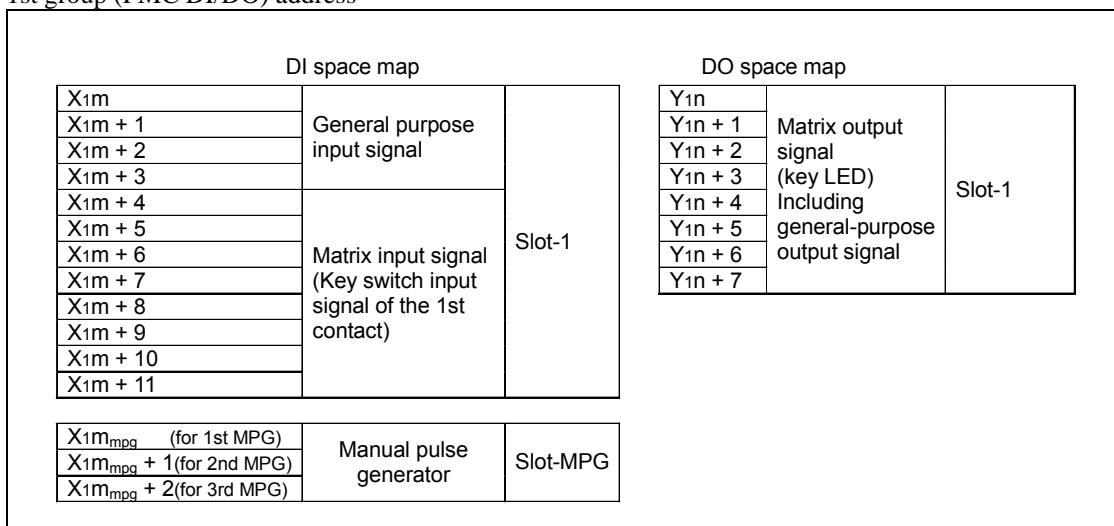

X1m, X1m_{mpg}, and Y1n indicate the start address at allocation.

2nd group (DCSPMC DI/DO) address

DI space map		DO space map
X2m	General purpose input signal	Slot-1
X2m + 1	Matrix input signal (Key switch input signal of the 2nd contact)	
X2m + 2		
X2m + 3		
X2m + 4		
X2m + 5		
X2m + 6		
X2m + 7		
X2m + 8		

X2m indicate the start address at allocation.

The safety machine operator's panel and the safety machine operator's panel type B allocated to two continuous group of I/O Link *i*. In I/O Link *i*, allocate 12-byte DI address and 8-byte DO address to slot-1 of 1st group as PMC DI/DO, and allocate 9-byte DI address to slot-1 of 2nd group as DCSPMC DI.

The safety machine operator's panel and the safety machine operator's panel type B have an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot-MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the addresses with the ladder because the CNC processes the manual pulse generator signals directly.

8.8.4 Each Connections

8.8.4.1 Pin assignment

Standard machine operator's panel main panel

CA64 (Power source)

A3		A2	0V	A1	+24V
B3		B2	0V	B1	+24V

Recommended connector for cable:

Housing : Tyco Electronics 1-178288-3 (3 pins type)

Contact : Tyco Electronics 1-175218-5

CM67(ON/OFF, Program protect, ESP)

A01	EON	B01	EOFF
A02	COM1	B02	COM2
A03	Xm+1.4	B03	KEYCOM
A04	*ESP	B04	ESPCM1
A05	TR1	B05	TR2

Recommended connector for cable:

Housing : Tyco Electronics 178289-5

Contact : Tyco Electronics 1-175218-5

CM65 (General-purpose DI)

A01		B01	
A02		B02	Xm+0.5
A03	Xm+0.1	B03	Xm+0.3
A04	+24V	B04	Xm+0.4
A05	Xm+0.2	B05	Xm+0.0

Recommended connector for cable:

Hirose electric : HIF3BA-10D-2.54R

CM68 (General-purpose DI/DO)

A01	+24V	B01	Xm+1.5
A02	Xm+1.6	B02	Xm+1.7
A03	Xm+2.0	B03	Xm+2.1
A04	Xm+2.2	B04	Xm+2.3
A05	Xm+2.4	B05	Xm+2.5
A06	TR3	B06	TR4
A07	TR5	B07	TR6
A08	Yn+5.3	B08	Yn+5.7
A09	Yn+6.3	B09	Yn+6.7
A10	DOCOM	B10	0V

Recommended connector for cable:

Housing : Tyco Electronics 178289-8

Contact : Tyco Electronics 1-175218-5

CA65 (Power magnetic cabinet)

A01	EON	B01	EOFF
A02	COM1	B02	COM2
A03	*ESP	B03	ESPCM1
A04	TR1	B04	TR2
A05	TR3	B05	TR4
A06	TR5	B06	TR6
A07	TR7	B07	TR8
A08		B08	
A09		B09	
A10		B10	

Recommended connector for cable:

Hirose electric : HIF3BA-20D-2.54R

CM66 (General-purpose DI)

A01		B01	
A02		B02	Xm+1.3
A03	Xm+0.7	B03	Xm+1.1
A04	+24V	B04	Xm+1.2
A05	Xm+1.0	B05	Xm+0.6

Recommended connector for cable:

Hirose electric : HIF3BA-10D-2.54R

CM69 (General-purpose DI/DO)

A01	+24V	B01	Xm+2.6
A02	Xm+2.7	B02	Xm+3.0
A03	Xm+3.1	B03	Xm+3.2
A04	Xm+3.3	B04	Xm+3.4
A05	Xm+3.5	B05	Xm+3.6
A06	Xm+3.7	B06	DICOM
A07	TR7	B07	TR8
A08	Yn+7.3	B08	Yn+7.4
A09	Yn+7.5	B09	Yn+7.6
A10	DOCOM	B10	0V

Recommended connector for cable:

Housing : Tyco Electronics 178289-8

Contact : Tyco Electronics 1-175218-5

JA3 (Manual pulse generator)

1	HA1	11	
2	HB1	12	0V
3	HA2	13	
4	HB2	14	0V
5	HA3	15	
6	HB3	16	0V
7		17	
8		18	+5V
9	+5V	19	
10		20	+5V

JA58 (Pendant type manual pulse generator)

1	HA1	11	Xm+1.5
2	HB1	12	0V
3	Xm+2.2	13	Xm+1.6
4	Xm+2.3	14	0V
5	Xm+2.4	15	Xm+1.7
6	Xm+2.5	16	0V
7	Yn+5.3	17	Xm+2.0
8	Xm+2.1	18	+5V
9	+5V	19	+24V
10	+24V	20	+5V

Recommended connector for cable of JA3 and JA58
When the depth of the main panel is 60mm min.

Recommended connector for cable:

Hirose electric FI30-20S (Connector)
FI-20-CV7 (Case)

When the depth of the main panel is 80mm min.

Recommended connector for cable of JA3:

Hirose electric : FI40B-2015S (Connector)
FI-20-CV (Case)

Recommended connector for cable of JA58:

Honda : PCR-E20FA (Connector)
PCR-V20LA (Case)

Hirose electric : FI30-20S (Connector)
FI-20-CV2 (Case)

Fujitsu : FCN-247J020-G/E (Connector)
FCN-240C020-Y/S (Case)

Molex : 52622-2011 (Connector)
52624-2015 (Case)

NOTE

- DI/DO pins and MPG signal pins (1 axis) in shaded by are in pairs. Main panel has connector 'JA58' to connect the pendant-type MPG. In this connector, there are DIs (9 points) used to selection of axes and multiplier, DO (1 point) for LED, and signals for MPG (1 axis). These signals are in CM68 for general-purpose DI/DO and JA3 for MPG too. Only one in each pair is usable.
- Pins shaded by are used for the relay. There are two uses in these signals as follows.
 - When a sub panel is connected to the main panel, signals in CM67 from the sub panel are out to CA65.
 - Open pins (TR1-TR8) in CM68, CM69 for general-purpose DI/DO and CM67 for connection to the sub panel are connected directly to CA65.
 These signals can be relayed to the power magnetic cabinet by using a flat cable.

Safety machine operator's panel, Safety machine operator's panel type B**CA64 (Power source)**

A3		A2	0V	A1	+24V
B3		B2	0V	B1	+24V

Recommended connector for cable:
Housing : Tyco Electronics 1-178288-3 (3 pins type)
Contact : Tyco Electronics 1-175218-5

CM67(General-purpose DI, Relay)

A01	EON	B01	EOFF
A02	COM1	B02	COM2
A03	X1m+1.4	B03	KEYCOM
A04	*ESP	B04	ESPCM1
A05	TR1	B05	TR2

Recommended connector for cable:
Housing : Tyco Electronics 178289-5
Contact : Tyco Electronics 1-175218-5

CM65 (General-purpose DI)

A01		B01	
A02		B02	X1m+0.5
A03	X1m+0.1	B03	X1m+0.3
A04	+24V	B04	X1m+0.4
A05	X1m+0.2	B05	X1m+0.0

Recommended connector for cable:
Hirose electric : HIF3BA-10D-2.54R

CM68 (General-purpose DI/DO, Relay)

A01	+24V	B01	X1m+1.5
A02	X1m+1.6	B02	X1m+1.7
A03	X1m+2.0	B03	X1m+2.1
A04	X1m+2.2	B04	X1m+2.3
A05	X1m+2.4	B05	X1m+2.5
A06	TR3	B06	TR4
A07	TR5	B07	TR6
A08	Y1n+5.3	B08	Y1n+5.7
A09	Y1n+6.3	B09	Y1n+6.7
A10	DOCOM	B10	0V

Recommended connector for cable:
Housing : Tyco Electronics 178289-8
Contact : Tyco Electronics 1-175218-5

CA157 (General-purpose DI, Relay)

A01	EON	B01	EOFF
A02	COM1	B02	COM2
A03	*ESP	B03	ESPCM1
A04	TR1	B04	TR2
A05	TR3	B05	TR4
A06	TR5	B06	TR6
A07	X2m+0.0	B07	X2m+0.1
A08	X2m+0.2	B08	X2m+0.3
A09	X2m+0.4	B09	X2m+0.5
A10	X2m+0.6	B10	X2m+0.7

Recommended connector for cable:
Housing : Tyco Electronics 178289-8
Contact : Tyco Electronics 1-175218-5

CM66 (General-purpose DI)

A01		B01	
A02		B02	X1m+1.3
A03	X1m+0.7	B03	X1m+1.1
A04	+24V	B04	X1m+1.2
A05	X1m+1.0	B05	X1m+0.6

Recommended connector for cable:
Hirose electric : HIF3BA-10D-2.54R

CM69 (General-purpose DI/DO)

A01	+24V	B01	X1m+2.6
A02	X1m+2.7	B02	X1m+3.0
A03	X1m+3.1	B03	X1m+3.2
A04	X1m+3.3	B04	X1m+3.4
A05	X1m+3.5	B05	X1m+3.6
A06	X1m+3.7	B06	DICOM
A07		B07	
A08	Y1n+7.3	B08	Y1n+7.4
A09	Y1n+7.5	B09	Y1n+7.6
A10	DOCOM	B10	0V

Recommended connector for cable:
Housing : Tyco Electronics 178289-8
Contact : Tyco Electronics 1-175218-5

JA3 (Manual pulse generator)

1	HA1	11	
2	HB1	12	0V
3	HA2	13	
4	HB2	14	0V
5	HA3	15	
6	HB3	16	0V
7		17	
8		18	+5V
9	+5V	19	
10		20	+5V

JA58 (Pendant type manual pulse generator)

1	HA1	11	X1m+1.5
2	HB1	12	0V
3	X1m+2.2	13	X1m+1.6
4	X1m+2.3	14	0V
5	X1m+2.4	15	X1m+1.7
6	X1m+2.5	16	0V
7	Y1n+5.3	17	X1m+2.0
8	X1m+2.1	18	+5V
9	+5V	19	+24V
10	+24V	20	+5V

Recommended connector for cable of JA3 and JA58

When the depth of the safety machine operator's panel or safety machine operator's panel type B is 50mm min.

Recommended connector for cable:

Hirose electric FI30-20S (Connector)
FI-20-CV7 (Case)

When the depth of the safety machine operator's panel or safety machine operator's panel type B is 70mm min.

Recommended connector for cable of JA3:

Hirose electric : FI40B-2015S (Connector)
FI-20-CV (Case)

Recommended connector for cable of JA58:

Honda : PCR-E20FA (Connector)
PCR-V20LA (Case)

Hirose electric : FI30-20S (Connector)
FI-20-CV2 (Case)

Fujitsu : FCN-247J020-G/E (Connector)
FCN-240C020-Y/S (Case)


Molex : 52622-2011 (Connector)
52624-2015 (Case)

NOTE

- DI/DO pins and MPG signal pins (1 axis) in shaded by are in pairs. Safety machine operator's panel has connector 'JA58' to connect the pendant-type MPG. In this connector, there are DIs (9 points) used to selection of axes and multiplier, DO (1 point) for LED, and signals for MPG (1 axis). These signals are in CM68 for general-purpose DI/DO and JA3 for MPG too. Only one in each pair is usable.
- Pins shaded by are used for the relay. There are two uses in these signals as follows.
 - When a sub panel is connected to the safety machine operator's panel, signals in CM67 from the sub panel are out to CA157.
Safety machine operator's panel type B is not used with sub panel. Use it for the relay of the other signals.
 - Open pins (TR1-TR6) in CM68, CM69 for general-purpose DI/DO and CM67 for connection to the sub panel are connected directly to CA157.
These signals can be relayed to the power magnetic cabinet by wiring.
- X1m is PMC DI. Y1n is PMC DO. X2m is DCSPMC DI.

8.8.4.2 Power supply connection

The power required for the operation of the machine operator's panel and for a general DI must be supplied to connector CA64 (IN) in the following figure. Since the power input from CA64 (IN) is output to CA64 (OUT) for easy branching, use the power from CA64 (OUT) when the power must be branched. Up to 1.0 A can be supplied by branching.

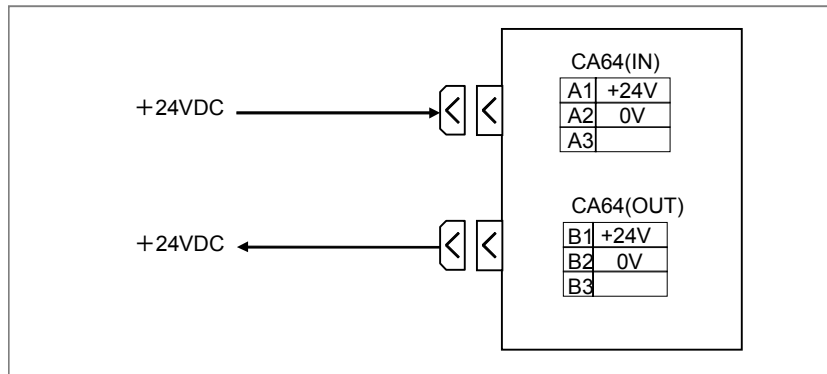

NOTE


- 1 Both connectors CA64(IN) and CA64(OUT) are same specification. And there is not indication of (IN) and (OUT) on the PCB.
- 2 Power supply for the machine operator's panel must not turn off at operation. If +24V is turned off at operation, CNC happen to get system alarm (Communication alarm between CNC and machine operator's panel). +24V for operator's panel must be supplied before or same time CNC power on.

8.8.4.3 I/O Link *i* connection


For I/O Link *i* connection, see Section 7.2.

8.8.4.4 Using the channel 2 of I/O Link *i*

The signal for two channels of I/O Link *i* is located at the connector of the machine operator's panel. The 2ch I/O Link signal divider is connectable after the machine operator's panel. When using only channel 1, see Subsection 7.2.

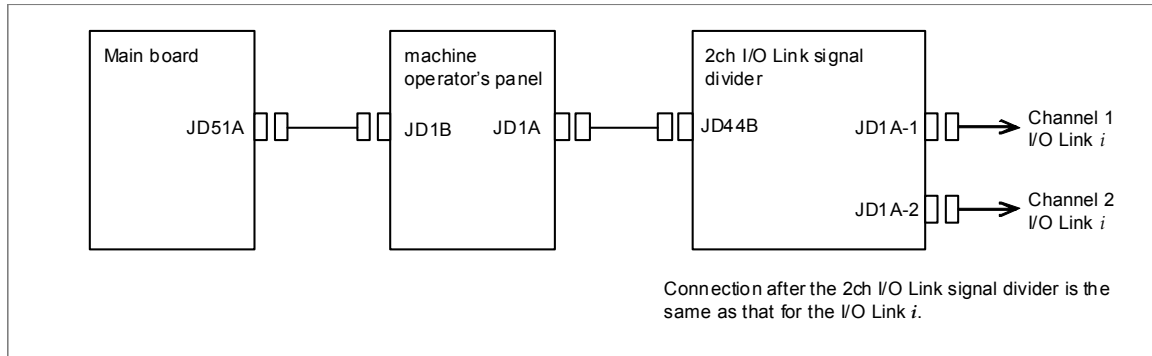


Connection between the main board and machine operator's panel

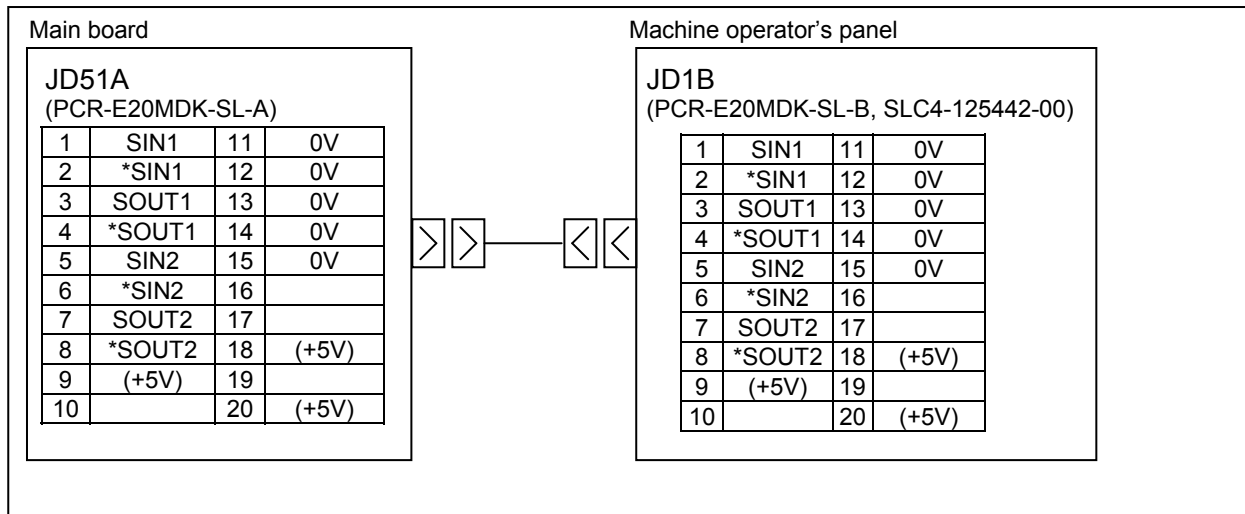

NOTE

- 1 Do not connect the +5 V terminals.
- 2 Do not connect any pin for which no signal is assigned.

Cable connection between the main board and machine operator's panel

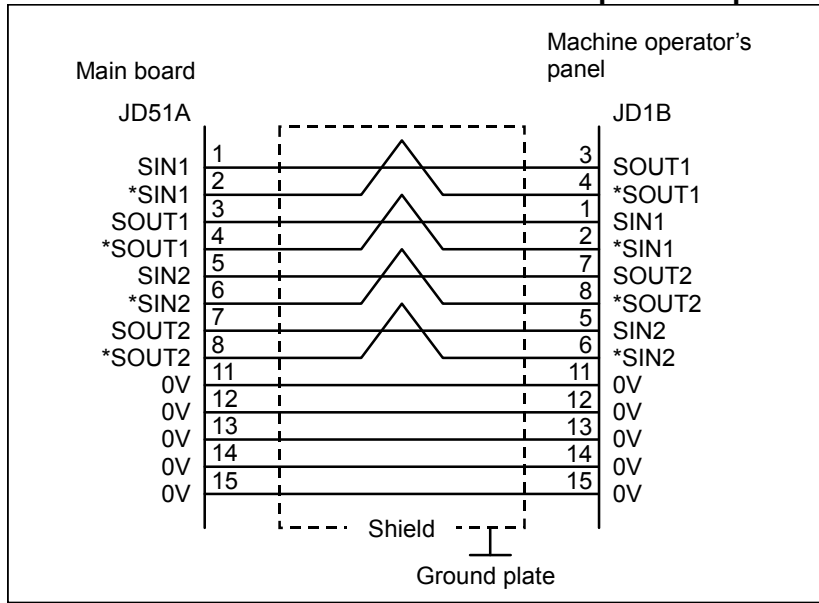

Recommended wire material:
A66L-0001-0284#10P (#28AWG × 10 pairs)


When the depth of the main panel is 60mm min,
When the depth of the safety machine operator's panel or
safety machine operator's panel type B is 50mm min.

Recommended connector for cable:
Hirose electric FI30-20S (Connector)
FI-20-CV7 (Case)

When the depth of the main panel is 80mm min,
When the depth of the safety machine operator's panel or
safety machine operator's panel type B is 70mm min.

Recommended connector for cable:
Honda : PCR-E20FA (Connector)
PCR-V20LA (Case)
Hirose electric : FI30-20S (Connector)
FI-20-CV2 (Case)
Fujitsu : FCN-247J020-G/E (Connector)
FCN-240C020-Y/S (Case)
Molex : 52622-2011 (Connector)
52624-2015 (Case)


Connection between the machine operator's panel and 2ch I/O Link signal divider

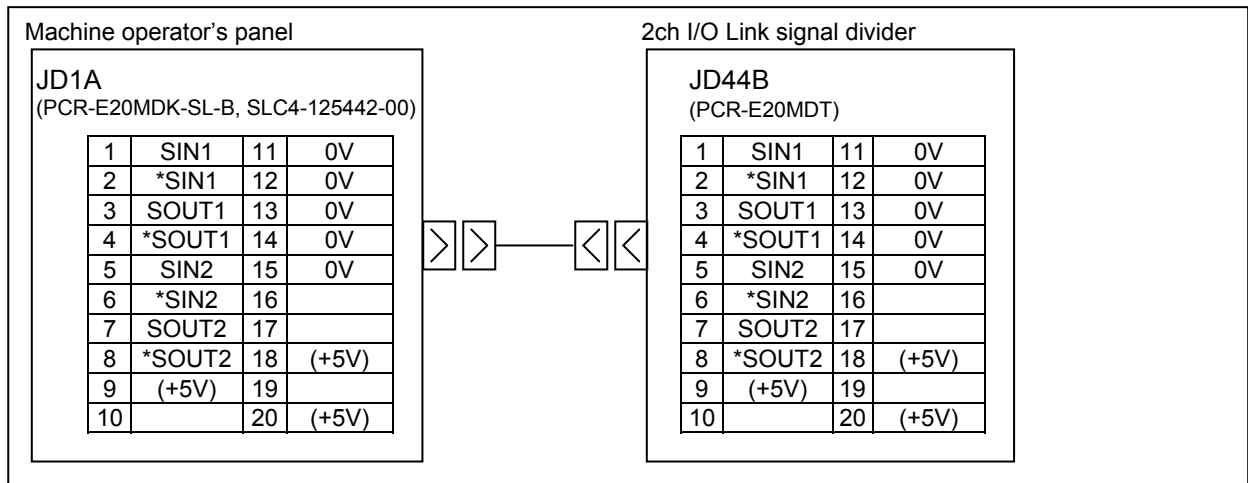

NOTE

- 1 The +5 V terminals in parentheses are for supplying the power to an optical adapter to be used for connection by an optical fiber cable. Do not connect the +5 V terminals when using no optical adapter after the 2ch I/O Link signal divider.
- 2 Do not connect any pin for which no signal is assigned.

Cable connection between the machine operator's panel and 2ch I/O Link signal divider

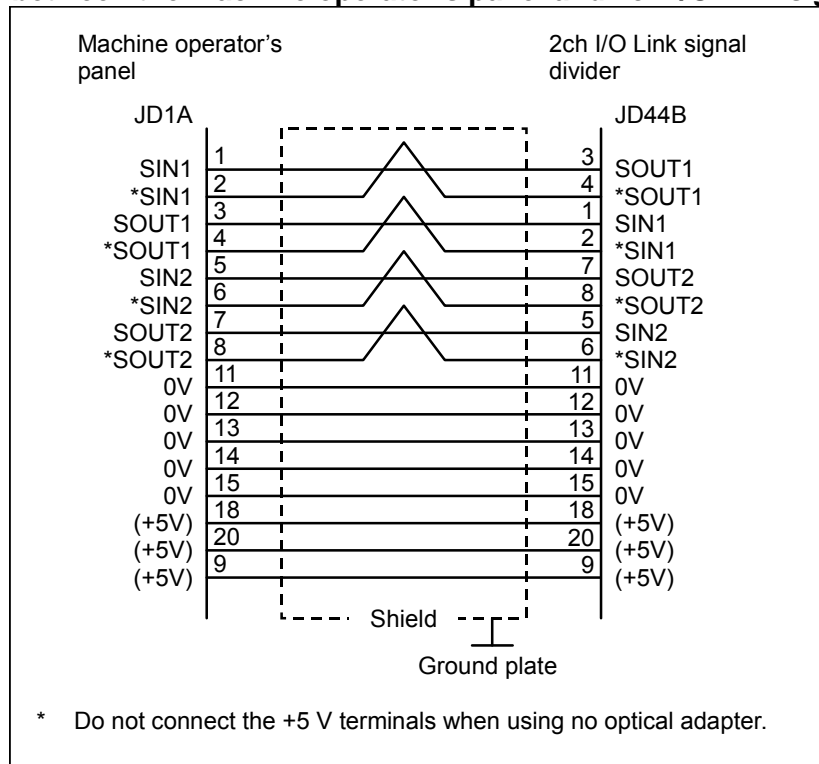

Recommended wire material:
A66L-0001-0284#10P (#28AWG × 10 pairs)


When the depth of the main panel is 60mm min,
When the depth of the safety machine operator's panel or
safety machine operator's panel type B is 50mm min.

Recommended connector for cable:
Hirose electric FI30-20S (Connector)
FI-20-CV7 (Case)

When the depth of the main panel is 80mm min,
When the depth of the safety machine operator's panel or
safety machine operator's panel type B is 70mm min.

Recommended connector for cable:
Honda : PCR-E20FA (Connector)
PCR-V20LA (Case)
Hirose electric : FI30-20S (Connector)
FI-20-CV2 (Case)
Fujitsu : FCN-247J020-G/E (Connector)
FCN-240C020-Y/S (Case)
Molex : 52622-2011 (Connector)
52624-2015 (Case)

Cable length

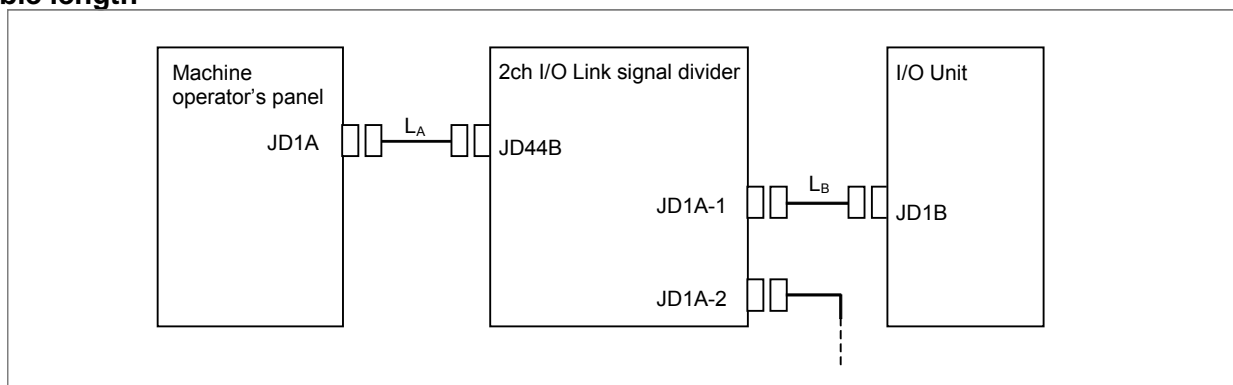

NOTE


The total of L_A and L_B must not exceed 10 m, where L_A is the length of the cable between connector JD1A on the machine operator's panel and connector JD44B on the 2ch I/O Link signal divider, and L_B is the length of the cable between connector JD1A-1 or JD1A-2 on the 2ch I/O Link signal divider and connector JD1B on the I/O unit. When all cables are laid within the same cabinet, however, a total cable length of up to 15 m is allowed.

8.8.4.5 Emergency stop signal connection

Standard machine operator's panel main panel, Safety machine operator's panel

The signal from the emergency stop switch on the sub panel can be connected to the power magnetics cabinet via the main panel or safety machine operator's panel. (This signal is not sent to the CNC via the I/O Link).

In the sub panel AA and D, wirings had been connected to the connector from the emergency stop switch. (1 contact) Then, connect this connector to CM67 in the main panel or safety machine operator's panel.

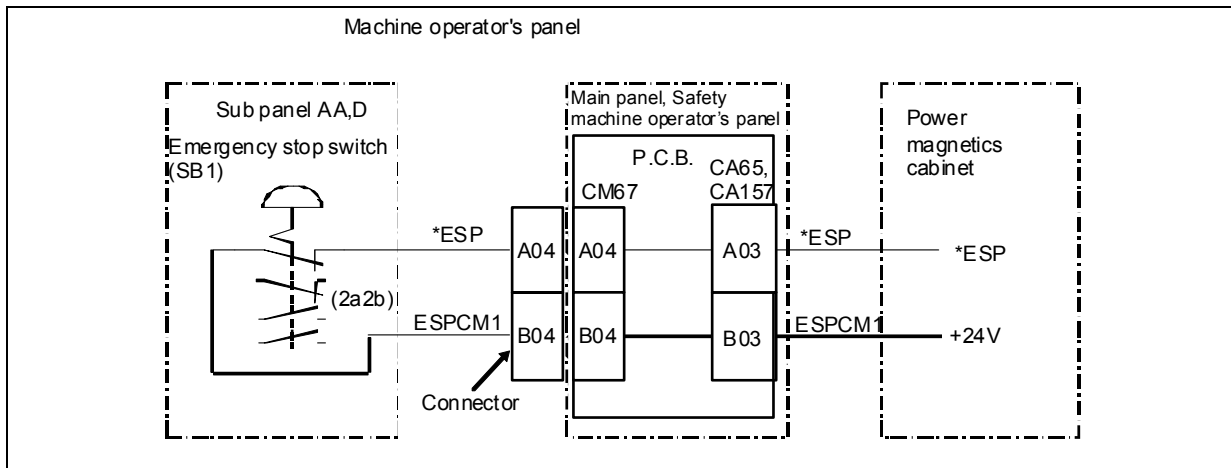


NOTE
When using two contacts of an emergency stop switch, Do wiring form an emergency stop switch.

Safety machine operator's panel type B

The safety machine operator's panel type B does not have the wiring from emergency stop switch. Do wiring from the emergency stop switch. The emergency stop switch on the safety machine operator's panel type B has 1 a-contact and 2 b-contacts.

As follows, input dual emergency stop signal into PMCDI and DCSPMCDI of the safety machine operator's panel type B. And monitor the emergency stop signal by DCS function.

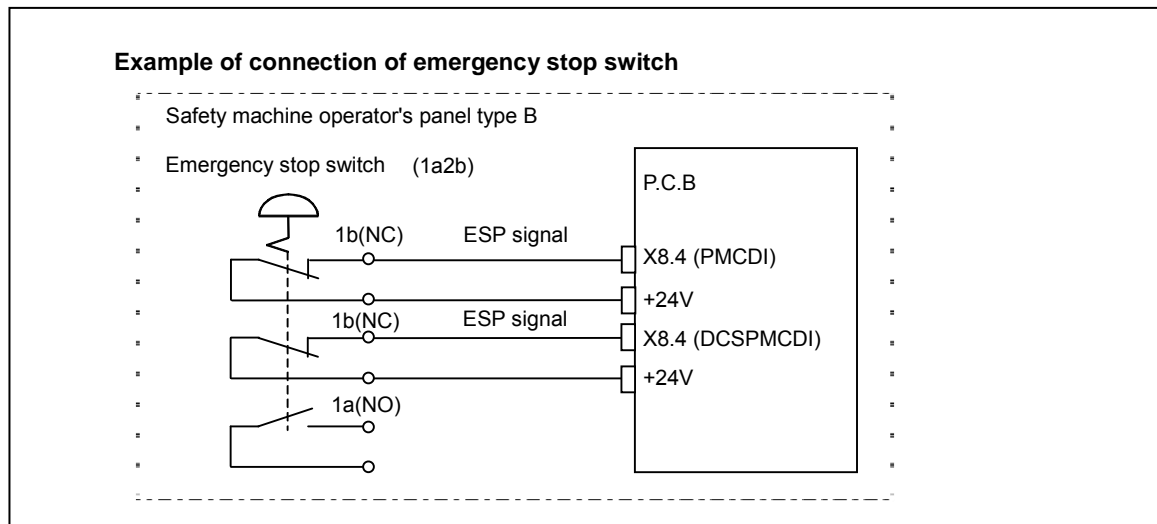


8.8.4.6 Power ON/OFF control signal connection

Standard machine operator's panel main panel, Safety machine operator's panel

The signal from the ON/OFF switch on the sub panel can be connected to the power magnetics cabinet via the main panel or safety machine operator's panel. (This signal is not sent to the CNC via the I/O Link).

In the sub panel AA and D, wirings had been connected to the connector from the ON/OFF switch. (1 contact) Then, connect this connector to CM67 in the main panel or safety machine operator's panel.

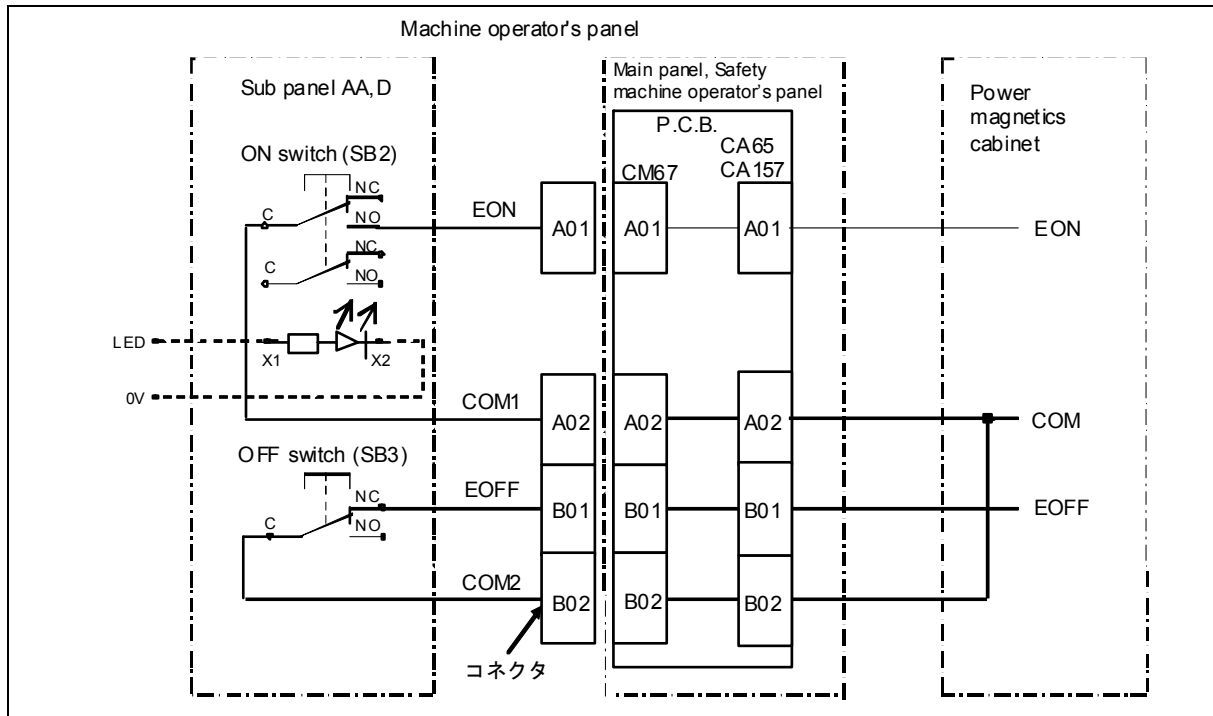


NOTE

- 1 ON switch of Sub panel AA and D has 2 c-contacts and LED.
To make luminous of LED, the power supply of $24V \pm 10\%$ DC must be supplied to X1 and X2 pin of ON switch.
(Circuit of LED part of ON switch built in the limitation current resistance.
Rated current of circuit of LED part is 10mA.)
- 2 OFF switch has 1 c-contact and no LED.

Safety machine operator's panel type B


The safety machine operator's panel type B does not have the wiring from power ON/OFF control switch.
Do wiring from the power ON/OFF control switch.

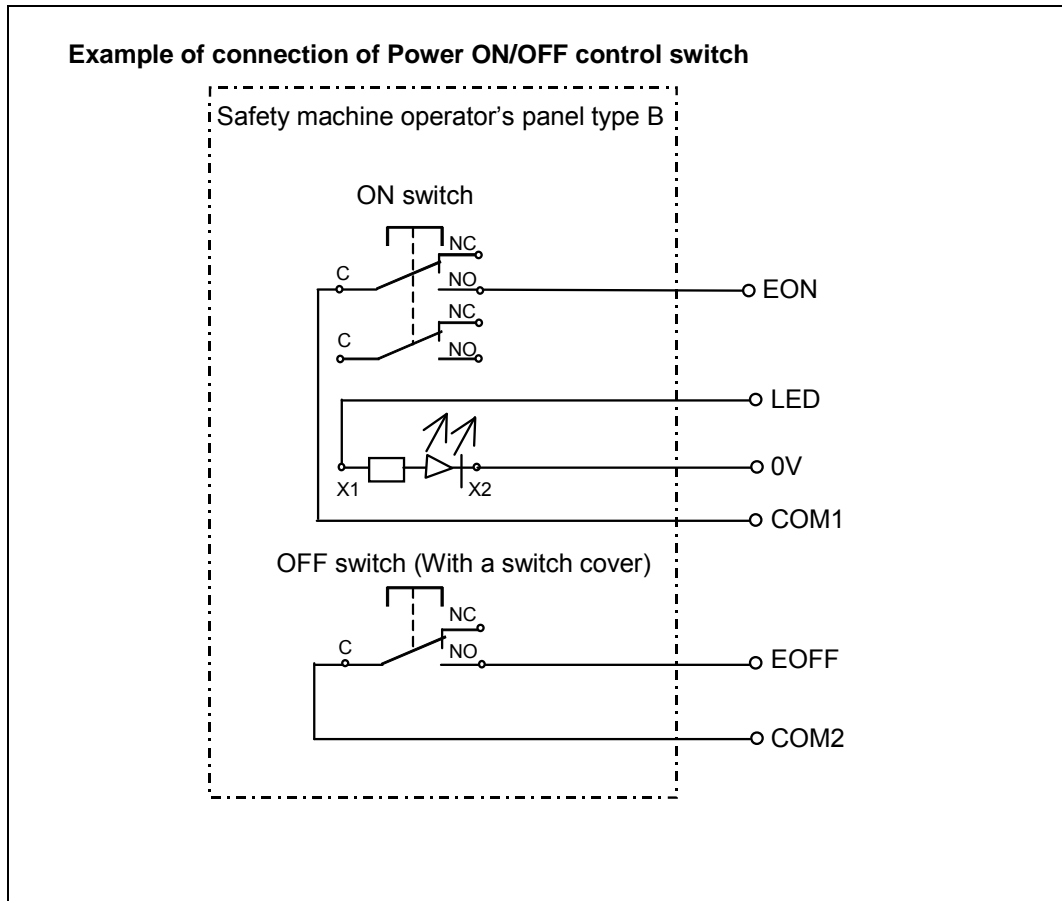
**NOTE**

- 1 ON switch has 2 c-contacts and LED.
To make luminous of LED, the power supply of $24V \pm 10\%$ DC must be supplied to X1 and X2 pin of ON switch.
(Circuit of LED part of ON switch built in the limitation current resistance.
Rated current of circuit of LED part is 10mA.)
- 2 OFF switch has 1 c-contact and no LED.
- 3 When fast on terminal is used, use 110 series, and conformity tab thickness 0.5mm. Wire size uses the cross-sectional area $0.2 \sim 0.5 \text{mm}^2$.

8.8.4.7 General-purpose DI signal connection

Standard machine operator's panel main panel

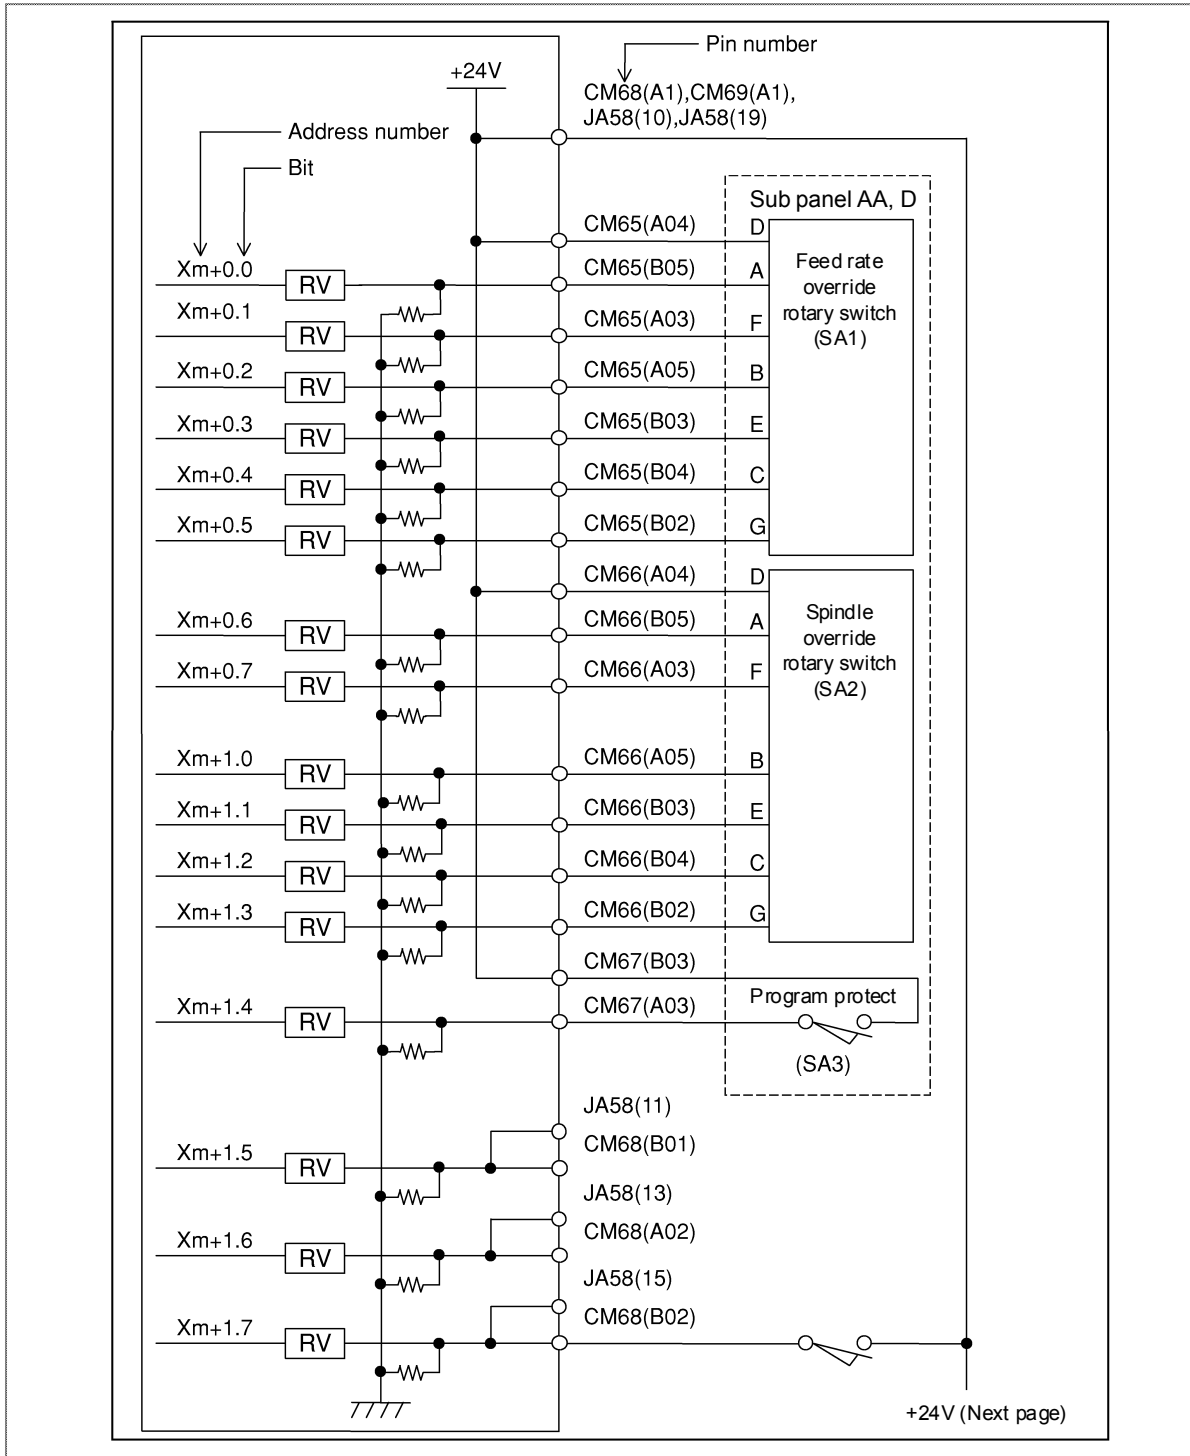

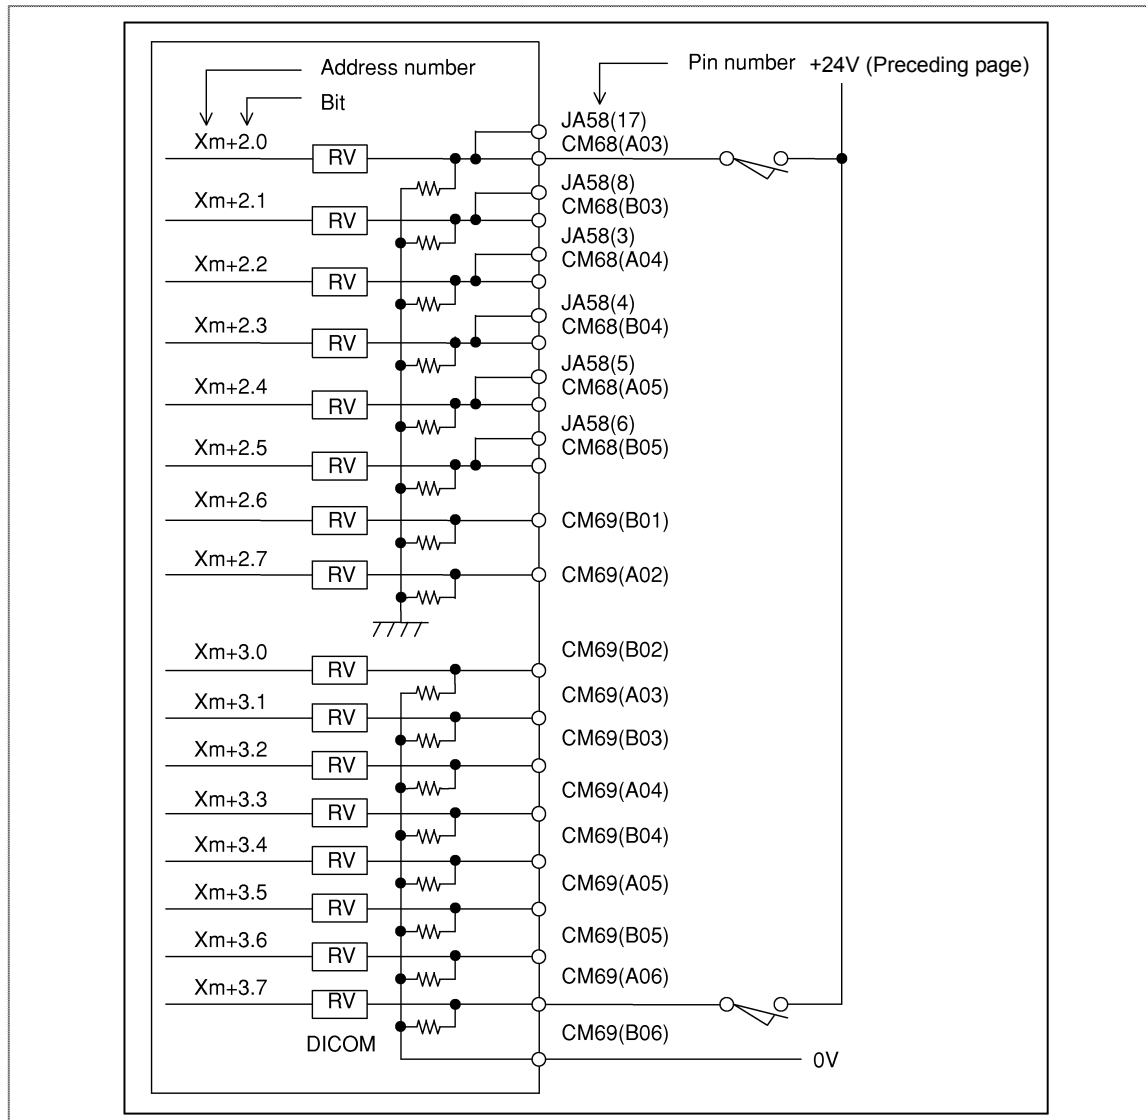

⚠ CAUTION

An output DC voltage of +24 V at CM68 (A1), CM69 (A1), CM65 (A04), CM66 (A04), CM67 (B03), JA58 (10), and JA58 (19) is for DI signals. Do not supply 24 VDC to these pins from the outside.


NOTE


- 1 Connection of Xn+0.0 to Xn+0.7, Xn+1.0 to Xn+1.4 shows when the Sub panel AA or D is used.
- 2 As for sub panel AA and D, the wiring from the program protect switch is connected to the connector. Connect this connector to CM67 in the main panel. And wiring from rotary switches is connected to the connector. Connect this connector to CM65, CM66 in the main panel.
- 3 JA58 DI signals can be used as a signal for axis selection or multiplier setting when a pendant type manual pulse generator is connected. Do not connect any DI signal used for axis selection or multiplier setting to CM68.

NOTE

- 4 Xm+3.0 to 3.7 have a common line that is possible to select the source/sink type. If DICOM (CM69-B06pin) is connected to +24V, the DI signal logic is negative. But in this connection, if the DI signal wires happen to drop the ground level, the status of the DI signal is same as the DI signal is "ON". From the safety viewpoint, DICOM should be connected 0V.
- 5 From the safety viewpoint, Emergency Stop signal must be assigned on the address Xm+0.0 to 0.7 or Xm+1.0 to 1.7 or Xm+2.0 to 2.7. As refer to the Subsection 8.8.3, assign the Emergency stop DI.
- 6 For the unconnected pins at addresses for which the common voltage is fixed (from Xm+0.0 to Xm+0.7, from Xm+1.0 to Xm+1.7, and from Xm+2.0 to Xm+2.7), the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected (from Xm+3.0 to Xm+3.7), the input is "0" when the DICOM (CM69 (B06) pin) is connected to 0 V or "1" when it is connected to +24 V. Connect DICOM (CM69 (B06) pin) when used. When addresses from Xm+3.0 to Xm+3.7 are not used, connect DICOM to 0 V.

Safety machine operator's panel, Safety machine operator's panel type B

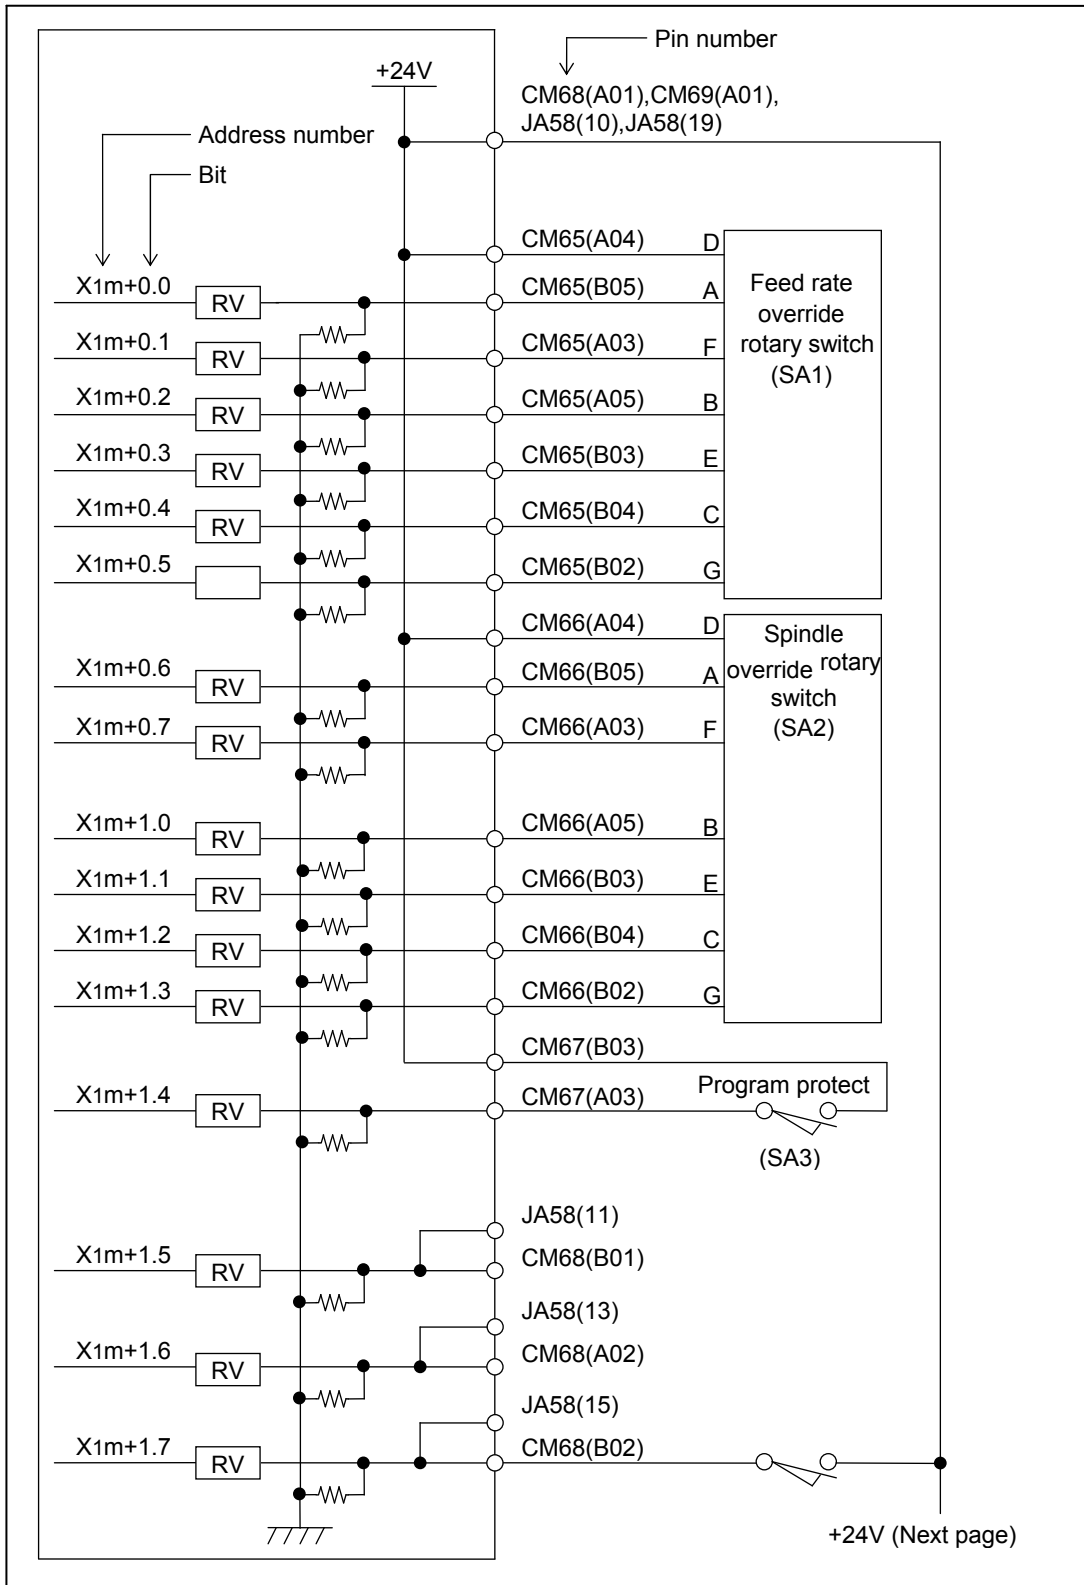

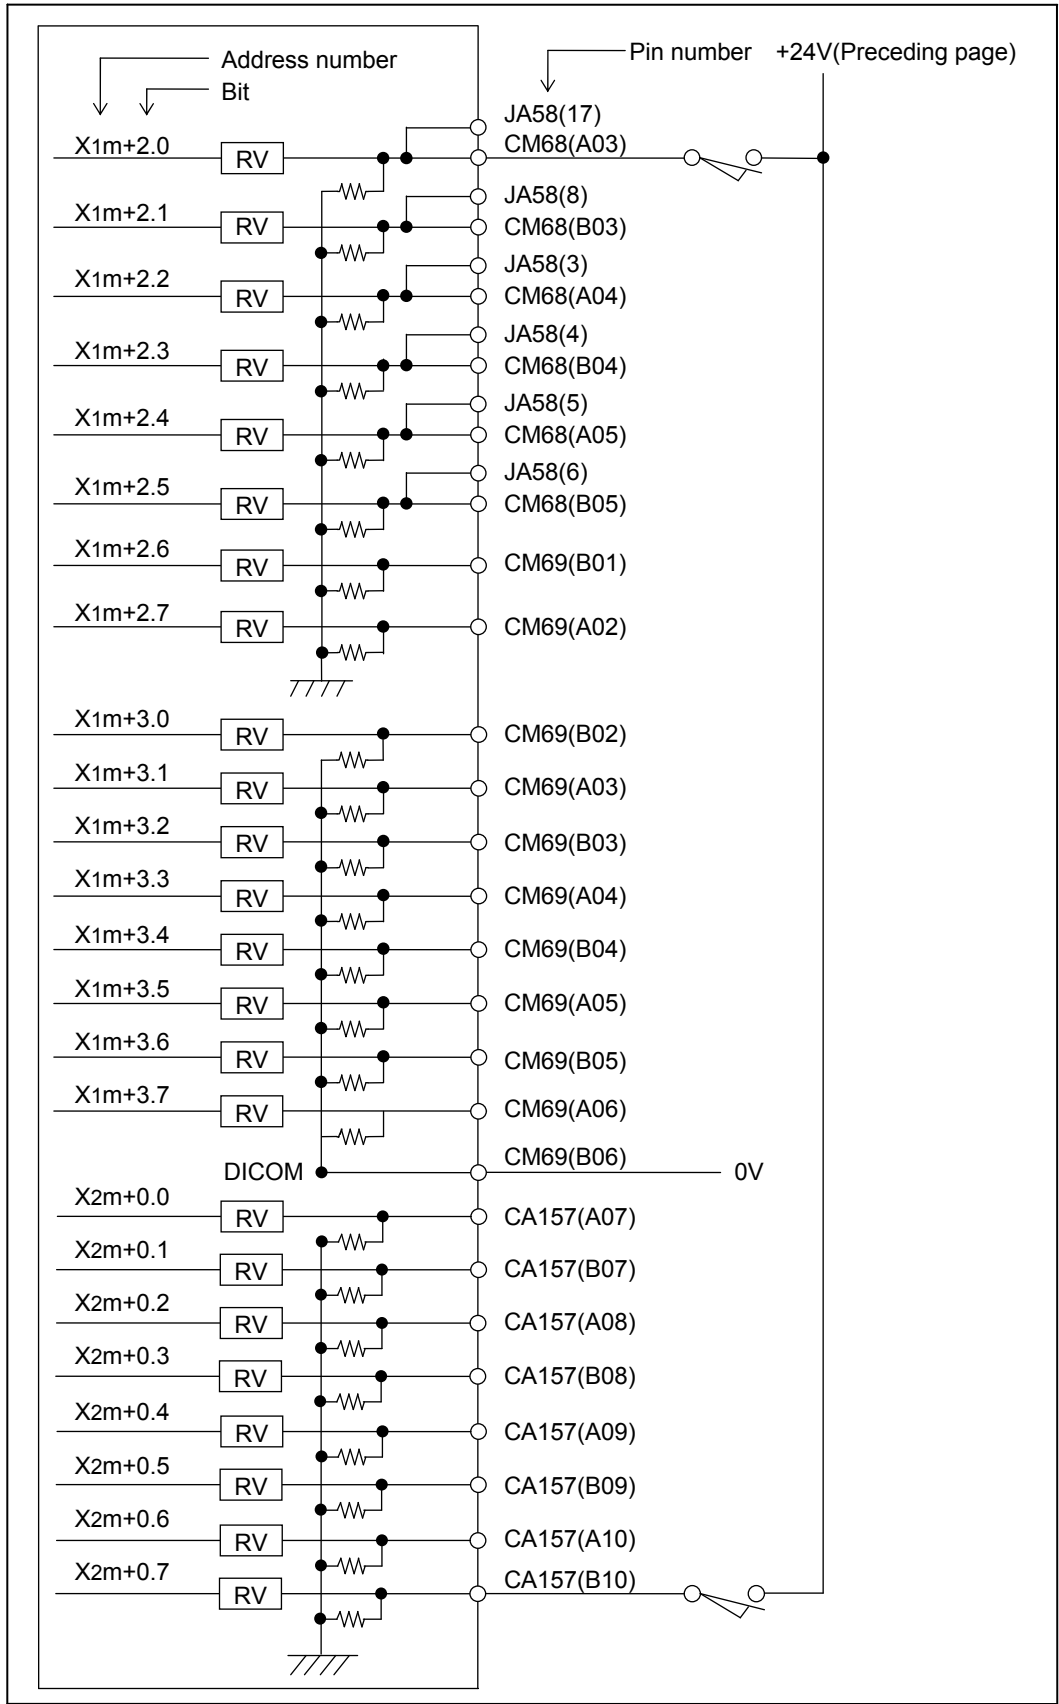

**CAUTION**


An output DC voltage of +24 V at CM68 (A01), CM69 (A01), CM65 (A04), CM66 (A04), CM67 (B03), JA58 (10), and JA58 (19) is for DI signals. Do not supply 24 VDC to these pins from the outside.

NOTE

- 1 Connection of X1m+0.0~X1m+0.7, X1m+1.0~X1m+1.3 shows when the rotary switches of the sub panel AA or D or safety machine operator's panel type B is used.
- 2 Connection of X1m+1.4 shows when the program protect switch of the sub panel AA or D is used. Safety machine operator's panel type B does not have the program protect switch. Use X1m+1.4 as general purpose DI.
- 3 As for sub panel AA and D, the wiring from the program protect switch is connected to the connector. Connect this connector to CM67 in the safety machine operator's panel. And the wiring from rotary switches is connected to the connector. Connect this connector to CM65, CM66 in the safety machine operator's panel. As for the safety machine operator's panel type B, the wiring from rotary switch is connected to connector CM65 and CM66.
- 4 JA58 DI signals can be used as a signal for axis selection or multiplier setting when a pendant type manual pulse generator is connected. Do not connect any DI signal used for axis selection or multiplier setting to CM68.
- 5 X1m+3.0~3.7 have a common line that is possible to select the source/sink type. If DICOM (CM69-B06pin) is connected to +24V, the DI signal logic is negative. But in this connection, if the DI signal wires happen to drop the ground level, the status of the DI signal is same as the DI signal is "ON". From the safety viewpoint, DICOM should be connected 0V.
- 6 From the safety viewpoint, emergency stop signal must be assigned on the address X1m+0.0 to 0.7 or X1m+1.0 to 1.7 or X1m+2.0 to 2.7. As refer to the 3. DI/DO mapping, assign the emergency stop DI.
- 7 For the unconnected pins at addresses for which the common voltage is fixed (from X1m+0.0 to X1m+0.7, from X1m+1.0 to X1m+1.7, from X1m+2.0 to X1m+2.7 and from X2m+0.0 to X2m+0.7), the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected (from X1m+3.0 to X1m+3.7), the input is "0" when the DICOM (CM69 (B06) pin) is connected to 0 V or "1" when it is connected to +24 V. Connect DICOM (CM69 (B06) pin) when used. When addresses from X1m+3.0 to X1m+3.7 are not used, connect DICOM to 0 V.
- 8 PMCDI is X1m and DCSPMCDI is X2m. Dual input signals are connected to safety machine operator's panel as PMCDI and DCSPMCDI.

8.8.4.8 General-purpose DO signal connection


Standard machine operator's panel main panel

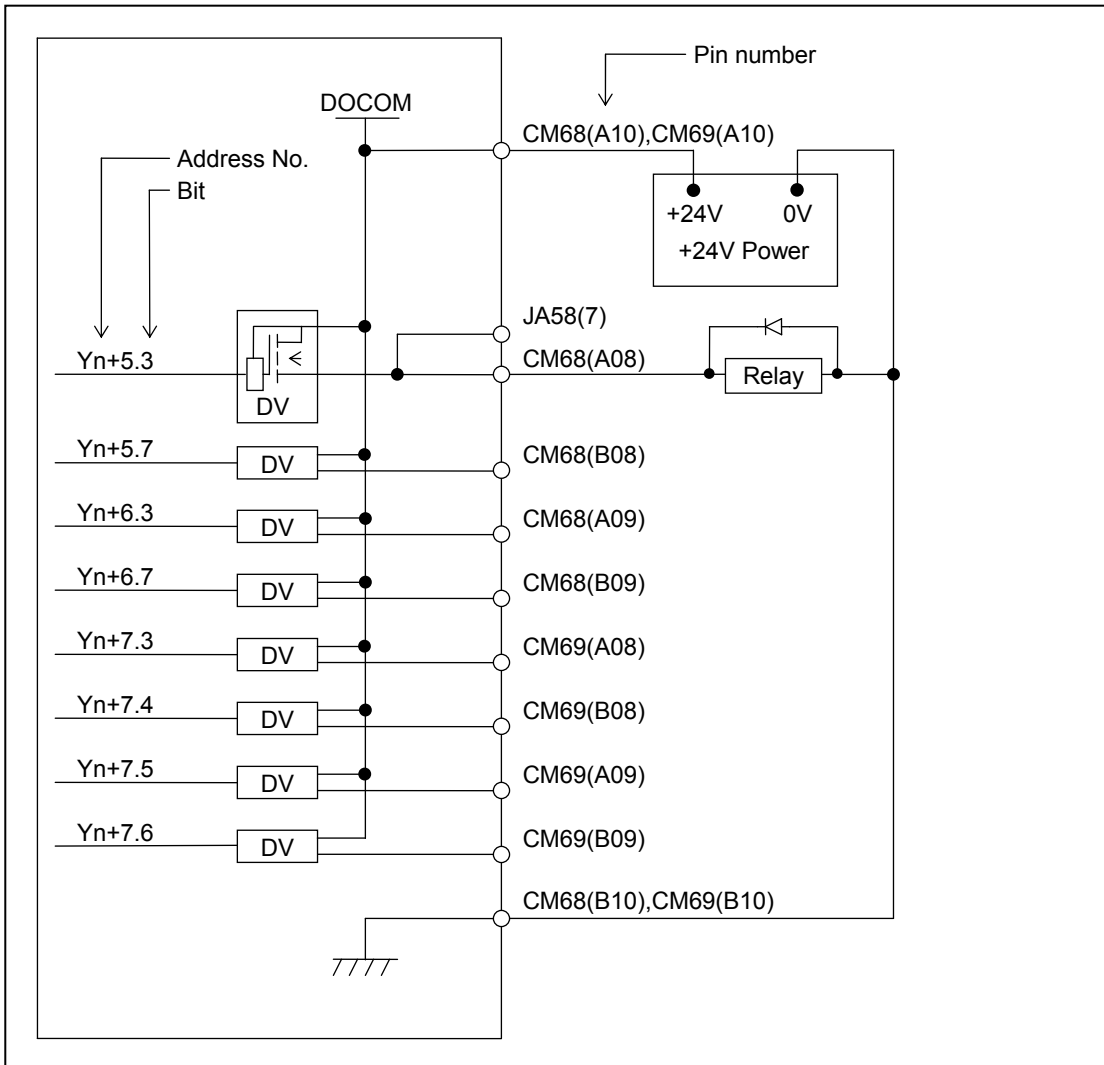

NOTE

Yn+5.3 can be used when a pendant type manual pulse generator is connected to JA58. In this case, however, do not connect Yn+5.3 to CM68.

Safety machine operator's panel, Safety machine operator's panel type B

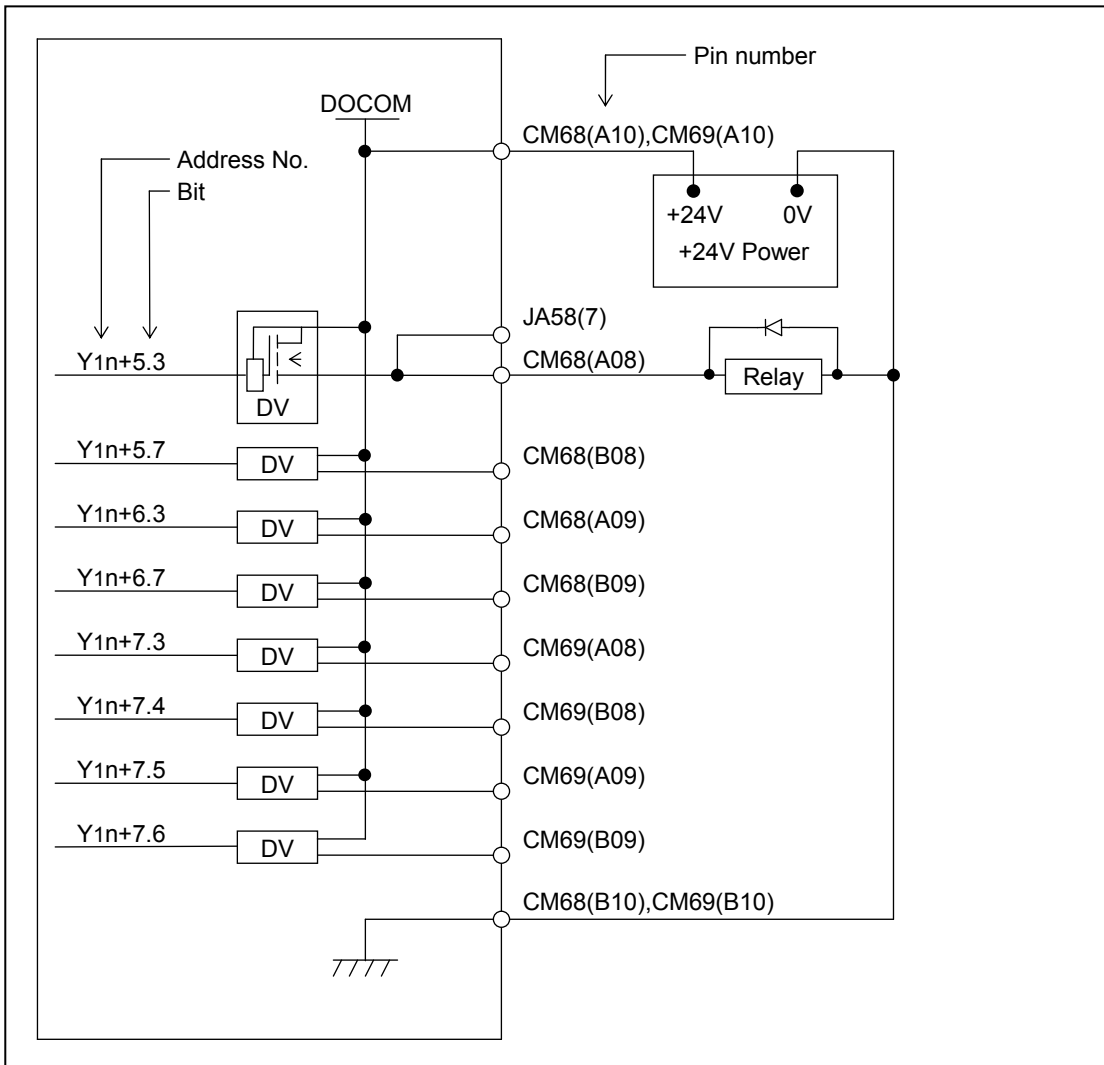

NOTE
 Y1n+5.3 can be used when a pendant type manual pulse generator is connected to JA58. In this case, however, do not connect Y1n+5.3 to CM68.

8.8.5 Manual Pulse Generator


8.8.5.1 Manual pulse generator connection

When a manual pulse generator is connected using JA3, see Subsection 7.4.1.

8.8.5.2 Pendant type manual pulse generator connection

To use a pendant type manual pulse generator, connect it to JA58.


Standard machine operator's panel main panel

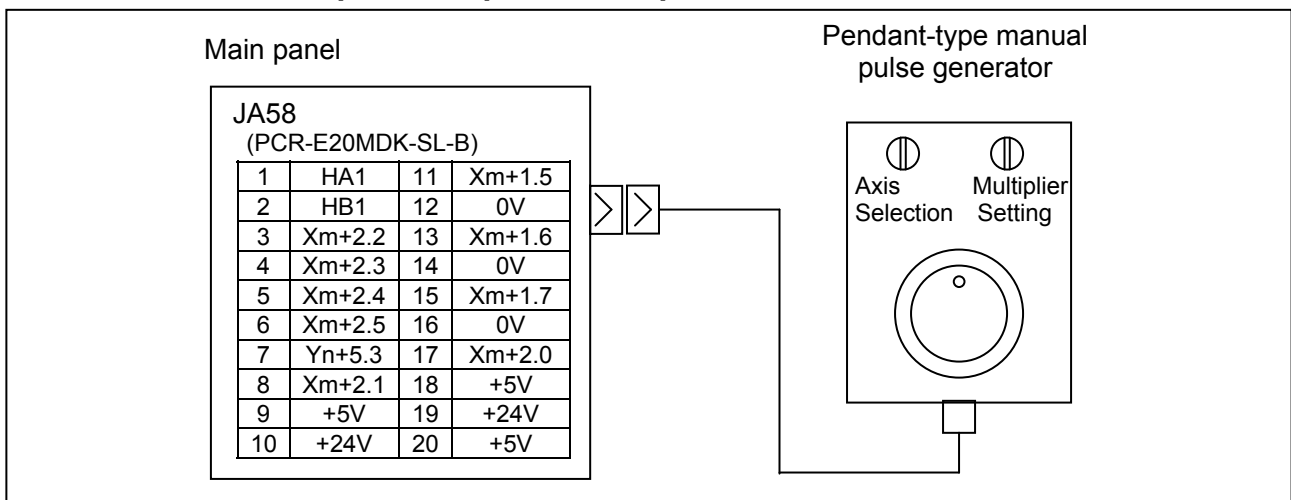

NOTE

- 1 When Xm+1.5 to Xm+2.5 of connector JA58 are allocated as the DIs used for the axis selection and multiplier setting, Xm+1.5 to Xm+2.5 of connector CM68 cannot be used.
- 2 One DO is available for the manual pulse generator side at the user's direction. When this is used, Yn+5.3 of CM68 cannot be used, as in the case for DIs above.

Safety machine operator's panel, Safety machine operator's panel type B

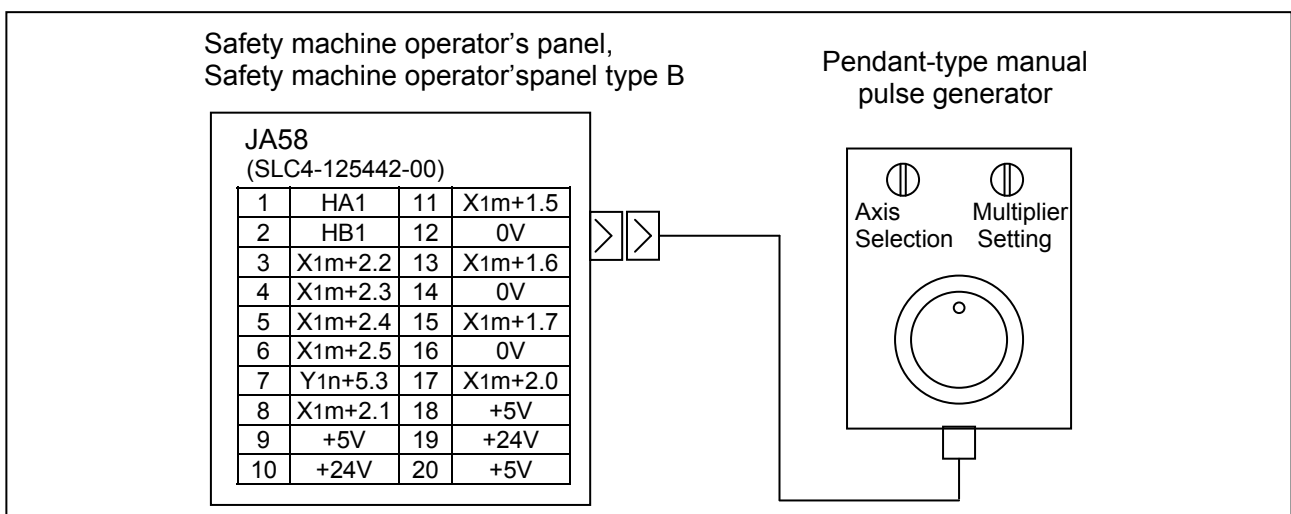

NOTE

- 1 When X1m+1.5~X1m+2.5 of connector JA58 are allocated as the DIs used for the axis selection and multiplier setting, X1m+1.5~X1m+2.5 of connector CM68 cannot be used.
- 2 One DO is available for the manual pulse generator side at the user's direction. When this is used, Y1n+5.3 of CM68 cannot be used, as in the case for DIs above.

8.8.6 Connector (on the cable side) specifications

Connector	Manufacture specification		Order specification
JD1A, JD1B, JA3, JA58 (Main panel depth=60 mm min, Safety machine operator's panel or Safety machine operator's panel type B depth=50 mm min)	Stand wire press-mount type	Hirose FI30-20S (Connector) FI-20-CV7 (Case)	A02B-0236-K302
JD1A, JD1B, JA58 (Main panel depth=80 mm min, Safety machine operator's panel or Safety machine operator's panel type B depth=70 mm min)	Soldering type	Honda PCR-E20FS (Connector) PCR-V20LA (Case) Hirose FI40B-20S (Connector) FI-20-CV2 (Case)	A02B-0120-K301
	Stand wire press-mount type	Honda PCR-E20FA (Connector) PCR-V20LA (Case) Hirose FI30-20S (Connector) FI-20-CV2 (Case)	A02B-0120-K302
JA3 (Main panel depth=80 mm min, Safety machine operator's panel or Safety machine operator's panel type B depth=70 mm min)	Soldering type	Hirose FI40B-2015S (Connector) FI-20-CV (Case)	A02B-0120-K303
CA64 (IN), CA64 (OUT)	Tyco Electronics 1-178288-3 (Housing) 1-175218-5 (Contact)		A02B-0120-K324
CM67	Tyco Electronics 178289-5 (Housing) 1-175218-5 (Contact)		A02B-0236-K312
CM68, CM69, CA157	Tyco Electronics 178289-8 (Housing) 1-175218-5 (Contact)		A02B-0236-K313
CM65, CM66	Hirose HIF3BA-10D-2.54R		A02B-0236-K314
CA65	Hirose HIF3BA-20D-2.54R		A02B-0120-K343

8.8.7 DI/DO Addresses for the Keyboard

Standard machine operator's panel main panel

DI/DO address of Key switches (matrix input) and LED (matrix output) on the keyboard of Main panel are as follows.

Key/LED	BIT							
	7	6	5	4	3	2	1	0
Xm+4/Yn+0	B4	B3	B2	B1	A4	A3	A2	A1
Xm+5/Yn+1	D4	D3	D2	D1	C4	C3	C2	C1
Xm+6/Yn+2	A8	A7	A6	A5	E4	E3	E2	E1
Xm+7/Yn+3	C8	C7	C6	C5	B8	B7	B6	B5
Xm+8/Yn+4	E8	E7	E6	E5	D8	D7	D6	D5
Xm+9/Yn+5		B11	B10	B9		A11	A10	A9
Xm+10/Yn+6		D11	D10	D9		C11	C10	C9
Xm+11/Yn+7						E11	E10	E9

Safety machine operator’s panel, Safety machine operator’s panel type B

DI/DO address of key switches of dual contact and LED on the keyboard is as follows.

1st group (PMC DI/DO) address


Key/LED \ BIT	7	6	5	4	3	2	1	0
X1m+4/Y1n+0	B4	B3	B2	B1	A4	A3	A2	A1
X1m+5/Y1n+1	D4	D3	D2	D1	C4	C3	C2	C1
X1m+6/Y1n+2	A8	A7	A6	A5	E4	E3	E2	E1
X1m+7/Y1n+3	C8	C7	C6	C5	B8	B7	B6	B5
X1m+8/Y1n+4	E8	E7	E6	E5	D8	D7	D6	D5
X1m+9/Y1n+5		B11	B10	B9		A11	A10	A9
X1m+10/Y1n+6		D11	D10	D9		C11	C10	C9
X1m+11/Y1n+7						E11	E10	E9

2nd group (DCSPMC DI/DO) address

Key \ BIT	7	6	5	4	3	2	1	0
X2m+4	B4	B3	B2	B1	A4	A3	A2	A1
X2m+5	D4	D3	D2	D1	C4	C3	C2	C1
X2m+6	A8	A7	A6	A5	E4	E3	E2	E1
X2m+7	C8	C7	C6	C5	B8	B7	B6	B5
X2m+8	E8	E7	E6	E5	D8	D7	D6	D5
X2m+9		B11	B10	B9		A11	A10	A9
X2m+10		D11	D10	D9		C11	C10	C9
X2m+11						E11	E10	E9

NOTE

- 1 All the key switches have dual contacts, and the input signal of the key is inputted into the address of PMC and DCSPMC. Monitor only the safety-related input signal by DCS function.
- 2 When a signal state changes, the signals of pair may not match for some period. Set the value of safety-related I/O check timer (Parameter number 1945) or more 500.

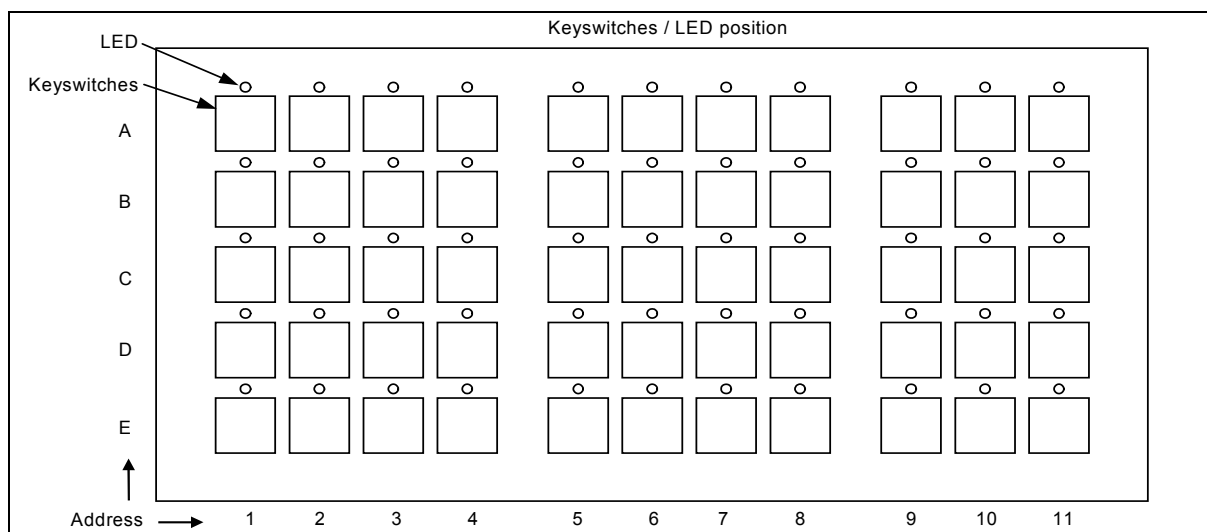

8.8.8 Code Output for the Rotary Switch

Standard machine operator's panel main panel

When sub panel AA or D is used, a real Gray code is output from the rotary switches as listed in the tables below.

Feed rate override rotary switch (SA1)

%	0	1	2	4	6	8	10	15	20	30	40	50	60	70	80	90	95	100	105	110	120	
Xm+0.0		●	●			●	●			●	●			●	●			●	●			
Xm+0.1			●	●	●	●					●	●	●	●					●	●	●	●
Xm+0.2					●	●	●	●	●	●	●	●										●
Xm+0.3									●	●	●	●	●	●	●	●					●	●
Xm+0.4																	●	●	●	●	●	●
Xm+0.5		●		●		●		●		●		●		●		●		●		●		●

Spindle override rotary switch (SA2)

%	50	60	70	80	90	100	110	120
Xm+0.6		●	●			●	●	
Xm+0.7			●	●	●	●		
Xm+1.0					●	●	●	●
Xm+1.1								
Xm+1.2		●		●		●		●
Xm+1.3								

NOTE

Xm+0.5 and Xm+1.2 are parity bits.

Safety machine operator's panel, Safety machine operator's panel type B

When sub panel AA or D is used with safety machine operator's panel or safety machine operator's panel type B is used, a real Gray code is output from the rotary switches as listed in the tables below.

Feed rate override rotary switch (SA1)

%	0	1	2	4	6	8	10	15	20	30	40	50	60	70	80	90	95	100	105	110	120	
X1m+0.0		●	●			●	●			●	●			●	●			●	●			
X1m+0.1			●	●	●	●					●	●	●	●					●	●	●	●
X1m+0.2					●	●	●	●	●	●	●	●										●
X1m+0.3									●	●	●	●	●	●	●	●	●	●	●	●	●	●
X1m+0.4																	●	●	●	●	●	●
X1m+0.5		●		●		●		●		●		●		●		●		●		●		●

Spindle override rotary switch (SA2)


%	50	60	70	80	90	100	110	120
X1m+0.6		●	●			●	●	
X1m+0.7			●	●	●	●		
X1m+1.0					●	●	●	●
X1m+1.1								
X1m+1.2		●		●		●		●
X1m+1.3								

NOTE

X1m+0.5 and X1m+1.2 are parity bits.

8.8.9 Outline


8.8.9.1 Outline of main panel

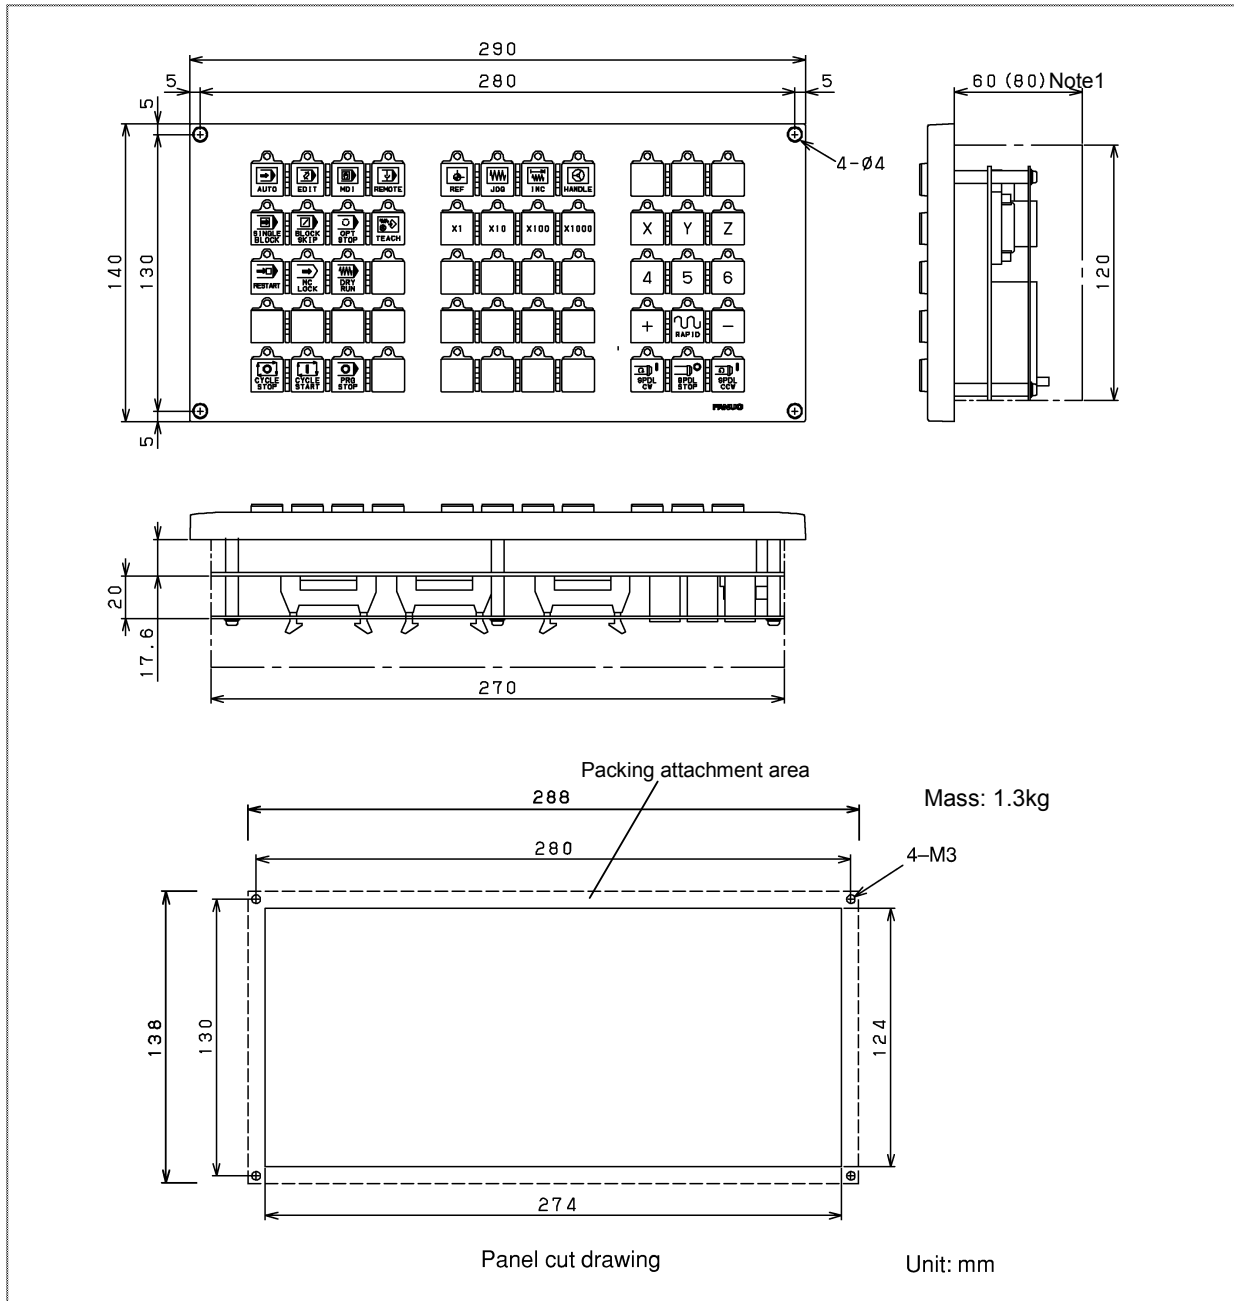

NOTE

- 1 When a low screw-fixing housing "HIROSE FL-20-CV7" is used, the depth is 60mm. When a usual housing is used, the depth is 80mm.
- 2 Secure the unit with the screws from outside of the cabinet and then attach the caps.
- 3 Install the main panel in a vertical direction.


8.8.9.2 Outline of Safety machine operator’s panel

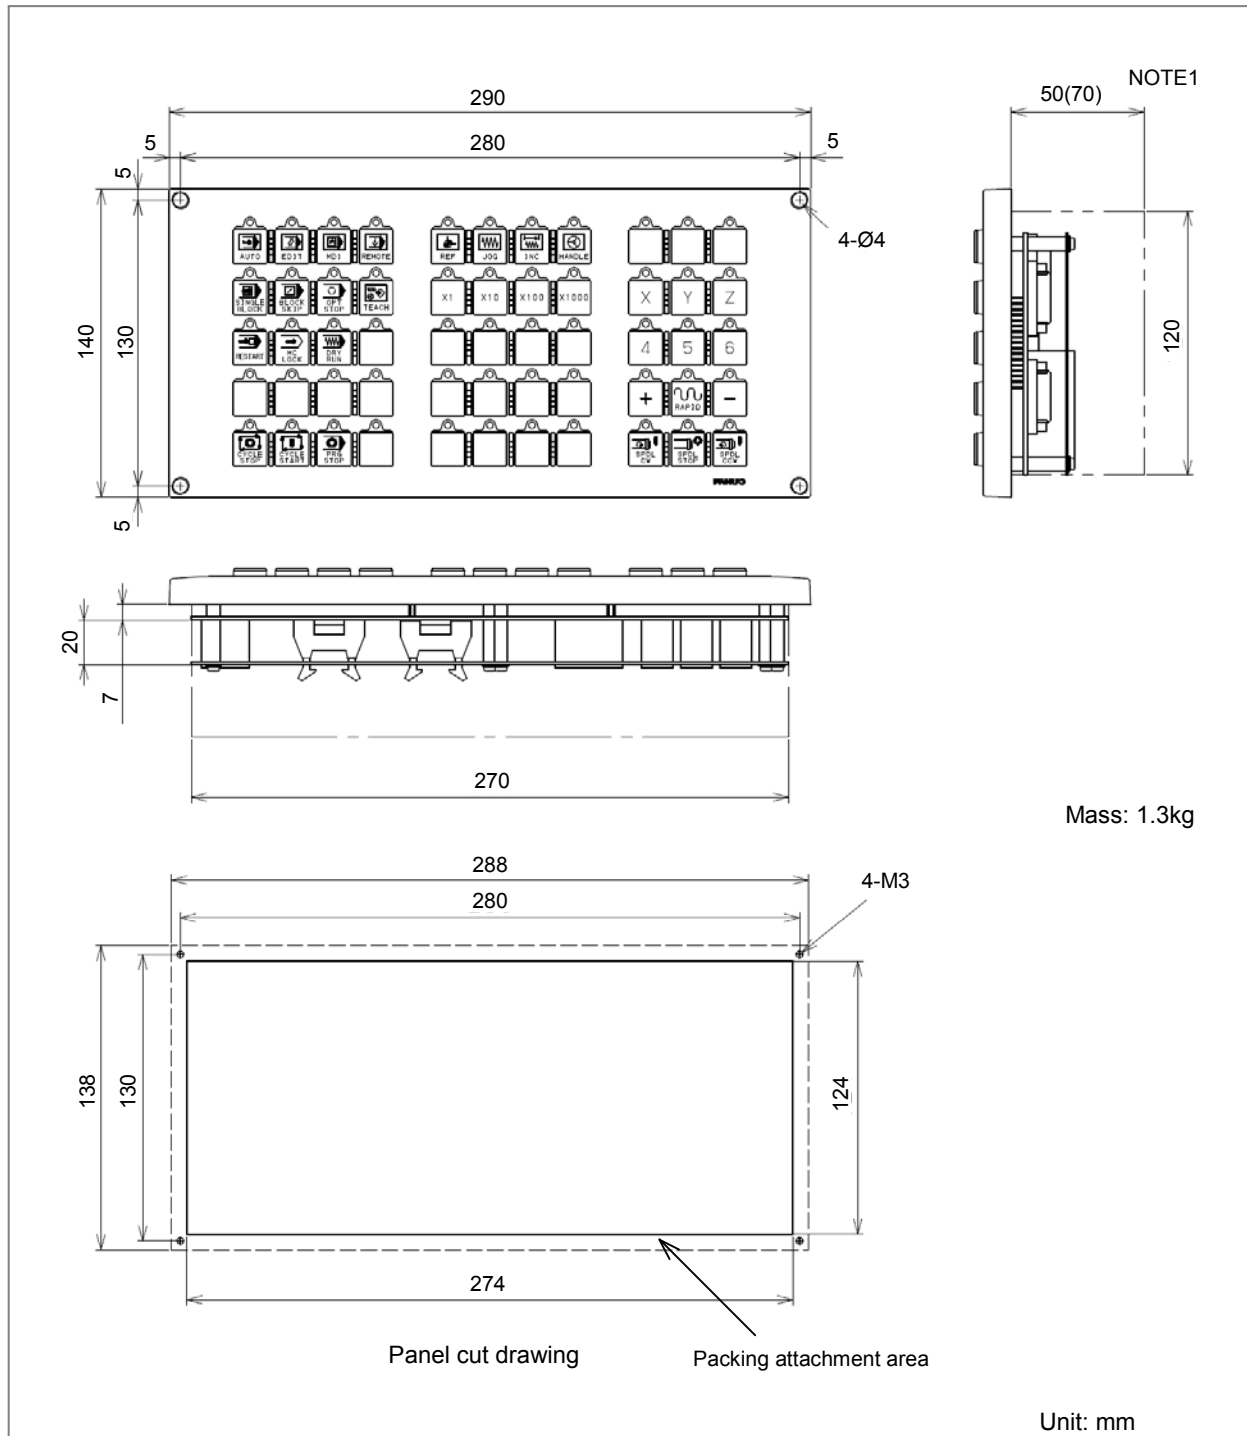

NOTE

- 1 When a low screw-fixing housing “HIROSE FL-20-CV7” is used, the depth is 50mm.
When a usual housing is used, the depth is 70mm.
- 2 Secure the unit with the screws from outside of the cabinet and then attach the caps.
- 3 Install the safety machine operator’s panel in a vertical direction.


8.8.9.3 Outline of Safety machine operator's panel type B

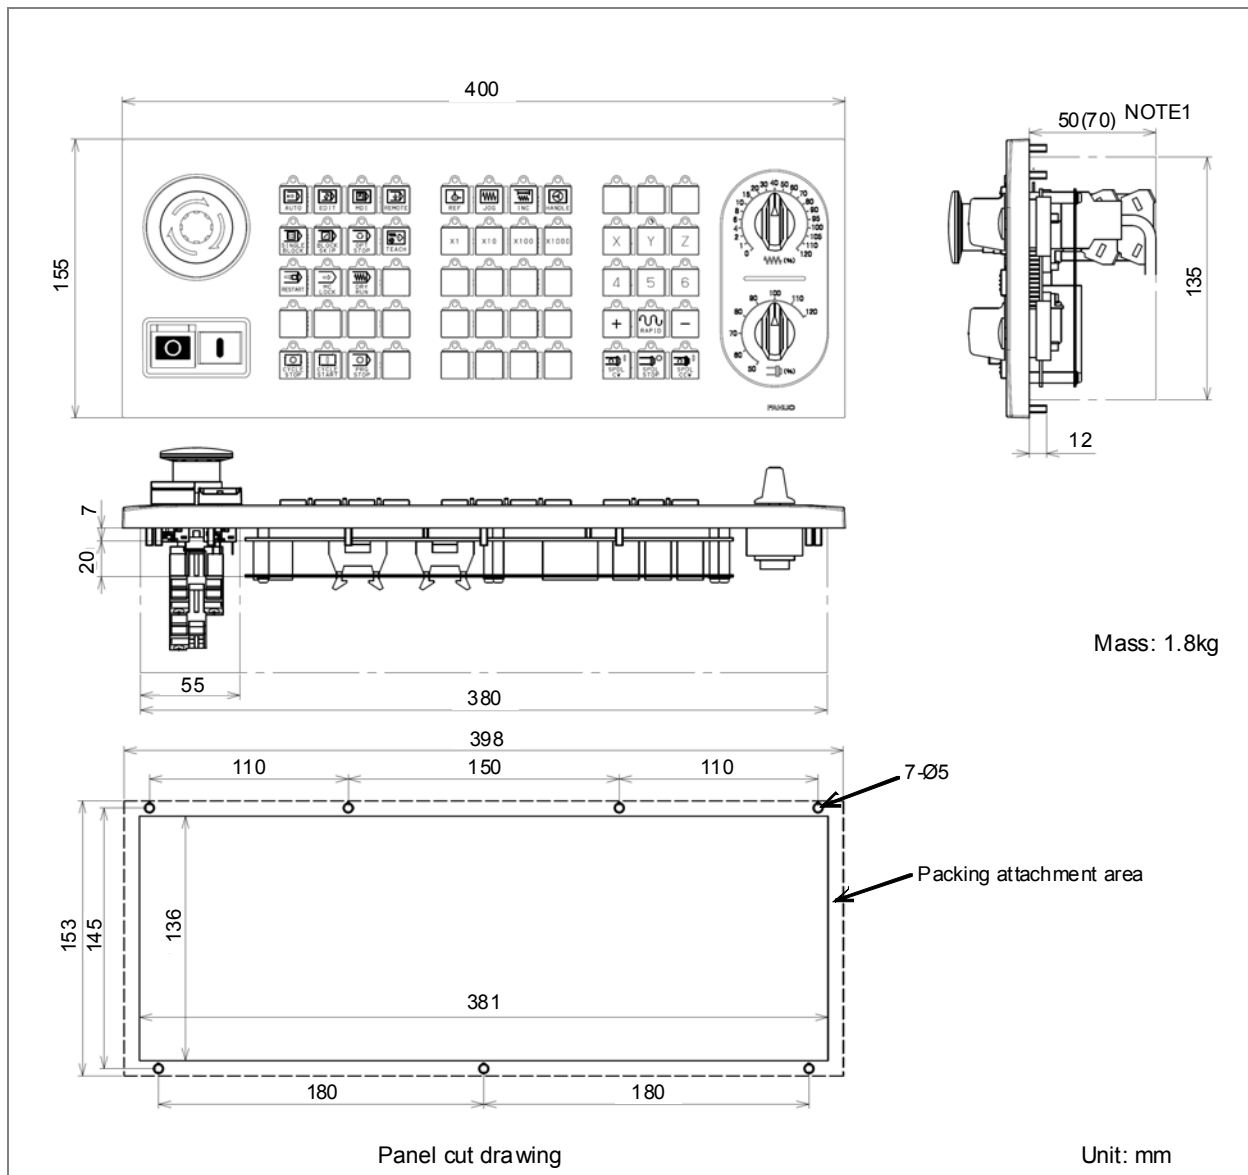


NOTE

- 1 When a low screw-fixing housing "HIROSE FL-20-CV7" is used, the depth is 50mm.
When a usual housing is used, the depth is 70mm.
The depth of emergency stop switch is 70mm.
- 2 This unit is mounted on the outside of a cabinet and a nut fastens it from the inside.
- 3 Install the safety machine operator's panel type B in a vertical direction.


8.8.9.4 Outline of sub panel AA

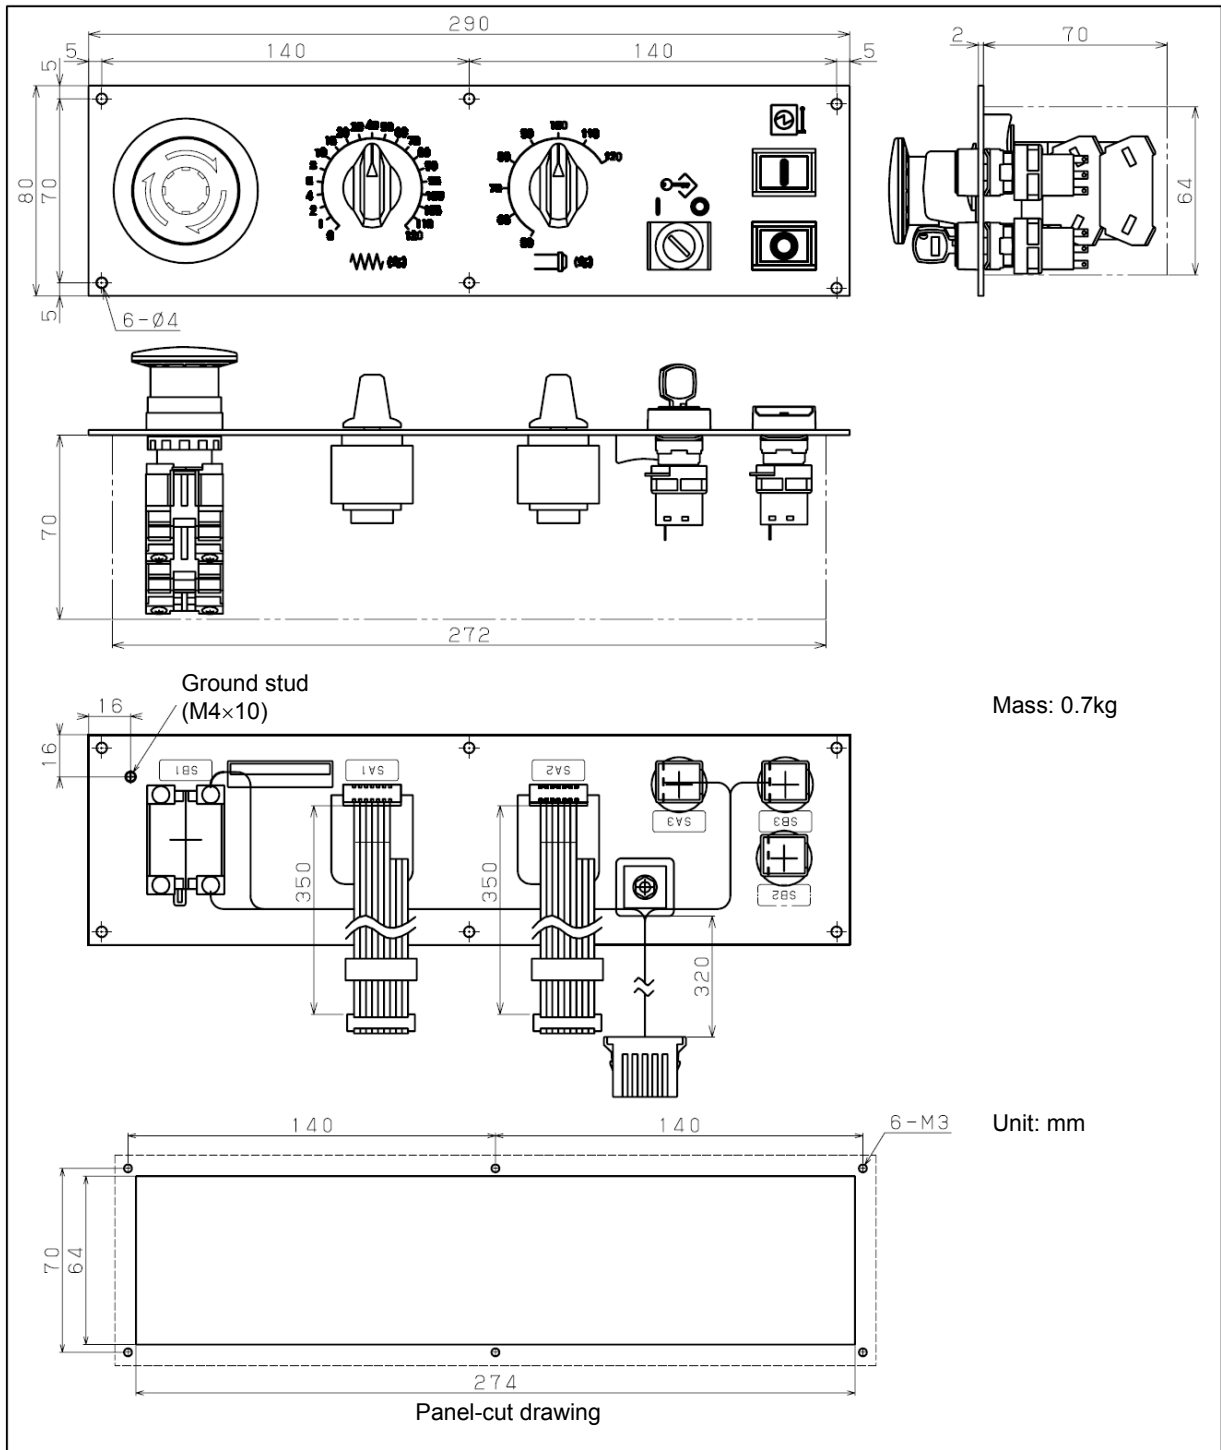


8.8.9.5 Outline of sub panel D

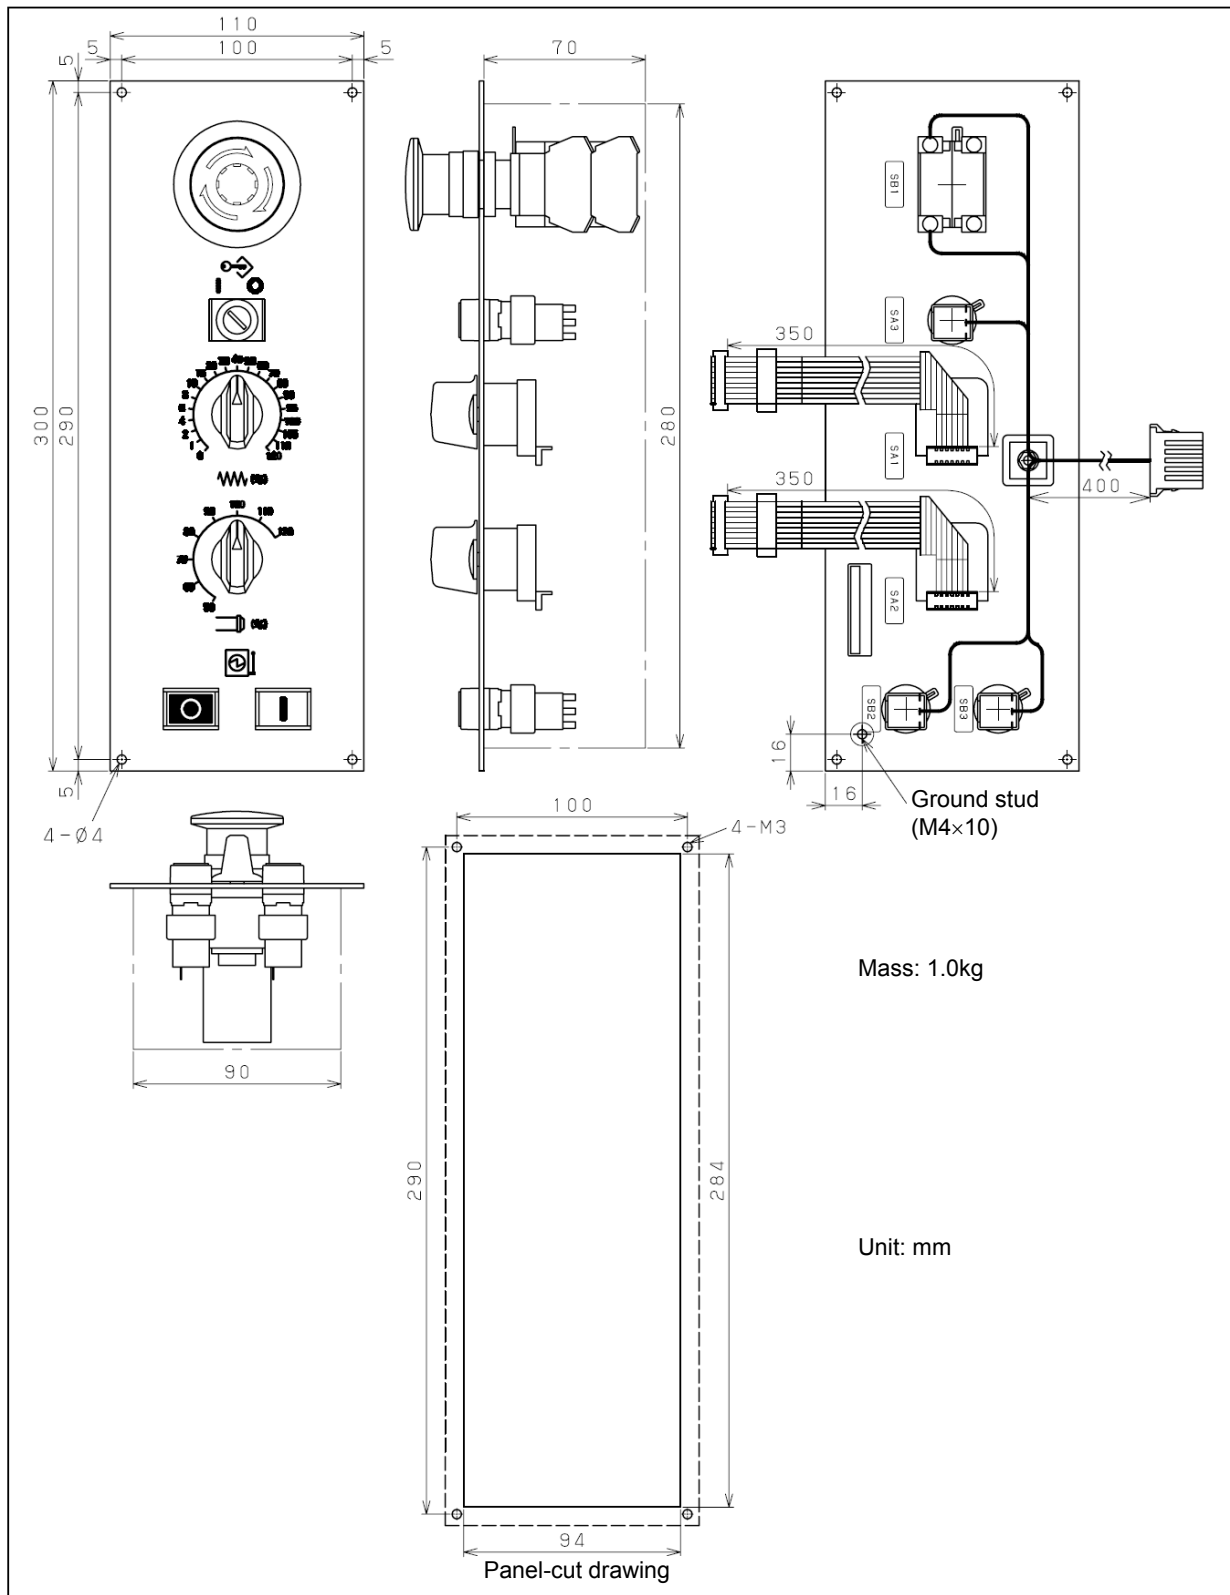

8.8.9.6 Connector locations of main panel

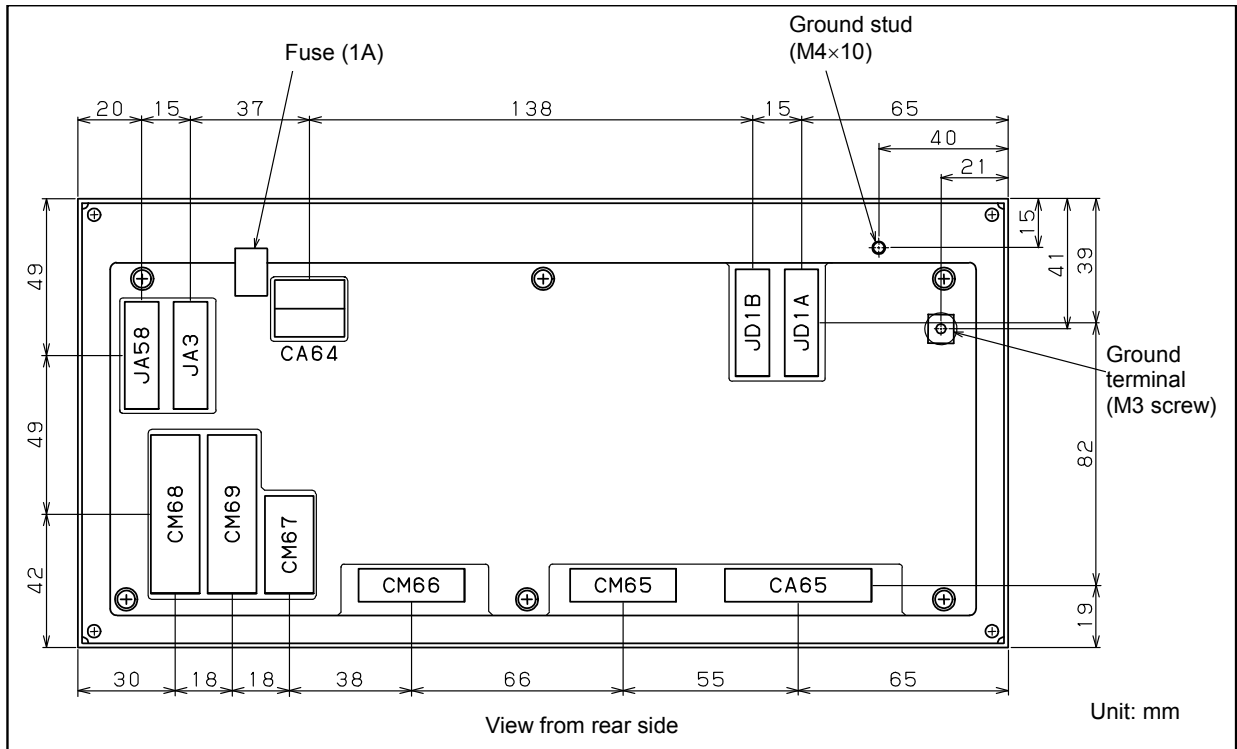


8.8.9.7 Connector locations of safety machine operator's panel

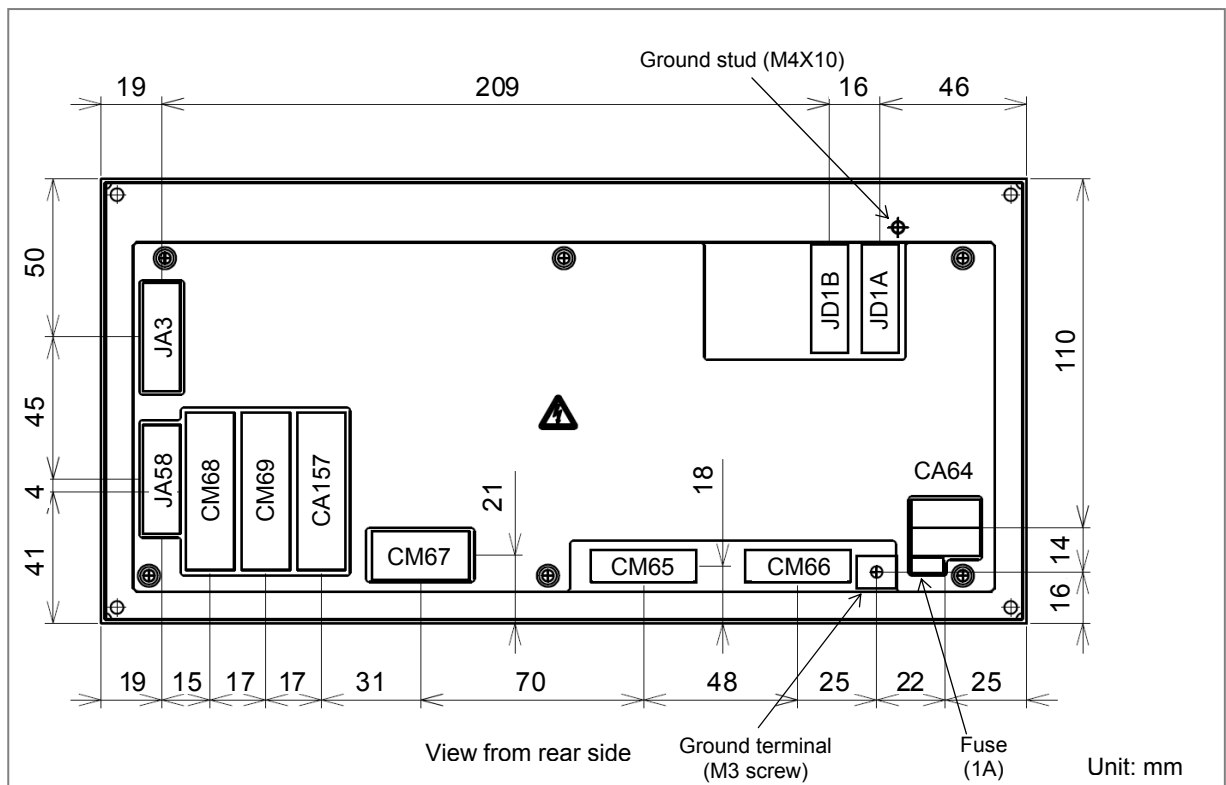

NOTE
The locations of connector CM65 and CM66 is different from the main panel.

8.8.9.8 Connector locations of safety machine operator's panel type B

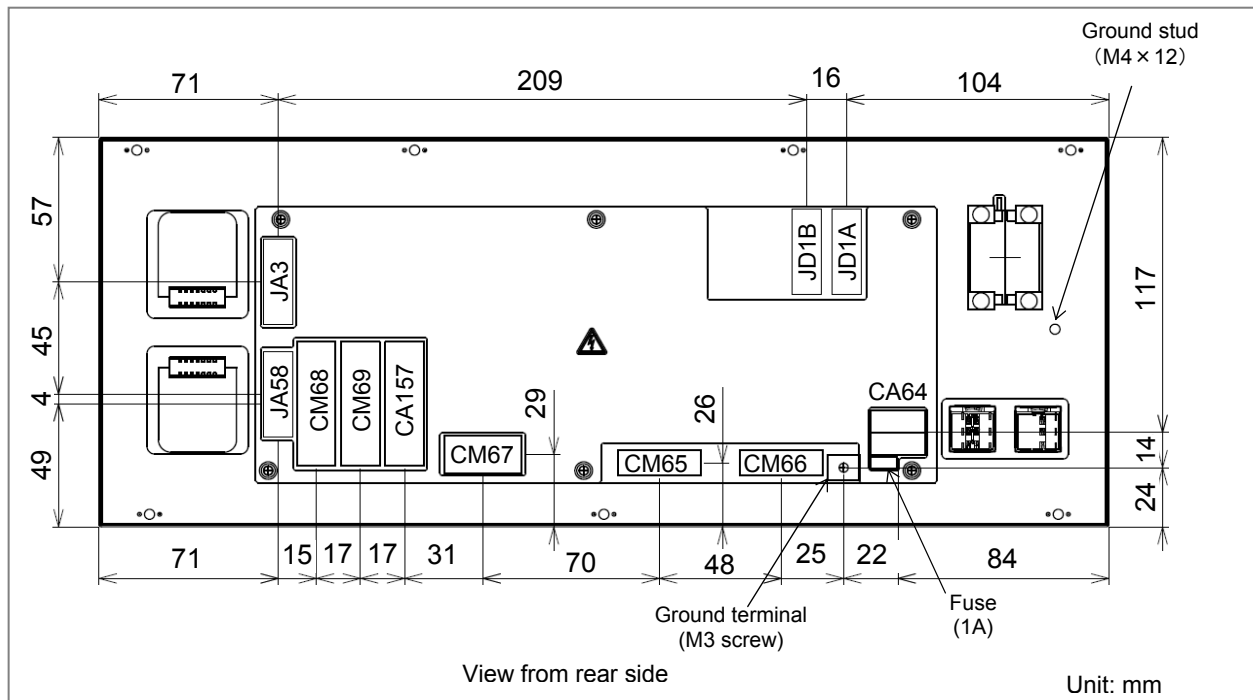

8.8.10 Specifications of the Machine Operator's Panel

8.8.10.1 Installation conditions

Install the machine operator's panel in a fully enclosed cabinet of flat side.
For other installation conditions, conform to the CNC installation conditions.

8.8.10.2 Order specification

Name	Order specification	Remarks
Standard machine operator's panel main panel	A02B-0323-C231	I/O Link <i>i</i> connection Symbol and alphabet keys
Safety machine operator's panel	A02B-0323-C234	I/O Link <i>i</i> connection
Safety machine operator's panel type B	A02B-0323-C235	Symbol and alphabet keys
Standard machine operator's panel Sub panel AA	A02B-0236-C237	
Standard machine operator's panel Sub panel D	A02B-0236-C244	
Set of transparent key tops	A02B-0236-K170	For Standard machine operator's panel main panel, 55 key tops
	A02B-0323-K170	For safety machine operator's panel and safety machine operator's panel type B, 55 key tops
Set of blank key tops	A02B-0236-K171	For Standard machine operator's panel main panel, 55 key tops
	A02B-0323-K171	For safety machine operator's panel and safety machine operator's panel type B, 55 key tops

Name	Order specification	Remarks
Set of symbol English key tops	A02B-0236-K174	For Standard machine operator's panel main panel, 34 labeled key tops + 21 blank key tops
	A02B-0323-K174	For safety machine operator's panel and safety machine operator's panel type B, 34 labeled key tops + 21 blank key tops
Set of blank key tops (color: red)	A02B-0236-K175	For Standard machine operator's panel main panel, 100 red blank key tops
	A02B-0323-K175	For safety machine operator's panel and safety machine operator's panel type B, 100 red blank key tops
Set of blank key tops (color: green)	A02B-0236-K176	For Standard machine operator's panel main panel, 100 green blank key tops
	A02B-0323-K176	For safety machine operator's panel and safety machine operator's panel type B, 100 green blank key tops
Set of blank key tops (color: blue)	A02B-0236-K177	For Standard machine operator's panel main panel, 100 blue blank key tops
	A02B-0323-K177	For safety machine operator's panel and safety machine operator's panel type B, 100 blue blank key tops
Set of blank key tops (color: yellow)	A02B-0236-K178	For Standard machine operator's panel main panel, 100 yellow blank key tops
	A02B-0323-K178	For safety machine operator's panel and safety machine operator's panel type B, 100 yellow blank key tops
Keyboard cover	A02B-0323-K041	For main panel, safety machine operator's panel and safety machine operator's panel type B, Protection from dust and coolant.
Screw caps (with 5 pieces included)	A02B-0319-K191	
Fuse (spare parts)	A02B-0815-K001	1A

8.8.10.3 Main panel specification

Item	Specification	Remarks
General-purpose DI points	32 points	24VDC type input
General-purpose DO points	8 points	12VDC to 24VDC type output
Key switches	55 keys	Matrix DI
LED	Green	Attached to all key switches, Matrix DO
Manual pulse generator interface	Max. 3 units	
Interface to CNC	I/O Link <i>i</i> connection	

8.8.10.4 Safety machine operator's panel and safety machine operator's panel type B specification

Item	Specification		Remarks
	C234	C235	
General-purpose DI points	40 points		24VDC type input
General-purpose DO points	8 points		12VDC to 24VDC type output

Item	Specification		Remarks
	C234	C235	
Key switches	55 keys		All key switch is dual contacts, Matrix DI
LED	Green		Attached to all key switches, Matrix DO
Manual pulse generator interface	Max. 3 units		
Interface to CNC	I/O Link <i>i</i> connection		
Feed rate override switch	-	1	5 bit real gray code output (with a parity bit)
Spindle override switch	-	1	
Emergency stop switch	-	1	Number of contact: 3 (contact a × 1, contact b × 2) M3.5 Screw
ON switch	-	1	Contact c × 2, illumination type (24 VDC, resistance contained, LED color: Milk white)
OFF switch	-	1	Contact c × 1, With a switch cover

8.8.10.5 Sub panel AA, D specification

Item	Specification of Sub panel		Remarks
	AA	D	
Feed rate override switch	1	1	5 bit real gray code output (with a parity bit)
Spindle override switch	1	1	
Emergency stop switch	1	1	Number of contact: 4 (contact a × 2, contact b × 2), M3.5 Screw
Program protect key	1	1	The key cannot be removed in the program protect off state.
ON switch	1	1	Contact c × 2, illumination type (24 VDC, resistance contained)
OFF switch	1	1	Contact c × 1

8.8.10.6 Power supply specification

Item	Voltage	Specification	Remarks
Standard machine operator's panel main panel	DC24V±10% (from Power connector CA64, including momentary values)	0.6A	Including all DI consumption. The power supply rating does not include that to be input to DOCOM for DO output.
Safety machine operator's panel			
Safety machine operator's panel type B			

8.8.10.7 Heat output

Item	Heat output	Remarks
Standard machine operator's panel main panel	15W	When 50% of general-purpose input signals and key LEDs on the main panel are on
Safety machine operator's panel		
Safety machine operator's panel type B		

8.8.10.8 General-purpose DI signal definition

Number of points	Standard machine operator's panel main panel: 32 points Safety machine operator's panel, Safety machine operator's panel type B: 40 points
Rated input voltage	24VDC (+10%, -10%)
Rated input current	7.3mA (average)

Polarity	Standard machine operator's panel main panel: Xm+0.0 to Xm+0.7, Xm+1.0 to Xm+1.7, Xm+2.0 to Xm+2.7: Sink type Xm+3.0 to Xm+3.7: Sink or source type selectable Safety machine operator's panel and Safety machine operator's panel type B: X1m+0.0 to X1m+0.7, X1m+1.0 to X1m+1.7, X1m+2.0 to X1m+2.7, X2m+0.0 to X2m+0.7: Sink type X1m+3.0 to X1m+3.7: Sink or source type selectable
ON voltage/current	18VDC or more, 6mA or more
OFF voltage/current	6VDC or less, 1.5mA or less
Permission self-diagnostics pulse width	Pulse width: 150µs or less, Cycle: 4ms or more
Response time	The receiver delay time is 2ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.

8.8.10.9 General-purpose DO signal definition


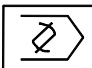


Number of points	8 points
Rated output voltage	12VDC to 24VDC (+20%, -15%)
Rated output current	200mA/pt (An instant is contained)
Polarity	Source type
Maximum voltage decrease when ON	28mV
Maximum leakage current when OFF	5µA
Output protection function	Protection against overheat, over current, and short circuit
Response time	The driver delay time is 50µs (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] needs to be considered.












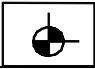





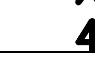

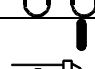

CAUTION

- 1 The protection function is intended to protect the components internal rather than external units.
- 2 No protection function can protect their internal components in all cases. Once any protection function has worked, remove the cause promptly. If an absolute maximum rating is exceeded, for example, it is likely that protection functions may not work or an IC may break down before the related protection function works, depending on the way or situation in which the modules are used.
- 3 If an output protection function is defective, it is likely that, if the load current exceeds its rating continuously for a long time, smoke or ignition may occur.

8.8.11 Keyboard

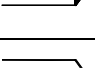
8.8.11.1 Meaning of key symbols

Symbol	English	Meaning of key
	AUTO	AUTO mode selection signal; Sets automatic operation mode.
	EDIT	EDIT mode selection signal; Sets program edit operation mode.
	MDI	MDI mode selection; Sets MDI mode.
	REMOTE	DNC operation mode; Sets DNC operation mode.

Symbol	English	Meaning of key
	REF RETURN	Reference position return mode selection; Sets reference position return mode.
	JOG	JOG feed mode selection; Sets jog feed mode.
	INC JOG	Step feed mode selection; Sets step feed mode.
	HANDLE	Manual handle feed mode selection; Sets manual handle feed mode.
	TEACH	Teach-in jog (reach-in handle) mode selection signal; Sets teach-in jog (teach-in handle) mode.
	SINGLE BLOCK	Single block signal; Executes program one by one. This key is used to check a program.
	BLOCK DELETE	Block delete; Skips the execution of the blocks d ending with the end of block (;) when this button is pressed during automatic operation.
	PRG STOP	Program stop(output only); Turns on the LED on the button when automatic operation is stopped by M00 specified in the program.
	OPT STOP	Optional stop; Stops automatic operation after execution of the block of a program where M01 is specified in the program.
	RESTART	Program restart; A program may be restart at a block by specifying the sequence number of the block, after automatic operation is stopped because of a broken tool or for holidays.
	DRY RUN	Dry run; Sets the axis feedrate to the jog feedrate instead of a programmed feedrate when automatic operation is performed by setting this button to on. This function is used to check only the movement of the tool when no workpiece is mounted.
	MC LOCK	Machine lock; Updates only position display on the screen without making any axis movement, when automatic operation is performed by setting this button to on. This function is used to check a program.
	CYCLE START	Cycle start; Start automatic operation.
	CYCLE STOP	Cycle stop; Stops automatic operation.
	X1 X10 X100 X1000	Manual handle feed magnification: Magnification for manual handle feed. Magnified by 1, 10, 100, 1000.
	X Y Z 4 5 6	Manual feed axis selection; Axes are selected, when these buttons are set to on in the jog feed mode or step feed mode.
	+ -	Manual feed operation; Performs movement along selected axes when these buttons are set on in the jog feed mode or step feed mode.
	RAPID	Traverse; Performs jog feed at rapid traverse rate when this button is set to on.
	SPDL CW	Positive spindle rotation direction; Rotates the spindle motor in the positive direction.
	SPDL CCW	Negative spindle rotation direction; Rotates the spindle motor in the negative direction.
	SPDL STOP	Spindle stop; Stops the spindle motor rotation.

8.8.11.2 Detachable key top on the main panel


All key tops on the machine operator’s panel are detachable, which allows you to make your original key layout easily. A transparent key top (available as an option) can be used to insert a film sheet with marking into the key.

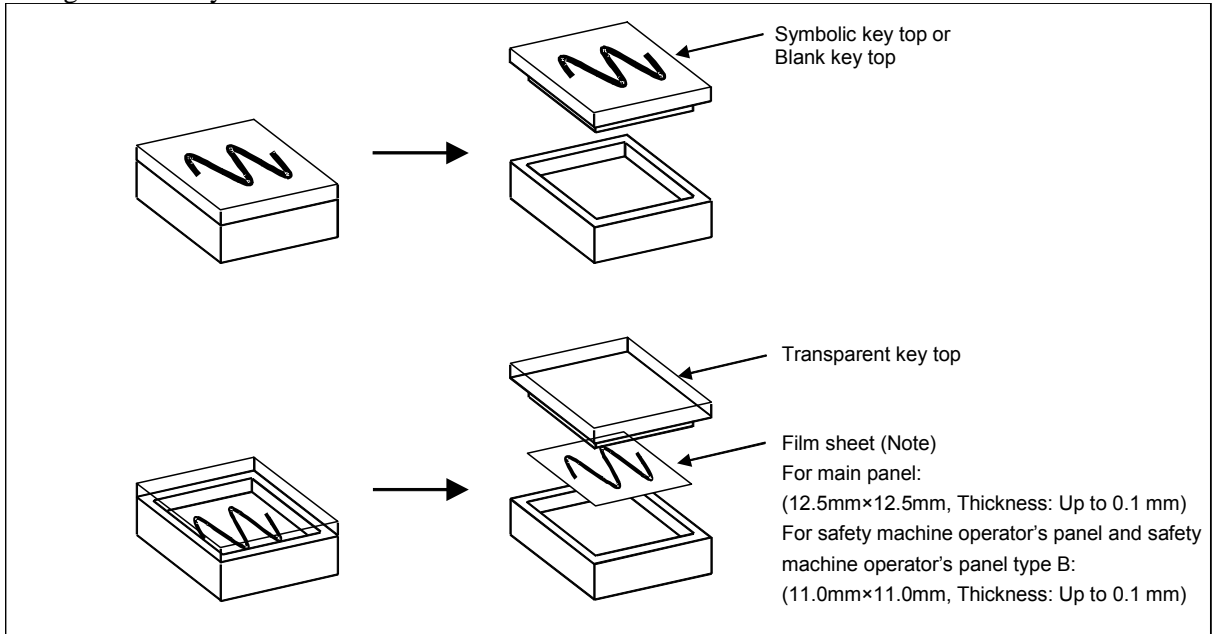

NOTE
 1 Use the coolant-proof sheet in the environment which coolant is used for.
 2 The size of film sheet changes with kinds of machine operator’s panel.

8.8.11.3 Keyboard cover

Use the keyboard cover when using the system under environments with higher degree of dust or coolant.

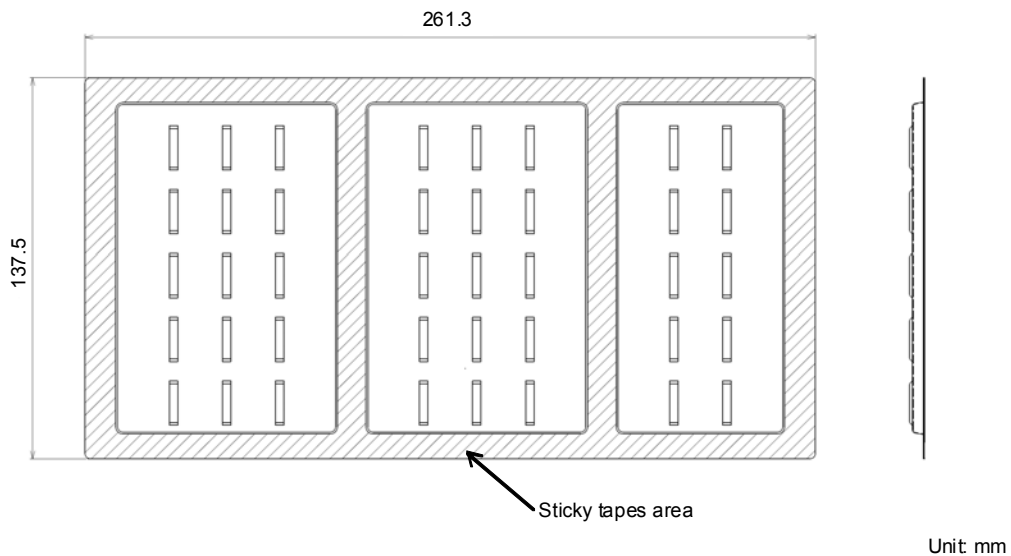

How to setting

1. Clean the face of machine operator’s panel type B.

2. Confirm the cover direction for setting.
 3. Remove the all of sheets from sticky tapes on the outline of this cover.
 4. Avoid swells of LED from sticky tapes, post it on this panel face.
- See Appendix F for more information.

**WARNING**

Use the keyboard cover, when it may become impossible to operate key switch because the dust, cutting chips, etc. get in the crevice between keyboards.

8.8.12 DO (Output Signal) Error Detection

The DO driver of the main panel has the output protection function for each output signal. If an accident, such as connecting the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal in the OFF state. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

Standard machine operator's panel main panel

When the above protection function is activated by the DO driver, the relevant error is output as a status alarm and transferred to the PMC system relay area. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. For details of the status alarm, see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	5	Yn+5	5th byte DO
				6	Yn+6	6th byte DO
				7	Yn+7	7th byte DO

Output values of "Group number", "PMC path", and "Y address" depends on unit connection and I/O address assignment.

Yn indicates the start address at allocation.

Description of "Alarm data" in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

Safety machine operator's panel, Safety machine operator's panel type B

When the above protection function is activated by the DO driver, the relevant error is output as a status alarm and transferred to the PMC system relay area. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. For details of the status alarm, see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	5	Y1n+5	5th byte DO
				6	Y1n+6	6th byte DO
				7	Y1n+7	7th byte DO

Output values of "Group number", "PMC path", and "Y address" depends on unit connection and I/O address assignment.

Yn indicates the start address at allocation.

Description of "Alarm data" in the system relay area


Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

8.9 CONNECTION OF OPERATOR'S PANEL CONNECTION UNIT (SOURCE DO)

Two operator's panel connection units are available according to the number of I/Os.


Specification	Input	Output
A16B-2204-0260	96	64
A16B-2204-0261	64	32

8.9.1 Overall Connection Diagram

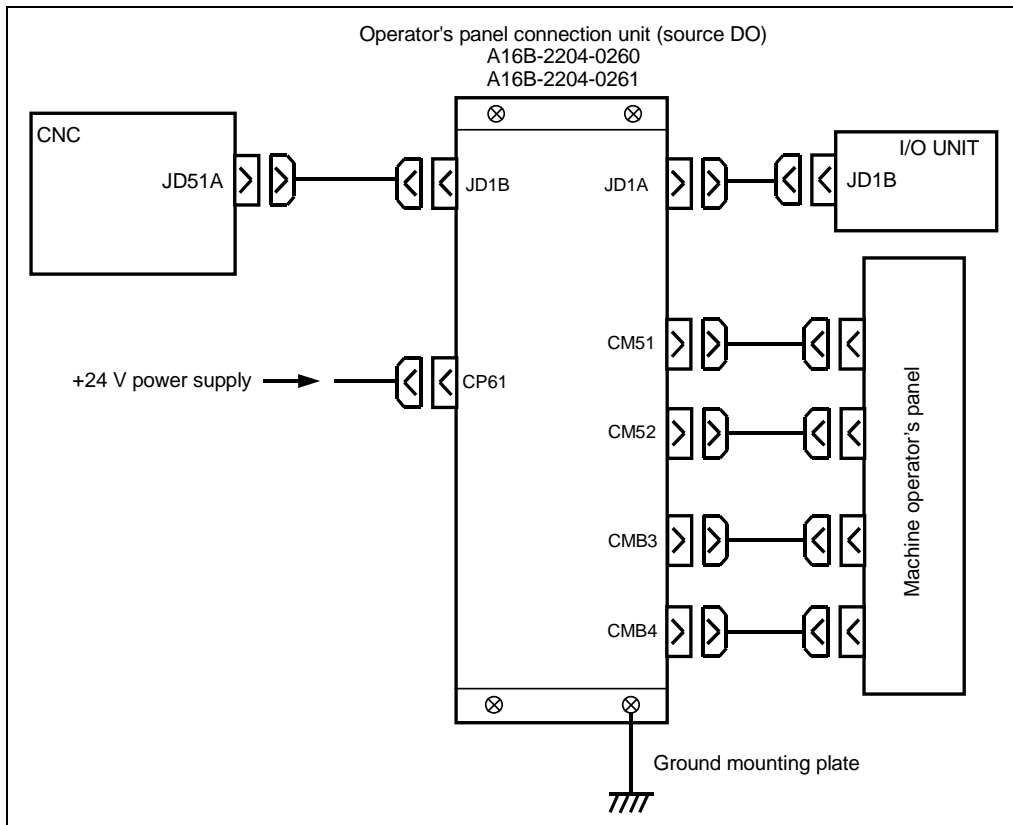

8.9.2 Power Connection

Provide the CP61 connector, shown below, with the power necessary for the printed circuit board operation and that for DI operation.

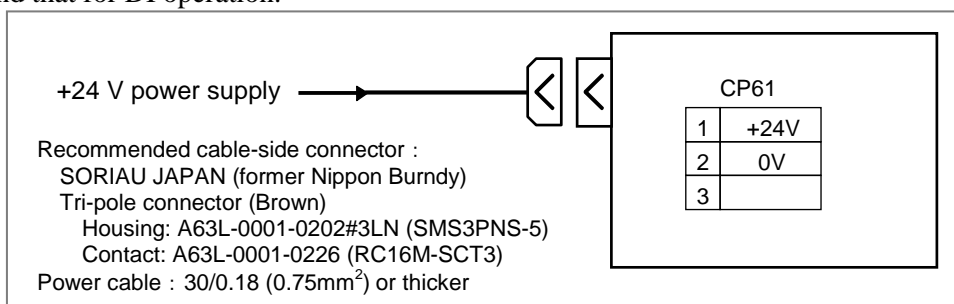

8.9.3 DI/DO Connector Pin Arrangement

CM51				CM52			
33	DICOM1			01	Xm+0.0		
34	Xm+0.2			02	Xm+0.3		
35	Xm+0.5	19	Xm+0.1	03	Xm+0.6		
36	Xm+1.0	20	Xm+0.4	04	Xm+1.1		
37	Xm+1.3	21	Xm+0.7	05	Xm+1.4		
38	Xm+1.6	22	Xm+1.2	06	Xm+1.7		
39	Xm+2.1	23	Xm+1.5	07	Xm+2.2		
40	Xm+2.4	24	Xm+2.0	08	Xm+2.5		
41	Xm+2.6	25	Xm+2.3	09	Xm+2.7		
42	Xm+3.1	26	Xm+3.0	10	Xm+3.2		
43	Xm+3.4	27	Xm+3.3	11	Xm+3.5		
44	Xm+3.7	28	Xm+3.6	12	Xm+4.0		
45	Xm+4.2	29	Xm+4.1	13	Xm+4.3		
46	Xm+4.5	30	Xm+4.4	14	Xm+4.6		
47	Xm+5.0	31	Xm+4.7	15	Xm+5.1		
48	Xm+5.3	32	Xm+5.2	16	Xm+5.4		
49	Xm+5.5			17	Xm+5.6		
50	Xm+5.7			18	24V		

CMB3				CMB4			
33	0V			01	Yn+0.0		
34	Yn+0.2			02	Yn+0.3		
35	Yn+0.5	19	Yn+0.1	03	Yn+0.6		
36	Yn+1.0	20	Yn+0.4	04	Yn+1.1		
37	Yn+1.3	21	Yn+0.7	05	Yn+1.4		
38	Yn+1.6	22	Yn+1.2	06	Yn+1.7		
39	Yn+2.1	23	Yn+1.5	07	Yn+2.2		
40	Yn+2.4	24	Yn+2.0	08	Yn+2.5		
41	Yn+2.6	25	Yn+2.3	09	Yn+2.7		
42	Yn+3.1	26	Yn+3.0	10	Yn+3.2		
43	Yn+3.4	27	Yn+3.3	11	Yn+3.5		
44	Yn+3.7	28	Yn+3.6	12	Yn+4.0		
45	Yn+4.2	29	Yn+4.1	13	Yn+4.3		
46	Yn+4.5	30	Yn+4.4	14	Yn+4.6		
47	Yn+5.0	31	Yn+4.7	15	Yn+5.1		
48	Yn+5.3	32	Yn+5.2	16	Yn+5.4		
49	Yn+5.5			17	DOCOM		
50	DOCOM			18	DICOM2		

CM52			
33	0V		
34	Xm+6.2	19	Xm+6.1
35	Xm+6.5	20	Xm+6.4
36	Xm+7.0	21	Xm+6.7
37	Xm+7.3	22	Xm+7.2
38	Xm+7.6	23	Xm+7.5
39	Xm+8.1	24	Xm+8.0
40	Xm+8.4	25	Xm+8.3
41	Xm+8.6	26	Xm+9.0
42	Xm+9.1	27	Xm+9.3
43	Xm+9.4	28	Xm+9.6
44	Xm+9.7	29	Xm+10.1
45	Xm+10.2	30	Xm+10.4
46	Xm+10.5	31	Xm+10.7
47	Xm+11.0	32	Xm+11.2
48	Xm+11.3		
49	Xm+11.5		
50	Xm+11.7		

CMB4			
14	Yn+6.0	8	Yn+6.2
15	Yn+6.3	9	Yn+6.5
16	Yn+6.6	10	Yn+7.0
17	Yn+7.1	11	Yn+7.3
18	Yn+7.4	12	Yn+7.6
19	Yn+7.7	13	Yn+5.7
20	DOCOM		

(Note)

- Xm+8 through Xm+11 and Yn+4 through Yn+7 can be used only for the A16B-2204-0260.
- Connector CMB4 is not mounted when A16B-2204-0261 is selected.


NOTE


CM51, CM52, CMB3: Recommended cable-side connector: A63L-0001-0134#01
(Connector: HONDA MR-50F, Case: HONDA MR-50L)
Recommended wire material: A66L-0001-0042
(7/0.18, 50 pins)


CMB4: Recommended cable-side connector: A63L-0001-0134#02
(Connector: HONDA MR-20F, Case: HONDA MR-20L)
Recommended wire material: A66L-0001-0041
(7/0.18, 20 pins)


⚠ CAUTION
 An output DC voltage of +24 V at CM51 (18) and CM52 (18) is for DI signals. Do not supply 24 V DC to these pins from the outside.


8.9.4 DI (Input Signal) Connection

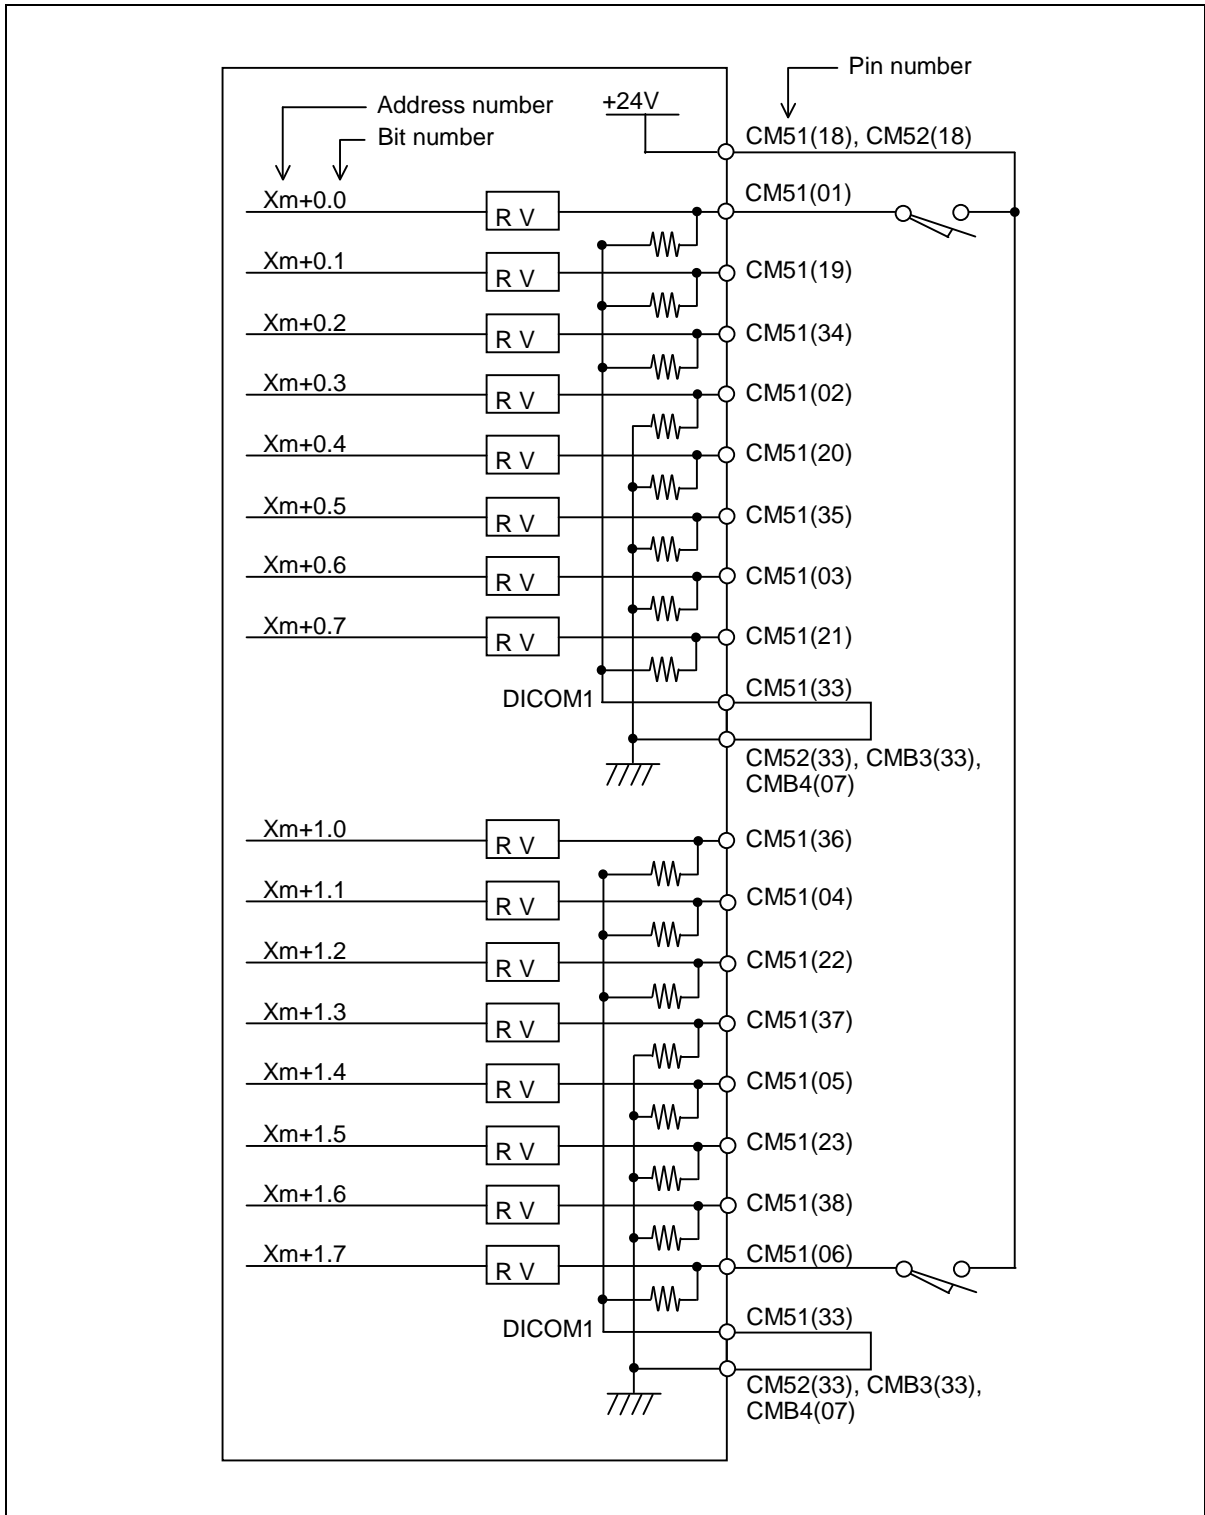


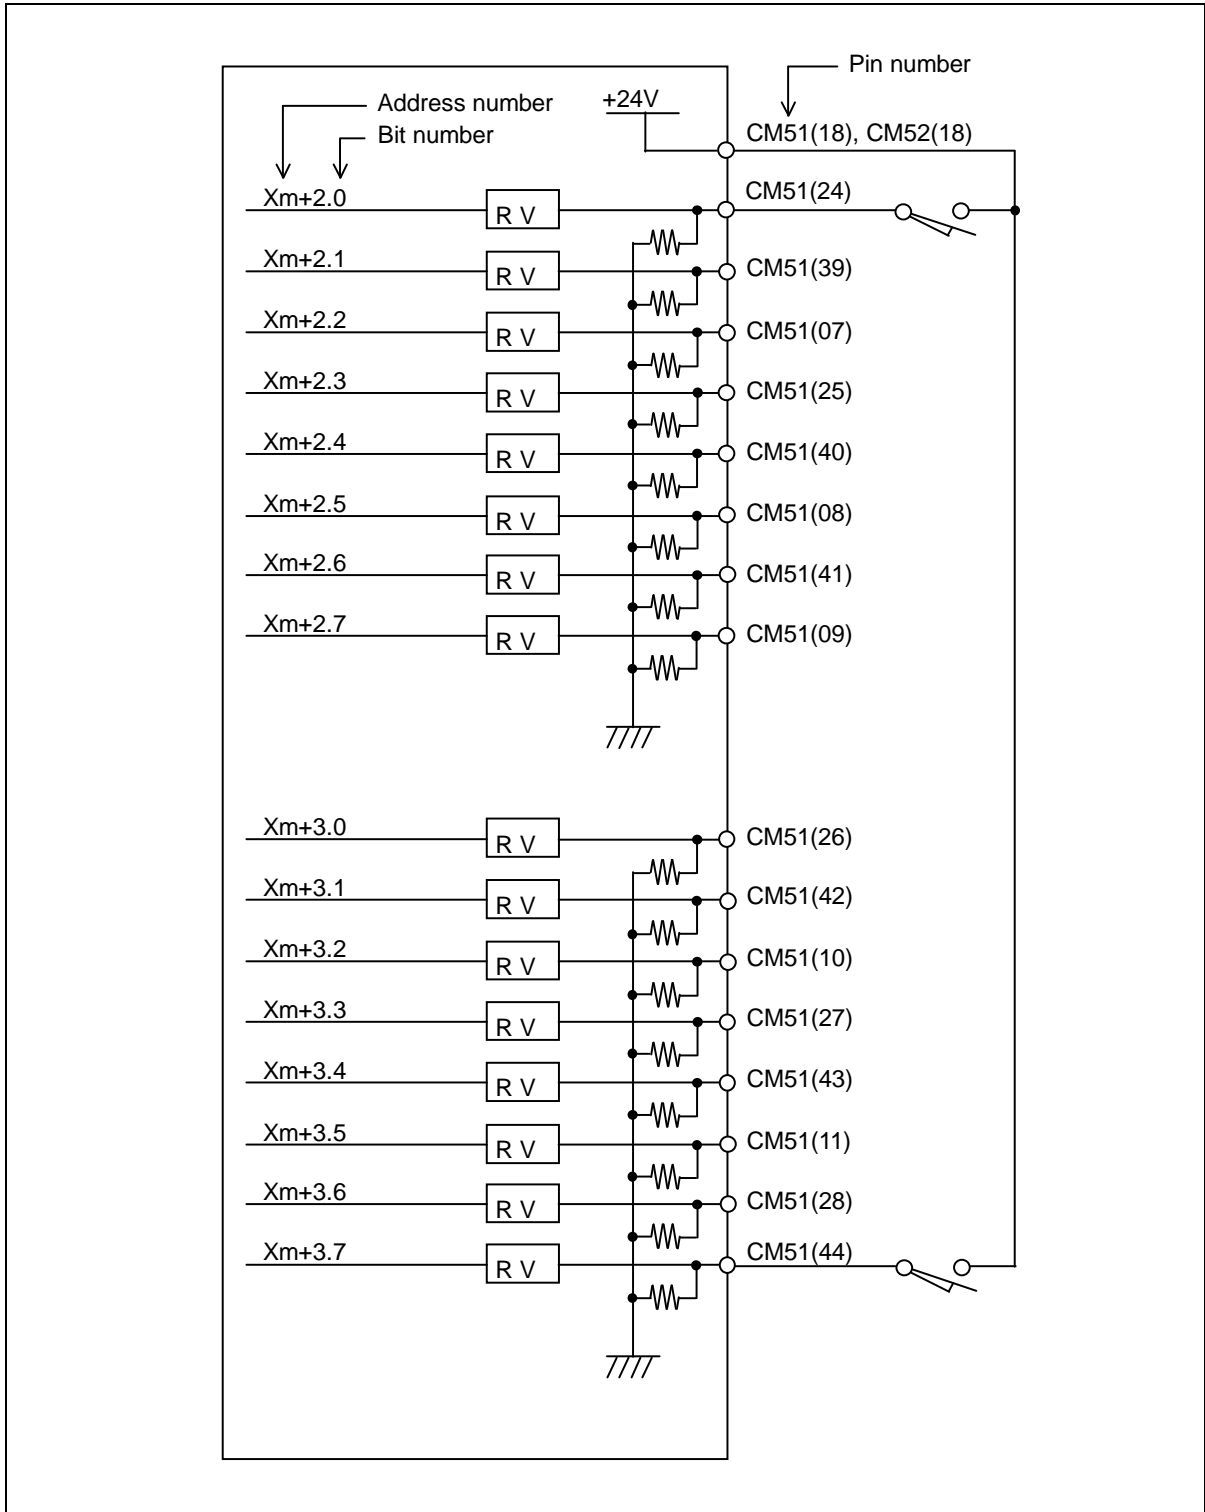

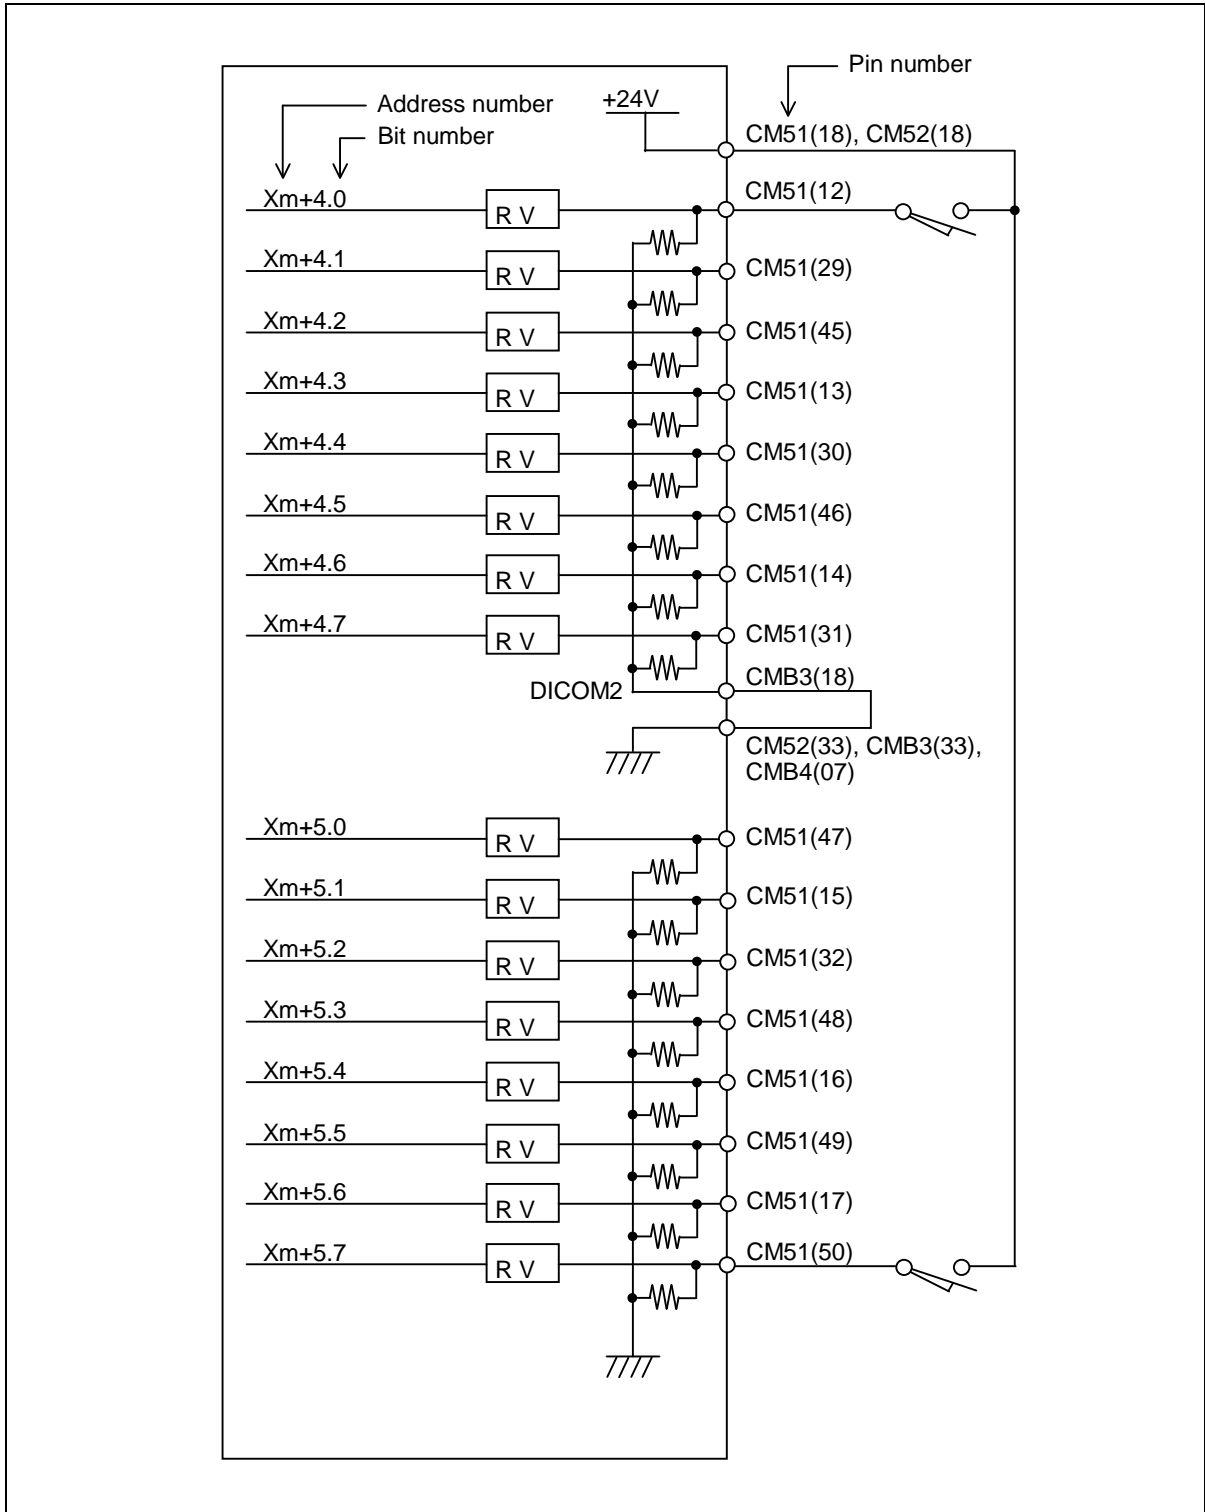

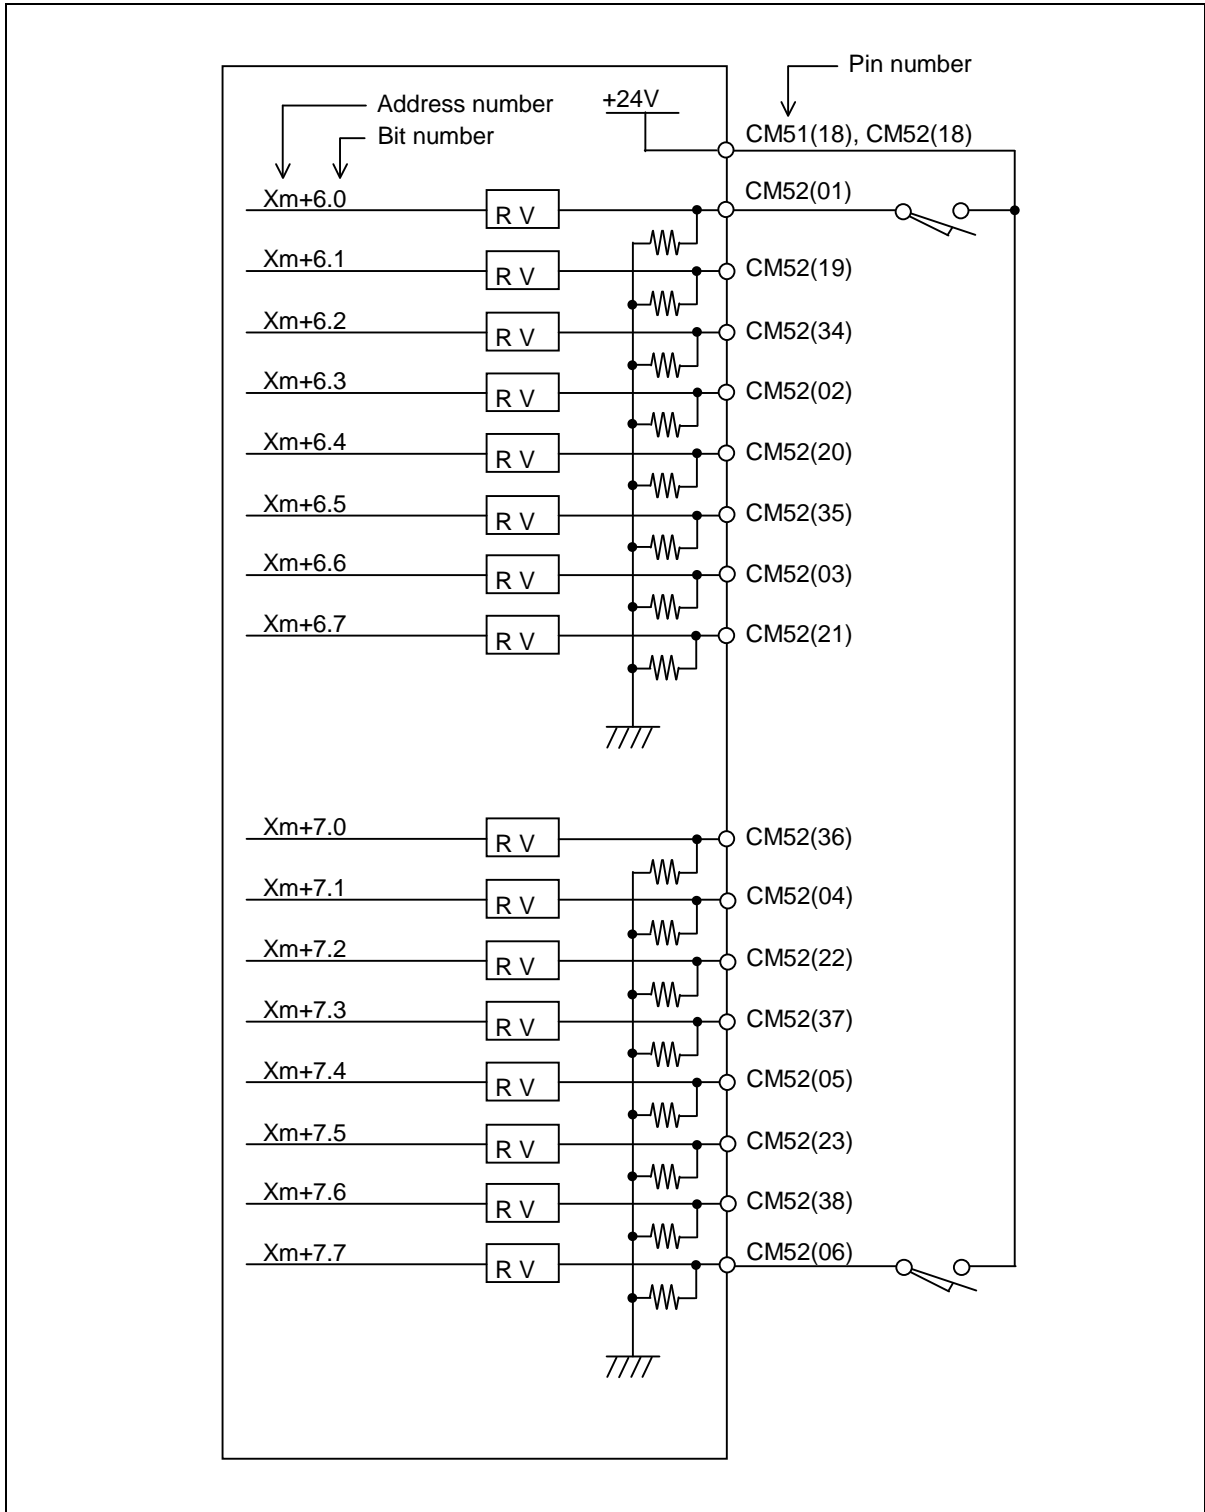

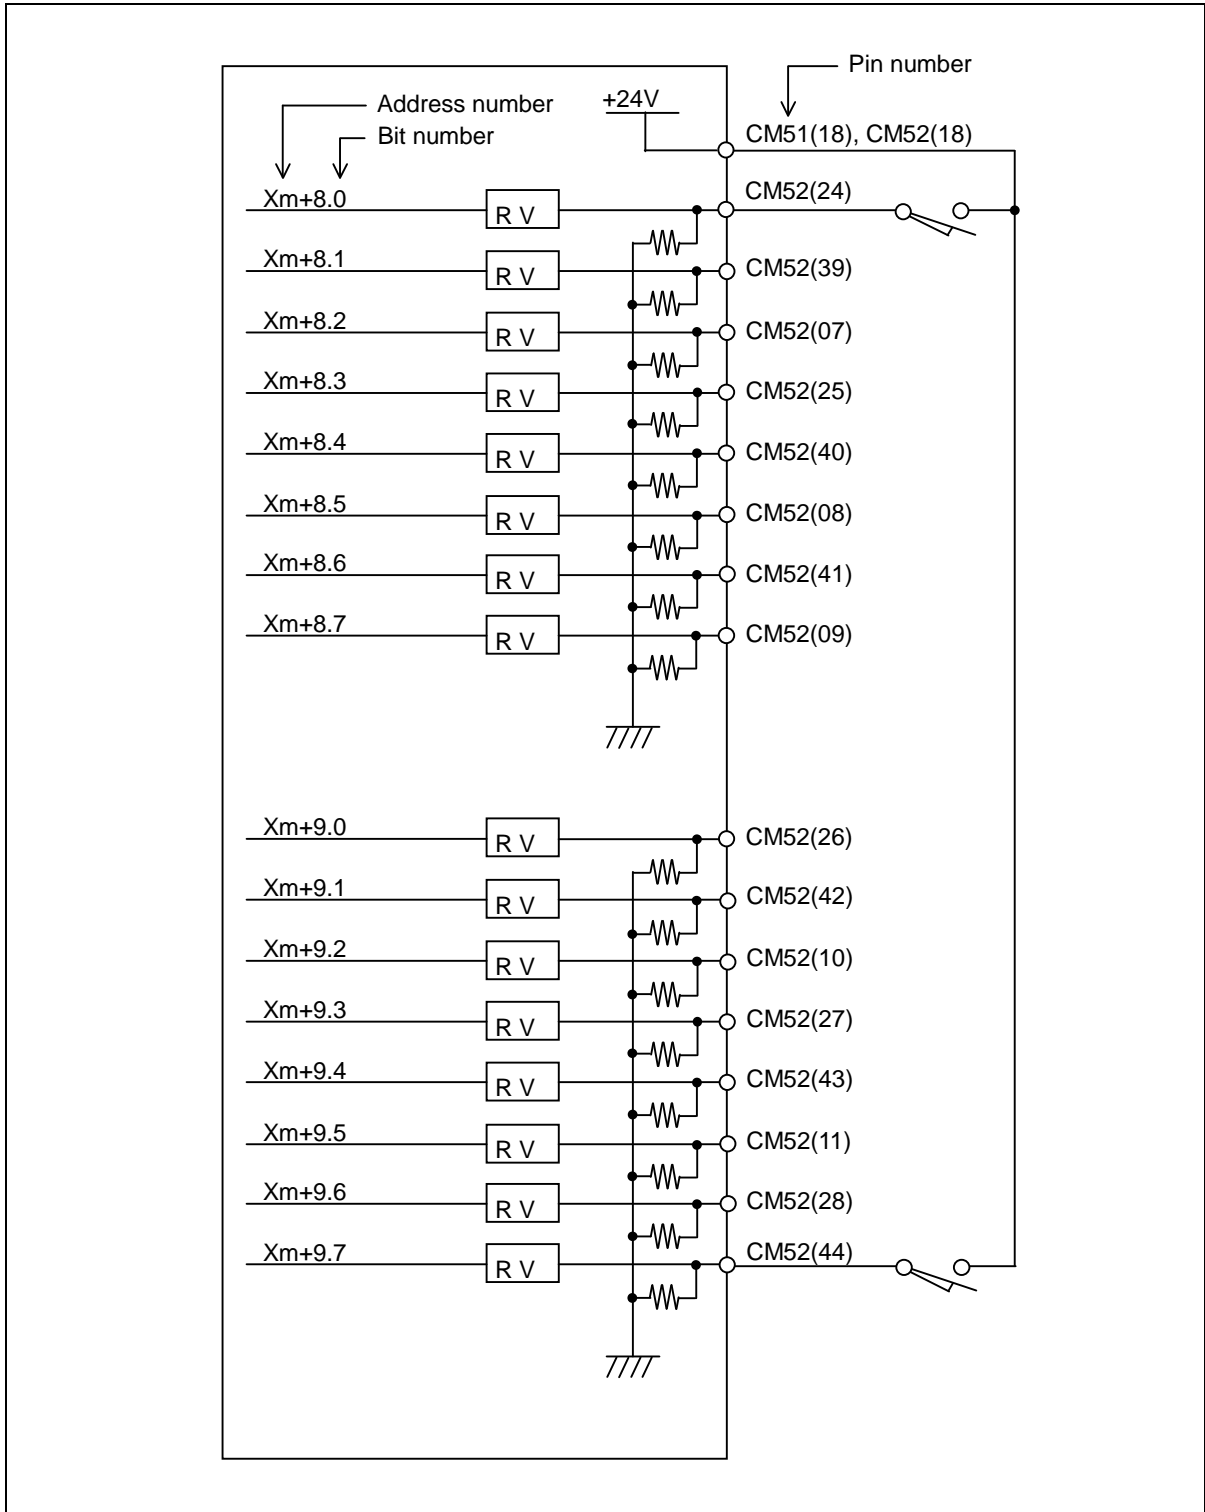

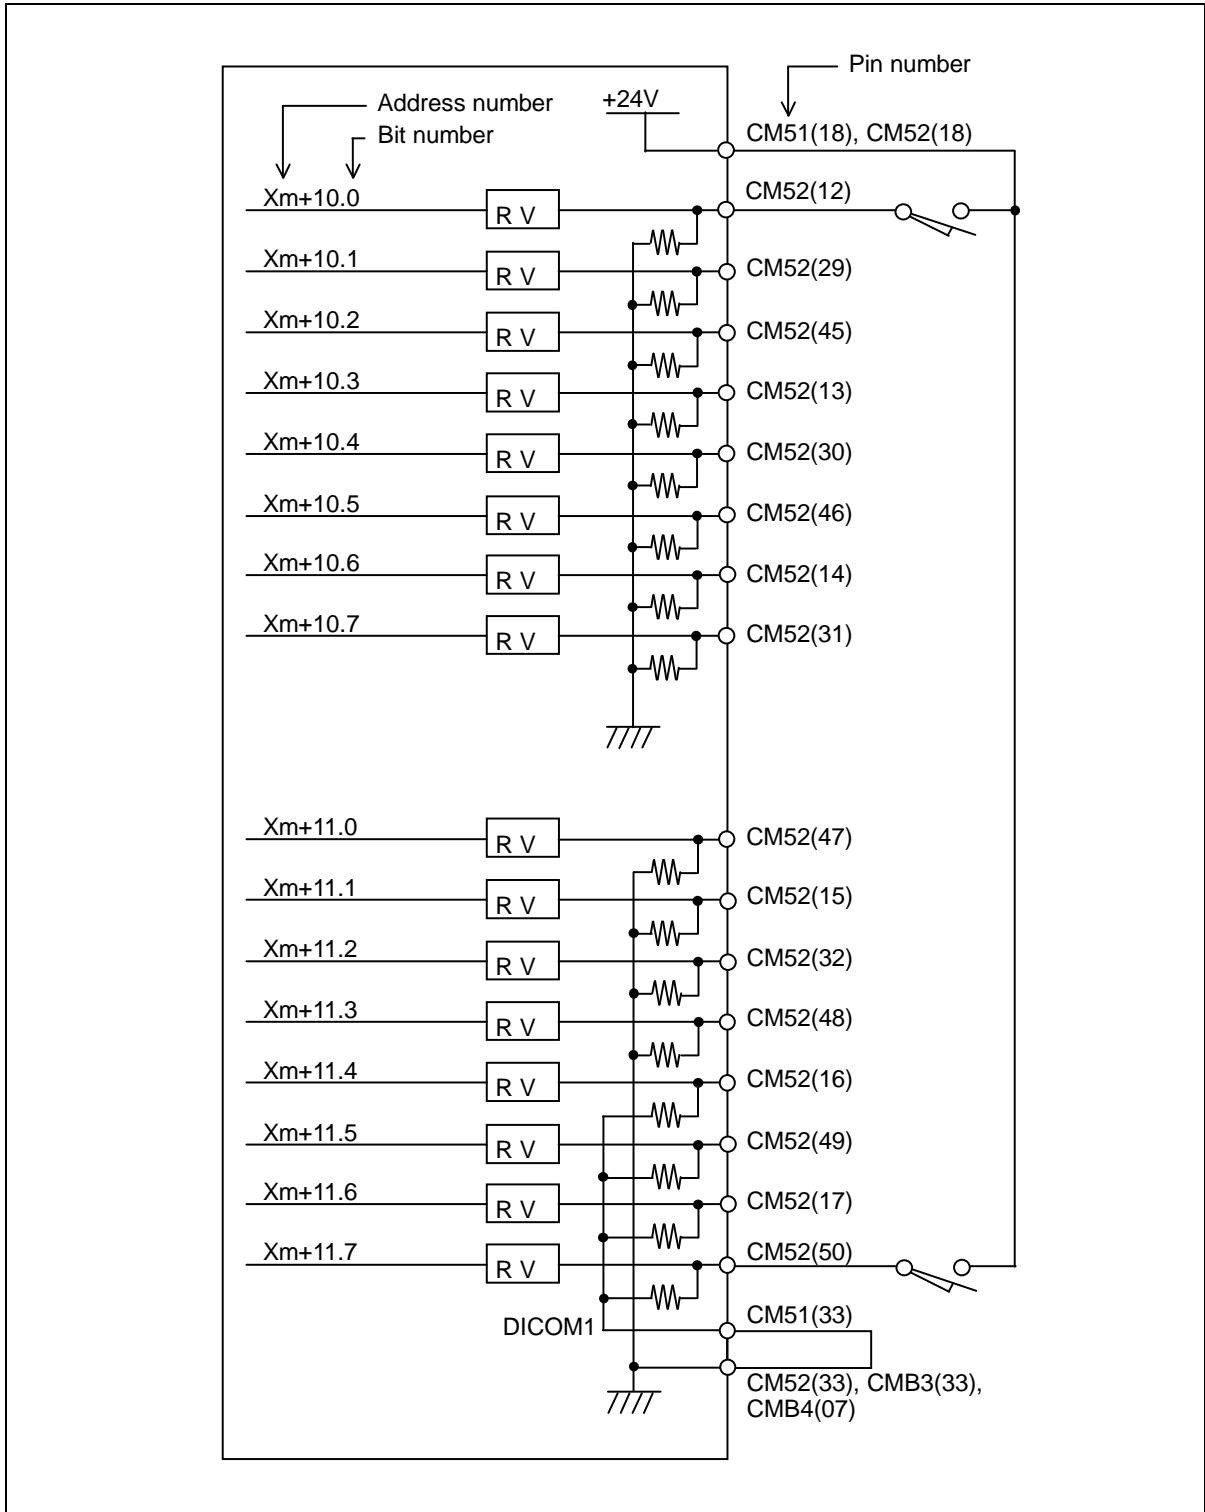

NOTE

Xm+0.0 through Xm+0.2, Xm+0.7, Xm+1.0 through Xm+1.2, Xm+1.7, Xm+11.4 through Xm+11.7, and Xm+4.0 through Xm+4.7 are DI pins for which a common voltage can be selected. That is, by connecting the DICOM1 CM51(33) or DICOM2 CMB3(18) pin to the +24 V power supply, a DI signal can be input with its logical state reversed. If, however, a cable is connected to ground, it has the same effect as inputting an ON state DI signal. To prevent this from occurring, the connection of the DICOM1 CM51(33) and DICOM2 CMB3(18) pins to the 0 V power supply is recommended wherever possible.

For the unconnected pins at the addresses for which the common voltage is fixed, the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected, the input is "0" when the DICOMx common select pin is connected to the 0 V power supply or "1" when it is connected to the +24 V power supply. Connect DICOM1 and DICOM2 when used. When addresses Xm+0.0 through Xm+0.2, Xm+0.7, Xm+1.0 through Xm+1.2, Xm+1.7, Xm+11.4 through Xm+11.7, and Xm+4.0 through Xm+4.7 are not used, connect DICOM1 and DICOM2 to the 0 V power supply.


Common voltage for DI


Address	Common voltage
Xm	Bit 0, 1, 2, and 7 can be selected with DICOM1. The others cannot be selected.
Xm+1	Bit 0, 1, 2, and 7 can be selected with DICOM1. The others cannot be selected.
Xm+2	Cannot be selected.
Xm+3	Cannot be selected.
Xm+4	Can be selected with DICOM2
Xm+5	Cannot be selected.
Xm+6	Cannot be selected.
Xm+7	Cannot be selected.
Xm+8	Cannot be selected.
Xm+9	Cannot be selected.
Xm+10	Cannot be selected.
Xm+11	Bit 4, 5, 6, and 7 can be selected with DICOM1. The others cannot be selected.


**CAUTION**


An output DC voltage of +24 V at CM51 (18) and CM52 (18) is for DI signals. Do not supply 24 V DC to these pins from the outside.

8.9.5 DO (Output Signal) Connection

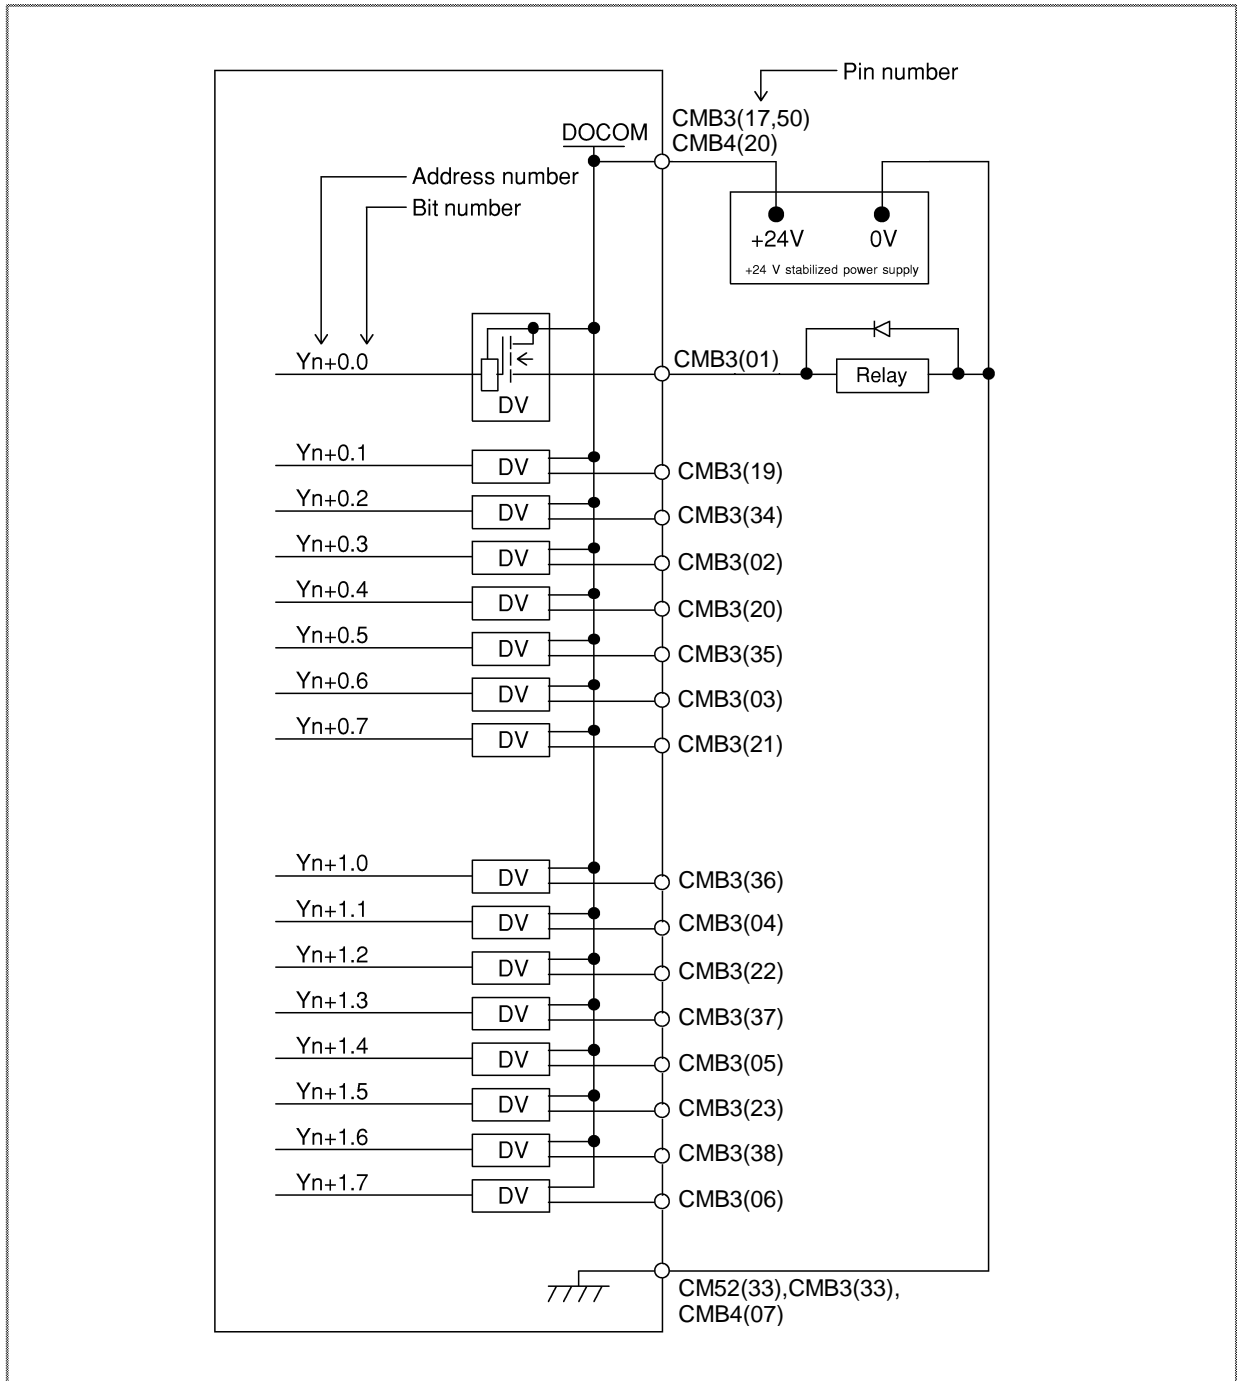


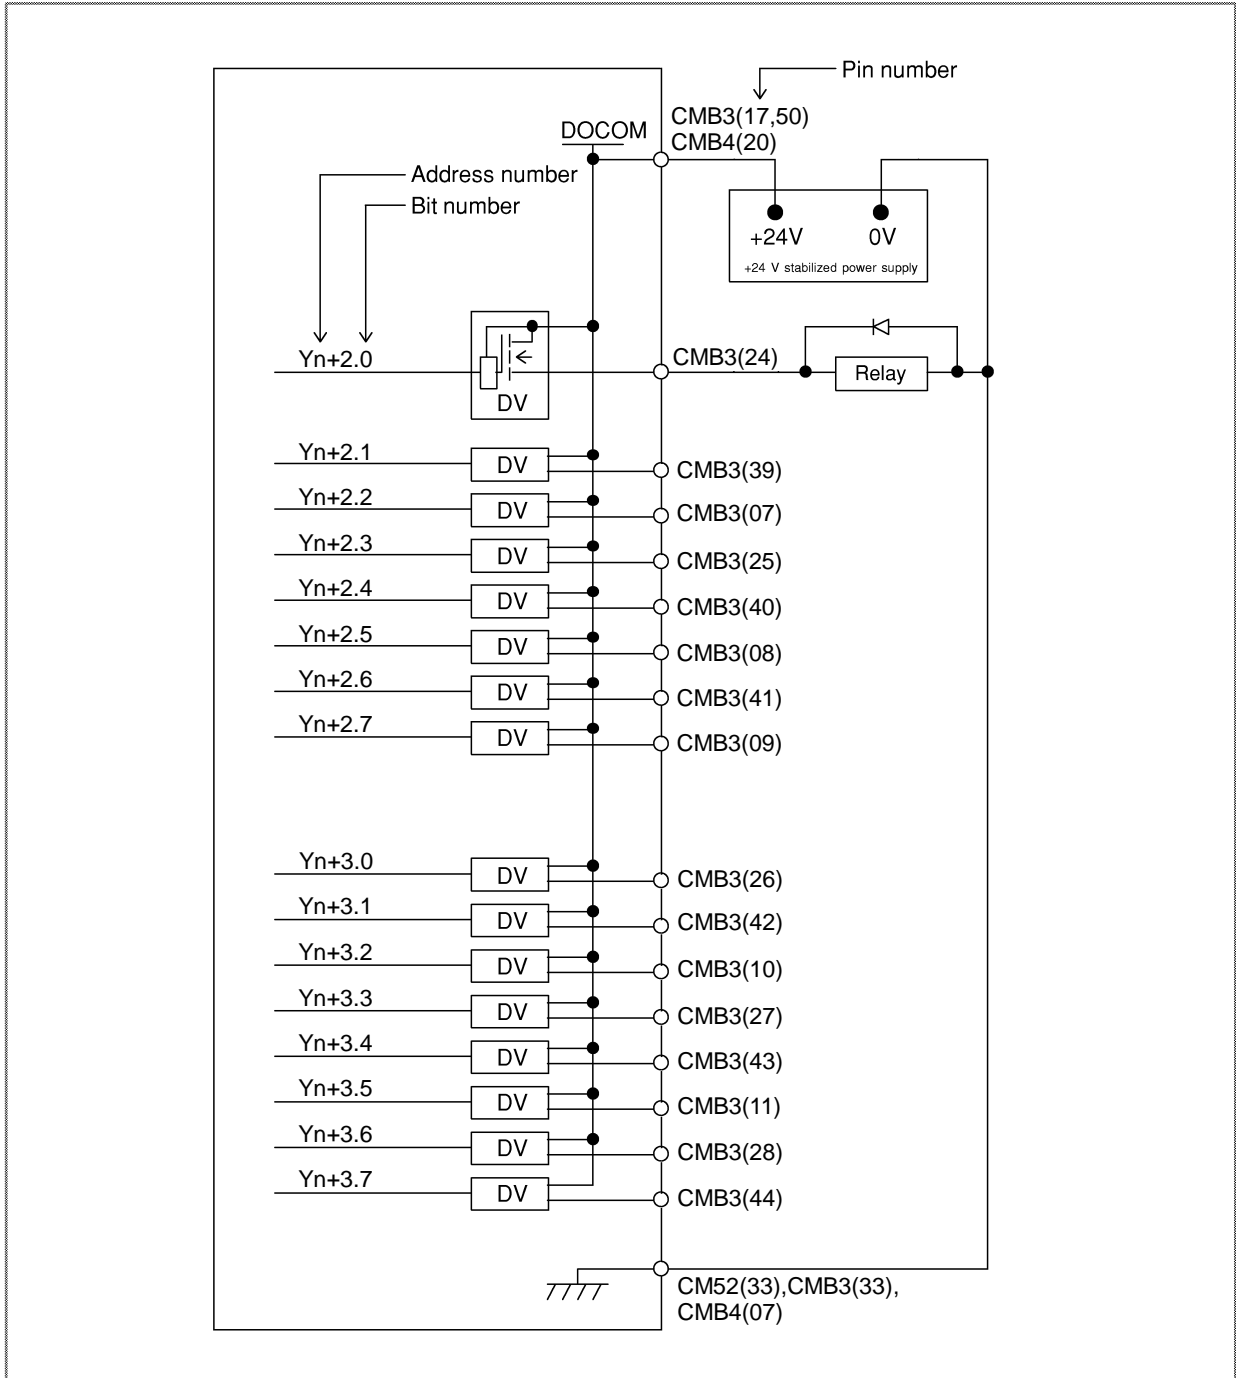

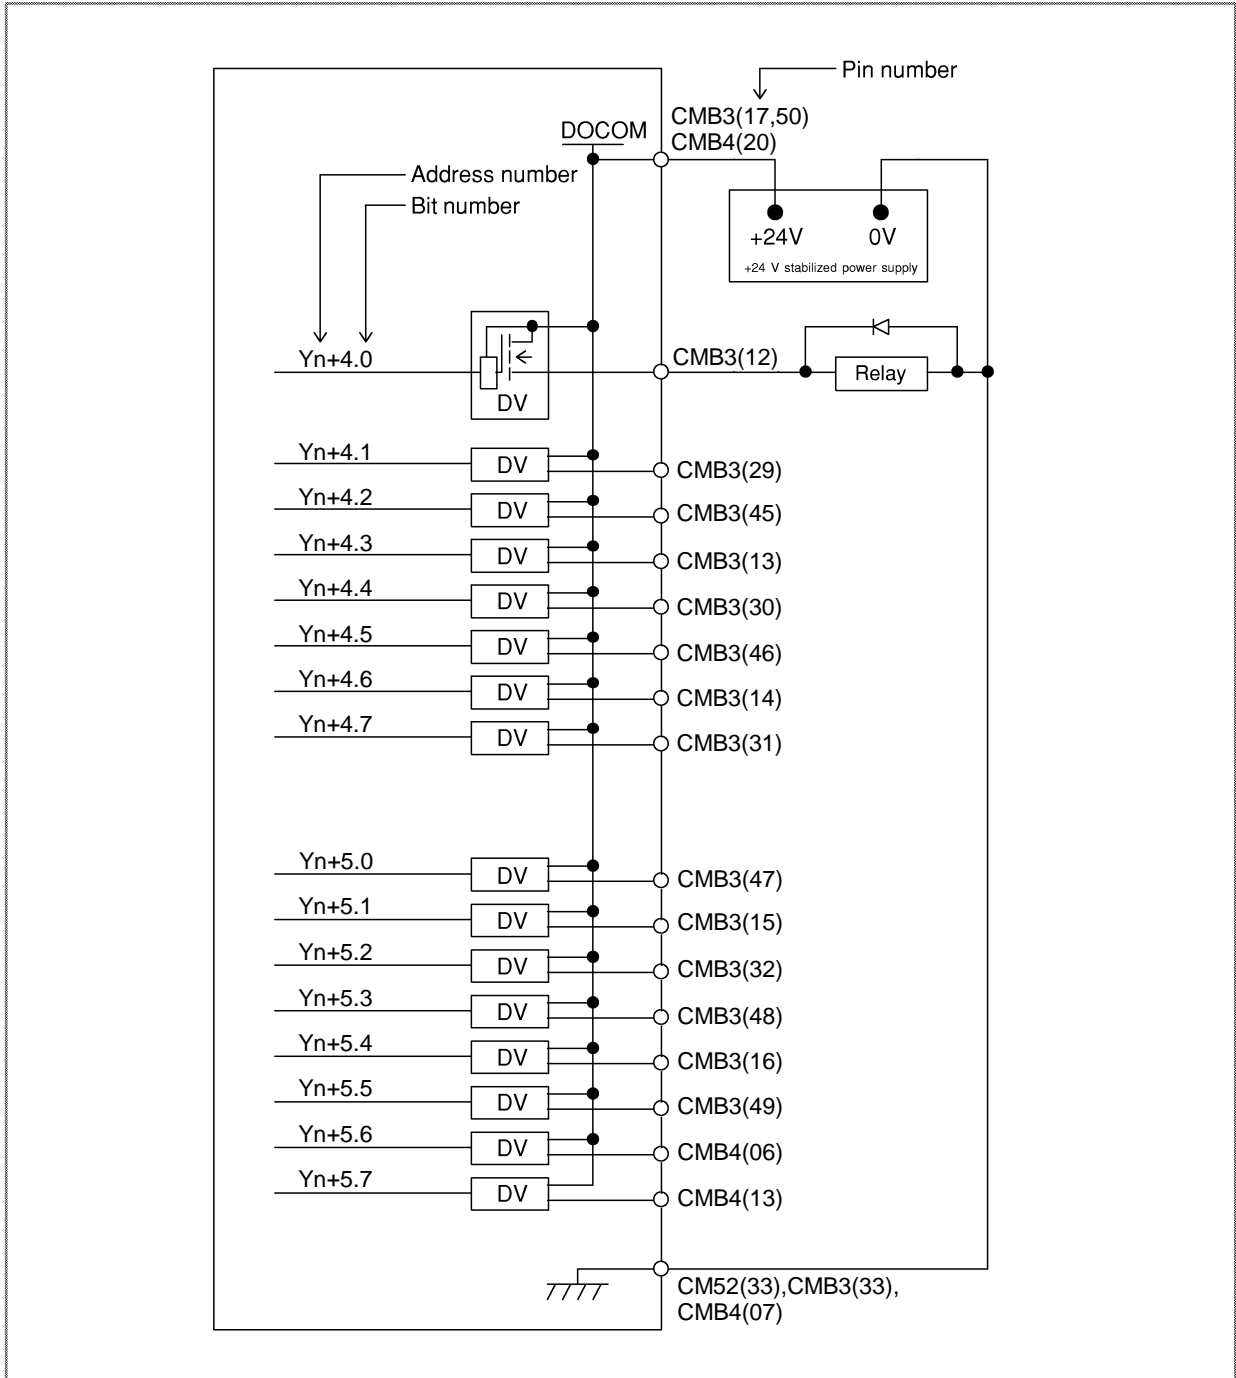

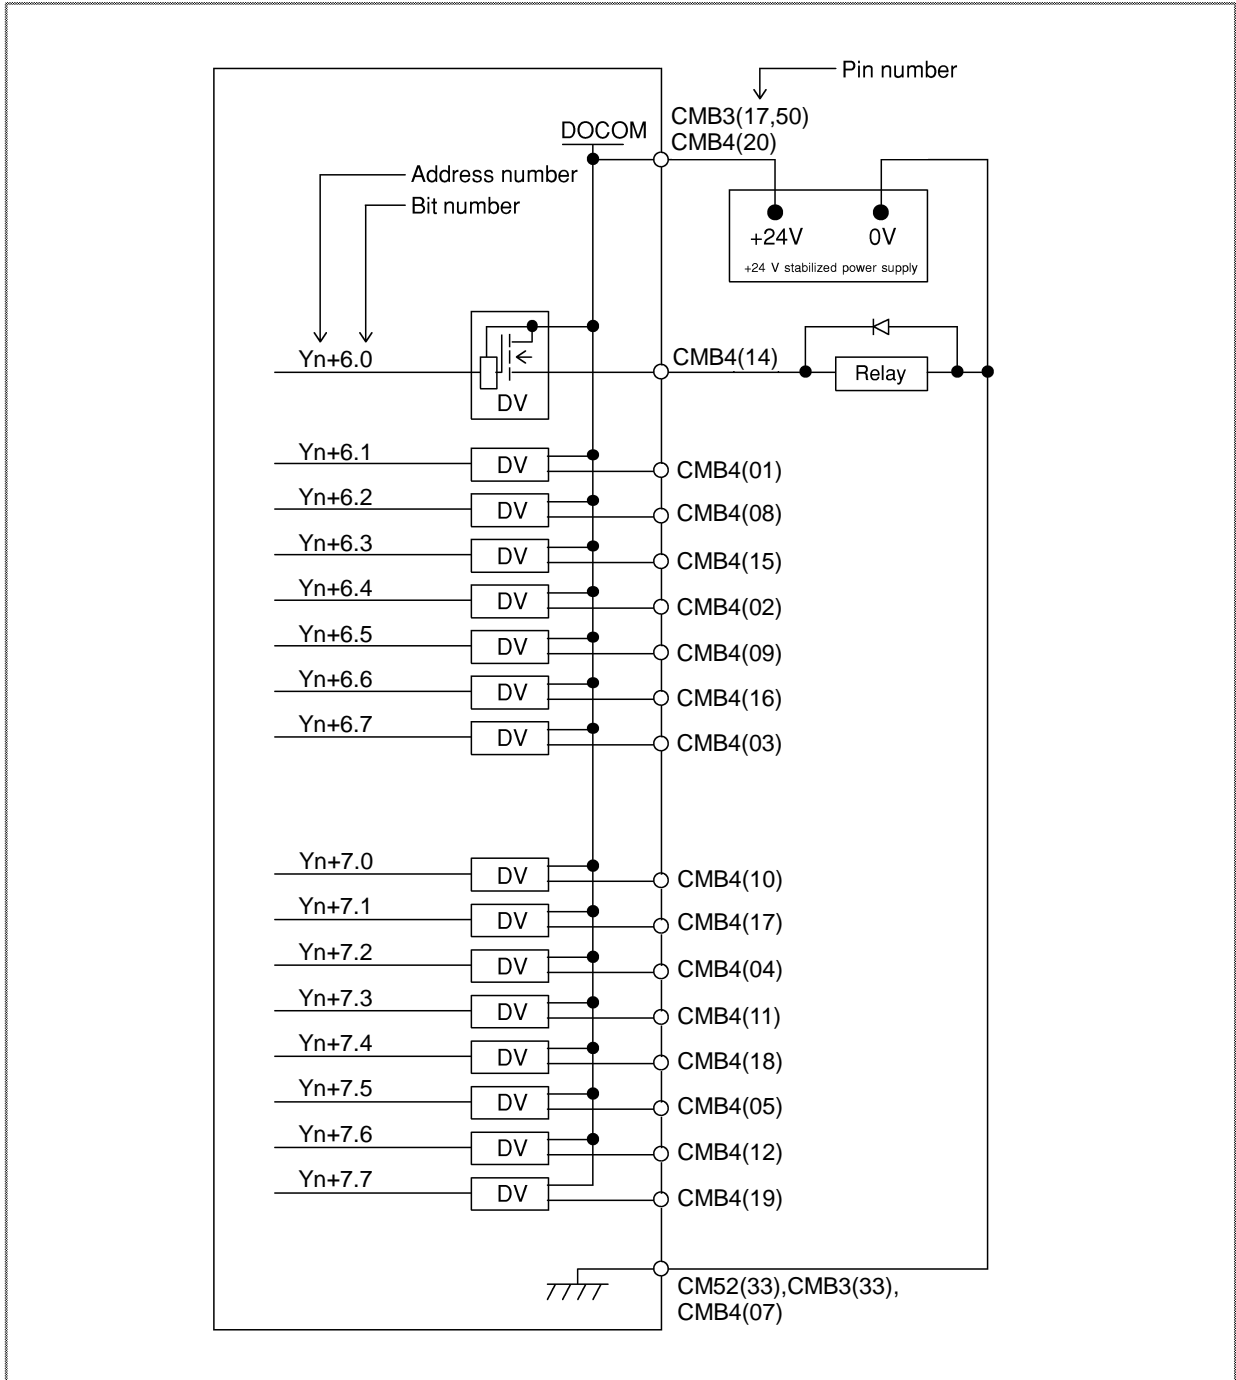

8.9.6 External View

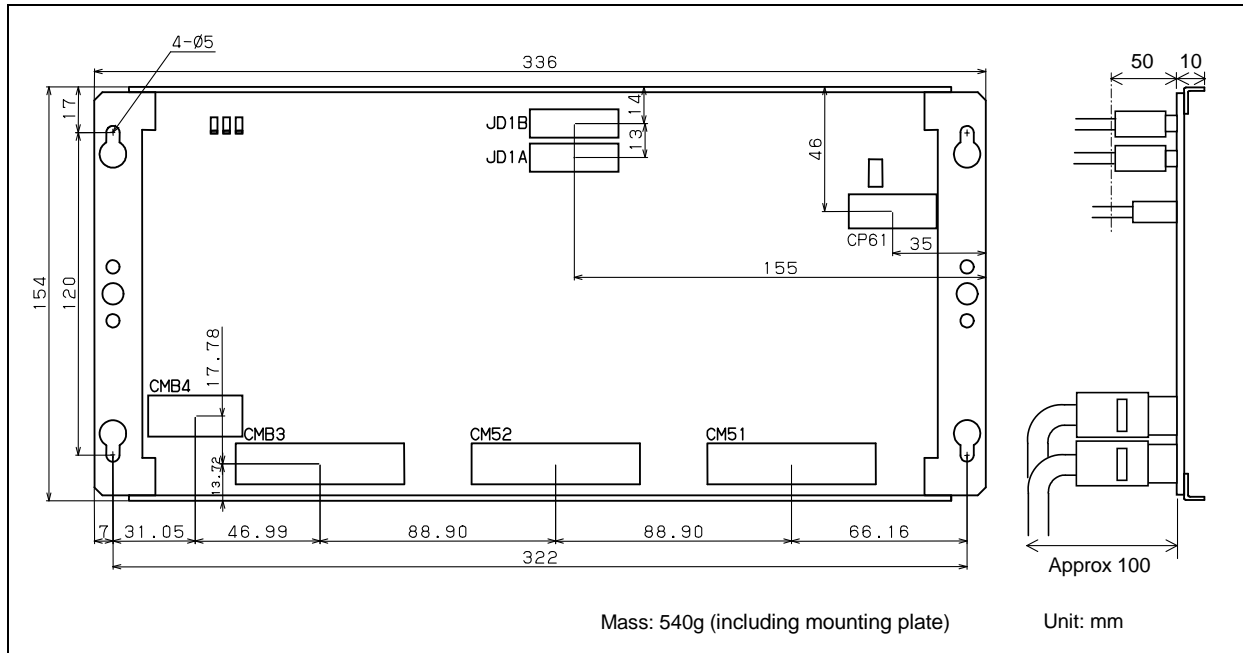

8.9.7 Specifications

Installation specifications

Install this unit in a fully enclosed cabinet.
 For other installation conditions, conform to the CNC installation conditions.

Specifications of operator's panel connection unit (source DO)

Item	Ordering specifications	Specification
Operator's panel connection unit (source DO)	A16B-2204-0260	DI : 96 points DO : 64 points
Operator's panel connection unit (source DO)	A16B-2204-0261	DI : 64 points DO : 32 points
Fuse (spare parts)	A02B-0163-K111	3.2A

Power supply rating

Supply voltage	Power supply rating	Remarks
24 VDC $\pm 10\%$ supplied from the power supply connector CP61. The allowance of $\pm 10\%$ should include instantaneous voltage and ripple voltage.	0.5A+7.3mA \times DI	DI = number of DI points in the ON state

NOTE

- The above power supply rating does not include that to be input to DOCOM for DO output.
- To connect an optical adapter for the I/O Link *i* to both connectors JD1A and JD1B, the above power supply rating + 70 mA is required.

DI (input signal specifications)

Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1 mA or less (26.4 V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)
Delay time	The receiver delay time is 22 ms (maximum). In addition, [I/O Link transfer time between CNC and this unit] and [ladder scan period (depending on CNC)] must be considered.

DO (output signal specifications)

Maximum load current when ON	200 mA or less including momentary current per signal. 6.0 A or less for DO signals in all (For A16B-2204-0260) 4.0 A or less for DO signals in all (For A16B-2204-0261)
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and this unit] and [ladder scan period (depending on CNC)] must be considered.


NOTE

Be sure to connect all DO power supply pins DOCOM. The maximum current that is allowed to pass to each DOCOM terminal pin is 2.0 A, and care must be paid to prevent the sum of the load current from exceeding the current that is allowed to pass via the DOCOM terminal.

8.9.8 Other Notes

Address allocation

For this unit, I/O addresses are mapped as follows.

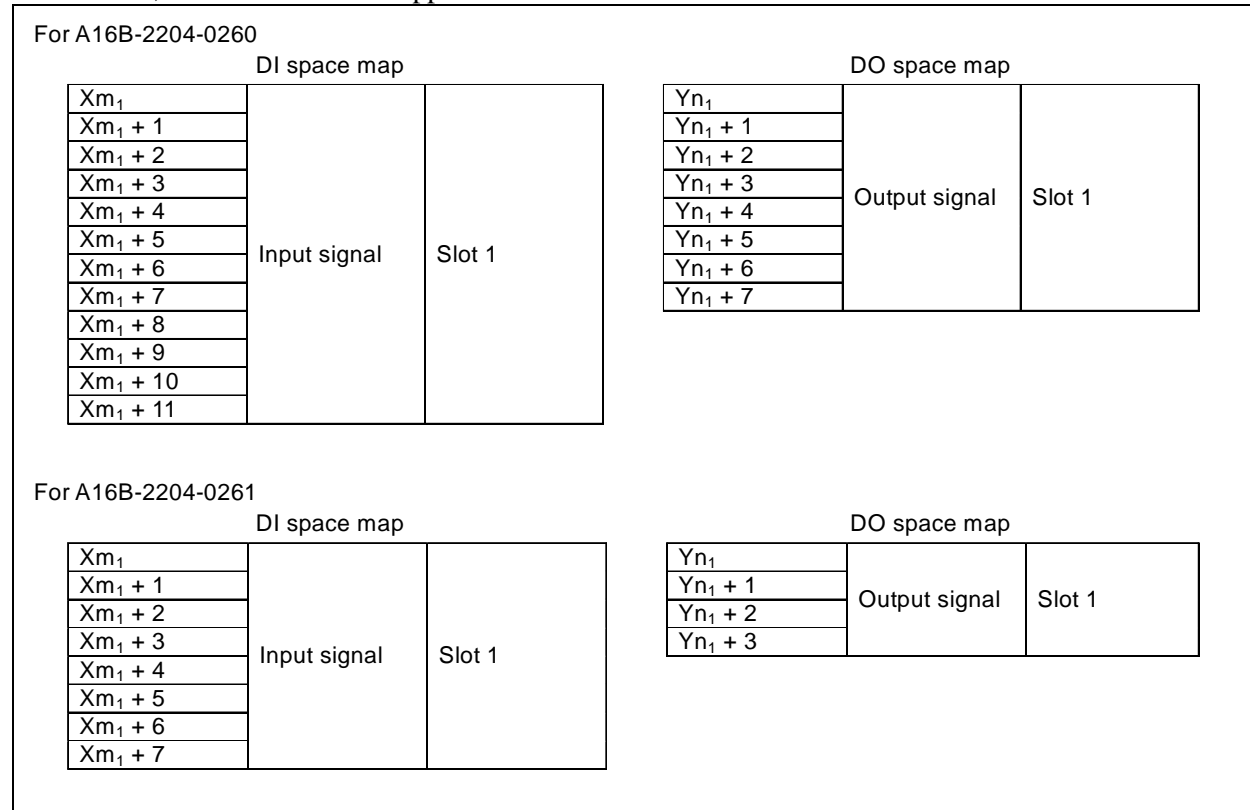

Xm₁ and Yn₁ indicate the start address at allocation.

Basically, for this unit, allocate 12-byte DI addresses to slot 1 and 8-byte DO addresses to slot 1 for A16B-2204-0260, or 8-byte DI addresses to slot 1 and 4-byte DO addresses to slot 1 for A16B-2204-0261.

ON/OFF of the power supply (DO common) for DO signals (output signals)

For ON/OFF of the power supply pin (DOCOM) for the DO signals (output signals), see Subsection 8.2.4.4.

Parallel DO (output signal) connection

For parallel connections of DO signals (output signals), see Subsection 8.2.4.4.

DO (output signal) alarm detection

The DO driver of this unit capable of detecting an overcurrent and measuring its own temperature. If an accident, such as the connecting of the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal for the relevant 1 byte in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O continues operating without entering the alarm status, but the DO driver which detected the error can be checked. If a DO error occurs, this information can be checked on the CNC DGN screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

A DO error such as a ground fault is detected for each point. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and

corresponding DO data related to a status alarm. When an alarm data bit is set to “1”, the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, “Status Alarm”.

Information output to the system relay area and corresponding location where an error occurred
For A16B-2204-0260

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Yn	0th byte DO
				1	Yn+1	1st byte DO
				2	Yn+2	2nd byte DO
				3	Yn+3	3rd byte DO
				4	Yn+4	4th byte DO
				5	Yn+5	5th byte DO
				6	Yn+6	6th byte DO
				7	Yn+7	7th byte DO

For A16B-2204-0261

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5, 9	1	0	Yn	0th byte DO
				1	Yn+1	1st byte DO
				2	Yn+2	2nd byte DO
				3	Yn+3	3rd byte DO

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Yn indicates the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

For A16B-2204-0261

Alarm detection address and bit	DO address	Remarks
Xm+15.0	Yn+0	
Xm+15.1	Yn+1	
Xm+15.2	Yn+2	
Xm+15.3	Yn+3	
Xm+15.4	—	Reserved
Xm+15.5	—	Reserved
Xm+15.6	—	Reserved
Xm+15.7	—	Reserved


8.10 CONNECTION OF SAFETY IO UNIT

8.10.1 Overview

Safety IO unit is a unit which can be used only with I/O Link *i*, and has the interface to connect duplicated input and output signals from the safety circuit when the Dual Check Safety (DCS) function is used.


⚠ CAUTION
 Safety IO unit is a unit dedicated to I/O Link *i*. It cannot be used for I/O Link connection.

8.10.2 Total connection diagram

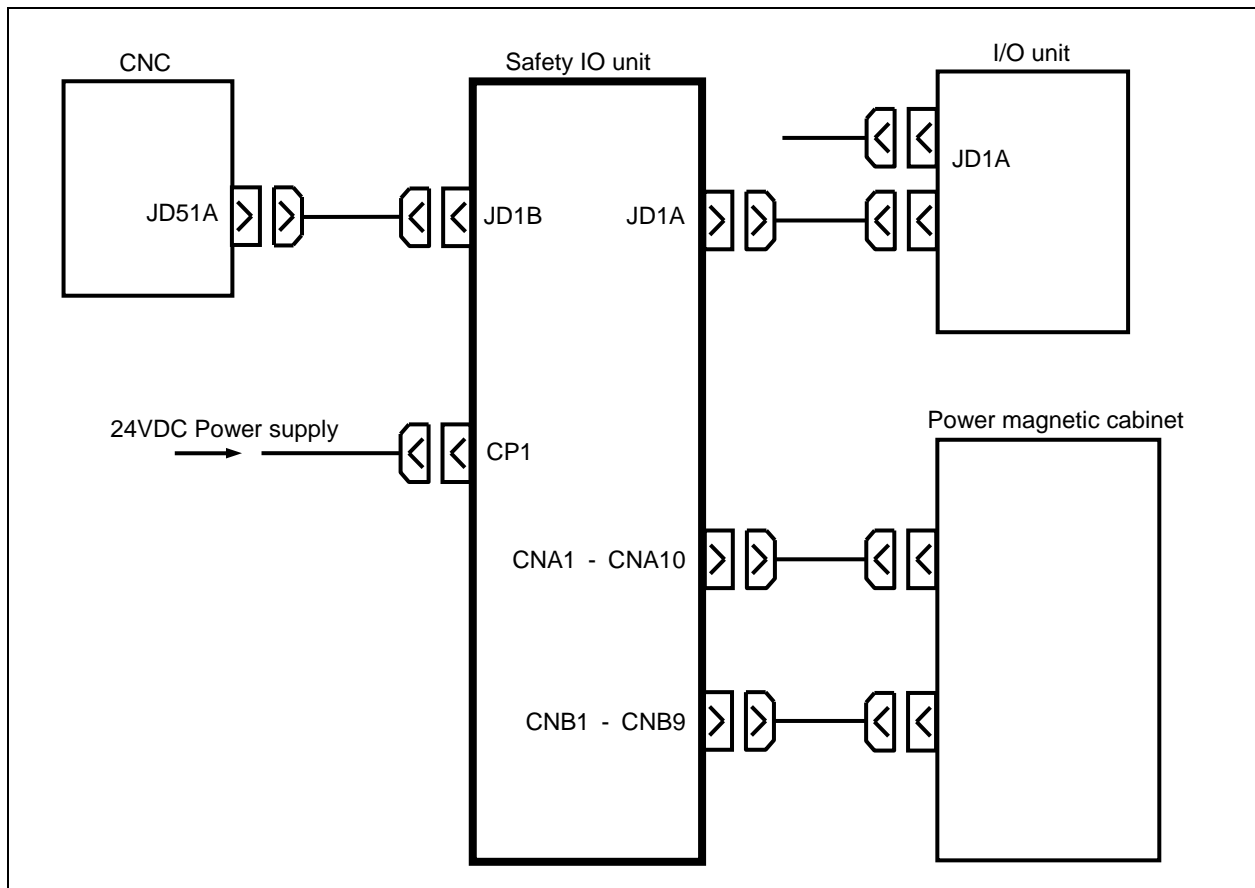

8.10.3 Power supply connection

The power required for the operation of this safety IO unit and for DI/DO must be supplied to connector CP1 in the following figure.

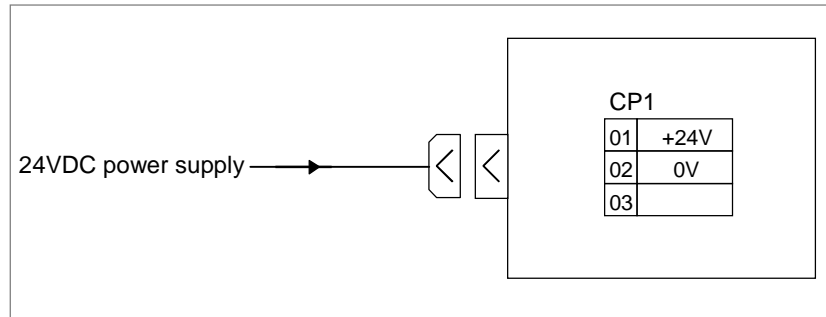


8.10.4 I/O Link *i* Connection

For I/O Link *i* connection, see Section 7.2.


8.10.5 DI/DO Address

Safety IO unit must be used in “safety I/O mode”, and allocated to two continuous groups of I/O Link *i*. In I/O Link *i*, allocate 6-byte DI address and 2-byte DO address to slot 1 of 1st group as PMC DI/DO, and allocate 4-byte DI address and 2-byte DO address to slot 1 of 2nd group as DCSPMC DI/DO. DI/DO addresses are as follows.

• **1st group (PMC DI/DO) address**

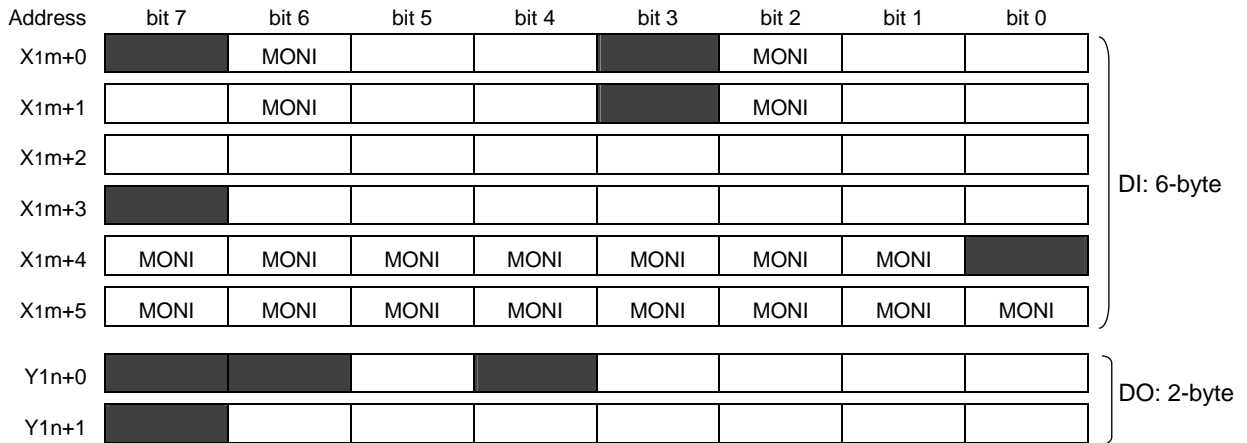

• **2nd group (DCSPMC DI/DO) address**

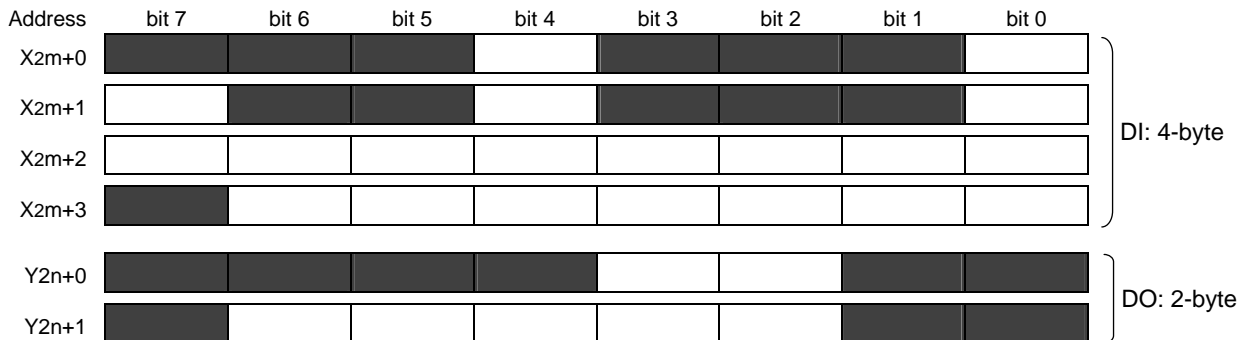

NOTE

- 1 DI shaded by ■ cannot use.
- 2 DI written “MONI” is signal to monitor DO status. So it cannot be used as an input signal from machine side.

8.10.6 Pin assignment of DI/DO

CNA1

	B	A
01	X1m+0.0	0V
02	X1m+0.1	X2m+0.0
03	Y1n+0.0 (X1m+0.2)	
04	+24V	+24V

CNA2

	B	A
01		0V
02	X1m+2.0	X2m+2.0
03		+24V

CNA3

	B	A
01	X1m+2.6	0V
02	X2m+2.6	+24V
03	+24V	+24V

CNA4

	B	A
01	X1m+0.4	0V
02	X1m+0.5	X2m+0.4
03	Y1n+1.0 (X1m+0.6)	
04	+24V	+24V

CNA5

	B	A
01		0V
02	X1m+2.1	X2m+2.1
03		+24V

CNA6

	B	A
01	X1m+2.7	0V
02	X2m+2.7	+24V
03	+24V	+24V

CNA7

	B	A
01	X1m+1.0	0V
02	X1m+1.1	X2m+1.0
03	Y1n+0.1 (X1m+1.2)	
04	+24V	+24V

CNA8

	B	A
01	X1m+2.2	0V
02	X1m+2.3	X2m+2.2
03	X1m+2.4	X2m+2.3
04	Y2n+1.2 (X1m+4.1)	X2m+2.4
05	+24V	+24V
06	+24V	+24V

CNA9

	B	A
01	X1m+2.5	0V
02	Y1n+0.5 (X1m+4.2)	X2m+2.5
03	+24V	+24V

CNA10

	B	A
01	X1m+1.4	0V
02	X1m+1.5	X2m+1.4
03	Y1n+1.1 (X1m+1.6)	
04	+24V	+24V

CNB1

	B	A
01	Y1n+1.4 (X1m+5.0)	0V
02	X1m+3.4	X2m+3.4
03	Y2n+1.4 (X1m+5.1)	+24V

CNB2

	B	A
01	X1m+3.5	0V
02	Y1n+1.5 (X1m+5.2)	Y2n+1.5 (X1m+5.3)
03	X2m+3.5	+24V

CNB3

	B	A
01	X1m+3.6	0V
02	Y1n+1.6 (X1m+5.4)	Y2n+1.6 (X1m+5.5)
03	X2m+3.6	+24V

CNB4

	B	A
01	X1m+3.0	0V
02	X2m+3.0	+24V
03	+24V	+24V

CNB5

	B	A
01	X1m+3.1	0V
02	X2m+3.1	+24V
03	+24V	+24V

CNB6

	B	A
01	X1m+3.2	0V
02	X2m+3.2	+24V
03	+24V	+24V

CNB7

	B	A
01	X1m+1.7	0V
02	Y1n+0.2 (X1m+4.3)	Y2n+0.2 (X1m+5.6)
03	X2m+1.7	+24V

CNB8


	B	A
01	X1m+3.3	0V
02	Y1n+1.3 (X1m+4.5)	Y2n+1.3 (X1m+5.7)
03	X2m+3.3	+24V

CNB9


	B	A
01	0V	0V
02	Y2n+0.3 (X1m+4.7)	Y1n+0.3 (X1m+4.4)
03	Y1n+1.2 (X1m+4.6)	0V

- X1m, Y1n: PMC DI/DO
- X2m, Y2n: DCSPMC DI/DO
- Signals in () are DI to monitor DO status. When DO is ON, DI in () is "1". When DO is OFF, DI in () is "0".


8.10.7 DI/DO connection

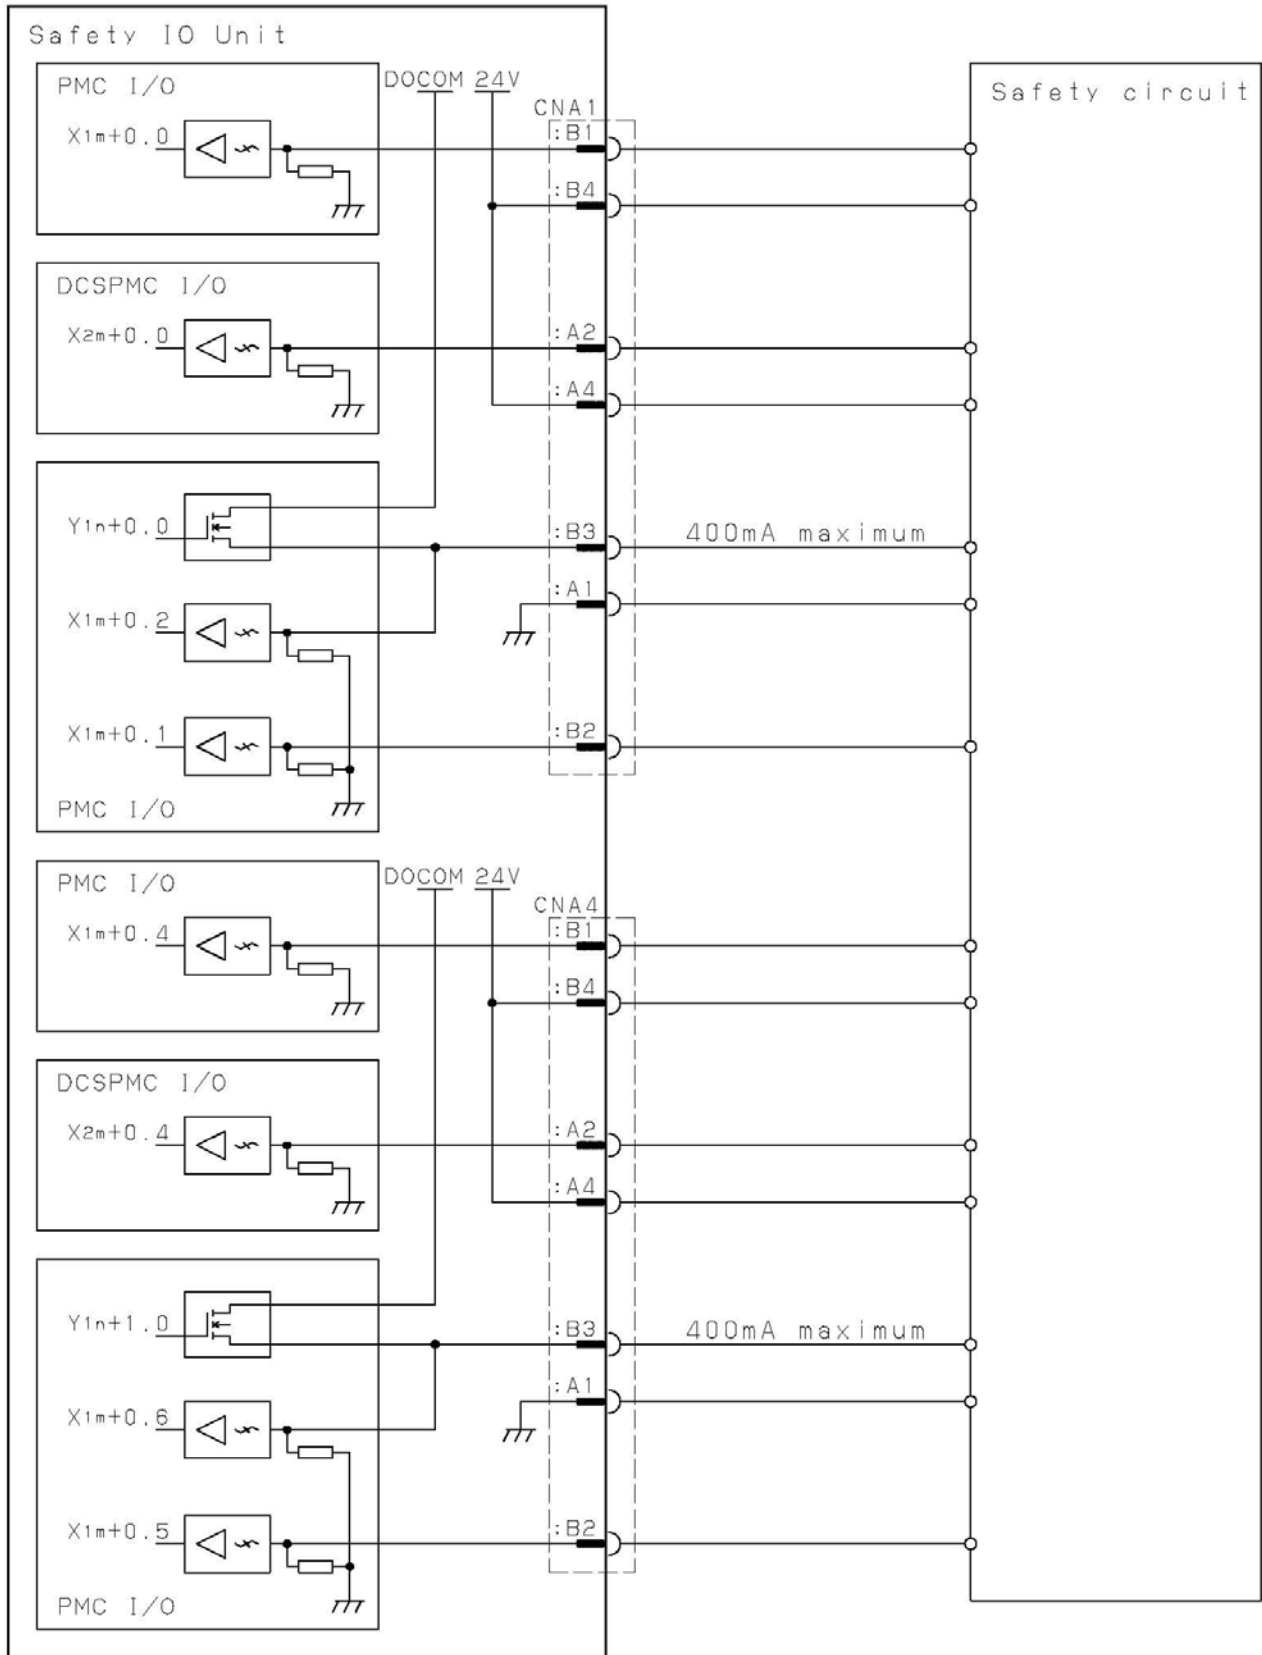


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

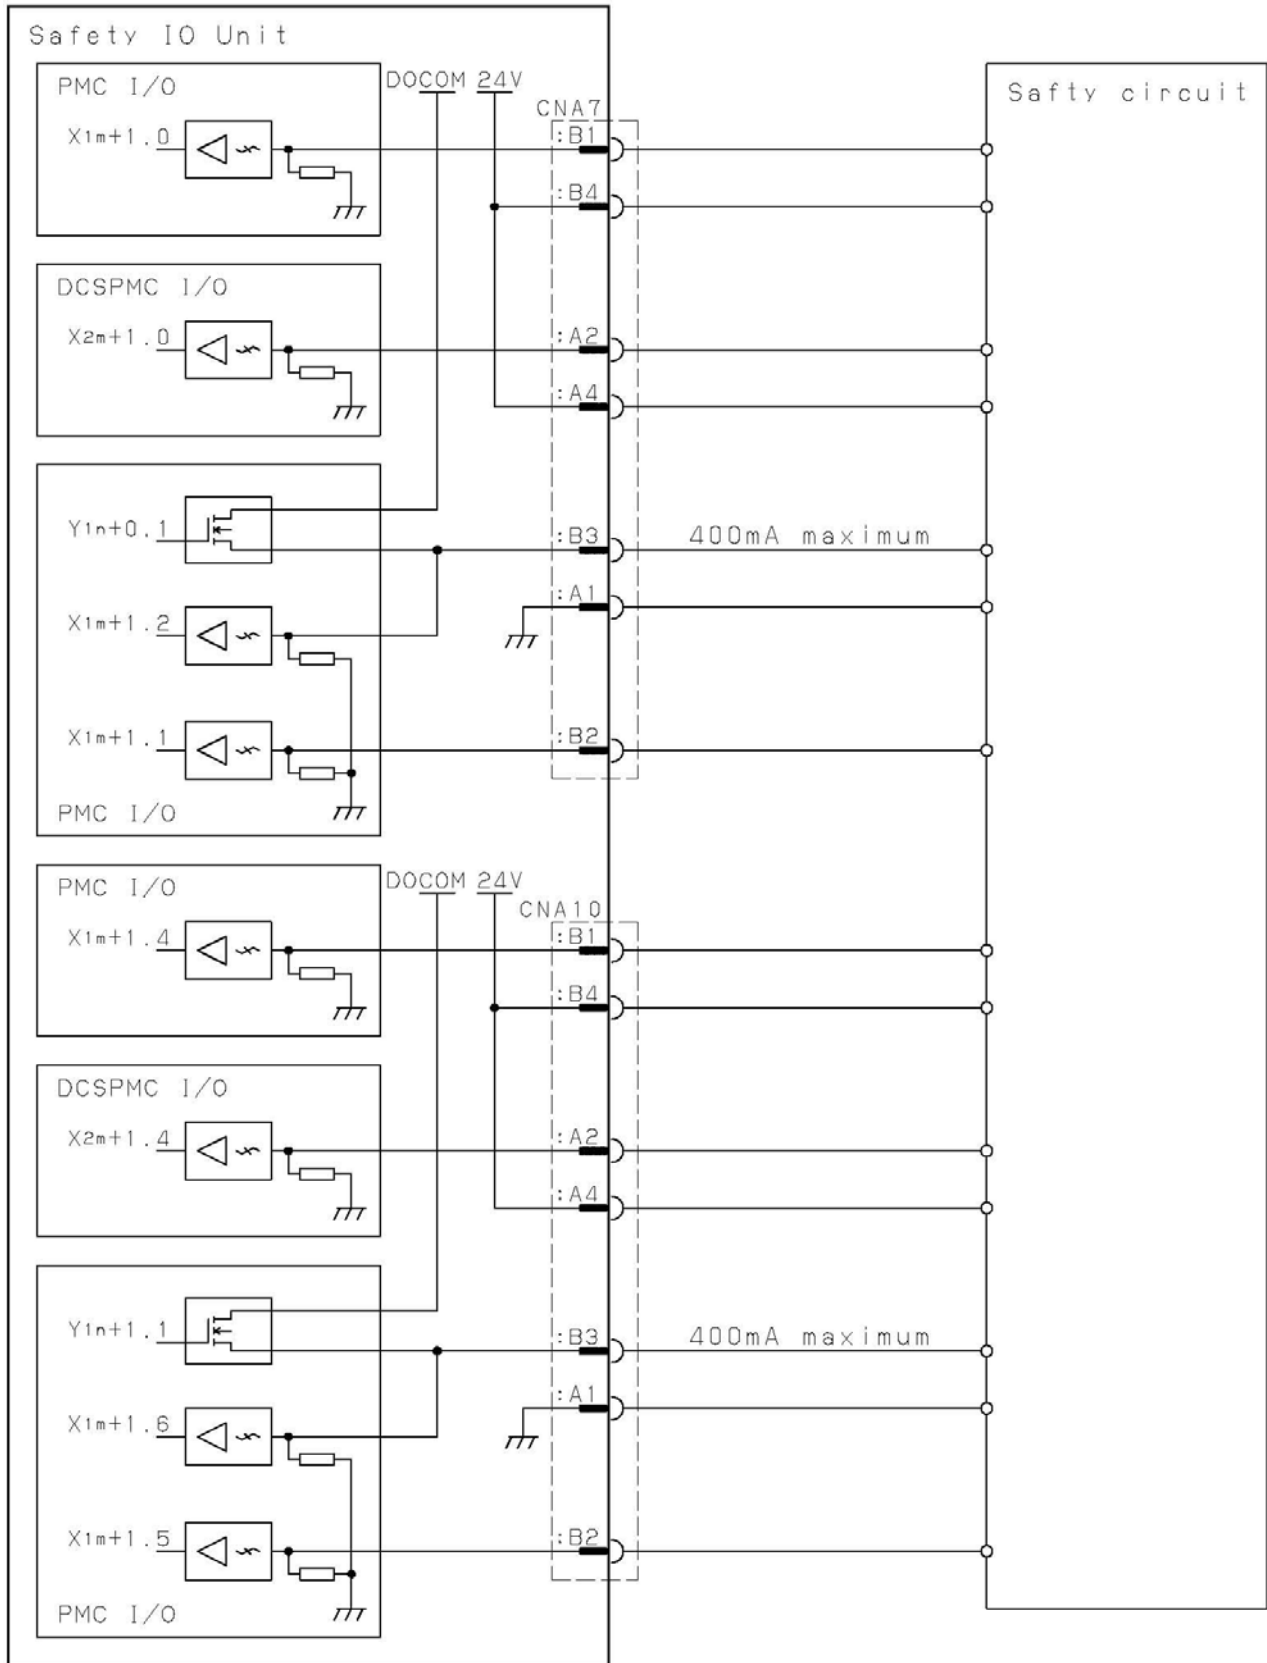


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

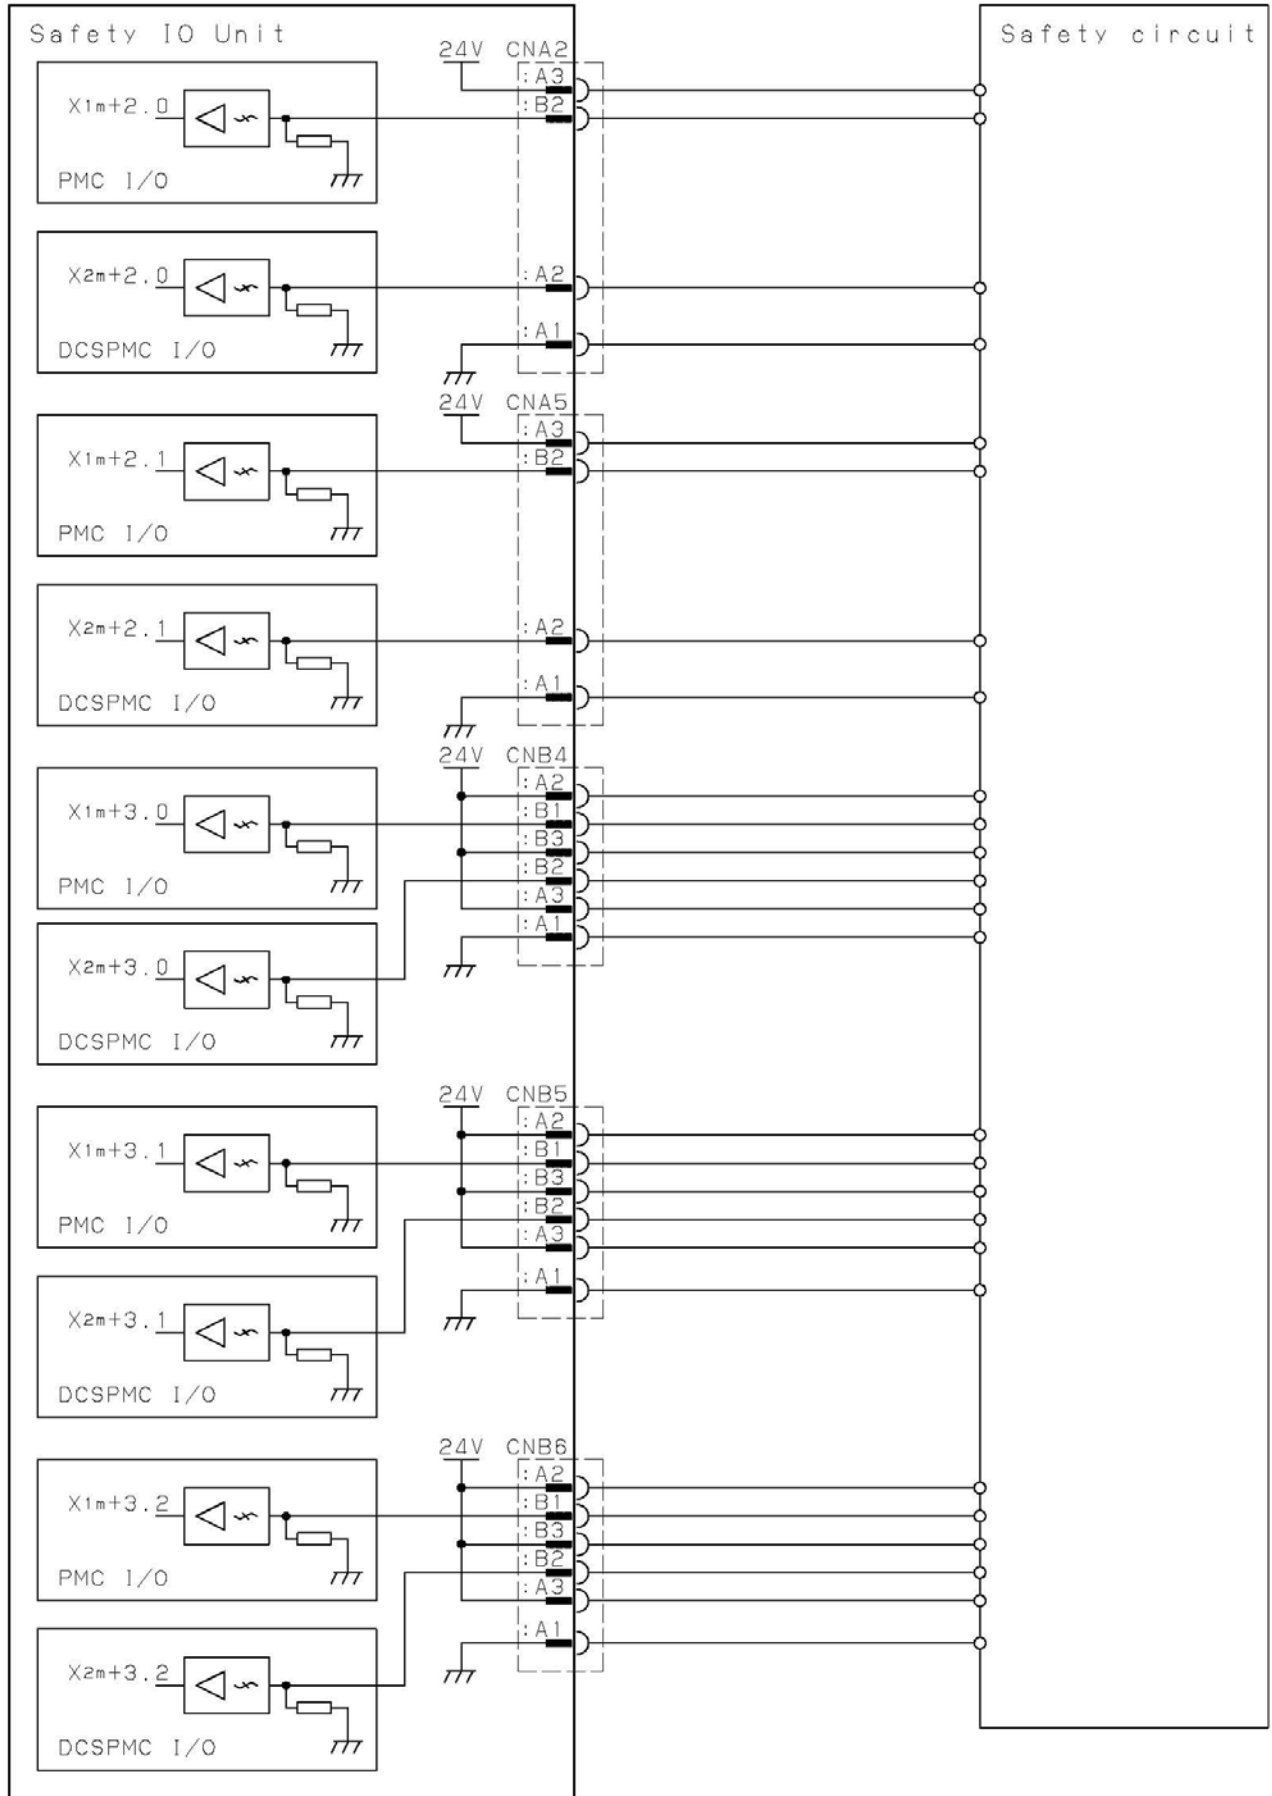


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

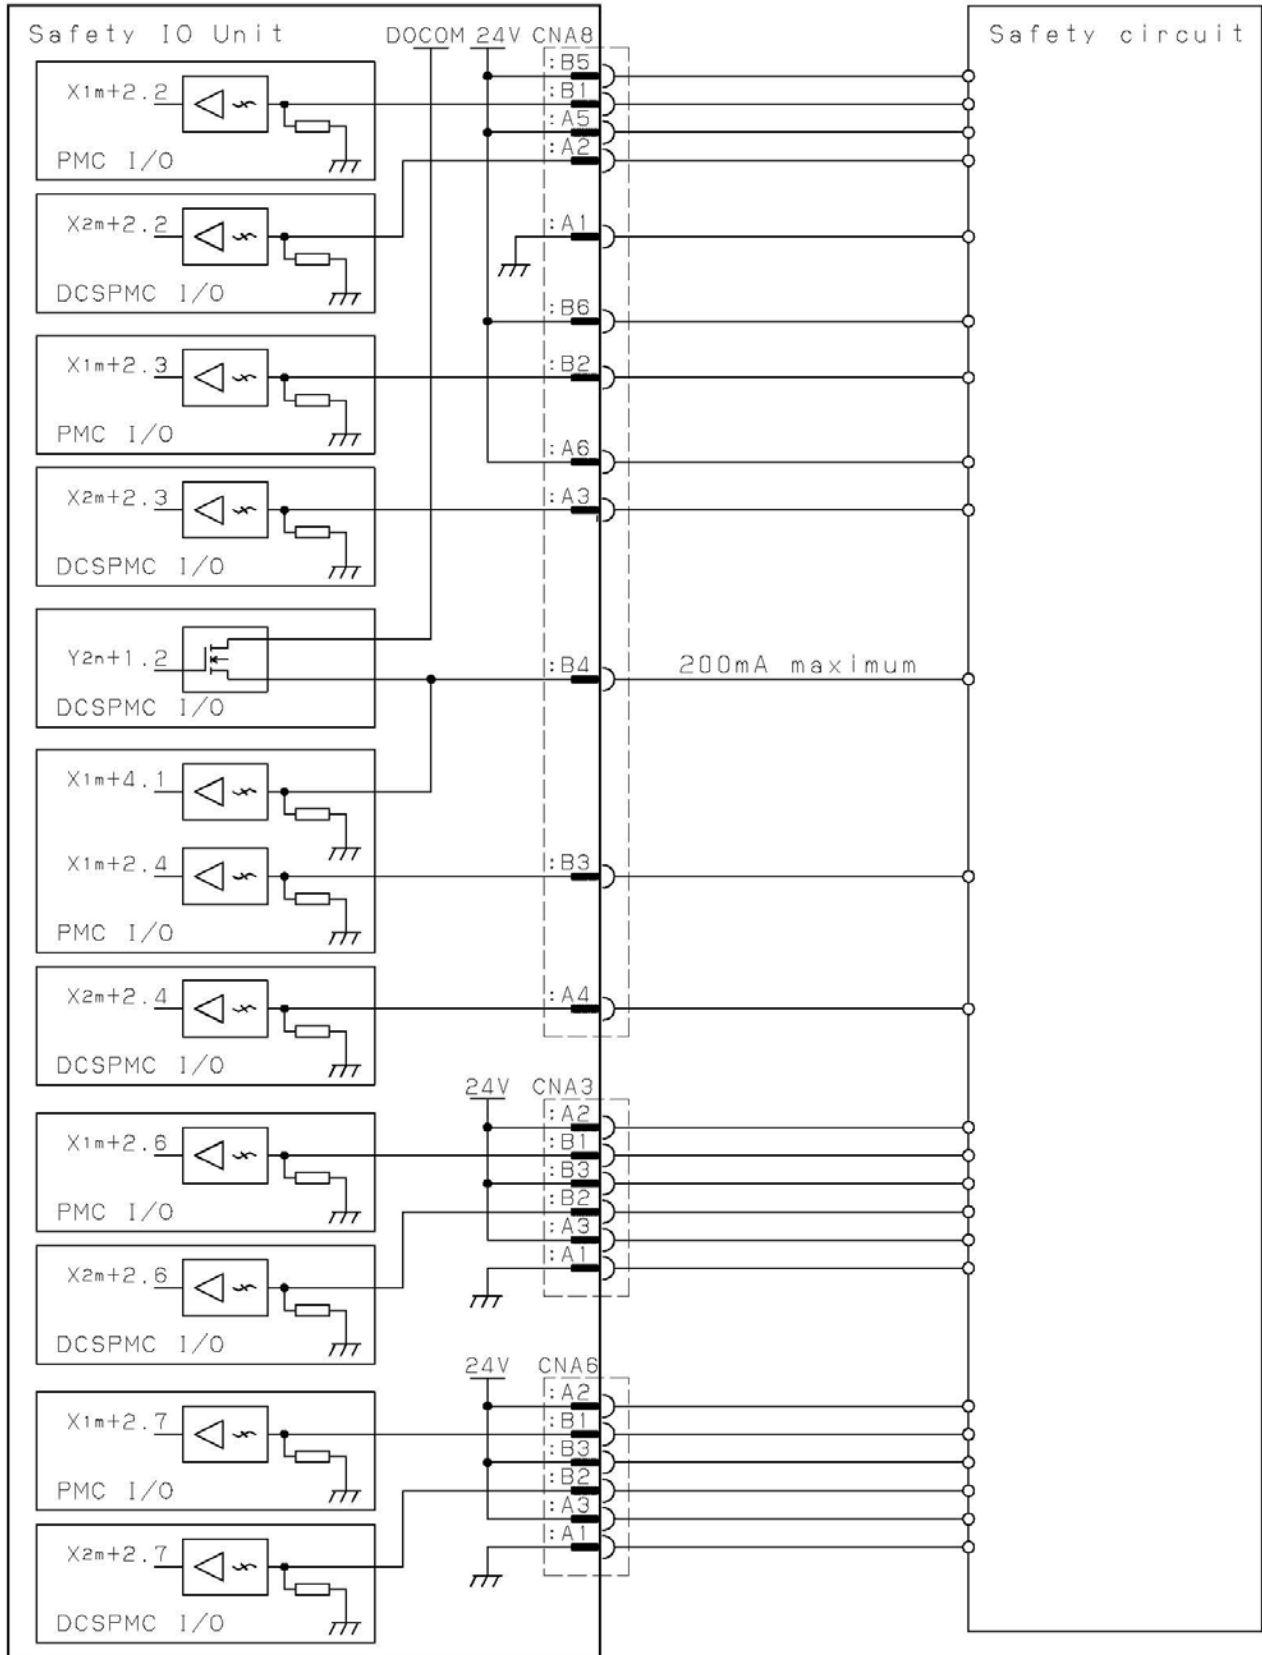


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

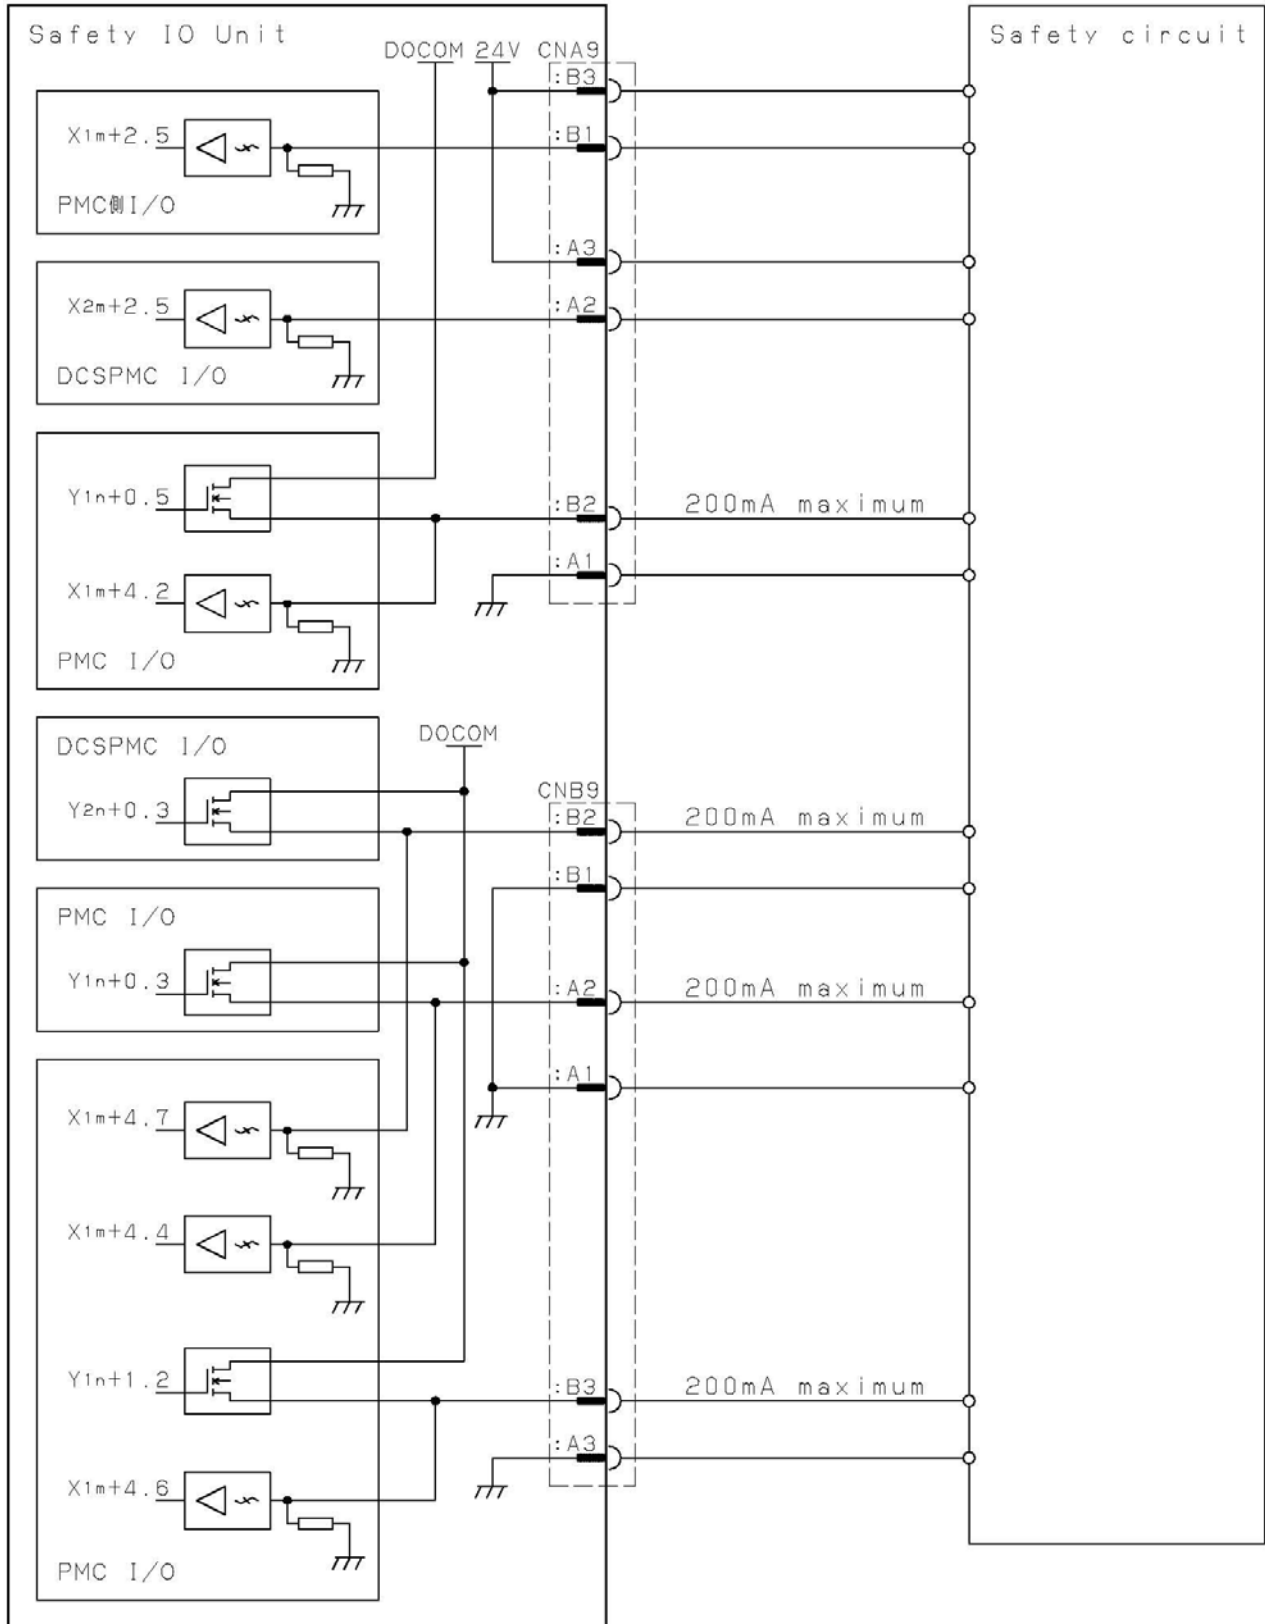


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

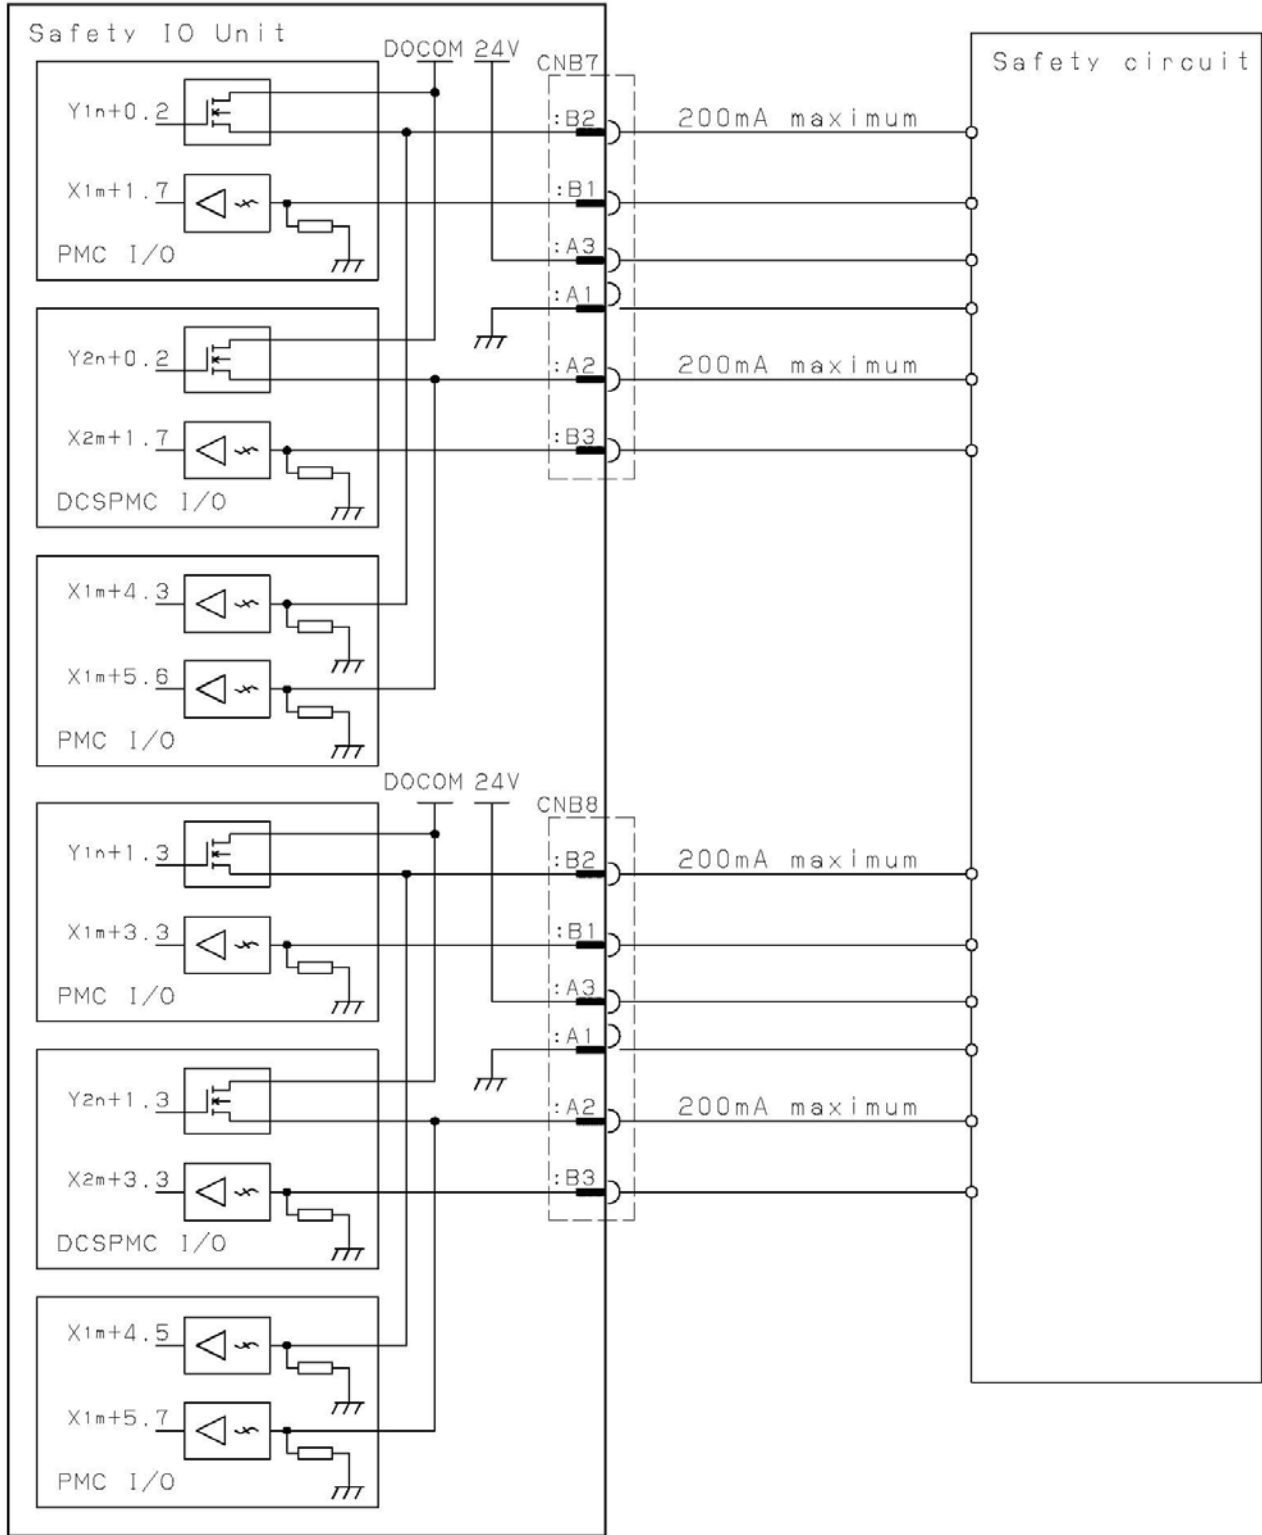

Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.


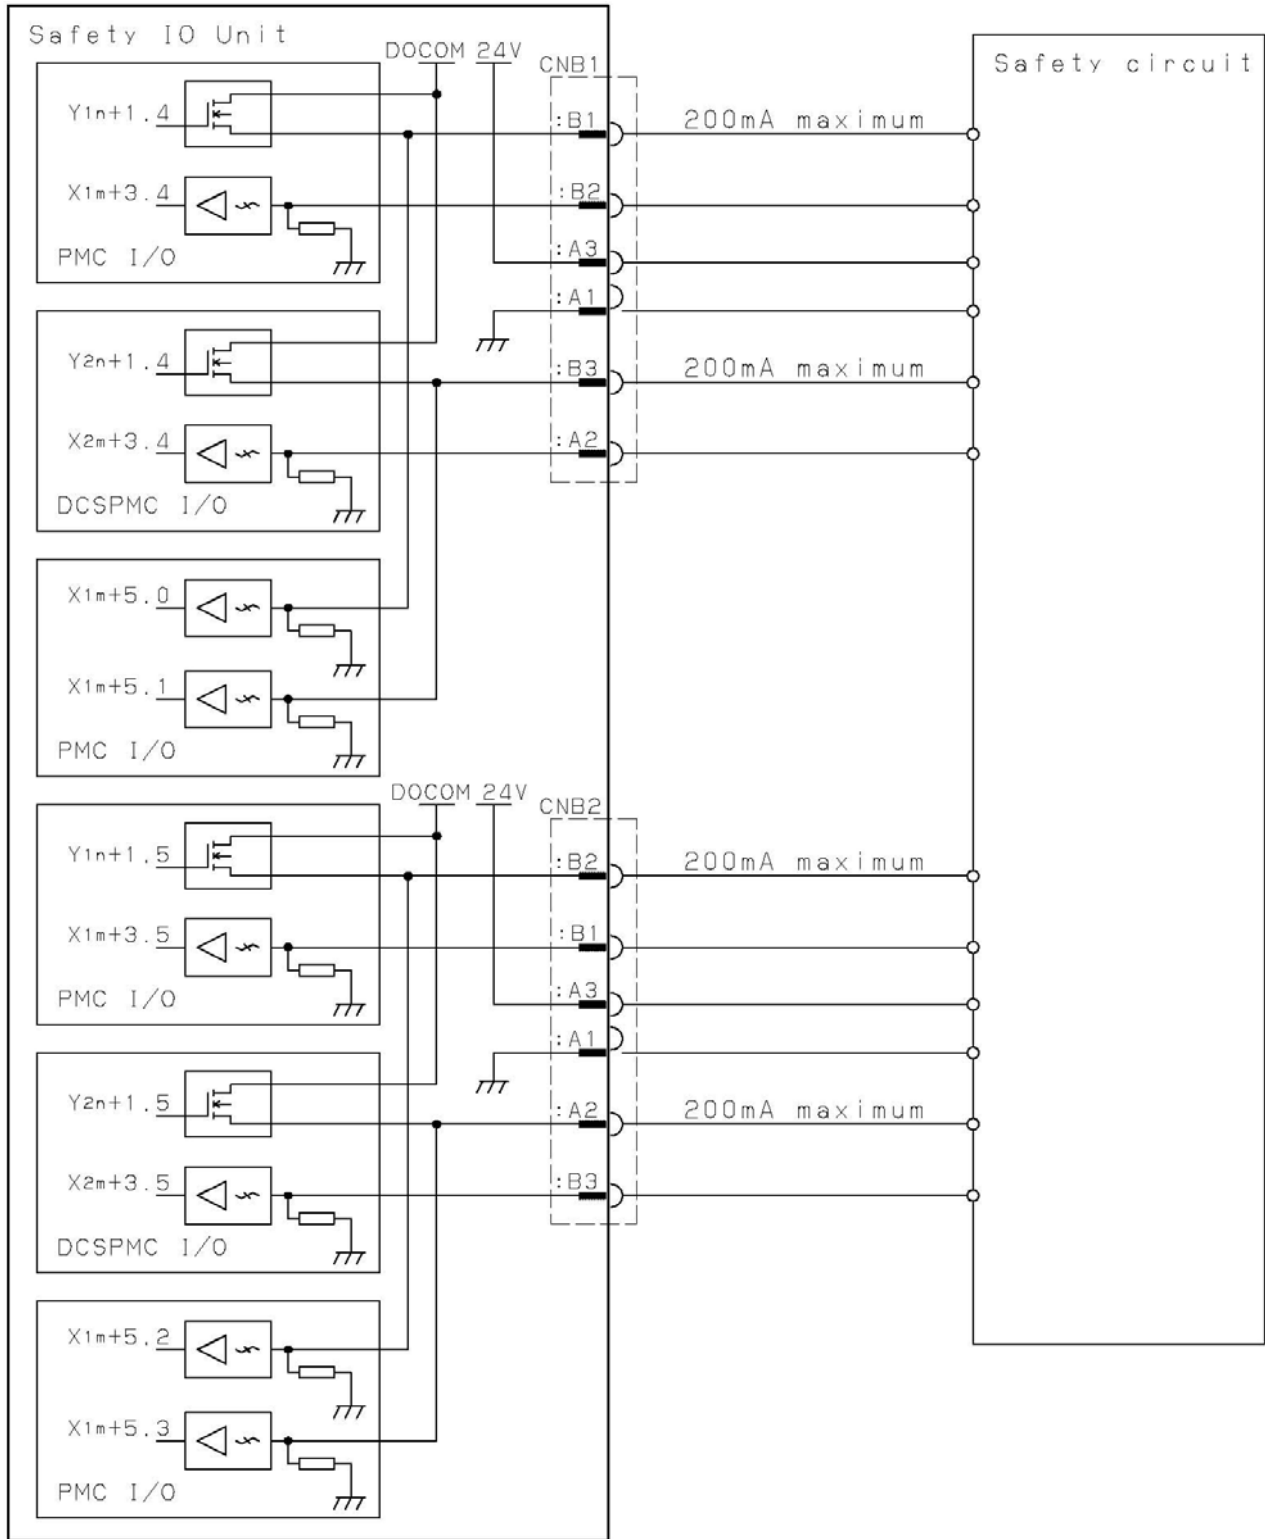


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

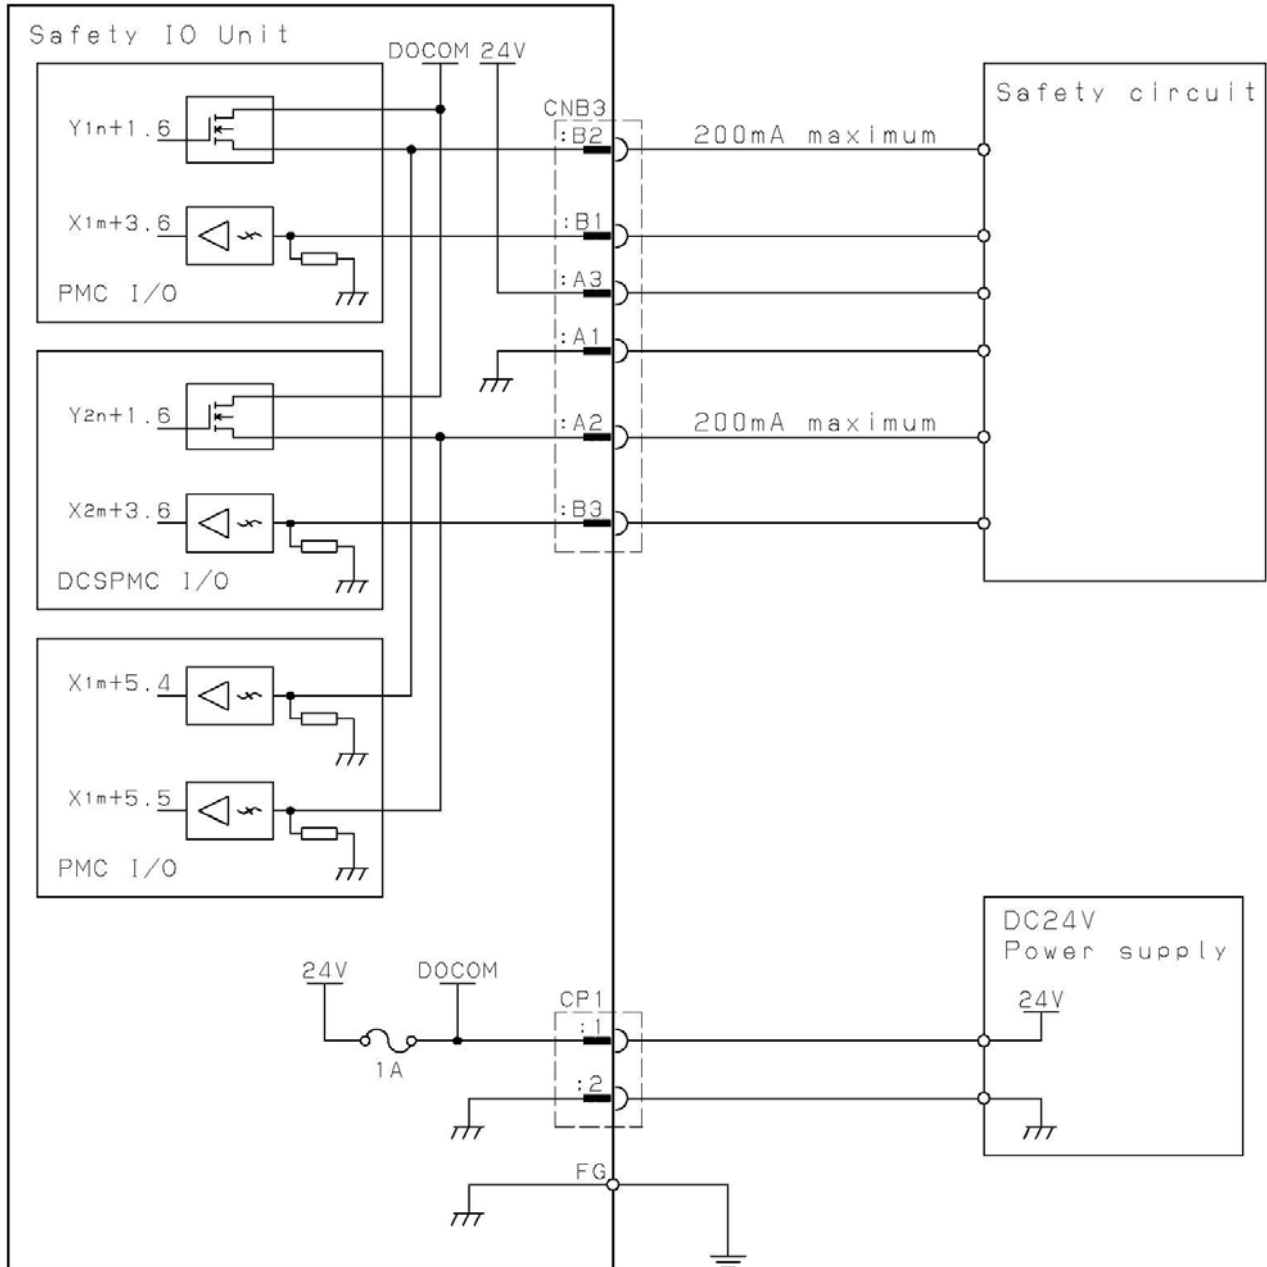


Duplicated input and output signals are connected to Safety IO Unit as PMC I/O and DCSPMC I/O.

8.10.8 Outline of Safety IO Unit

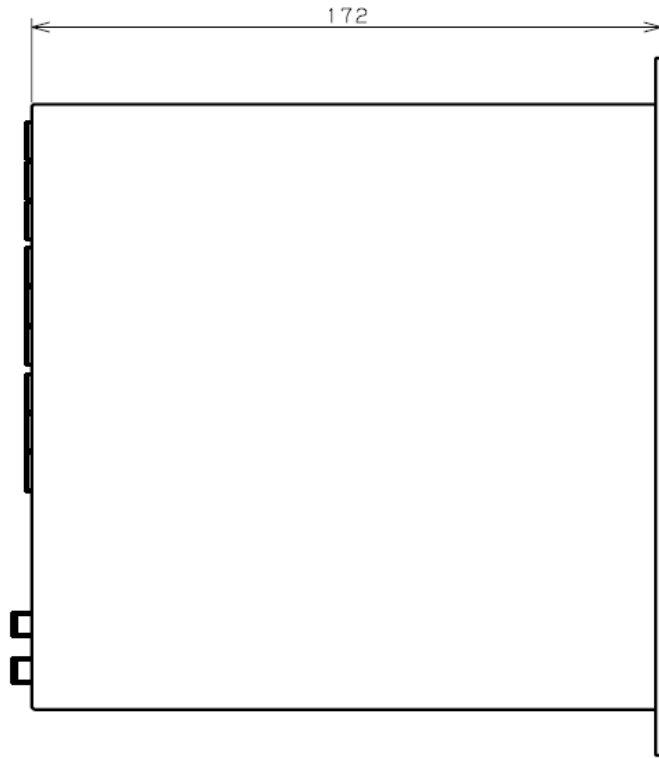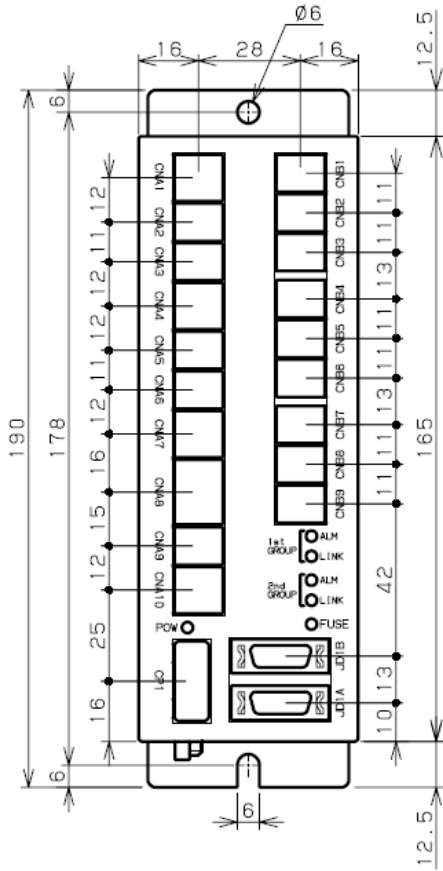


Weight: 1.4Kg

Unit: mm

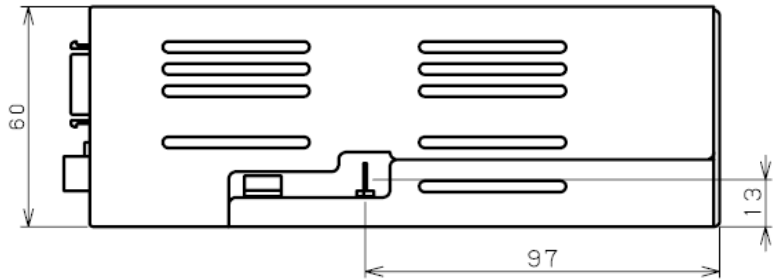


8.10.9 Connector locations of Safety IO Unit

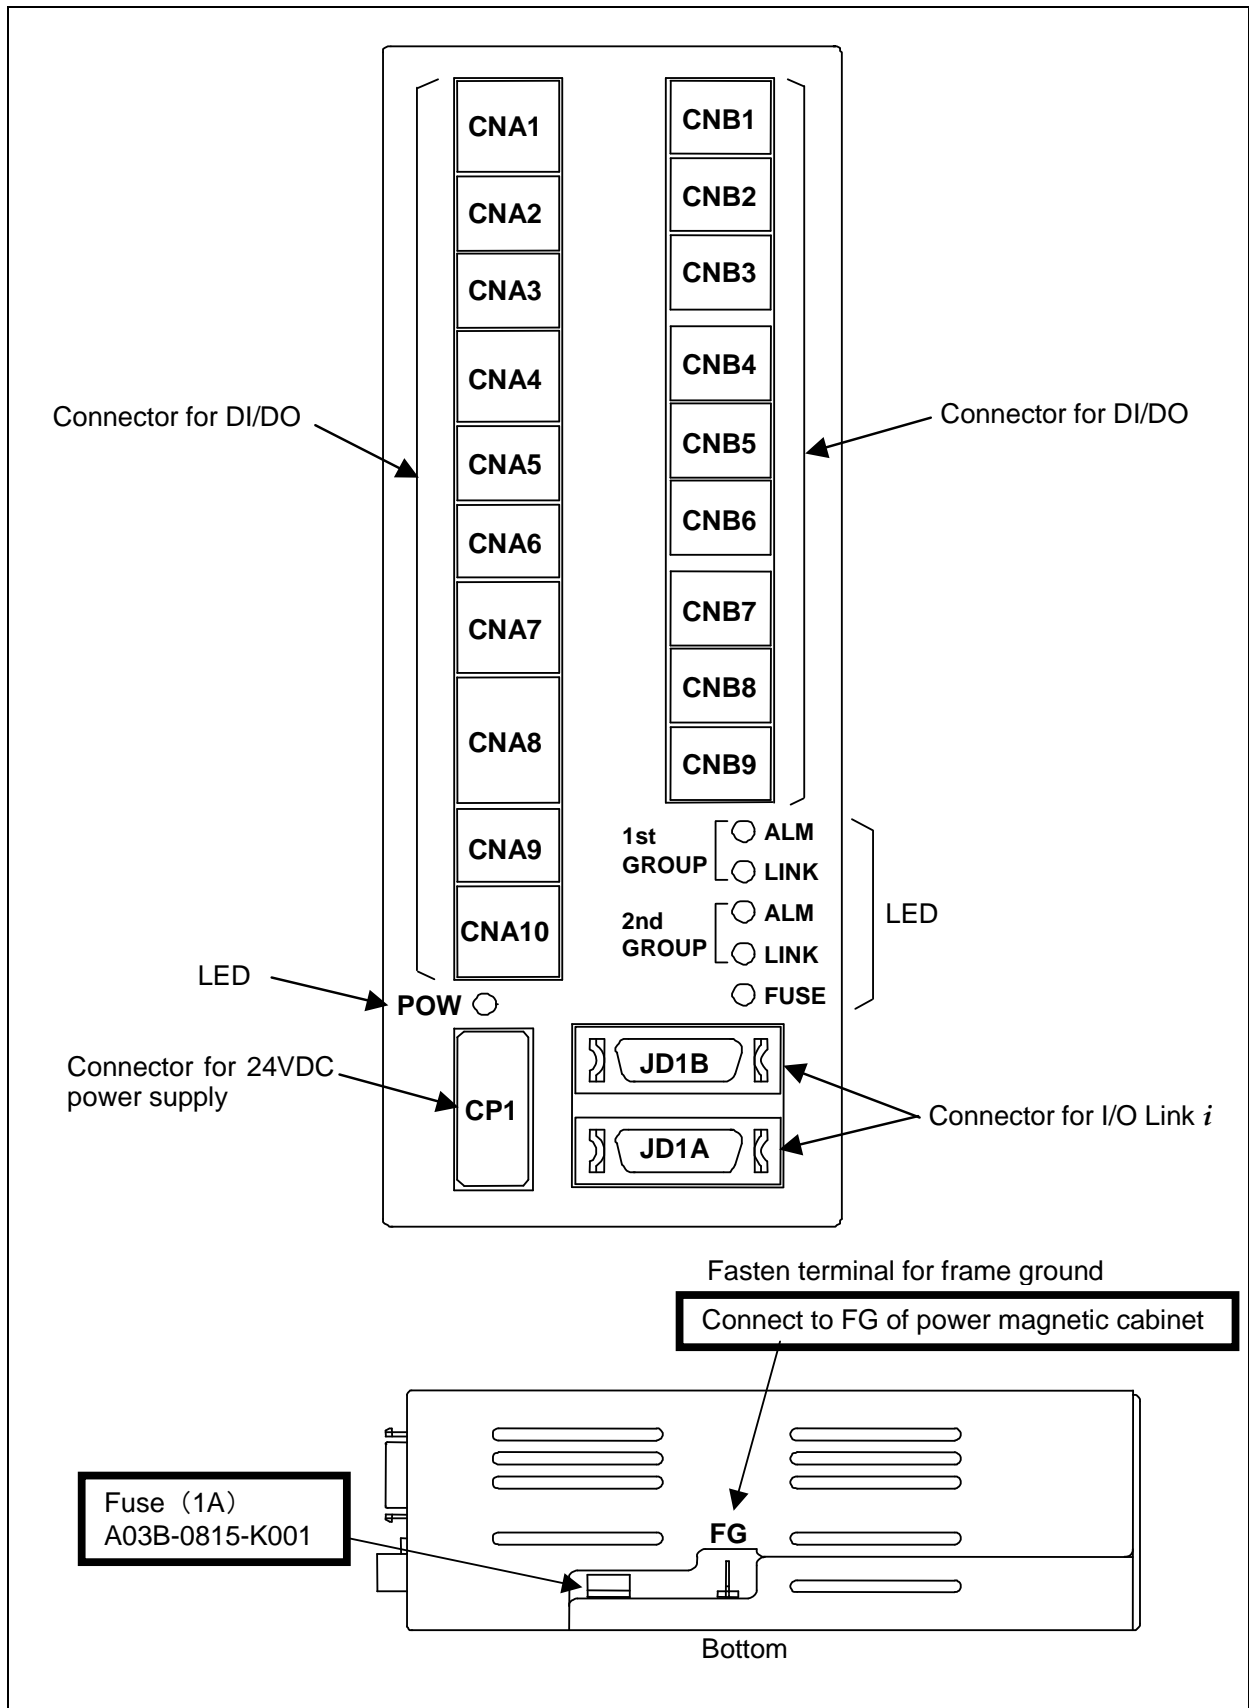

8.10.10 Color labels for connectors of Safety IO Unit

There is color labels placed beside the Tyco Electronics connectors of the safety IO unit. Attached color labels for the connectors on the cable side are to be affixed to the connectors on the cable side.

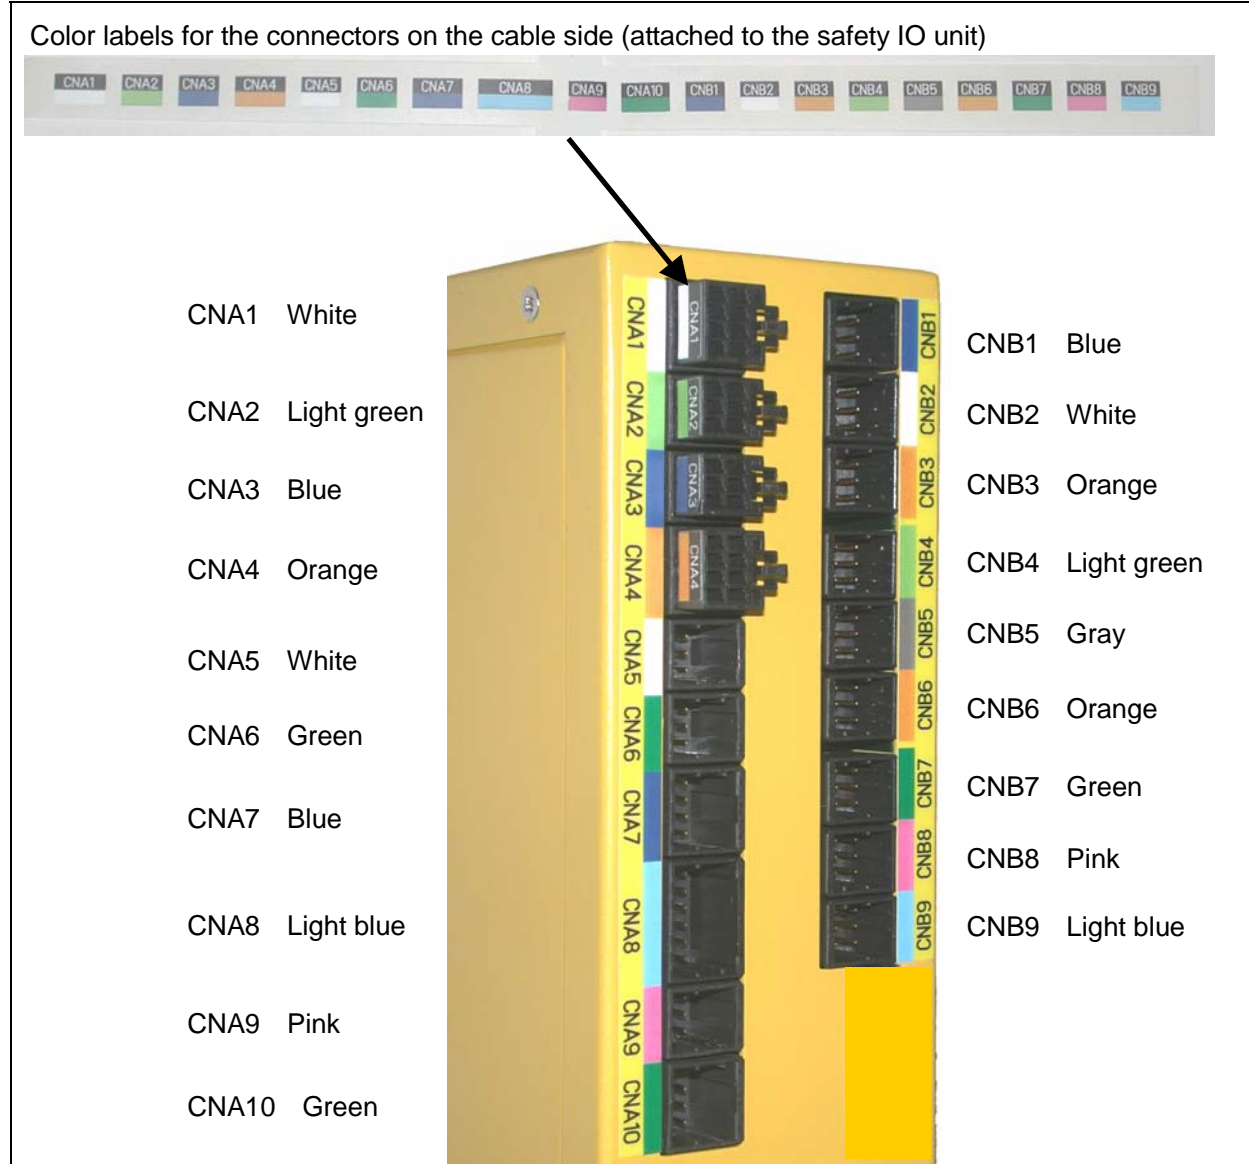

8.10.11 Connector specification of Safety IO Unit

Connector name	Name	Specification of cable-side connector	Order number
CP1	3-pin female connector Housing D-3100 (X key)	Tyco Electronics 1-178288-3	A02B-0120-K324 (Housing and three contacts of 1-175218-5)
	Contact (AWG20-16)	Tyco Electronics 1-175218-5	
	Contact (AWG24-20)	Tyco Electronics 1-175217-5	
CNA2, CNA5, CNA9, CNB1, CNB3, CNB5, CNB7, CNB9	6-pin female connector Housing D-2100 (X key)	Tyco Electronics 1-1318119-3	A03B-0821-K100 (For one unit)
	6-pin female connector Housing D-2100 (Y key)	Tyco Electronics 2-1318119-3	
	8-pin female connector Housing D-2100 (Y key)	Tyco Electronics 2-1318119-4	
	12-pin female connector Housing D-2100 (X key)	Tyco Electronics 1-1318118-6	
CNA1 - CNA10 CNB1 - CNB9	Contact (AWG28-24)	Tyco Electronics 1318108-1	A03B-0821-K101 (1000 contacts of 1318107-1)
	Contact (AWG22-18)	Tyco Electronics 1318107-1	A03B-0821-K102 (150 contacts of 1318107-1)
JD1A, JD1B	Soldering type connector (20 pins, female)	Connector: Honda Tsushin Kogyo PCR-E20FS Case: Honda Tsushin Kogyo PCR-V20LA or Connector: Hirose Denki FI40B-20S Case: Hirose Denki FI-20-CV2	A02B-0120-K301
	Press-mount connector (20 pins, female)	Connector: Honda Tsushin Kogyo PCR-E20FA Case: Honda Tsushin Kogyo PCR-V20LA or Connector: Hirose Denki FI30-20S Case: Hirose Denki FI-20CV2	A02B-0120-K302
FG	Fasten terminal	Tyco Electronics 170604-1 or JST FVDDF 2-250 TYPE I Blue	A02B-0166-K330

8.10.12 Specifications of Safety IO Unit

Installation conditions

- (1) Use this unit in a completely sealed cabinet.
- (2) Use the unit under the following ambient temperature conditions:
Operation: 0°C to 55°C
Storage transportation: -20°C to 80°C
- (3) For other installation conditions, conform to the CNC installation conditions.
- (4) Be sure to install the unit on a vertical face. Moreover for ventilation, allow a clearance of 100mm or more above and below. And never place a device that generates a large amount of heat below the safety IO unit.

Order specification

Name	Order specification	Remarks
Safety IO Unit	A03B-0821-C002	
Fuse (Spare parts)	A03B-0815-K001	1A

Power supply capacity

Power supply voltage	Power supply capacity	Remarks
24V±10% (±10% includes momentary variations and ripples.)	5.2A maximum	0.5A + 7.3mA x DI + Load current of DO

Heat output

Heat output	Remarks
19W	Value when 50% on input signal are on.

Input signal specification

Number of points	63 points (include DI to monitor DO status)
Rated input voltage	24VDC (±10%)
Rated input current	7.3mA (average)
Polarity	Sink type
ON voltage/current	18VDC or more, 6mA or more
OFF voltage/current	6VDC or less, 1.5mA or less
Allowable self-diagnosis pulse width	Pulse width: 150µs or less, Cycle: 4ms or more
Delay time	Receiver delay time: 2ms (maximum) In addition, [I/O Link transfer time between CNC and Safety IO unit] and [ladder scan period (depending on CNC)] must be considered.

Output signal specification

Number of points	19 points
Rated output voltage	24VDC (±10%)
Rated output current	200mA (15 points), 400mA (4 points), including momentary variations
Polarity	Source type
Maximum voltage decrease ON	28mV (output current is 200mA), 56mV (output current is 400mA)
Maximum leakage current when OFF	5µA
Output protection function	Protection against overheat, over current, short-circuiting
Delay time	The driver delay time is 50µs (maximum) In addition, [I/O Link transfer time between CNC and Safety IO unit] and [ladder scan period (depending on CNC)] must be considered.

⚠ CAUTION

- 1 The protection function is intended to protect the components internal rather than external units.
- 2 No protection function can protect their internal components in all cases. Once any protection function has worked, remove the cause promptly. If an absolute maximum rating is exceeded, for example, it is likely that protection functions may not work or an IC may break down before the related protection function works, depending on the way or situation in which the modules are used.
- 3 If an output protection function is defective, it is likely that, if the load current exceeds its rating continuously for a long time, smoke or ignition may occur.

8.10.13 DO (Output Signal) Error Detection

The DO driver of the safety IO unit has the output protection function for each output signal. If an accident, such as connecting the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal in the OFF state. Even if this occurs, the CNC and safety IO unit continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

When the above protection function is activated by the DO driver, the relevant error is output as a status alarm and transferred to the PMC system relay area. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to "1", the DO driver corresponding to the bit detects an error. For details of the status alarm, see Subsection 7.3.3, "Status Alarm".

Information output to the system relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23 (1st group in PMC)	1 to 5	1	0	Y_{1n}	DO alarm at 0th byte DO in PMC
				1	Y_{1n+1}	DO alarm at 1st byte DO in PMC
	0 to 23 (2nd group in DCSPMC)	9	1	0	Y_{2n}	DO alarm at 0th byte DO in DCSPMC
				1	Y_{2n+1}	DO alarm at 1st byte DO in DCSPMC

Output values of "Group number", "PMC path", and "Y address" depends on unit connection and I/O address assignment.

Y_{1n} , and Y_{2n} indicate the start address at allocation.

Description of "Alarm data" in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

8.11 CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL SUPPORTING SAFETY FUNCTION


8.11.1 Overview

“I/O module for operator’s panel supporting safety function” is a unit dedicated to I/O Link *i*, which has an interface for duplicated input signals of safety circuits in using dual check safety (DCS) function. There are two types of I/O modules for operator’s panel supporting safety function.

Name	Ordering specification	Remarks
I/O module for operator’s panel supporting safety function (type B)	A20B-2200-0470	General-purpose DI: 21 points DO: 16 points Safety input signal: 3 points One manual pulse generator can be connected.
I/O module for operator’s panel supporting safety function (type A)	A20B-2200-0471	General-purpose DI: 24 points DO: 16 points Safety input signal: 4 points Three manual pulse generators can be connected.


⚠ CAUTION
I/O module for operator’s panel supporting safety function is a unit dedicated to I/O Link *i*. Do not connect it to channels used for I/O Link.

8.11.2 Connection Diagram

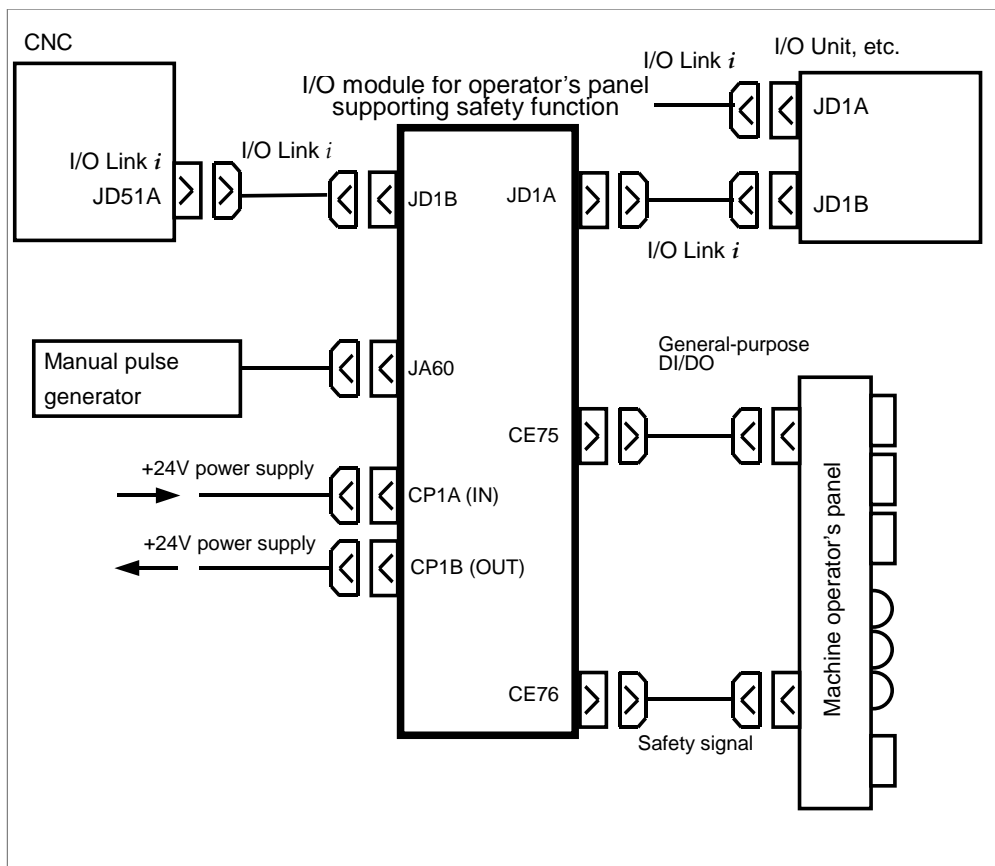

8.11.3 Power Connection

Provide the CP1B (IN) connector, shown below, with the power necessary for printed circuit board operation and that for DI/DO operation. To facilitate power division, the power is output to CP1A(OUT) exactly as it is input from CP1B (IN). When power division is required, use CP1A (OUT). Up to 2.5 A can be supplied by branching.

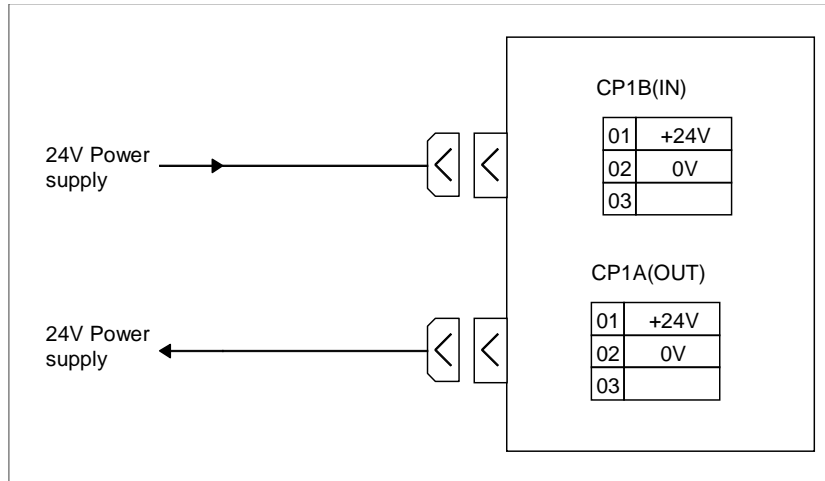

Connector name	Cable-side connector	Cable-side connector specification
CP1A, CP1B	Housing	Tyco Electronics AMP1-178288-3
	Contacts	Tyco Electronics AMP1-175218-5

NOTE

- 1 This unit doesn't have a pin (DOCOM) which supplies power to a driver which outputs DO.
Power is also supplied for DO through this connector. Use a power supply, considering DO power supply rating.
- 2 Both connectors CP1B (IN) and CP1A (OUT) are same specification.
And there is not indication of (IN) and (OUT) on the PCB.

8.11.4 DI/DO Address Map

I/O module for operator's panel supporting safety function is assigned to X addresses (input) and Y addresses (output) in two successive groups. Assign for I/O Link *i* as described below.

For Type B

Allocate 4-byte DI addresses and 2-byte DO addresses to PMC-side (group 1) slot1, and 2-byte DI addresses to DCS-side (group 2) slot1.


For Type A

Allocate 4-byte DI addresses and 2-byte DO address to PMC-side (group 1) slot1, and 1-byte DI address to DCS-side (group 2) slot1.


DI/DO address maps are as follows for Type A and Type B.

For A20B-2200-0470 (TypeB)

- PMC-side (group 1) address map

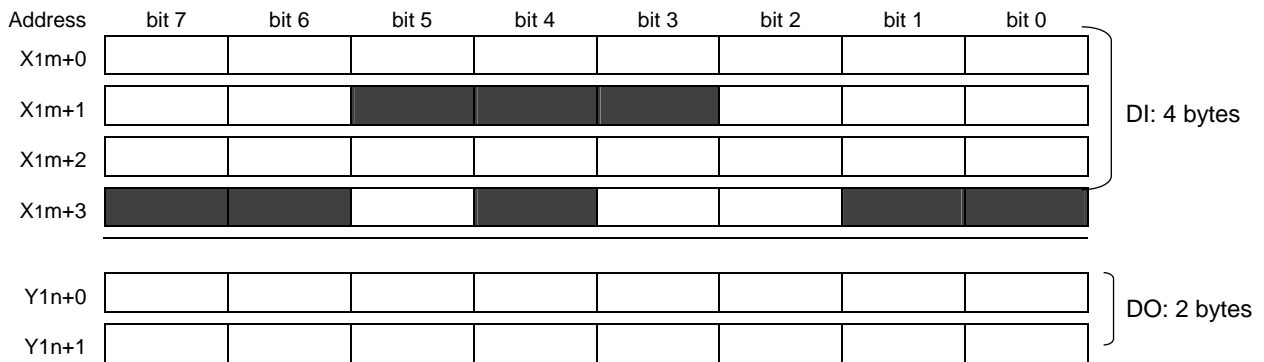

- DCS-side (group 2) address map

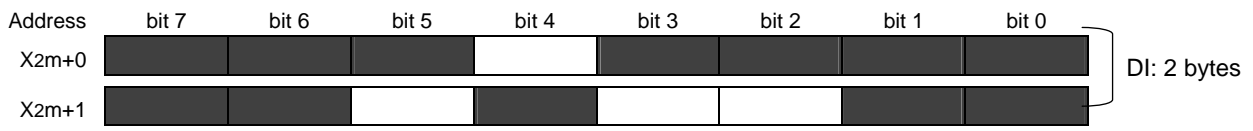


For A20B-2200-0471 (Type A)

- PMC-side (group 1) address map



- DCS-side (group 2) address map



NOTE

Signals in shaded area () can not be used.

8.11.5 DI/DO Connector Pin Arrangement

CE75

Pin Arrangement for A20B-2200-0470 (Type B)

	A	B
01	0V	+24V
02	X1m+0.0	X1m+0.1
03	X1m+0.2	X1m+0.3
04	X1m+0.4	X1m+0.5
05	X1m+0.6	X1m+0.7
06	X1m+1.0	X1m+1.1
07	X1m+1.2	
08		
09	X1m+1.6	X1m+1.7
10	X1m+2.0	X1m+2.1
11	X1m+2.2	X1m+2.3
12	X1m+2.4	X1m+2.5
13	X1m+2.6	X1m+2.7
14	0V	0V
15	0V	0V
16	Y1n+0.0	Y1n+0.1
17	Y1n+0.2	Y1n+0.3
18	Y1n+0.4	Y1n+0.5
19	Y1n+0.6	Y1n+0.7
20	Y1n+1.0	Y1n+1.1
21	Y1n+1.2	Y1n+1.3
22	Y1n+1.4	Y1n+1.5
23	Y1n+1.6	Y1n+1.7
24	+24V	+24V
25	+24V	+24V

Pin Arrangement for A20B-2200-0471 (Type A)

	A	B
01	0V	+24V
02	X1m+0.0	X1m+0.1
03	X1m+0.2	X1m+0.3
04	X1m+0.4	X1m+0.5
05	X1m+0.6	X1m+0.7
06	X1m+1.0	X1m+1.1
07	X1m+1.2	X1m+1.3
08	X1m+1.4	X1m+1.5
09	X1m+1.6	X1m+1.7
10	X1m+2.0	X1m+2.1
11	X1m+2.2	X1m+2.3
12	X1m+2.4	X1m+2.5
13	X1m+2.6	X1m+2.7
14	0V	0V
15	0V	0V
16	Y1n+0.0	Y1n+0.1
17	Y1n+0.2	Y1n+0.3
18	Y1n+0.4	Y1n+0.5
19	Y1n+0.6	Y1n+0.7
20	Y1n+1.0	Y1n+1.1
21	Y1n+1.2	Y1n+1.3
22	Y1n+1.4	Y1n+1.5
23	Y1n+1.6	Y1n+1.7
24	+24V	+24V
25	+24V	+24V

Connector name	Cable-side connector	Cable-side connector specification
CE75	Two-piece connector, series HIF3B, complying with MIL standards.	Hirose Electric: HIF3BB-50D-2.54R

CE76

Pin Arrangement for A20B-2200-0470 (Type B)

	A	B
01	0V	X1m+3.2
02	X2m+1.2	X1m+3.3
03	X2m+1.3	X1m+3.5
04	X2m+1.5	X2m+0.4
05	+24V	+24V
06	+24V	+24V

Pin Arrangement for A20B-2200-0471 (TypeA)

	A	B
01	0V	X1m+3.2
02	X2m+0.2	X1m+3.3
03	X2m+0.3	X1m+3.4
04	X2m+0.4	X1m+3.5
05	X2m+0.5	+24V
06	+24V	+24V

Connector name	Cable-side connector	Cable-side connector specification
CE76	12 pin female connector housing D-2100 X key	Tyco Electronics AMP1-1318118-6
	Contact	Tyco Electronics AMP1318107-1

⚠ CAUTION


In case of Type B, address X1m+1.6 to address X1m+2.7 are assigned to pins of JA60 as well as CE75. If address X1m+1.6 to address X1m+2.7 are used in one type of a connector, do not connect to these addresses in the other type of connector.


NOTE

Blank pins cannot be used. Do not connect to these pins.

8.11.6 DI (General-purpose Input Signal) Connection

DI connection for CE75

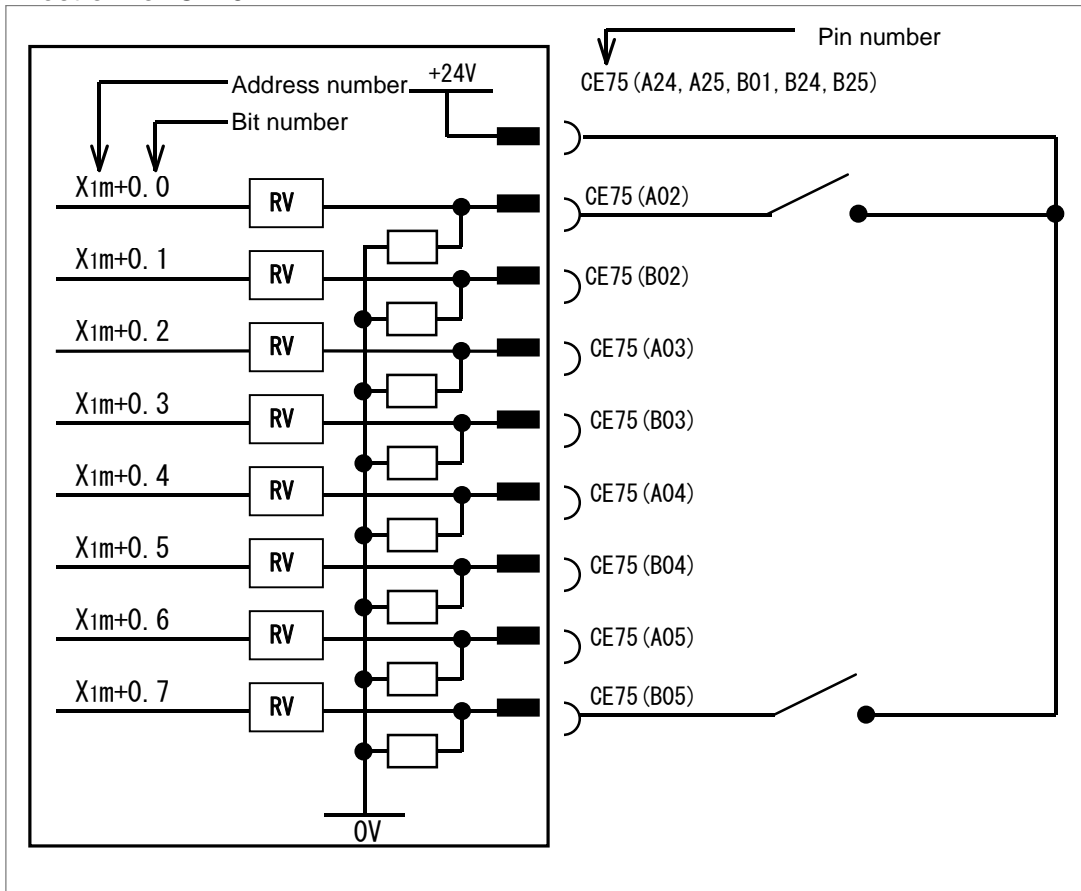

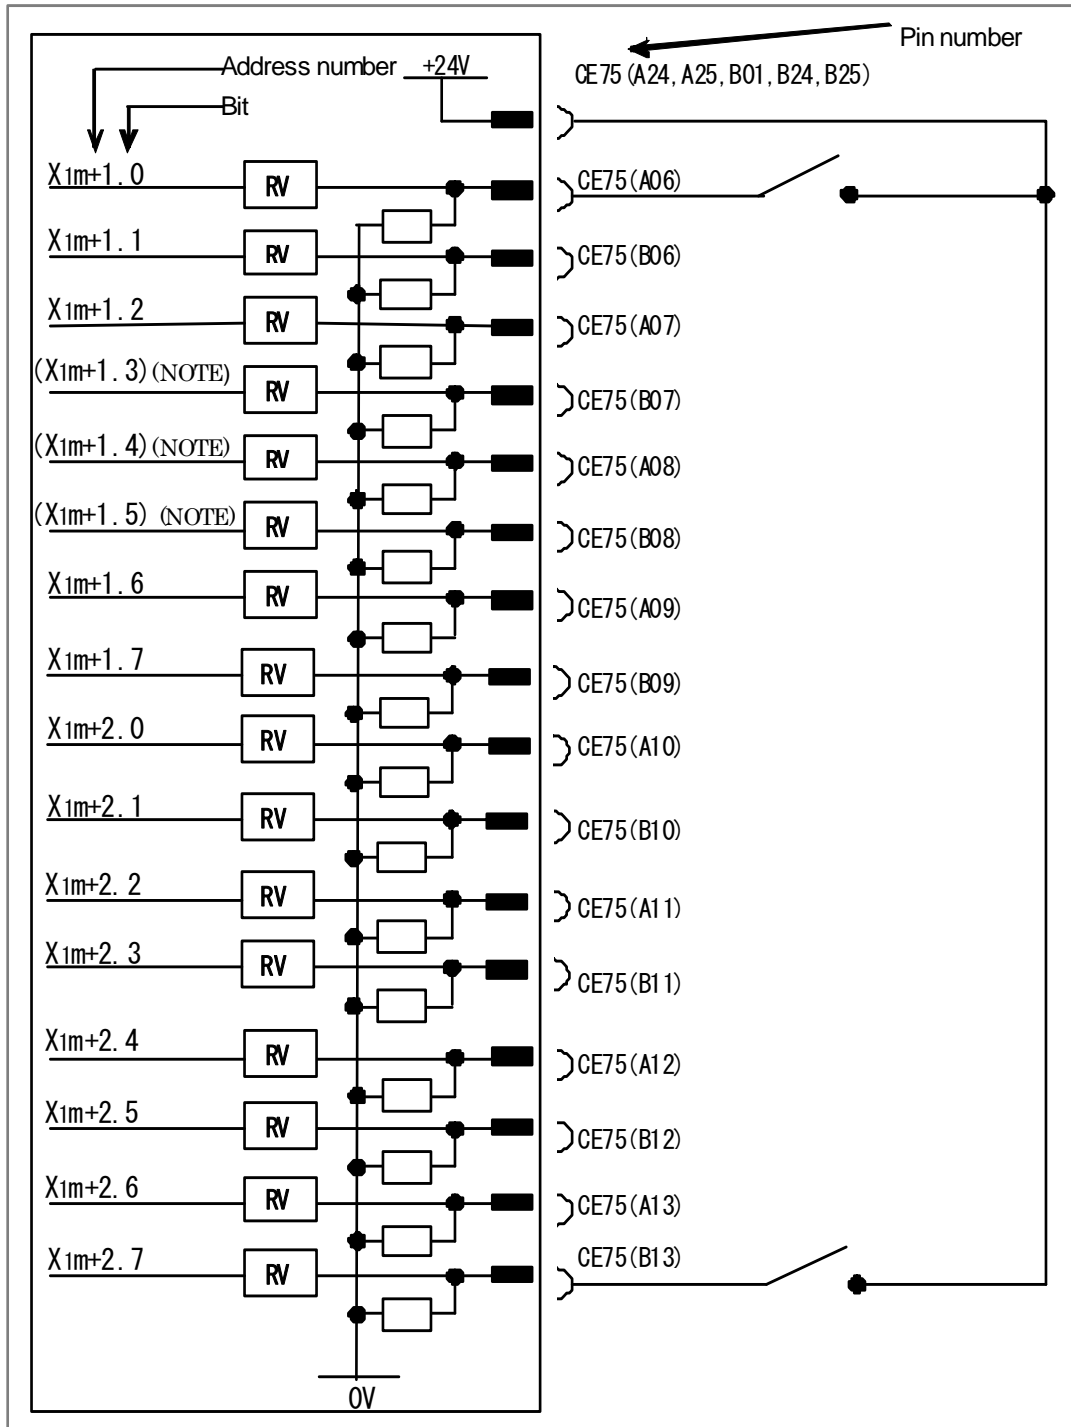


⚠ CAUTION
 +24V (A24, A25, B01, B24, B25) are output signals which are used as a common voltage for input signals.
 Do not use these except for a common voltage for input signals. Do not supply 24V to these pins from the outside.


NOTE
 X1m+1.3, X1m+1.4, X1m+1.5 can not be used for type B. These addresses can be used only for Type A.

DI connection for CE76

DI connection for A20B-2200-0470 (Type B)

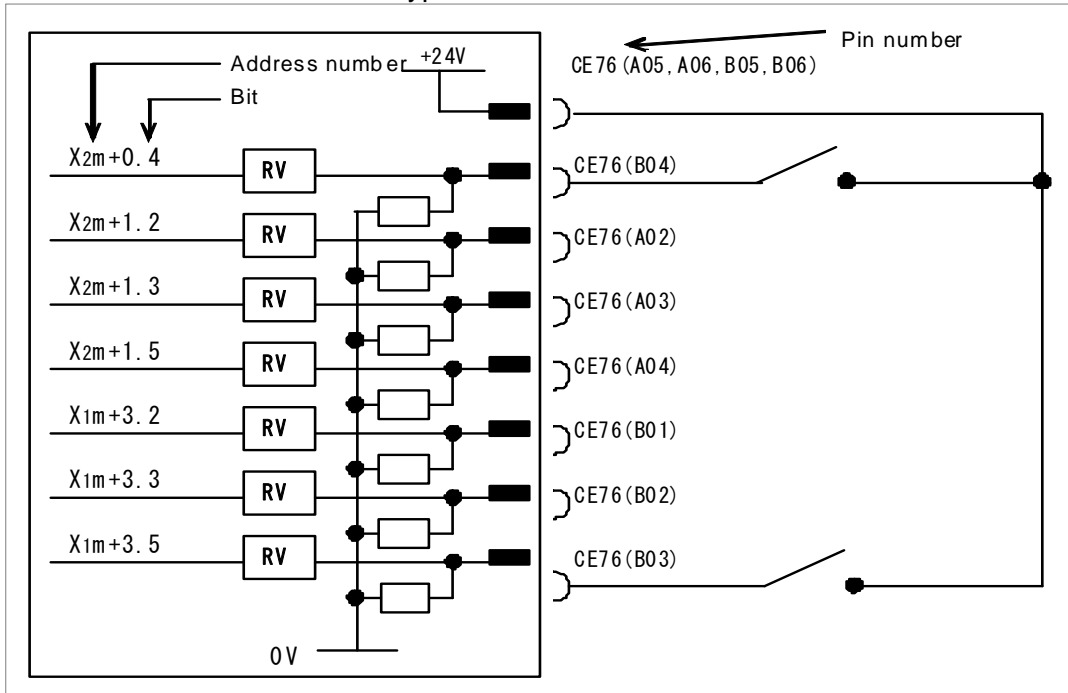


DI connection for A20B-2200-0471 (Type A)

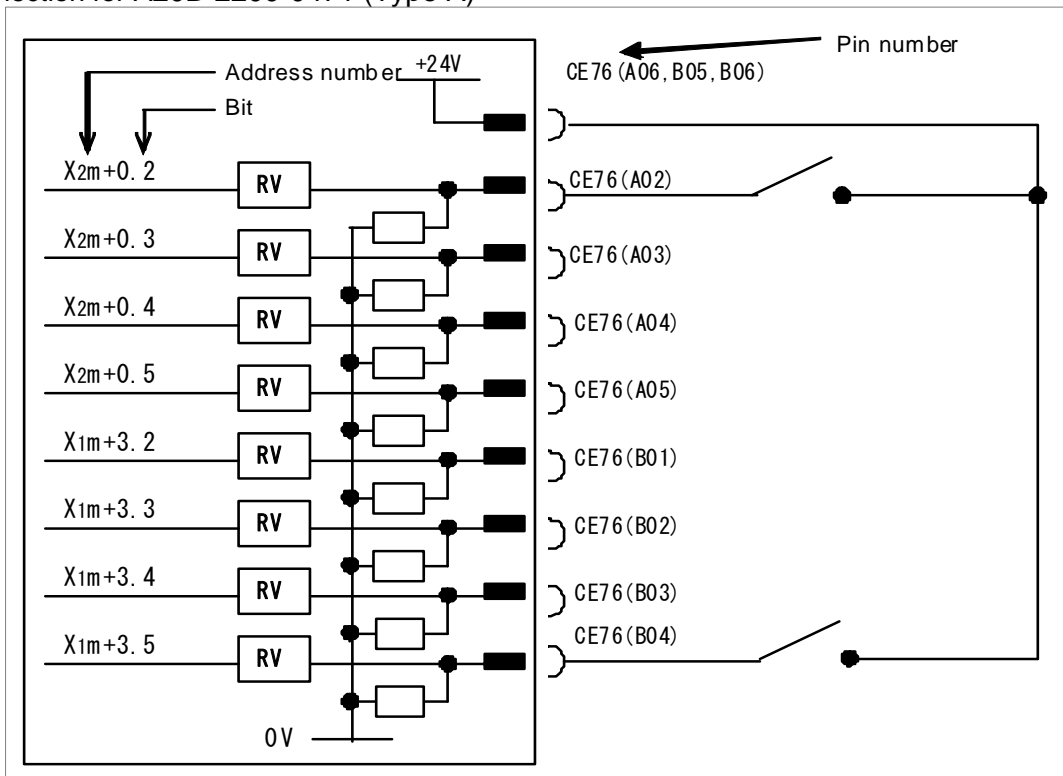

⚠ CAUTION
 +24V (A05 (in Type B), A06, B05 and B06) are output signals which are used as a common voltage for input signals. Do not use these except for a common voltage for input signals. Do not supply 24V to these pins from the outside.

8.11.7 DO (Output Signal) Connection

DO connection for CE75

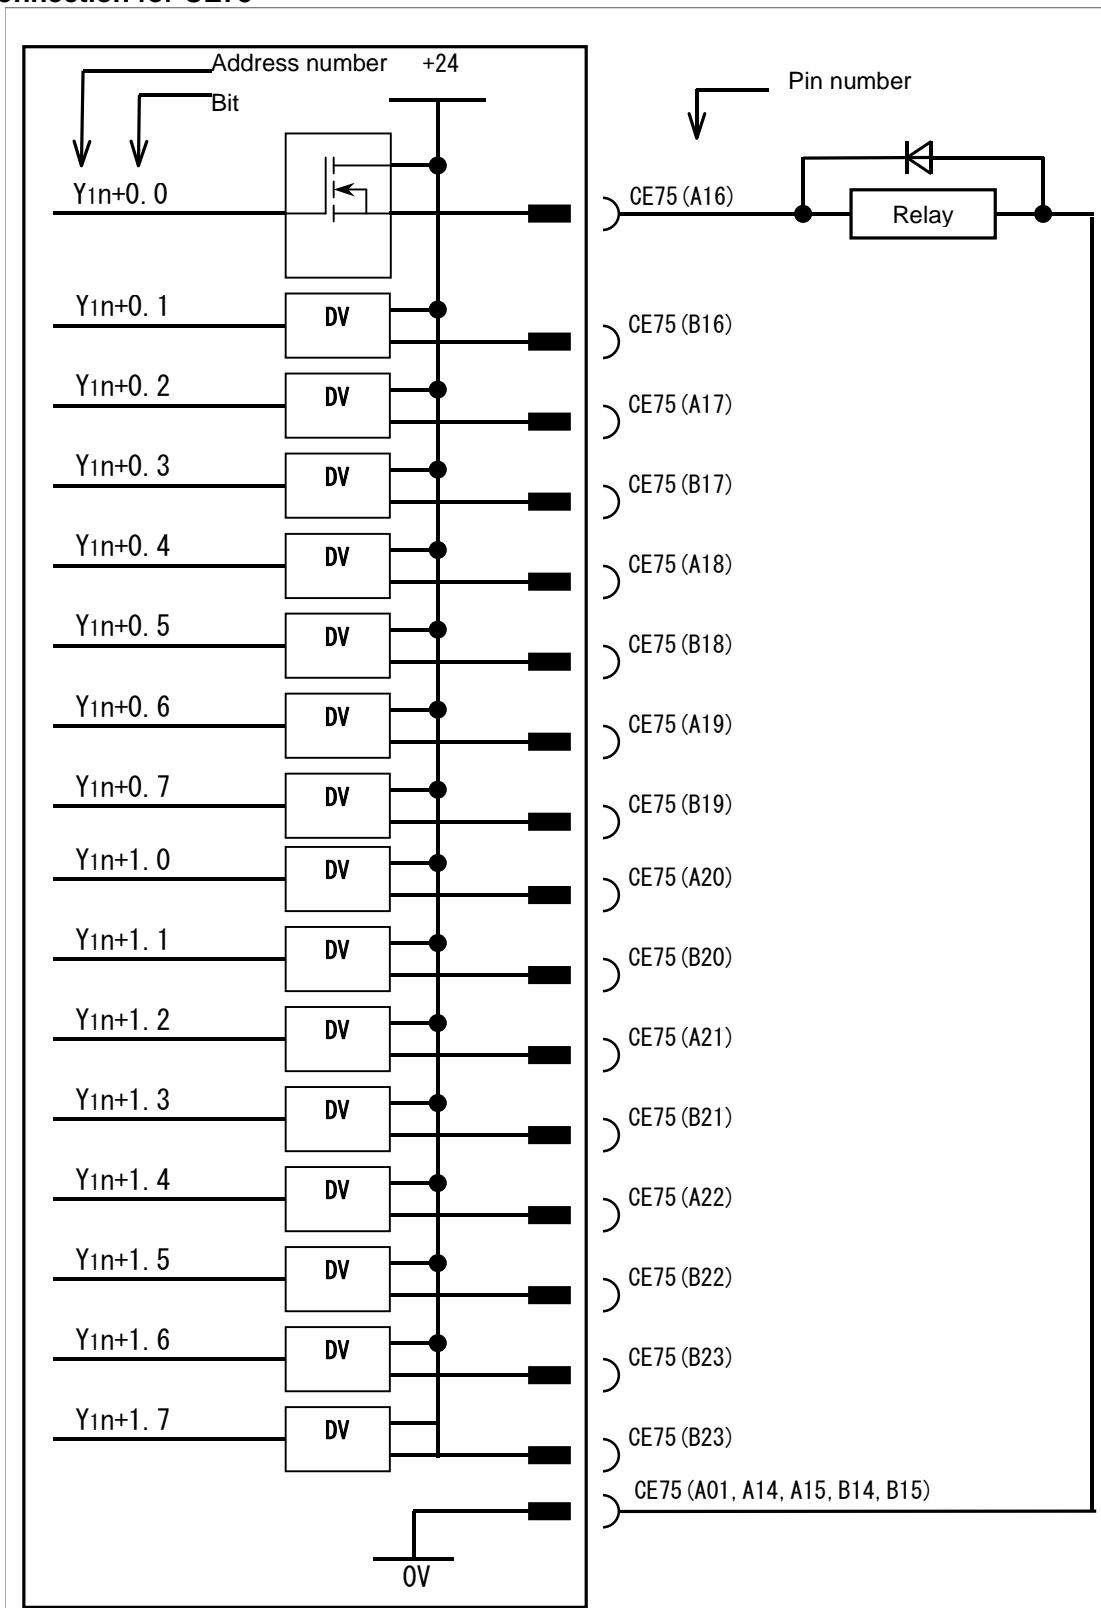

8.11.8 Manual pulse generator Connection


Connection of JA60 to manual pulse generators

Connection for type B

One manual pulse generator can be connected. Ten input signals can be used on the connector.

For A20B-2200-0470(Type B)

1	HA1	11	X1m+2.0
2	HB1	12	X1m+2.1
3	+5V	13	X1m+2.2
4	0V	14	X1m+2.3
5	+5V	15	X1m+2.4
6	0V	16	X1m+2.5
7	+5V	17	X1m+2.6
8	0V	18	X1m+2.7
9	X1m+1.6	19	X1m+1.7
10	0V	20	+24V

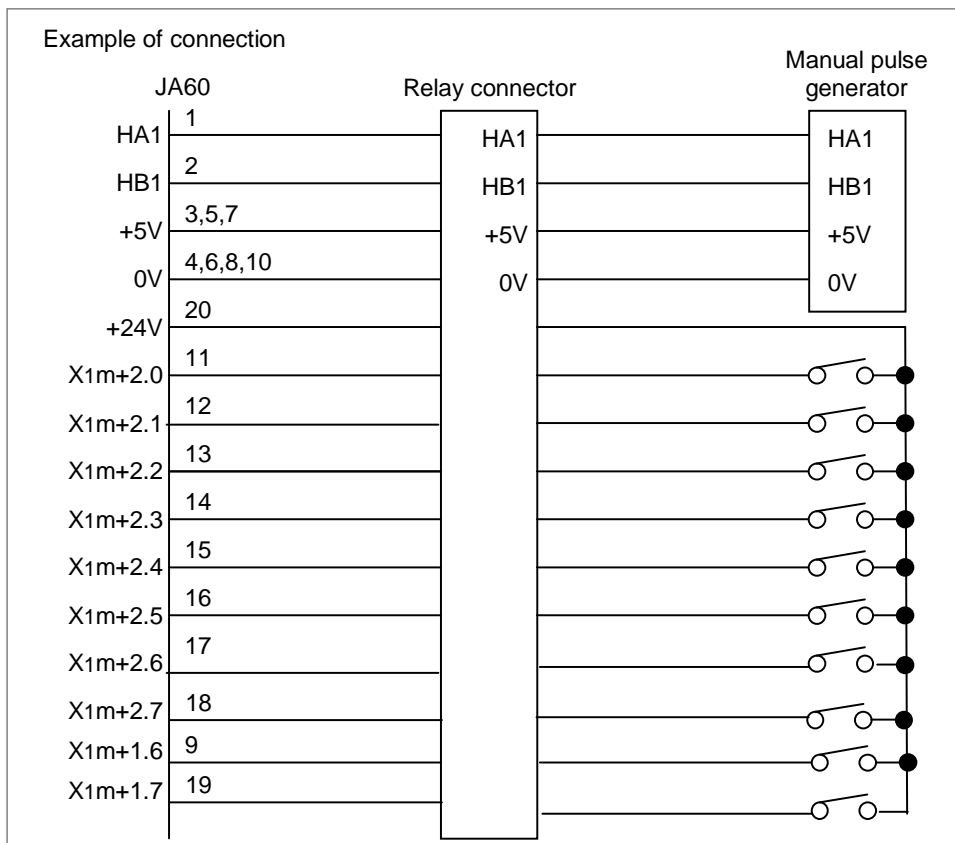

Connection for type A

Three manual pulse generators can be connected.
Please refer to section 7.4.1 about the connection.


For A20B-2200-0471(Type A)

1	HA1	11	
2	HB1	12	0V
3	HA2	13	
4	HB2	14	0V
5	HA3	15	
6	HB3	16	0V
7		17	
8		18	5V
9	5V	19	
10		20	5V

Connector name	Cable-side connector	Cable-side connector specification
JA60	20 pin half-pitch connector Solder type connector (20pin, female)	Connector: Hirose Electric FI40B-20S Case : Hirose Electric FI-20-CV5

⚠ CAUTION
In case of I/O module for operator's panel supporting safety function type B, address X1m+1.6 to address X1m+2.7 are also assigned to pins of CE75. If address X1m+1.6 to address X1m+2.7 are used in one type of a connector, do not connect to these addresses in the other type of connector.

8.11.9 External View

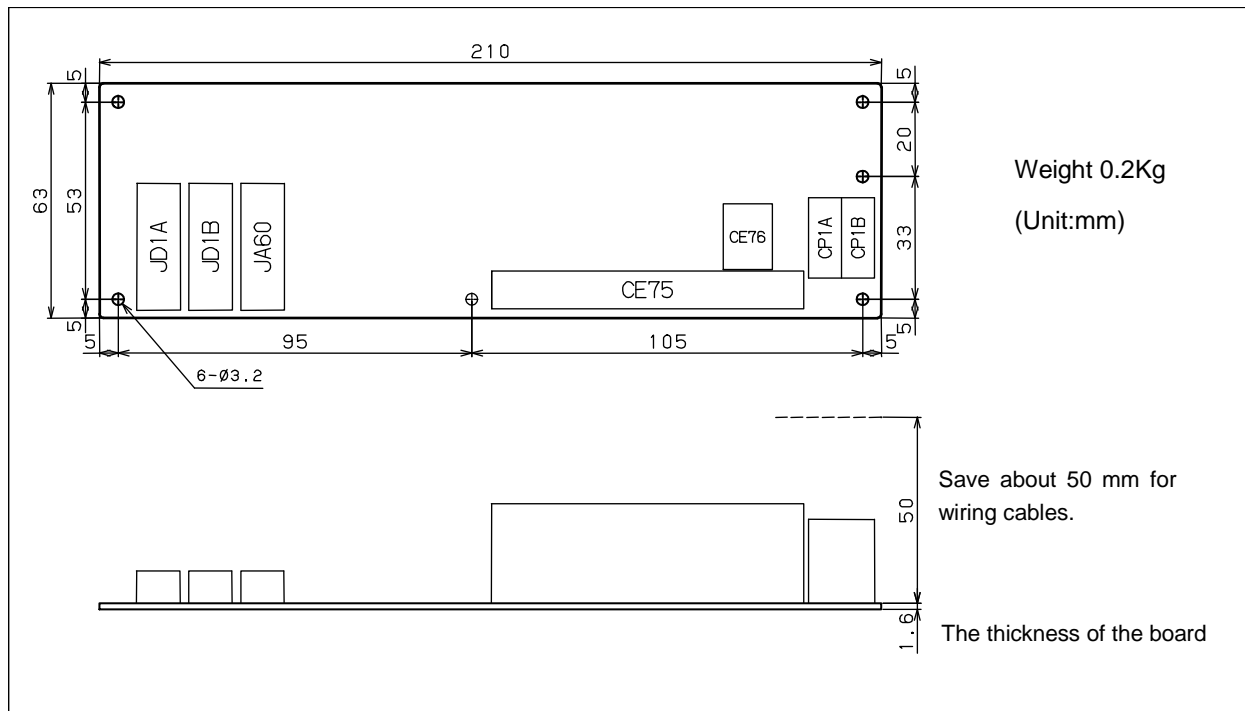

8.11.10 Specifications

Installation specifications

Install the I/O module in a fully enclosed cabinet.

For other installation conditions, conform to the CNC installation conditions.

Ordering specifications

Name	Ordering specification	Remarks
I/O module for operator's panel supporting safety function (type B)	A20B-2200-0470	General-purpose DI: 21 points DO: 16 points Safety input signal: 3 points One manual pulse generator can be connected
I/O module for operator's panel supporting safety function (type A)	A20B-2200-0471	General-purpose DI: 24 points DO: 16 points Safety input signal: 4 points Three manual pulse generators can be connected
Fuse (spare parts)	A03B-0815-K001	1A

Power supply rating

Power supply voltage	Power supply rating	Remarks
24VDC±10% is fed through the I/O connector (CPD1) ±10% includes momentary variation and ripples.	0.40A	The total power consumption of DI points is included. The power consumption of DO points is not included. Use a power supply, considering DO power supply rating.

NOTE

To connect an optical adapter for the I/O Link *i* to JD1A, the above power supply rating +35mA is required. An optical adapter for the I/O Link *i* can not be connected to JD1B.

Heat dissipation

Unit name	Heat dissipation	Remarks
I/O module for operator's panel supporting safety function type A and B	4.3W	DI ; 8 points when ON

NOTE

The details of the method of calculating heat dissipation are as follows.

$$2.9 (W) + 0.18 (W) \times N$$

(N: Number of DI points turned on)

The above heat dissipation is only what this unit produces. This does not include the power dissipation of peripherals, optical adapters for the I/O Link *i*, manual pulse generators and so on.

DI (input signal specifications)

Contact rating	30VDC, 16mA or more
Leakage current between contacts when opened	1mA or less (26.4 V)
Voltage decrease between contacts when closed	2V or less (including a cable voltage decrease)
Delay time	The receiver delay time is 2ms (maximum) In addition, [I/O Link transfer time between CNC and I/O module (2ms or less)] and [ladder scan period (depending on CNC)] must be considered.

DO (output signal specifications)

Maximum load current when ON	200mA or less including momentary current per signal.
Saturation voltage when ON	1V (maximum) when the load current is 200mA.
Withstand voltage	24 V +20% or less including momentary variations.
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module (2ms or less)] and [ladder scan period (depending on CNC)] must be considered.

8.11.11 DO (output signal) Error Detection

The DO driver of this unit has output protection functions for each output signal. If an accident, such as a ground fault, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the relevant DO signal in the OFF state. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

When the above protection function is activated by the DO driver, the relevant error is output as a status alarm and transferred to the PMC relay area. The following table lists relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to '1', the DO driver corresponding to the bit detects an error. For detail of the status alarm, see Subsection 7.3.3, "Status Alarm".

Information output to the relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23 (1st group in PMC)	1 to 5	1	0	Y_{1n}	DO alarm at 0th byte DO in PMC
				1	Y_{1n+1}	DO alarm at 1st byte DO in PMC

Output values of "Group number", "PMC path", and "Y address" depends on unit connection and I/O address assignment.


Y_{1n} indicates the start address at allocation.

Description of "Alarm data" in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

8.12 I/O UNIT FOR POWER MAGNETICS CABINET

8.12.1 Overall Connection Diagram

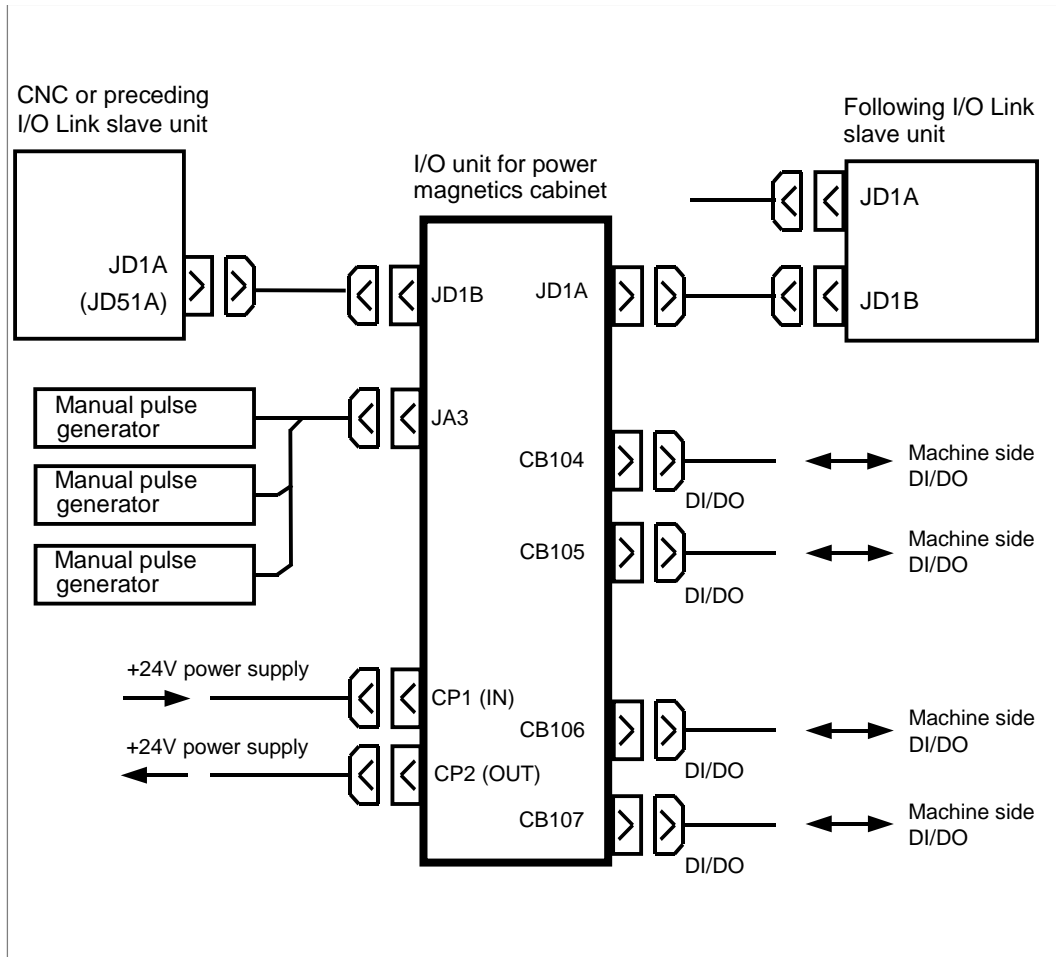

NOTE


The following screw type connectors cannot be used to connect the I/O Link *i* or manual pulse generator.

Connectors that cannot be used on the cable side


	Specification	Manufacturer
Connector case	FI-20-CV7	Hirose Electric Co., Ltd.
Connector case and connector	FI30-20S-CV7	Hirose Electric Co., Ltd.

8.12.2 Power Connection

Supply power to the I/O unit for power magnetics cabinet from external power.

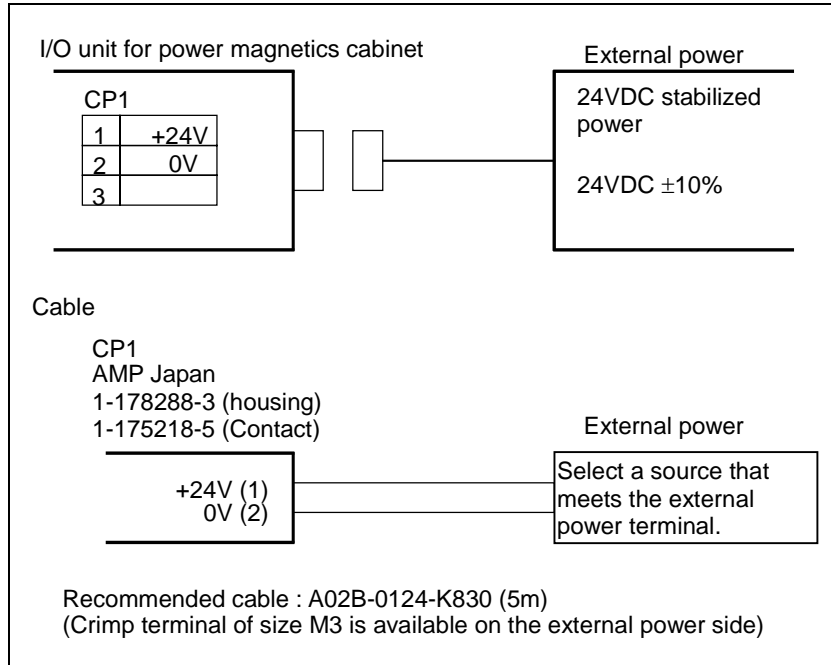

Part of the 24 VDC power input to CP1 can be taken out from CP2 by branching. CP2 should be connected as shown below. In this case, the rating of the external 24 VDC power supplied to CP1 must be the sum of the power consumed within the control unit and that supplied to external equipment via CP2. The maximum capacity of power that can be obtained from a branch is 1.0 A.

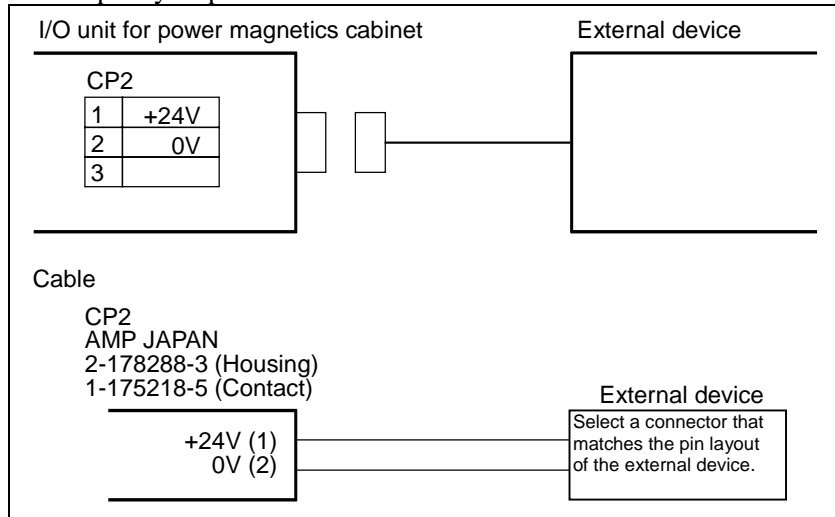

NOTE

Do not interrupt +24V supplied to this connector during operation. Otherwise, an alarm about communication with the CNC is issued. A voltage of +24V must not be supplied after power-on of the CNC and +24V must not be interrupted before power-off of the CNC. When powering off the CNC control unit, be sure to power off the I/O unit for power magnetics cabinet.

8.12.3 DI/DO Connector Pin Arrangement

CB104			CB105			CB106			CB107		
HIROSE 50PIN			HIROSE 50PIN			HIROSE 50PIN			HIROSE 50PIN		
	A	B		A	B		A	B		A	B
01	0V	+24V	01	0V	+24V	01	0V	+24V	01	0V	+24V
02	Xm+0.0	Xm+0.1	02	Xm+3.0	Xm+3.1	02	Xm+4.0	Xm+4.1	02	Xm+7.0	Xm+7.1
03	Xm+0.2	Xm+0.3	03	Xm+3.2	Xm+3.3	03	Xm+4.2	Xm+4.3	03	Xm+7.2	Xm+7.3
04	Xm+0.4	Xm+0.5	04	Xm+3.4	Xm+3.5	04	Xm+4.4	Xm+4.5	04	Xm+7.4	Xm+7.5
05	Xm+0.6	Xm+0.7	05	Xm+3.6	Xm+3.7	05	Xm+4.6	Xm+4.7	05	Xm+7.6	Xm+7.7
06	Xm+1.0	Xm+1.1	06	Xm+8.0	Xm+8.1	06	Xm+5.0	Xm+5.1	06	Xm+10.0	Xm+10.1
07	Xm+1.2	Xm+1.3	07	Xm+8.2	Xm+8.3	07	Xm+5.2	Xm+5.3	07	Xm+10.2	Xm+10.3
08	Xm+1.4	Xm+1.5	08	Xm+8.4	Xm+8.5	08	Xm+5.4	Xm+5.5	08	Xm+10.4	Xm+10.5
09	Xm+1.6	Xm+1.7	09	Xm+8.6	Xm+8.7	09	Xm+5.6	Xm+5.7	09	Xm+10.6	Xm+10.7
10	Xm+2.0	Xm+2.1	10	Xm+9.0	Xm+9.1	10	Xm+6.0	Xm+6.1	10	Xm+11.0	Xm+11.1
11	Xm+2.2	Xm+2.3	11	Xm+9.2	Xm+9.3	11	Xm+6.2	Xm+6.3	11	Xm+11.2	Xm+11.3
12	Xm+2.4	Xm+2.5	12	Xm+9.4	Xm+9.5	12	Xm+6.4	Xm+6.5	12	Xm+11.4	Xm+11.5
13	Xm+2.6	Xm+2.7	13	Xm+9.6	Xm+9.7	13	Xm+6.6	Xm+6.7	13	Xm+11.6	Xm+11.7
14			14			14	COM4		14		
15			15			15			15		
16	Yn+0.0	Yn+0.1	16	Yn+2.0	Yn+2.1	16	Yn+4.0	Yn+4.1	16	Yn+6.0	Yn+6.1
17	Yn+0.2	Yn+0.3	17	Yn+2.2	Yn+2.3	17	Yn+4.2	Yn+4.3	17	Yn+6.2	Yn+6.3
18	Yn+0.4	Yn+0.5	18	Yn+2.4	Yn+2.5	18	Yn+4.4	Yn+4.5	18	Yn+6.4	Yn+6.5
19	Yn+0.6	Yn+0.7	19	Yn+2.6	Yn+2.7	19	Yn+4.6	Yn+4.7	19	Yn+6.6	Yn+6.7
20	Yn+1.0	Yn+1.1	20	Yn+3.0	Yn+3.1	20	Yn+5.0	Yn+5.1	20	Yn+7.0	Yn+7.1
21	Yn+1.2	Yn+1.3	21	Yn+3.2	Yn+3.3	21	Yn+5.2	Yn+5.3	21	Yn+7.2	Yn+7.3
22	Yn+1.4	Yn+1.5	22	Yn+3.4	Yn+3.5	22	Yn+5.4	Yn+5.5	22	Yn+7.4	Yn+7.5
23	Yn+1.6	Yn+1.7	23	Yn+3.6	Yn+3.7	23	Yn+5.6	Yn+5.7	23	Yn+7.6	Yn+7.7
24	DOCOM	DOCOM	24	DOCOM	DOCOM	24	DOCOM	DOCOM	24	DOCOM	DOCOM
25	DOCOM	DOCOM	25	DOCOM	DOCOM	25	DOCOM	DOCOM	25	DOCOM	DOCOM





CAUTION


An output DC voltage of +24V at CB104 (B01) , CB105(B01), CB106(B01) and CE107 (B01) is for DI signals. Do not supply 24 VDC to these pins from the outside.


8.12.4 DI(General-purpose Input Signal)Connection


○96 points maximum

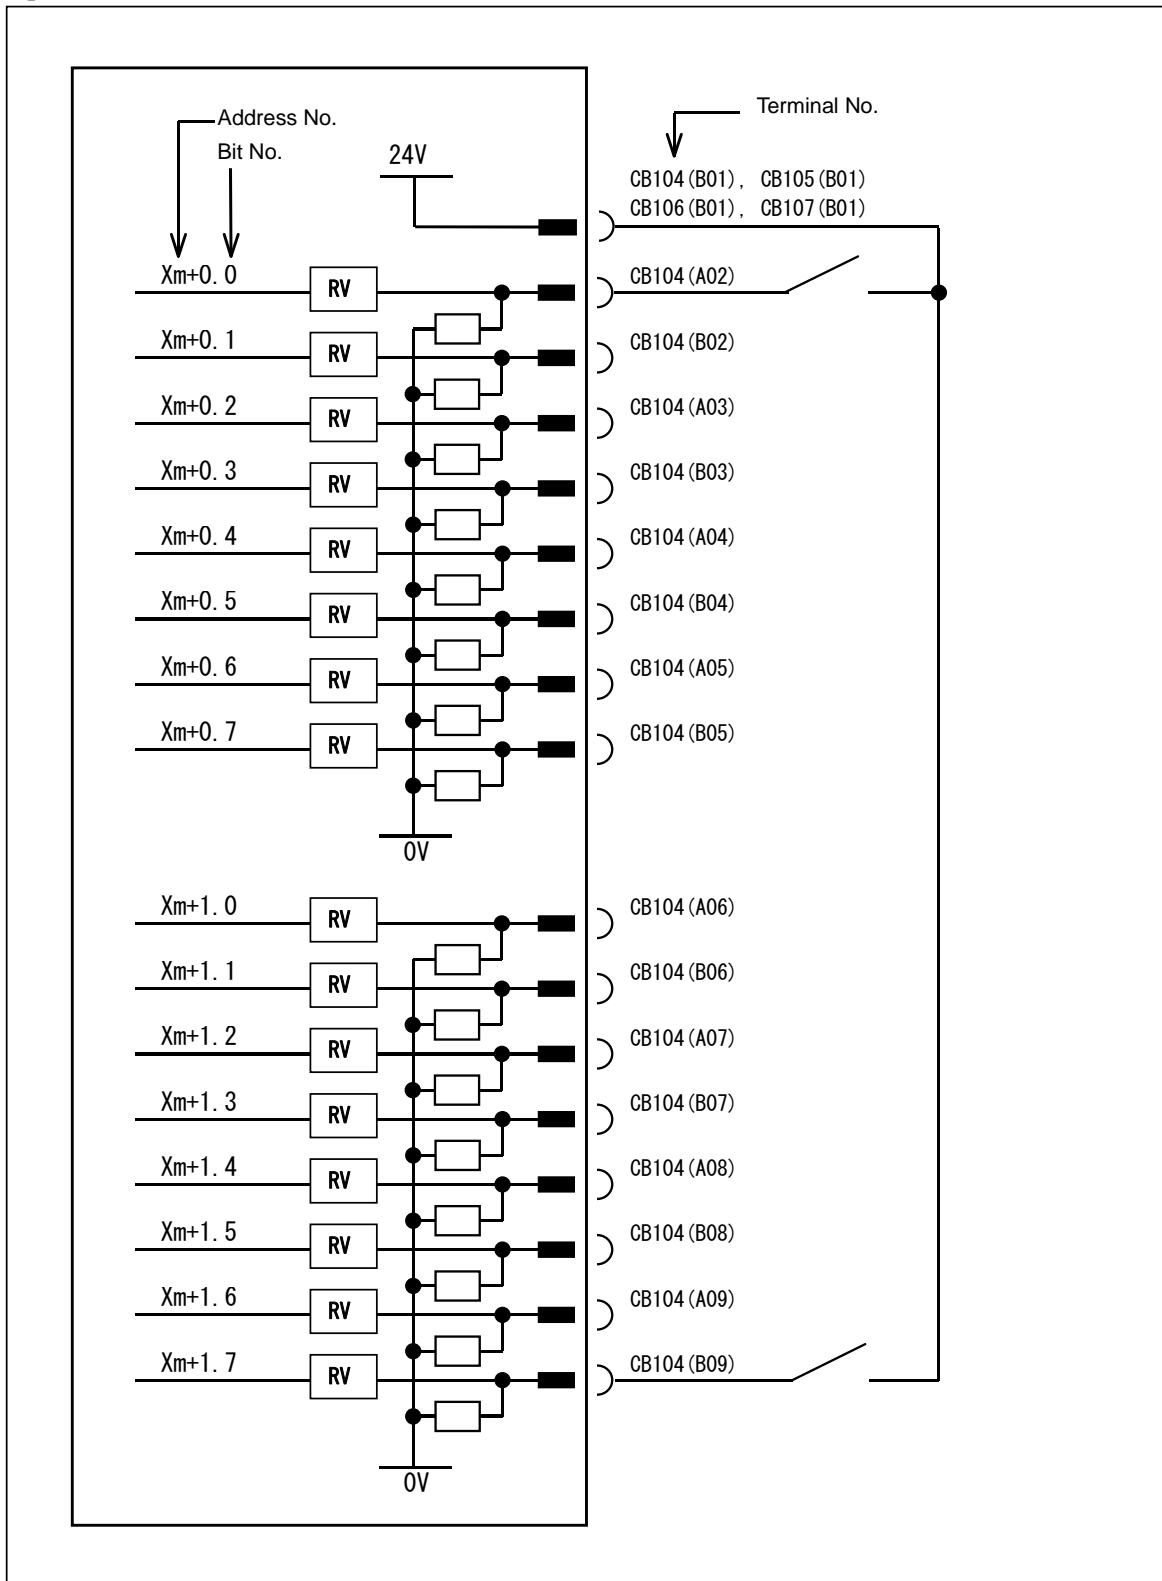

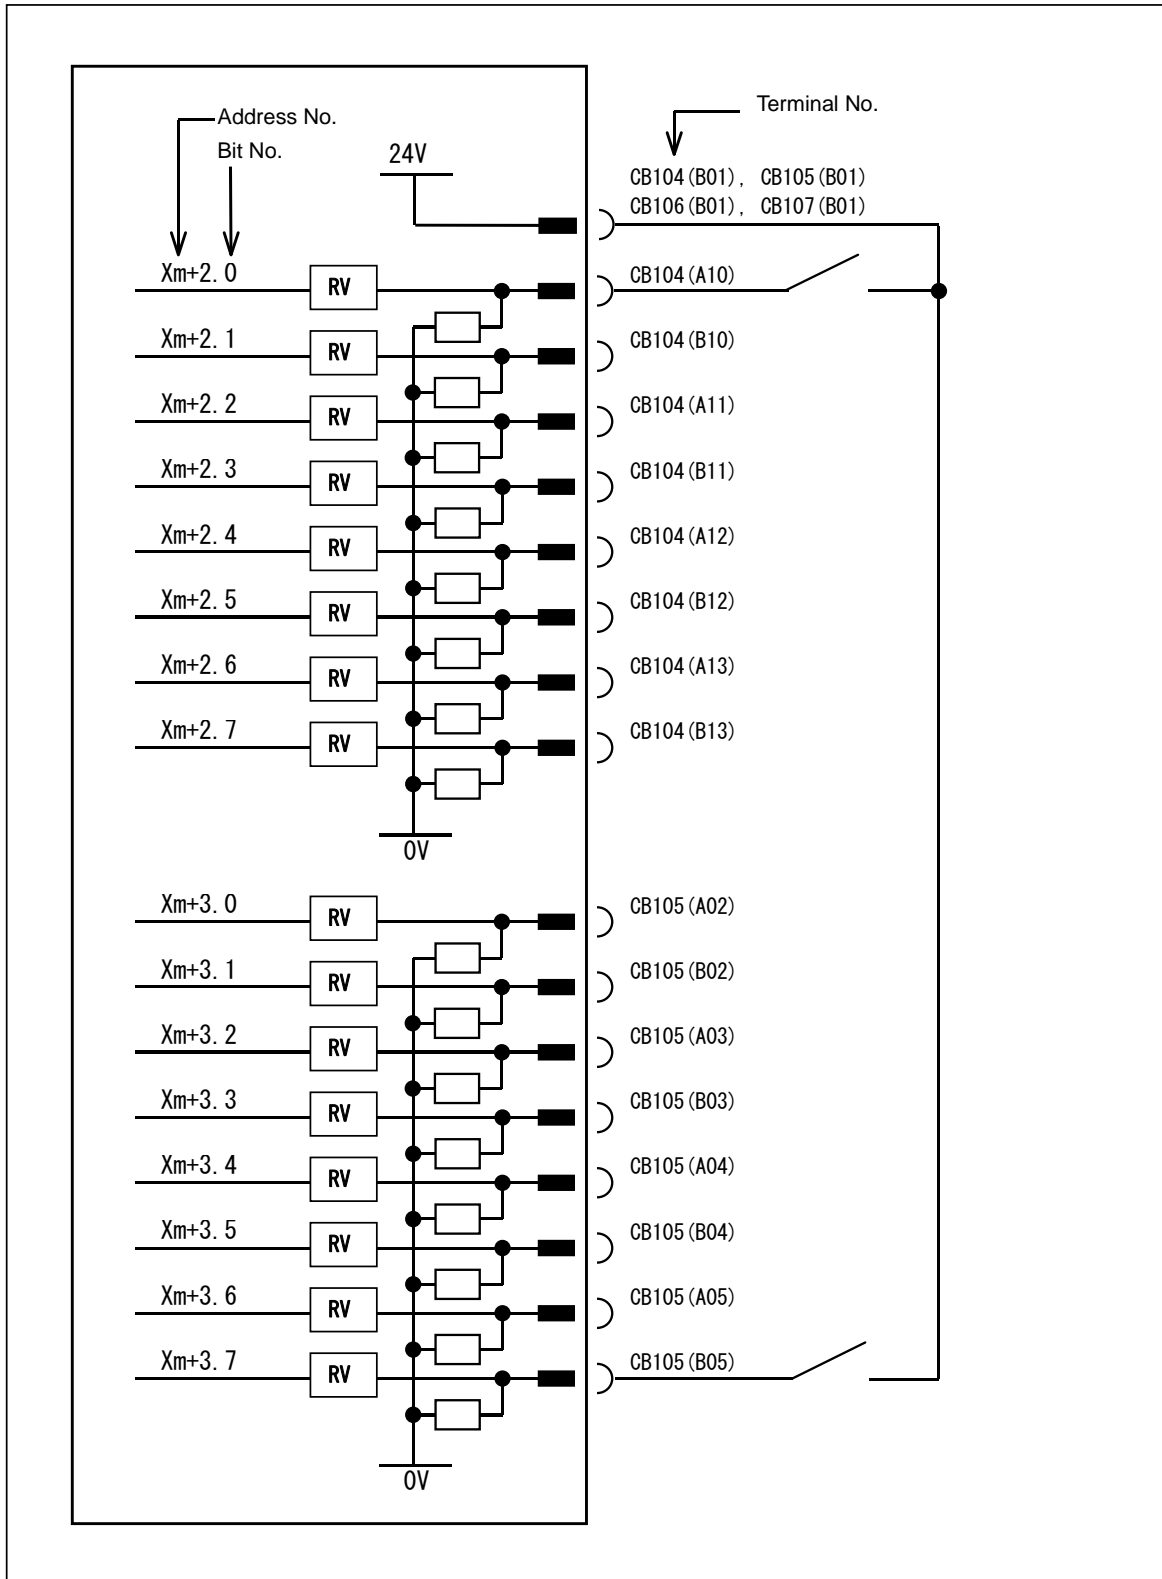


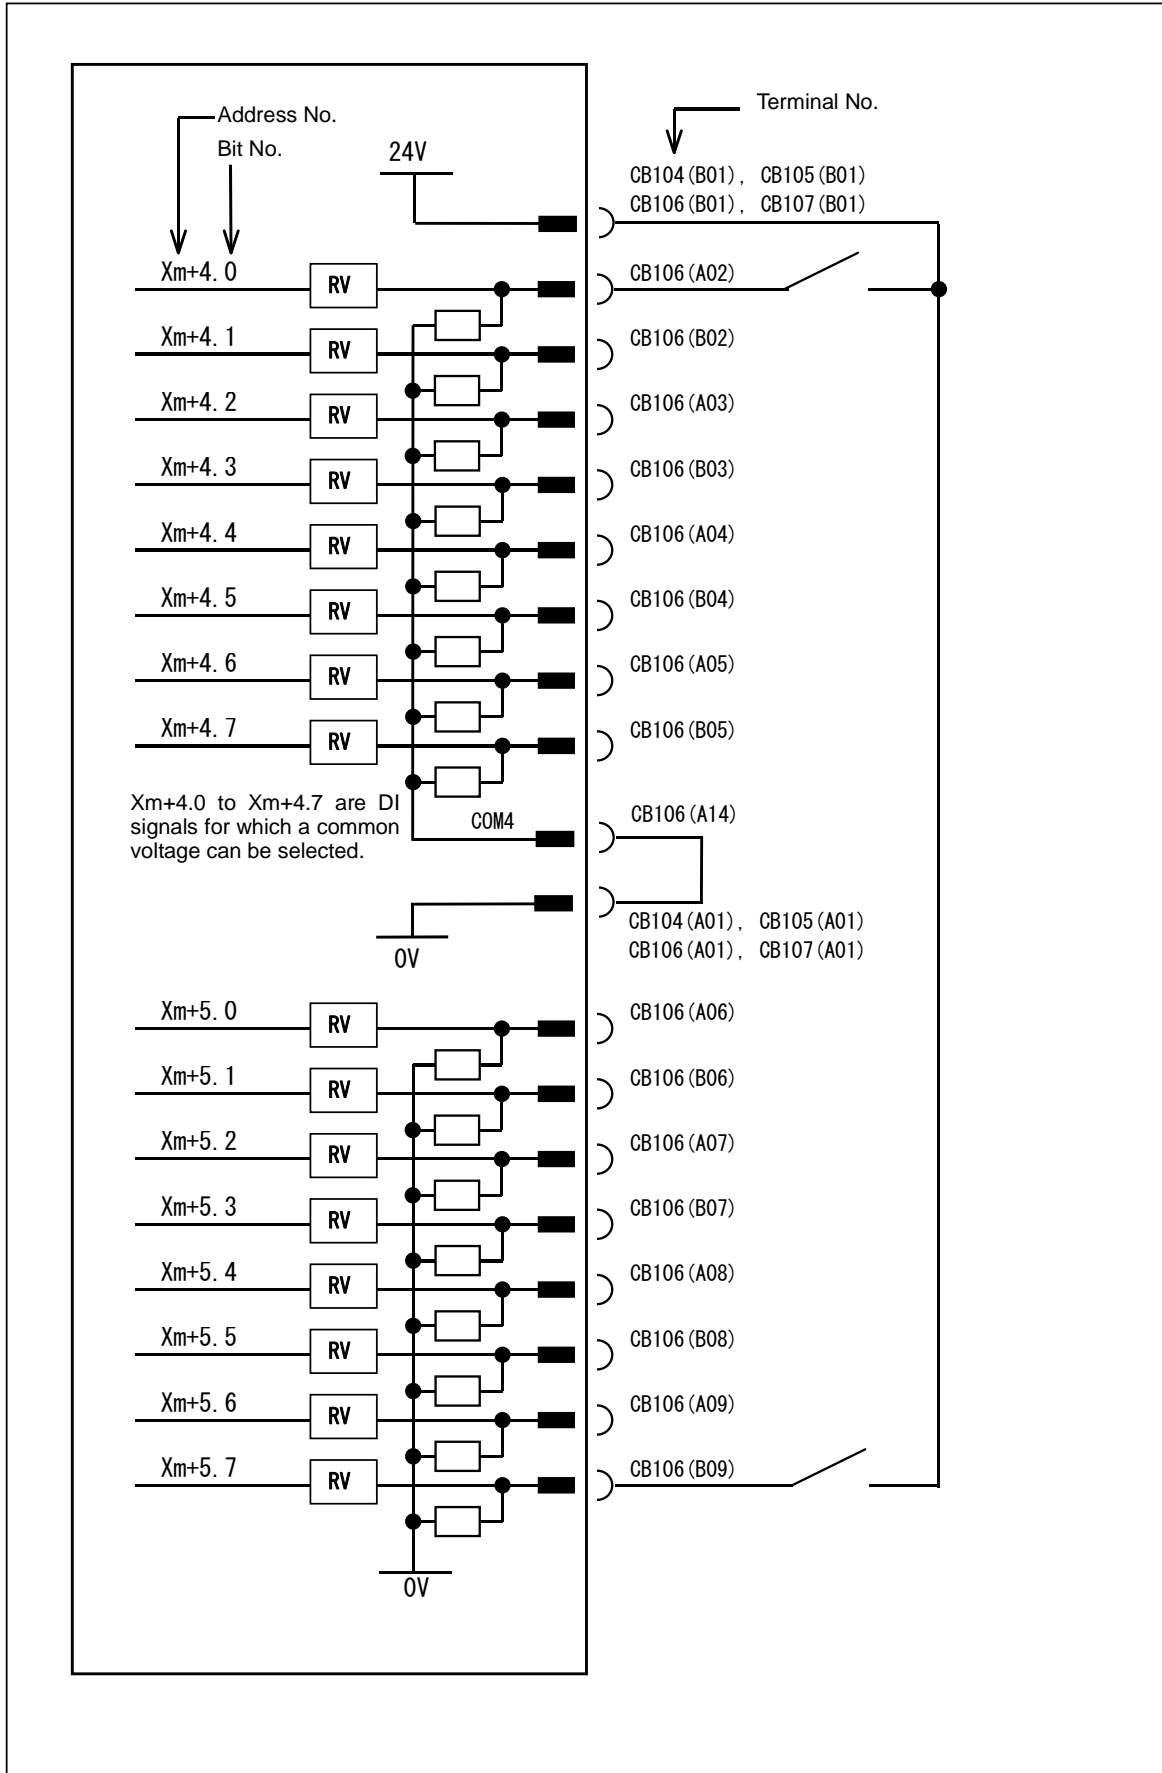

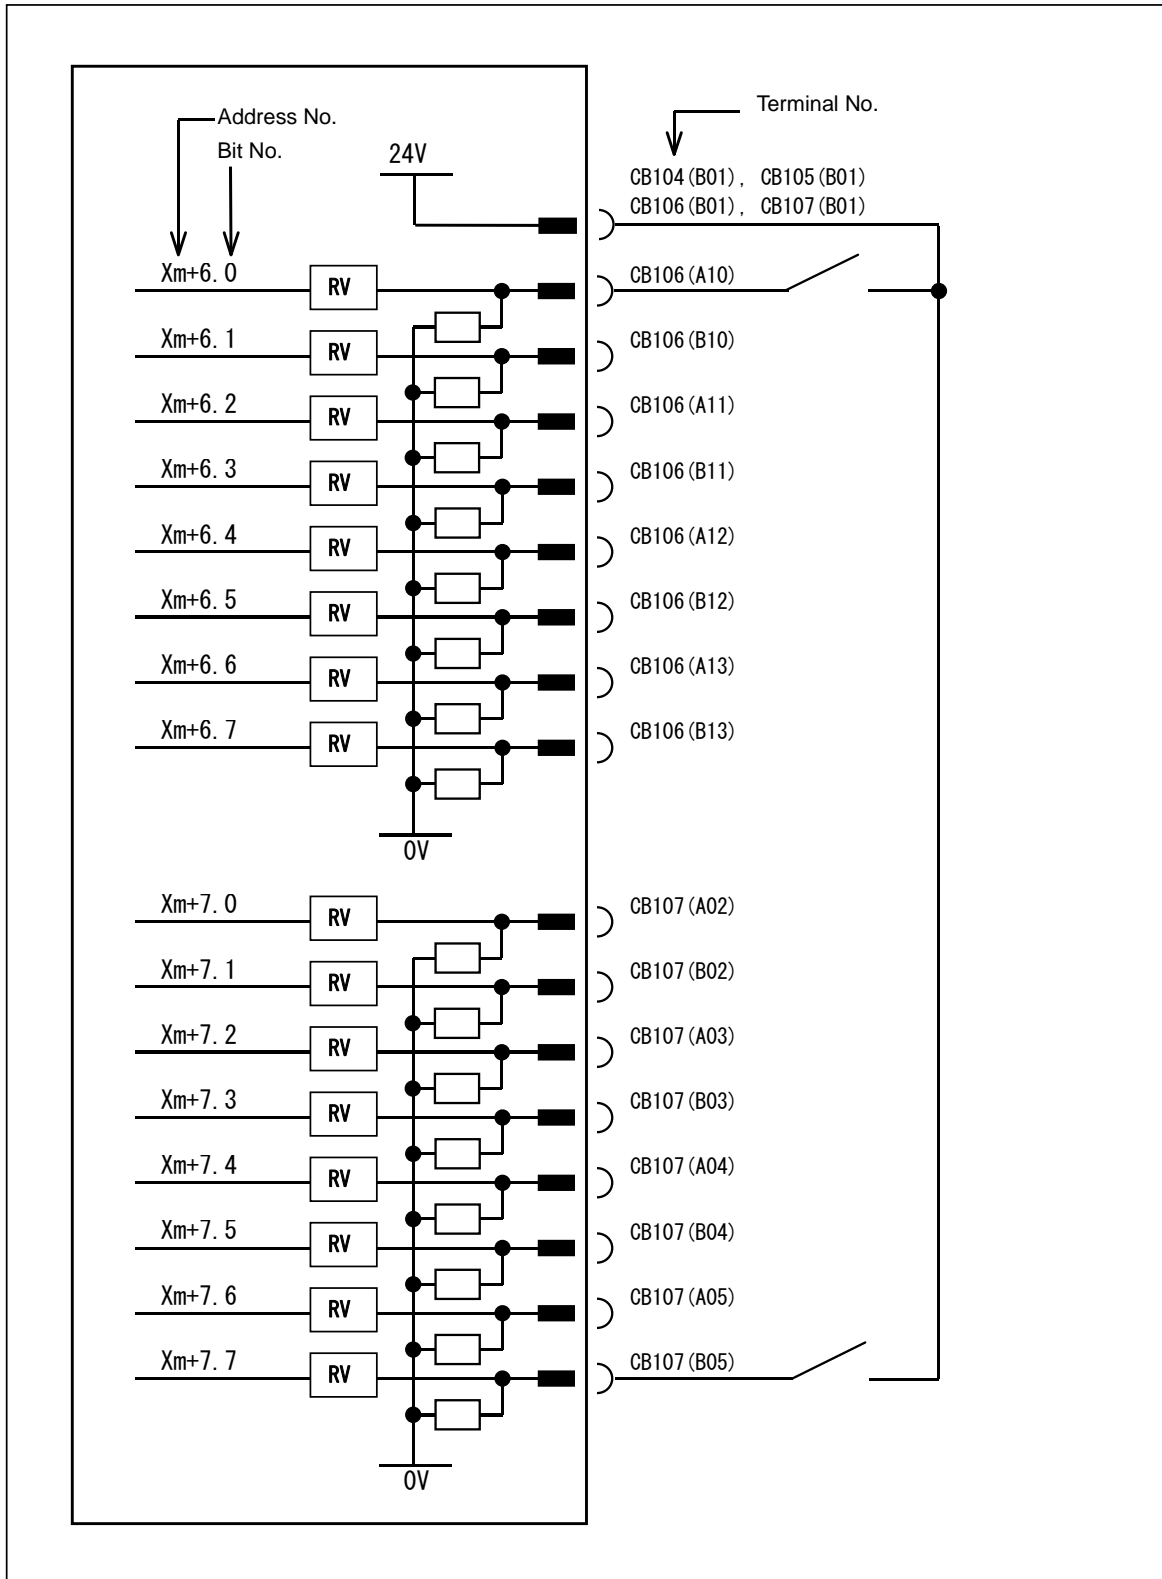

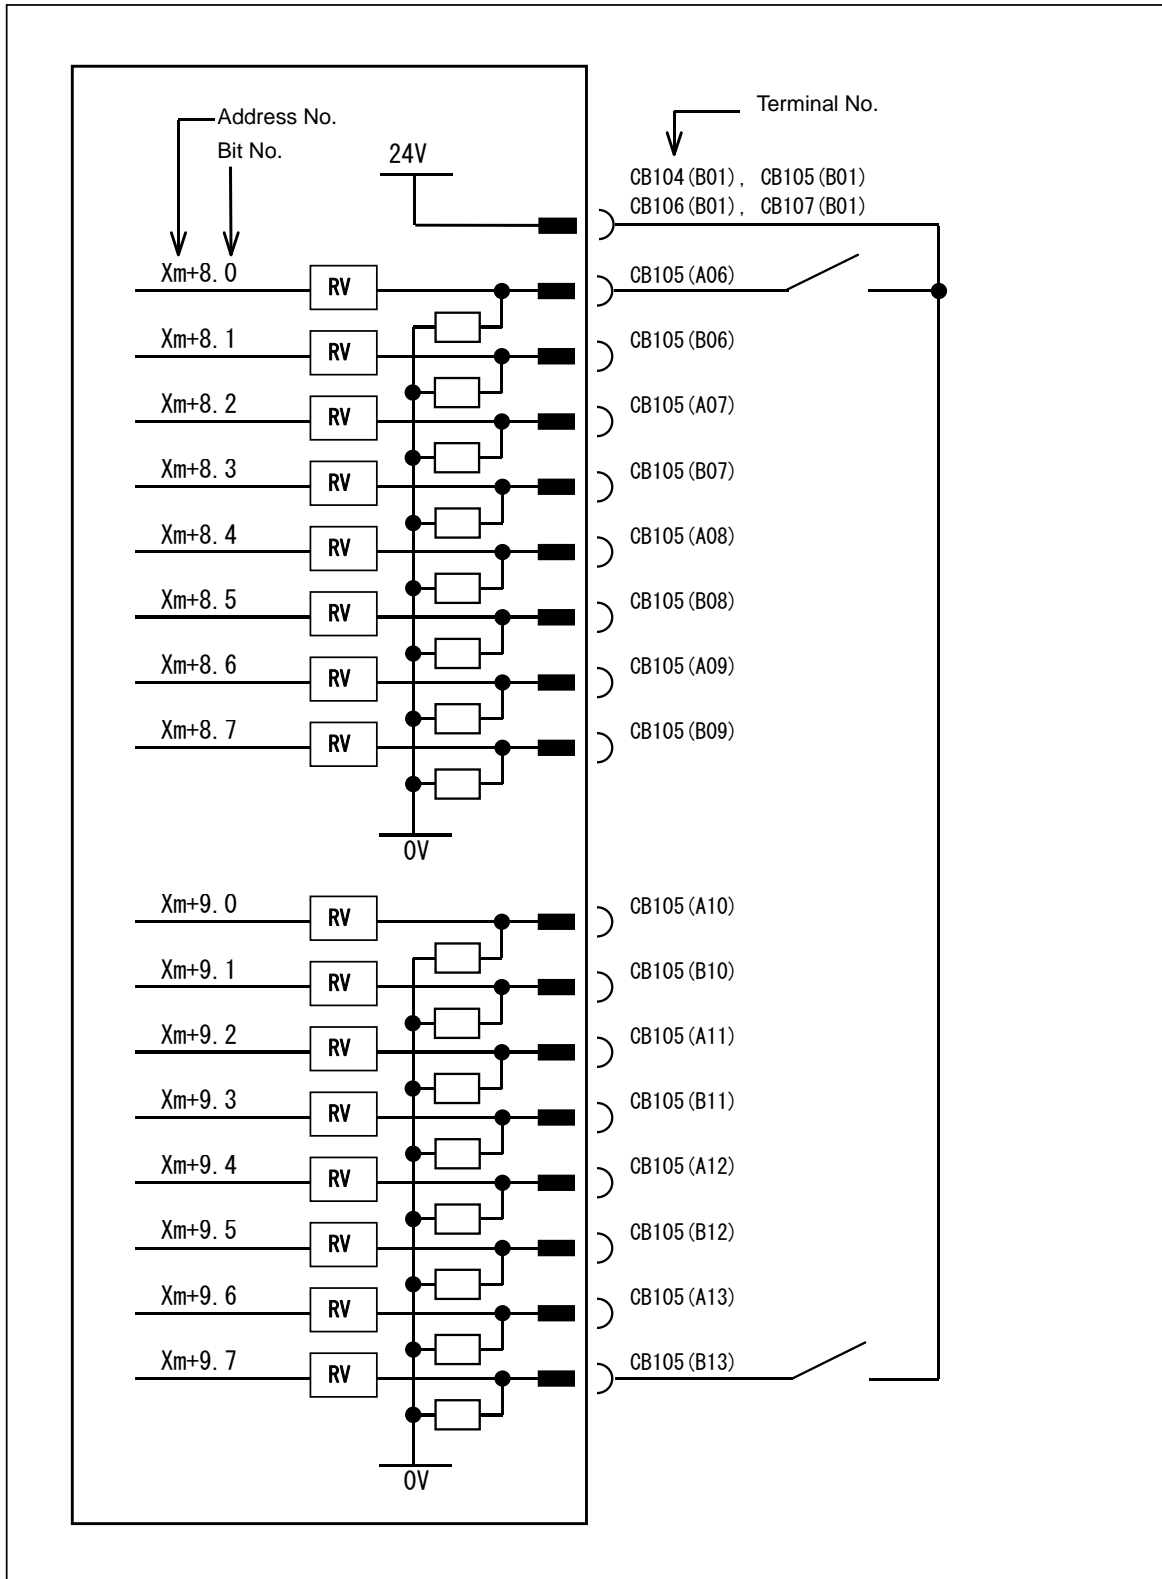

NOTE
 The delay time of the receiver for input Xm+9 is 5-22ms.
 The delay time of the receiver for the other input is 2ms(MAX).

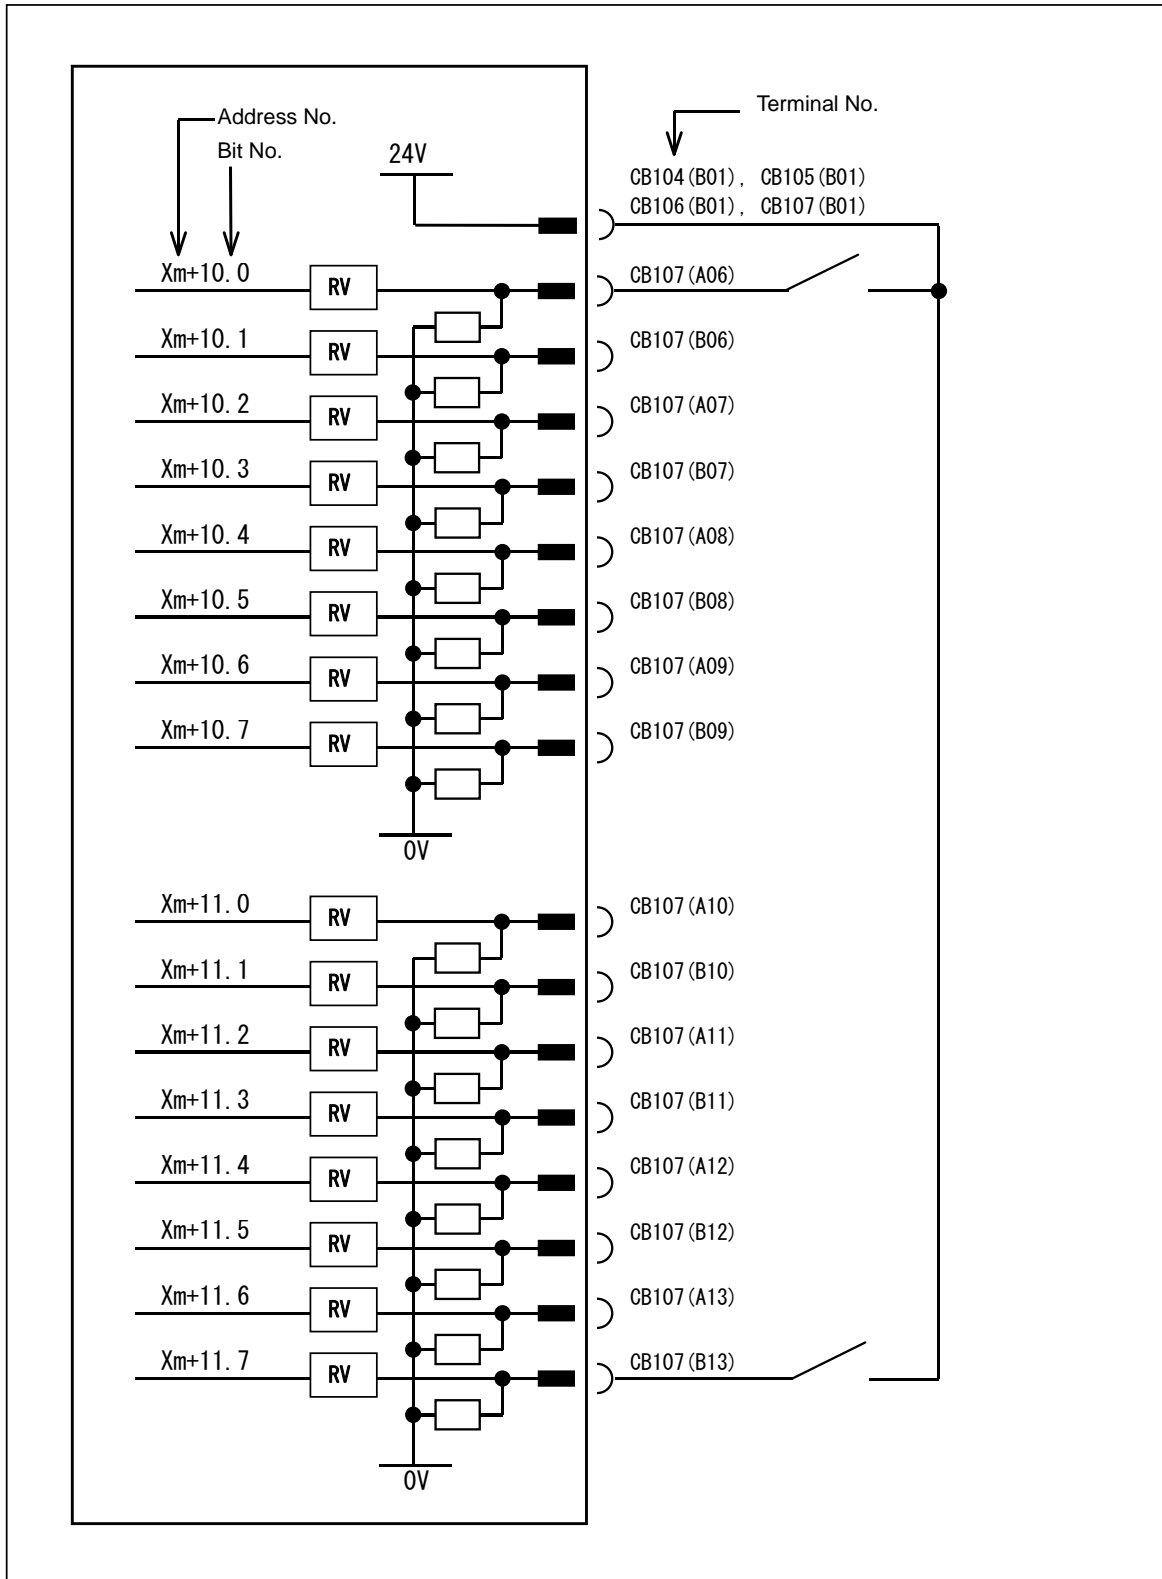

NOTE

Xm+4.0 through Xm+4.7 are DI pins for which a common voltage can be selected. That is, by connecting the COM4 (CB106-A14) pin to the +24V power supply, these DI signals can be input with their logical state reversed. If, however, some cable wires of them are connected to ground, they have the same effect as inputting an ON state DI signal. To prevent this from occurring, the connection of the COM4 (CB106-A14) pin to the 0V power supply is recommended wherever possible in terms of safety.

For the unconnected pins at the addresses for which the common voltage is fixed, the input is "0". For the unconnected pins at the addresses for which a common voltage can be selected (from Xm+4.0 to Xm+4.7), the input is "0" when the COM4 (CB106-A14) pin is connected to the 0 V power supply or "1" when it is connected to the +24V power supply. Connect COM4 when used. When addresses from Xm+4.0 to Xm+4.7 are not used, connect COM4 to the 0V power supply.

Common voltage for general-purpose DI


Address	Common voltage
Xm	Internally fixed to 0V.
Xm+1	Internally fixed to 0V.
Xm+2	Internally fixed to 0V.
Xm+3	Internally fixed to 0V.
Xm+4	Externally can be selected with COM4.
Xm+5	Internally fixed to 0V.
Xm+6	Internally fixed to 0V.
Xm+7	Internally fixed to 0V.
Xm+8	Internally fixed to 0V.
Xm+9	Internally fixed to 0V.
Xm+10	Internally fixed to 0V.
Xm+11	Internally fixed to 0V.


**CAUTION**


An output DC voltage of +24V at CB104 (B01), CB105(B01), CB106(B01) and CE107 (B01) is for DI signals. Do not supply 24 VDC to these pins from the outside.


8.12.5 DO(Output Signal) Connection

○ 64 points maximum

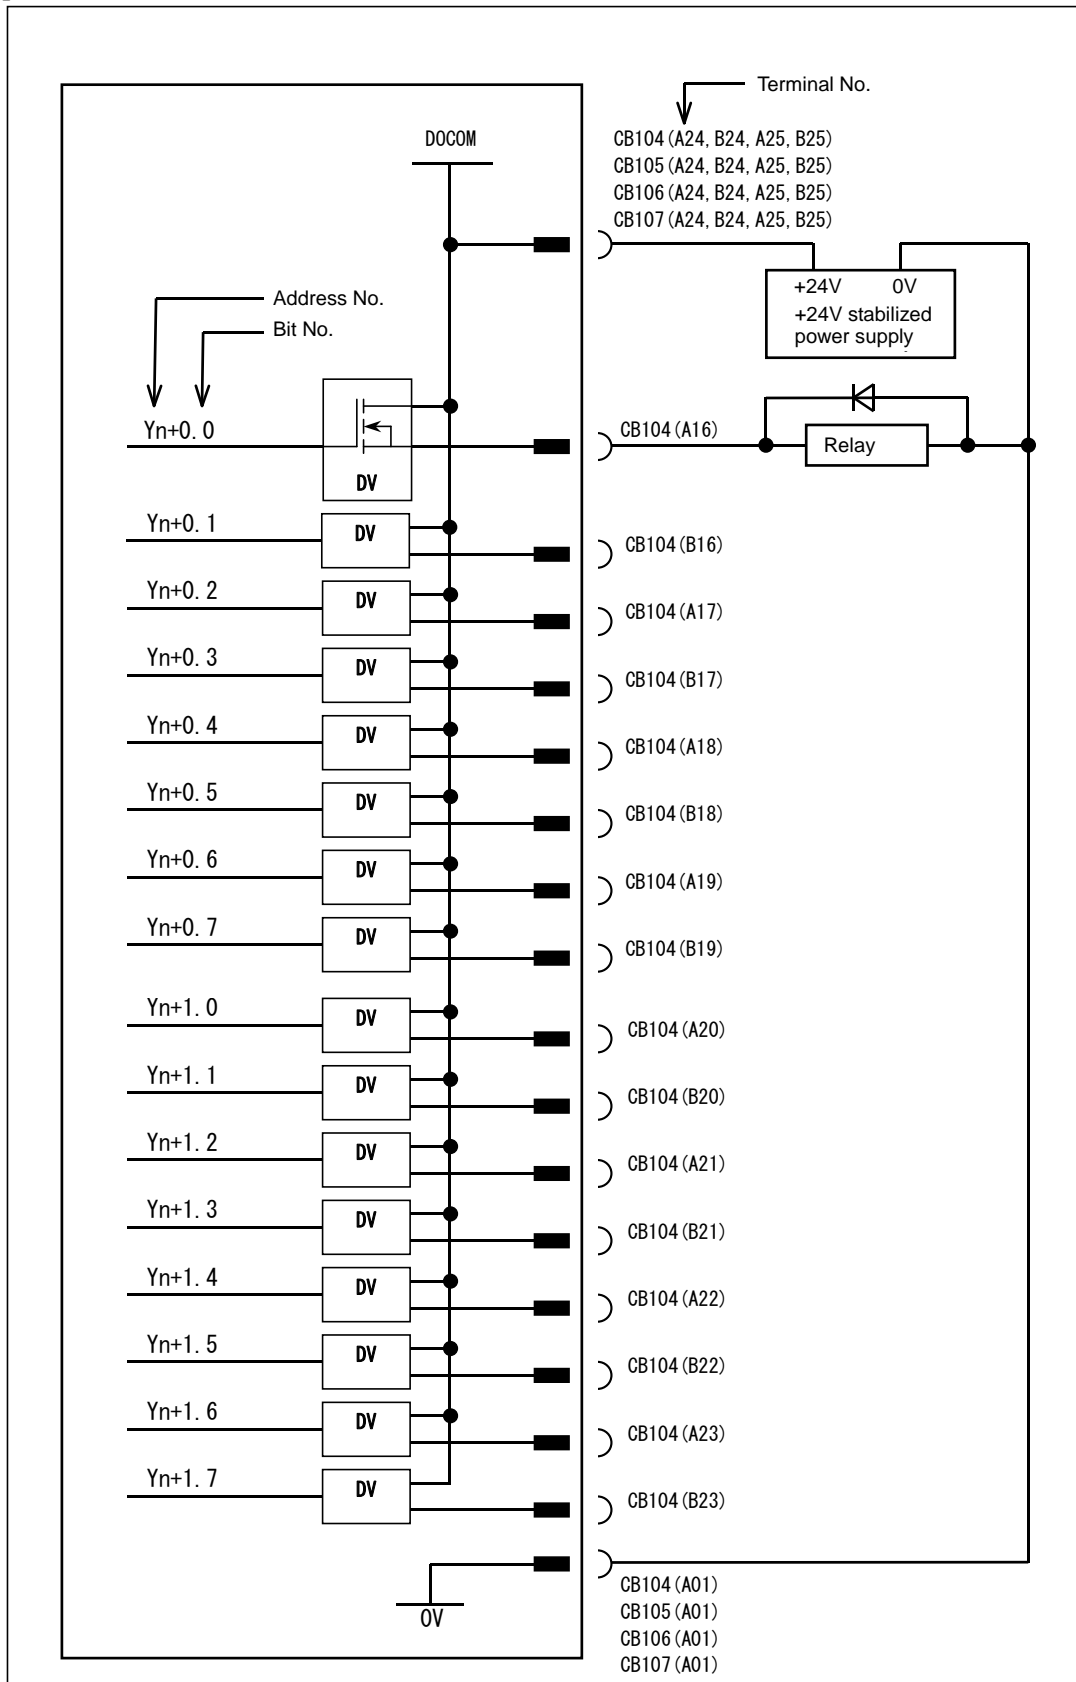

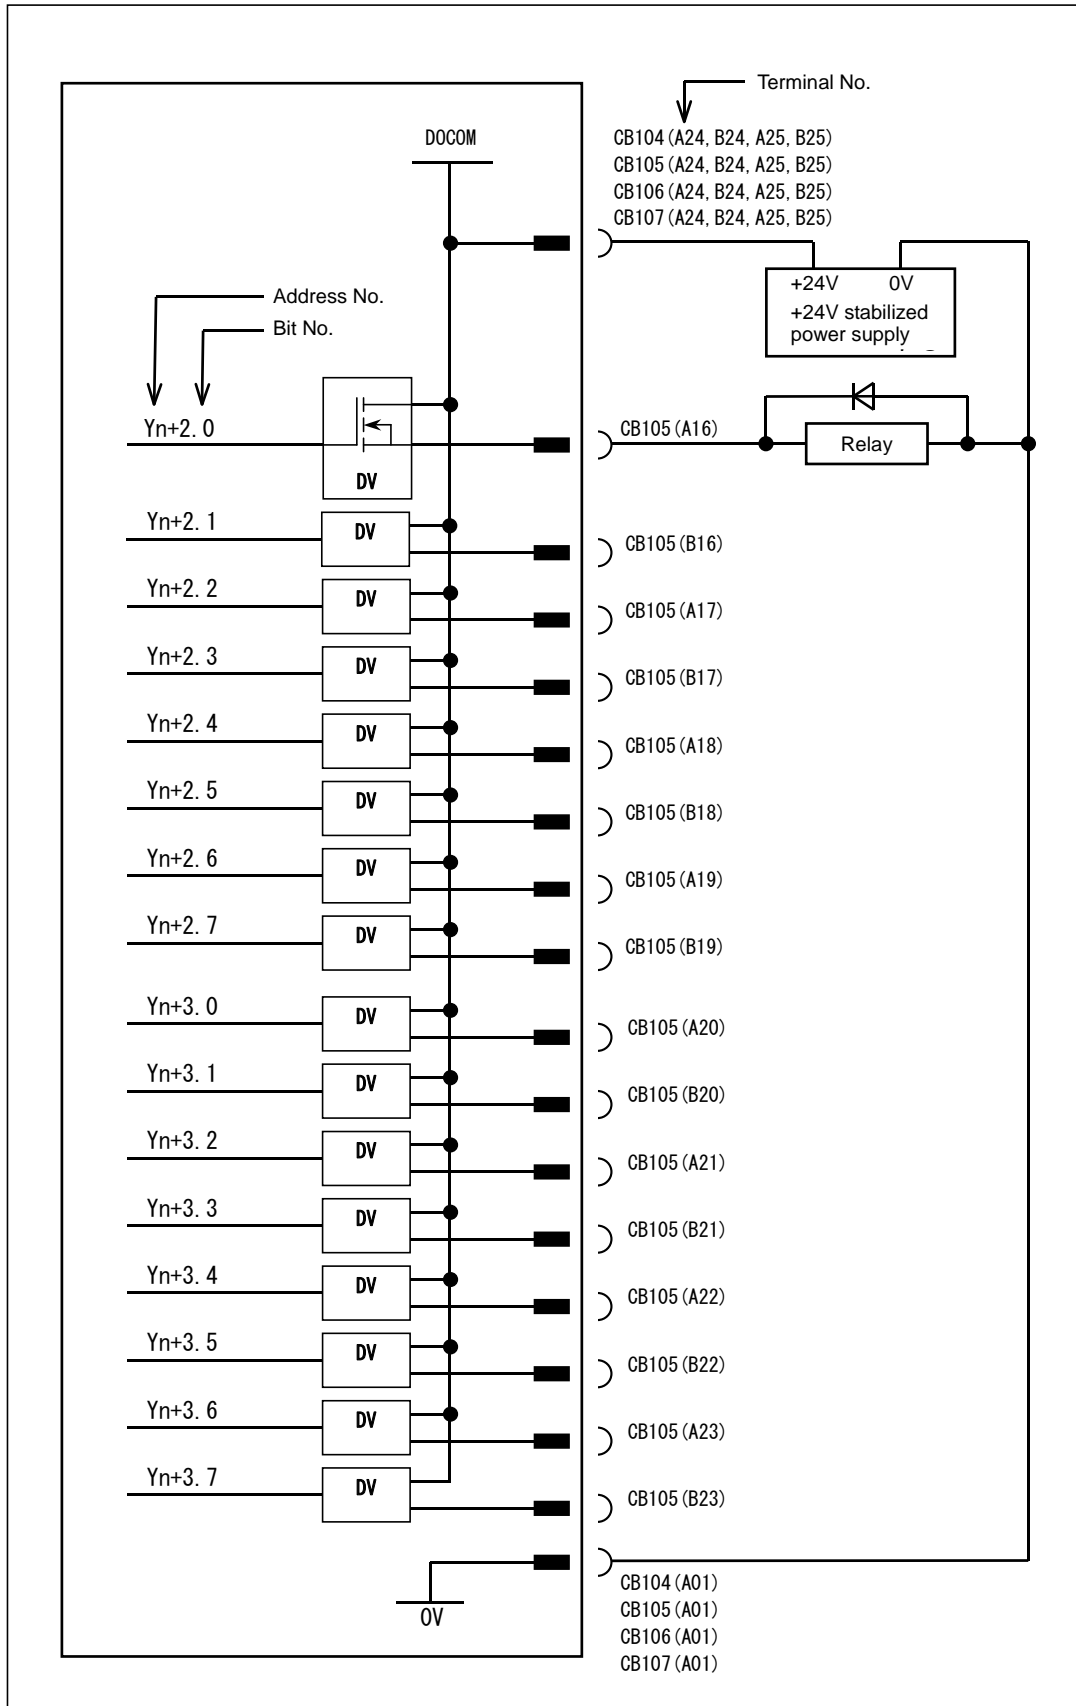

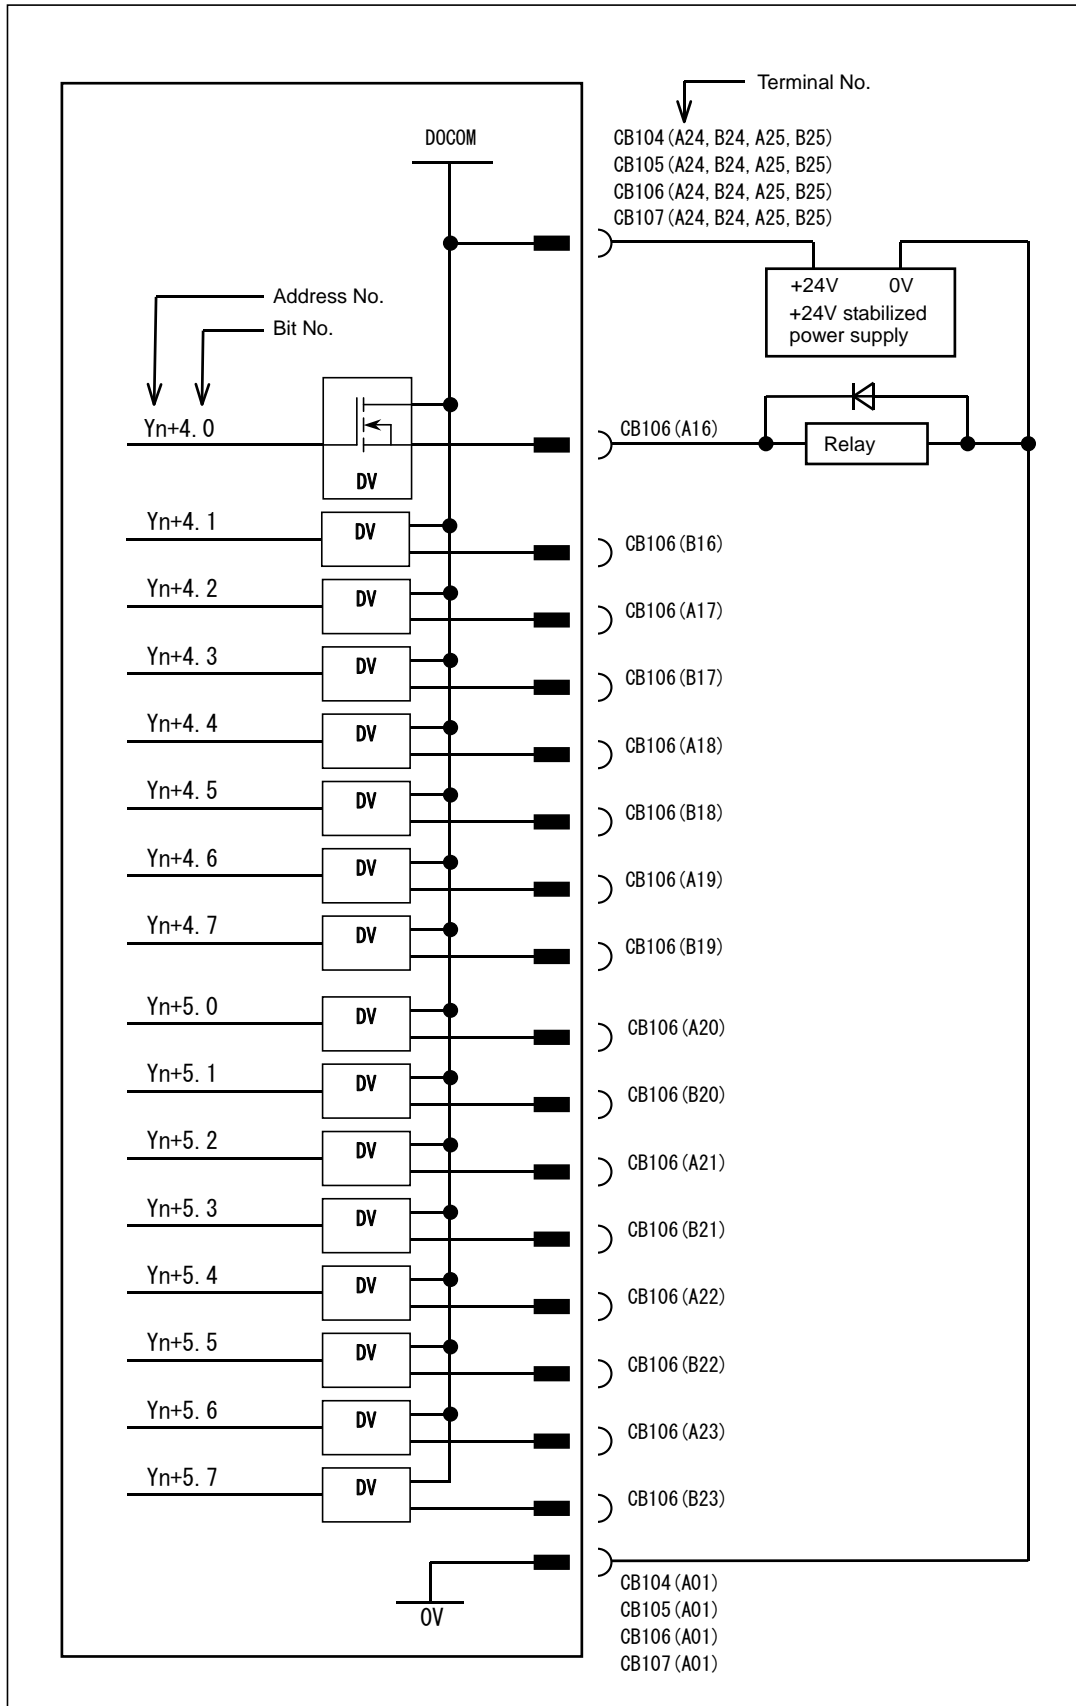


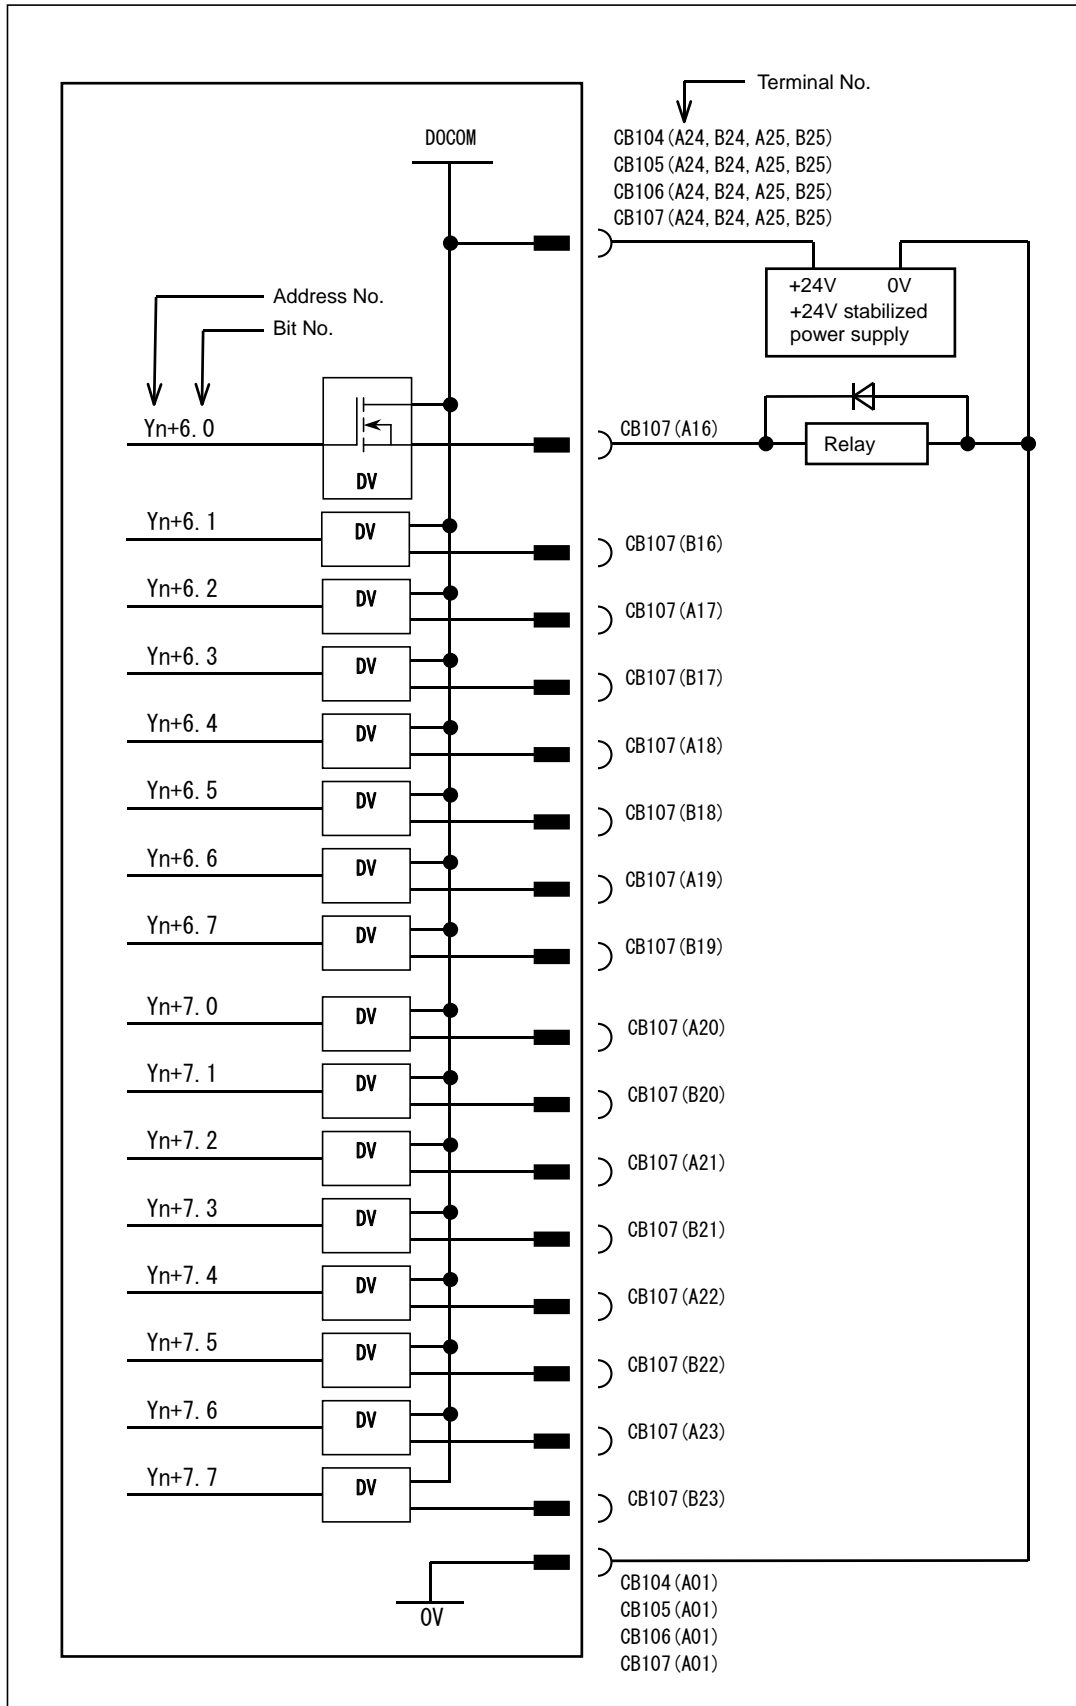


8.12.6 Manual Pulse Generator Connection

For an I/O unit for power magnetics cabinet, three manual pulse generators can be connected.
 For the connection, see Subsection 7.4.1.

8.12.7 External View

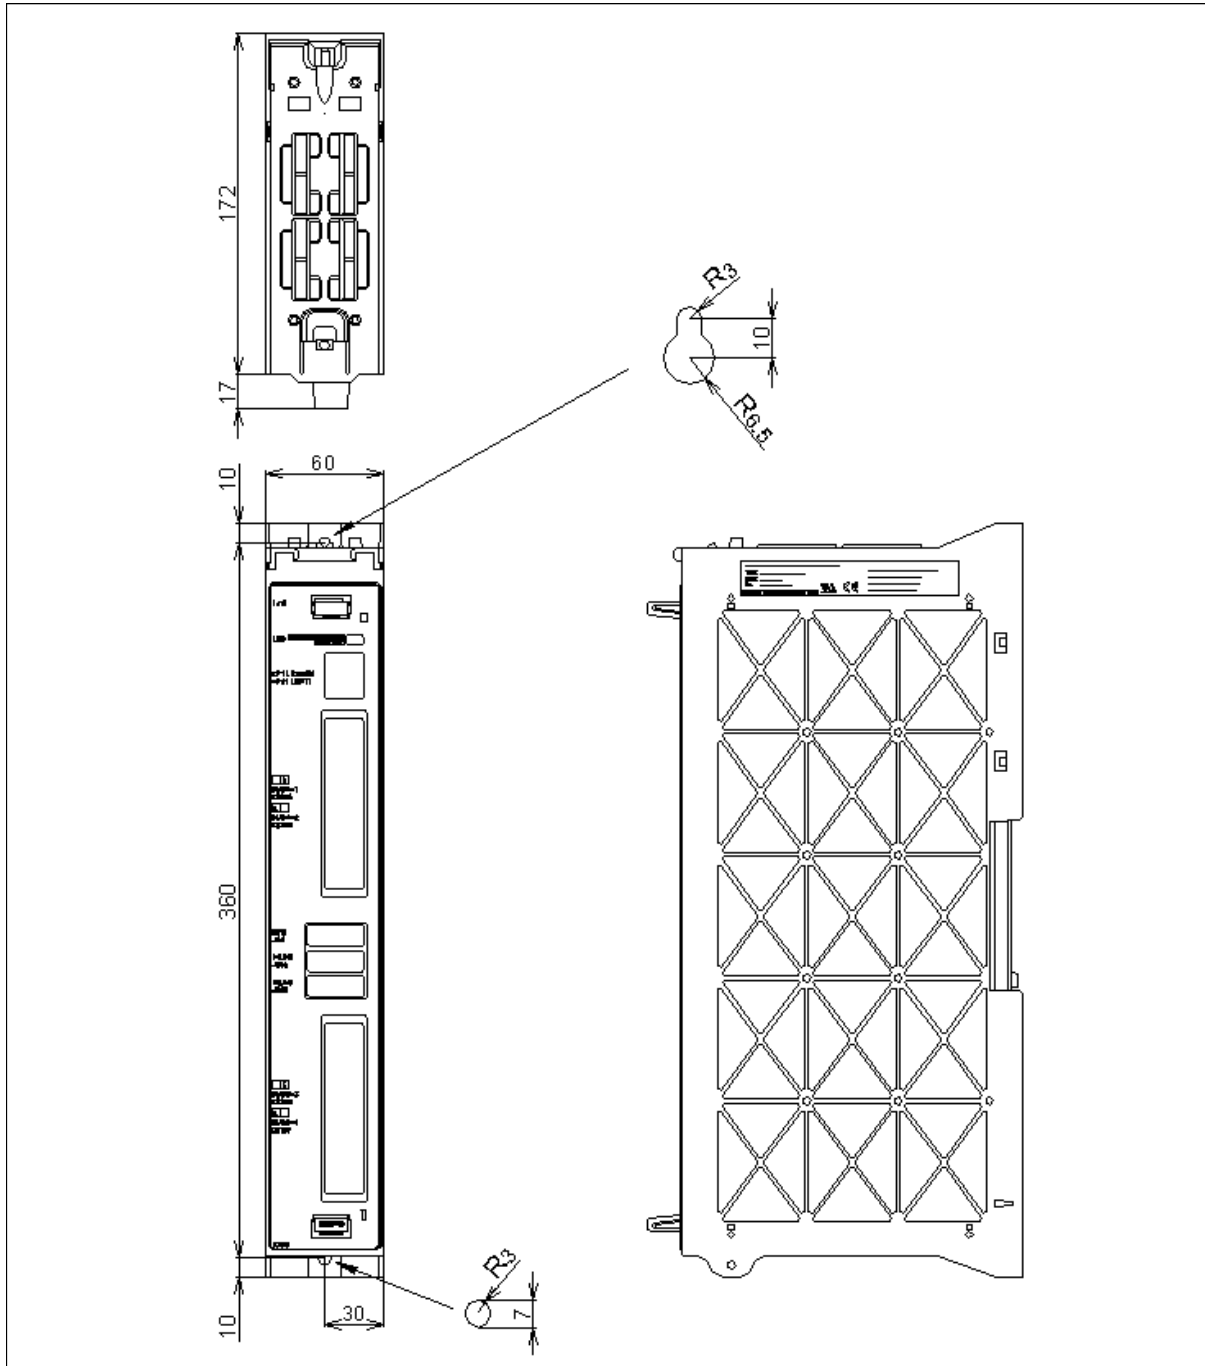

8.12.8 GND Cable Connection

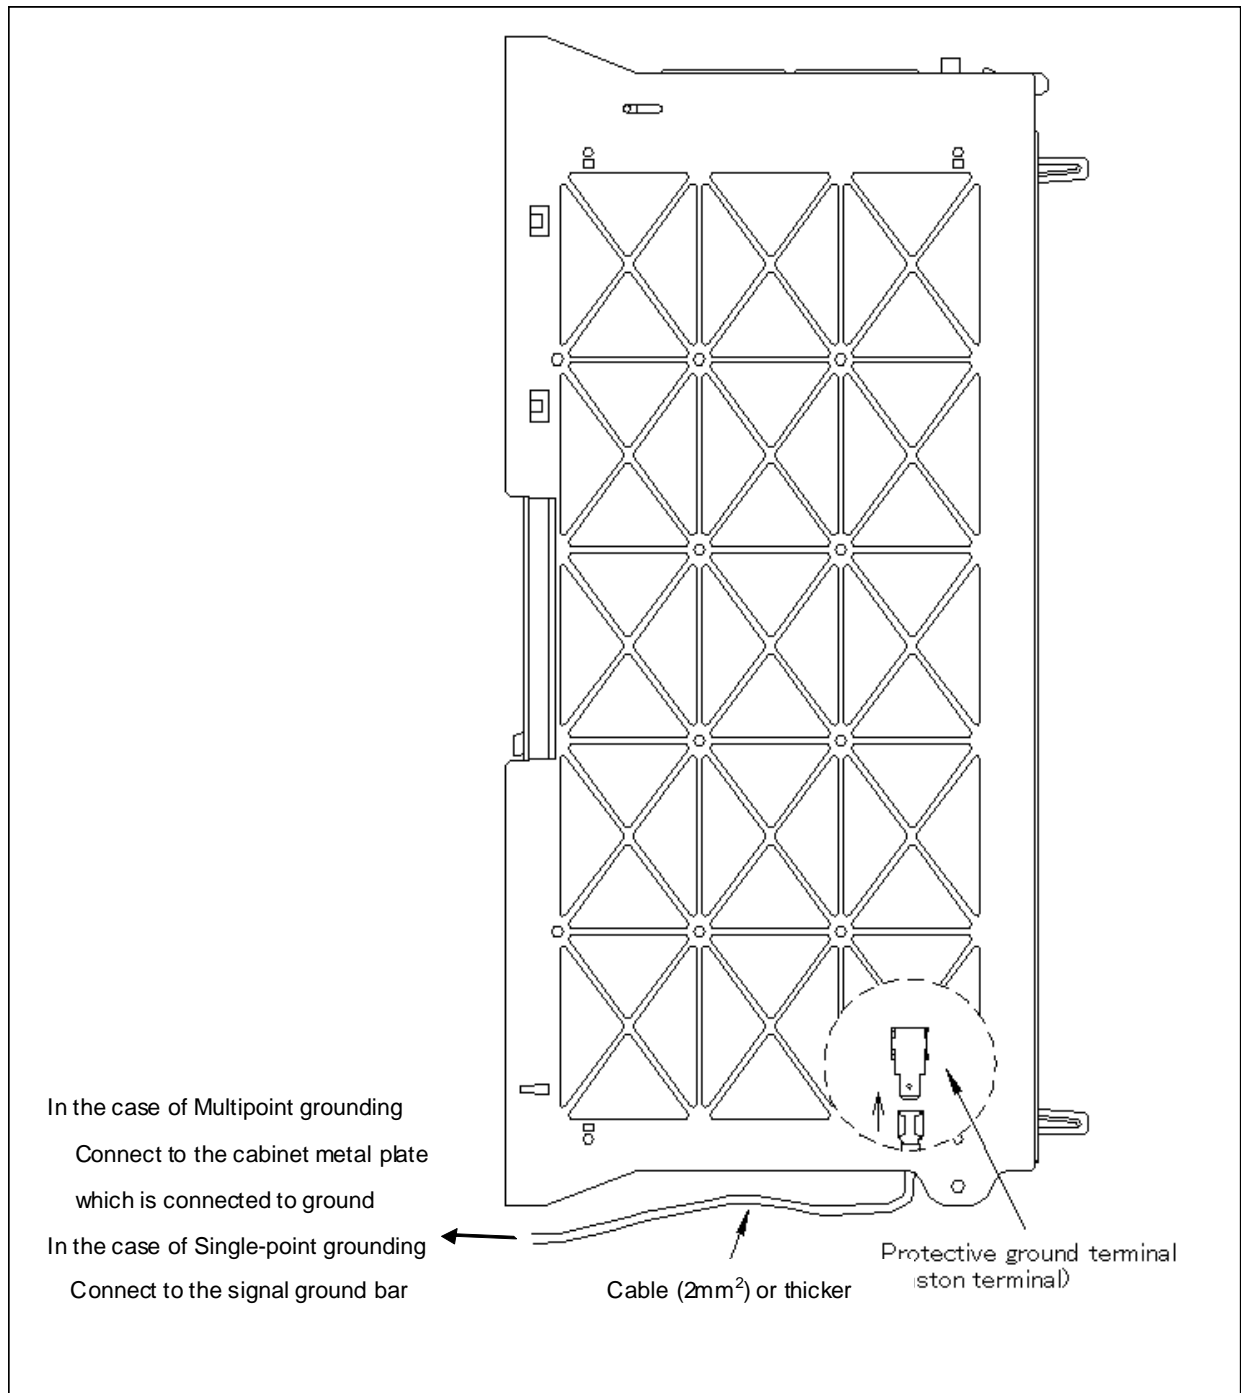

Connect the 0V line of this unit to the cabinet's metal plate which is connected to ground or signal ground bar nearby via the protective ground terminal. Ground cable can be connected to the terminal from the bottom of the unit case. Refer to Item 3.4.1.1 about Multipoint grounding or Single-point grounding. Use a faston terminal for series 250 as cable terminal.

8.12.9 Specifications

Installation specifications

Install the I/O module in a fully enclosed cabinet.

Use the units under the following ambient temperature conditions:

Operation: 0°C to 55°C

Storage and transportation: -20°C to 80°C

For other installation conditions, conform to the CNC installation conditions.

Ordering specifications

Item	Ordering specifications	Remarks
I/O unit for power magnetics cabinet	A02B-0319-C001	
Fuse (spare parts)	A03B-0815-K001	1A

Module specifications

Item	Specification	Remarks
DI points	96 points	24 V input
DO points	64 points	24 V source type output
MPG interface	Up to 3 units	

Power supply rating

Module	Supply voltage	Current rating	Remarks
I/O unit for power magnetics cabinet	24 VDC $\pm 10\%$ supplied from the power supply connector CP1. The allowance of $\pm 10\%$ should include instantaneous voltage and ripple voltage.	0.3A + 7.3mA \times DI	DI = number of DI points in the ON state.

NOTE

To connect an optical adapter for the I/O Link *i* to both connectors JD1A and JD1B, the above power supply rating + 70mA is required.

If you use the power supply which is output from CP2, add the amount to the above current rating .

DI (input signal specifications)

Number of points	24 points (per module)
Rated input	DC24V, 7.3mA
Delay time	The receiver delay time is 2 ms (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

DI (contact specifications)

Contact rating	30 VDC, 16 mA or more
Leakage current between contacts when opened	1mA or less(26.4V)
Voltage decrease between contacts when closed	2 V or less (including a cable voltage decrease)

DO (output signal specifications)

Maximum load current when ON	200 mA or less including momentary current per signal. 11.2 A or less for DO signals in all
Saturation voltage when ON	1 V (maximum) when the load current is 200 mA
Withstand voltage	24 V +20% or less including momentary variations
Leakage current when OFF	20 μ A or less
Delay time	The driver delay time is 50 μ s (maximum). In addition, [I/O Link transfer time between CNC and I/O module] and [ladder scan period (depending on CNC)] must be considered.

⚠ CAUTION

- 1 When inductive load is connected to DO terminal, connect a diode in parallel in order to reduce the noise..
- 2 When capacitive load is connected to DO terminal, connect a resistor in series in order to diminish the rush current.

Power supply for DO load (DOCOM)

Input voltage : min 0V, max 26.4V

Be sure to connect all power supply for DO load (DOCOM) pins.

Turn on the power supply for DO load (DOCOM) at the same time as the power for the control unit.

Turn off the power supply for DO load (DOCOM) when or before the power for the control unit is turned off.


⚠ WARNING

For the safety of the system, don't supply the power for the load (DOCOM) when the power for the I/O Unit is off. If the power for the load (DOCOM) is supplied when the power for the I/O Unit is off, invalid output or malfunction may cause an accident.

8.12.10 Other Notes

Address allocation

For the I/O unit for power magnetics cabinet, I/O addresses are mapped as follows.

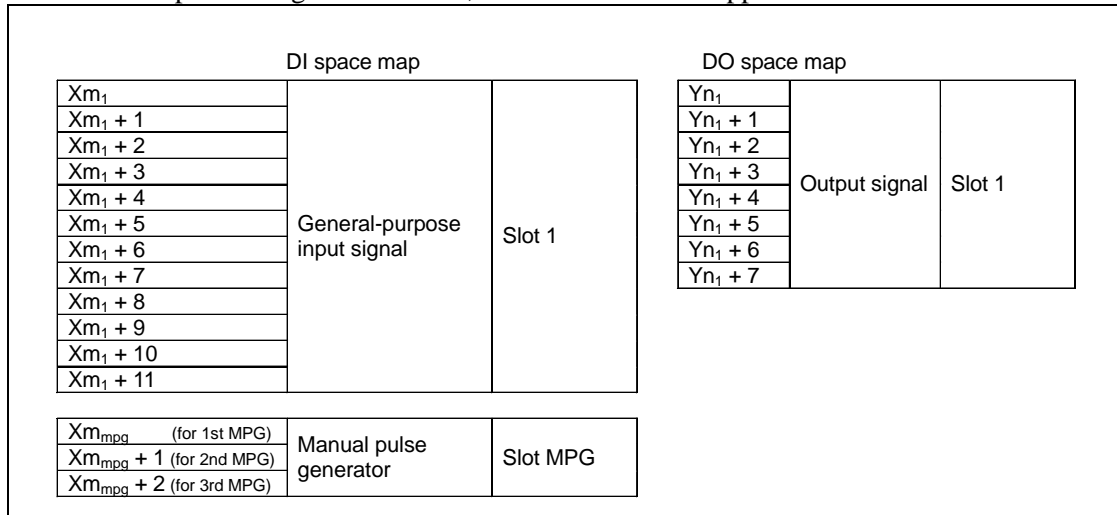

Xm₁, Xm_{mpg}, and Yn₁ indicate the start address at allocation.

Basically, for an I/O unit for power magnetics cabinet, allocate 12-byte DI addresses to slot 1 and 8-byte DO addresses to slot 1.

An I/O unit for power magnetics cabinet has an interface for three manual pulse generators. To use manual pulse generators, allocate addresses to slot MPG. With this setting, addresses can be allocated to the three manual pulse generators at a time (addresses cannot be allocated individually to manual pulse generators). Do not use the addresses with the ladder because the CNC processes the manual pulse generator signals directly.

ON/OFF of the power supply (DO common) for DO signals (output signals)

For ON/OFF of the power supply pin (DOCOM) for the DO signals (output signals), see Subsection 8.2.4.4.

Parallel DO (output signal) connection

For parallel connections of DO signals (output signals), see Subsection 8.2.4.4.

DO (output signal) alarm detection

The DO driver of the I/O unit for power magnetics cabinet is capable of detecting an overcurrent and measuring its own temperature. If an accident, such as the connecting of the cable to ground, causes an abnormal increase in the load current or in the driver temperature, a protection circuit, which is provided for each DO driver, is activated and keeps the DO signal in the OFF state until the cause of the problem is eliminated. Even if this occurs, the CNC and I/O module continue operating without entering the alarm status, but the PMC is notified of the location of the error detected by the DO driver. This information can be checked on the PMC status screen or alarm processing can be performed in advance using a ladder to help error check and recovery.

A DO error such as a ground fault is detected for each point. This DO error is transferred to the PMC system relay area as a status alarm. The following table lists system relay area information and corresponding DO data related to a status alarm. When an alarm data bit is set to “1”, the DO driver corresponding to the bit detects an error. Also see Subsection 7.3.3, “Status Alarm”.

Information output to the relay area and corresponding location where an error occurred

Information output to the system relay area						Faulty location
Type	Group number	PMC path	Slot number	Alarm information number (Intra-slot byte address)	Y address (DO address)	
0	0 to 23	1 to 5	1	0	Y _n	0th byte DO
				1	Y _{n+1}	1st byte DO
				2	Y _{n+2}	2nd byte DO
				3	Y _{n+3}	3rd byte DO
				4	Y _{n+4}	4th byte DO
				5	Y _{n+5}	5th byte DO
				6	Y _{n+6}	6th byte DO
				7	Y _{n+7}	7th byte DO

Output values of “Group number”, “PMC path”, and “Y address” depends on unit connection and I/O address assignment.

Y_n indicates the start address at allocation.

Description of “Alarm data” in the system relay area

Alarm data							
#7	#6	#5	#4	#3	#2	#1	#0
DO ground fault at bit 7	DO ground fault at bit 6	DO ground fault at bit 5	DO ground fault at bit 4	DO ground fault at bit 3	DO ground fault at bit 2	DO ground fault at bit 1	DO ground fault at bit 0

⚠ CAUTION

- 1 he output protection function is not for external equipment but for internal device of the module.
- 2 he output protection function can't protect the internal device in any case. If the output protection function is activated, remove the cause immediately. If the output exceed the absolute maximum rating, the output protection function may not operate normally or the internal device may break before the output protection function operates.
- 3 f the over current is continued with a condition that the output protection function can't operate normally, the output might emit smoke or take fire.

9 STOP AND EMERGENCY STOP

9.1 STOP MODES

If the control unit enters the alarm state, the servo and spindle motors stop ^(Note).

NOTE

A servo motor attached to a vertical axis or spindle which is not manufactured by FANUC may not stop. And, a stop of the spindle motor depends on a Ladder program.

There are the following stop modes:

1. Stop by shutting off the motor power
2. Controlled stop without shutting off the motor power
3. Stop by shutting off the motor power after a controlled stop

A controlled stop is the quickest. However, a stop may be made by immediately shutting off the motor power for safety reasons.

⚠ WARNING

Pressing the RESET key stops the running program. As a result, the servo axis stops and the spindle axis remains rotating without changing the speed. The RESET key may not function due to an MDI failure or the like, so, for safety, use the emergency stop button instead of the RESET key to stop the motor safely. When a failure of the control unit, machine contact, or connection is also assumed, further safety actions must be taken.

9.2 SHUTTING OFF THE MOTOR POWER

The motor power may be shut off through an IGBT (transistor) or an electromechanical scheme that controls mechanical contacts. When an amplifier is used, the motor power is shut off by an IGBT (transistor) based on the control unit alarm state (or Ladder program). To shut off the motor power through an electromechanical scheme, a line contactor must be installed on the power input line in the Power Supply, thereby providing a direct contactor shut-off route. (See Fig. 9.5 (a) in Section 9.5, "EMERGENCY STOP SIGNAL.")

The Power Supply provides MCC control signals (MCCOFF3 and MCCOFF4) for controlling the contactor. However, these signals are enabled only when the motor power to all servo and spindle amplifiers connected to the Common Power Supply is shut off through the IGBT.

Example 1)

When the *ESP signal is input to the Power Supply

The motor power to both servo and spindle amplifiers is shut off by the IGBT, after which MCC control signals are output.

Example 2)

When a servo alarm occurs

The motor power to the servo amplifier is shut off by the IGBT. When the spindle motor works without any trouble, however, the spindle motor can be controlled independently and the motor power to the spindle amplifier is not shut off by the IGBT. In this case, MCC control signals are not output. When a spindle emergency stop signal is input using the Ladder program, the spindle motor is decelerated to a stop. Then, the motor power is shut off through the IGBT, MCC control signals are output, and the motor power is shut off electromechanically.

A failure in the amplifier may disable MCC control signals. To ensure motor power shut-off, therefore, a circuit must be designed in a redundancy configuration having a route that is independent of the shut-off function of the amplifier.

9.3 STOPPING THE SPINDLE MOTOR

While the spindle motor is running, shutting off the motor power allows the spindle motor to coast at a speed maintained before shut-off and eventually stop (after a while). However, there may be cases where the spindle motor should be stopped as soon as possible for safety reasons. In such cases, a stop of the spindle motor depends on a Ladder program prepared by the machine tool builder. If the CNC detects an abnormal condition, it outputs an alarm to the PMC. The Ladder program should specify processing to be performed when an alarm is output: allowing the spindle motor to continue running, decelerating the spindle to a stop, or causing the spindle to coast, for example.

To decelerate the spindle motor to a stop, a spindle emergency stop signal (such as *ESPA (G71.1) or *ESPB (G75.1)) can be input in the PMC. Inputting this signal cause the spindle motor to be decelerated to a stop. (A Ladder program must be created so that this signal is input if an alarm occurs.) The same effect can be achieved by using the Power Supply emergency stop input (connector CX4). When an emergency stop signal is connected to the *EMGPSM emergency stop input (connector CX4), therefore, the spindle is decelerated to a stop if the CNC enters the emergency stop state.

CAUTION

- 1 If the control unit enters the system alarm state, the Ladder program does not run. In this case, the spindle amplifier can be decelerated to a stop. Make proper parameter settings because such a stop depends on the settings.
- 2 If the spindle motor cannot be controlled due to an alarm in the spindle amplifier itself or for some other reason, the motor power is shut off by the IGBT immediately. After the servo motor has stopped, an MCC control signal is output.

9.4 STOPPING THE SERVO MOTOR

Shutting off the motor power brings the servo motor to a dynamic brake stop. A dynamic brake stop is braking performed by separating the synchronous rotator from the driving power, and consuming generated electric energies with the coil as well as the built-in resistor of the servo amplifier. With this function, shutting off the motor power does not allow the servo motor to coast like the spindle motor.

Servo motor stop mode depends on the type of a control unit alarm.

Example)

1. PS alarm caused by an NC program error or the like
The motor power is not shut off.
2. Control unit fan stop
A single-block stop is made. The motor power is not shut off.
3. Emergency stop state
A dynamic stop is made as a rule. By setting relevant parameters, however, it is also possible to decelerate the servo motor to a stop, and then to shut off the servo motor power.

4. System alarm

A dynamic brake stop is made.

If the servo motor cannot be controlled, a dynamic brake stop is unconditionally made.

9.5 EMERGENCY STOP SIGNAL



WARNING

The safety machine should be designed based on the evaluation results of machine risk assessment. Use the emergency stop signal properly in order to design the safety machine.

To configure an emergency stop circuit in compliance with the safety standards of IEC60204-1 in which requirements for electrical components of machine are specified, observe the following cautions. IEC60204-1 specifies that an emergency stop circuit shall function as a category 0 or 1 stop.

Category 0 stop:

Stopping by immediate removal of power to the machine actuators(Uncontrolled stop)

Category 1 stop:

A controlled stop with power to the machine actuators available to achieve the stop and then removal of power when the stop is achieved

(Controlled stop)

Fig. 9.5(a) or Fig. 9.5(b) shows an example showing how to make connections for the emergency stop signal with this CNC controller and servo amplifier(α i series or β i series) to comply with the EU Machine Instructions. Fig. 9.5(c) shows a flow diagram of the emergency stop circuit signals.

The emergency stop signal is input to the Safety relay module. The output signal from the relay is input to the CNC controller and Power Supply(PS). The Power Supply outputs control signal for a motor power magnetic contactor, which can be used to switch the power applied to the Power Supply on and off. An emergency stop signal is usually generated by closing the B contact of a pushbutton switch.

When the emergency stop signal (*ESP) contact is closed, the CNC controller enters the emergency stop released state, such that the servo and spindle motors can be controlled and operated.

When the emergency stop signal (*ESP) contact opens, the CNC controller enters the emergency stop state, and the servo and spindle motors stop. In case of Fig. 9.5(a) or 9.5(b), the spindle motor power is shut off after the spindle motor is decelerated to a stop (Category 1 stop). Meanwhile, the servo motor is forced to be a dynamic stop as a rule (Category 0 stop). By setting relevant parameter, however, it is also possible to decelerate the servo motor to a stop, and then to shut off the servo motor power (Category 1 stop).

Regarding how the Spindle motor or the Servo motor stops when the emergency stop button is pushed, refer to the Item 9.3 and the Item 9.4. Regarding specifications of parameters related in these matters, refer to the FANUC AC SERVO parameters manual(B-65270JA).

The example of the emergency stop signal circuit showed in Fig. 9.5(a) or Fig. 9.5(b) complies with the requirements of the safety standard ISO13849-1, Performance Level(PL) c or d. However, when calculating PL value concretely, the calculation should be based on the safety standard ISO13849-1 with the reliability data provided by each parts supplier. In case for the reliability data of CNC, please contact FANUC sales office.

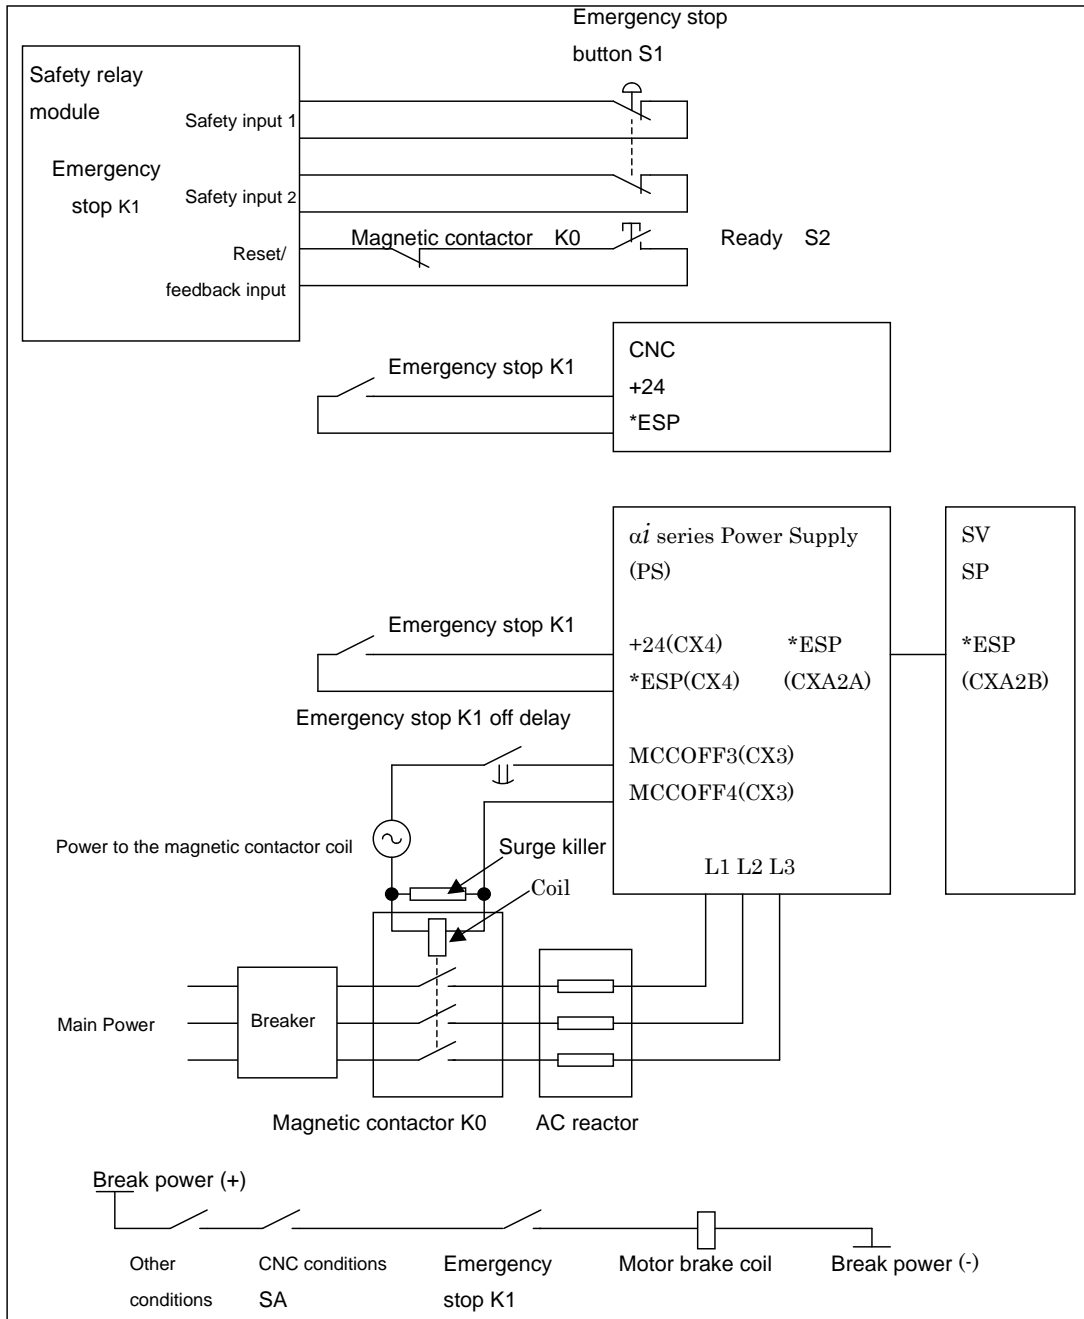


Fig. 9.5(a) Example of connections with an α i series servo amplifier

NOTE

- 1 When Emergency stop button S1 is pushed, Emergency stop K1 opens and Magnetic contactor K0 shuts off the power for Power Supply.
- 2 Set the off delay timer for shutting the power to the magnetic contactor coil in the above example as follows:
 - Set a value which allows the time required to normally stop by the spindle.
 - Set a value which allows the feed axis stop time also when the feed axis quick stop function and vertical axis fall prevention function are used.
- 3 Connect the auxiliary contact of Magnetic contactor K0 to feedback input of Safety relay in order to detect the failure of Magnetic contactor K0.

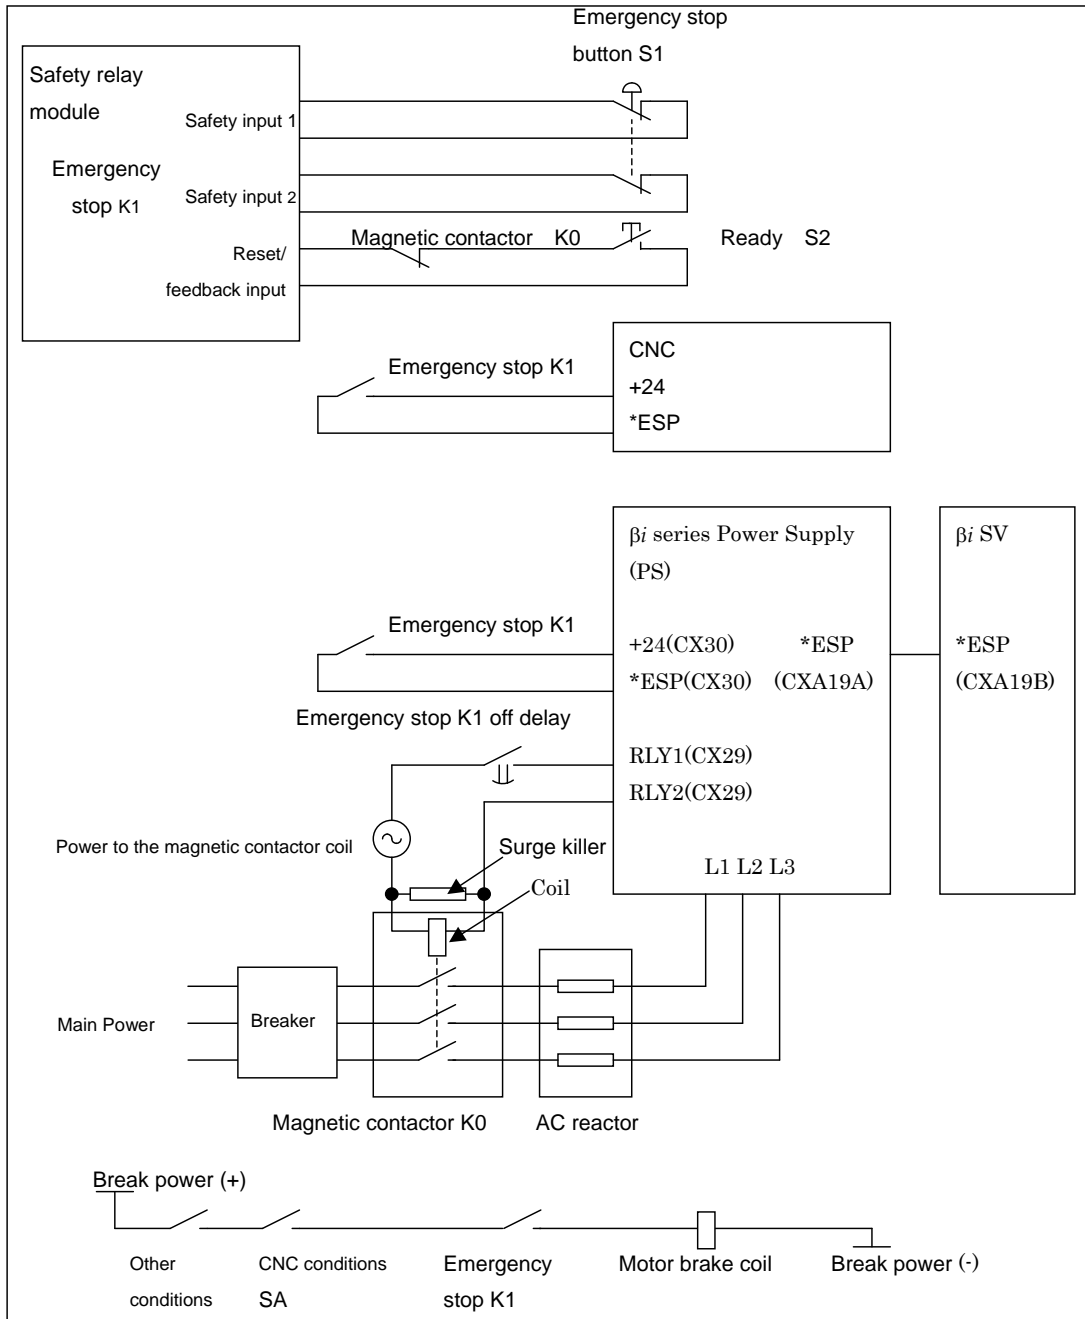


Fig. 9.5(b) Example of connections with an βi series servo amplifier

NOTE

- 1 When Emergency stop button S1 is pushed, Emergency stop K1 opens and Magnetic contactor K0 shuts off the power for Power Supply.
- 2 Set the off delay timer for shutting the power to the magnetic contactor coil in the above example as follows:
 - Set a value which allows the time required to normally stop by the spindle.
 - Set a value which allows the feed axis stop time also when the feed axis quick stop function and vertical axis fall prevention function are used.
- 3 Connect the auxiliary contact of Magnetic contactor K0 to feedback input of Safety relay in order to detect the failure of Magnetic contactor K0.

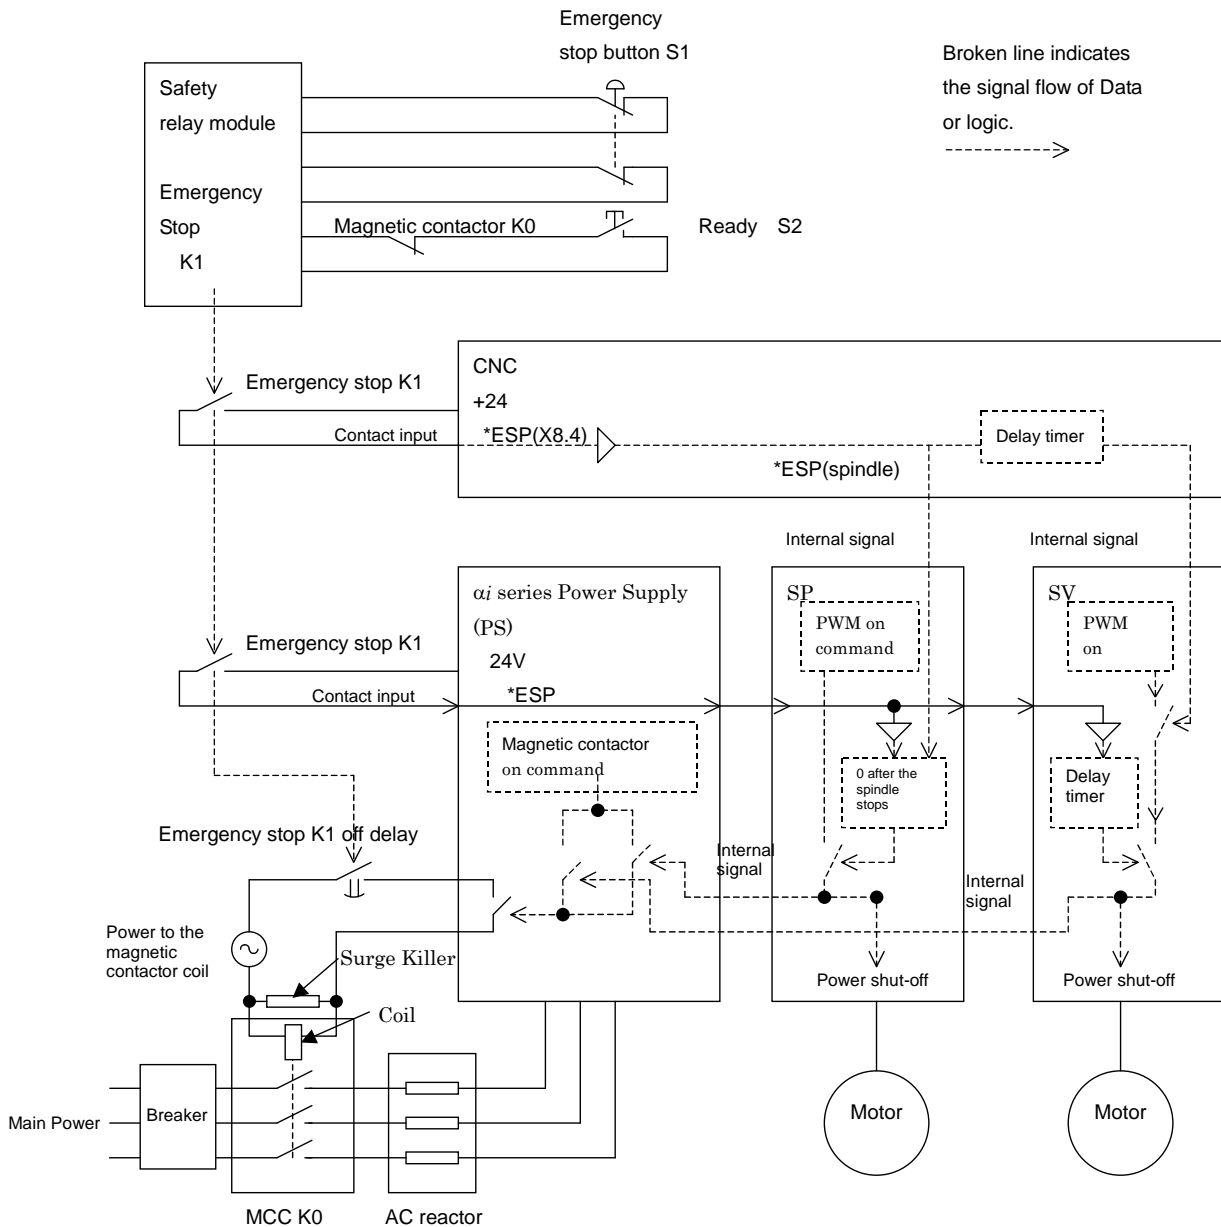


Fig. 9.5(c) Flow diagram of emergency stop circuit signals

CAUTION

- 1 This CNC controller can detect overtravel by using a software limit function. If the software limit function does not operate effectively due to a failure, resulting in a possible serious accident or loss, install a safety circuit, for example, a stroke end limit switch arranged in series with the emergency stop button.
- 2 To use a spindle motor and amplifier produced by a manufacturer other than FANUC, refer to the corresponding documentation as well as this manual. Design the emergency stop sequence such that, if the emergency stop signal contact opens while the spindle motor is rotating, the spindle motor is decelerated until it stops.

9.6 CAUTIONS ABOUT MULTI-PATH CONTROL

For multi-path control, multiple paths (up to 2 paths) belong to a machine group, and multiple machine groups (up to three groups) constitute a system.

Example) Multi-path control configuration

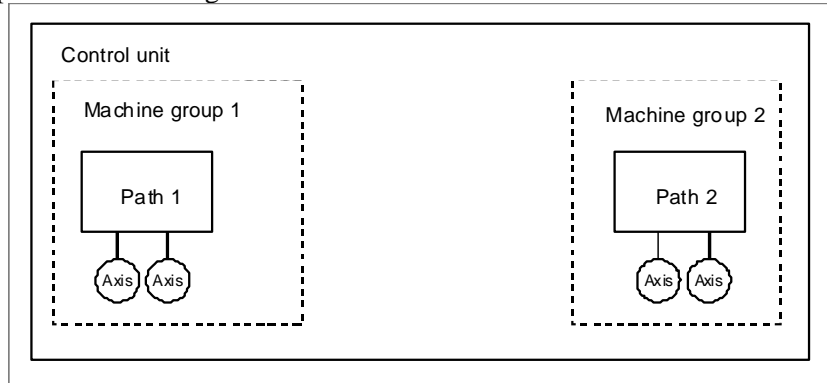


Fig. 9.6 (a)

To prevent an emergency stop in one machine group from affecting another within a multi-path control system, a separate emergency stop circuit (see Fig. 9.6 (b)) must be provided for each machine group.

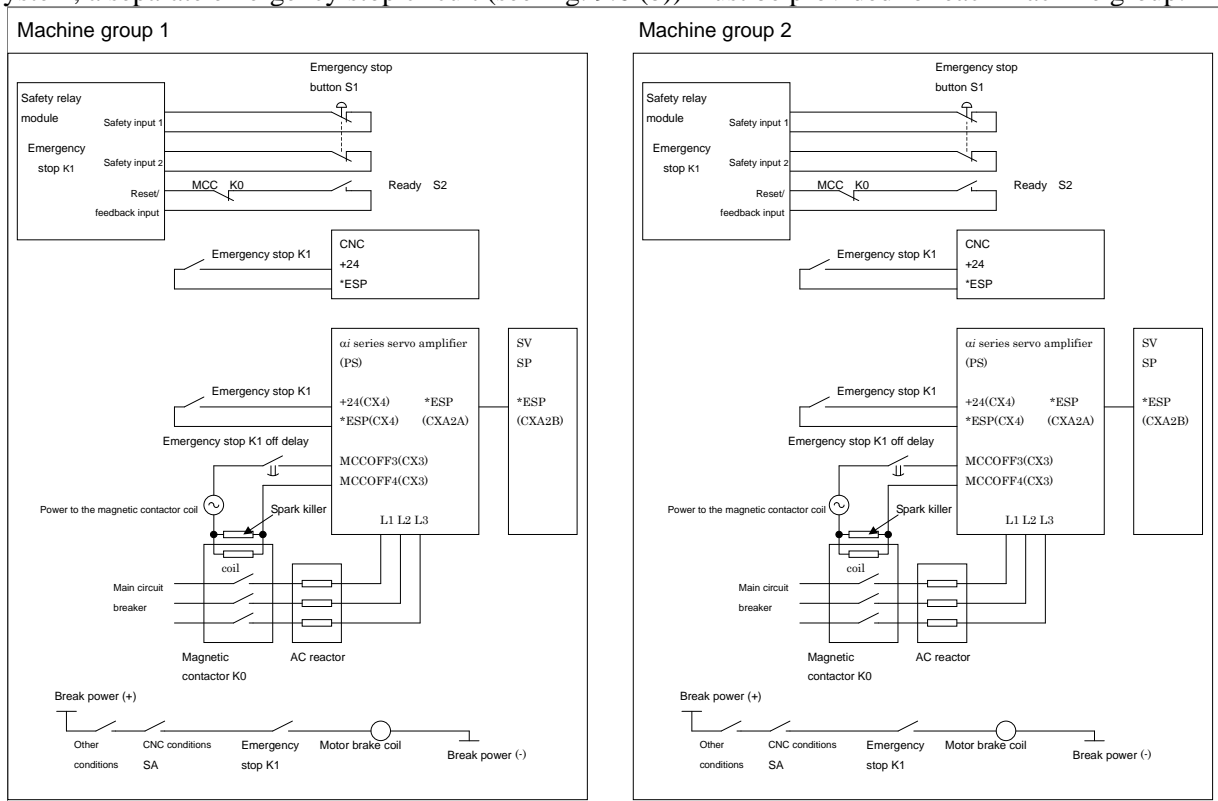


Fig. 9.6 (b)

10 CONNECTION TO OTHER NETWORKS

0i- MODEL F can be connected to the following networks. For an explanation of how to make the connection, refer to the manuals listed below:

Manual title	Manual code
FANUC Fast Ethernet / Fast Data Server OPERATOR'S MANUAL	B-64014EN
FANUC PROFIBUS-DP Board CONNECTION MANUAL	B-63993EN
FANUC DeviceNet Board CONNECTION MANUAL	B-64043EN
FANUC CC-Link Board CONNECTION MANUAL	B-64463EN
FANUC Industrial Ethernet CONNECTION MANUAL	B-64013EN

11 CONNECTION WITH FANUC PANEL *i* AND COMMERCIAL PERSONAL COMPUTERS

11.1 OVERVIEW

This chapter describes how to connect the control unit to the FANUC PANEL *i* or a commercial personal computer, using the high-speed serial bus (HSSB) or Ethernet.

11.2 CAUTIONS

The FANUC PANEL *i* or a Windows-compatible personal computer commercially available is to be connected. The user (machine tool builder or end user) is required to procure and maintain a commercial personal computer if the user is to use it. FANUC owns the copyright for the driver used to connect a personal computer. The software mentioned above and the contents of the related manuals may not be used or reproduced in part or whole without the prior written permission of FANUC.

NOTE


- 1 IBM is a registered trademark of IBM Corp. of the US.
- 2 Windows is registered trademarks of Microsoft Corp. of the US.
- 3 The company and product names mentioned in this manual are trademarks or registered trademarks of the respective companies.

11.3 CONNECTION USING THE HIGH-SPEED SERIAL BUS (HSSB)

11.3.1 Overview

The high-speed serial bus (HSSB) enables the high-speed transfer of large amounts of data between a commercial personal computer and the control unit, by connecting them via a high-speed optical fiber. For an LCD-mounted type control unit, an HSSB interface board is inserted in an optional slot. On the personal computer, an appropriate interface board is installed. You can use the FANUC PANEL *i* instead of a commercial PC. The FANUC PANEL *i* comes standard with the HSSB interface.

11.3.2 Connection Diagram

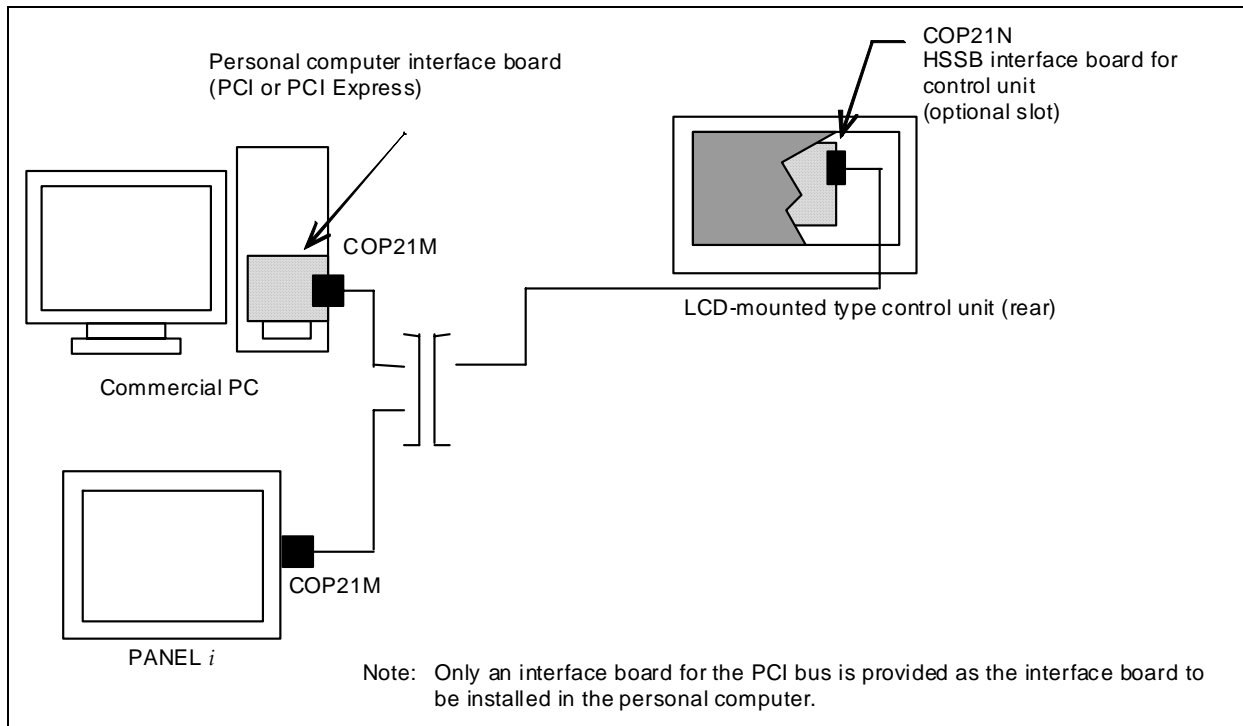

11.3.3 Specifications of a Commercial PC

NOTE

- 1 The machine tool builder or end user is required to procure and maintain the personal computer.
- 2 FANUC is not liable for any problems resulting from the operation of users' personal computers, regardless of whether the operations are normal or abnormal.
- 3 Perform a connection test between the PC and control unit before using the PC sufficiently.

- (1) The PC must have a PCI slot (5 V, 32bit, and Rev 2.1 or later) or PCI Express x1 (x4, x8, or x16) slot (Rev 1.0a or later) to install an interface board.
- (2) An HSSB driver must be installed on the PC. The HSSB driver is stored on the FOCAS1/2 library disk (ordering information: A02B-0207-K737).
- (3) Following shows the required power of the interface board for PCI type.

Drawing No.	Specification	Power supply requirements
A20B-8101-0162	2ch specification (for PCI Slot)	+5V 1.5A
A20B-8101-0163	1ch specification (for PCI Slot)	+5V 1A
A13B-0204-C001	1ch specification, Low profile (for PCI Express Slot)	+3.3V 1A
A13B-0204-C002	1ch specification, Standard height (for PCI Express Slot)	+3.3V 1A

11.3.4 Installation Environment

(1) HSSB Interface Board For Personal Computer

Ambient temperature	Operating	0 to 55°C
	Non-operating	-20 to 60°C
Humidity	Usual	10 to 75% (non-condensing)
	Short-term (within one month)	10 to 95% (non-condensing)

If the environmental requirement of the using personal computer is different from the above, please keep the environmental requirement to be satisfied by the both equipments.

- (2) Connect the connection plate of PC side interface board to the chassis of PC which is securely connected to the Frame Ground. Ensure that the electrical potential of the Frame Ground is not fluctuate by external noise.
- (3) HSSB Interface Board For control unit
Strictly keep environmental requirement about each control unit in which the interface boards are installed.

11.3.5 Handling Precautions

- (1) Personal computer interface board
 - (a) Electrostatic interference
The personal computer interface board is shipped in an anti-static bag. To store or transport the interface board, always place it in the anti-static bag. Before removing the interface board from the anti-static bag, ground your body.
 - (b) Protection of card edge terminals
When handling the personal computer interface board, do NOT touch its card edge terminals (the gold-plated contacts which engage with a mating connector). If you accidentally touch any card edge terminal, wipe it gently with clean or ethyl alcohol-dipped tissue paper or absorbent cotton. Do not use any organic solvent other than ethyl alcohol.
 - (c) The communication speed is different on the kind of the interface board to use, the function to use, and the communication data size.
 - (d) HSSB interface board dose not support the sleep and suspend. Please disable the sleep and suspend.
- (2) Optical connector and fiber cable
See Appendix D.

11.3.6 Procedure for Installing Personal Computer Interface Boards



WARNING

Before starting to mount or remove a personal computer interface board, switch off the personal computer and its peripheral devices, and disconnect their power supply cables. Otherwise, there is a serious danger of electric shock.


- (1) Remove the covering plate of extension slot on the personal computer.
- (2) Insert the interface board for the personal computer to the PCI connector or PCI Express connector tightly.
- (3) Screw the plate of interface board to the computer.
- (4) Confirm connection (in only case of HSSB multi-connection)
Confirm following items for installing drivers of HSSB interface board in case of HSSB multi-connection.
 - PCI slot or PCI Express slot number which HSSB board is mounted (slot number is marked to PCB normally).
 - Correspondence between HSSB channel and CNC

- (5) Restore the covering plate.

NOTE

Do not touch the leads running to the card edge of the interface board (that match with connectors).

11.3.7 Cable Connection

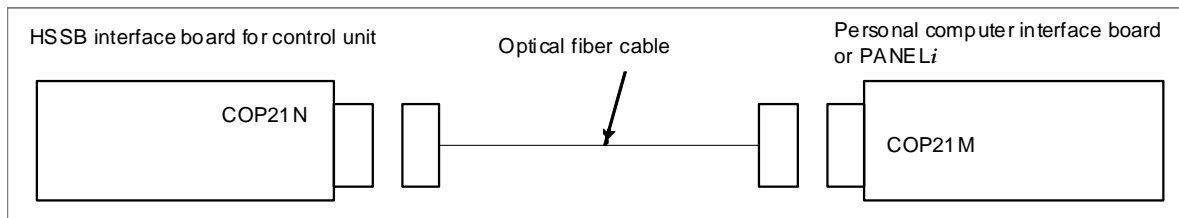

- (1) Optical fiber cable for HSSB
 - Cable for inside wire
 - A66L-6001-0023#L~ (maximum cable length: 10m)
 - Cable for outside wire
 - A66L-6001-0026#L~ (maximum cable length: 50m)
 - Low-loss cable for outside wire (for relay only)
 - A66L-6001-0029#L~ (maximum total length of two cables: 35 m)
 - High-speed low-loss cable for outside wire
 - A66L-6001-0049#L~ (maximum cable length: 100m, maximum total length of two cables for relay: 55m)
- (2) Low-loss optical junction adapter
 - A63L-0020-0004

NOTE


- 1 For explanations about how to specify the length of the underscored portion and the related cautions, see Appendix D.
- 2 The machine tool builder cannot cut or connect any optical fiber cable. Be sure to use the cables above.

11.4 CONNECTION USING Ethernet

11.4.1 Overview

You can connect the control unit with a commercial PC to use the PC as the display unit of the control unit and transfer data between the control unit and PC, using Ethernet. You can also use the Ethernet display function to perform maintenance and IPL operation for the control unit from the PC at power-on. You can use the FANUC PANEL *i* instead of a commercial PC.

11.4.2 Connection Diagram

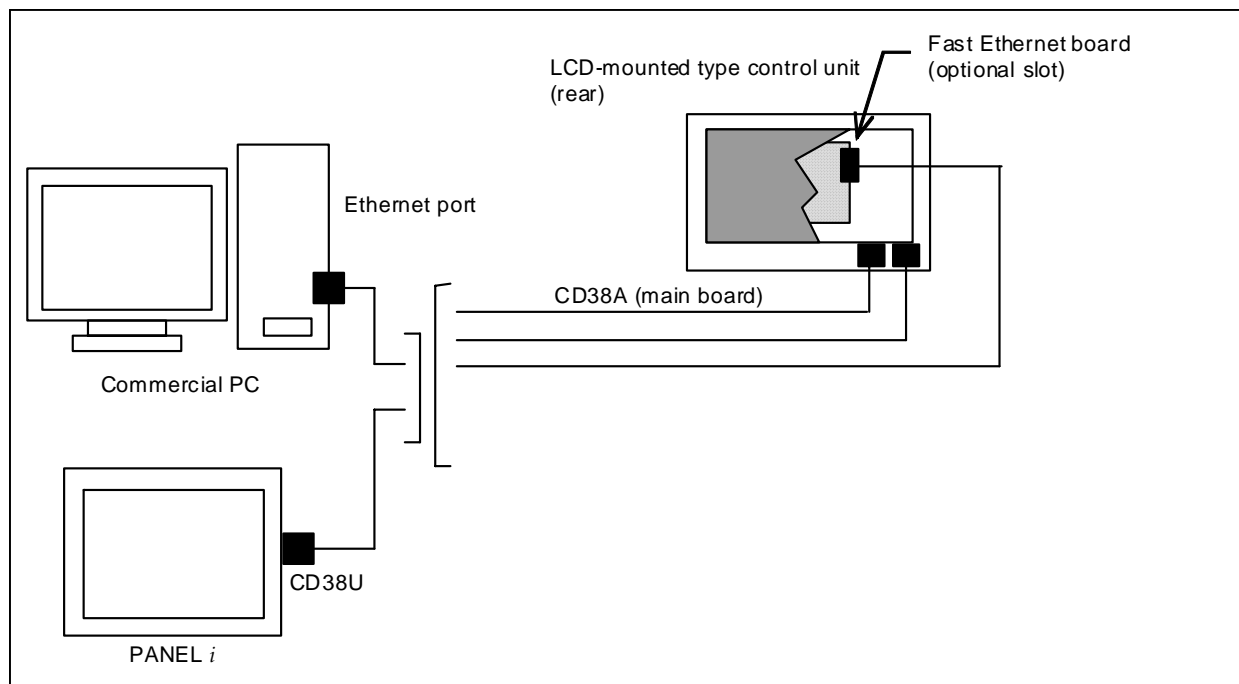

NOTE

- 1 For connection to the Ethernet interface, see Section 5.5.
- 2 For connection using the Fast Ethernet board, refer to the FANUC Fast Ethernet/Fast Data Server Operator's Manual (B-64014EN). When a PC is connected using Fast Ethernet, the Ethernet display function cannot be used to perform maintenance and IPL operation for the control unit from the PC at power-on.
- 3 The Ethernet display function cannot be used on any LCD-mounted type control unit or with Fast Ethernet.

12 PANEL *i*

The PANEL *i* is on an IBM PC compatible panel computer. Connecting the PANEL *i* to the control unit via an optical fiber (high-speed serial bus) or Ethernet can provide a system with PC functions.

For details of the PANEL *i* (including installation environment conditions and connection), refer to the FANUC PANEL *i* Connection and Maintenance Manual (B-64223EN). For connection with the control unit, see Chapter 11.

APPENDIX

A OUTLINE DRAWINGS OF UNITS AND CONNECTORS

Outline drawings for LCD-mounted type control unit

Name		See
Control unit	8.4" color LCD/MDI horizontal	Fig. U1
	8.4" color LCD/MDI vertical	Fig. U2
	10.4" color LCD	Fig. U3
	15" color LCD	Fig. U4

Other outline drawings

Name	See
MDI unit (small type, 200x140mm)	Fig. U5
MDI unit (ONG, 200x260mm)	Fig. U6
MDI unit (ONG, 220x230mm)	Fig. U7
MDI unit (ONG, 220x290mm)	Fig. U8
MDI unit (QWERTY TYPE A, 160x290mm)	Fig. U9
MDI unit (QWERTY TYPE B, 145x400mm)	Fig. U10
Manual pulse generator	Fig. U11
Pendant type manual pulse generator	Fig. U12
Separate detector interface unit or analog input separate detector interface unit	Fig. U13
Absolute pulse coder battery case for a separate detector	Fig. U14
Battery case for external installation	Fig. U15
Punch panel (for LCD-mounted type control unit)	Fig. U16
Ethernet Connector Panel	Fig. U17

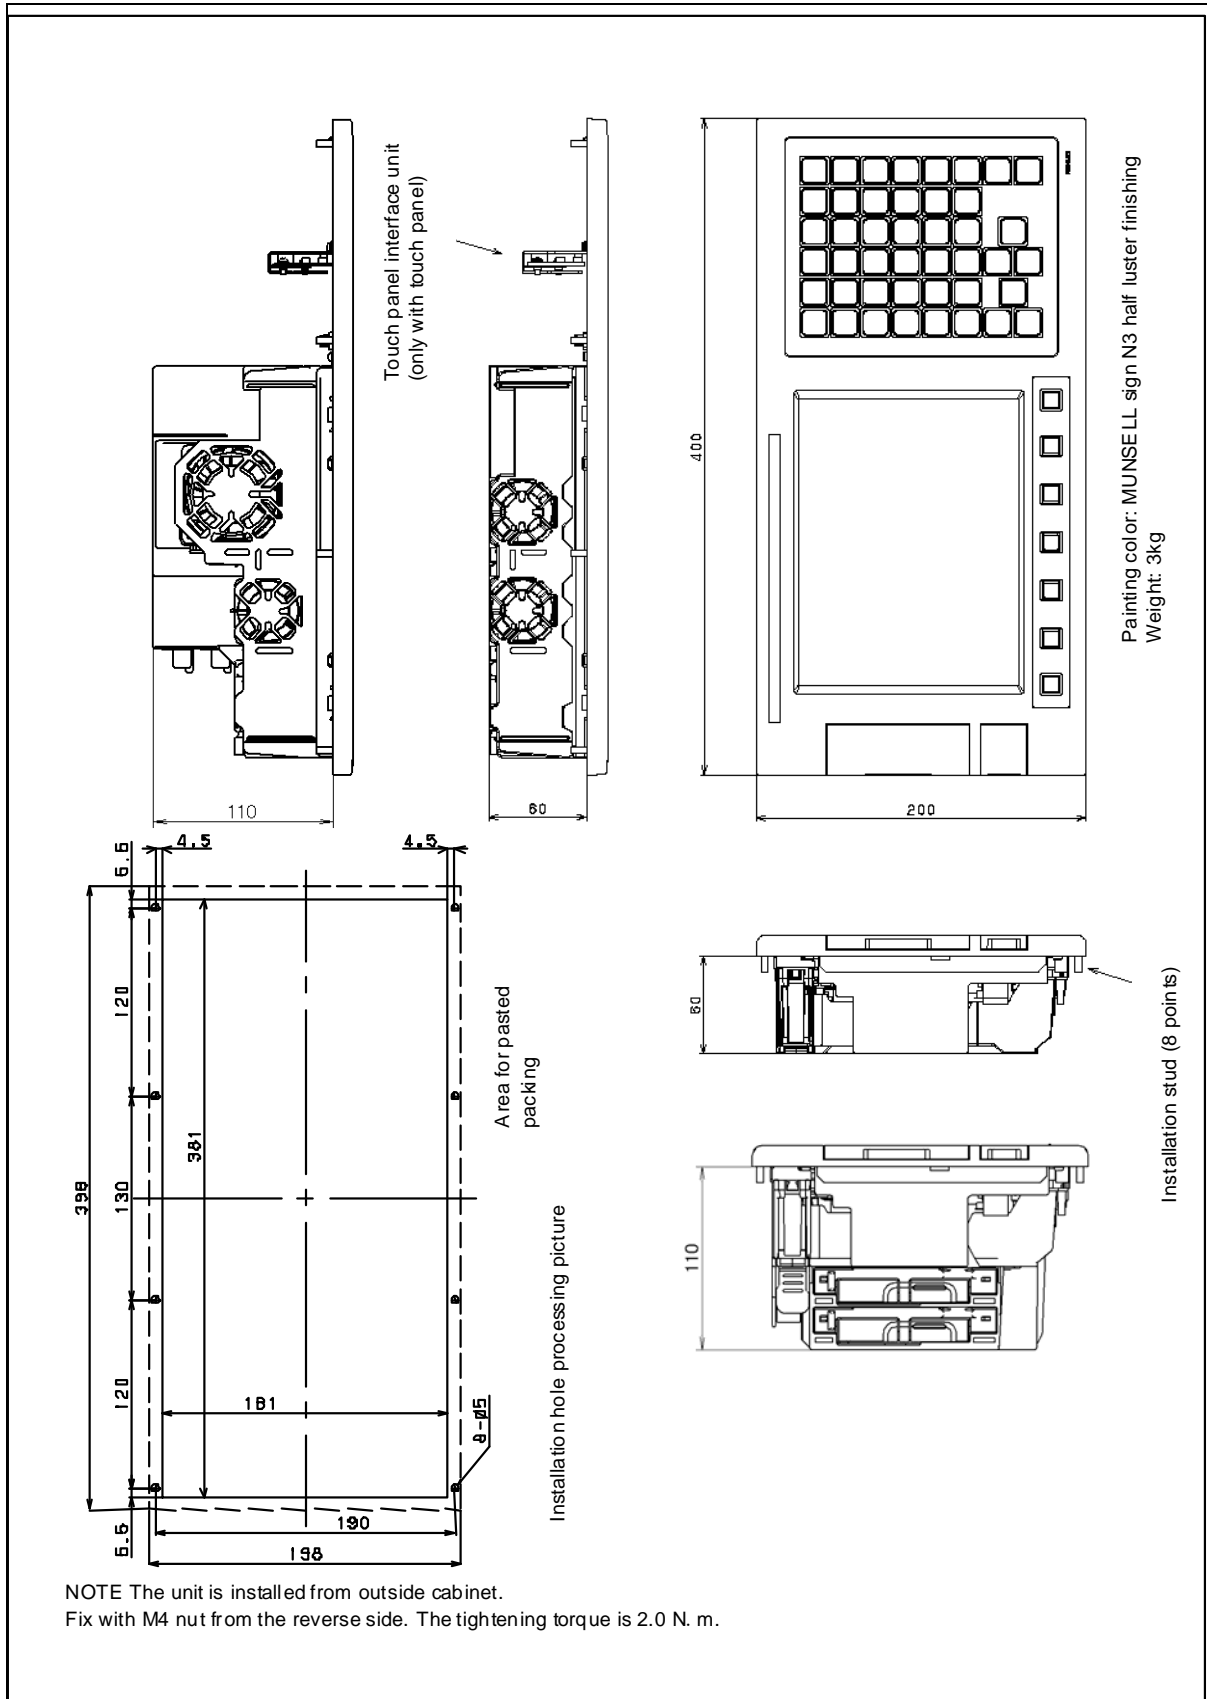


Fig. U1 Control unit (8.4" color LCD/MDI horizontal)

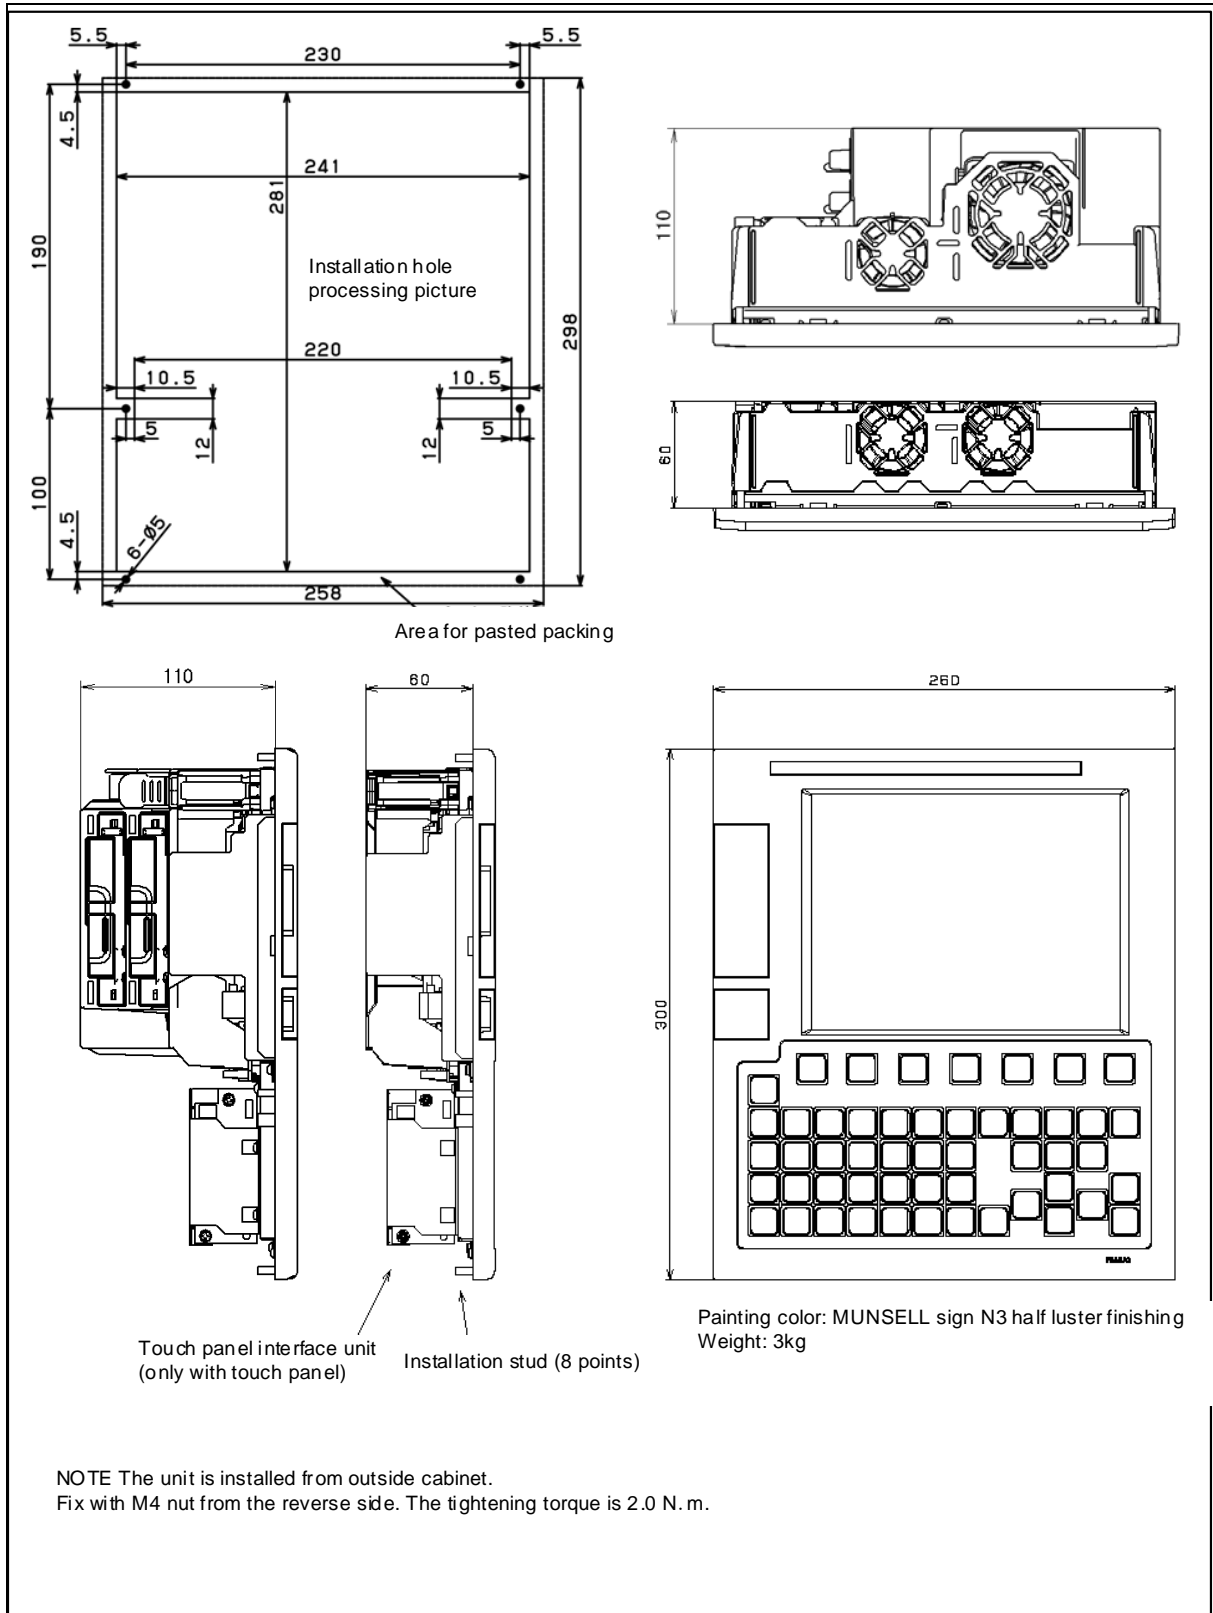


Fig. U2 Control unit (8.4" color LCD/MDI vertical)

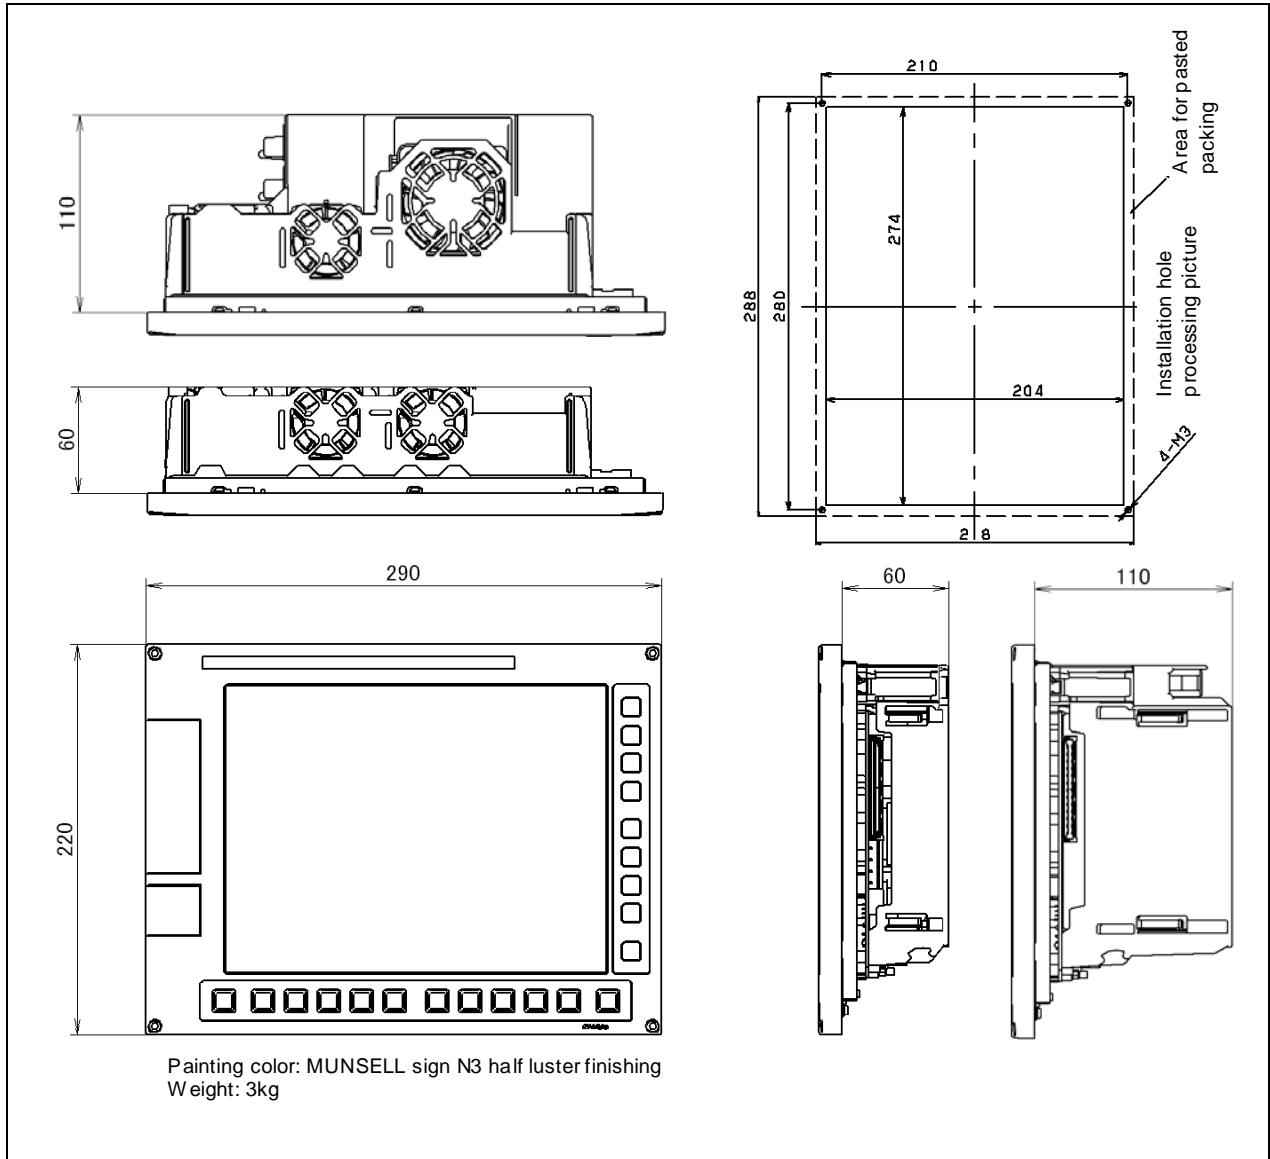


Fig. U3 Control unit (10.4" color LCD)

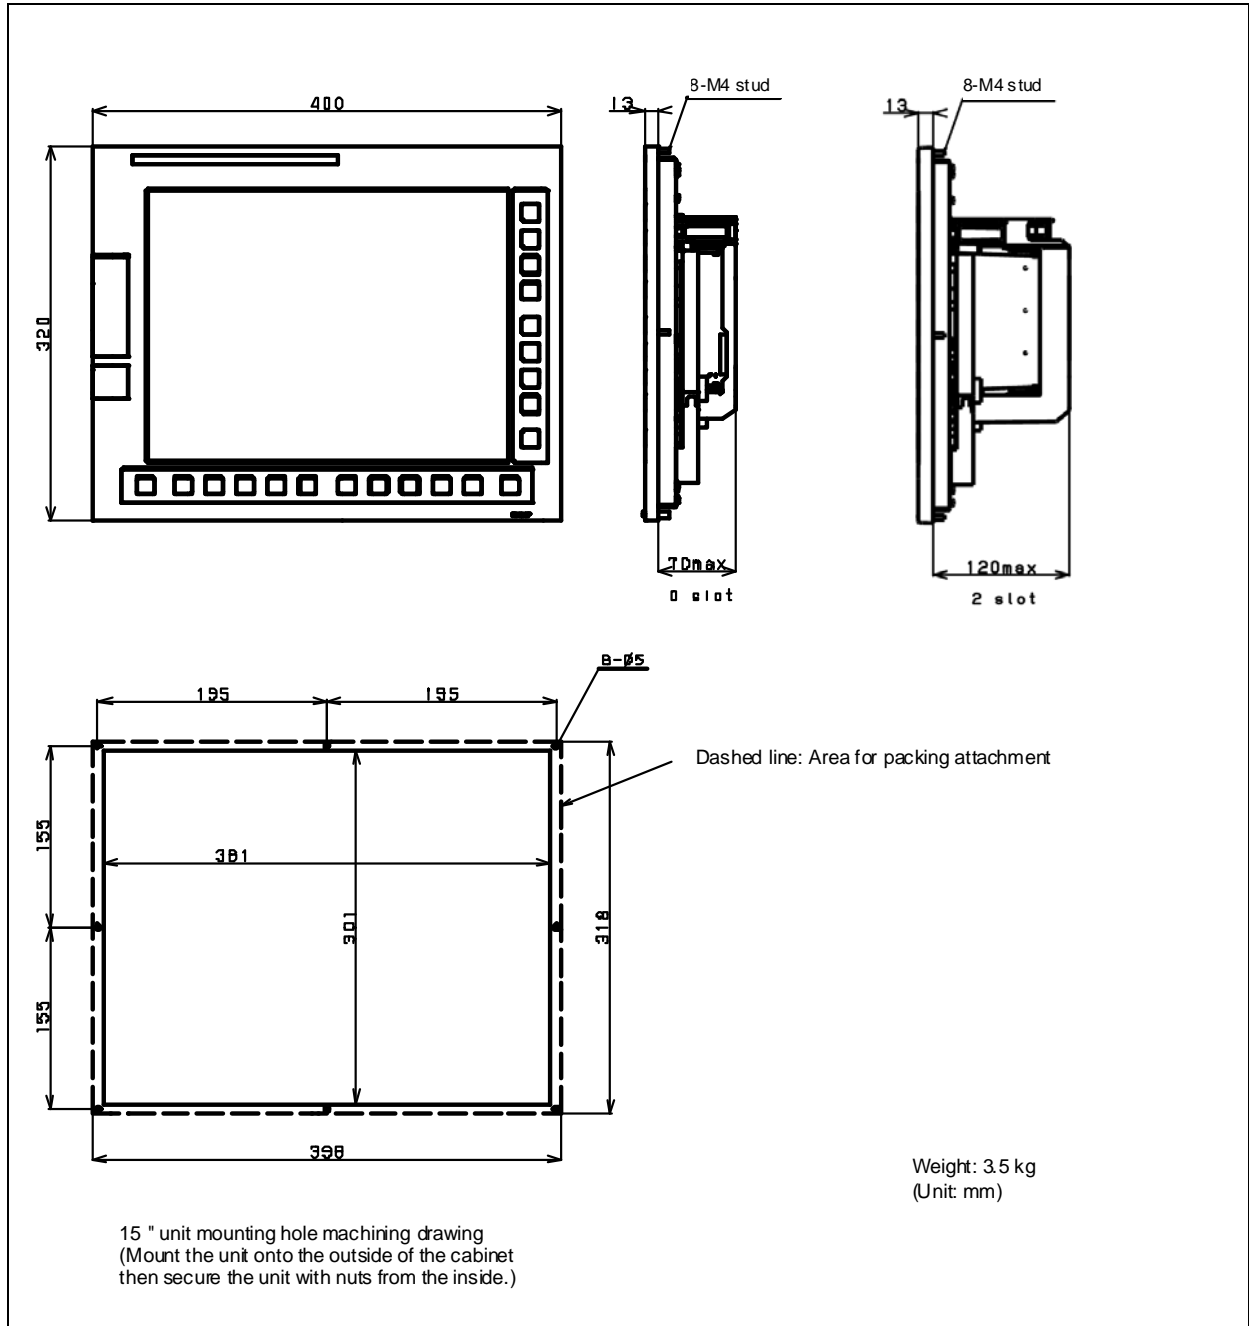


Fig. U4 Control unit (15" color LCD)

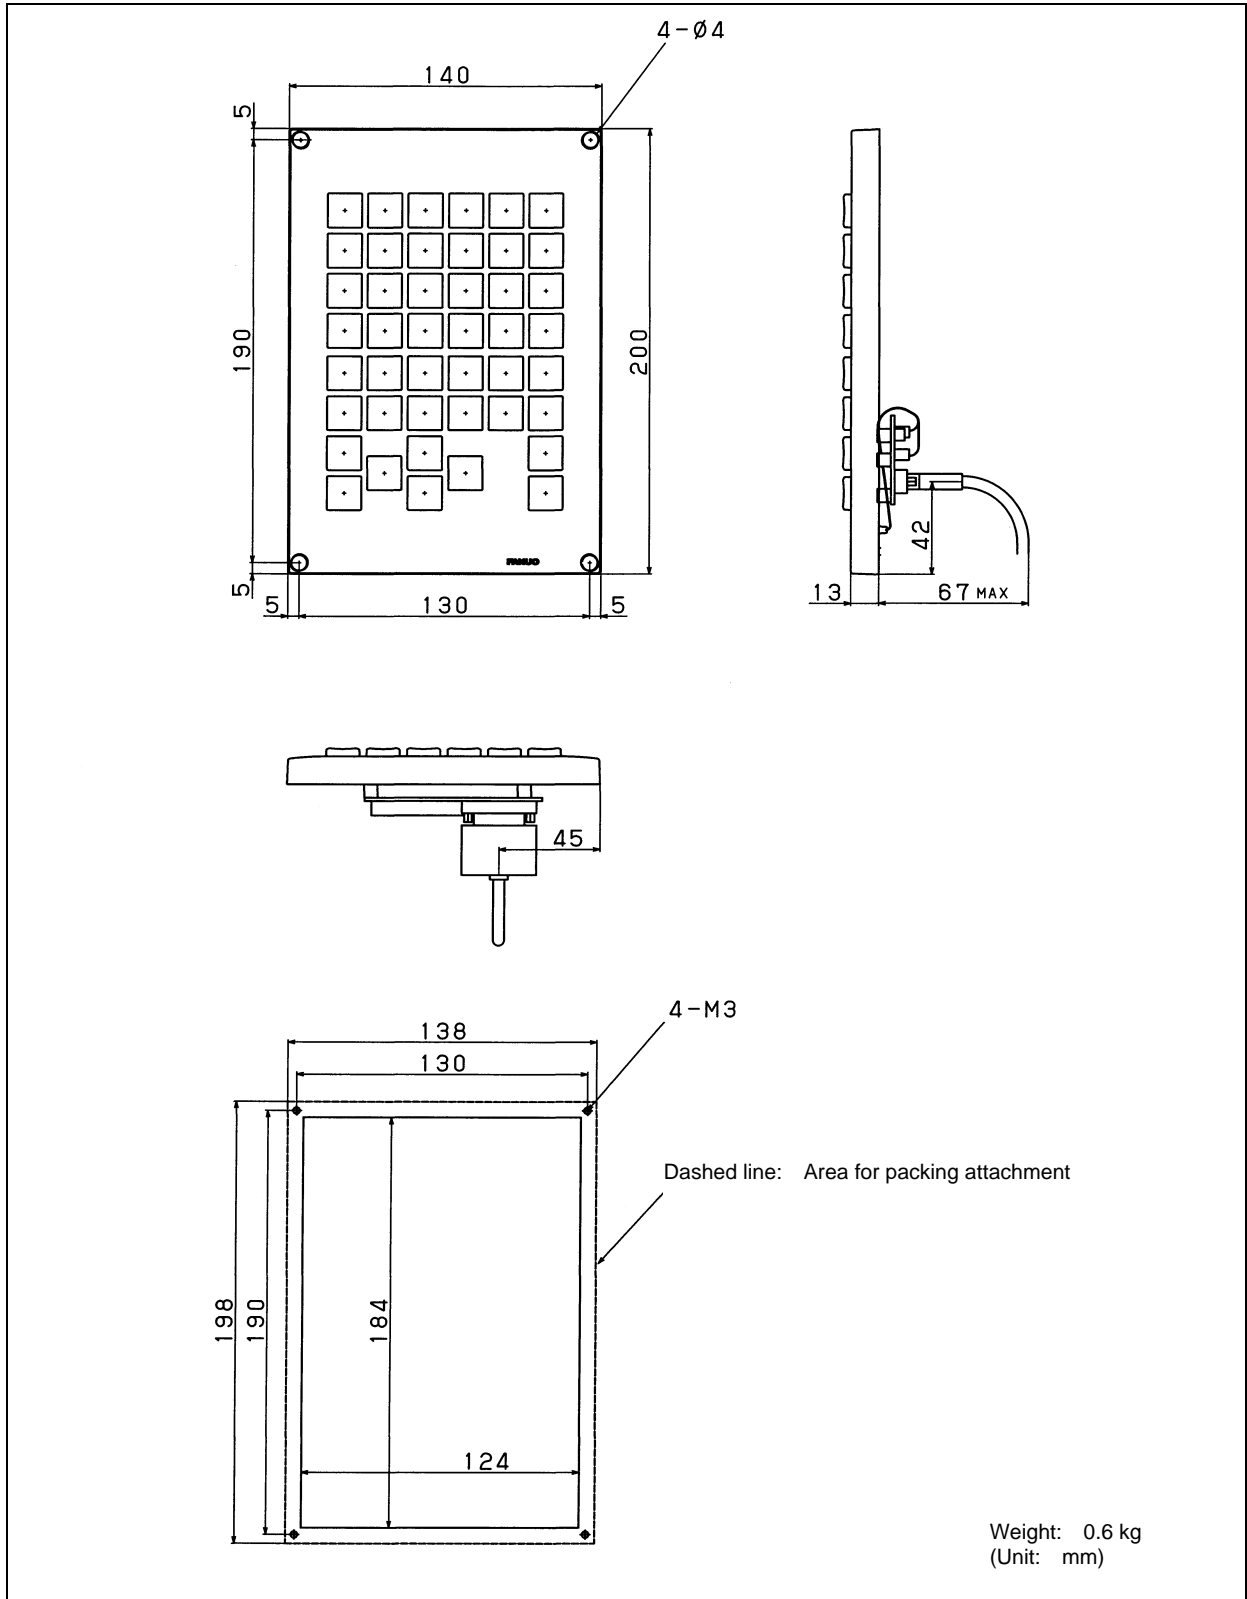


Fig. U5 MDI unit (small type, 200x140mm)

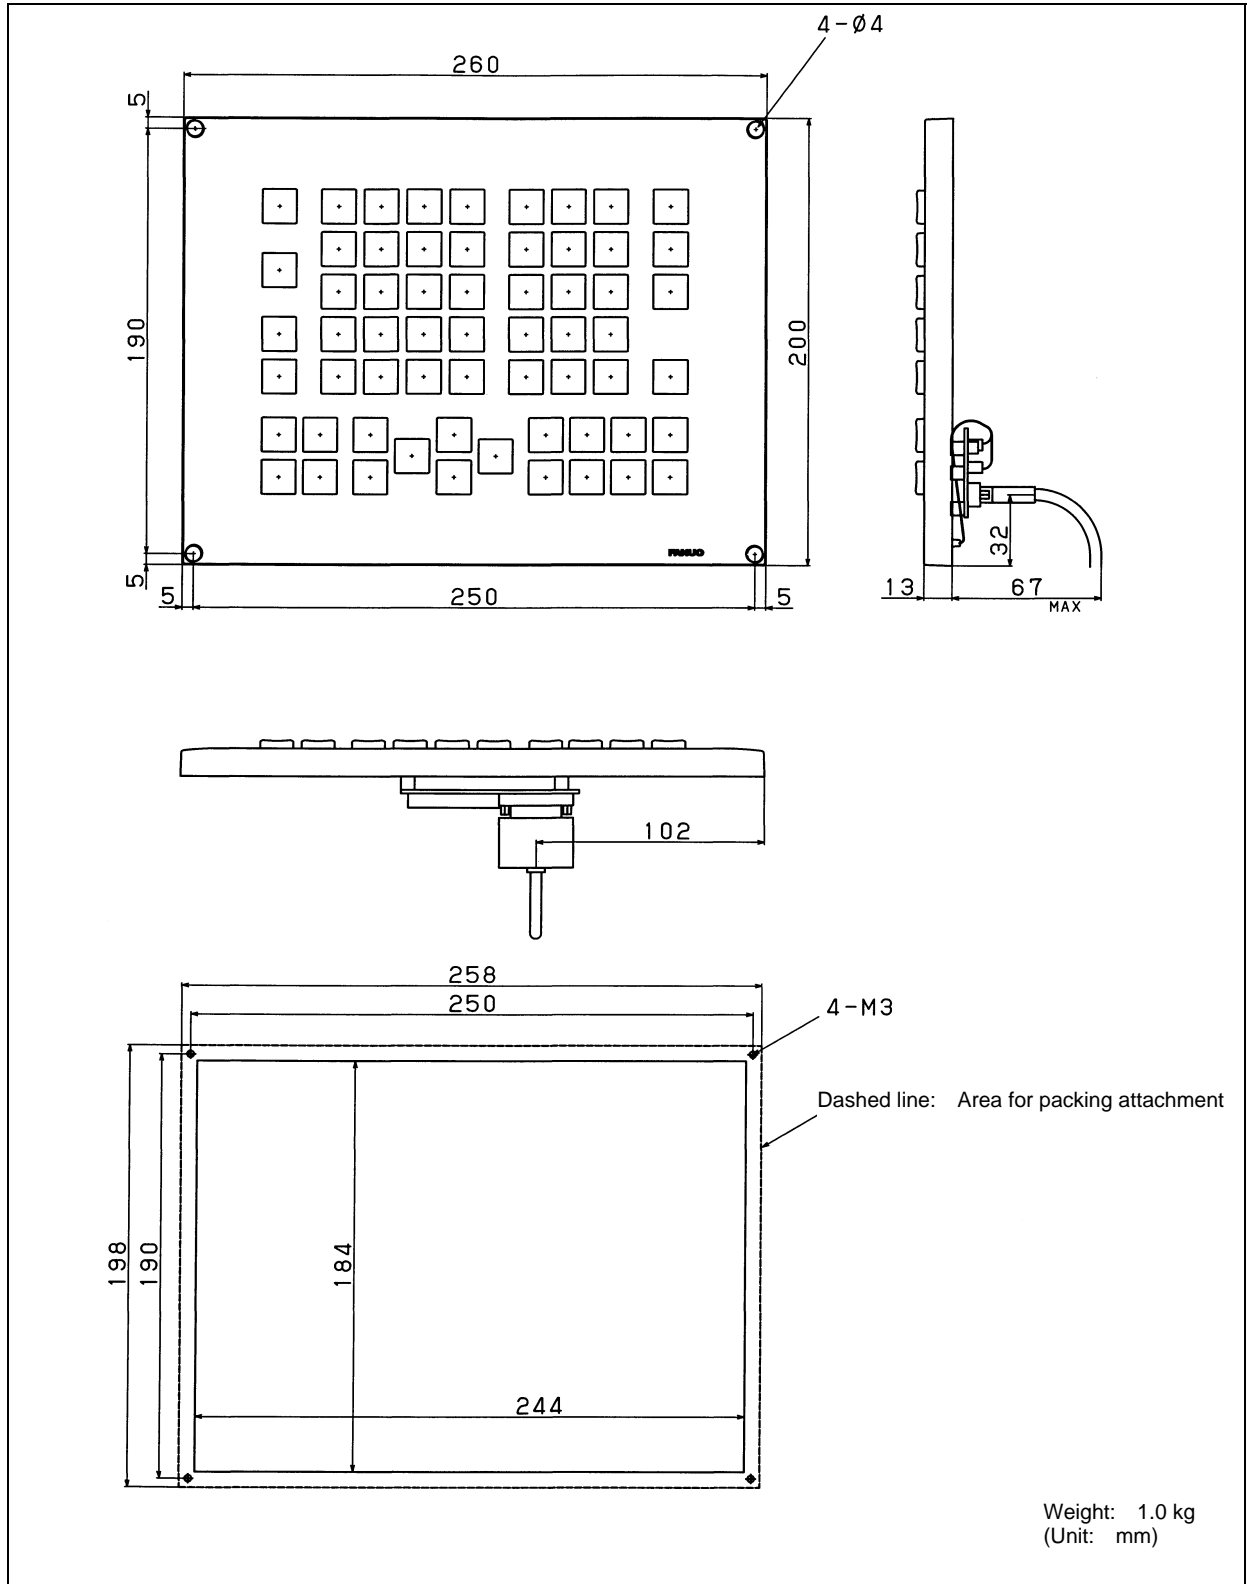


Fig. U6 MDI unit (ONG, 200x260mm)

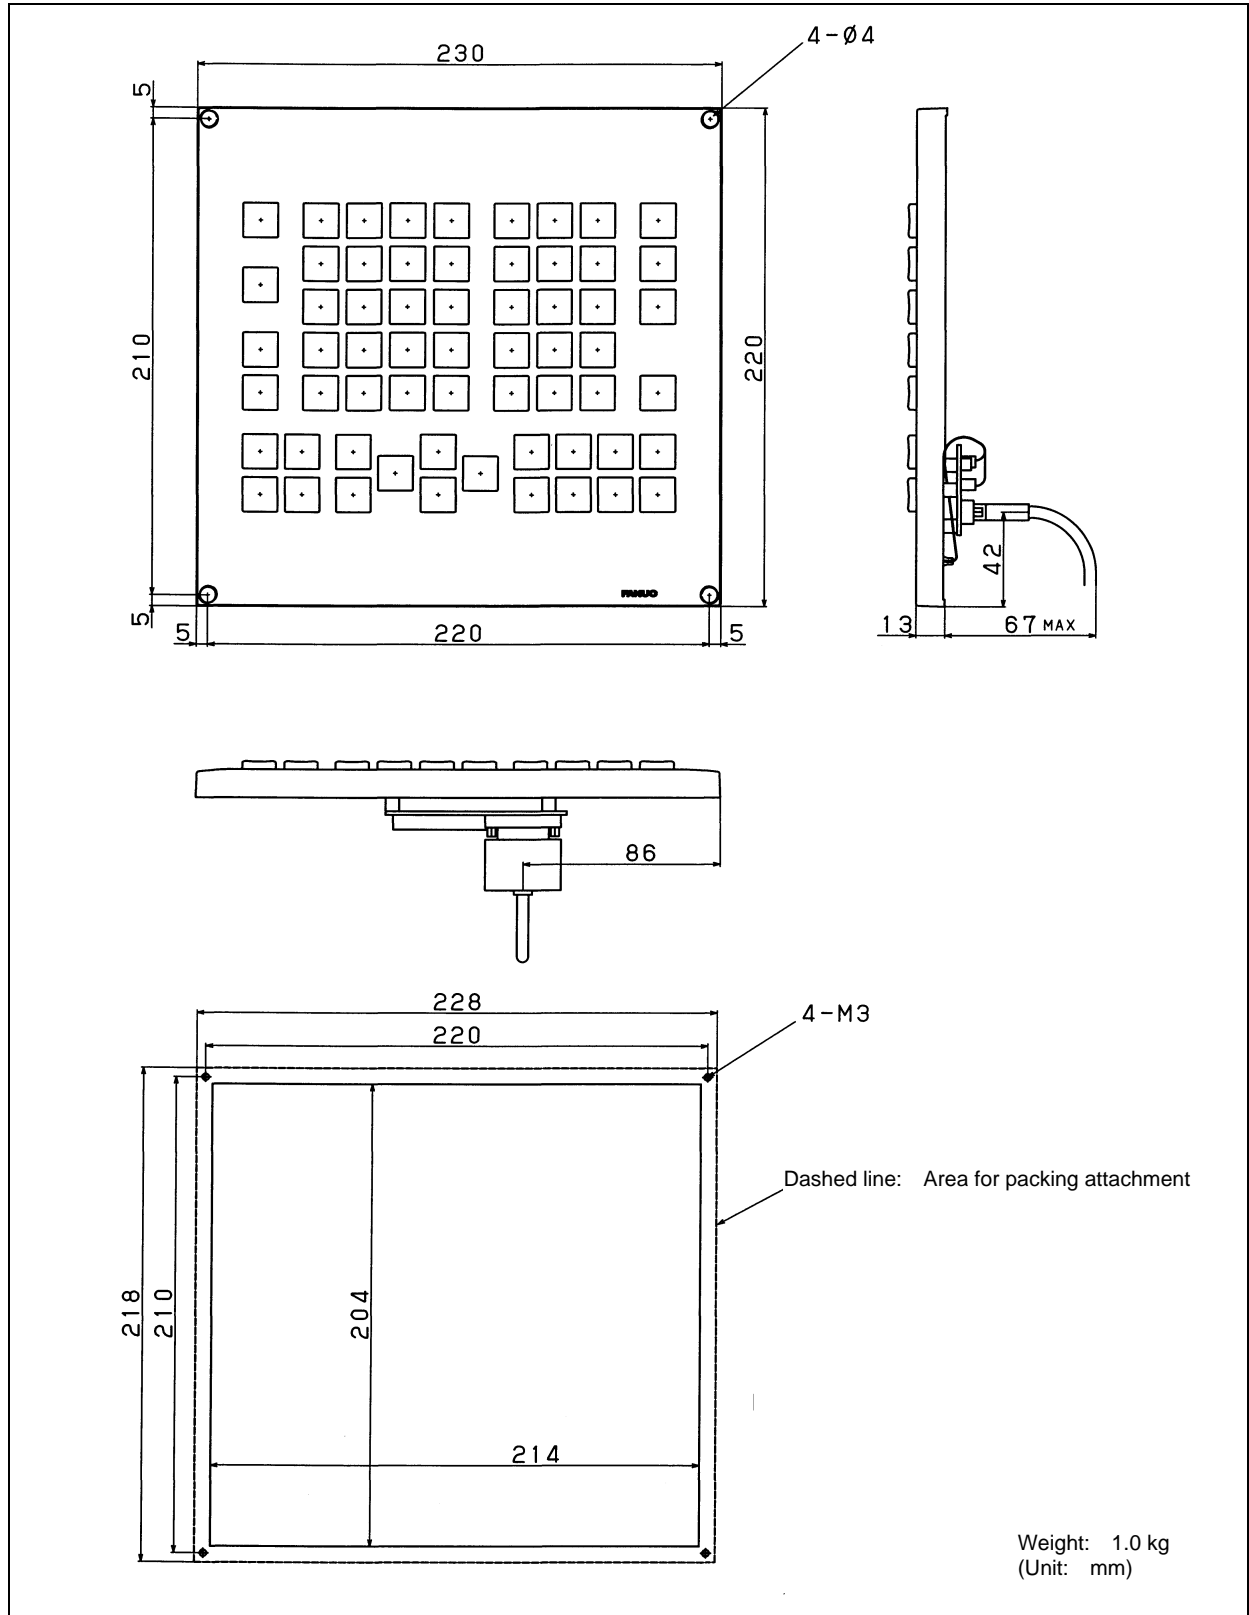


Fig. U7 MDI unit (ONG, 220x230mm)

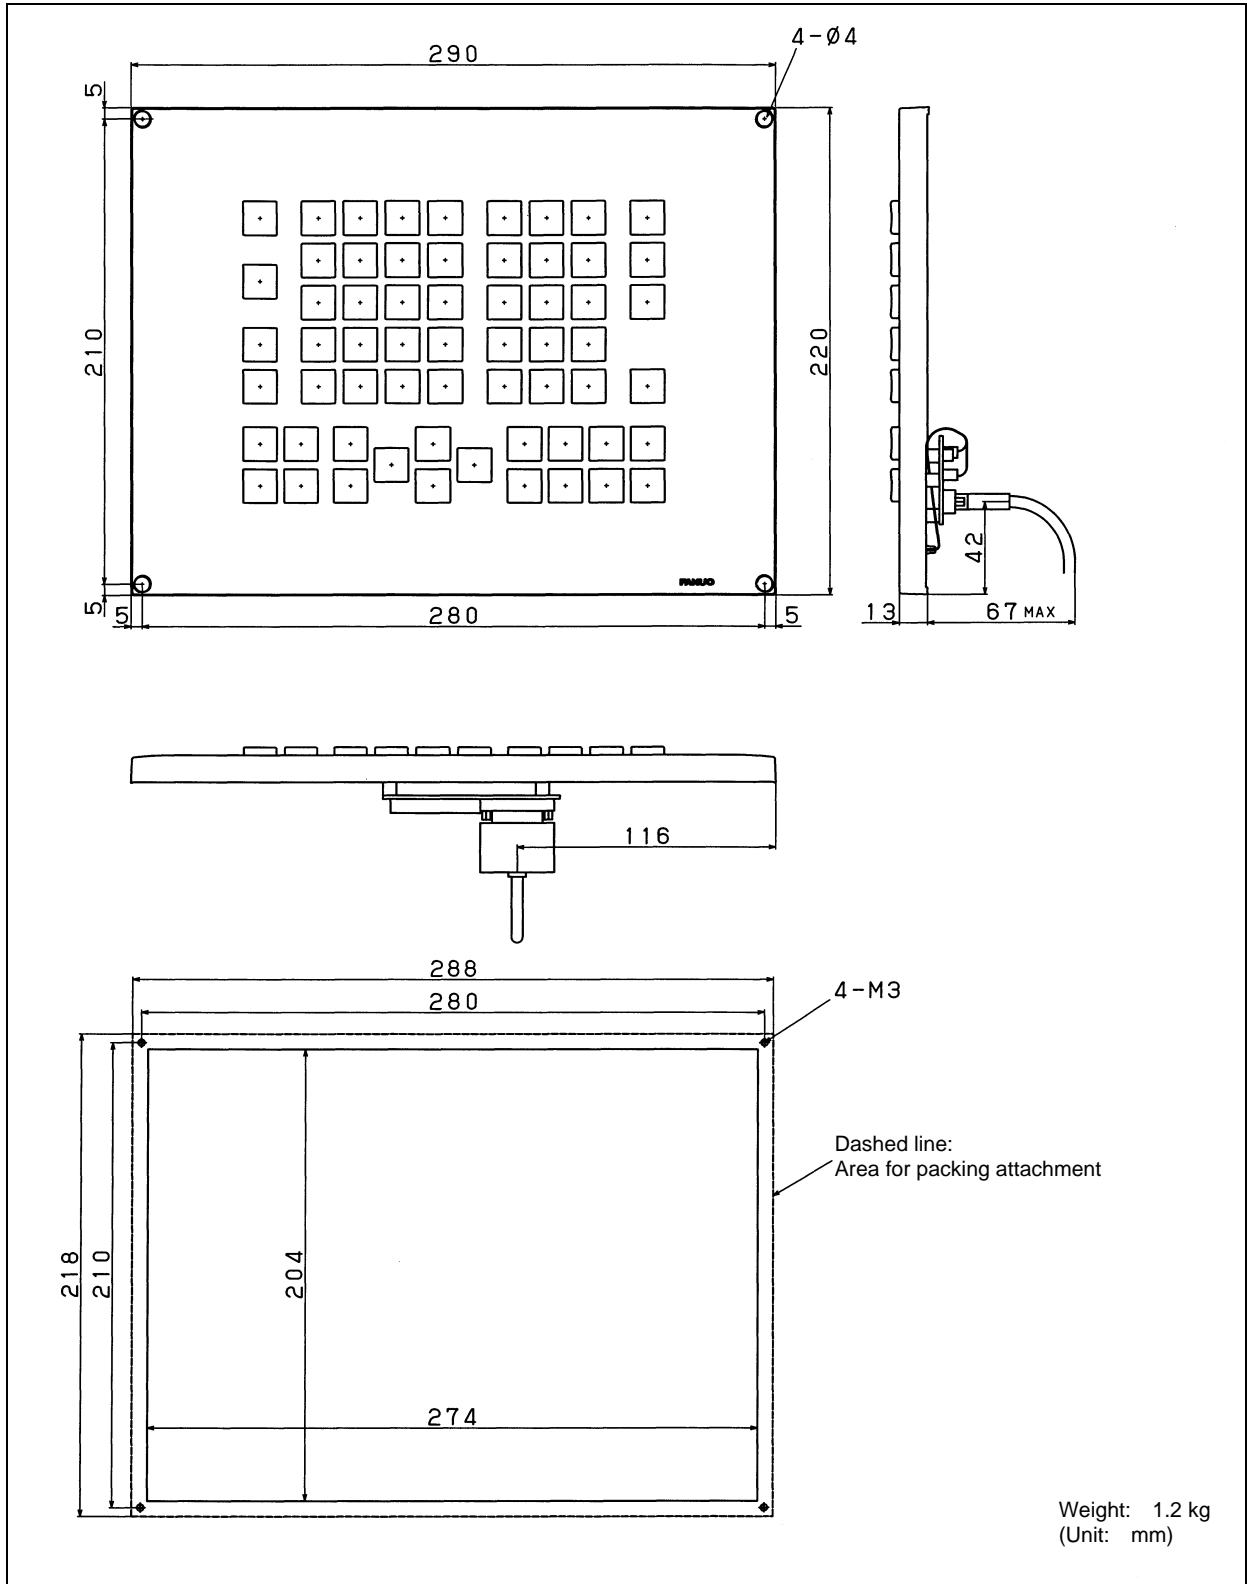


Fig. U8 MDI unit (ONG, 220x290mm)

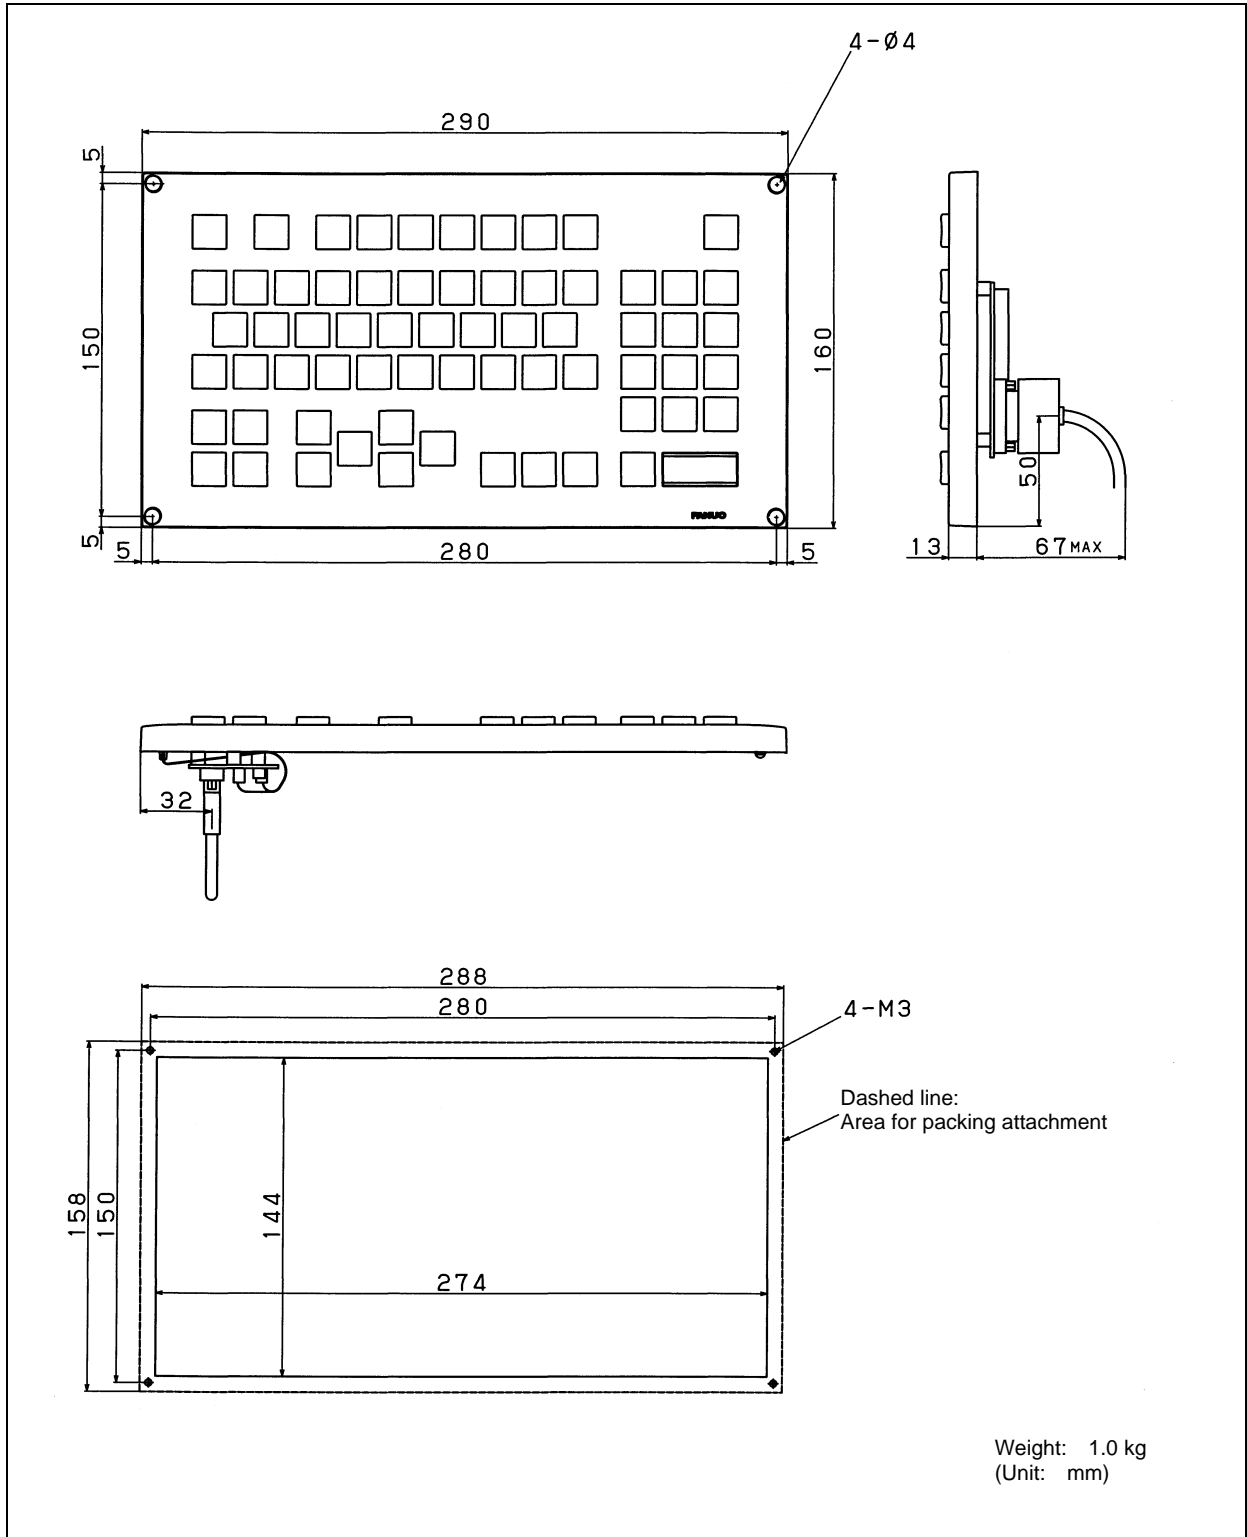


Fig. U9 MDI unit (QWERTY TYPE A, 160x290mm)

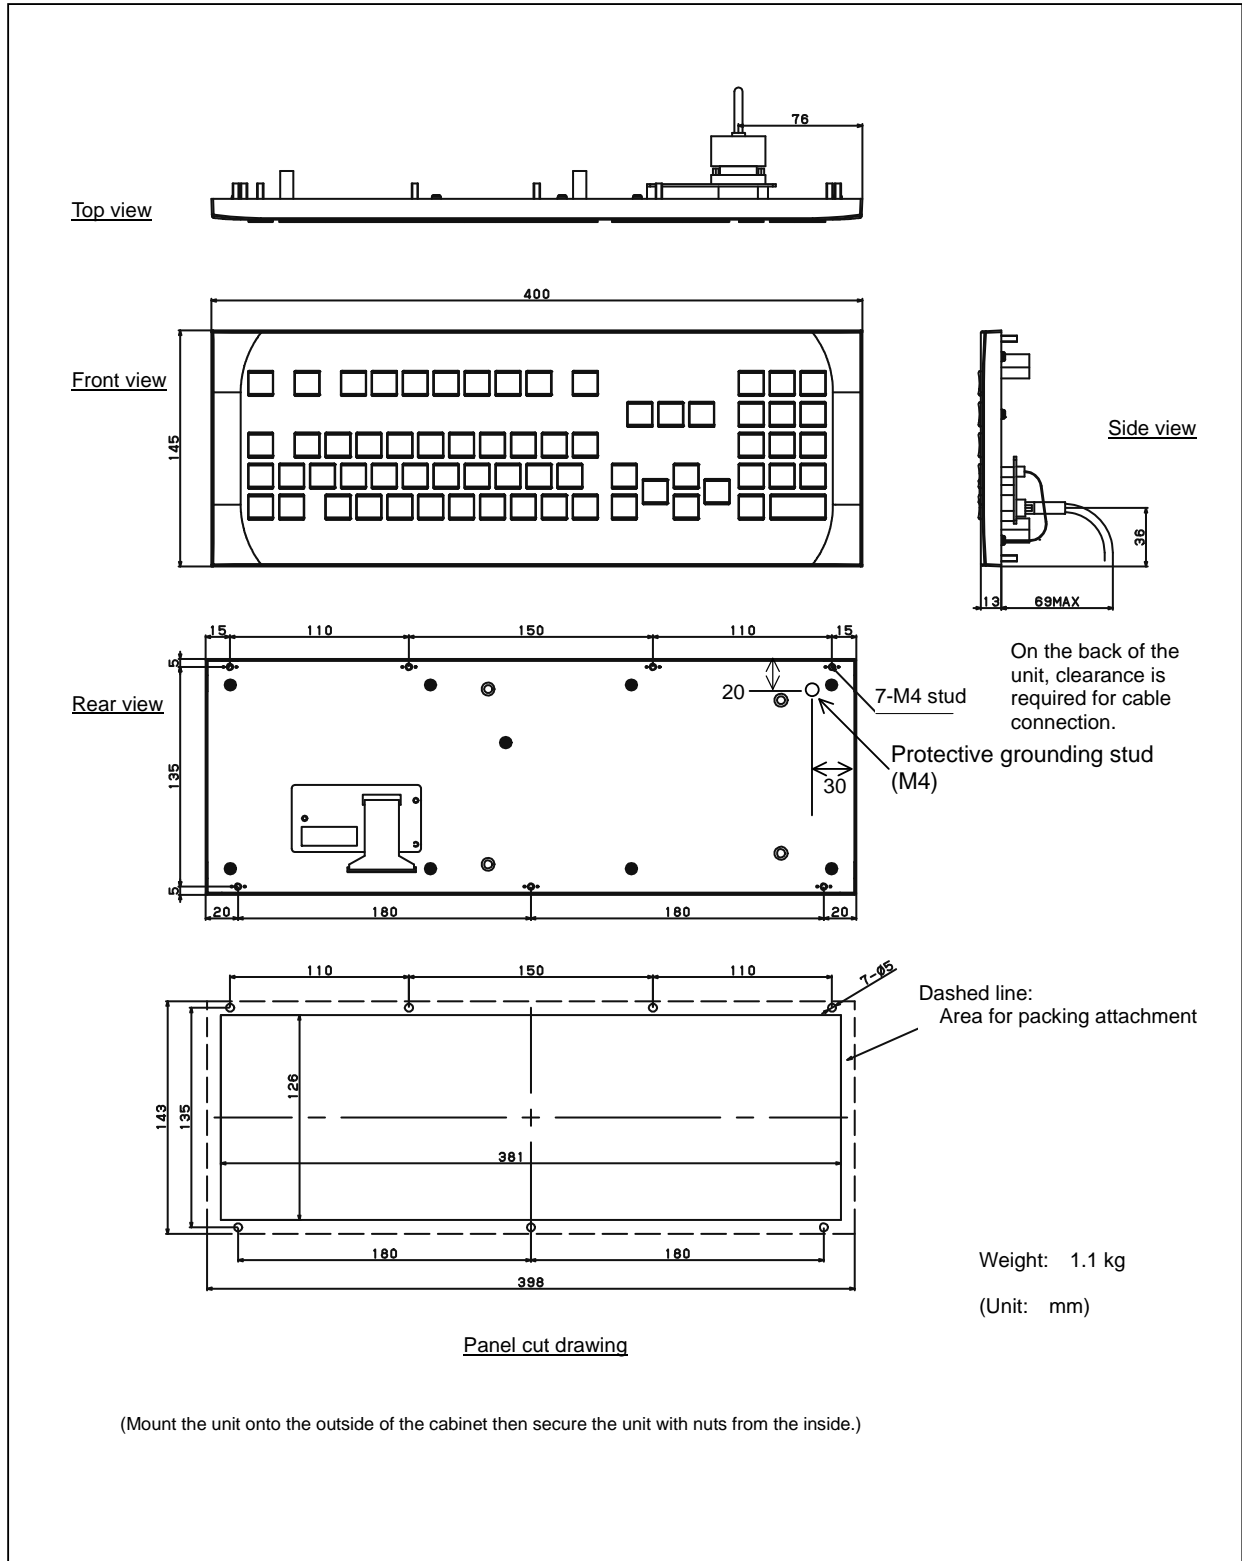


Fig. U10 MDI unit (QWERTY TYPE B, 145x400mm)

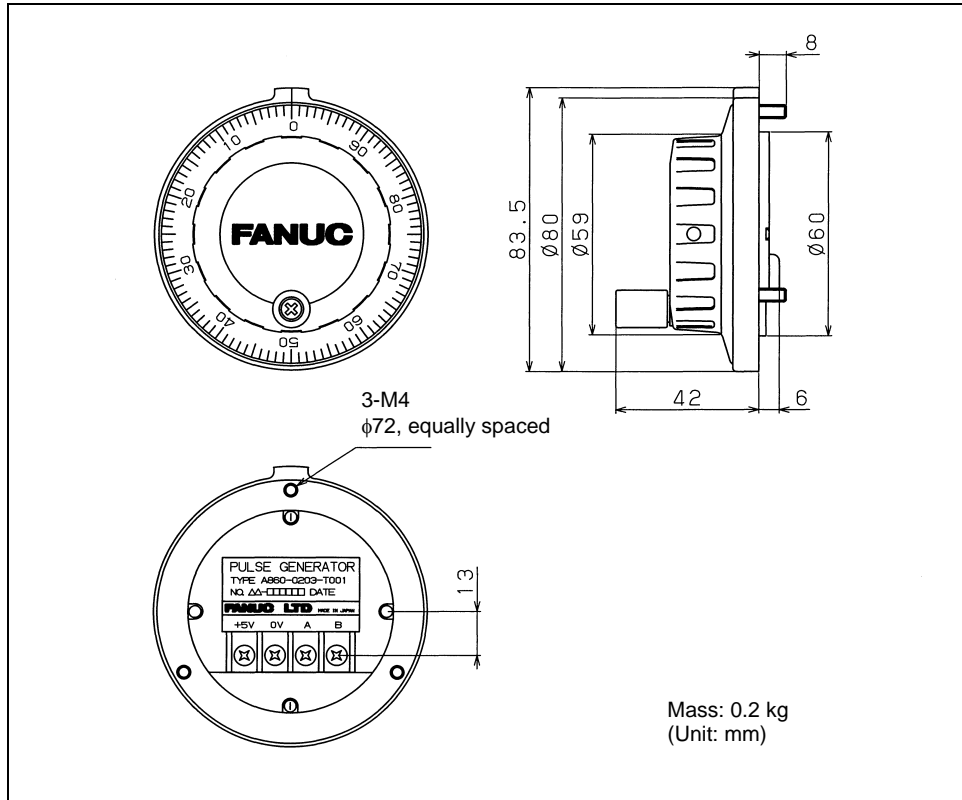


Fig. U11 Manual pulse generator

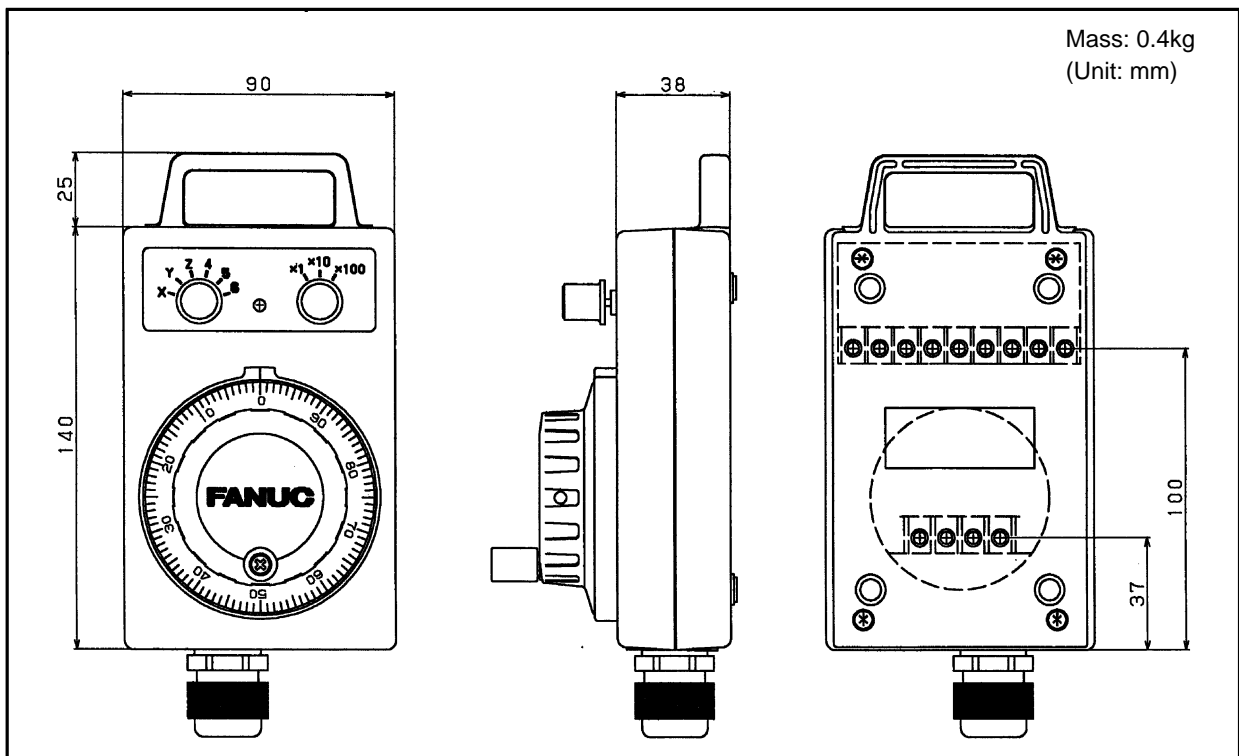


Fig. U12 Pendant type manual pulse generator

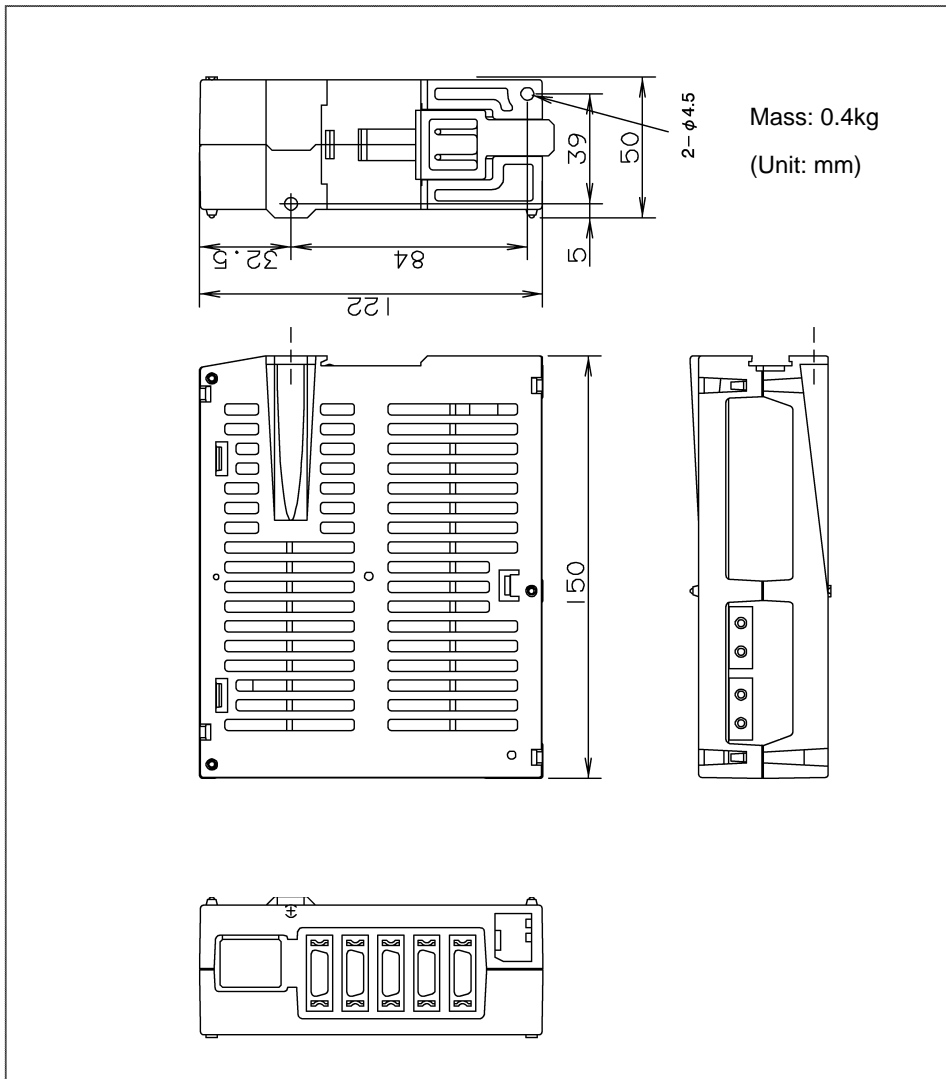


Fig. U13 Separate detector interface unit or analog input separate detector interface unit

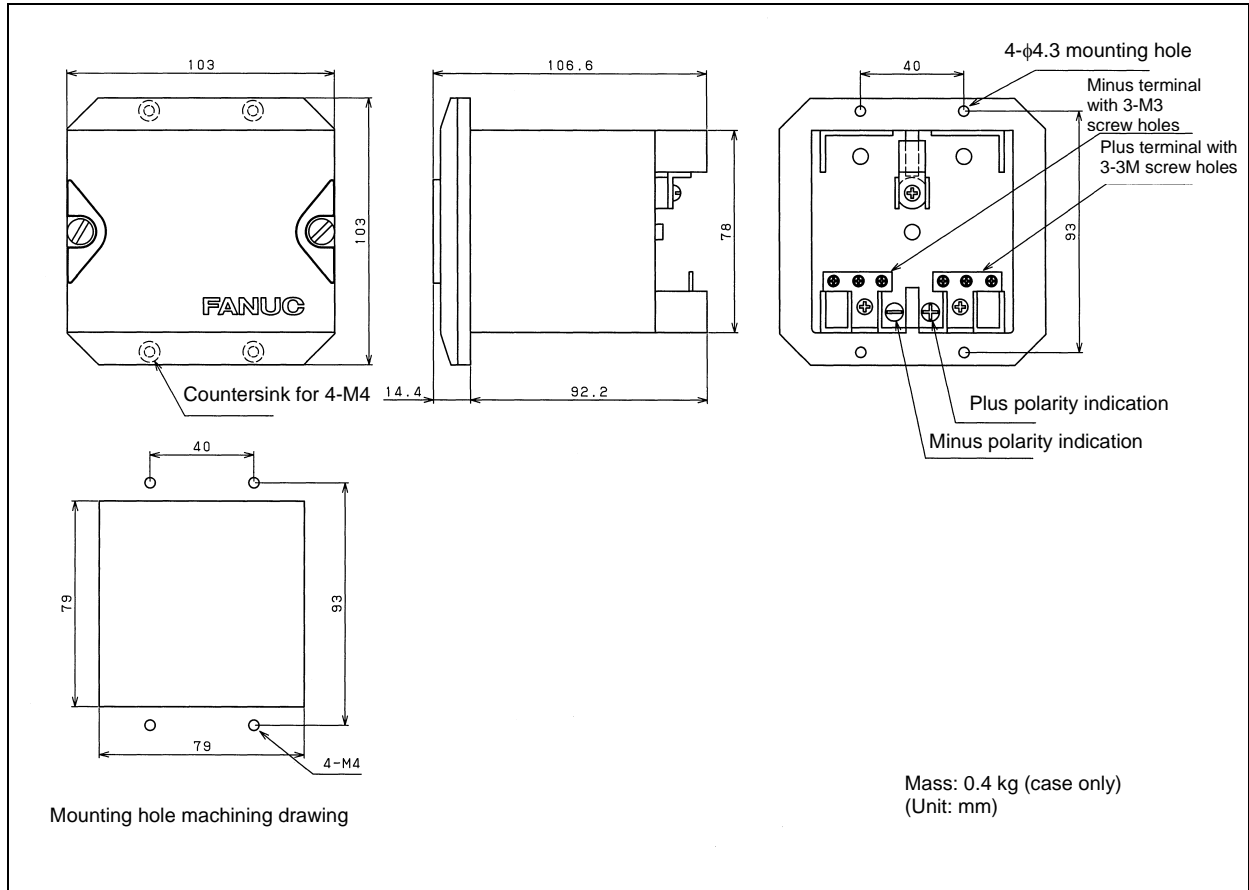


Fig. U14 Absolute pulse coder battery case for a separate detector

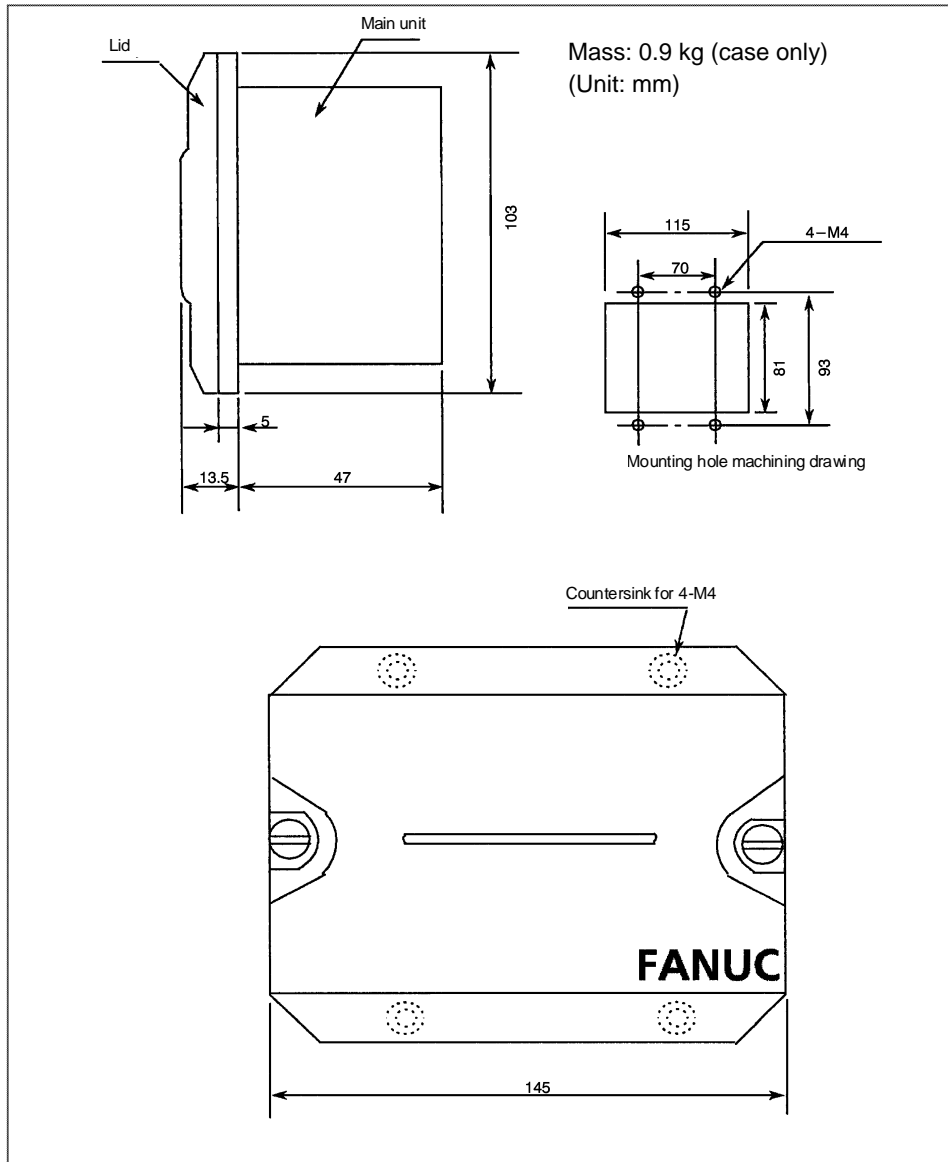


Fig. U15 Battery case for external installation

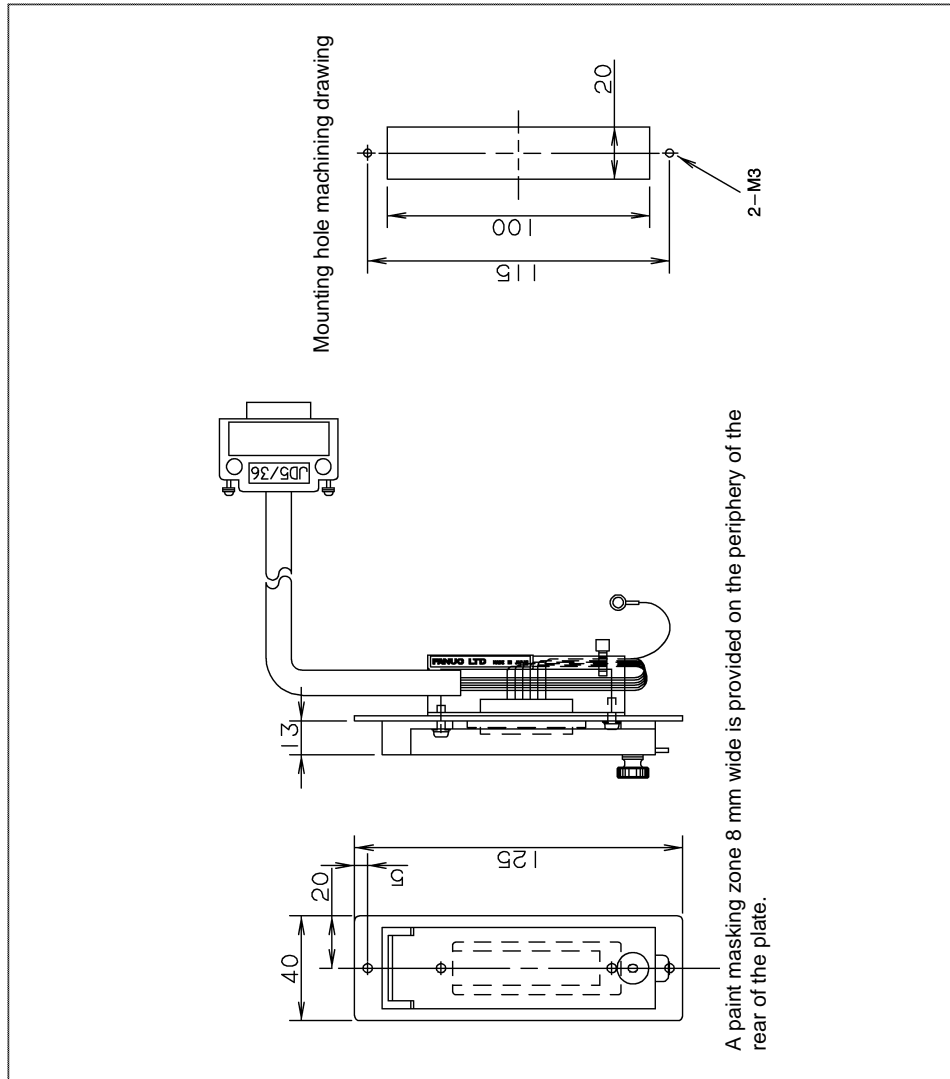


Fig. U16 Punch panel (for LCD-mounted type control unit)


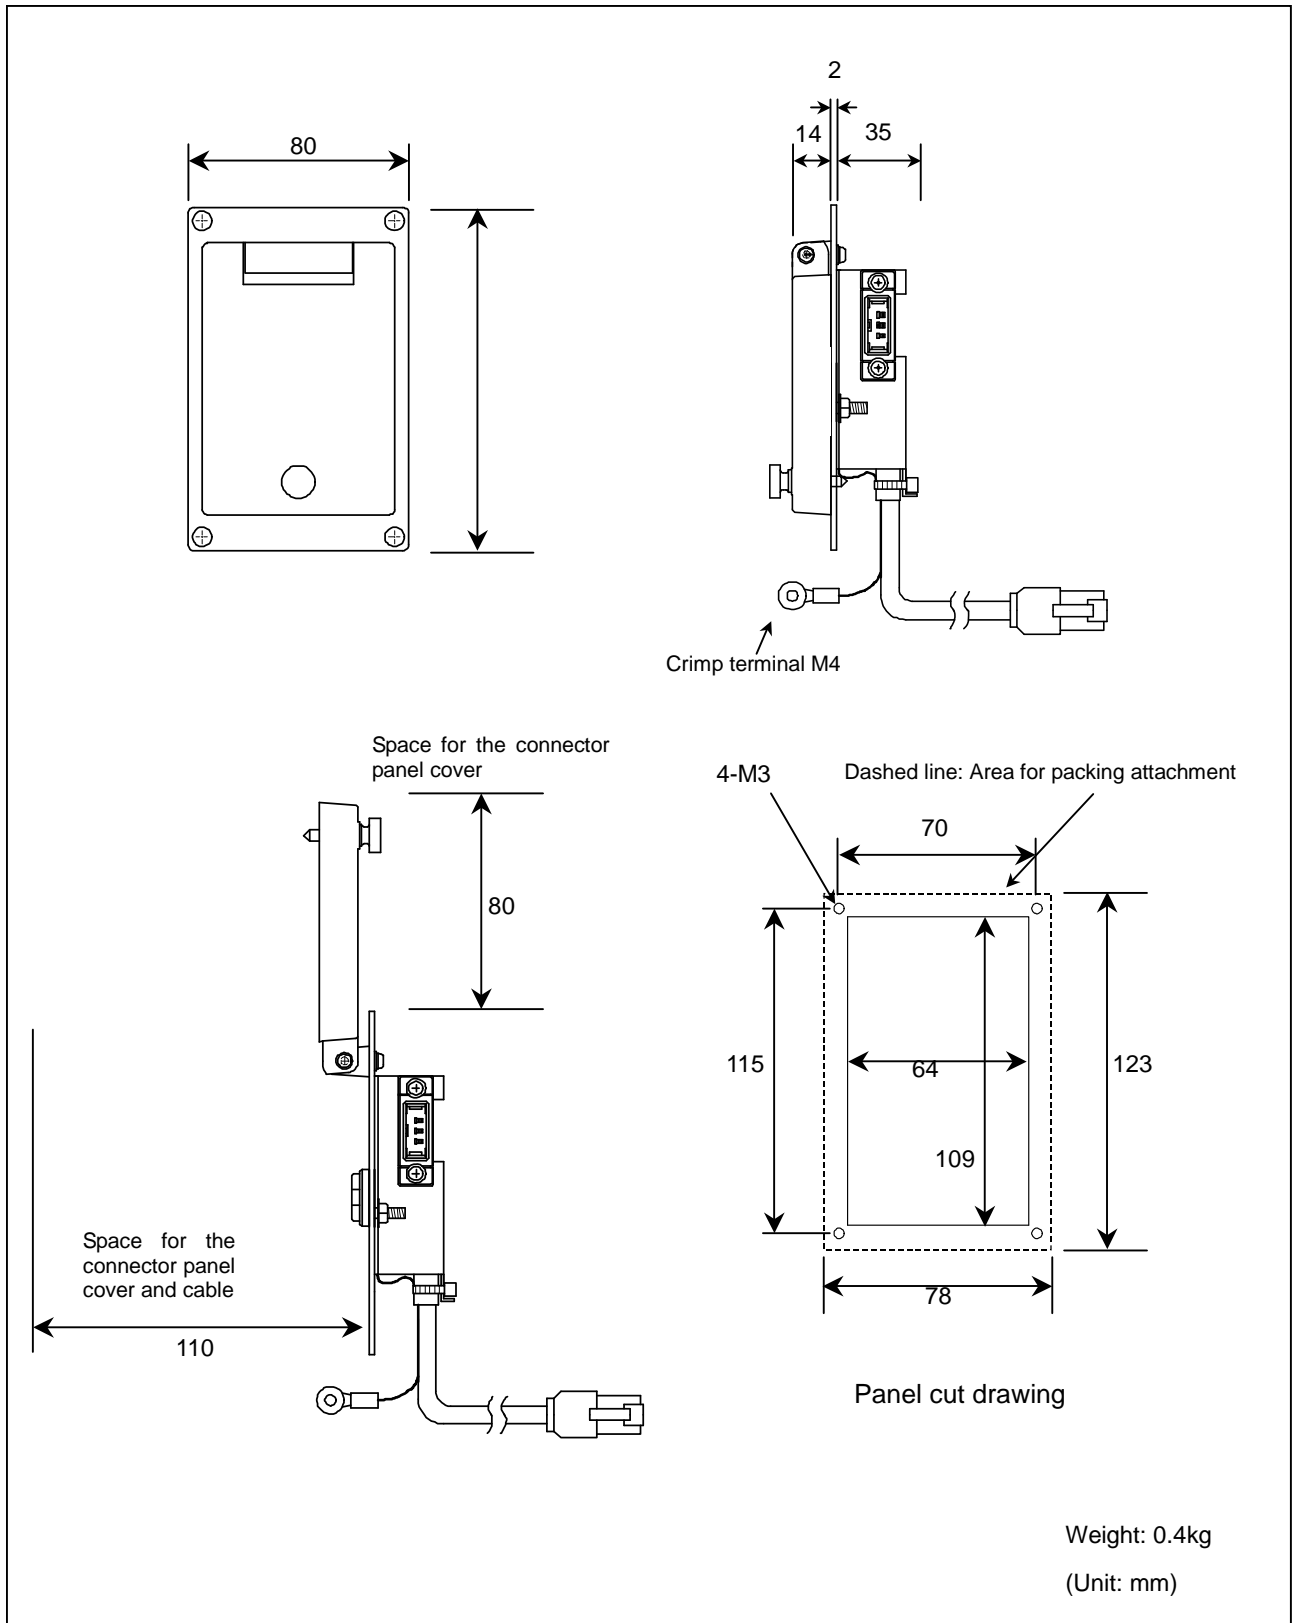


Fig. U17 Ethernet Connector Panel

Connectors

Fig. title	Specification No.	Fig. No.
PCR connector (soldering type)	PCR-E20FS	Fig. C1 (a)
FI40 connector	FI40-2015S	Fig. C1 (b)
Connector case (PCR type manufactured by HONDA TSUSHIN KOGYO)	PCR-V20LA/PCR-V20LB	Fig. C2 (a)
Connector case (FI type manufactured by HIROSE ELECTRIC)	FI-20-CV	Fig. C2 (b)
Connector case (manufactured by FUJITSU COMPONENT)	FCN-240C20-Y/S	Fig. C2 (c)
Connector case (PCR type manufactured by HIROSE ELECTRIC)	FI-20-CV7	Fig. C2 (d)
Connector (1) for servo side manufactured by Tyco Electronics	AMP1-178128-3	Fig. C3 (a)
Connector (2) for servo side manufactured by Tyco Electronics	AMP2-178128-3	Fig. C3 (b)
Connector (3) for +24 V power supply manufactured by Tyco Electronics	AMP1-178288-3	Fig. C3 (c)
Connector (4) for +24 V power supply manufactured by Tyco Electronics	AMP2-178288-3	Fig. C3 (d)
Contact for connector manufactured by Tyco Electronics	AMP1-175218-2/5 AMP1-175196-2/5	Fig. C3 (e)
Connector (case) manufactured by HONDA TSUSHIN KOGYO		Fig. C4 (a)
Connector (angled case) manufactured by HONDA TSUSHIN KOGYO		Fig. C4 (b)
Connector (male) manufactured by HONDA TSUSHIN KOGYO		Fig. C4 (c)
Connector (female) manufactured by HONDA TSUSHIN KOGYO		Fig. C4 (d)
Connector (terminal layout) manufactured by HONDA TSUSHIN KOGYO		Fig. C4 (e)
Connector (3 pins/brown) manufactured by SOURIAU Japan KK	SMS3PN-5	Fig. C5
Connector for flat cable manufactured by HIROSE ELECTRIC	HIF3BB-50D-2.54R HIF3BB-34D-2.54R	Fig. C6
Connector (for MDI) manufactured by Japan Aviation Electronics for CA55	LY10-DC20	Fig. C7 (a)
Contact (for MDI) manufactured by Japan Aviation Electronics for CA55	LY10-C2-3	Fig. C7 (b)
Punch panel connector for reader/punch interface		Fig. C8 (a)
Locking plate for reader/punch interface connector		Fig. C8 (b)
Connector (for distribution I/O connection printed circuit board) manufactured by HONDA TSUSHIN KOGYO	MRH-50FD	Fig. C9
Faston terminal	A02B-0166-K330	Fig. C10

TYPE : HONDA PCR-E20FS (SOLDERING TYPE)
 USAGE : GENERAL
 MATING :
 HOUSING : HONDA PCR-V20LA (PLASTIC)

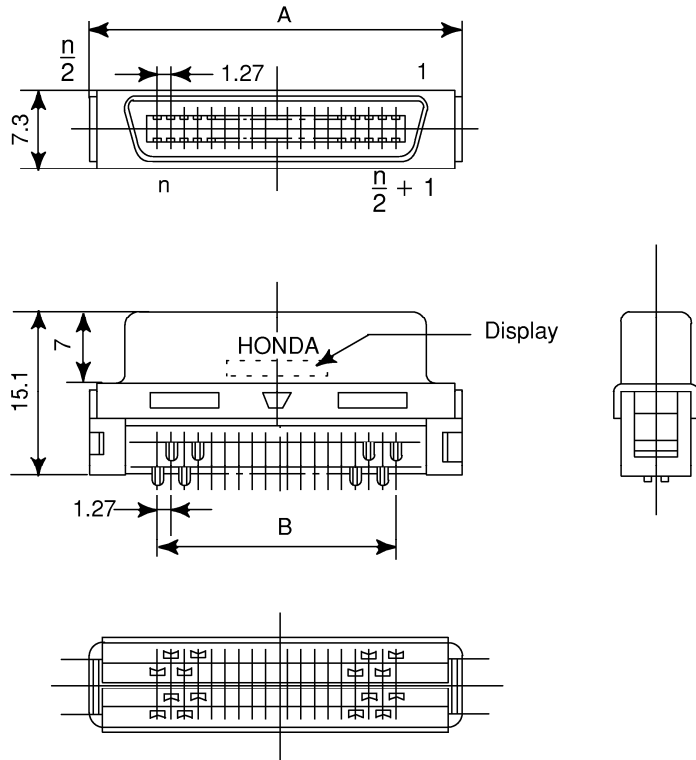

	A	B
PCR-E20FS	21.65	11.43

Fig. C1 (a) PCR connector (soldering type)

TYPE : HIROSE FI40-2015S
 USAGE : PULSE CODER INTERFACE
 LINEAR SCALE INTERFACE
 MPG INTERFACE
 MATING/HOUSING : HIROSE FI-20-CV

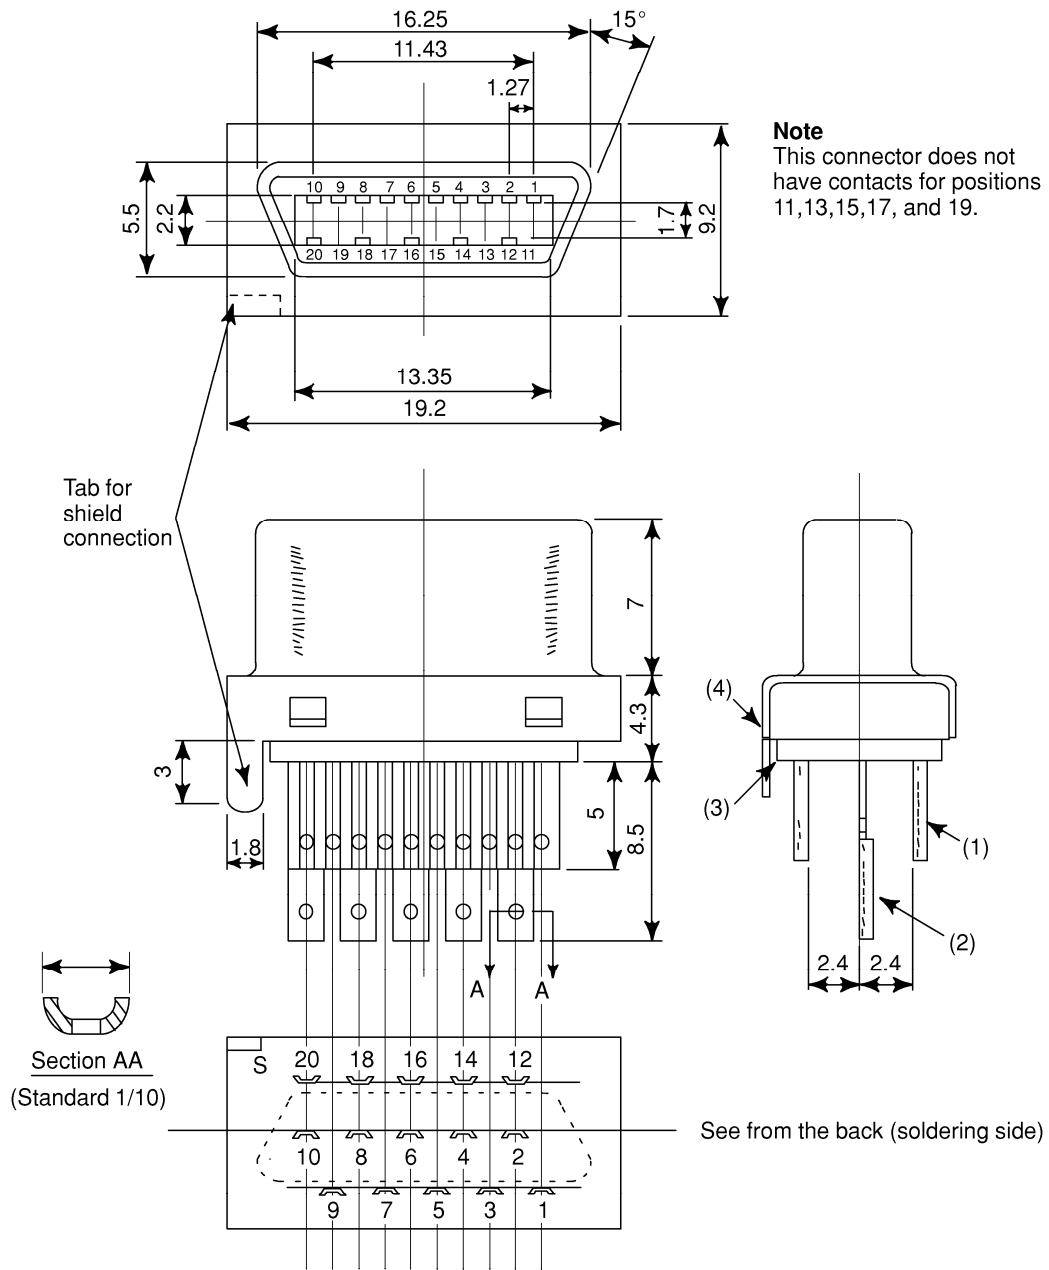


Fig. C1 (b) FI40 connector

TYPE : HONDA PCR-V20LA (for 6 dia. cable)
 USAGE : GENERAL

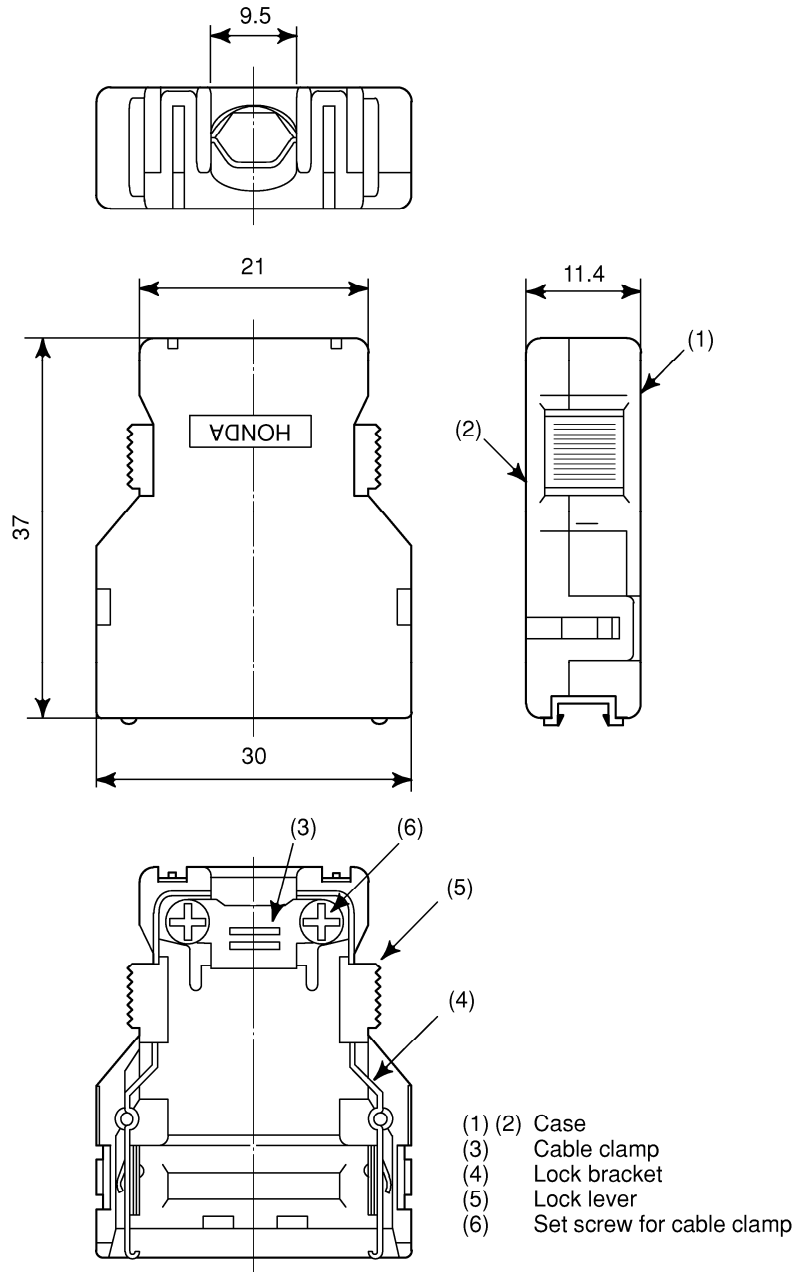


Fig. C2 (a) Connector case (PCR type manufactured by HONDA TSUSHIN KOGYO)

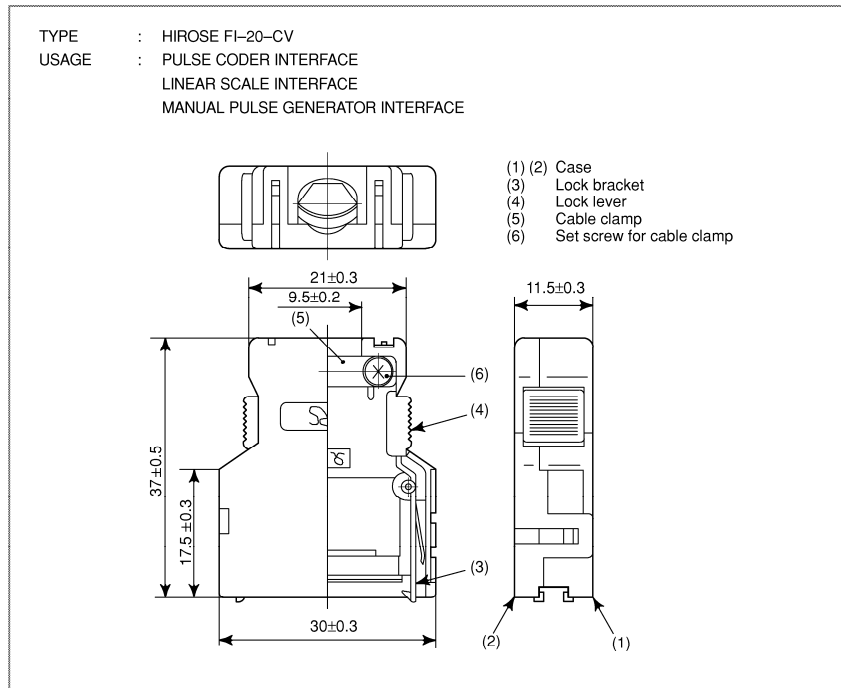


Fig. C2 (b) Connector case (FI type manufactured by HIROSE ELECTRIC)

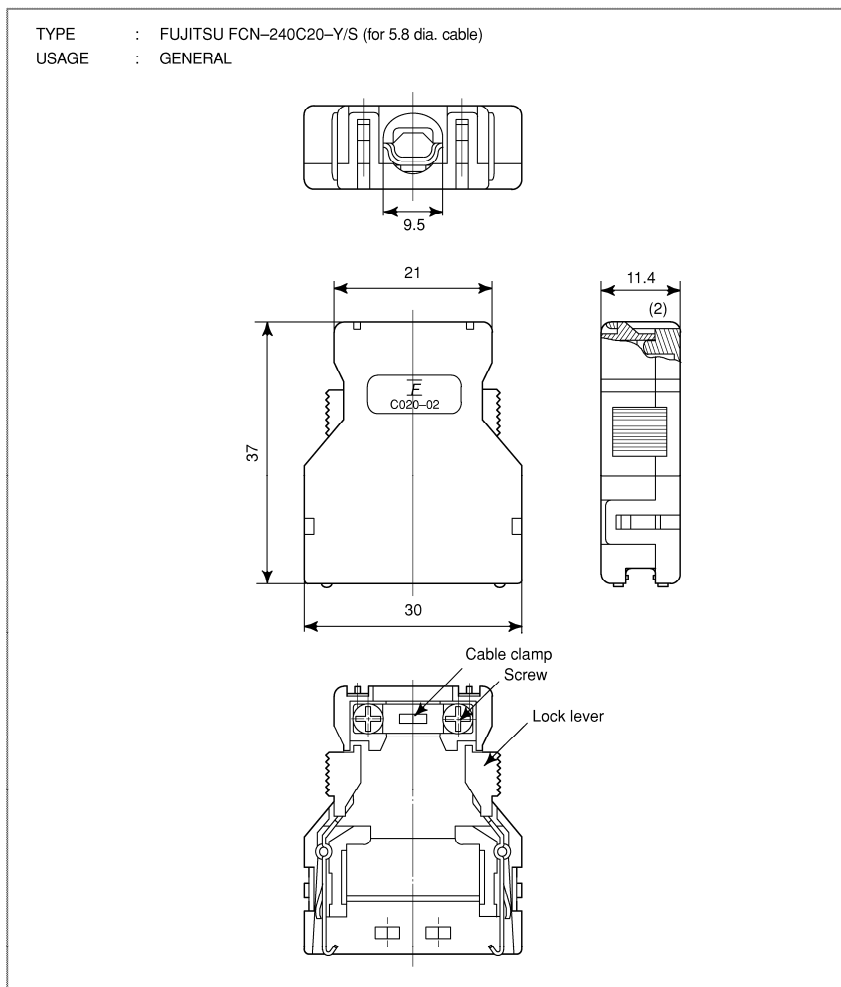


Fig. C2 (c) Connector case (manufactured by FUJITSU COMPONENT)

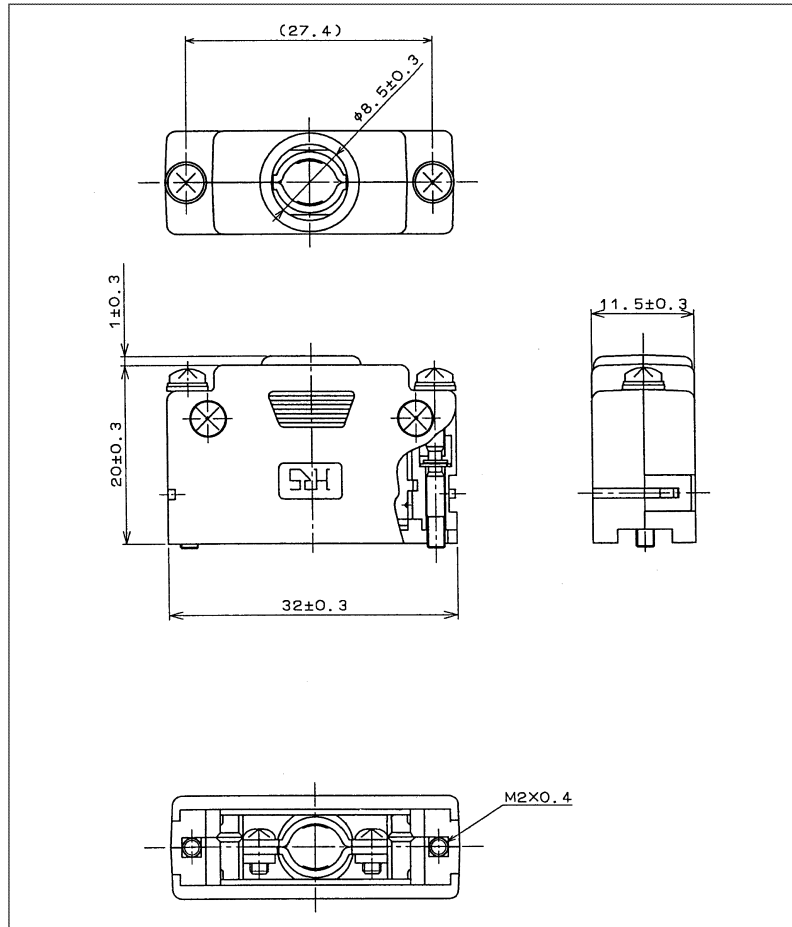


Fig. C2 (d) Connector case (PCR type manufactured by HIROSE ELECTRIC)

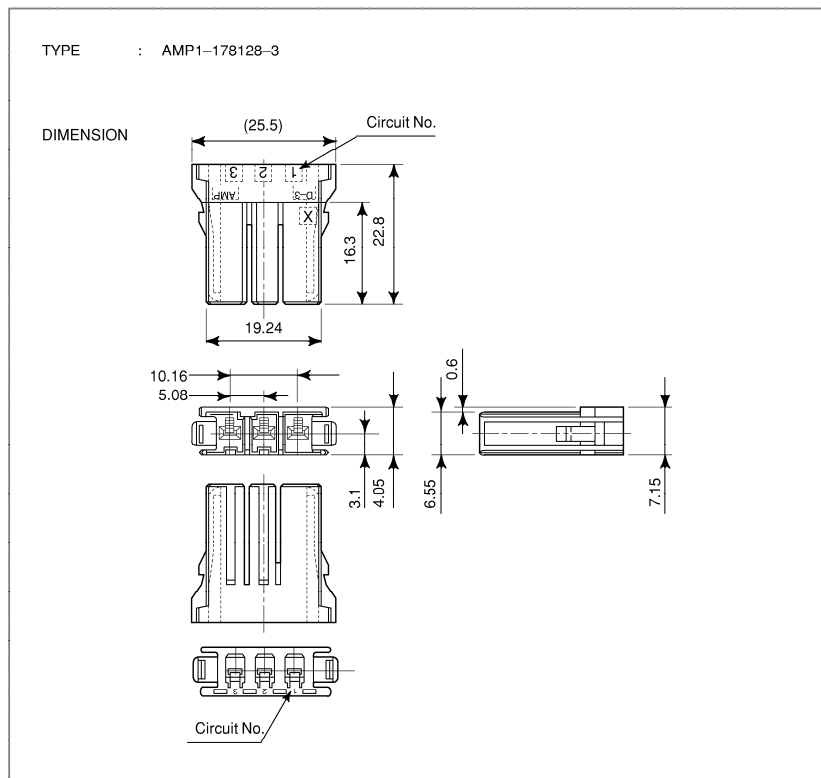


Fig. C3 (a) Connector (1) for servo side manufactured by Tyco Electronics

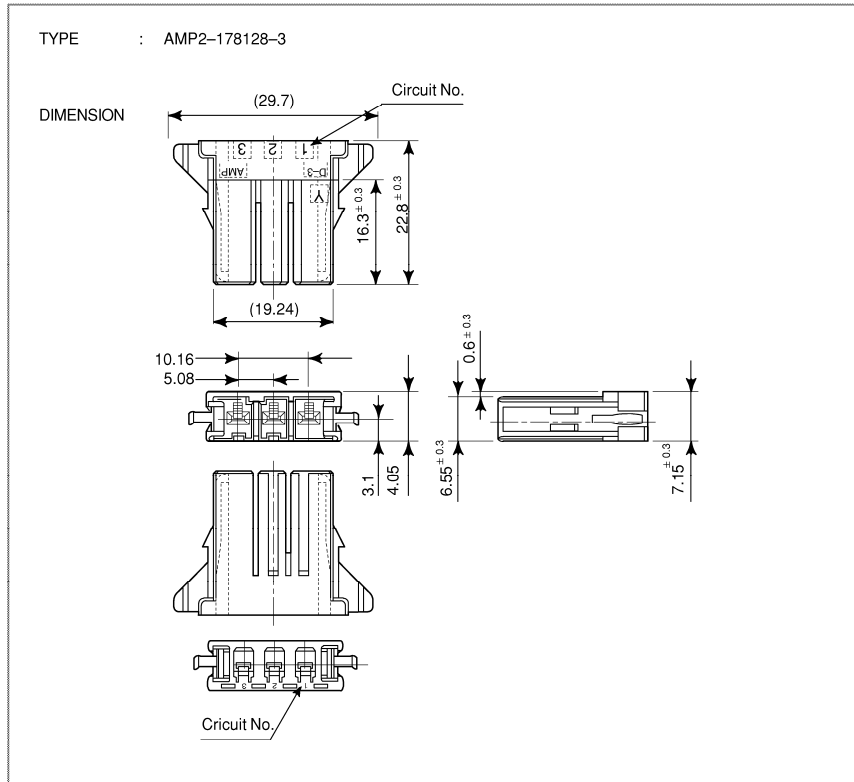


Fig. C3 (b) Connector (2) for servo side manufactured by Tyco Electronics

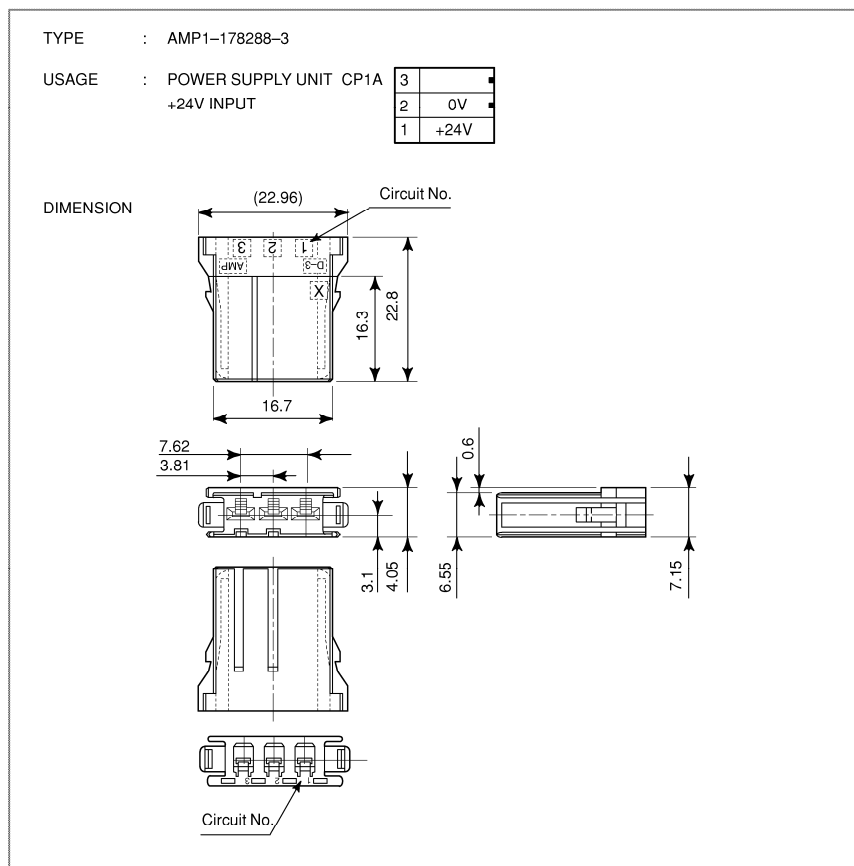


Fig. C3 (c) Connector (3) for +24 V power supply manufactured by Tyco Electronics

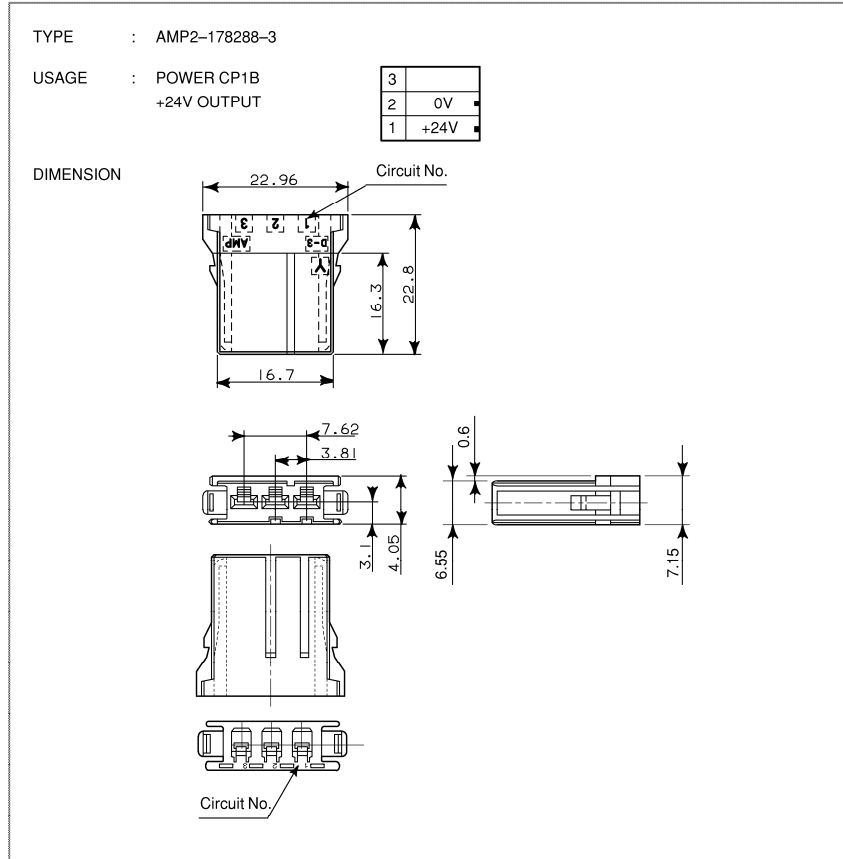


Fig. C3 (d) Connector (4) for +24 V power supply manufactured by Tyco Electronics

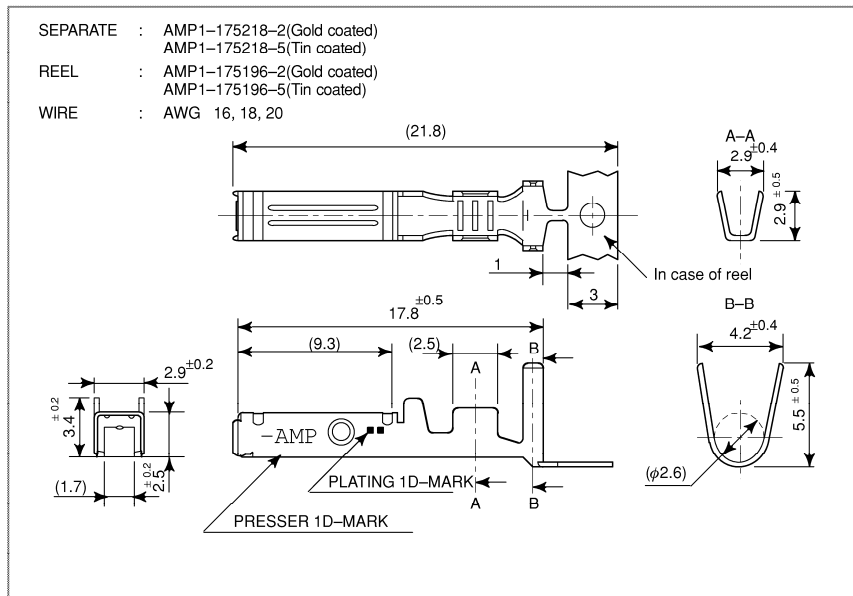


Fig. C3 (e) Contact for connector manufactured by Tyco Electronics

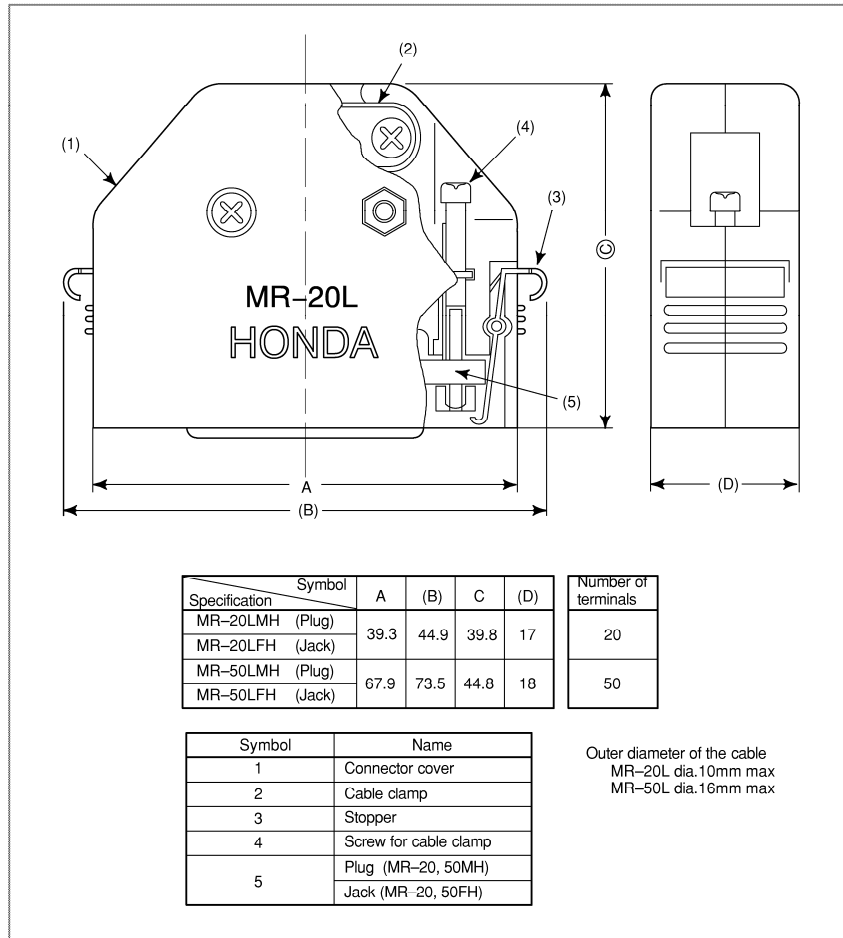


Fig. C4 (a) Connector (case) manufactured by HONDA TSUSHIN KOGYO

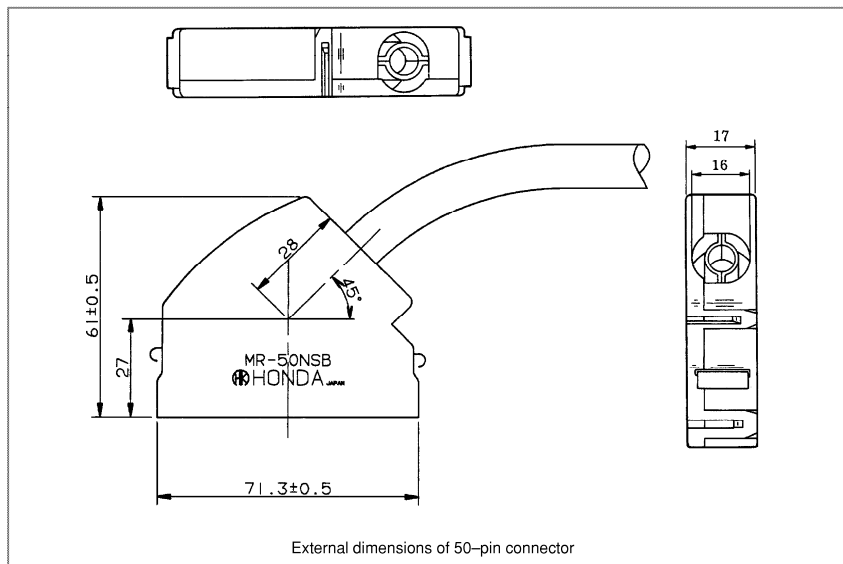


Fig. C4 (b) Connector (angled case) manufactured by HONDA TSUSHIN KOGYO

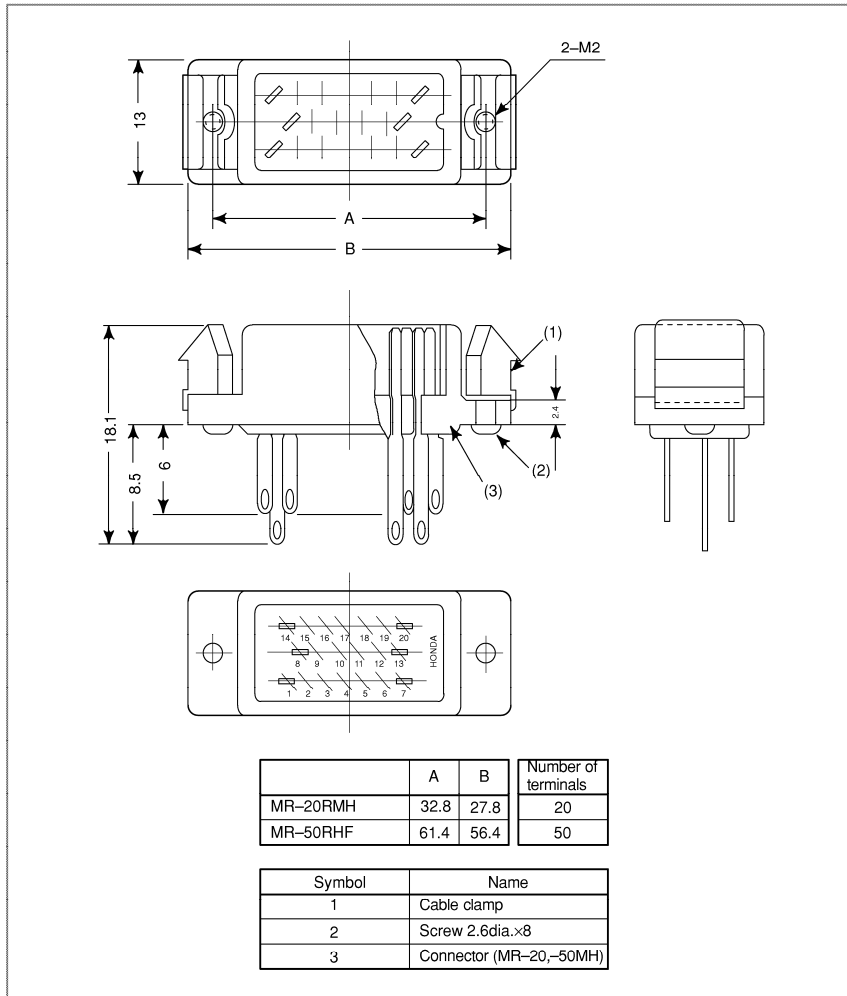


Fig. C4 (c) Connector (male) manufactured by HONDA TSUSHIN KOGYO

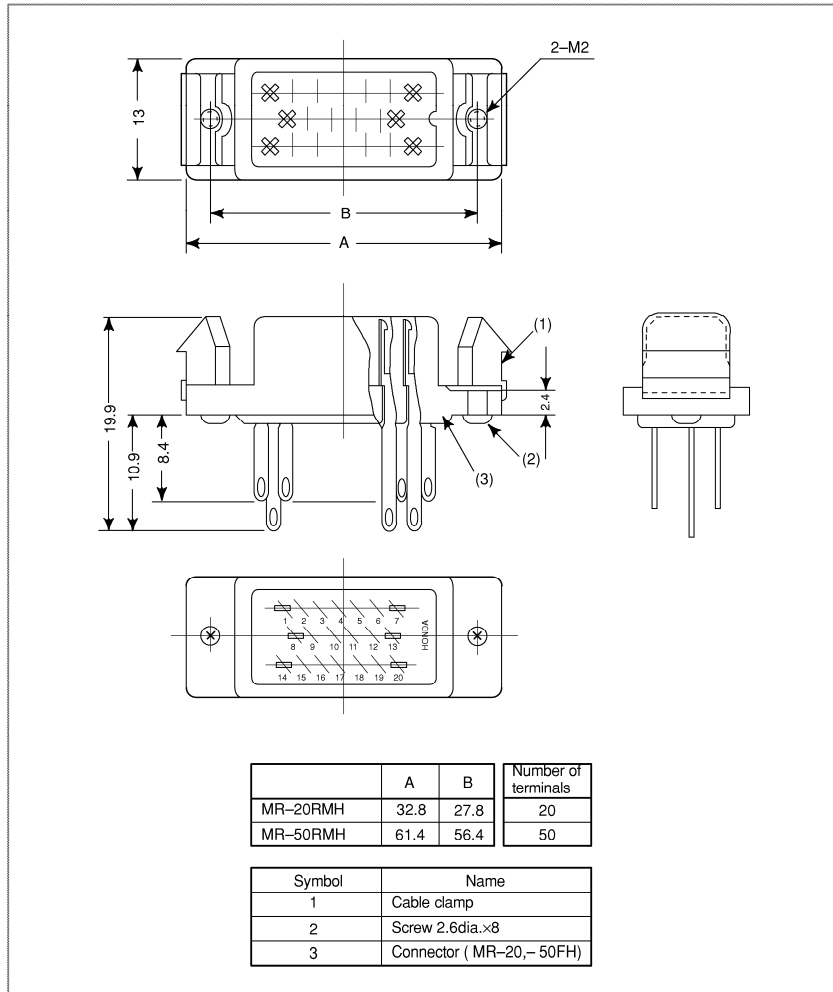


Fig. C4 (d) Connector (female) manufactured by HONDA TSUSHIN KOGYO

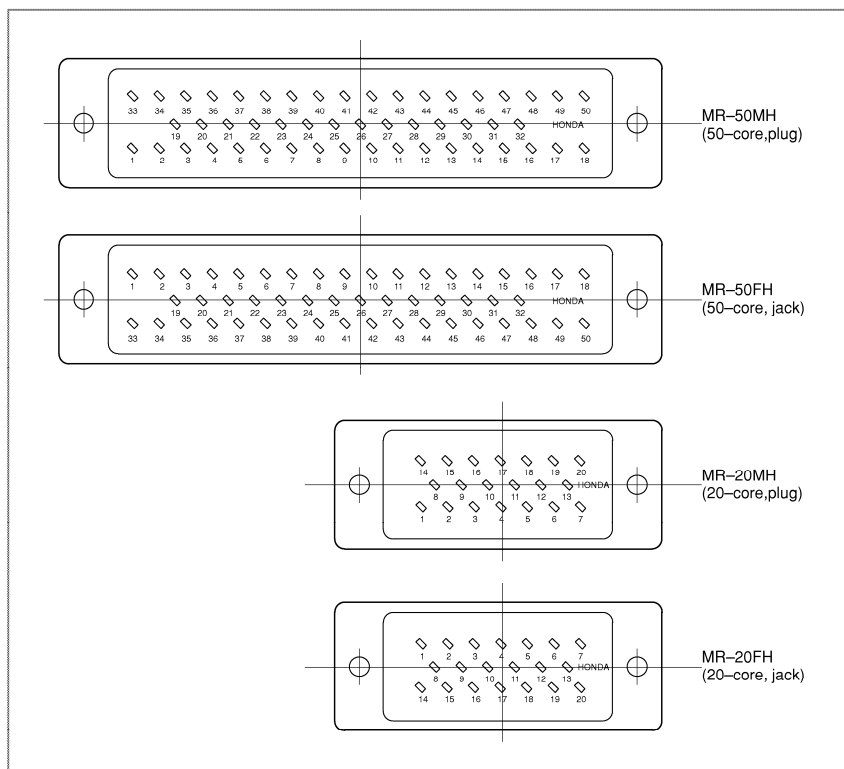


Fig. C4 (e) Connector (terminal layout) manufactured by HONDA TSUSHIN KOGYO

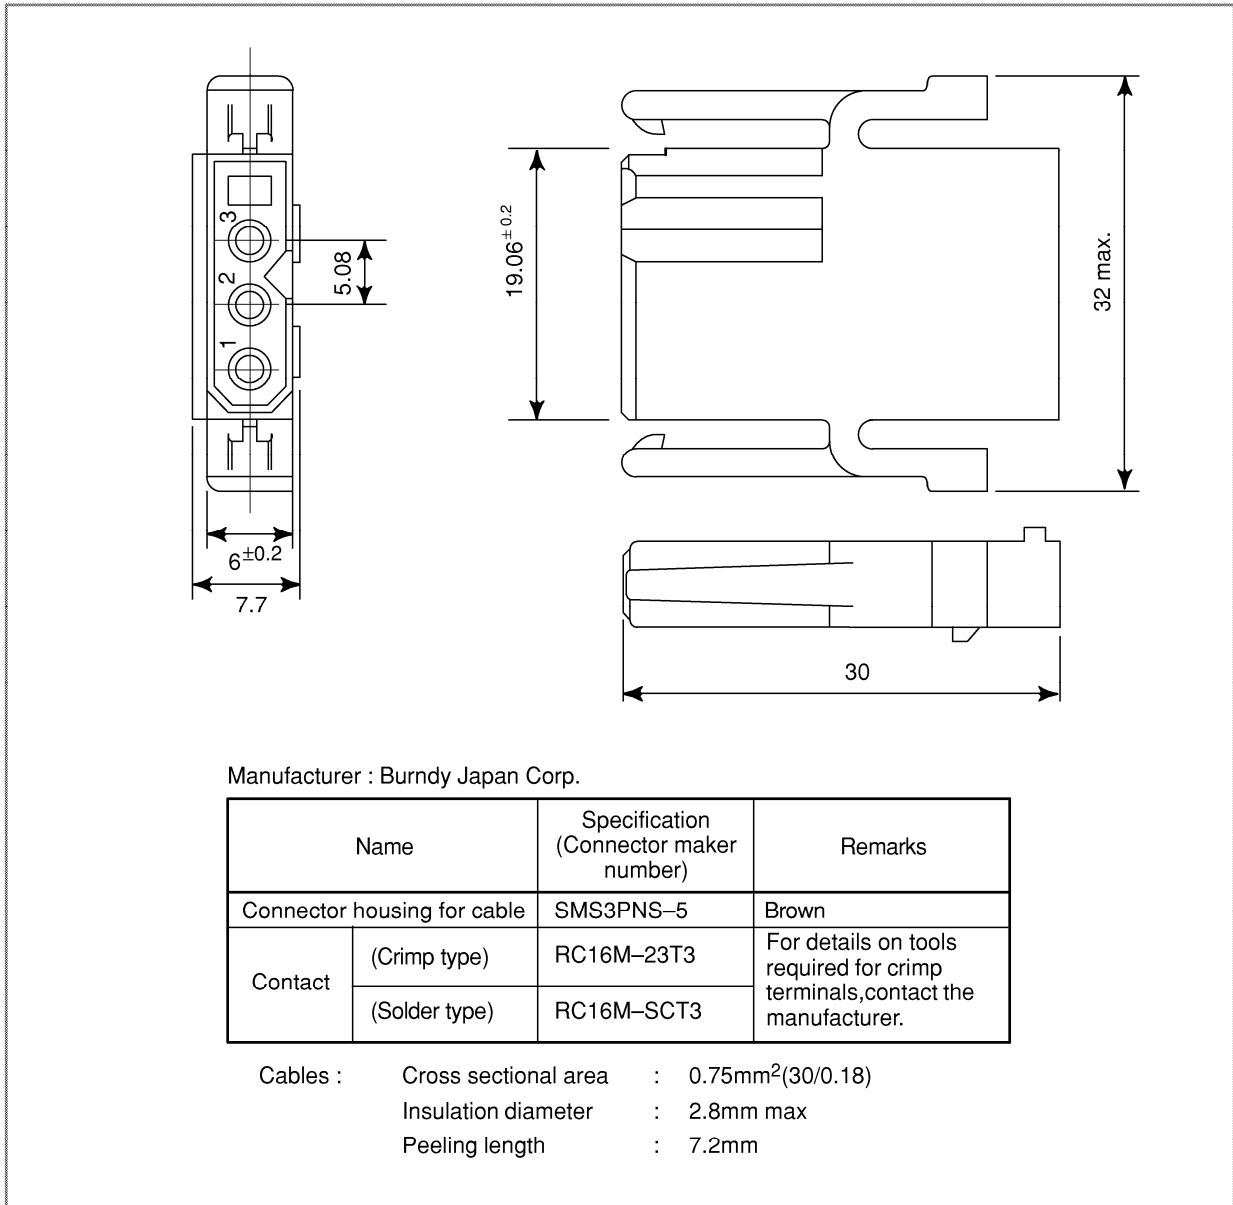


Fig. C5 Connector (3 pins/brown) manufactured by Burndy Japan

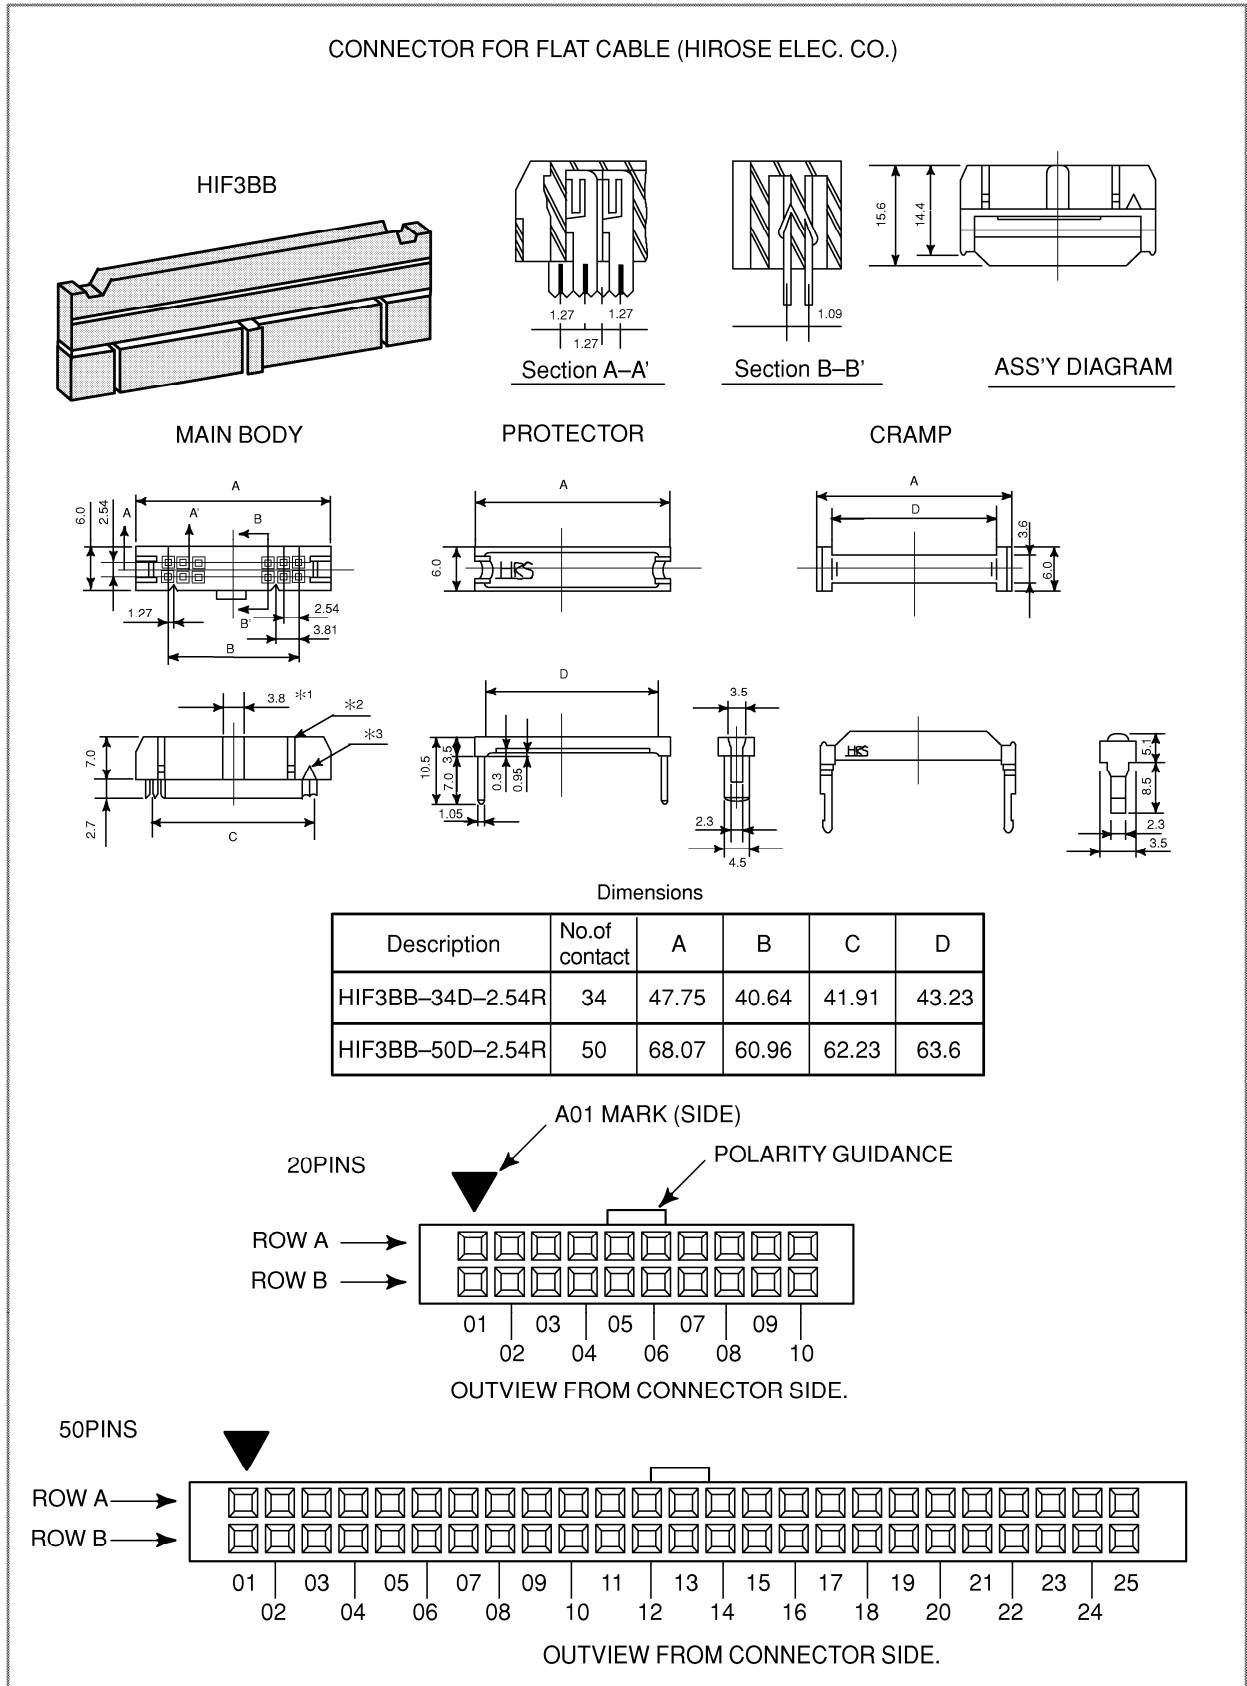


Fig. C6 Connector for flat cable manufactured by HIROSE ELECTRIC

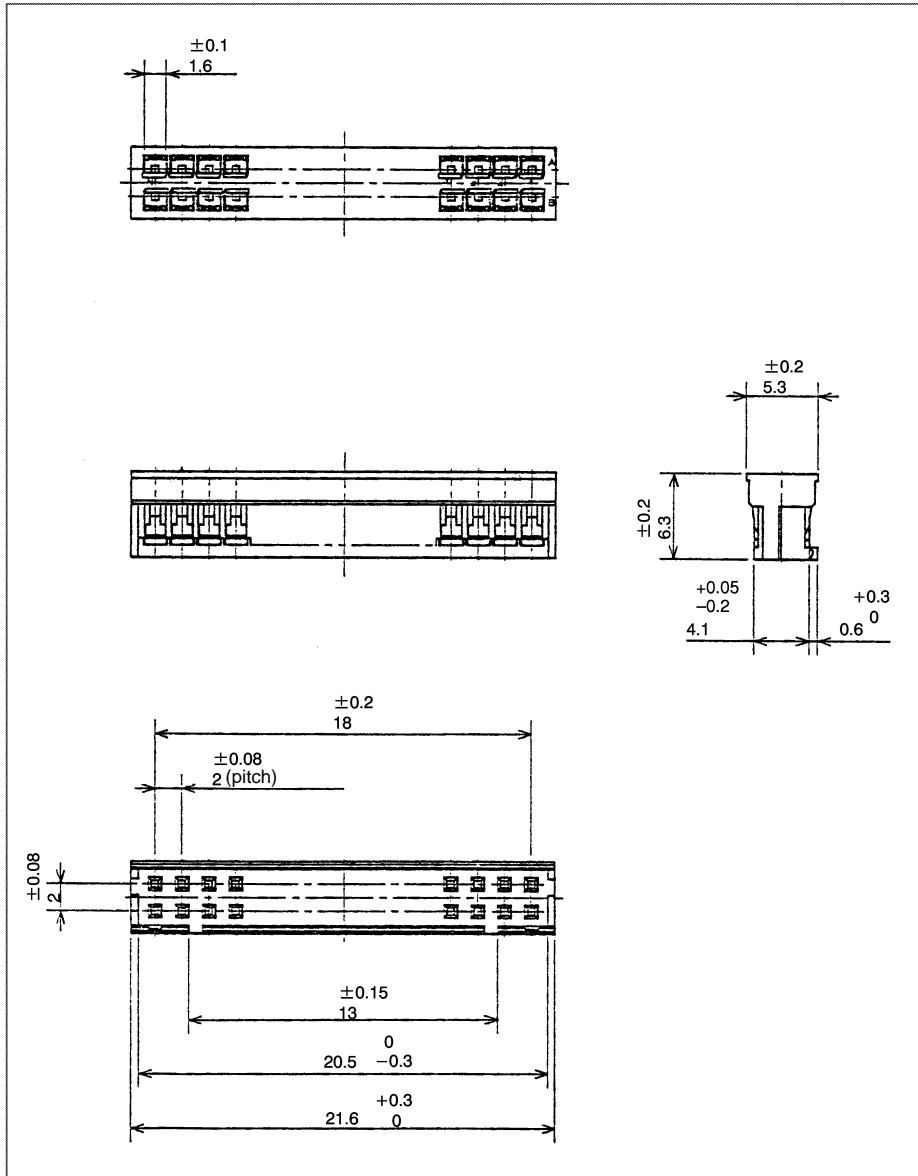


Fig. C7 (a) Connector (for MDI) manufactured by Japan Aviation Electronics

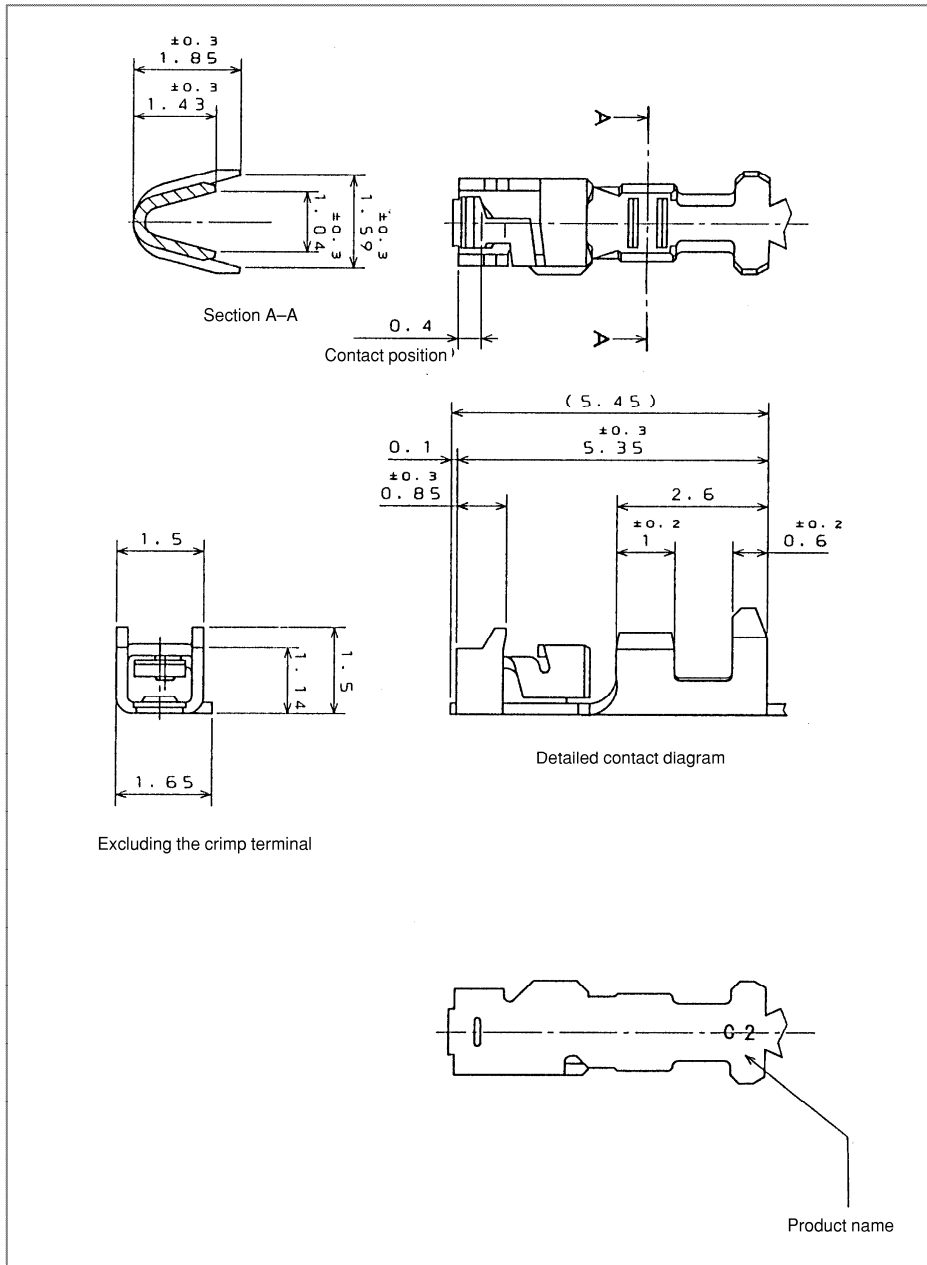


Fig. C7 (b) Contact (for MDI) manufactured by Japan Aviation Electronics

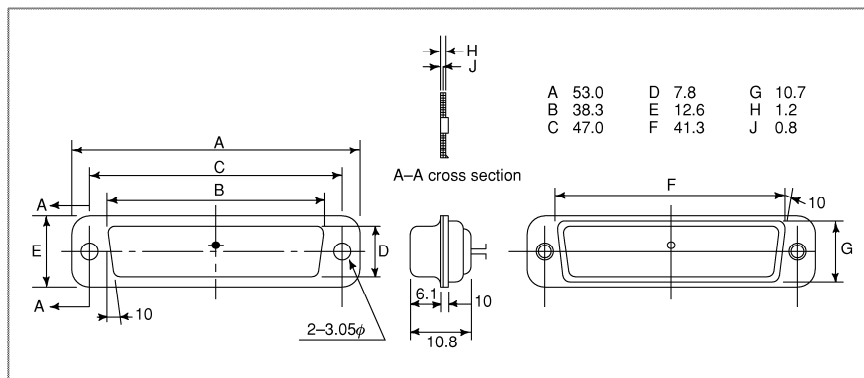


Fig. C8 (a) Punch panel connector for reader/punch interface

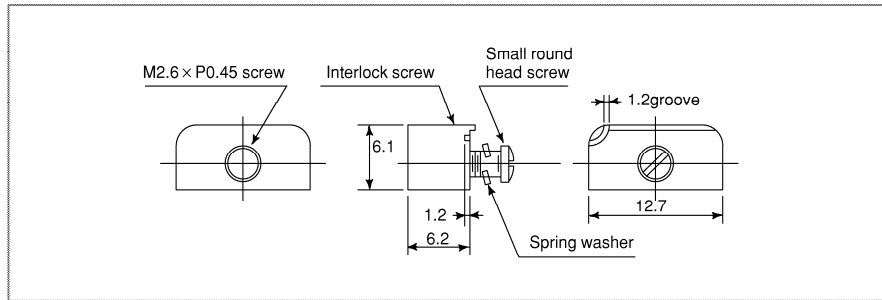


Fig. C8 (b) Locking plate for reader/punch interface connector

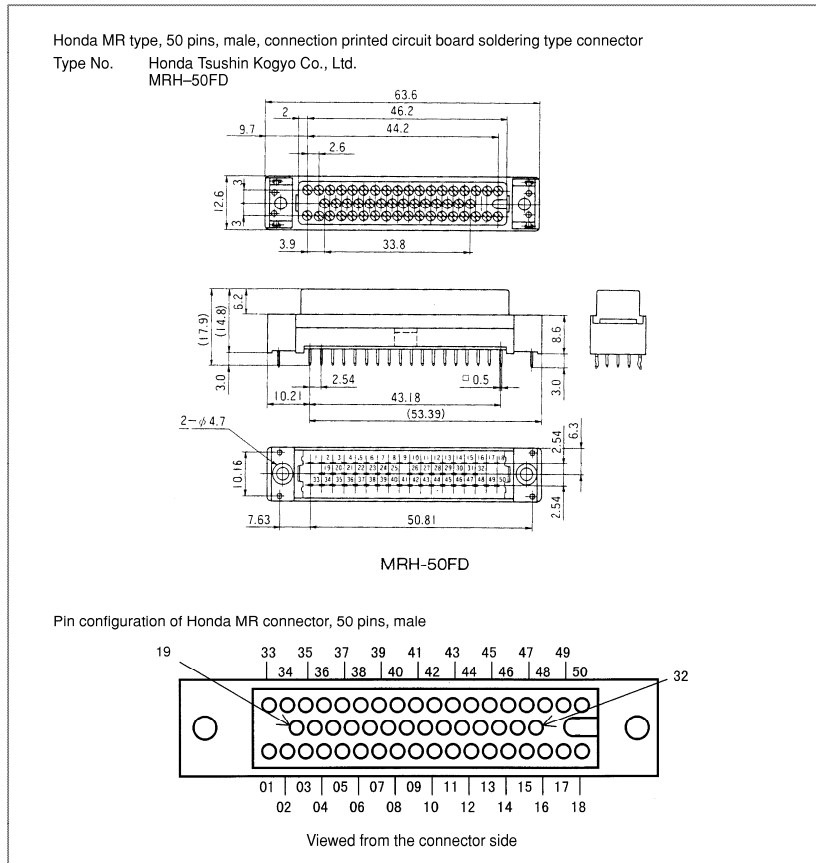


Fig. C9 Connector (for distribution I/O connection printed circuit board) manufactured by HONDA TSUSHIN KOGYO

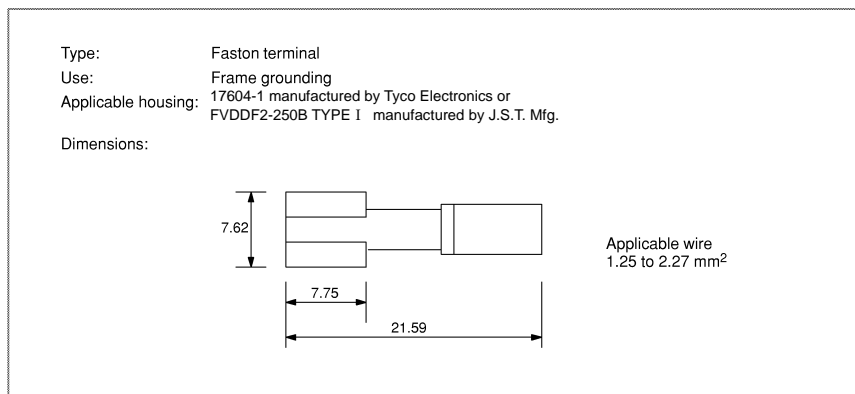


Fig. C10 Faston terminal

B 20-PIN INTERFACE CONNECTORS AND CABLES

B.1 BOARD-MOUNTED CONNECTORS

B.1.1 Vertical-type Connectors

Models: PCR-EV20MDT (Honda Tsushin)
52618-2011 (Molex Japan)

These board-mounted connectors have been specially developed to achieve the high packing density required for FANUC products. As explained in the following subsection, Honda PCR series connectors can be used as cable connectors because the mating mechanism of the newly developed connectors is compatible with that of the Honda PCR series connectors. To support this specification extensively, many connector manufacturers are now developing custom-tailored cable connectors. (Note that these cables cannot be used with screw-fixing cable connector housings.)

B.1.2 Straight and Right-angled Connectors (for Spring and Screw-fixing Connector Housings)

Models: FI80-20P (straight connector) (Hirose Electric)
DF1R020WB1 (straight connector) (Japan Aviation Electronics)
PCR-E20LMDETZ-SL (right-angled connector) (Honda Tsushin)

These connectors are used for the main and option boards. As cable connectors, they are compatible with screw-fixing connector housings as well as the spring locking connector housings.

B.2 CABLE CONNECTORS

Cable connectors consist of a connector main body and housing. The models listed below are available. Those connectors not marked with an asterisk are currently being mass-produced as manufacturer's standard models. Those marked with an asterisk are produced according to custom specifications by FANUC.

Table B.1 Cable connectors

Use	Type	Manufacture	Connector model	Housing model	Applicable cable outside diameter	
General use MDI, IO Link <i>i</i> , etc.	Strand wire press-mount type	Honda Tsushin	PCR-E20FA	PCR-V20LA*	φ6mm(φ5.7 to 6.5)	
		Hirose Electric	FI30-20S*	FI-20-CV2*	φ6.2mm(φ5.5 to 6.5)	
		FUJITSU COMPONET	FCN-247J020-G/E	FCN-240C020-Y/S	φ5.8mm(φ5.5 to 6.5)	
		Molex Japan	52622-2011*	52624-2015*	φ6.2mm(φ5.9 to 6.5)	
	Strand wire press-mount type (when a low screw-fixing housing is used)	Hirose Electric	FI30-20S*	FI-20-CV7* (Low screw-fixing housing)	φ6.2mm(φ5.5 to 6.5)	
		Soldering type	Honda Tsushin	PCR-E20FS	PCR-V20LA*	φ6mm(φ5.7 to 6.5)
	Hirose Electric		FI40B-20S*	FI-20-CV2*	φ6.2mm(φ5.5 to 6.5)	
			FI-40B-20S* (FI40A-20S*)	FI-20-CV5*	φ9.2mm(φ8.9 to 9.5)	
	For Pulsecoder, coaxial cable, linear scale, manual pulse generator, etc.	Soldering type	Hirose Electric	FI40B-20S*	FI-20-CV6*	φ10.25mm(φ9.5 to 11.0)
				FI40B-2015S* (FI40-2015S*)	FI-20-CV*	φ8.5mm(φ8.0 to 9.0)
FI40B-20S* (FI40-20S*)				FI-20-CV5*	φ9.2mm(φ8.9 to 9.5)	
Soldering type		Hirose Electric	FI40B-20S*	FI-20-CV6*	φ10.25mm(φ9.5 to 11.0)	
			PCR-E20FS	PCR-V20LA*	φ6mm(φ5.7 to 6.5)	
			Honda Tsushin	PCR-E20FS	PCR-V20LA*	φ6mm(φ5.7 to 6.5)

B.2.1 Strand Wire Press-mount Connector

With this connector, #28AWG wires are press-connected to each pin at the same time. The cost of producing a cable/connector assembly with this connector model is much lower than with connectors designed for crimping or soldering.

Connector model (manufacturer)	Supplementary description
FI-20-CV7 (Hirose Electric)	Low connector housing, more compact than conventional models. The housing can be fastened to a board-mounted connector by means of a screw lock. It is intended mainly for connecting the board-mounted connectors used on the main and option boards of the LCD-mounted type (see Section B.1.2). <u>Note that this connector housing cannot be used for conventional board-mounted connectors.</u>

B.2.2 Soldering Type Connector

Details of soldering type connectors and their housings are summarized below.

Table B.4 Details of soldering type connectors and housings

Connector model (manufacturer)	Supplementary description
PCR-E20FS (Honda Tsushin)	Soldering type connector for general signals. This is suitable for producing cable assemblies in small quantities, as well as on-site.
FI40-20S (Hirose Electric)	Equivalent to Honda Tsushin PCR-E20FS
FI40B-20S (Hirose Electric) (formerly, FI40A-20S)	Has the same number of pins as the FI40-20S, but features a wider soldering pitch, facilitating soldering and enabling the use of thicker wires. Its reinforced pins allow wires as thick as #17AWG to be soldered to the FI40B-20S (wires no thicker than #20AWG can be used with the FI40A-20S). Note, however, that a thick wire, such as #17AWG, should be used with a more robust housing like the FI-20-CV6.
FI40B-2015S (Hirose Electric) (formerly, FI40-2015S)	Features a wider soldering pitch, attained by using the space provided by thinning out some pins. Also features tougher pins, compared with its predecessor, the FI40-2015S. These pins can be soldered to wires as thick as #17AWG, provided that the cable diameter does not exceed 8.5 mm.

Housing model (manufacturer)	Supplementary description
FI-20-CV5 (Hirose Electric)	Should be used with the FI40B-20S. This is a plastic housing designed for use with a cable that is 9.2 mm in diameter.
FI-20-CV6 (Hirose Electric)	Should be used with the FI40B-20S. This housing, however, can be used with a thicker cable (such as 10.25 mm) than is possible with the FI-20-CV5. Its components are die cast.

In addition to the combinations shown in Table B.1, Hirose soldering-type connectors can be combined with the housings listed below. Ensure that the diameter of the cable used with each housing satisfies the requirements of that housing.

Connector model		Housing model (applicable cable diameter)
FI40B-2015S (formerly FI40-2015S)	⇔	FI-20-CV (8.5 mm in diameter) only

FI40-20S		FI-20-CV2 (φ6.2mm)
FI40B-20S (formerly FI40A-20S)	⇔	FI-20-CV5 (φ9.2mm)
		FI-20-CV6 (φ10.25mm)

Those listed on the left can be used.

B.3 RECOMMENDED CONNECTORS, APPLICABLE HOUSINGS, AND CABLES

Table B.5 Recommended connectors, applicable housings, and cables

Connector name referenced in the Connection Manual	FANUC-approved connector (manufacturer)	FANUC-approved housing (manufacturer)	Compatible cable (cable diameter) FANUC development Ordering specification	Remarks
PCR-E20FA Strand wire press-mount type	PCR-E20FA (Honda Tsushin)	PCR-V20LA (Honda Tsushin)	A66L-0001-0284#10P (6.2 mm in diameter)	Plastic housing
	FI30-20S (Hirose Electric)	FI-20-CV2 (Hirose Electric)		Metal housing
	FCN-247J020-G/E (FUJITSU COMPONET)	FCN-240C020-Y/S (FUJITSU COMPONET)		Plastic housing
	52622-2011 (Molex Japan)	52624-2015 (Molex Japan)		Plastic housing
PCR-E20FA Strand wire press-mount type	FI30-20S (Hirose Electric)	FI-20-CV7 (Hirose Electric)		Plastic housing
PCR-E20FS Soldering type	PCR-E20FS (Honda Tsushin)	PCR-V20LA (Honda Tsushin)		Plastic housing
	FI40-20S (Hirose Electric)	FI-20-CV2 (Hirose Electric)		Plastic housing
FI40B-2015S (formerly I40-2015S) 15-pin soldering type	FI40B-2015S (formerly FI40-2015S) (Hirose Electric)	FI-20-CV (Hirose Electric)	A66L-0001-0286 (Note) A66L-0001-0402 (Note) (8.5 mm in diameter)	Plastic housing
FI40B-20S (formerly FI40A-20S) Soldering type	FI40B-20S (formerly FI40A-20S) (Hirose Electric)	FI-20-CV5 (Hirose Electric)	A66L-0001-0367 A66L-0001-0368 (9.2 mm in diameter)	Plastic housing
	FI40B-20S (Hirose Electric)	FI-20-CV6 (Hirose Electric)	A66L-0001-0403 (Note) (9.8 mm in diameter)	Metal housing

NOTE

As pulse coder cables, the following cables are available: Cable that can be up to 20 m long (A66L-0001-0286), cable that can be up to 30 m long (A66L-0001-0402), and cable that can be up to 50 m (A66L-0001-0403). Cables A66L-0001-0402 and A66L-0001-0403 have not only the same level of oil resistance as conventional cables, but also bending resistance (cable, 100 mm in diameter, capable of withstanding at least 10 million bending cycles), and are UL- and CSA-certified.

B.3.1 Recommended Connectors

Press-mount type connector assembly tools and jigs

Connector model referenced in the Connection Manual	FANUC-approved connector (manufacturer)	Wire forming tool	Press-mounting tool	Remark
PCR-E20FA	PCR-E20FA (Honda Tsushin)	PCS-K2A	FHPT-918A	
		JGPS-015-1/1-20 JGPS-014	MFC-K1 PCS-K1	(Note 1)
		FHAT-918A		
	FI30-20S (Hirose Electric)	FI30-20CAT	FI30-20/ID	
		FI30-20CAT1	HHP-502 FI30-20GP	
	FCN-247J020-G/S (FUJITSU COMPONET)	FCN-237T-T043/H	FCN-237T-T109/H FCN-247T-T066/H	
		FCN-237T-T044/H		
		FCN-237T-T062/H		
	52622-2011 (Molex Japan)	57829-5000	57830-5000	
		57823-5000	57824-5000	

NOTE

- Those tools indicated by shading are available from FANUC (specification number A02B-0120-K391).
- The tools available from each manufacturer are specifically designed for use with the connectors manufactured by that manufacturer.

B.3.2 Applicable Cables

Materials for cable assemblies

Machine tool builders are required to manufacture or procure the materials for the cable assemblies to be used with their products. FANUC recommends the following materials as being suitable for interface connectors. Individual machine tool builders are encouraged to contact each cable manufacturer for themselves, as required.


Material	Use	Constitution	FANUC specification number	Manufacturer	Remark
10-pair cable	General use	0.08mm ² 10-pair	A66L-0001-0284 #10P	Hitachi Metals Oki Electric Cable SHINKO ELECTRIC INDUSTRIES	
12-conductor composite cable	Pulsecoder, linear scale, manual pulse generator	0.5mm ² 6-conductor 0.18mm ² 3-pair	A66L-0001-0286	Hitachi Metals Oki Electric Cable SHINKO ELECTRIC INDUSTRIES	20 m or less
		0.75mm ² 6-conductor 0.18mm ² 3-pair	A66L-0001-0402	Oki Electric Cable	30 m or less Usable on movable parts
		1.25mm ² 6-conductor 0.18mm ² 3-pair	A66L-0001-0403	Oki Electric Cable	50 m or less Usable on movable parts

10-pair cable

(a) Specifications

Item		Unit	Specifications
Product No.		-	A66L-0001-0284#10P
Manufacturer		-	Hitachi Metals, Ltd. Oki Electric Cable, Co., Ltd. SHINKO ELECTRIC INDUSTRIES CO., LTD.
Rating		-	60°C 30V : UL2789 80°C 30V : UL80276
Material	Conductor	-	Stranded wire of tinned annealed copper (ASTM B-286)
	Insulator	-	Cross-linked vinyl
	Shield braid	-	Tinned annealed copper wire
	Sheath	-	Heat-resistant oil-proof vinyl
Number of pairs		Pairs	10
Conductor	Size	AWG	28
	Structure	Conductors/mm	7/0.127
	Outside diameter	mm	0.38
Insulator	Thickness	mm	0.1 Thinnest portion : 0.8 (3.1mm)
	Outside diameter (approx.)	mm	0.58
	Core style (rating)	mm	UL15157(80°C , 30V)
Twisted pair	Outside diameter (approx.)	mm	1.16
	Pitch	mm	20 or less
Lay		-	Collect the required number of twisted pairs into a cable, then wrap binding tape around the cable. To make the cable round, apply a cable separator as required.
Lay diameter (approx.)		mm	3.5
Drain wire		Conductors/mm	Hitachi Metals : Not available Oki Electric Cable : Available, 10/0.12 SHINKO ELECTRIC INDUSTRIES CO., LTD. : Not available
Shield braid	Element wire diameter	mm	0.12
	Braid density	%	85 or more
Sheath	Color	-	Black
	Thickness	mm	1.0
	Outside diameter (approx.)	mm	6.2
Standard length		m	200
Packing method		-	Bundle
Electrical performance	Electric resistance (at 20°C)	Ω/km	233 or less
	Insulation resistance (at 20°C)	MΩ-km	10 or less
	Dielectric strength (AC)	V/min.	300
Flame resistance		-	Shall pass flame resistance test VW-1SC of UL standards.

(b) Structure drawing

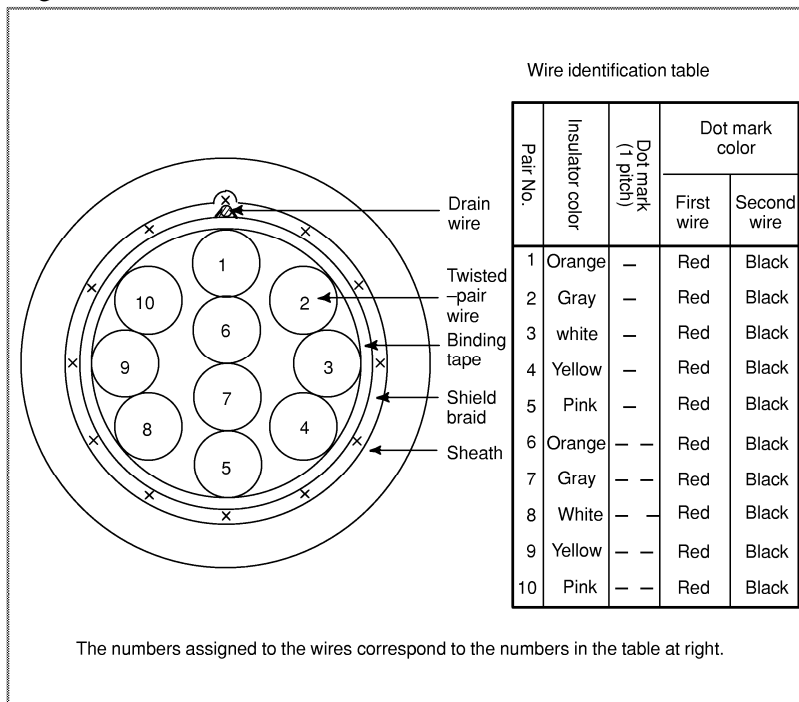

Composite 12-core cable

(a) Specifications

Item		Unit	Specifications	
Product No.		-	A66L-0001-0286	
Manufacturer		-	Oki Cable, Ltd. Hitachi Metals, Ltd. SHINKO ELECTRIC INDUSTRIES CO., LTD.	
Rating		-	80°C, 30V	
Material	Conductor, braid-shielded wire, drain wire	-	Strand wire of tinned annealed copper (JIS C3152)	
	Insulator	-	Heat-resistant flame-retardant vinyl	
	Sheath	-	Oil-proof, heat-resistant, flame-retardant vinyl	
Number of wires (wire ons.)		Cores	6 (1 to 6)	6 (three pairs) (7 to 9)
Conductor	Size	mm ²	0.5	0.18
	Structure	Conductors/mm	20/0.18	7/0.18
	Outside diameter	mm	0.94	0.54
Insulator	Standard thickness (The minimum thickness is at least 80% of the standard thickness.)	mm	0.25	0.2
	Outside diameter	mm	1.50	0.94
Twisted pair	Outside diameter	mm		1.88
	Direction of lay	-		Left
	Pitch	mm		20 or less
Lay	-		Twist the wires at an appropriate pitch so the outermost layer is right-twisted, and wrap tape around the outermost layer. Apply a cable separator as required.	
Lay diameter (approx.)		mm	5.7	


Item		Unit	Specifications	
Drain wire	Size	mm ²	0.3	
	Structure	Wires/mm	12/0.18	
	Outside diameter	mm	0.72	
Shield braid	Element wire diameter	mm	0.12	
	Thickness	mm	0.3	
	Braid density	%	70	
	Outside diameter	mm	6.3	
Sheath	Color	-	Black	
	Standard thickness (The minimum thickness is at least 85% of the standard thickness.)	mm	1.1	
	Outside diameter	mm	8.5Max. 9.0 (Note)	
Standard length		m	100	
Packing method		-	Bundle	
Electrical performance	Electric resistance (at 20°C) (wire nos.)	Ω/km	39.4 (1 to 6)	113 (7 to 9)
	Insulation resistance (at 20°C)	MΩ-km	15	
	Dielectric strength (AC)	V/min.	500	
Flame resistance		-	Shall pass flame resistance test VW-1SC of UL standards.	

NOTE

The maximum outside diameter applies to portions other than the drain wire.

(b) Cable structure

The cable structure is shown below.

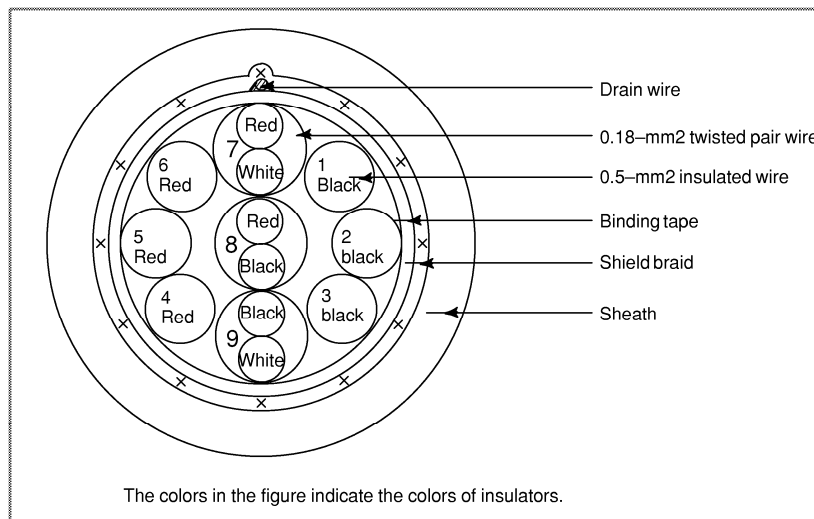

(c) Specifications

Item	Specification			
FANUC specification number	A66L-0001-0402		A66L-0001-0403	
Manufacturer	Oki Electric Cable Co., Ltd.			
	A-conductor	B-conductor	A-conductor	B-conductor

B. 20-PIN INTERFACE
CONNECTORS AND CABLES

APPENDIX

B-64603EN/01

Item		Specification			
Conductor	Constitution Number of conductors/ mm	16/0.12 (0.18mm ²)	3/22/0.12 (0.75mm ²)	16/0.12 (0.18mm ²)	7/16/0.12 (1.25mm ²)
	Typical outside diameter (mm)	0.55	1.20	0.55	1.70
Insulation (polyester)	Color	White, red, black	Red, black	White, red, black	Red, black
	Typical thickness (mm)	0.16	0.23	0.16	0.25
	Typical outside diameter (mm)	0.87	1.66	0.87	2.20
Pair twisting	Constitution	White-red, white-black, and black-red		White-red, white-black, and black-red	
	Direction of twisting	Left Typical pitch: 20 mm		Left Typical pitch: 20 mm	
Assembling by twisting	Number of strands or conductors	3	6	3	6
	Direction of twisting	Left		Left	
	Taping	Twisting is wrapped with washi, or Japanese paper, tape.		Twisting is wrapped with washi, or Japanese paper, tape.	
	Typical outside diameter (mm)	5.7		6.9	
Braided shielding	Typical strand diameter (mm)	0.14			
	Typical density (mm)	80			
	Drain	A 12/0.18 mm wire is roughly wrapped under braided shielding.			
	Typical outside diameter (mm)	6.4		7.6	
Sheath (polyurethane)	Color	Black (matted)			
	Typical thickness (mm)	1.05		1.1	
	Vertical taping	Vertically taped with washi under sheathing.			
	Outside diameter (mm)	8.5±0.3		9.8±0.3	
Finished assembly	Typical length (m)	100			
	Short size	Basically not approved.			
Finished assembly performance	Rating	80°C 30V			
	Standard	Shall comply with UL STYLE 20236 and CSA LL43109 AWM I/II A 80°C 30V FT-1.			
	Flame resistance	Shall comply with VW-1 and FT-1.			
Electrical performance	Conductor resistance Ω/km (20°C)	103 or lower	25.5 or lower	103 or lower	15.0 or lower
	Insulation resistance MΩ/km (20°C)	1 or higher			
	Dielectric strength V-min	A.C 500			
Insulation performance	Tensile strength N/mm ²	9.8 or higher			
	Elongation %	100 or higher			
	Tensile strength after aging %	At least 70% of that before aging			
	Elongation after aging %	At least 65% of that before aging			
	Aging condition	For 168 hours at 113°C			

Item		Specification
Sheathing performance	Tensile strength N/mm ²	9.8 or higher
	Elongation %	100 or higher
	Tensile strength after aging %	At least 70% of that before aging
	Elongation after aging %	At least 65% of that before aging
	Aging condition	For 168 hours at 113°C
Cable cross section		



5-core coaxial cable

(a) Specifications

Item		Unit	Description
Specification		-	A66L-0001-0371
Manufacture		-	Hitachi Metals, LTD.
Number of Conductors		Core	5
Inside Conductor	Size	mm ²	0.14
	Components	Conductors(PCS)/mm	7/0.16
	Material	-	Tin-coated Soft Copper Wire
	Diameter (approx.)	mm	0.48
Insulator	Material (Color)	-	Polyethylene (White), heat-resistant 80°C
	Thickness	mm	0.71
	Diameter (approx.)	mm	1.90
Outside Conductor	Material	-	Tin-coated Soft Copper Wire (Rolled)
	Diameter of Component-Wire	mm	0.08
	Density	%	95 or more
	Thickness	mm	0.2
Jacket	Material	-	Vinyl, heat-resistant 80°C
	Color	-	Black. White. Red. Green. Blue
	Thickness	mm	0.15
	Diameter (approx.)	mm	2.6
Twisted Assembly Diameter (approx.)		mm	7.1
Thickness of Paper Tape		mm	0.05
Shield braid	Wire dia. Material	mm	0.12 (Tin-coated soft copper wire)
	Density	%	80 or more (typ 82%)
	Thickness	mm	0.3
	Diameter	mm	7.8
Sheath	Material, Color	-	Oil Tight Vinyl (A), Black, heat-resistant 80°C
	Thickness	mm	0.7 (Min. thickness: 0.56)
Finish Diameter		mm	9.2±0.3
Conductor Resistance (20°C)		Ω/km	143 or less

Item	Unit	Description
Dielectric strength (between internal conductor and external conductor)	-	1000 VAC must be withstood for one minute.
Insulation resistance (between internal conductor and external conductor, 20°C)	MΩ-km	1000 or more
Impedance (10MHz)	Ω	75±5
Standard Capacitance (1MHz)	nF/km	56
Standard Attention	dB/km	53
Weight	kg/km	105
Standard Length	m	200
Package form	-	Bundle

An example of circuit testing 20-pin interface cable

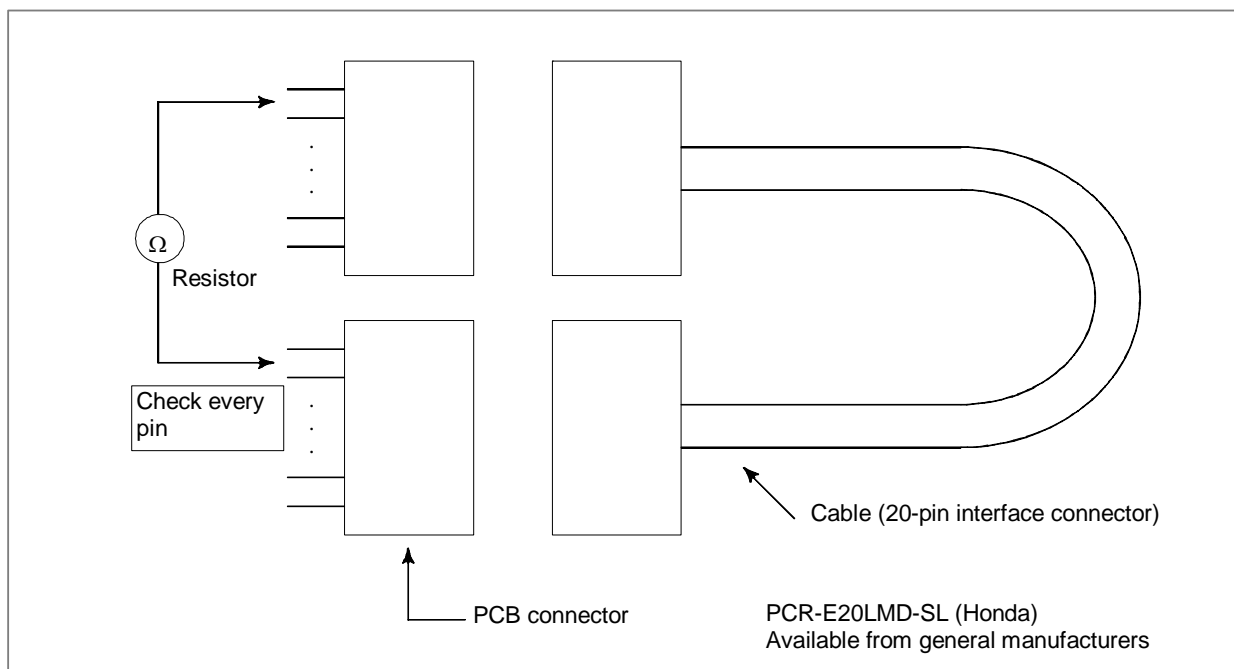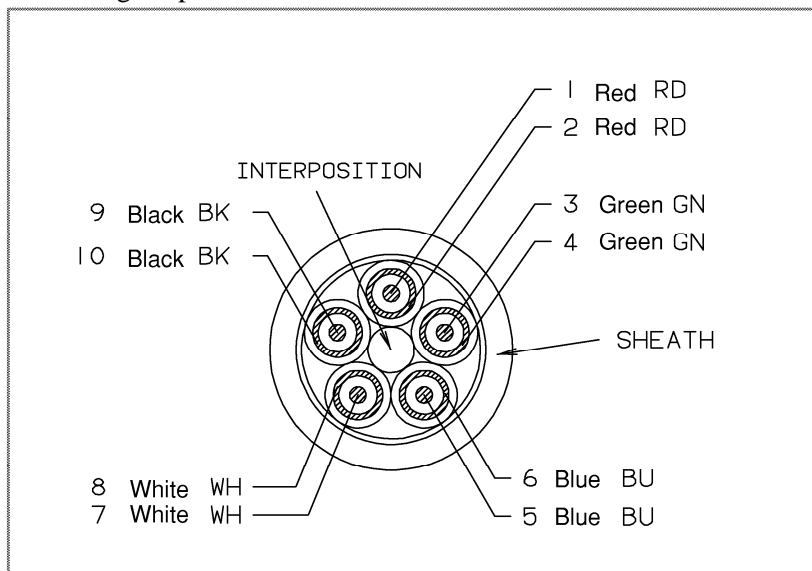




C CONNECTION CABLE (SUPPLIED FROM US)

Maximum allowable cable length between units

Cable type	Use and condition	Maximum cable length (m)
MDI cable	Control unit-to-MDI unit	20m
I/O Link <i>i</i> cable	Electrical cable	10m (Note 2)
	Electrical-to-optical conversion adapter	2m
	Optical fiber cable	200m
Position coder cable	Control unit-position coder	50m
Manual pulse generator cable	Connector panel I/O operator's panel I/O module-to-manual pulse generator	50m
FSSB cable	See Appendix D.	
HSSB cable	See Appendix D.	
RS232-C communication cable	4800 baud or less	100m
	9600 baud	50m
RS-422 communication cable	9600 baud or less	800m
	19.2K baud	50m

NOTE






- 1 The maximum cable lengths listed above apply only when the respective recommended cables stated in the text are used. If a non-recommended cable is used, the maximum cable length may not be guaranteed. Cables other than those listed above are used between units. See the respective descriptions in this manual for details of these cables.
- 2 This cable can be extended to up to 15 m if it is used within the cabinet.



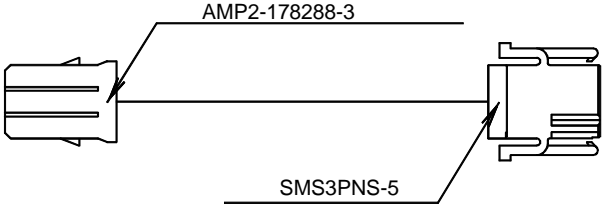
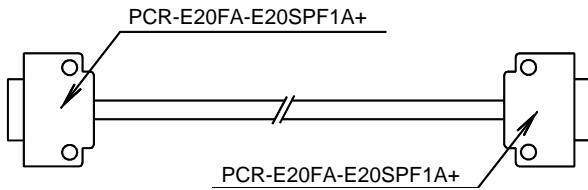
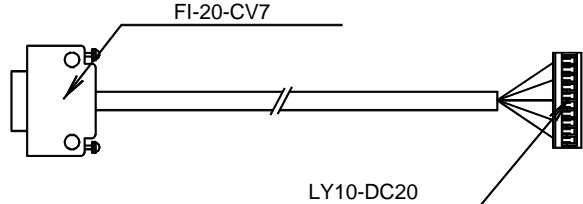
Purpose	Description	Specification	Length
Power supply cable for I/O unit	 <p>AMP2-178288-3</p> <p>SMS3PNS-5</p>	A02B-0236-K843	5m
Control unit (CP1B) ↔ I/O Unit (CP31)			
MDI signal cable	 <p>PCR-E20FA-E20SPF1A+</p> <p>PCR-E20FA-E20SPF1A+</p>	A02B-0319-K813	45cm
Control unit (Basic unit A) (JA2) ↔ MDI unit (CK27)			
MDI cable	 <p>FI-20-CV7</p> <p>LY10-DC20</p>	A02B-0236-K813	45cm
		A02B-0236-K814	1.5m
Control unit (Basic unit G) (CA55) ↔ MDI unit (CK27)			

C. CONNECTION CABLE
(SUPPLIED FROM US)

APPENDIX

B-64603EN/01

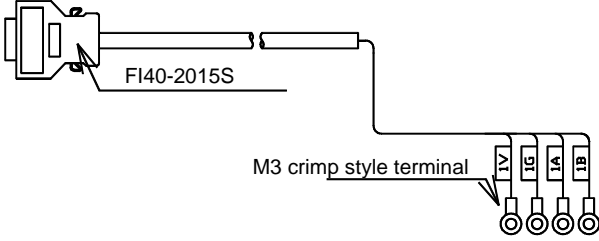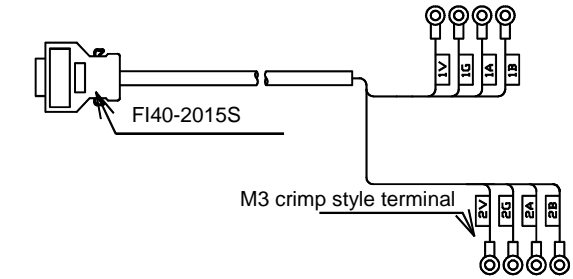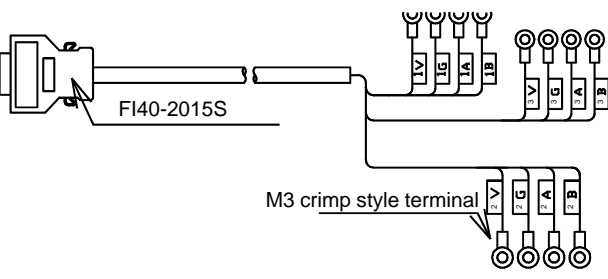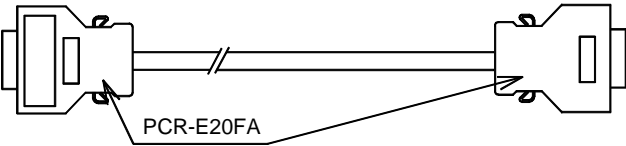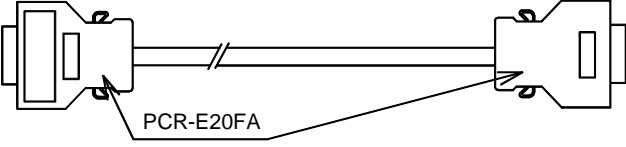Purpose	Description	Specification	Length
Manual pulse generator cable (for one unit) Control unit (JA3) ⇕ Manual pulse generator terminal board		A02B-0120-K847	7m
Manual pulse generator cable (for two units) Control unit (JA3) ⇕ Manual pulse generator terminal board		A02B-0120-K848	7m
Manual pulse generator cable (for three units) Control unit (JA3) ⇕ Manual pulse generator terminal board		A02B-0120-K841	7m
I/O Link <i>i</i> cable Control unit (JD51A) ⇕ I/O unit (JD1B) I/O unit (JD1A) ⇕ I/O unit (JD1B)		A02B-0120-K842	5m
I/O Link <i>i</i> cable Control unit (JD51A) ⇕ I/O Link signal divider (2 channels) (JD44B)		A02B-0236-K848	1m

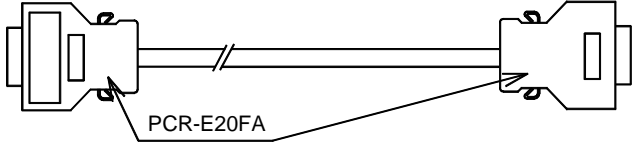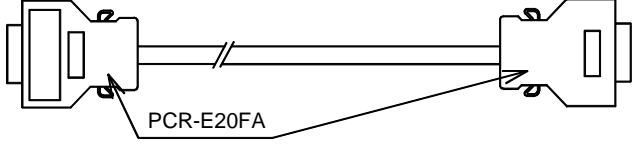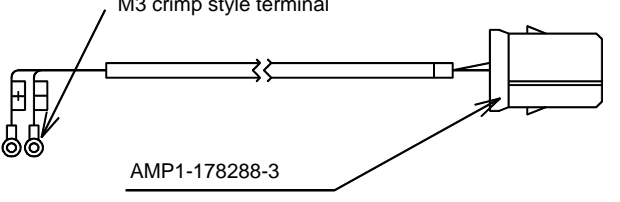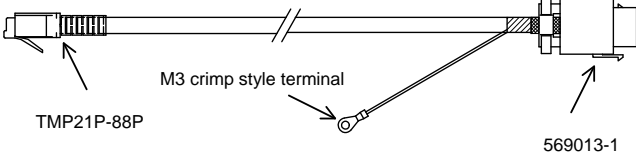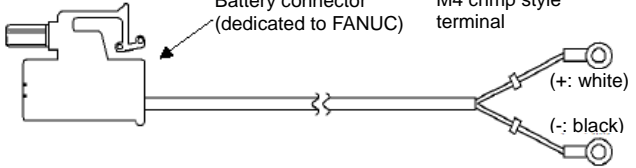Purpose	Description	Specification	Length
I/O Link <i>i</i> cable Control unit (JD1A) ↔ I/O Link signal divider (3 channels) (JD1B)	 <p>PCR-E20FA</p>	A02B-0303-K849	1m
I/O Link <i>i</i> cable between units (For optical I/O Link connection)	 <p>PCR-E20FA</p>	A03B-0807-K803	1m
Control unit power supply cable Stabilized power supply (24 VDC) ↔ Control unit (CP1)	 <p>M3 crimp style terminal</p> <p>AMP1-178288-3</p>	A02B-0124-K830	5m
Ethernet extension connector	 <p>M3 crimp style terminal</p> <p>TMP21P-88P</p> <p>569013-1</p>	A02B-0323-K850	7m
Battery cable for an external LCD-mounted type control unit Control unit (CA131) ↔ Battery for an external control unit (terminal block)	 <p>Battery connector (dedicated to FANUC)</p> <p>M4 crimp style terminal</p> <p>(+: white)</p> <p>(-: black)</p>	A02B-0323-K103	14m

D OPTICAL FIBER CABLE

0i - MODEL F uses optical fiber cables for the following interfaces.
This table lists the usable combinations.

Interface	Junction	Recommended optical fiber cable	Maximum allowable transmission distance	Applicable junction adapter
I/O Link i interface *1	None	A66L-6001-0026#L~	200m	
	Exist	A66L-6001-0026#L~	100m *2	A63L-0020-0002
High-speed serial bus (HSSB) interface	None	A66L-6001-0023#L~	10m	
	None	A66L-6001-0026#L~	50m	
	None	A66L-6001-0049#L~	100m	
	Exist	A66L-6001-0029#L~	35m *2	A63L-0020-0004
	Exist	A66L-6001-0049#L~	55m *2	A63L-0020-0004
	Exist	A66L-6001-0049#L~	55m *2	A63L-0020-0004
Serial servo bus (FSSB) interface	None	A66L-6001-0023#L~	10m	
	None	A66L-6001-0026#L~	50m *3	
	None	A66L-6001-0049#L~	100m *3	

⚠ CAUTION

- 1 When an optical fiber cable is used for connection.
- 2 Optical fiber cables can be relayed at up to one point. The total length of the two cables must not exceed the maximum transmission distance. The two cables must be optical fiber cables of the same type.
- 3 There are the following restrictions on the cable length for the FSSB:
 - Between the control unit and 1st slave unit:
 - When A66L-6001-0026#L~ is used: 50 m
 - When A66L-6001-0049#L~ is used: 100 m
 - Between slave units: 40 m
 - Total cable length per FSSB line in each control mode:
 - HRV2 . . . 500m
 - HRV3 . . . 200m

Notes on the specifications of optical fiber cable

(1) Supported optical cables

- <1> Internal cord type cable..... A66L-6001-0023#L□R□□□
- Length 0.15 to 10m
- Code diameter $\phi 2.2\text{mm} \times 2$ cords
- Tensile strength
 - Optical fiber cord 7kg per cord
 - Between optical fiber cord and connector 2kg
- Minimum bending radius of optical fiber cord .. 25mm
- Operating temperature..... -20 to 70 °C

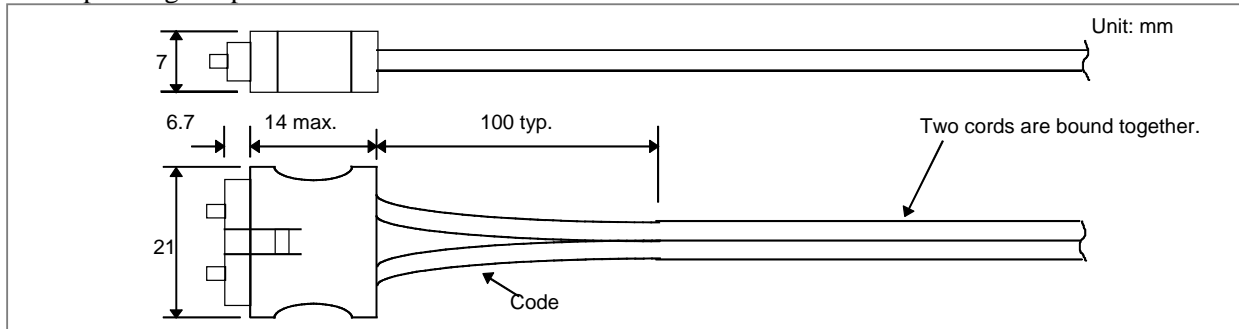


Fig. D (a) External dimensions of internal cord type cable

- <2> External type cable A66L-6001-0026#LxRxxx
- A66L-6001-0029#LxRxxx
- A66L-6001-0049#LxRxxx
- Length 1 to 200m
- Optical fiber cord diameter $\phi 2.2\text{mm} \times 2$ cords
- Diameter of cable with reinforced cover..... $\phi 7.6\text{mm}$ (A66L-6001-0026, -0029)
- $\phi 8.2\text{mm}$ (A66L-6001-0049)
- Tensile strength
 - Cable with reinforced cover 75kg
 - Optical fiber cord..... 7kg/1 cord
 - Between optical fiber cord and connector 2kg
- Minimum bending radius of optical fiber cord 25mm
- Minimum bending radius of cable with reinforced cover ... 50mm
- Bending resistance (cable with reinforced cover) 10 million bending cycles at room temperature (when the bending radius is 100 mm)
- Flame resistance Equivalent to UL VW-1
- Operating temperature..... -20 to 70 °C

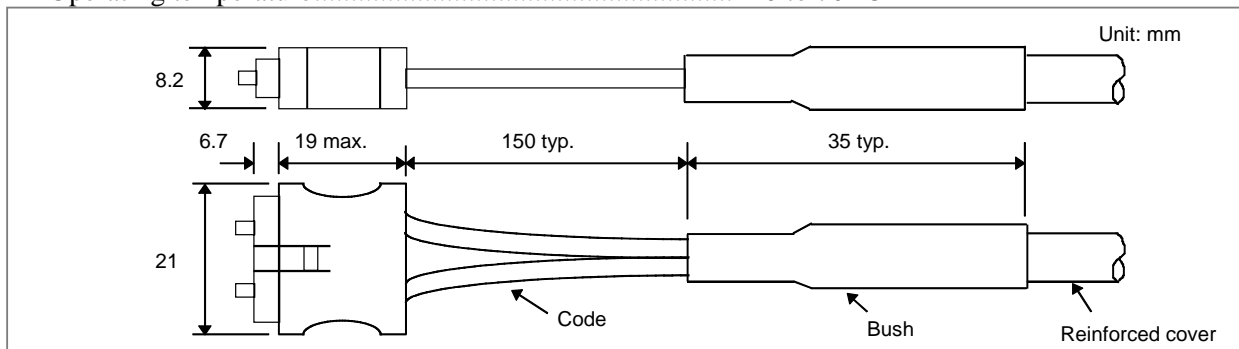


Fig. D (b) External dimensions of external cable

Table D (a) Standard cable length

Internal cord type cable			External cable	
A66L-6001-0023#			A66L-6001-0026#	
Specification	Length	Remarks	Specification	Length
L150R0	0.15m	For 60mm width of amplifier	L1R003	1.0 m
L200R0	0.2 m	For 90mm width of amplifier	L2R003	2.0 m
L250R0	0.25 m	For 150mm width of amplifier	L3R003	3.0 m
L300R0	0.3 m		L5R003	5.0 m
L400R0	0.4 m	For 300mm width of amplifier	L7R003	7.0 m
L500R0	0.5 m		L10R03	10.0m
L1R003	1.0 m		L15R03	15.0m
L2R003	2.0 m		L20R03	20.0m
L3R003	3.0 m		L30R03	30.0m
L5R003	5.0 m		L50R03	50.0m
L7R003	7.0 m		L100R3	100m
L10R03	10.0 m		L200R3	200m

(2) Cable selection

- Always use an external cable when the cable is to be laid outside the power magnetics cabinet or main unit cabinet, where it may be pulled, rubbed, or stepped on.
- Use an external cable when part of the cabling is to be subject to movement.
For example, when connecting a movable operation pendant box to the power magnetics cabinet using an optical fiber cable, use an external cable because the cable is likely to be bent, pulled, or twisted repeatedly even if frequent system operation is not expected.
The force likely to be applied when the cable is installed or moved for maintenance purposes does not need to be taken into consideration.
- Use an external cable in locations where sparks or flame are a danger. Although the internal cord type cable (A66L-6001-0023#~) is covered by nonflammable resin, the cover, if exposed to frame for a long time, may melt, allowing the fiber cable inside to burn.
- Use an external cable when the cable is expected to be pulled with considerable force during installation (the force applied to the cable must be within the specified tensile strength limit at all times). For example, even though installing a cable in a cable duct can be regarded as internal cabling, a cable of the appropriate type must be selected according to the tensile force to be applied to the cable during installation.
- Both the internal cord type and external cables have the same oil and heat resistance properties.

(3) Procuring the cable

All optical fiber cables mentioned above are special cable products with optical connectors, which are designed, produced, and tested to ensure the required system performance and reliability. The users cannot process and produce these cables on their own. The users cannot also cut or connect them after purchase on their own. Purchase cables of the necessary length.

Cables are available from either FANUC or any of the FANUC-approved manufacturers listed in Table D (b). (Purchase A66L-6001-0029#~ and A66L-6001-0049#~ from FANUC, however.)

Table D (b) FANUC-approved cable manufacturers and cable model numbers (retail)

<1> Internal cord type cable : A66L-6001-0023#L□R□□□

Manufacturer	Model number	Remark
Tyco Electronics	*-353373-*	
Japan Aviation Electronics Industry, Ltd.	PF-2HB209-**M-F-1	** indicates the cable length (m).
Hirose Electric Co., Ltd.	H07-P22-F2VCFA-**	** indicates the cable length (m).

<2> External Cable : A66L-6001-0026#L□R□□□

Manufacturer	Model number	Remark
Tyco Electronics	*-353199-*	
Japan Aviation Electronics Industry, Ltd.	CF-2HB208-**M-F-1	** indicates the cable length (m).
Hirose Electric Co., Ltd.	H07-P22-F2NCFA-**	** indicates the cable length (m).
Oki Electric Cable Co., Ltd.	OPC201HPXF-**MB	** indicates the cable length (m).

(4) Handling precautions

<1> Protection during storage

When the electrical/optical conversion module mounted on the printed circuit board and the optical fiber cable are not in use, their mating surfaces must be protected with the lid and caps with which they are supplied. If left uncovered, the mating surfaces are likely to become dirty, possibly resulting in a poor cable connection.

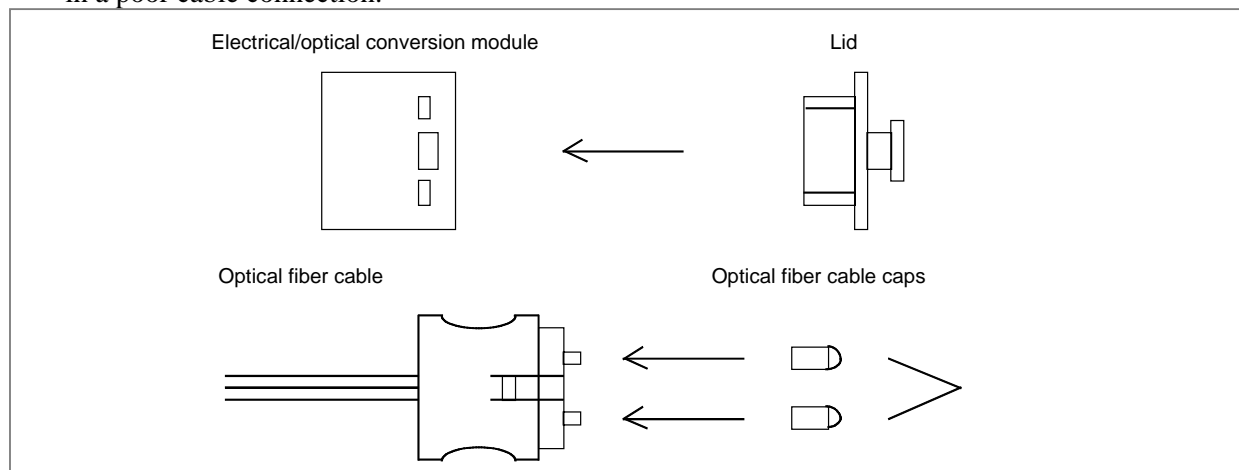


Fig. D (c) Protection of electrical/optical conversion module and optical fiber cable (when not in use)

<2> Optical fiber cable

- Make sure that the bending radius and tensile strength of the cable are always within their ranges described in the specifications (see the first item), regardless of whether the cable is stored or routed and whether operation is in progress or not.
- Although the reinforcing cover of the external cable has sufficient mechanical strength, be careful not to drop heavy objects on the cable.

- Grasp the optical connector firmly when connecting or disconnecting the cable. Do not pull on the optical fiber cord itself. (The maximum tensile strength between the fiber cord and connector is 2 kg. Applying greater force to the cord is likely to cause the connector to come off, making the cable unusable.)
- Once connected, the optical connector is automatically locked by the lock levers on its top. To remove the connector, release the lock levers and pull the connector.
- Although optical connectors cannot be connected in other than the correct orientation, always take note of the connector's orientation before making the connection.
- Before installing an external cable, fix either a wire with a hook or a tension member to the reinforcing cover of the optical connector and pull the wire or tension member, as shown in Fig. D (d). This is done to prevent a tensile force from being applied between the fiber cord and connector. If no tensile force is applied between the fiber cord and connector when installing the cable, you can hold the reinforcing cover of the connector directly and pull it. In the case of an internal cord, which does not have a reinforcing cover, apply the same protective measures, as instructed in Fig. D (d), for that portion of the cable where the two cords are bound together, in order to prevent a tensile force from being applied between the fiber cord and connector. In the same way as for an external cable, if no tensile force is applied between the fiber cord and connector during installation, you can hold the shielded part of the cable directly and pull it. Because the combined tensile strength of the two cords is only 14 kg, however, avoid applying too great a force to the cable during installation, regardless of whether you have taken the protective measures.

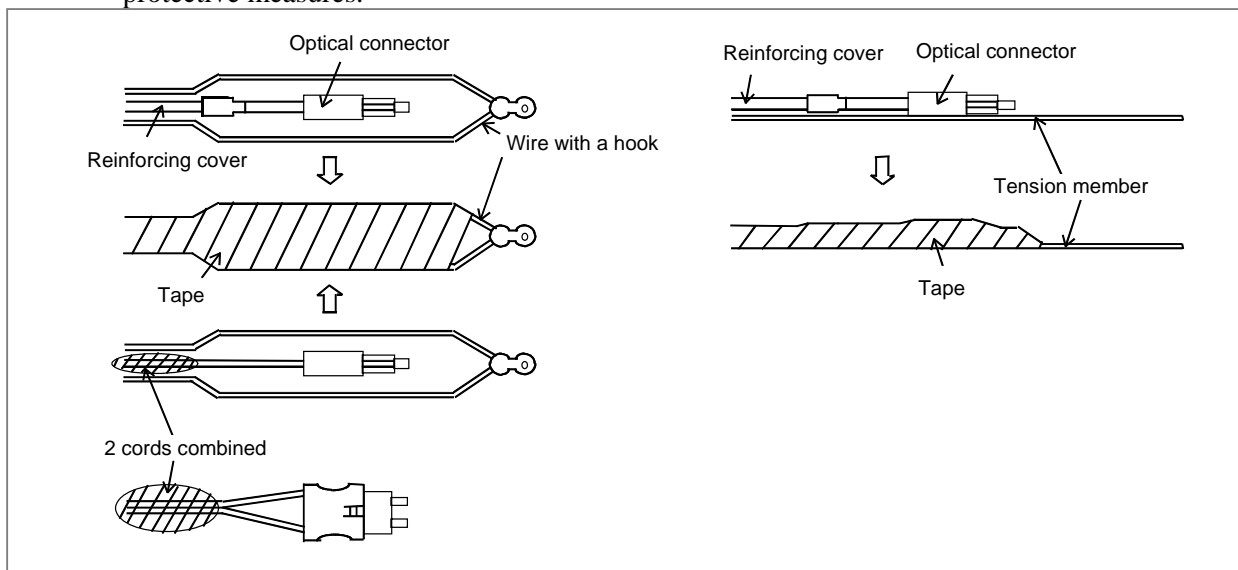


Fig. D (d) Prior to installing a cable

- Take care to keep both parts of the optical connector (cable side and PCB side) clean. If they become dirty, wipe them with tissue paper or absorbent cotton to remove dirt. The tissue paper or absorbent cotton may be moistened with ethyl alcohol. Do not use any organic solvent other than ethyl alcohol.
- Fix the reinforcing cover of the external cable or the cord binding portion of the internal cord type cable by using a cable clamp, as shown in Fig. D (e), to prevent the weight of the optical fiber cable from being applied directly to the connecting part of the optical connector.
(Recommended cable clamp) Recommended cable clamps are listed below. Use a clamp that grasps the optical fiber cable lightly; the clamp should not apply excessive pressure to the cable.
For an external cable CKN-13SP (with sponge) (Kitagawa Industry Co., Ltd.)
For an internal cord type cable MN-1 (Kitagawa Industry Co., Ltd.)

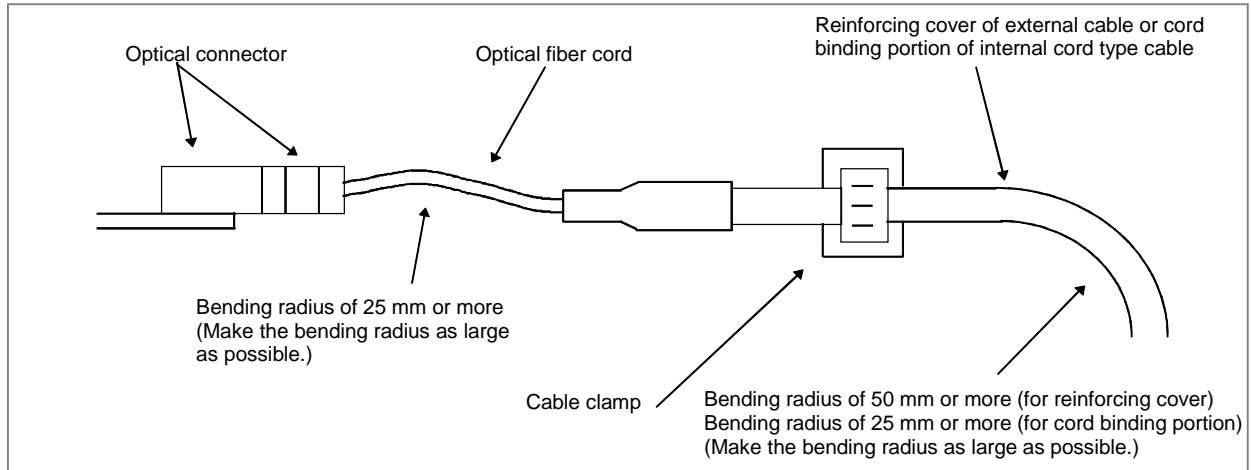


Fig. D (e) Fixing the optical fiber cable with a clamp

- Any superfluous portion of the cable may be wound into loops. Should this prove necessary, make sure the diameter of each loop is at least 150 mm (for an external cable) or at least 100 mm (for an internal cord type cable). Winding the cable into smaller loops may produce sharp curves that exceed the specified bending radius limit without the user being aware. Such bending can result in a greater transmission loss, ultimately leading to an optical communication failure.
- When using a nylon band (cable tie) as a cable clamp, follow the instructions given below. Also, take care not to apply a bending force to one particular part of the cable when fixing it with a clamp. Failing to clamp the cable correctly may cut or damage it.

(External cable)

Do not clamp the uncovered portion of the cable with a nylon band. When clamping the cable by the reinforcing cover, the clamping force is not an important factor to consider. However, ensure that the clamping force is as small as possible to ensure that the reinforcing cover is not deformed by the clamping. If possible, the clamping force should be 5 kg or less.


(Internal cord type cable)

Lightly clamp the optical cable with a nylon band so that the cable shield is not deformed. If possible, the clamping force should be 1 or 2 kg (make sure that no force is applied to the cable). Due care is required when clamping the internal cord type cable because its cable shield is weaker than the reinforcing cover of the external cable.


(5) Optical fiber cable relay of I/O Link *i*

When used for the I/O Link *i* application, optical fiber cables can be connected by using an optical fiber adapter, as follows.

(a) External view of an optical fiber adapter

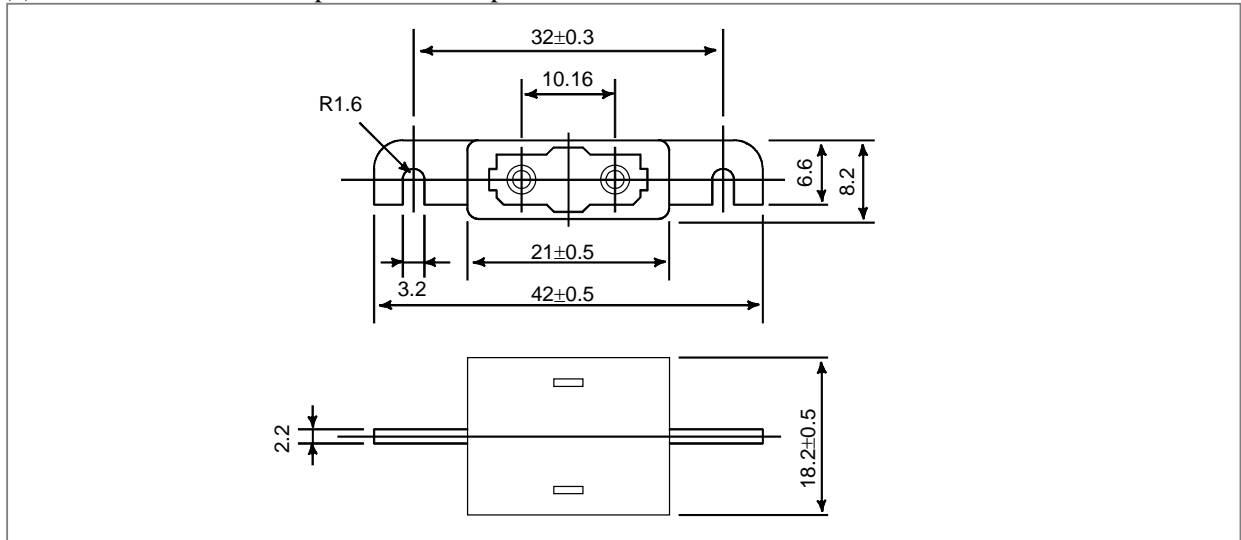

(b) Example of the use of an optical fiber adapter

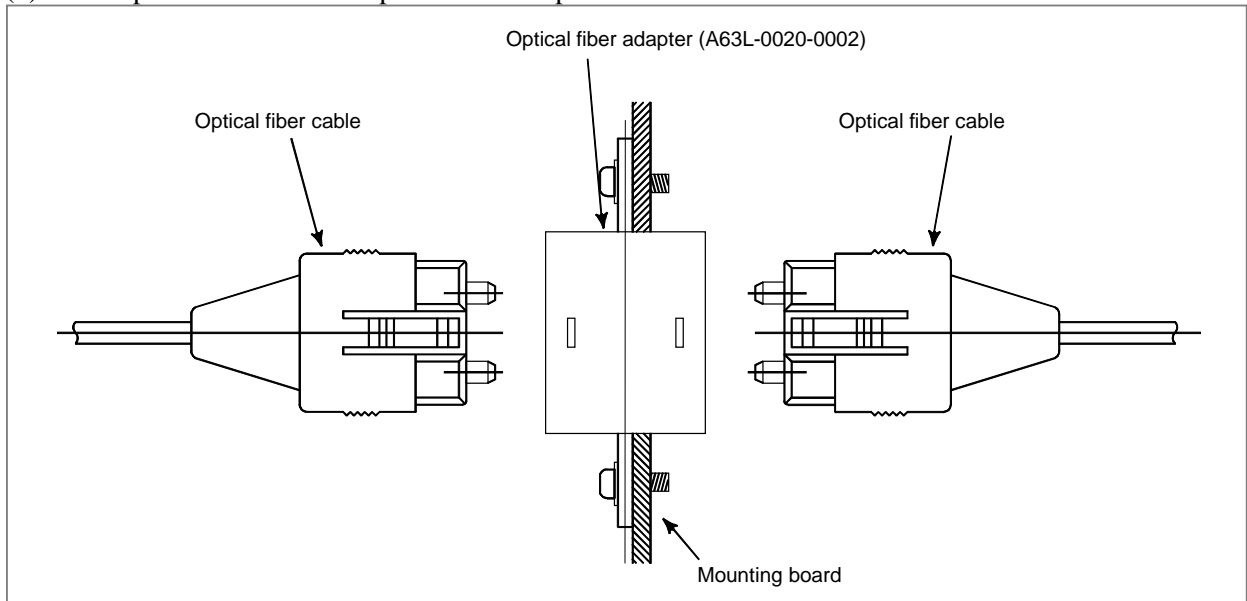


NOTE
Only one relay point is permitted.


(6) Optical fiber cable relay of FANUC high-speed serial bus

With the high-speed serial bus, special low-loss optical fiber cables can be connected by using a special low-loss optical relay adapter as an optical fiber relay adapter.

(a) External view of the low-loss optical relay adapter

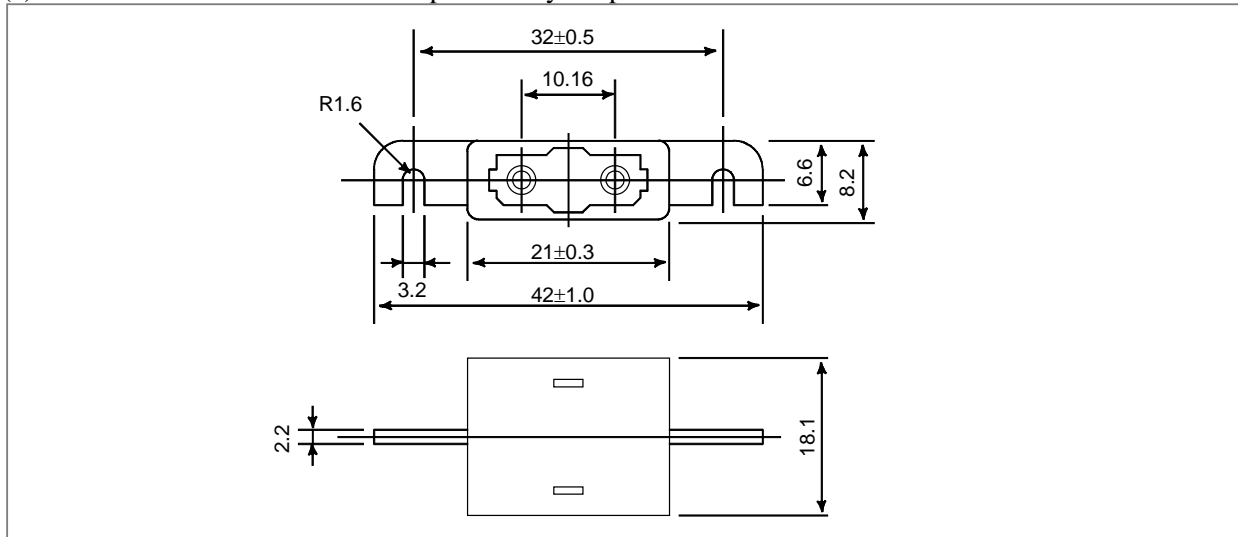

(b) Example of use of the optical fiber relay adapter

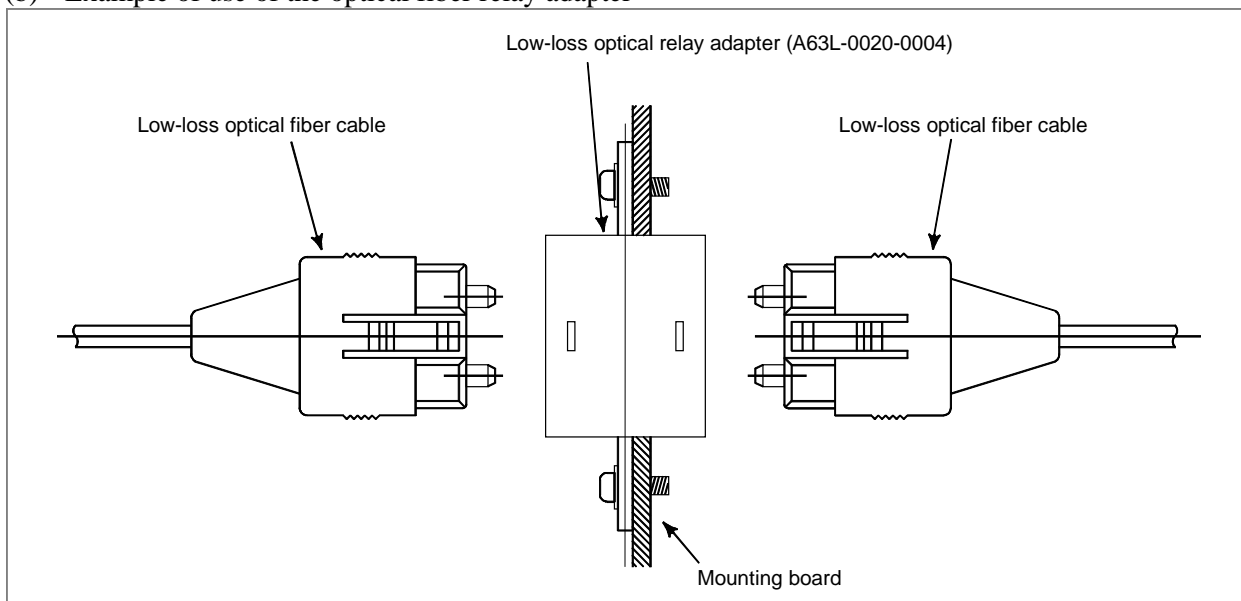

NOTE


Only one relay point is permitted.

(7) Precautions for connection with low-loss optical junction adapter

- Features and attention in use of low-loss optical junction adapter (A63L-0020-0004)
When optical connectors for a conventional optical junction adapter (A63L-0020-0002) are jointed, the facing ferrules (Note 1) are located about 60 μm from each other. This is because the optical fiber of conventional PCF (plastic clad silica fiber) cables (A66L-6001-0008, -0009, -0026) may protrude from the tip of the ferrules (by up to about several μm), resulting in the fiber protrusion being damaged when the ferrules are butted against each other.
In the low-loss optical junction adapter, the ferrules are butted against each other, thus greatly reducing the reduction in repeater loss. Therefore, the two optical cables used with the low-loss optical junction adapters must be dedicated to the adapters.
If a conventional PCF (plastic clad silica fiber) cable (A66L-6001-0008, -0009, -0026) is used as even one of the two optical fiber cables for joining the low-loss optical junction adapter, both cables may be damaged, resulting in deteriorated characteristics.

NOTE

Ferrule: Movable metal at the tip of an optical connector; the fiber is bonded to the ferrule.

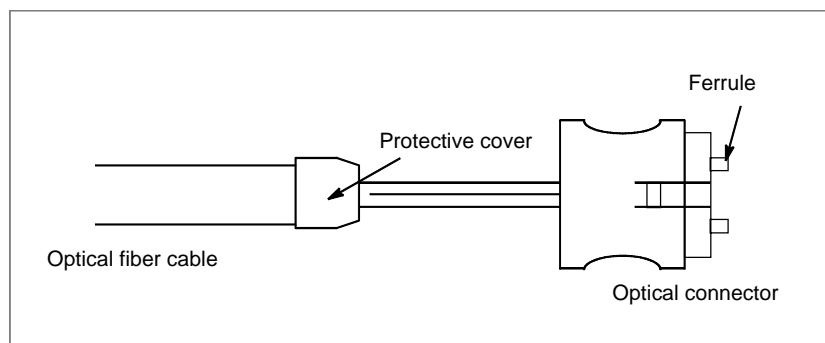

- Features of low-loss optical fiber cable (A66L-6001-0029#~)
A low-loss optical fiber cable is selected from conventional PCF optical fiber cables (A66L-6601-0026). The selected cable offers low loss, and its connector section is given special treatment; the fiber ends are provided with a depression so that the ferrules can be butted against each other.
- Features of high-speed low-loss optical fiber cable (A66L-6001-0049#~)
To achieve high-speed and long-distance communication, a high-speed low-loss optical cable is different from conventional PCF optical cables (A66L-6001-0026 and A66L-6001-0029) in optical properties. Therefore, the mode of propagation of light is also different. Connecting different types of optical fibers can result in a greater transmission loss, ultimately leading to an optical communication failure.
- The two optical cables used with a low-loss optical relay adapter must be the same type (two high-speed low-loss optical cables or two low-loss optical cables).
- Appearance of the low-loss relay adapter, low-loss optical fiber cable, and high-speed low-loss optical fiber cable (how to distinguish them from conventional types)
While the body of the conventional optical relay adapter is black, that of the low-loss optical relay adapter is blue. While the protection cover (see the figure above) of the conventional PCF optical fiber cable is black, that of the low-loss optical fiber cable is blue, and that of the high-speed low-loss optical fiber cable is yellow.

(8) Installing the optical fiber junction adapter

The optical fiber junction adapter should be installed within a cabinet, as a rule. If it is impossible to avoid installing it within a cabinet, protect the adapter and the optical fiber cable portions (such as connectors and cords) not covered with reinforcement coating from the outside air by, for example, covering them with packing.

(9) Environmental resistance of the optical fiber junction adapter

- The optical fiber junction adapter is not waterproof. Even when optical fiber cables are attached to both ends of the adapter, there are very small gaps in the linked portions, so water resistance can not be expected.
- When optical fiber cables are attached to both ends of the junction adapter installed in a normal environment (such as within a cabinet), it is unlikely that dust will penetrate between the adapter and optical fiber to the degree that it may hamper normal optical linkage. If one or both ends of the adapter are left open, dust and dirt may accumulate even when the adapter is in a normal environment (such as within a cabinet). The dust and dirt on the adapter ends is likely to hamper normal optical linkage when the optical fiber cables are attached. In such a case, clean the junction adapter and the optical connector using the optical fiber junction adapter cleaning method described below.
- Do not allow cutting fluid to splash over the adapter or those optical fiber cable portions (such as connectors and cords) that are not covered with reinforcement coating. If the inside of the adapter and fiber end surfaces are contaminated with cutting fluid, a malfunction may occur.

(10) Cleaning

If the optical fiber junction adapter, optical-to-electrical conversion module, or optical fiber cable is soiled, clean them according to the following procedures.

- **Cleaning the optical fiber junction adapter and optical-to-electrical conversion module**
First, clean the entire housing by wiping it with a cloth moistened with, or by washing it in, ethyl alcohol. Similarly, wash the two sleeves in the adapter or wipe them with a cotton swab or the like.
- **Cleaning optical fiber cables**
For the optical fiber cables, it is important to clean the connectors at their ends. Any soiling on the optical fiber end surfaces will hamper optical transmission, resulting in a malfunction. Wipe the optical fiber end surfaces (that is, the ferrule end surfaces) thoroughly with a soft, clean cloth (like gauze) moistened with ethyl alcohol, in the same way as described above. The use of cotton swabs may prove convenient. The fiber end surfaces of low-loss optical fiber cables are lower than the ferrules. To remove any soiling from the fiber end surfaces completely, push the cotton swab or gauze into the depressions all the way through while rotating the ferrule. If the ferrules and optical connectors are contaminated with oily substances, and they may extend over a cleaned fiber end surface when it is attached to the optical-to-electrical conversion module, it is a good idea to wash them before wiping the optical fiber end surfaces, using the procedure stated above.

E MEMORY CARD INTERFACE

Overview

The memory card interface on the left side of the LCD-mounted control unit or the display unit allows input/output of data in the control unit and DNC operation. This appendix describes the memory card interface on the left side of the LCD-mounted control unit or the display unit.

Compact Flash Card

Use a compact flash card (called a CF card below) purchased from FANUC.

NOTE

- 1 If a CF card other than that purchased from FANUC is used, the operation is not guaranteed.
- 2 The flash ATA card uses a quick format.
- 3 In case of formatting flash ATA card using a personal computer, format the card in the FAT16 format. Other formats are not supported.

Using the compact flash adapter

1. Attachment

- Attach the CF card to the compact flash card adapter (A02B-0303-K150, called the CF adapter later).
- Make sure lock lever A is in the upper position and then insert the CF adapter above into the memory card interface.
- Push lock lever A downward.
- Close the cover of the memory card interface.

NOTE


- 1 To perform continuous operation with the CF adapter attached, be sure to push lock lever A downward and then close the cover of the memory card interface.
- 2 The lock function is enabled only when the CF adapter (A02B-0303-K150) is used.
- 3 The CF adapter must be inserted with label surface facing toward the screen.

2. Removal

- Open the cover of the memory card interface.
- Push lock lever A upward.
- Push eject button B once to project the button.
- Push eject button B again to eject the CF adapter.
- Remove the CF card with your fingers.
- Close the cover of the memory card interface.

NOTE

When lock lever A is in the lower position (in the locked state), eject button B cannot be pushed.

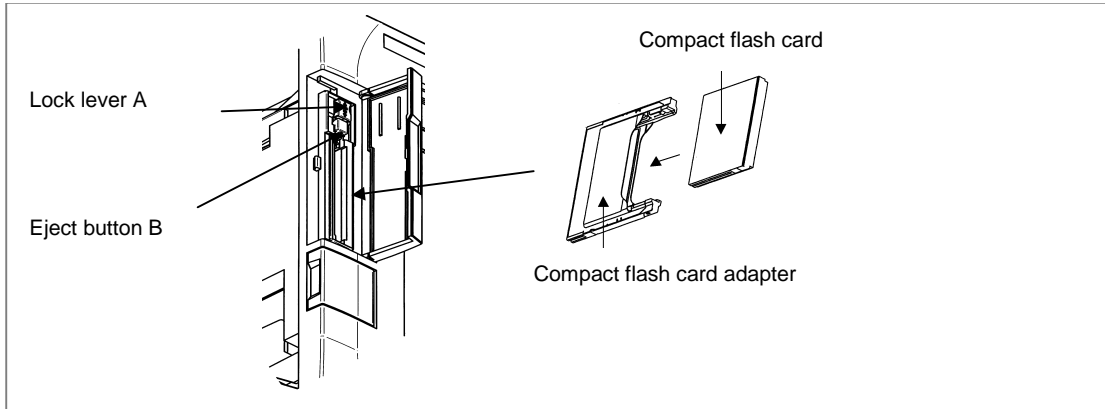

F HOW TO ATTACH THE KEYBOARD COVER

Overview

FANUC offers a keyboard cover to protect the MDI unit and the machine operator's panel main panel from dust and cutting oil.

If you want to use, attach in the following way. There are several type keyboard cover fitted to each unit, but the attachment method is the same. The following example shows how to attach to the standard MDI unit.

How to attach the keyboard cover

1. If the ornamental frame of the keyboard is dirty in the cutting fluid, etc., before attaching the keyboard cover, wipe off any soil and smear completely the ornamental frame using ethanol or diluted neutral detergent (such as kitchen detergent). If you used neutral detergent, remove any remaining detergent, using a cloth wetted with water. Any remaining oily substance or detergent causes the keyboard cover to come off easily. After making sure that the ornamental frame is dry, follow the procedure below to attach the keyboard cover.
2. There is no standard of position attach the keyboard cover. Peel off the release paper about 1-2 column of the key from the left or right, position the keyboard cover in such a way that interval of molding rising portion of the keyboard cover and key of the corner of the top and bottom to be the same.(Fig. F(a))
3. While peel off the release paper, attach the keyboard cover. At that time, be aware of the following.
 - (a) Do not touch the adhesive portion of the double-sided tape.
 - (b) The keyboard cover is made of soft material, it will be deformed by pulling. So attach to not to pull.
4. Press it firmly while stroking the both-side adhesive tape section.(Fig. F(b))

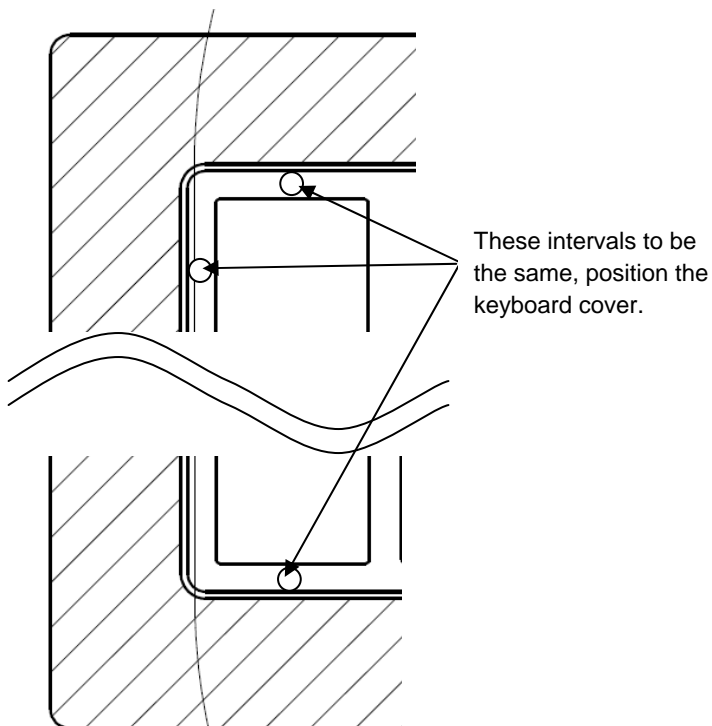


Fig. F (a)

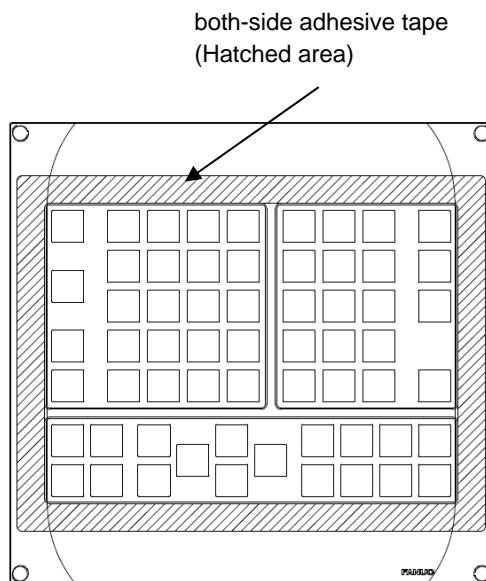


Fig. F (b)

INDEX

<Number>

20-PIN INTERFACE CONNECTORS AND CABLES	432
24 VDC POWER (INSULATION AC/DC CONVERTOR)	36
24 VDC Power Supply Specification	38
2A Output Signal Connection	132
2A output signal specifications	133

<A>

Address map	250
Analog 1Vp-p Interface	93
Analog Input Connector Pin Allocation	133
Analog Input Signal Connections	134
Analog Input Signal Specifications	135
Applicable Cables	436
Applicable wire	227
ASSIGNMENT FOR I/O UNITS	112
Assignment of Signals	112
ATTACHING SCREW CAPS	34

BATTERIES	44
Battery for Absolute Pulse Coder Built into the Motor (6VDC)	49
Battery for Memory Backup in the Control Unit (3 VDC)	44
Battery for Separate Absolute Pulsecoders (6VDC)	48
BOARD-MOUNTED CONNECTORS	432

<C>

Cabinet	18
Cable Clamp and Shield Processing	26
Cable Connection	394
Cable connection to a terminal block	247
Cable connection to the terminal block	156
CABLE CONNECTORS	433
CABLE FOR POWER SUPPLY TO CONTROL UNIT	44
Cable Length for Manual Pulse Generator	115
CAUTIONS	391
CAUTIONS ABOUT MULTI-PATH CONTROL	389
CAUTIONS REGARDING THE INSTALLATION	
DESIGN OF MACHINE TOOL POWER	
MAGNETICS CABINETS	11
Channel selection and A/D conversion data	135
Channel selection and A/D conversion data for extension module D	251
Channel selection and D/A conversion data for extension module E	253
Code Output for the Rotary Switch	299
Color labels for connectors of Safety IO Unit	345
Component names	151,229
CONFIGURATION	1
Configuration	121,194

Configurations of LCD-mounted Type Control Units	1
Configurations of Optional Boards	5
Connecting 24 VDC Power	36
Connecting I/O Devices	56
Connecting the Ground Terminal of the Control Unit	22
Connecting the High-speed Skip (HDI)	66
CONNECTING THE HIGH-SPEED SKIP (HDI)	66
CONNECTION	104
Connection	158,234,266
Connection between Modules	211
Connection Between the Basic Unit and Additional Unit	98
CONNECTION BETWEEN THE LCD-MOUNTED TYPE CONTROL UNIT AND MDI UNIT	50
CONNECTION CABLE (SUPPLIED FROM US)	443
Connection Diagram	83,122
Connection diagram	150
Connection Diagram	196,349,392,395
Connection Diagrams of an Analog Basic Unit	91
Connection of Basic and Extension Modules	138
Connection of Battery for Absolute Position Detector	96
Connection of Extension Module C (2A Output Module)	131
Connection of Extension Module D (Analog Input Module)	133
Connection of FANUC I/O Link <i>i</i> by Optical Fiber Cable	106
Connection of I/O Link <i>i</i> by Electric Cable	105
CONNECTION OF I/O MODULE FOR CONNECTOR PANEL	121
CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL SUPPORTING SAFETY FUNCTION	349
CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL (FOR MATRIX INPUT)	163
CONNECTION OF I/O MODULE FOR OPERATOR'S PANEL AND I/O MODULE FOR POWER MAGNETICS CABINET	179
CONNECTION OF I/O MODULE TYPE-2 FOR CONNECTOR PANEL	194
CONNECTION OF OPERATOR'S PANEL CONNECTION UNIT (SOURCE DO)	314
Connection of Power Supply	84
CONNECTION OF SAFETY IO UNIT	331
CONNECTION OF TERMINAL TYPE I/O MODULE	221
Connection of the Basic Module, and Extension Modules A and B	125
Connection of the ground terminal	249
Connection of the Grounding Terminal of the Module	148,178,193,220
CONNECTION TO CNC PERIPHERALS	50
CONNECTION TO FANUC I/O Link <i>i</i>	103
CONNECTION TO MACHINE OPERATOR'S PANEL	268
CONNECTION TO OTHER NETWORKS	390

- Connection to the Ethernet Interface68
 CONNECTION USING Ethernet395
 CONNECTION USING THE HIGH-SPEED SERIAL
 BUS (HSSB).....391
 Connection When Multiple Channels of the I/O Link *i* is
 Used.....108
 CONNECTION WITH FANUC PANEL *i* AND
 COMMERCIAL PERSONAL COMPUTERS391
 CONNECTION WITH INPUT/OUTPUT DEVICES...56
 Connection with the MDI Unit.....51
 Connector (on the cable side) specifications297
 Connector Layout Diagram.....195
 Connector Locations98
 Connector locations of main panel.....305
 Connector locations of Safety IO Unit.....344
 Connector locations of safety machine operator's panel305
 Connector locations of safety machine operator's panel
 type B306
 Connector Panel Printed Circuit Board.....215
 Connector pin arrangement125,131
 Connector specification of Safety IO Unit.....346
 CONTROL UNIT CONFIGURATION AND
 COMPONENT NAMES1
 COUNTERMEASURES AGAINST NOISE AND
 GROUNDING.....16
- <D>**
- DEFINITION OF WARNING, CAUTION, AND
 NOTEs-1
 Detachable key top on the main panel.....311
 Detaching a terminal block248
 DI (General-purpose Input Signal) Connection.....166,182
 DI (Input Signal) Connection126,199,316
 DI (Matrix Input Signal) Connection168
 DI (General-purpose Input Signal) Connection355
 DI(General-purpose Input Signal)Connection.....366
 DI/DO Address.....333
 DI/DO Address Map274,351
 DI/DO Addresses for the Keyboard297
 DI/DO connection239,335
 DI/DO Connector Pin Arrangement. 165,181,315,353,365
 DI/DO Connector Pin Assignment.....198
 DI/DO Signal Specifications129,210
 Dimensions (common to the modules).....228
 Dimensions in a maximum configuration (one basic
 module + three extension modules).....228
 DO (Output Signal) Connection 128,169,186,206,323,358
 DO (Output Signal) Error Detection312,348
 DO (output signal) Error Detection.....362
 DO alarm detection254
 DO(Output Signal) Connection.....373
 DUSTPROOF MEASURES FOR CABINETS AND
 PENDANT BOXES31
- <E>**
- Each Connections.....276
 EMERGENCY STOP SIGNAL.....385
 Emergency stop signal connection.....284
- Environmental Conditions outside the Cabinet10
 ENVIRONMENTAL REQUIREMENTS OUTSIDE
 THE CABINET10
 Ethernet Connector Panel.....73
 External View173,188,327,360,377
 External view and dimensions154
 External View and Dimensions.....228
- <F>**
- FANUC serial interface86
 Fixed Signals.....112
- <G>**
- GENERAL UNITS117
 General-purpose DI signal connection287
 General-purpose DI signal definition.....308
 General-purpose DO signal connection293
 General-purpose DO signal definition309
 GND Cable Connection378
 Grounding as Noise Suppression Measures17
 Grounding methods.....17
- <H>**
- Handling Precautions393
 HARDWARE OVERVIEW6
 Heat dissipation.....226
 Heat output.....308
 Heat Output of Each Unit.....14
 HOW TO ATTACH THE KEYBOARD COVER.....458
- <I>**
- I/O Link connection266
 I/O Link CONNECTION UNIT260
 I/O Link *i* connection281
 I/O Link *i* Connection332
 I/O signal specifications223
 I/O UNIT FOR POWER MAGNETICS CABINET363
 Input signal requirements (analog 1Vp-p interface).....94
 Input Signal Requirements (Parallel interface)88
 Input Signal Rules for the High-speed Skip (HDI)67
 INSTALLATION.....10
 Installation100,155,232,263
 INSTALLATION CONDITION FOR UL
 RECOGNITION.....35
 Installation conditions223,306
 Installation Conditions of the Control Unit.....10
 Installation Environment.....393
 INSTALLING THE CONTROL UNIT30
 Installing the LCD-mounted Type Control Unit30
 Interface to the Amplifiers80
 Inter-module connection246
- <K>**
- Key Layout of MDI Unit53
 Keyboard.....309
 Keyboard Cover55
 Keyboard cover.....311

<L>

LCD PROTECTION COVER.....	34
LCD-mounted Type Control Unit Overview.....	6
Lightning Surge Absorber Installation	28
LINKING THE ETHERNET INTERFACE	68

<M>

Main panel specification	307
MANUAL PULSE GENERATOR	114
Manual Pulse Generator	295
Manual Pulse Generator Connection 114,138,172,187,211	
Manual pulse generator connection.....	246,295
Manual pulse generator Connection.....	359
Manual Pulse Generator Connection.....	377
Manual Pulse Generator Signal Specifications	115
Meaning of key symbols	309
MEMORY CARD INTERFACE.....	456
Method for checking the encoder signals.....	95
Method of common pin expansion	257
Module Installation	139
Module Specifications.....	123,197,222
Mounting the Module.....	214

<N>

Network Installation.....	72
Noise Suppressor.....	25
NOTE REGARDING KOREAN KC MARK	s-5
Notes on Installing a Separate Detector Interface Unit	101
Number of Units That Can Be Connected.....	81

<O>

OPTICAL FIBER CABLE.....	446
Order specification.....	306
Other Notes	144,176,191,218,329,381
Others	257
Outline.....	300
OUTLINE DRAWINGS OF UNITS AND CONNECTORS	399
Outline of main panel.....	300
Outline of Safety IO Unit.....	343
Outline of Safety machine operator's panel	301
Outline of Safety machine operator's panel type B.....	302
Outline of sub panel AA.....	303
Outline of sub panel D	304
Overall Connection Diagram	163,179
Overall connection diagram	234
Overall Connection Diagram	314,363
Overview	50,56
OVERVIEW	79
Overview	82
OVERVIEW	103
Overview	221,260,268,331,349,391
OVERVIEW	391
Overview	395
Overview of the Analog Basic Unit	90

<P>

PANEL <i>i</i>	396
----------------------	-----

Parallel DO (output signal) connection.....	259
Parallel interface	87
Pendant type manual pulse generator connection	295
Pin assignment	276
Pin assignment of DI/DO	334
Power Capacity of 24 VDC Power Supplies	40
Power Connection.....	164,180
Power connection	235,267
Power Connection.....	314,350,364
Power ON/OFF control signal connection	285
POWER SUPPLY	116
POWER SUPPLY CONNECTION	36
Power Supply Connection.....	211
Power supply connection	280,332
Power supply rating	226
Power supply specification	308
Power-off Sequence	42
Power-on Sequence.....	41
PREFACE.....	p-1
Procedure for Installing Personal Computer Interface Boards	393
Protective Ground (Grounding for Protection against Indirect Contact).....	21

<R>

Recommended Connectors.....	436
RECOMMENDED CONNECTORS, APPLICABLE HOUSINGS, AND CABLES	435
Replacing commercially available alkaline dry cells (size D).....	46
Replacing the lithium battery	45
Rotary Switch Setting	146
RS232-C Interface Specification.....	59
RS232-C Serial Port.....	57

<S>

Safety machine operator's panel and safety machine operator's panel type B specification	307
SAFETY PRECAUTIONS	s-1
SEPARATE DETECTOR INTERFACE.....	82
Separate Detector Interface (Analog Input)	93
Separate Detector Interface (Digital Input)	86
Separate Detector Interface Unit Specification	84
Separating Signal Lines	23
SERVO AND SPINDLE INTERFACES.....	79
Setting the rotary switch	256
Settings.....	250
SHUTTING OFF THE MOTOR POWER.....	383
Signal assignment on terminal blocks	236
Soldering Type Connector	434
Specification	261
Specification of Twisted-Pair Cable	70
Specifications.....	174,189,327,361,379
Specifications of a Commercial PC	392
Specifications of Safety IO Unit	346
Specifications of the Machine Operator's Panel	306
Status Alarm.....	113
STOP AND EMERGENCY STOP	383

STOP MODES	383
STOPPING THE SERVO MOTOR.....	384
STOPPING THE SPINDLE MOTOR	384
Straight and Right-angled Connectors (for Spring and Screw-fixing Connector Housings)	432
Strand Wire Press-mount Connector	433
Sub panel AA, D specification.....	308
<T>	
Temperature Rise within the Machine Tool Magnetic Cabinet	14
Terminal Conversion Adapter	149
Thermal Design of Operator's Panel	15
THERMAL DESIGN OF THE MACHINE TOOL	
MAGNETIC CABINET.....	14
TIGHTENING TORQUE FOR FASTENING UNITS AND GROUND TERMINALS.....	
Total Connection Diagram	271
Total connection diagram.....	331
TOTAL CONNECTION DIAGRAMS.....	7
TURNING ON AND OFF THE POWER TO THE CONTROL UNIT.....	
Types of modules	222
<U>	
Unit Dimensions.....	213
UNITS CONNECTED TO FANUC I/O Link <i>i</i>	117
USB PORT.....	77
Using the channel 2 of I/O Link <i>i</i>	281
<V>	
Vertical-type Connectors	432
<W>	
WARNINGS AND CAUTIONS REGARDING DESIGNING	
	s-4
WARNINGS AND CAUTIONS REGARDING MOUNTING, WIRING, AND EXCHANGING.....	
	s-2
WARNINGS, CAUTIONS, AND NOTES REGARDING DAILY MAINTENANCE	
	s-5
Weight.....	226

REVISION RECORD

Edition	Date	Contents
01	Sep., 2014	

B-64603EN/01



* B - 6 4 6 0 3 E N / 0 1 *