

SIEMENS

SINUMERIK 802D sl

Parameter Manual

Maschine-/ Setting Data - Explanation	1
Maschine Data	2
Setting Data - Description	3
Interface Signals	4
PLC User Interface	5
SINAMICS Parameter	6
Index	I

Valid for

<i>Control</i>	<i>Software -Version</i>
SINUMERIK 802D sl	1.4

Drive
SINAMICS S120

06/2009

SINUMERIK®-Documentation

Printing history

Brief details of this edition and previous editions are listed below.

The status of each edition is shown by the code in the "Remarks" column.

Status codes in the "Remarks" column.

Status codes in the "Remarks" column.

- A** New documentation.
- B** Unrevised reprint with new Order No.
- C** Revised edition with new status.

Edition	Order-No.	Remarks
02/2006	6FC5397-5CP10-0BA0	C
06/2007	6FC5397-5CP10-1BA0	C
06/2009	6FC5397-5CP10-2BA0	C

Registered Trademarks

All designations with the trademark symbol ® are registered trademarks of Siemens AG. Other designations in this documentation may be trademarks whose use by third parties for their own purposes may infringe the rights of the owner.

Liability disclaimer

We have checked that the contents of this document correspond to the hardware and software described. Nonetheless, differences might exist and therefore we cannot guarantee that they are completely identical. The information contained in this document is, however, reviewed regularly and any necessary changes will be included in the next edition.

Preface

Structure of the documentation

The SINUMERIK documentation is available in three versions:

- General Documentation
- User Documentation
- Manufacturer/Service Documentation

Information on the following topics is available at <http://www.siemens.com/motioncontrol/docu>:

- Ordering documentation
Here you can find an up-to-date overview of publications.
- Downloading documentation
Links to more information for downloading files from Service & Support.
- Researching documentation online
Information on DOConCD and direct access to the publications in DOConWEB.
- Compiling individual documentation on the basis of Siemens contents with the My Documentation Manager (MDM), refer to <http://www.siemens.com/mdm>. My Documentation Manager provides you with a range of features for generating your own machine documentation.
- Training and FAQs
Information on the range of training courses and FAQs (frequently asked questions) are available via the page navigation.

Target group

This publication is intended for project engineers, commissioners, machine operators and service and maintenance personnel.

Utility value

The present Lists Manual provides knowledge in respect of parameters and their effects on the system.

Standard scope

This Parameter Manual describes only the functionality of the standard version. Extensions or changes made by the machine tool manufacturer are documented by the machine tool manufacturer.

Other functions not described in this documentation might be executable in the control. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of servicing.

Furthermore, for the sake of clarity, this documentation does not contain all detailed information about all types of the product and cannot cover every conceivable case of installation, operation or maintenance.

Technical Support

If you have any questions, please contact the following hotline:

	Europe / Africa
Phone	+49 180 5050 222
Fax	+49 180 5050 223
€0.14/min. from German landlines, mobile phone prices may differ.	
Internet	http://www.siemens.de/automation/support-request

	America
Phone	+1 423 262 2522
Fax	+1 423 262 2200
Email	mailto:techsupport.sea@siemens.com

	Asia / Pacific
Phone	+86 1064 757575
Fax	+86 1064 747474
Email	mailto:support.asia.automation@siemens.com

Note

Country-specific telephone numbers for technical support are provided under the following Internet address:

<http://www.automation.siemens.com/partner>

Questions about this documentation

If you have any queries (suggestions, corrections) in relation to this documentation, please send a fax or email to the following address.

Fax	+49 9131 98 2176
Email	mailto:docu.motioncontrol@siemens.com

A fax form is available at the end of this document.

SINUMERIK Internet address

<http://www.siemens.com/sinumerik>

Purpose of this manual

The Lists Manual provides a complete overview of the functions, machine data, variables, interface signals and PLC blocks.

CompactFlash cards for the user (only for hardware descriptions)

- The SINUMERIK CNC supports the file systems FAT16 and FAT32 for CompactFlash cards. You may need to format the memory card if you want to use a memory card from another device or if you want to ensure the compatibility of the memory card with the SINUMERIK. However, formatting the memory card will permanently delete all data on it.
- Do not remove the memory card while it is being accessed. This can result in damage to the memory card and the SINUMERIK as well as the data on the memory card.
- If you cannot use a memory card with the SINUMERIK, it is probably because the memory card is not formatted for the control system (e.g. Ext3 Linux file system), the memory card file system is faulty or it is the wrong type of memory card.
- Insert the memory card carefully and the right way round into the memory card slot (observe indicators such as arrow or similar). This way you avoid mechanical damage to the memory card or the device.
- Only use memory cards that have been approved by Siemens for use with SINUMERIK. Even though the SINUMERIK complies with the general industry standards for memory cards, it is possible that memory cards from some manufacturers will not function perfectly in this device or are not completely compatible with it (you can obtain information on compatibility from the memory card manufacturer or supplier).
- The "CompactFlash® 5000 Industrial Grade" CompactFlash card from Sandisk has been approved for SINUMERIK (Order Number 6FC5313-5AG00-0AA0).

Safety information

This manual contains information which you should observe to ensure your own personal safety as well as to protect the product and connected equipment. Notices referring to your personal safety are highlighted in the manual by a safety alert symbol; notices referring to property damage only have no safety alert symbol. These notices shown below are graded according to the degree of danger.



Danger

Indicates that death or severe personal injury will result if proper precautions are not taken.



Warning

means that there can be severe physical injury or even death if the corresponding safety measures are not followed.



Caution

means that there can be slight physical injury if the corresponding safety measures are not followed.

Caution

means that there can be damage to property if the corresponding safety measures are not followed.

NOTICE

indicates that an undesirable result or state may occur if the corresponding instruction is not followed.

In the event of a number of levels of danger prevailing simultaneously, the warning corresponding to the highest level of danger is always used. A warning notice accompanied by a safety alert symbol indicating a risk of bodily injury can also indicate a risk of property damage.

Qualified persons

The associated device/system must only be set up and operated using this documentation. The device/system must be commissioned and operated by qualified personnel only. Qualified personnel as defined under the safety guidelines in this documentation are those who are authorized to start up, earth and label units, systems and circuits in accordance with the relevant safety standards.

Content

1	Machine and Setting Data - Explanation	1-11
1.1	Specifications in the list	1-11
1.2	Overview of machine and setting data	1-17
2	Machine Data	2-19
2.1	Display machine data	2-19
2.2	General machine data	2-32
2.2.1	System settings	2-36
2.2.2	Override switch settings	2-152
2.2.3	System specific memory settings	2-177
2.3	Channel-specific machine data	2-226
2.3.1	Basic channel machine data	2-226
2.3.2	Machine data for grinding function	2-289
2.3.3	Channel auxiliary function settings	2-292
2.3.4	Transformation definitions in channel	2-317
2.3.5	Punching and nibbling	2-362
2.3.6	Channel-specific memory settings	2-377
2.4	Axis-specific machine data	2-391
2.4.1	Configuration	2-391
2.4.2	Encoder matching	2-406
2.4.3	Closed-loop control	2-411
2.4.4	Reference point approach	2-452
2.4.5	Spindles	2-465
2.4.6	Monitoring functions	2-484
2.4.7	Travel to fixed stop	2-500
2.4.8	Axis-specific memory settings	2-522
3	Setting Data - Description	3-523
3.1	Setting data	3-523
3.1.1	General setting data	3-523
3.1.2	Channel-specific setting data	3-540
3.1.3	Axis specific setting data	3-567
4	Interface Signals	4-581
4.1	General	4-581

4.2	Signals from/to HMI	4-582
4.2.1	Program-control signals from HMI	4-582
4.2.2	Signals from HMI	4-584
4.2.3	Signals from operator panel	4-585
4.2.4	General selection/status signals from HMI	4-586
4.2.5	General selection/status signals to HMI	4-587
4.3	Auxiliary function transfer from NC channel	4-588
4.4	NC signals	4-591
4.4.1	General signals to NC	4-591
4.4.2	General signals from NC	4-592
4.5	Mode signals	4-594
4.6	Channel-specific signals	4-598
4.6.1	Signals to channel	4-598
4.6.2	Signals from the channel	4-613
4.7	Axis-/spindle-specific signals	4-623
4.7.1	Transferred axis-specific M and S functions	4-624
4.7.2	Signals to axis/spindle	4-625
4.7.3	Signals from axis/spindle	4-641
4.8	Tool management functions from NC channel	4-653
5	PLC User Interface	5-655
5.1	Adressranges	5-655
5.2	User data	5-657
5.2.1	User data 1	5-657
5.2.2	User data 2	5-657
5.2.3	Signals from MCP (connected to the MCPA module)	5-657
5.2.4	Signals to MCP (connected to the MCPA module)	5-658
5.2.5	Reading/writing NC data: Job [F20.6]	5-658
5.2.6	Read/write NC data: Result [F20.6]	5-658
5.3	Retentive data area	5-659
5.4	User alarm	5-660
5.4.1	User alarm: Activation	5-660
5.4.2	Variable for alarm	5-661
5.4.3	Active alarm reaction	5-661
5.5	Signals from/to HMI	5-662
5.5.1	Program control signals from HMI (retentive area)	5-662
5.5.2	Program selection from PLC (retentive area)	5-662
5.5.3	Checkback signal Program selection from HMI (retentive area)	5-662
5.5.4	Signals from HMI	5-663
5.5.5	Signals from PLC	5-663
5.5.6	Signals from operator panel (retentive area)	5-664
5.5.7	General selection/status signals from HMI (retentive area)	5-664
5.5.8	General selection/status signals to HMI (retentive area)	5-665

5.6	Auxiliary function transfer from NC channel	5-665
5.6.1	Decoded M signals: (M0 - M99)	5-666
5.6.2	Transferred T functions	5-667
5.6.3	Transferred M functions	5-667
5.6.4	Transferred S functions	5-667
5.6.5	Transferred D functions	5-668
5.6.6	Transferred H functions	5-668
5.7	NCK signals	5-668
5.7.1	General signals to NCK	5-668
5.7.2	General signals from NCK	5-669
5.7.3	Signals to fast inputs and outputs	5-670
5.7.4	Signal from fast inputs and outputs	5-671
5.7.5	Operating mode signals	5-671
5.8	Channel Signals	5-673
5.8.1	Signals to NC channel	5-673
5.8.2	Signals from NC channel	5-676
5.9	Axis/spindle signals	5-679
5.9.1	Transferred M/S functions, axis-specific	5-679
5.9.2	Signals to axis/spindle	5-679
5.9.3	Signals from axis/spindle	5-683
5.10	PLC machine data	5-687
5.10.1	INT values (MD 14510 USER_DATA_INT)	5-687
5.10.2	HEX values (MD 14512 USER_DATA_HEX)	5-687
5.10.3	FLOAT values (MD 14514 USER_DATA_FLOAT)	5-688
5.10.4	User alarm: Configuration (MD 14516 USER_DATA_PLC_ALARM)	5-688
5.10.5	Reading and writing PLC variables	5-688
5.11	Tool management functions from NC channel	5-689
6	SINAMICS Parameter	6-691
I	Index	I-693

Machine and Setting Data - Explanation

1.1 Specifications in the list

The machine and setting data are listed in the form of tables.

MD nummer	MD identifier			Cross reference	
Unit	Brief description			Activation	
Display filter			Attribute	Data type	
System	Dimension	Default value	Minimalvalue	Maximal value	Protection

The following information are specified:

Number and identifier

MD and SD are addressed via their numbers or their names (identifiers). The number and the name, as well as the activation type and the unit are displayed on the screen of the control system.

In the field " identifier", you can see the name of the data.

Cross reference

For a detailed description of the appropriate data, please refer to the description of functions or manual/guide specified.

Example: [F-S1] Description of Functions 802D sl, Chapter "Spindle (S1)"

Specifications in the list

Unit/unit system

Depending on MD 10240 SCALING_SYSTEM_IS_METRIC, the physical units of the machine data (MD) differ as follows:

MD 10240 = 1	MD 10240 = 0
mm	inch
mm/min	inch/min
m/s ²	inch/s ²
m/s ³	inch/s ³
mm/rev.	inch/rev

If there are machine data with no physical unit assigned, a hyphen ("-") can be found in the relevant field.

Hinweis:

The default setting is
MD 10240 SCALING_SYSTEM_IS_METRIC = 1 (metric)

Activation

In the "Activation" field, the following short designator specifies when the data takes effect after a change.

po	POWER ON	"RESET" key on the front plate of the NCU module
cf	NEW_CONF	<ul style="list-style-type: none"> – The "Activate MD" softkey on the HMI – "RESET" key on the control unit – It is possible to modify block limits during program operation
re	RESET	<ul style="list-style-type: none"> – at end of program M2/M30 or – "RESET" key on the control unit
so	IMMEDIATELY	After entry of value

The levels of effectiveness have been listed above in order of priority.

Display filter

A short designator for the filter setting is listed in the "Display filter" field. With the aid of this filter setting, it is possible to selectively reduce the number of the displayed machine/setting data of a section.

Display criteria:

EXP Expert mode:

- Active: the MD is assigned to the expert mode (display of MD)

Depending on the machine data section, there are different display filters. These short designations return in the operator interface to activate the filters.

The short designations of the display filter and their meanings are listed below for the individual machine data.

General machine data

N01	Configuration / Scaling
N02	Memory configuration
N03	PLC machine data
N04	Drive control
N05	Status data/Diagnostics
N06	Monitors/Limitations
N07	Auxiliary functions
N08	Corrections/Compensations
N09	Technological functions
N10	Peripheral configuration
N11	Standard machine
N12	NC language ISO dialect

Channelspecific machine data

C01	Configuration
C02	Memory configuration
C03	Initial settings
C04	Auxiliary functions
C05	Velocities
C06	Monitors/Limitations
C07	Transformations
C08	Corrections/Compensations
C09	Technological functions
C10	Standard machine
C11	NC language ISO dialect

*Specifications in the list***Axis-specific machine data**

A01	Configuration (including memory)
A02	Measuring system
A03	Machine geometry
A04	Speeds/Accelerations
A05	Monitors/Limitations
A06	Spindle
A07	Controller data
A08	Status data
A09	Corrections/Compensations
A10	Technological functions
O11	Standard machine
A12	NC language ISO dialect

Data type

In the "Data type" field, the short designators indicate the data types. They have the following meanings:

BOOLEAN	Boolean value: 1(TRUE) or 0 (FALSE)
BYTE	8-bit value <ul style="list-style-type: none"> • as an INTEGER value: -128... 127 • as a hexadecimal value: 00 ... FF • as a character as per ASCII character set, e.g. "a"
STRING	Sequence of characters (max. 16)
WORD	16-bit value, <ul style="list-style-type: none"> • as an INTEGER value: -32768 ... 32767 • as a hexadecimal value: 0000 ... FFFF
UNSIGNED WORD	16-bit value, <ul style="list-style-type: none"> • as an INTEGER value: 0 ... 65535, • as a hexadecimal value: 0000 ... FFFF
INTEGER	16-bit value (here defined locally), <ul style="list-style-type: none"> • INTEGER value: -32768 ... 32767

DWORD	32-bit value, <ul style="list-style-type: none"> • as an INTEGER value: -2147483648 ... 2147483647 • as a hexadecimal value: 0000 0000 ... FFFF
UNSIGNED DWORD	32-bit value, <ul style="list-style-type: none"> • as an INTEGER value: 0 ... 4294967295, • as a hexadecimal value: 0000 0000 ... FFFF FFFF
DOUBLE	64-bit value, <ul style="list-style-type: none"> • floating point value: $\pm 4.19 \times 10^{-307}$ to $\pm 1.67 \times 10^{308}$)
FLOAT DWORD	Realwerte (von $\pm 8,43 \times 10^{-37}$ bis $3,37 \times 10^{38}$)
UBYTE	Integerwerte (von 0 - 255)
LONG	Integerwerte (von 4294967296 - 4294967295)

System

Specifies the control system for which the data with the entered values applies. The following entries are possible:

- default
The entered values apply for all SINUMERIK 802D sl.
Any deviations in the range of values must be entered in the following lines of the table. If no "default" entry exists, the data only applies for the control variants specified.

802d-cu3	Customised pro
802d-ng2	Nibbling/grinding plus
802d-ng3	Nibbling/grinding pro
802d-tm1	Turning/milling value
802d-tm2	Turning/milling plus
802d-tm3	Turning/milling pro

Default values

This value is used to specify a default value for the machine data. If the default values for the channels are different, this is marked by a " , ".

Range of values (minimum/maximum value)

Specifies the input limits. If no range of values is specified, the data type determines the input limits, and the field is marked with "****".

If no range of values is specified, the value in the "Data type" field determines the input limits and the field is marked with "****".

Protection

The SINUMERIK 802D sl provides a concept of protection levels for enabling data areas. There are the protection levels 0 to 7 whereby 0 is the highest and 7 the lowest level. The protection levels can be set for certain function areas (e.g. program editor) using the display machine data (USER_CLASS...). When the control system is delivered, certain default passwords are already set for the protection levels 1 to 3. If necessary, the appropriate authorized person can change these passwords.

Tabelle 1-1

Protection level	Locked by	Area
0		Siemens, reserved
1	Password: SUNRISE (default)	Expert mode (OEM HIGH)
2	Password: EVENING (default)	Machine manufacturer (OEM LOW)
3	Password: CUSTOMER (default)	Authorized operator, setter
4 to 7	No password and user interface from PLC NCK	Authorized operator, setter or appropriate graduations as desired

Protection levels 1 ... 3

The protection levels 1 to 3 require a password. The passwords can be changed after activation. For example, if the passwords are no longer known, the control system must be reinitialized (booting with default machine data). This will reset all passwords to their defaults according to the software release you have acquired.

The password remains set until it is reset by selecting the **Delete password** soft-key. **POWER ON** will **not** reset the password.

Protection levels 4 ... 7

Protection level 7 is set automatically if no password is set and no protection level interface signal is set. The protection levels 4 to 7 can be set from the PLC user program even without a password by setting the bits in the user interface.

1.2 Overview of machine and setting data

The machine data and setting data are divided into the following areas:

Table 1-2 Overview of the machine and setting data areas

Area	Designation
from 200 to 400	Display machine data 1
from 1 000 to 19 999	General machine data
from 20 000 to 29 999	Channel-specific machine data
from 30 000 to 39 999	Axis-specific machine data
from 41 000 to 41 999	General setting data
from 42 000 to 42 999	Channel-specific setting data
from 43 000 to 43 999	Axis-specific setting data

Machine Data

2.1 Display machine data

Number	Identifier			Display filters	Reference
Unit	Name			Data type	Active
Attributes					
System	Dimension	Default value	Minimum value	Maximum value	Protection

Description:

200	LCD_CONTRAST			-	-
-	Foreground language			BYTE	PowerOn
-					
-	0	7	0	15	0/0

Description: With 802S contrast of the b/w display.

201	LCD_INVERSE			-	-
-	Foreground language			BYTE	PowerOn
-					
-	0	0	0	1	0/0

Description: Not assigned

202	FIRST_LANGUAGE			-	-
-	Foreground language			BYTE	PowerOn
-					
-	0	2	1	2	0/0

Description: Internal assignment

203	DISPLAY_RESOLUTION			-	-
-				BYTE	Immediately
-					
-	0	3	0	5	3/2

Description: This MD is used to define the number of decimal places of the position display, for linear axes in metric systems, in general for rotary axes.

Spindle positions are treated like rotary axis positions.

The position display is displayed with a max. of 10 characters including signs and decimal places. A positive sign is not displayed.

By default 3 digits are displayed after the decimal point.

MD value=3: display resolution = 10^{-3} [mm] or [degree],

Related to:

MD 10200: INT_INCR_PER_MM bzw. MD 10210: INT_INCR_PER_DEG

Display machine data

204	DISPLAY_RESOLUTION_INCH	-	-
-	Display resolution for inch system of measurement	BYTE	Immediately
-			
-	0	4	0
			5
			3/2

Description: This MD is used to define the number of decimal places of the position display for linear axes in the inch system of measurement. The position display is displayed with a max. of 10 characters including signs and decimal places. A positive sign is not displayed.

By default 4 digits are displayed after the decimal point.

MD value=4: display resolution = 10⁻⁴ [mm]

For rotary axes and spindle positions the display is maintained as in MD 203.

Related to:

MD 10200: INT_INCR_PER_MM, MD 203: DISPLAY_RESOLUTION

205	DISPLAY_RESOLUTION_SPINDLE	-	-
-	Display resolution for spindle values	BYTE	Immediately
-			
-	0	1	0
			5
			3/2

Description: This MD is used to define the number of decimal places for spindle speed display.

The values are displayed with a max. of 10 characters including sign and decimal point. A positive sign is not displayed.

By default 1 digit is displayed after the decimal point.

MD value=1: display resolution = 10⁻¹

207	USER_CLASS_READ_TOA	-	-
-	Read tool offsets protection level, general	BYTE	Immediately
-			
-	0	3	0
			7
			3/3

Description: Protection level of the tool offsets, general

208	USER_CLASS_WRITE_TOA_GEO	-	-
-	Write tool geometry protection level	BYTE	Immediately
-			
-	0	3	0
			7
			3/3

Description: Protection level for tool offsets (geometry) for writing

209	USER_CLASS_WRITE_TOA_WEAR	-	-
-	Write tool wear data protection level	BYTE	Immediately
-			
-	0	3	0
			7
			3/3

Description: Protection level of tool offsets (wear) for writing

210	USER_CLASS_WRITE_ZOA	-	-
-	Write settable work offset protection level	BYTE	Immediately
-			
-	0	3	0
			7
			3/3

Description: Protection level Settable work offset for writing

212	USER_CLASS_WRITE_SEA	-	-
-	Protection level write setting data	BYTE	Immediately
-			
-	0	7	0
		7	3/3

Description: Protection level Setting data for writing

213	USER_CLASS_READ_PROGRAM	-	-
-	Read protection level of part program	BYTE	Immediately
-			
-	0	7	0
		7	3/3

Description: Read protection level of part program

214	USER_CLASS_WRITE_PROGRAM	-	-
-	Enter part program protection level	BYTE	Immediately
-			
-	0	3	0
		7	3/3

Description: Enter part program protection level

215	USER_CLASS_SELECT_PROGRAM	-	-
-	Program selection protection level	BYTE	Immediately
-			
-	0	3	0
		7	3/3

Description: Protection level program selection

217	USER_CLASS_WRITE_CYCLES	-	-
-	Write cycles protection level	BYTE	Immediately
-			
-	0	3	0
		7	0/0

Description: Not assigned

218	USER_CLASS_WRITE_RPA	-	-
-	Protection level write R variables	BYTE	Immediately
-			
-	0	3	0
		7	3/3

Description: Protection level write R variables

219	USER_CLASS_SET_V24	-	-
-	Set RS-232 protection level	BYTE	Immediately
-			
-	0	3	0
		7	3/3

Description: Protection level Change parameters for RS-232 interface

221	USER_CLASS_DIR_ACCESS	-	-
-	Directory access protection level	BYTE	Immediately
-			
-	0	3	0
		7	3/3

Description: Directory access protection level

Display machine data

222	USER_CLASS_PLC_ACCESS	-	-
-	PLC project protection level	BYTE	Immediately
-			
-	0	3	0
-		7	2/2

Description: PLC project protection level

223	USER_CLASS_WRITE_PWA	-	-
-	Protected work area protection level	BYTE	Immediately
-			
-	0	7	0
-		7	3/2

Description: Protected work area protection level

247	V24_PG_PC_BAUD	-	-
-	PG: baud rate (300, 600, 1200, 2400, 4800, 9600, 19200, 38400)	BYTE	Immediately
-			
-	0	7	5
-		9	3/3

Description: Baudrate for programming tool (9600,19200,38400,57600,115200)

280	V24_PPI_ADDR_PLC	-	-
-	PLC station address	BYTE	PowerOn
-			
-	-	2	0
-		126	3/3

Description: PLC station address

281	V24_PPI_ADDR_NCK	-	-
-	NCK station address	BYTE	PowerOn
-			
-	-	3	0
-		126	3/3









Description: NCK station address

289	CTM_SIMULATION_TIME_NEW_POS	-	-
-	Simulation of actual value update rate	BOOLEAN	Immediately
-			
-	0	100	0
-		4000	4/3

Description: Use this MD to define the time intervals in which the simulation graphic is updated on the current machine tool machining.
Value = 0 means no update

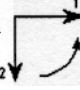290	CTM_POS_COORDINATE_SYSTEM			-	-
-	Coordinate system position			BYTE	Immediately
-					
-	0	2	0	7	4/3

Description: The position of the coordinate system can be changed as follows:

Value	G02 direction of rotation left	Coordinate system	Operations
0	0		no operation no operation
1	1		mirroring Y no operation
2	1		mirroring X no operation
3	0		mirroring X mirroring Y
4	1		rotation 270° mirroring Y
5	0		rotation 270° no operation
6	0		rotation 90° no operation
7	1		rotation 90° mirroring Y

Display machine data

291	CTM_CROSS_AX_DIAMETER_ON	-	-
-	Diameter display active for transv. axes	BYTE	Immediately
-			
-	0	1	0
-		1	4/3

Description:

0: Input of absolute values as radius value
 Work offsets always in radius
 Tool lengths always in radius
 Tool wear always in radius

1: Position display in diameter
 Distance to go in diameter
 Absolute paths in diameter

292	CTM_G91_DIAMETER_ON	-	-
-	Incremental infeed	BYTE	Immediately
-			
-	0	1	0
-		1	7/3

Description:

0: Input in radius
 1: Input in diameter

305	G_GROUP1	-	-
-	User-oriented G group for position display	BOOLEAN	Immediately
-			
-	0	1	1
-		1000	7/3

Description: User-oriented G group for position display

306	G_GROUP2	-	-
-	User-oriented G group for position display	BOOLEAN	Immediately
-			
-	0	2	1
-		1000	7/3

Description: User-oriented G group for position display

307	G_GROUP3	-	-
-	User-oriented G group for position display	BOOLEAN	Immediately
-			
-	0	8	1
-		1000	7/3

Description: User-oriented G group for position display

308	G_GROUP4	-	-
-	User-oriented G group for position display	BOOLEAN	Immediately
-			
-	0	9	1
-		1000	7/3

Description: User-oriented G group for position display

309	G_GROUP5	-	-
-	User-oriented G group for position display	BOOLEAN	Immediately
-			
-	0	10	1
-		1000	7/3

Description: User-oriented G group for position display

310	FG_GROUP1	-	-
-	User-oriented G group for position display (external language)	BOOLEAN	Immediately
-			
-	0	1	1
		1000	7/3

Description: User-oriented G group for position display (ext. language)

311	FG_GROUP2	-	-
-	User-oriented G group for position display (external language)	BOOLEAN	Immediately
-			
-	0	2	1
		1000	7/3

Description: User-oriented G group for position display (ext. language)

312	FG_GROUP3	-	-
-	User-oriented G group for position display (external language)	BOOLEAN	Immediately
-			
-	0	8	1
		1000	7/3

Description: User-oriented G group for position display (ext. language)

313	FG_GROUP4	-	-
-	User-oriented G group for position display (external language)	BOOLEAN	Immediately
-			
-	0	9	1
		1000	7/3

Description: User-oriented G group for position display (ext. language)

314	FG_GROUP5	-	-
-	User-oriented G group for position display (external language)	BOOLEAN	Immediately
-			
-	0	19	1
		1000	7/3

Description: User-oriented G group for position display (ext. language)

330	CMM_POS_COORDINATE_SYSTEM	-	-
-	Coordinate position of the machine axis	BYTE	Immediately
-			
-	0	0	0
		7	7/3

Description: Coordinate position of the machine

331	CONTOUR_MASK	-	-
-	Enable 802 contour definition programming	BYTE	Immediately
-			
-	0	1	0
		1	7/3

Description: Enable 802 contour definition programming

Display machine data

332	TOOL_LIST_PLACE_NO	-	-
-	Enable the location number in the tool list	BOOLEAN	Immediately
-			
-	0	0	0
-		1	3/3

Description: Enable the location number in the tool list

343	V24_PPI_ADDR_MMC	-	-
-	.	BOOLEAN	PowerOn
-			
-	0	4	0
-		126	3/3

Description: HMI station address

344	V24_PPI_MODEM_ACTIVE	-	-
-	.	BYTE	Immediately
-			
-	0	0	0
-		1	3/3

Description: Enable modem function

345	V24_PPI_MODEM_BAUD	-	-
-	Baud rate for modem connection	BYTE	Immediately
-			
-	0	7	5
-		9	3/3

Description: Baud rate for modem connection

346	V24_PPI_MODEM_PARITY	-	-
-	Parity for modem connection	BYTE	Immediately
-			
-	0	0	0
-		2	3/3

Description: Parity for modem connection

356	HMI_COLE_TITLE_FOCUS_FOR	-	-
-	Color setting Title line Focus window Foreground	BYTE	Immediately
-			
-	-	15	0
-		15	2/3

Description: Color setting Title line Focus window Foreground

357	HMI_COLE_TITLE_FOCUS_BACK	-	-
-	Color setting Title line Focus window Background	BYTE	Immediately
-			
-	-	2	0
-		15	2/3

Description: Color setting Title line Focus window Background

360	SPINDEL_LOAD_DISP1	-	-
-	Switch on spindle 1 utilization display	BOOLEAN	Immediately
-			
-	-	0	0
-		1	3/3

Description: Switch on spindle 1 utilization display

Display machine data

361	USER_MEAS_TOOL_CHANGE	-	-		
-	Input enable for T/D no. in tool measuring window	BYTE	Immediately		
-					
-	-	0	0	1	3/3

Description: 0: Input of T/D no. disabled
1: Input of T/D no. enabled

362	SPINDLE_LOAD_DISP2	-	-		
-	Switch on spindle 2 utilization display	BOOLEAN	Immediately		
-					
-	-	1	0	1	3/3

Description: Switch on spindle 2 utilization display

363	SPINDLE_LOAD_BAR_LIM2	-	-		
-	Utilization display spindle limit value 2	BOOLEAN	Immediately		
-					
-	-	100	0	9999999	2/2

Description: Utilization display spindle limit value 2

364	SPINDLE_LOAD_BAR_LIM3	-	-		
-	Utilization display spindle limit value 3	BOOLEAN	Immediately		
-					
-	-	100	0	9999999	2/2

Description: Utilization display spindle limit value 3

365	SPINDEL_LOAD_BAR_MAX	-	-		
-	Utilization display spindle maximum	BOOLEAN	Immediately		
-					
-	-	120	0	120	2/2

Description: Utilization display spindle maximum

366	SPINDEL_LOAD_BAR_COL1	-	-		
-	Color utilization display spindle area 1	BYTE	Immediately		
-					
-	-	10	0	15	3/3

Description: Color utilization display spindle area 1

367	SPINDLE_LOAD_BAR_COL2	-	-		
-	Color utilization display spindle area 2	BYTE	Immediately		
-					
-	-	9	0	15	3/3

Description: Color utilization display spindle area 2

368	SPINDLE_LOAD_BAR_COL3	-	-		
-	Color utilization display spindle area 3	BYTE	Immediately		
-					
-	-	9	0	15	3/3

Description: Color utilization display spindle area 3

Display machine data

369	PROBE_MODE	-	-		
-	Type of measuring system: 1: probe, 2: opt. measuring procedure	BOOLEAN	Immediately		
-					
-	-	1	0	2	3/3

Description: Type of measuring system: 1: probe, 2: opt. measuring procedure

370	TOOL_REF_PROBE_AXIS1	-	-		
-	Absolute position probe X	DOUBLE	Immediately		
-					
-	-	0	-999999.999	999999.999	2/2

Description: Absolute position probe X

371	TOOL_REF_PROBE_AXIS2	-	-		
-	Absolute position probe Y	DOUBLE	Immediately		
-					
-	-	0	-999999.999	999999.999	2/2

Description: Absolute position probe Y

372	TOOL_REF_PROBE_AXIS3	-	-		
-	Absolute position probe 3	DOUBLE	Immediately		
-					
-	-	9	-999999.999	999999.999	2/2

Description: Absolute position probe Z

373	MEAS_SAVE_POS_LENGTH2	-	-		
-	Switch on Measure tool SK "Save Pos" for all values	BYTE	Immediately		
-					
-	-	0	0	1	2/2

Description: Controls softkey 'Save Pos' for the function 'Measure tool manually':
 0: SK 'Save Pos' is only active when measuring length 1
 1: SK 'Save Pos' is active in general

374	TOOL_WEAR_LIMIT_VALUE	-	-		
-	Limit value wear control on input	DOUBLE	Immediately		
-					
-	-	9.999	0	9.999	2/2

Description: Limit value wear control on input

375	USER_CLASS_READ_CUSS_DIR	-	-		
-	Read user cycles protection level	BYTE	Immediately		
-					
-	0	7	0	7	0/0

Description: Protection level User cycles for reading

376	USER_CLASS_WRITE_CUS_DIR	-	-		
-	Write user cycles protection level	BYTE	Immediately		
-					
-	0	2	0	7	3/3

Description: Protection level User cycles for writing

Display machine data

377	USER_CLASS_WRITE_TO_MON_DAT	-	-
-	Tool monitoring protection level	BYTE	Immediately
-			
-	0	3	0
			7
			3/2

Description: Tool monitoring protection level

378	USER_CLASS_LADDER_VIEW	-	-
-	Select User Ladder View protection level	BYTE	Immediately
-			
-	0	2	0
			7
			2/2

Description: Select User Ladder View protection level

379	SPINDLE_DISP_MODE	-	-
-	0: Standard Mode; spindle speed display 1: Constant cutting speed	BYTE	Immediately
-			
-	0	0	0
			2
			3/3

Description: 0: Standard Mode; spindle speed display
1: Constant cutting speed display when G96 is set
2: Mixed display

383	V24_PPI_ADDR_DRV1	-	-
-	Station address Drives	BYTE	PowerOn
-			
-	0	5	0
			126
			3/3

Description: Station address Drives

384	WHEEL_TYPE_MASK	-	-
-	Foreground language	DWORD	Immediately
-			
-	0	0xFFFF	1
			0xFFFF
			2/2

Description: Configuration of selectable wheel types
Bit0: free contour
Bit1: straight without relief cut
Bit2: straight with relief cut
Bit3: bevelled left
Bit4: bevelled right
Bit5: straight profile roller table
Bit6: straight profile roller head

385	DRESSER_FUNCTION_MASK	-	-
-	--	DWORD	Immediately
-			
-	-	7	1
			7
			2/2

Description: Defines the number of dressers. Bit0 = dresser1; bit1 = dresser2;
bit3 = dresser3

Display machine data

386	USER_CLASS_WRITE_CMA_DIR	-	-		
-	--	BYTE	Immediately		
-					
-	-	7	1	7	2/2

Description: Defines the access level for the CMA directory in the NCK

387	GRAPHIC_MIN_X	-	-		
mm	--	DOUBLE	Immediately		
-					
-	-	-999.999000	-99999999.999	99999999.999	7/2

Description: MM Plus

388	GRAPHIC_MAX_X	-	-		
mm	--	DOUBLE	Immediately		
-					
-	-	999.999000	-99999999.999	99999999.999	7/2

Description: MM Plus

389	GRAPHIC_MIN_Y	-	-		
mm	--	DOUBLE	Immediately		
-					
-	-	-999.999000	-99999999.999	99999999.999	7/2

Description: MM Plus

390	GRAPHIC_MAX_Y	-	-		
mm	--	DOUBLE	Immediately		
-					
-	-	999.999000	-99999999.999	99999999.999	7/2

Description: MM Plus

391	DISPLAY_MODE_INDEXING_AXIS	-	-		
-	--	DWORD	Immediately		
-					
-	-	0	0	1	7/2

Description: Defines the display format of an indexing axis. 0 = indexing position; 1 = type-spec. actual value

392	USER_CLASS_WRITE_LOC_NO	-	-		
-	--	BYTE	Immediately		
-					
-	-	3	0	7	3/2

Description: Defines the access authorization for writing the location number in the tool list

393	DISPLAY_TOLI_H_NO	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	0	0	1	3/3

Description: Controls the display of the H number in the tool list

394	DISPLAY_TOLI_SISTER_TOOL	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	0	0	1	3/3

Description: Controls the display of the replacement tool in the tool list

395	COL_OVERSIZE_TYPE_CHECKBOX	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	1	0	1	3/2

Description: Check box in tool list

398	CUTEDGE_PARAM_CHECK_ON	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	0	0	1	3/3

Description: -

399	SUBPRESS_STOPPER_ALARM	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	0	0	1	3/2

Description: MM Plus

400	USER_MANUAL_MA_TOOL_CHANGE	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	0	0	1	3/2

Description: MM Plus

401	USER_MANUAL_MA_SHOW_PAGE_NO	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	1	0	1	3/2

Description: MM Plus

2.2 General machine data

Number	Identifier			Display filters	Reference
Unit	Name			Data type	Active
Attributes					
System	Dimension	Default value	Minimum value	Maximum value	Protection

Description: Description

1088	ASSIGN_SPIN_TO_WP_SPIN1			-	-
-	--			DWORD	Immediately
-					
-	-	1	0	3	3/3

Description: Assignment of a spindle number to the 1st tool spindle in the display of the machine main screen

1089	ASSIGN_SPIN_TO_WP_SPIN2			-	-
-	--			DWORD	Immediately
-					
-	-	2	0	3	3/3

Description: Assignment of a spindle number to the 2nd tool spindle in the display of the machine main screen

1090	OSCILATE_FUNCTION_MASK			-	-
-	--			DWORD	Immediately
-					
-	-	4095	0	0xFFFF	2/2

Description: Mask for oscillator function
 Bit0: no function
 Bit1: infeed X axis no oscillation
 Bit2: infeed Y axis no oscillation
 Bit3: infeed Z axis no oscillation
 Bit4: infeed X axis oscillation Y/Z axes
 Bit5: infeed Y axis oscillation X axis
 Bit6: infeed Z axis oscillation X axis
 Bit7: infeed X axis oscillation Y axis
 Bit8: infeed Y axis oscillation X/Z axis
 Bit9: infeed Z axis oscillation Y axis
 Bit10: infeed X axis oscillation Z axis
 Bit11: infeed Y axis oscillation Z axis
 Bit12: infeed Z axis oscillation X/Y axis

1091	SINAMICS_IBN_TIMEOUT_VALUE			-	-
-	--			DWORD	Immediately
-					
-	-	230	0	1000	2/2

Description: Defines the wait time on read-in of the parameters for all SINAMICS devices during commissioning

General machine data

1092	MAX_SPINDEL_SPEED_MANUAL_MA	-	-		
-	--	DOUBLE	Immediately		
-					
-	-	99999.00000	0	99999.00000	2/2

Description: Input limit spindle speed MM+

1093	MAX_SPEED_G96_MANUAL_MA	-	-		
-	--	DOUBLE	Immediately		
-					
-	-	99999.00000	0	99999.00000	2/2

Description: Input limit cutting meter MM+

1094	MAX_SPEED_G94_MANUAL_MA	-	-		
-	--	DOUBLE	Immediately		
-					
-	-	99999.00000	0	99999.00000	2/2

Description: Input limit time feed MM+

1095	MAX_SPEED_G95_MANUAL_MA	-	-		
-	--	DOUBLE	Immediately		
-					
-	-	99999.00000	0	99999.00000	2/2

Description: Input limit rotation feed MM+

1096	MAX_NUM_CYCLE_MANUAL_MA	-	-		
-	--	DWORD	Immediately		
-					
-	-	9	1	9	3/3

Description: Number of managed masks per cycle in manual mode of MM+

1097	MAX_NUM_CUTT_EDGE_MANUAL_MA	-	-		
-	--	DWORD	Immediately		
-					
-	-	9	1	9	3/3

Description: Number of managed cutting edges in MM+

1098	INVERT_SPIN_ICON_MANUAL_MA	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	1	0	1	3/2

Description: The direction of spindle rotation is displayed inverted.

1099	USE_FIXPOINT_MANUAL_MA	-	-		
-	--	BOOLEAN	Immediately		
-					
-	-	1	0	1	3/3

Description: Tool change increment MM+:
The selection field for fixed-point approach is selected or deselected by default

General machine data

1100	MEAS_SPIN_ACTIV_MANUAL_MA	-	-
-	--	BOOLEAN	Immediately
-			
-	-	1	0
-	-	1	3/2

Description: If the value is 1, the tool offset data can be measured in the X direction with rotating spindle.

1101	USER_TOOL_CHG_MANUAL_MA	-	-
-	--	BOOLEAN	Immediately
-			
-	-	1	0
-	-	1	3/3

Description: Tool change increment MM+:
If the value is 1, input of a tool or cutting edge number is permissible.

1102	CYC_TOOLNO_EDTMOD_MANUAL_MA	-	-
-	--	BOOLEAN	Immediately
-			
-	-	1	0
-	-	1	3/3

Description: Input mode T no. in the cycle masks MM+:
0: No T no. input by the operator. T no. is automatically created from SGUD.
>=1: T no. input by the operator

1103	TAPPINGCYCLE_MODE_MANUAL_MA	-	-
-	--	BOOLEAN	Immediately
-			
-	-	1	0
-	-	1	3/3

Description: Preselection of cycle type on tapping MM+:

	With compensating chuck	without compensating chuck
0	CYCLE840	CYCLE840
1	CYCLE840	CYCLE84
>=2	CYCLE840	not possible

1104	TOOL_CHG_MANUALMODE_MA	-	-
-	--	BOOLEAN	Immediately
-			
-	-	1	0
-	-	1	3/3

Description: Tool change enable in the JOG function of the MM+

1105	STARTUP_WITH_MMP	-	-
-	--	BOOLEAN	PowerOn
-			
-	-	1	0
-	-	1	3/3

Description: Automatic start of MM+ after power ON

1106	SOFTKEY_CENTRE_ADJ			-	-
-	--			BOOLEAN	PowerOn
-					
-	-	1	0	1	3/3

Description: Text on the softkeys is justified

1107	AX_LOAD_DISPL			-	-
-	--			BOOLEAN	Immediately
-					
-	-	1	0	1	3/3

Description: Activate axis utilization display

General machine data

2.2.1 System settings

10000	AXCONF_MACHAX_NAME_TAB			N01, N11	K2,F1,G2,F2,K5, M1
-	Machine axis name			STRING	PowerOn
-					
802d-cu3	6	X1,Y1,Z1,SP,A1,PLC X1...	-	-	2/2
802d-ng2	6	X1,Z1,C1,A1,B1,PLC X1...	-	-	2/2
802d-ng3	6	X1,Z1,C1,A1,B1,PLC X1...	-	-	2/2
802d-tm1	4	X1,Y1,Z1,SP	-	-	2/2
802d-tm2	6	X1,Y1,Z1,SP,A1,PLC X1...	-	-	2/2
802d-tm3	6	X1,Y1,Z1,SP,A1,PLC X1...	-	-	2/2

Description: The name of the machine axis is entered in this MD.
The use of an axis identifier consisting of a valid address letter (A, B, C, Q, U, V, W, X, Y, Z), followed by an optional numerical extension (1-99) should be used with priority.
- The selected machine axis identifier must have a different name from the geometry axes (X, Y, Z) and further channel axes (MD 20080: AXCONF_CHANAX_NAME_TAB) - as long as a transformation (e.g.: TRANSMITT) is scheduled.
Note: Transformations are not available with SINUMERIK 802D in the SW version P1.
- A "free" entered machine axis identifier (axis name) must not have the name, address, key word or predefined identifier that has already been used in the control or has been reserved for some other functionality (e.g.: SPOS, DIAMON,...).
Note: Not all the functionalities of the control system SINUMERIK have been documented under the 802D. A free axis name can, therefore, be used only conditionally.
Related to:
MD20060 \$MC_AXCONF_GEOAX_NAME_TAB (geometry axis name)
MD20080 \$MC_AXCONF_CHANAX_NAME_TAB (channel axis name)

10010	ASSIGN_CHAN_TO_MODE_GROUP			N01, N02, N11	K1, K5
-	Channel valid in mode group			DWORD	PowerOn
-					
-	1	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0

Description: This MD assigns the channel to a mode group
Entry value 1 => Assigned to 1st mode group
Entry value 2 => Assigned to 2nd mode group
etc.
From software version 4, it is permissible not to assign a mode group number to individual channels.
Channel gaps are allowed, in order to favor uniform configuration in similar types of machines. In this case, the number 0 is assigned to the channel instead of assigning a mode group number equal to or greater than 1. The channel is not activated, however it is handled like an active channel when counting the channels.
E.g.
ASSIGN_CHAN_TO_MODE_GROUP[0] = 1
ASSIGN_CHAN_TO_MODE_GROUP[1] = 1
ASSIGN_CHAN_TO_MODE_GROUP[2] = 0 ; gap
ASSIGN_CHAN_TO_MODE_GROUP[3] = 1
Application example:
Select desired channel via HMI and enter with MD10010
\$MN_ASSIGN_CHAN_TO_MODE_GROUP = 1.
Note:
This MD must still be entered even when only one mode group is present.

10050	SYSCLOCK_CYCLE_TIME			N01, N05, N11, -	G3, G2, R1
s	System clock cycle			DOUBLE	PowerOn
SFCO					
-	-	0.0015	0.0005	0.032	0/0

Description: Basic cycle time of the system software
The cycle times settings of cyclical tasks (position controller/IPO) are multiples of this basic cycle. Apart from special applications in which POSCTRL_SYSCLOCK_TIME_RATIO is set greater than 1, the basic cycle corresponds to the position controller cycle.
For PROFIBUS/PROFINET:
In the case of systems with a PROFIBUS DP connection, this MD corresponds to the PROFIBUS DP cycle time. This time is read from the configuration file (SDB-Type-2000) during startup and written to the MD.
This MD can only be changed via the configuration file.
Note:
Reducing this MD can result in an automatic correction of POSCTRL_CYCLE_DELAY that cannot be undone by a subsequent increase!

General machine data

Details:

The basic cycle is incremented in multiples (SYSCLOCK_SAMPL_TIME_RATIO) of units of the measured value sampling cycle. During system startup, the entered value is automatically rounded up to a multiple of this incrementation.

Note:

Discrete timer division ratios can give rise to the entered value producing a value that is not an integer after a Power OFF/ON.

For example:

Input = 0.005s
after Power OFF/ON = 0.00499840

or

Input = 0.006s
after Power OFF/ON = 0.0060032

10059	PROFIBUS_ALARM_MARKER			N05	G3
-	PROFIBUS/PROFINET alarm flag (internal only)			BYTE	PowerOn
NBUP, NDLD					
-	-	0	-	-	0/0

Description: PROFIBUS/PROFINET alarm flag:

In this machine data, alarm requests for the PROFIBUS/PROFINET layer are stored beyond a reboot.

If conflicts arise between machine data 10050, 10060, 10070 and the data in the SDB on startup, the machine data are matched according to SDB, and an alarm is output on the next start up. These alarm requests are stored here.

Related to:

MD10050 \$MN_SYSCLOCK_CYCLE_TIME,
MD10080 \$MN_SYSCLOCK_SAMPL_TIME_RATIO

10060	POSCTRL_SYSCLOCK_TIME_RATIO			N01, N05	G3
-	Factor for position control cycle			DWORD	PowerOn
SFCO					
-	-	2	1	31	0/0

Description: The position-control cycle is stated as a multiple of the time units of the system basic cycle SYSCLOCK_CYCLE_TIME. The regular setting is 1. The position-control cycle then corresponds to the system basic cycle SYSCLOCK_CYCLE_TIME. Setting values > 1 costs computing time for the operating system to calculate the additional timer interrupts, and should therefore only be used in those cases in which there is a task in the system that is to run faster than the position-control cycle.

For PROFIBUS/PROFINET:
In the case of systems with a PROFIBUS DP connection, this MD represents the ratio between the PROFIBUS DP cycle and the position controller cycle.

10061	POSCTRL_CYCLE_TIME	N01, N05	G3
-	Position control cycle	DOUBLE	PowerOn
-			
-	-	0.0	-
-	-	-	0/0

Description: Position controller cycle time:
 Display of the position controller cycle time (not modifiable !).
 It is compiled internally from the machine data
 SYSCLOCK_CYCLE_TIME and POSCTRL_SYSCLOCK_TIME_RATIO.

10062	POSCTRL_CYCLE_DELAY	N01, N05	G3
s	Position control cycle offset	DOUBLE	PowerOn
-			
-	-	0.0	0.000
-	-	0.008	0/0

Description: For PROFIdrive only:
 Only relevant to operation with PROFIBUS drives.
 Position controller cycle offset in relation to the PROFIBUS DP cycle.
 Offsets that exceed the set DP cycle or are smaller than the maximum Tdx, are automatically corrected to a substitute value half the size of the DP cycle.
 MD10062 \$MN_POSCTRL_CYCLE_DELAY > 0:Default for position controller offset
 MD10062 \$MN_POSCTRL_CYCLE_DELAY = 0:Automatic determination of the position controller offset with max. Tdx from STEP7 project
 Tdx_max is determined through all equidistant buses.
 The actually active offset value is displayed in MD 10063[1].
 Note:
 MD10062 \$MN_POSCTRL_CYCLE_DELAY > 0 can reduce MD10050 \$MN_SYSCLOCK_CYCLE_TIME to the automatic correction of this MD that cannot be undone by a subsequent increase.
 Recommendation:
 In this case set the original value or default value once again.

10063	POSCTRL_CYCLE_DIAGNOSIS	EXP, N01, N05	-
s	Active timing	DOUBLE	PowerOn
-			
-	3	0.0,0.0,0.0	-
-	-	-	0/RO

Description: Diagnostic data related to the PROFIBUS/PROFINET cycle.
 [0]: Latest date at which the actual values must be available (Tdx)
 [1]: Actually active position controller cycle offset (Tm)
 [2]: Latest date at which the setpoints were output by the position controller
 Diagnostic data are initialized with ZERO with each NCK power up

General machine data

10070	IPO_SYSCLOCK_TIME_RATIO			N01, N05, N11, -	G3,R1
-	Factor for interpolation cycle			DWORD	PowerOn
SFCO					
802d-cu3	-	6	1	100	0/0
802d-ng2	-	6	1	100	0/0
802d-ng3	-	6	1	100	0/0
802d-tm1	-	8	1	100	0/0
802d-tm2	-	6	1	100	0/0
802d-tm3	-	6	1	100	0/0

Description: The interpolator cycle is stated as a multiple of the time units of the system basic cycle SYSCLOCK_CYCLE_TIME.
Only integer multiples of the position control cycle can be set (set in POSCTRL_SYSCLOCK_TIME_RATIO). Values that are not an integer multiple of the position control cycle are automatically increased to the next integer multiple of the position control cycle before they become active (on next power up).
This is accompanied by alarm 4102 "IPO cycle increased to [] ms".

10071	IPO_CYCLE_TIME			N01, N05, N11, -	G3
-	Interpolator cycle			DOUBLE	PowerOn
-					
-	-	0.0	-	-	0/0

Description: Interpolation time
Display of the interpolator cycle time (not modifiable !).
It is compiled internally from the machine data SYSCLOCK_CYCLE_TIME and IPO_SYSCLOCK_TIME_RATIO.

10073	COM_IPO_STRATEGY			EXP	-
-	Strategy for activation of communication.			DWORD	PowerOn
-					
-	-	0x0F	1	0x7F	0/0

Description: The call frequency of the communication task can be controlled by MD10072 \$MN_COM_IPO_TIME_RATIO.
The communication tasks are activated cyclically. That has some advantages and disadvantages:
Advantages:

- The communication behavior of the NCK is deterministic in relation to the communication task.

Disadvantages:

- The communication task can lead to level overflows.
- In an unloaded NCK system, the speed of communication is determined by MD10072 \$MN_COM_IPO_TIME_RATIO. As this machine data is power ON, it cannot adapt to the current NCK operating mode. A typical problem is that uploading a part program can take a very long time on an unloaded NCK. In this case, the bottleneck is the communication task that only progresses in the relation defined by machine data COM_IPO_TIME_RATIO.

This machine data has been introduced to eliminate the above-mentioned disadvantages. It makes the times at which the communication software is activated controllable. The machine data is bit-coded. The bits have the following meanings:

Bit 0:

The communication software is calculated cyclically

Bit 1:

The level time overflow monitoring is switched off for the cyclical communication task. This bit is only practical if bit zero is set. The task is implemented in a non-cyclical level that has a higher priority than the preparation/communication level. The communication task makes a delay of the time defined in COM_IPO_TIME_RATIO after each cycle.

Bit 2:

The communication software is calculated at the start of the task which the domain services accept.

Bit 3:

The communication software is calculated at the end of the task which the domain services accept.

Bit 4:

The communication software is calculated at the start of the task which the domain services accept if a PDU upload has arrived. This bit is only useful if bit 2 is set.

Bit 5:

The communication software is calculated at the end of the task which the domain services accept if a PDU upload has arrived. This bit is only useful if bit 3 is set.

This machine data is only active in systems containing the Softbus communication software. This is in P6 the 840Di with MCI2 software and the solution line systems for P7.

The default value is 0x0F. This means that the COS is calculated prior to and after communication in order to minimize latencies.

10074	PLC_IPO_TIME_RATIO	N01, N05	-
-	Factor of PLC task for the main run.	DWORD	PowerOn
-			
-	-	1	1
		50	2/2

Description:

Division ratio between IPO and PLC tasks.

A value of 2 means, e. g. that the PLC task is only processed in every second IPO cycle. The PLC cycle time is then 2 IPO cycle times. This makes more runtime available for the other tasks.

The PLC run time must not exceed this PLC cycle time, otherwise an alarm with PLC STOP is triggered.

10075	PLC_CYCLE_TIME	N01, N05	-
-	PLC cycle time	DOUBLE	PowerOn
-			
-	-	0.0	-
		-	1/RO

Description:

Display of the PLC cycle time (not modifiable !)

It is compiled internally from MD10071 \$MN_IPO_CYCLE_TIME and MD10074 \$MN_PLC_IPO_TIME_RATIO.

General machine data

10080	SYSCLOCK_SAMPL_TIME_RATIO			EXP, N01	G3
-	Division ratio for actual value recording cycle time			DWORD	PowerOn
-					
-	-	1	1	31	-1/0

Description: For SIMODRIVE611D only:
SYSCLOCK_SAMPL_TIME_RATIO sets the division factor of a cycle divider that is arranged as hardware between the cycle of the measured value sampling and the interrupt controller.

- The sampler cycle (upstream of the divider) taps the actual value inputs and triggers the digital analog converter.
- The output of the divider generates a timer interrupt as the basic cycle of the operating system (SYSCLOCK_CYCLE_TIME).

A value greater than 1 may only be entered in SYSCLOCK_SAMPL_TIME_RATIO in exceptional cases:
Values > 1 increase the size of the increments in which the basic cycle can be set. (see SYSCLOCK_CYCLE_TIME)
Special cases:

1. When using the conventional drive interface (analog speed interface), the divider is set according to the following criteria:
It is advantageous for the control to keep the dead time between reading in the current axis actual positions and outputting the corresponding setpoint values as short as possible. The delay time of the position controller output can be set in fractions of the position control cycle time by setting SYSCLOCK_SAMPL_TIME_RATIO to values > 1. The difficulty with this is reliably determining the time after which the position controller delivers valid results. Multiple triggering of the input/output hardware during one position controller cycle could also be achieved by setting POSCTRL_SYSCLOCK_TIME_RATIO to values > 1. However, the disadvantage with this is the unnecessarily high rate of generating timer interrupts for the operating system. This procedure is not recommended.
2. When using the digital drive controller the division factor is set automatically. The sample cycle time is then set as the 1, 2, 3, ... 8-fold of 125µs.

10088	REBOOT_DELAY_TIME			EXP	K3
s	Reboot delay			DOUBLE	Immediately
-					
-	-	0.2	0.0	1.0	2/2

Description: The reboot following PI "_N_IBN_SS" is delayed by the time MD10088 \$MN_REBOOT_DELAY_TIME.
The suppressable NOREADY alarm 2900 is triggered immediately by PI "_N_IBN_SS".

If MD10088 \$MN_REBOOT_DELAY_TIME falls below the MD36620 \$MA_SERVO_DISABLE_DELAY_TIME value of an axis, the axis is decelerated during MD10088 \$MN_REBOOT_DELAY_TIME. The servo enable is then disabled. That is, the full MD36620 \$MA_SERVO_DISABLE_DELAY_TIME is NOT waited.

Alarm 2900 does not become active if MD10088 \$MN_REBOOT_DELAY_TIME = 0.0, and there is no reboot delay.

The NCK waits beyond the stated delay time until the PI has been able to be acknowledged to the HMI. The total delay time may be as much as 2 s.

10100	PLC_CYCLIC_TIMEOUT		EXP, N01, N06	P3
s	Maximum PLC cycle time		DOUBLE	PowerOn
-				
-	-	0.1	-	0/0

Description: Cyclical PLC monitoring time.
This machine data specifies the maximum monitoring time after which the PLC must have incremented its sign of life. Incrementing takes place within the interpolation cycles.

10110	PLC_CYCLE_TIME_AVERAGE		N01, N07	B1
s	Average PLC acknowledgement time		DOUBLE	PowerOn
-				
802d-cu3	-	0.018	-	0/0
802d-ng2	-	0.018	-	0/0
802d-ng3	-	0.018	-	0/0
802d-tm1	-	0.024	-	0/0
802d-tm2	-	0.018	-	0/0
802d-tm3	-	0.018	-	0/0

Description: Time information for the CNC about the OB1 cycle time. During this cycle time, it is guaranteed that the auxiliary functions will be acknowledged.
By means of the MD, the status transitions:
"channel operates/ channel in RESET/ channel failure --> channel interrupted" can be delayed for the PLC in case of a RESET. With the output "channel interrupted", the NCK waits at least the time indicated in the MD + 1 IPO cycle.
With the time indication, the path feedrate during path control operation in case of an auxiliary function output during motion is controlled in a way to ensure that the minimum travel time corresponds to the time information. This ensures a uniform velocity behavior which is not disturbed by waiting for the PLC acknowledgement. The internal incrementation is performed in the interpolation cycle.
For the auxiliary function output in the continuous-path mode, the MD is also relevant for the FM357 and 802/802s systems. With SW 5.1 and higher, the other systems are parameterized directly via the PLC.

General machine data

10120	PLC_RUNNINGUP_TIMEOUT	EXP, N01, N06	H2
s	Monitoring time for PLC power up	DOUBLE	PowerOn
-			
-	-	5.0	-
-	-	-	0/0

Description: Power up PLC monitoring time
This machine data specifies the maximum monitoring time within which the PLC must report its first sign of life to the NCK. During the power up routine, the monitoring function has the task of verifying that the PLC has properly assumed cyclic operation. If the PLC does not issue a message within this time, the NC issues an alarm message when it powers up; NC-READY is not set. The incrementing takes place within the interpolation cycles.

10130	TIME_LIMIT_NETTO_COM_TASK	EXP, N01	OEM
s	Runtime limitation of communication to HMI	DOUBLE	PowerOn
-			
-	-	0.005	.001
-	-	0.100	0/0

Description: Net runtime limit of the communication sub-task
Preprocessing and the communications task share the time that is not used up by the cyclical tasks. Of this remaining time, communication uses the set time at the expense of preprocessing time; in other words, the net block cycle time is increased by the set value. This machine data serves the purpose of optimizing the block cycle time with the function "Reloading part programs block-by-block".

10131	SUPPRESS_SCREEN_REFRESH	EXP	A2
-	Screen refresh response under overload	BYTE	PowerOn
-			
-	-	2	0
-	-	2	1/1

Description: There are part programs in which the main run (HL) has to wait until the pre-processing (VL) makes new blocks available. The pre-processing and display update compete for NC computing time. The MD defines how the NC is to respond when the pre-processing is too slow.
0: When the VL of a channel is too slow, the updating of the display is suppressed in all channels.
1: When the VL of a channel is too slow, the updating of the display is suppressed only in the time-critical channels in order to gain time for the pre-processing.
2: The updating of the display is never suppressed.

10134	MM_NUM_MMC_UNITS	EXP, N01, N02	B3
-	Possible number of simultaneous HMI communication partners	DWORD	PowerOn
-			
-	-	6	1
-		10	0/0

Description: Possible number of simultaneous HMI communication partners with which the NCU can exchange data.

This value affects the number of communication orders that the NCK can manage. The higher the value, the more HMIs that can be simultaneously connected to the NCK without leading to communication problems.

DRAM is made available for this function in the NCU corresponding to the input in the machine data. The inputs for changing the memory areas have to be taken into account.

The unit of MD10134 \$MN_MM_NUM_MMC_UNITS is a "resource unit". A standard OP030 needs 1 resource unit, an HMI100/103 needs 2. OEM variants may need more or less resources.

- If the value is set lower than would be needed for the number of connected HMIs, this is not inevitably problematical. Actions may not function sporadically during multiple, simultaneous, communication-intensive operations (e.g. loading a program): Alarm 5000 is displayed. The operation then has to be repeated.
- If the value is set higher, more dynamic memory is occupied than necessary. The value should be reduced appropriately if the memory is required for other purposes.

References: /FB/, S7, "Memory Configuration"

10136	DISPLAY_MODE_POSITION	N01	-
-	Display mode for actual position in the WCS	DWORD	Reset
-			
-	-	0	0
-		1	1/1

Description: Defines how the position and the distance to go are displayed in the WCS.

0: Display as in software version 5 and earlier

1: At end of block, the actual value display is in principle the same as the programmed end point, irrespective of where the machine actually is (e.g. as a result of the tool radius compensation). The distance to go is the same as the actual distance to be traversed. This means that the displayed actual position has to be the same as the displayed end position minus the distance to go, irrespective of the actual machine position. If the block end points are changed by chamfers, radii, contour definitions, splines or SAR in comparison to the NC program, then these changes are reflected in the display as if they had been programmed. This does not apply to changes resulting from tool radius compensation or smoothing.

General machine data

10160	PREP_COM_TASK_CYCLE_RATIO	EXP, N01	ECO
-	Factor for communication with HMI	DWORD	PowerOn
-			
-	-	3	1
		50	0/0

Description: This machine data specifies the division ratio used for activating the communication task in the non-cyclic time level. This allows the time share of preparation in the non-cyclic time level to be increased, which reduces block cycle times. External communication (file transfer) is slowed down in particular during program execution (block reload).

10161	COM_CONFIGURATION	EXP, N01	-
-	Configuration of communication	DWORD	PowerOn
-			
-	8	5, 5, 18, 1, 16, 8, 18, 18	-
		-	0/0

Description: Values 1-3 define the maximum number of PDUs that are accepted in one pass.

Value 0 stands for infinite, i.e. all present jobs are executed immediately. These three values become active after PowerOn.

1st value: max. number of variable job PDUs executed per pass.

2nd value: max. number of PI job PDUs executed per pass.

3rd value: max. number of domain job PDUs executed per pass.

Values 4-8 define the credit assignment for optimized download.

4th value: number of PDUs that are assigned as credit at the begin of acknowledgement under opt. domain service (here, the file header and therefore the file on NCK are still unknown)

5th value: number of PDUs that will be requested by default under opt. domain service, if there is no explicit memory limit for the file

6th value: min. number of PDUs that are requested with the data request message (so that data request messages are not displayed again and again)

7th value: max. number of PDUs that are requested with the data request message (max. value is 255, as the log cannot handle more than that!)

8th value: max. number of PDUs that may be present in total

10170	PREP_PLCBG_TASK_CYCLE_RATIO	EXP, N01	ECO
-	Factor for communication with SW PLC2xx	DWORD	PowerOn
-			
-	-	1	1
		50	0/0

Description: This machine data specifies the division ratio used for activation of the background task of the software PLC2xx in the non-cyclic time level.

As this cycle should be executed as often as possible (once in each PLC cycle), a ratio to the PREP task of 1:1 should be set. The frequency of activation depends on the computing time of the cyclic tasks (SERVO, IPO, COM, PLC) and the settings for the other subtasks (ratio to PREP, net runtime) or the utilization of the non-cyclic tasks PREP, EXCOM, DRIVE.

10171	TIME_LIMIT_NETTO_PLCBG_TASK	EXP, N01	ECO
s	Runtime limitation of communication to SW PLC2xx	DOUBLE	PowerOn
-			
-	-	0.005	.001
		0.100	0/0

Description: Net runtime limit of the Soft PLC2xx background subtask
The machine data determines the minimum computing time assigned to the SW PLC2xx background task, if activated, as a whole (interrupted by the cyclic tasks and Linux)
If the task does not give up control on its own (as there is nothing to do), it will disable both the feed and the other subtasks for this period of time.
If there is only few computing time left, relatively long periods of time may be created this way.

10172	PLCINT_POSCTRL_TIME_RATIO	EXP, N01	ECO
-	Division ratio between servosynch. task of software PLC2xx and servotask	DWORD	PowerOn
-			
-	-	1	1
		10	0/0

Description: A cyclic task of software PLC2xx, which is implemented on the servo level of the PLC, is started in a ratio synchronously with the servo task. A ratio of 1 must be set in order to achieve a quick reaction to external events.

10173	TIME_LIMIT_PLCINT_TASK	EXP, N01	ECO
s	Runtime limitation of servosynch. task of software PLC2xx	DOUBLE	PowerOn
-			
-	-	0.00005	0.00001
		0.0001	0/0

Description: Runtime limit of the servosynchronous soft PLC2xx interrupt task
This machine data defines the maximum amount of computing time given at any one time to the servosynchronous task of the software PLC2xx to execute the PLC user program on the PLC servo interrupt level.

10174	TIME_LIMIT_PLCINT_TASK_DIAG	EXP, N01, N05	-
s	Runtimes of the servosynch. task of software PLC2xx with timeout	DOUBLE	PowerOn
-			
-	3	0.0,0.0,0.0	-
		-	0/RO

Description: Diagnostic data of the runtimes of the servosynchronous task of the SW-PLC2xx in the case of a time-out.
[0]: Current runtime that has led to a time-out
[1]: Minimum runtime so far measured
[2]: Maximum runtime so far measured
Diagnostic data are initialized with ZERO at each NCK power up

General machine data

10185	NCK_PCOS_TIME_RATIO			EXP, N01	-
-	Processing time share NCK			DWORD	PowerOn
-					
-	-	65	10	90	0/0

Description: This machine data defines the maximum proportion of CPU time given to the NCK in a PC-based system. The division specified by the user is implemented as well as possible.

When implementing the specification, the system takes into account limiting values for the absolute proportion of CPU time that must not be over or undershot.

Adaptations are made without generating an alarm.

10192	GEAR_CHANGE_WAIT_TIME			N01	S1
s	Gear stage change waiting time			DOUBLE	PowerOn
-					
-	-	10.0	0.0	1.0e5	1/1

Description: External events which trigger reorganization, wait for the end of a gear stage change. GEAR_CHANGE_WAIT_TIME now determines the waiting time for the gear stage change. Time unit in seconds.

When this time expires without the gear stage change having been terminated, the NCK reacts with an alarm.

Among others, the following events will cause reorganization:

- User ASUB
- Mode change
- Delete distance-to-go
- Axis replacement
- Activate user data

10200	INT_INCR_PER_MM			N01	G2,K3
-	Calculation resolution for linear positions			DOUBLE	PowerOn
-					
802d-cu3	-	1000.	1.0	1.0e9	2/2
802d-ng2	-	100000.	1.0	1.0e9	2/2
802d-ng3	-	100000.	1.0	1.0e9	2/2
802d-tm1	-	1000.	1.0	1.0e9	2/2
802d-tm2	-	1000.	1.0	1.0e9	2/2
802d-tm3	-	1000.	1.0	1.0e9	2/2

Description: This MD defines the number of internal increments per millimeter. The accuracy of the input of linear positions is limited to the calculation accuracy by rounding the product of the programmed value and the calculation accuracy to an integer.

In order to keep the executed rounding easily understandable it is useful to use powers of 10 for the calculation accuracy.

General machine data

10210	INT_INCR_PER_DEG			N01	G2,K3,R2
-	Calculation resolution for angular positions			DOUBLE	PowerOn
-					
802d-cu3	-	1000.0	1.0	1.0e9	2/2
802d-ng2	-	100000.	1.0	1.0e9	2/2
802d-ng3	-	100000.	1.0	1.0e9	2/2
802d-tm1	-	1000.0	1.0	1.0e9	2/2
802d-tm2	-	1000.0	1.0	1.0e9	2/2
802d-tm3	-	1000.0	1.0	1.0e9	2/2

Description: This MD defines the number of internal increments per degree. The accuracy of the input of angular positions is limited to the calculation accuracy by rounding the product of the programmed value and the calculation accuracy to an integer. In order to keep the executed rounding easily understandable it is useful to use powers of 10 for the calculation accuracy.

10220	SCALING_USER_DEF_MASK			EXP, N01	G2
-	Activation of scaling factors			DWORD	PowerOn
SCAL					
-	-	0x200	0	0x3FFF	0/0

Description: Bit mask for selecting the base values for the data (e.g. machine and setting data) that have a physical unit, they are interpreted in the default units shown below according to the basic system (metric/inch). If other input/output units are to be selected for individual physical units then these are activated with the scale factors associated with this machine data (entered in MD10230 \$MN_SCALING_FACTORS_USER_DEF[n]).

This does not affect the programming of geometry and feed values.

Bit set:

Data of the assigned physical variable (see list) are scaled to the unit defined by MD10230 \$MN_SCALING_FACTORS_USER_DEF[n].

Bit not set:

Data of the assigned physical variable are scaled to the default unit shown below.

Assigned physical variable	Default units for:	
	MD10240 \$MN_SCALING_SYSTEM_IS_METRIC 1 = METRIC	0 = INCH
Bit no. (Stated as hex value)		
0 Linear position	1 mm	1 inch
1 Angular position	1 degree	1 degree
2 Linear velocity	1 mm/min	1 inch/min
3 Angular speed	1 rpm	1 rpm
4 Linear acceleration	1 m/s ²	1 inch/s ²
5 Angular acceleration	1 rev/s ²	1 rev/s ²
6 Linear jerk	1 m/s ³	1 inch/s ³
7 Angular jerk	1 rev/s ³	1 rev/s ³
8 Time	1 s	1 s
9 Position-controller servo gain	1/s	1/s
10 Revolutional feedrate	1 mm/rev	1 mm/rev
11 Compensation value linear pos.	1 mm	1 mm
12 Compensation value angular pos.	1 degree	1 degree
13 Cutting rate	1 m/min	1 feet/min

General machine data

Example:

SCALING_USER_DEF_MASK =?H3?; (Bit nos. 0 and 1 as hex values)

The scale factor defined in the associated MD10230

\$MN_SCALING_FACTORS_USER_DEF[n] is activated for linear and angular positions.

If this machine data is changed, a startup is required as otherwise the associated machine data that have physical units would be incorrectly scaled.

Proceed as follows:

- MD changed manually
First start up and then enter the associated machine data with physical units.
- MD changed via machine data file
First start up and then reload the machine data file so that the new physical units are taken into account.

If the machine data are altered, alarm 4070 "Scaling machine data altered" is output.

Application example: Input/output of linear velocities is to be in cm/min:

SCALING_USER_DEF_MASK = 0x4 (bit no. 2 as hex value)

SCALING_FACTORS_USER_DEF[2] = 0.1666666667 (10/60)

[Related to:

MD10230 \$MN_SCALING_FACTORS_USER_DEF[n] (scaling factors of the physical variables)

10230	SCALING_FACTORS_USER_DEF	EXP, N01	G2
-	Scaling factors of physical variables	DOUBLE	PowerOn
SCAL			
-	15	1.0,1.0,1.0,1.0,1.0,1.0,1e-9 1.0,1.0,1.0...	0/0

Description: The scaling factor of a physical variable that has a unit other than the default unit setting (set bit in MD10220 \$MN_SCALING_USER_DEF_MASK) is entered in this MD. The factor must refer to the unit used internally for the physical variable in question.

Index [n]	Assigned physical variable	Internal unit
0	Linear position	1 mm
1	Angular position	1 degree
2	Linear velocity	1 mm/s
3	Angular speed	1 degree/s
4	Linear acceleration	1 mm/s ²
5	Angular acceleration	1 degree/s ²
6	Linear jerk	1 mm/s ³
7	Angular jerk	1 degree/s ³
8	Time	1 s
9	Position-controller servo gain	1/s
10	Revolutional feedrate	1 mm/degree
11	Compensation value linear position	1 mm
12	Compensation value angular position	1 degree
13	Cutting rate	1 mm/s

The scaling factor is assigned to the physical variable using the index [0...12]. If this machine data is changed, a startup is required because otherwise the associated machine data that have physical units would be incorrectly scaled.

Proceed as follows:

- MD changed manually
First start up and then enter the associated machine data with physical units.
- MD changed via machine data file
First start up and then reload the machine data file so that the new physical units are taken into account.

If the machine data are altered, alarm 4070 "Scaling machine data altered" is output.

Application example(s):

Input/output of angular speeds is to be in new degree/min:
`$MN_SCALING_USER_DEF_MASK = 'H8'`; (bit no. 3 as hex value)
`$MN_SCALING_FACTORS_USER_DEF[3] = 0.01851852`; (400/360/60)
 [3]: Index for angular speed.

Related to:

MD10220 `$MN_SCALING_USER_DEF_MASK` (activation of scaling factors).

10240	SCALING_SYSTEM_IS_METRIC	N01	G2,K3,A3,S1
-	Basic system metric	BOOLEAN	PowerOn
SCAL			
-	-	TRUE	-
			2/2

Description:

The MD defines the basic system used by the control for scaling length-dependent physical variables for data input/output.

All corresponding data are stored internally in the basic units of 1 mm, 1 degree and 1 sec.

In the case of access from the interpreter (part program and download), from the operator panel (variable service) or through external communication, scaling takes place in the following units:

MD10240 `$MN_SCALING_SYSTEM_IS_METRIC = 1`: scaled in:
mm, mm/min, m/s², m/s³, mm/rev.

MD10240 `$MN_SCALING_SYSTEM_IS_METRIC = 0`: scaled in:
inch, inch/min, inch/s², inch/s³, inch/rev.

The selection of the basic system also defines the interpretation of the programmed F value for linear axes:

	metric	inch
G94	mm/min	inch/min
G95	mm/rev.	inch/rev.

If this machine data is changed, a startup is required because otherwise the associated machine data that have physical units would be incorrectly scaled.

General machine data

Proceed as follows:

- MD changed manually

First start up and then enter the associated machine data with physical units.

- MD changed via machine data file

First start up and then reload the machine data file so that the new physical units are taken into account.

If the machine data are altered, alarm 4070 "Scaling machine data altered" is output.

Application example(s):

Startup in the metric system and then change to inch system.

Special cases, errors:

The factor used for changing from 1 mm to 1 inch can be changed with MD10250 \$MN_SCALING_VALUE_INCH.

10250	SCALING_VALUE_INCH			EXP	G2
-	Conversion factor for INCH			DOUBLE	PowerOn
SCAL					
-	-	25.4	1e-9	-	0/0

Description:

The MD contains the conversion factor from metric to inch.

This factor is only active with the selection of the non-metric basic system (MD10240 \$MN_SCALING_SYSTEM_IS_METRIC = 0) in the following conversions:

- Programmed F values for linear axes
- Input/output of lengths and length-dependent data (e.g. when uploading machine data, work offsets)

Programmed geometry axis positions are converted by this factor when the measuring system programmed with G70/G71 is different from the selected basic system (SCAL-ING_SYSTEM_IS_METRIC).

Programmed synchronous axis positions are converted by the corresponding axial factors (MD31200 \$MA_SCALING_FAKTOR_G70_G71) when the measuring system programmed with G70/G71 is different from the selected basic system (MD10240 \$MN_SCALING_SYSTEM_IS_METRIC). Settings other than the default 25.4 should only be made in exceptional cases as the correct display of the unit on the operator interface depends on this value.

If this machine data is changed, a startup is required because otherwise the associated machine data that have physical units would be incorrectly scaled.

Proceed as follows:

- MD changed manually

--> Start up and then enter the associated machine data with physical units.

- MD changed via machine data file

--> Start up and then reload the machine data file so that the new physical units are taken into account.

If the machine data are altered, alarm 4070 "Scaling machine data altered" is output.

Application example(s):

This conversion factor is used if a changeover is made from metric to inch or a customized measuring system after startup. Then all the input machine data, among other things, are converted by this factor. The converted values are then given at the next read out and on the operator panel.

Related to:

MD10240 \$MN_SCALING_SYSTEM_IS_METRIC

10260	CONVERT_SCALING_SYSTEM			EXP	-
-	Enable basic system conversion			BOOLEAN	PowerOn
LINK					
-	-	TRUE	-	-	1/1

Description: Determines the handling of MD10240 \$MN_SCALING_SYSTEM_IS_METRIC.
 0: Inch/metric behavior conforms to SW1-SW4
 1: Inch/metric behavior from SW5
 Inch/metric functionality of SW5:

1. Switch over the systems of units with HMI softkey
2. New G codes G700/G710
3. Data backup with system of unit recognition INCH/METRIC
4. Automatic data conversion on change of system of units
 - All zero point offsets
 - Compensation data (EEC, QEC)
 - Tool offsets
 - etc.

The change from MD10260 \$MN_CONVERT_SCALING_SYSTEM leads to alarm 4070!
 This alarm is designed to indicate that data which remain active after a POWERON are not subjected to automatic conversion from SW1-SW4 and SW5 formats.

10270	POS_TAB_SCALING_SYSTEM			N01, N09	T1, N3, G2
-	System of units of position tables			BYTE	Reset
-					
-	-	0	0	1	0/0

Description: Defines the measuring system for the positional data for the following machine data
 MD10910 \$MN_INDEX_AX_POS_TAB_1
 MD10930 \$MN_INDEX_AX_POS_TAB_2
 SD41500 \$SN_SW_CAM_MINUS_POS_TAB_1
 SD41501 \$SN_SW_CAM_PLUS_POS_TAB_1
 SD41502 \$SN_SW_CAM_MINUS_POS_TAB_2
 SD41503 \$SN_SW_CAM_PLUS_POS_TAB_2
 SD41504 \$SN_SW_CAM_MINUS_POS_TAB_3
 SD41505 \$SN_SW_CAM_PLUS_POS_TAB_3
 SD41506 \$SN_SW_CAM_MINUS_POS_TAB_4
 SD41507 \$SN_SW_CAM_PLUS_POS_TAB_4
 0: metric
 1: inch
 This machine data is only evaluated for MD10260 \$MN_CONVERT_SCALING_SYSTEM = 1.

General machine data

Related to:

MD10260 \$MN_CONVERT_SCALING_SYSTEM
 MD10910 \$MN_INDEX_AX_POS_TAB_1
 MD10930 \$MN_INDEX_AX_POS_TAB_2
 SD41500 \$SN_SW_CAM_MINUS_POS_TAB_1
 SD41501 \$SN_SW_CAM_PLUS_POS_TAB_1
 SD41502 \$SN_SW_CAM_MINUS_POS_TAB_2
 SD41503 \$SN_SW_CAM_PLUS_POS_TAB_2
 SD41504 \$SN_SW_CAM_MINUS_POS_TAB_3
 SD41505 \$SN_SW_CAM_PLUS_POS_TAB_3
 SD41506 \$SN_SW_CAM_MINUS_POS_TAB_4
 SD41507 \$SN_SW_CAM_PLUS_POS_TAB_4

10280	PROG_FUNCTION_MASK	EXP, N01	K1
-	Comparing (> and <) compatible with SW6.3	DWORD	PowerOn
-			
-	-	0x0	0
		0x7	0/0

Description: Bit mask for parameterizing various sub-program commands

Bit Hexadec. Meaning with bit set

value

0: 0x1 Comparison commands ">" and "<" are processed as for SW 6.3 and earlier:

Sub-program data of the type REAL are mapped internally in the IEEE 64 bit format. This mode maps decimal numbers inaccurately if this format's 52-bit wide mantissa is inadequate to map the number in binary notation. To solve this problem, all comparison commands (==, <>, >=, <=, > and <) are checked for relative equality of 1E-12.

This procedure is switched off for greater than (>) and less than (<) comparisons by setting bit 0. (Compatibility setting for software releases earlier than SW 6.4)

1: 0x2 Programming the channel names from machine data MD20000 \$MC_CHAN_NAME

By setting bit 1, the channel name stored in machine data MD20000 \$MC_CHAN_NAME can be programmed in the part program. The channel name can thus also be programmed instead of a numerical value for the channel number in programming coordination commands such as (START(), INIT(), WAIT() etc.

2: 0x4 reserved

10284	DISPLAY_FUNCTION_MASK		EXP, N01	-
-	BTSS-variable lastBlockNoStr active		DWORD	PowerOn
-				
-	-	0x0	-	0/0

Description: Bit mask for parameterizing various display variables:

BitNo. Hexadec. Meaning with bit set
 value

Bit0: 0x1
 Parameters are assigned to the OPI variable lastBlockNoStr in the SPARP and SPARPP blocks.

Bit1: 0x2
 Concerns the OPI variable cmdSpeed in the SPARPP block. If the bit is set, the variable returns the programmed speed even if the spindle is at a standstill or in another mode (positioning mode, axis mode).

Bit2: 0x4
 Concerns the OPI variable cmdSpeed in the SPARPP block. (reserved for constant cutting speed)

Bit8: 0x100
 Servotrace manages larger numerical values internally. Overruns in data format are avoided. The accuracy may be reduced with large numerical values.

10290	CC_TDA_PARAM_UNIT		N09	G2
-	Physical units of tool data for compile cycles		DWORD	PowerOn
-				
-	1	0,0,0,0,0,0,0,0,0	0	9

Description: Physical units for the user-defined tool-specific data:

0 ;No unit
1 ;Linear position [mm ; inch]
2 ;Angular position [degree ; degree]
3 ;Linear velocity [mm/min ; inch/min]
4 ;Angular speed [rpm ; rpm]
5 ;Linear acceleration [m/s² ; inch/s²]
6 ;Angular acceleration. [rev/s² ; rev/s²]
7 ;Linear jerk [m/s³ ; inch/s³]
8 ;Angular jerk [rev/s³ ; rev/s³]
9 ;Revolutional feedrate [mm/rev ; inch/rev]
Only available if bit 2 (0x4) is set in MD18080
\$MN_MM_TOOL_MANAGEMENT_MASK

General machine data

10291	CCS_TDA_PARAM_UNIT	N09	-
-	physical units of SIEMENS-OEM tool data	DWORD	PowerOn
-			
-	1	0,0,0,0,0,0,0,0,0	0
		9	0/0

Description: Physical units for application-specific tool-specific data:

- 0: No unit
- 1: Linear position [mm; inch]
- 2: Angular position [degree ; degree]
- 3: Linear velocity [mm/min ; inch/min]
- 4: Angular speed [rpm ; rpm]
- 5: Linear acceleration [m/s² ; inch/s²]
- 6: Angular acceleration [rev/s² ; rev/s²]
- 7: Linear jerk [m/s³ ; inch/s³]
- 8: Angular jerk [rev/s³ ; rev/s³]
- 9: Feedrate per revolution [mm/rev; inch/rev]

Only available if Bit 2 (0x4) is set in MD18080

\$MN_MM_TOOL_MANAGEMENT_MASK.

Related to:

MD18204 \$MN_MM_NUM_CCS_TDA_PARAM

10292	CC_TOA_PARAM_UNIT	N09	G2
-	Physical units of cutting edge data for compile cycles	DWORD	PowerOn
-			
-	1	0,0,0,0,0,0,0,0,0	0
		9	0/0

Description: Physical units for the user-defined cutting edge data:

- 0 ;No unit
- 1 ;Linear position [mm ; inch]
- 2 ;Angular position [degree ; degree]
- 3 ;Linear velocity [mm/min ; inch/min]
- 4 ;Angular speed [rpm ; rpm]
- 5 ;Linear acceleration [m/s² ; inch/s²]
- 6 ;Angular acceleration. [rev/s² ; rev/s²]
- 7 ;Linear jerk [m/s³ ; inch/s³]
- 8 ;Angular jerk [rev/s³ ; rev/s³]
- 9 ;Revolutional feedrate [mm/rev ; inch/rev]

Only available if bit 2 (0x4) is set in MD18080

\$MN_MM_TOOL_MANAGEMENT_MASK

10293	CCS_TOA_PARAM_UNIT			N09	-
-	Physical units of SIEMENS-OEM cutting edge data			DWORD	PowerOn
-					
-	1	0,0,0,0,0,0,0,0,0	0	9	0/0

Description: Physical units for application-specific cutting data:

- 0 : No unit
- 1 : Linear position [mm ; inch]
- 2 : Angular position [degree ; degree]
- 3 : Linear velocity [mm/min ; inch/min]
- 4 : Angular speed [rpm ; rpm]
- 5 : Linear acceleration [m/s² ; inch/s²]
- 6 : Angular acceleration [rev/s² ; rev/s²]
- 7 : Linear jerk [m/s³ ; inch/s³]
- 8 : Angular jerk [rev/s³ ; rev/s³]
- 9 : Feedrate per revolution [mm/rev; inch/rev]

Only available if Bit 2 (0x4) is set in MD18080

\$MN_MM_TOOL_MANAGEMENT_MASK.

Related to:

MD18206 \$MN_MM_NUM_CCS_TOA_PARAM

10300	FASTIO_ANA_NUM_INPUTS			N10	A4,TE1
-	Number of active analog NCK inputs			BYTE	PowerOn
-					
-	-	0	0	8	0/0

Description: This machine data defines the number of usable analog NCK inputs on the control.

Only these analog NCK inputs can be addressed by the NC part program or assigned by NC functions.

If more analog NCK inputs are defined with the machine data than are available in the hardware of the control, the binary analog actual value is set to zero in the control for the inputs that do not exist in the hardware. The NCK value can be altered by the PLC.

Note:

CPU computing time on the interpolation level is required for processing the digital and analog NCK I/Os. The number of active NCK I/Os should therefore be limited to the demands of the machine so that the interpolation cycle time is not unnecessarily loaded.

General machine data

10310	FASTIO_ANA_NUM_OUTPUTS	N10	A4
-	Number of active analog NCK outputs	BYTE	PowerOn
-			
-	-	0	0
-		8	0/0

Description: This machine data defines the number of usable analog NCK outputs on the control.
Only these analog NCK outputs can be addressed by the NC part program or assigned by NC functions.

If more analog NCK outputs are defined with the machine data than are available in the hardware of the control, no alarm is triggered. The analog values specified by the part program can be read by the PLC.

Note:

CPU computing time on the interpolation level is required for processing the digital and analog NCK I/Os. The number of active NCK I/Os should therefore be limited to the demands of the machine so that the interpolation cycle time is not unnecessarily loaded.

10350	FASTIO_DIG_NUM_INPUTS	N10	A4,TE1
-	Number of active digital NCK input bytes	BYTE	PowerOn
-			
-	-	2	1
-		5	2/2

Description: The number of bytes of the digital NCK inputs that can be used on the control are defined in this machine data.
These digital NCK inputs can be read directly by the part program. Moreover, the signal state at the HW inputs can also be changed by the PLC.

If more digital NCK inputs are defined in the machine data than are available in the control hardware, a signal status of 0 is set in the control for the inputs that do not exist in the hardware. The NCK value can be altered by the PLC.

Related to:

NC/PLC interface signal V2800 0000 (Disable the digital NCK inputs 1-8)

NC/PLC interface signal VB2800 1000 (Disable the external digital inputs 9-40)

NC/PLC interface signal V2800 0001 (PLC setting for digital NCK inputs 1-9)

NC/PLC interface signal VB2800 1001 (PLC values for external digital inputs 9-40)

NC/PLC interface signal V2900 0000,1000 (Actual value for digital NCK inputs)

10360	FASTIO_DIG_NUM_OUTPUTS			N10	A4,TE8
-	Number of active digital NCK output bytes			BYTE	PowerOn
-					
-	-	2	0	5	2/2

Description: The number of bytes for digital NCK outputs that can be used on the control are defined in this machine data. These digital NCK outputs can be set directly by the part program. From the PLC can

- the digital outputs with the NC/PLC interface signal V2800 0004,1008 (Disable the digital NCK outputs).
- with the NC/PLC interface signal V2800 0005,1009 (Overwrite mask for digital NCK outputs).
- with the NC/PLC interface signal V2800 0007,1011 (Setting mask for digital NCK outputs).

If more digital NCK outputs are defined in the machine data than are available in the control hardware, no alarm is triggered. The signal states specified by the part program can be read by the PLC.

Special cases:

Digital NCK outputs 5 to 8 can be processed only by the PLC (no hardware outputs).

Related to:

NC/PLC interface signal V2800 0004,1008 (Disable the digital NCK outputs)

NC/PLC interface signal V2800 0005,1009 (Overwrite mask for digital NCK outputs)

NC/PLC interface signal V2800 0006,1001 (PLC setting value for digital NCK outputs)

NC/PLC interface signal V2800 0007,1011 (Setting mask for digital NCK outputs)

NC/PLC interface signal V2900 0004,1004 (Setpoint for digital NCK outputs)

10361	FASTIO_DIG_SHORT_CIRCUIT			N10	A4
-	Short circuit of digital inputs and outputs			DWORD	PowerOn
-					
-	10	0,0,0,0,0,0,0,0	-	-	1/1

Description: Defined short circuits between digital output and input signals of the high-speed NCK I/Os are realized by linking the signals read in from the high-speed NCK I/Os or the PLC interface to defined output signals.

The output signals always remain unchanged by the link, the inputs that have to be taken into account internally arise from the read inputs and the link. If a plurality of output bits are specified for one input bit in overwrite mode, the last defined assignment in the list determines the result.

The definition of non-existent or non-activated inputs/outputs is ignored without an alarm.

Bits 0-7: Number of the input byte to be written (1 - 5)

Bits 8-15: Bit number within the input byte (1 - 8)

General machine data

Link:

The type of link is selected by adding a hexadecimal number to the input bit number:

00 Overwrite input identically to output

A0 Input is AND-gated to the read input with the status of the stated output

B0 Input is OR-gated to the read input with the status of the stated output

Bits 16-23: Number of the output byte to be used (1 - 5)

Bits 24-31: Bit number within the output byte (1 - 8)

Example:

`$MN_FASTIO_DIG_SHORT_CIRCUIT[0] = 0x04010302`

Input: 3rd bit of the 2nd byte

Output: 4th bit of the 1st byte (= 4th onboard NCU output)

The input status is overwritten by the specified output

`$MN_FASTIO_DIG_SHORT_CIRCUIT[1] = 0x0705A201`

Input: 2nd bit of the 1st byte (= 2nd onboard NCU input)

Output: 7th bit of the 5th byte

The input status is AND-gated with the specified output

`$MN_FASTIO_DIG_SHORT_CIRCUIT[2] = 0x0103B502`

Input: 5th bit of the 2nd byte

Output: 1st bit of the 3rd byte

The input status is OR-gated with the specified output

Related to:

MD10350 `$MN_FASTIO_DIG_NUM_INPUTS`,

MD10360 `$MN_FASTIO_DIG_NUM_OUTPUTS`.

References: /FB/, A4, "Digital and Analog NCK I/Os"

10362	HW_ASSIGN_ANA_FASTIN		N10	A4,TE1
-	Hardware assignment of the fast analog NCK inputs		DWORD	PowerOn
-				
-	1	0x01000000,0x01000000,0x01000000...	0x01000000	0x060003FF

Description:

For PROFIBUS/PROFINET:

1st + 2nd byte indicate the logical start address of the I/O slot on the PROFIBUS/PROFINET:

Value 0000 means NO active slot

Values 0001..0100 are reserved for the PLC process image (the value of input slots can be read by the NCK without errors, but output slots are forbidden in this range, and cause an alarm on power up)

1st byte = LowByte of the logical start address

2nd byte = HighByte of the logical start address

3rd byte = 0 = without meaning

4th byte = 5 = segment no. for PROFIBUS/PROFINET

The individual bytes are explained in MD10366

`$MN_HW_ASSIGN_DIG_FASTIN`.

[hw] = Index (0 to 7) for addressing the external analog inputs

Related to:

MD10366 `$MN_HW_ASSIGN_DIG_FASTIN`

MD10368 `$MN_HW_ASSIGN_DIG_FASTOUT`

MD10364 `$MN_HW_ASSIGN_ANA_FASTOUT`

10364	HW_ASSIGN_ANA_FASTOUT			N10	A4,TE3
-	Hardware assignment of external analog NCK outputs			DWORD	PowerOn
-					
-	1	0x01000000,0x010000,0x01000000...	0x01000000	0x060003FF	0/0

Description: For PROFIBUS/PROFINET:
 1st + 2nd byte indicate the logical start address of the I/O slot on the PROFIBUS/PROFINET:
 Value 0000 means NO active slot
 Values 0001..0100 are reserved for the PLC process image (the value of input slots can be read by the NCK without errors; however, output slots are forbidden in this range, and cause an alarm on power up)
 1st byte = LowByte of the logical start address
 2nd byte = HighByte of the logical start address
 3rd byte = 0 = without meaning
 4th byte = 5 = segment no. for PROFIBUS/PROFINET
 The individual bytes are explained in MD10366 \$MN_HW_ASSIGN_DIG_FASTIN.
 Related to:
 MD10366 \$MN_HW_ASSIGN_DIG_FASTIN
 MD10368 \$MN_HW_ASSIGN_DIG_FASTOUT
 MD10362 \$MN_HW_ASSIGN_ANA_FASTIN

10366	HW_ASSIGN_DIG_FASTIN			N10	A4,TE1
-	Hardware assignment of external digital NCK inputs			DWORD	PowerOn
-					
802d-cu3	1	0x0	0x0	0x00010101	2/2
802d-ng2	1	0x00010101	0x0	0x00010101	2/2
802d-ng3	1	0x00010101	0x0	0x00010101	2/2
802d-tm1	1	0x0	0x0	0x00010101	2/2
802d-tm2	1	0x0	0x0	0x00010101	2/2
802d-tm3	1	0x0	0x0	0x00010101	2/2

Description: For SIMODRIVE611D (terminal block):
 The following 4 bytes assign the external digital NCK I/Os to the hardware:
 1st byte: I/O no.
 2nd byte: Submodule no.
 3rd byte: Module no.
 4th byte: Segment no.
 As soon as value 0 is entered in byte 3 (module no.), the output byte concerned is not processed by the control.
 I/O no.:
 Number of the I/O byte on the DP compact module (range: 1 to 2; always 1 with analog inputs/outputs)
 Submodule no.:
 Submodule slot on the terminal block into which the DP compact module is inserted (range: 1 to 8)

 General machine data

Module no.:

Number of the logical slot into which the terminal block with the external I/Os is inserted. The logical slot is assigned to a physical slot by MD13010 \$MN_DRIVE_LOGIC_NR (logical drive number). Each module occupies a physical slot.

Segment no.:

Always 1 for 840D (ID for SIMODRIVE611D bus)

Example:

```
HW_ASSIGN_DIGITAL_FASTIN[3] = 01 04 03 02
1st byte: 02 = 2nd input byte of a 16 bit input module
2nd byte: 03 = Input module inserted in slot 3 of the terminal block
3rd byte: 04 = Terminal block inserted at logical drive number 4
4th byte: 01 = ID for 611D bus
```

For PROFIBUS/PROFINET:

1st + 2nd byte indicate the logical start address of the I/O slot on the PROFIBUS/PROFINET:
 Value 0000 means NO active slot
 Values 0001..0100 are reserved for the PLC process image (the value of input slots can be read by the NCK without errors; however, output slots are forbidden in this range, and cause an alarm on power up)

```
1st byte = LowByte of the logical start address
2nd byte = HighByte of the logical start address
3rd byte = 0 = without meaning
4th byte = 5 = segment no. for PROFIBUS/PROFINET
```

Module no.: 1 ... MD_MAXNUM_SIMO611D_AXES:

Number of the logical slot in which the terminal block with the external I/Os is inserted. The logical slot is assigned to a physical slot by MD13010 \$MN_DRIVE_LOGIC_NR, it is activated by MD13000 \$MN_DRIVE_IS_ACTIVE.

1st + 2nd bytes give the logical start address of the I/O slot on the PROFIBUS

```
1st byte = low byte
2nd byte = high byte
```

Value 0000 means NO active slots

Values 0001..007F are reserved for the PLC (NCK can also read the value for input slots without error, but output slots are forbidden in this range and lead to an alarm during startup)

Values 0080..02FF are valid

Values > 02FF are invalid

Example:

```
HW_ASSIGN_DIGITAL_FASTIN[3] = '05000302'
1st + 2nd byte: 0302 (hex) = logical start address 770 (decimal)
3rd byte: 00 = no significance
4th byte: 05 = ID for PROFIBUS/PROFINET
```

Related to:

```
MD10368 $MN_HW_ASSIGN_DIG_FASTOUT
MD10362 $MN_HW_ASSIGN_ANA_FASTIN
MD10364 $MN_HW_ASSIGN_ANA_FASTOUT
```

10368	HW_ASSIGN_DIG_FASTOUT			N10	A4
-	Hardware assignment of external digital NCK outputs			DWORD	PowerOn
-					
802d-cu3	1	0x0	0x0	0x00010101	2/2
802d-ng2	1	0x00010101	0x0	0x00010101	2/2
802d-ng3	1	0x00010101	0x0	0x00010101	2/2
802d-tm1	1	0x0	0x0	0x00010101	2/2
802d-tm2	1	0x0	0x0	0x00010101	2/2
802d-tm3	1	0x0	0x0	0x00010101	2/2

Description:

For PROFIBUS/PROFINET:

1st + 2nd byte indicate the logical start address of the I/O slot on the PROFIBUS/PROFINET:

Value 0000 means NO active slot

Values 0001..0100 are reserved for the PLC process image (the value of input slots can be read by the NCK without errors; however, output slots are forbidden in this range, and cause an alarm on power up)

1st byte = LowByte of the logical start address

2nd byte = HighByte of the logical start address

3rd byte = 0 = without meaning

4th byte = 5 = segment no. for PROFIBUS/PROFINET

The individual bytes are explained under MD10366

\$MN_HW_ASSIGN_DIG_FASTIN.

[hw] = Index (0 to 3) for addressing the external digital output bytes

Related to:

MD10366 \$MN_HW_ASSIGN_DIG_FASTIN

MD10362 \$MN_HW_ASSIGN_ANA_FASTIN

MD10364 \$MN_HW_ASSIGN_ANA_FASTOUT

10430	CC_HW_DEBUG_MASK			EXP	OEM
-	Hardware debug mask for compile cycles			DWORD	PowerOn
NBUP, NDLD					
-	-	0	0	0x7fffffff	0/0

Description:

Setting of special responses to peripheral HW interfaces for NCK debug

For practical debugging of NCK software, among other things, the response of peripheral units to the loss of the NCK sign of life must be suppressed when the NCK software has run to a breakpoint.

Bit 0 (LSB)-3:

For practical debugging of NCK software, among other things, the response of peripheral units to the loss of the NCK sign of life must be suppressed when the NCK software has run to a breakpoint.

General machine data

Meaning of set bits:

Bit 0:

Drive modules ignore the loss of the NCK sign of life

Bit 1:

Terminal blocks ignore the loss of the NCK sign of life

Bit 3:

PLC ignores the loss of the NCK sign of life

Bit 4:

Recording of internal and external control commands. Recording the control sequences and storing them in a file in the passive file system. One can trace the exact sequence between the incoming hardware signals of the PLC interface and the internal sequences with the aid of the recording file.

Bit 5:

Servotrace: Enable physical addresses without access control

Bit10:

Test for measuring function. If this bit is set, one can use the GUD Variables CHAN INT MEA_TASK and CHAN INT MEA_COUNTER to transfer the inverse transformation of the measured values into cyclical and non-cyclical tasks.

Bit11:

No EMERGENCY STOP alarm on loss of PLC sign of life. If the PLC sign of life is not obtained within the time defined in MD10100 \$MN_PLC_CYCLIC_TIMEOUT, an alarm is not issued, merely the axis release withdrawn. (Application case: debugging the PLC user program)

Bit15:

Reserved for gantry startup help.

General machine data

10460	SW_CAM_MINUS_LEAD_TIME			N09	N3
s	Lead or delay time at minus cams 1-16			DOUBLE	PowerOn
-					
802d-cu3	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-ng2	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-ng3	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-tm1	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0
802d-tm2	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0
802d-tm3	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0

Description: A lead or delay time can be assigned in this machine data to each minus cam 1-16 to compensate for delay times.

The switching edge of the associated cam signal is advanced or delayed by the time value entered.

Positive value: --> Lead time

Negative value: --> Delay time

Serves to compensate for the constant proportion of the internal delay time

between actual value acquisition and signal output.

Index [n] of the machine data addresses the cam pair:

n = 0, 1, ... , 15 correspond to cam pairs 1, 2, ... , 16

This machine data is added to the setting data SD41520

\$SN_SW_CAM_MINUS_TIME_TAB_1[n] and SD41522

\$SN_SW_CAM_MINUS_TIME_TAB_2[n].

Related to:

SD41520 \$SN_SW_CAM_MINUS_TIME_TAB_1[n] (lead or delay time on minus cams 1 - 8)

SD41522 \$SN_SW_CAM_MINUS_TIME_TAB_2[n] (lead or delay time on minus cams 9 - 16)

10461	SW_CAM_PLUS_LEAD_TIME			N09	N3
s	Lead or delay time at plus cams 1-16			DOUBLE	PowerOn
-					
802d-cu3	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-ng2	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-ng3	8	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	3/3
802d-tm1	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0
802d-tm2	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0
802d-tm3	1	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-	0/0

Description: A lead or delay time can be assigned in this machine data to each plus cam 1-16 to compensate for delay times.

The switching edge of the associated cam signal is advanced or delayed by the time value entered.

Positive value: --> Lead time

Negative value: --> Delay time

Serves to compensate for the constant proportion of the internal delay time

between actual value acquisition and signal output.

Index [n] of the machine data addresses the cam pair:

n = 0, 1, ... , 15 correspond to cam pairs 1, 2, ... , 16

This machine data is added to the setting data SD41521

\$SN_SW_CAM_PLUS_TIME_TAB_1[n] and SD41523

\$SN_SW_CAM_PLUS_TIME_TAB_2[n].

Related to:

SD41521 \$SN_SW_CAM_PLUS_TIME_TAB_1[n] (lead or delay time on plus cams 1 - 8)

SD41523 \$SN_SW_CAM_PLUS_TIME_TAB_2[n] (lead or delay time on plus cams 9 - 16)

General machine data

10470	SW_CAM_ASSIGN_FASTOUT_1		N09	N3
-	Hardware assignment for output of cams 1-8 to NCK I/Os		DWORD	PowerOn
-				
802d-cu3	-	0	-	2/2
802d-ng2	-	0	-	2/2
802d-ng3	-	0	-	2/2
802d-tm1	-	0	-	0/0
802d-tm2	-	0	-	0/0
802d-tm3	-	0	-	0/0

Description: The cam signal status can be output to the NCK I/Os as well as to the PLC.

The hardware assignment of the minus and plus cam signals to the digital output bytes used for the NCK I/Os is made in this machine data for cam pairs 1 - 8.

The assigned output signals can also be inverted with this machine data.

The MD is coded as follows:

Bits 0-7: No. of 1st HW byte used with digital outputs

Bits 8-15: No. of 2nd HW byte used with digital outputs

Bits 16-23: Inversion mask for writing 1st HW byte used

Bits 24-31: Inversion mask for writing 2nd HW byte used

Bit=0: Do not invert

Bit=1: Invert

If both HW bytes are specified, the 1st byte contains the minus cam signals and the 2nd byte the plus cam signals.

If the 2nd byte is not specified (= "0"), then the 8 cams are output as an AND operation of the minus and plus cam signals via the 1st HW byte using the 1st inversion mask.

The status of the non-inverted output signal for linear axes and for rotary axes with "plus cam - minus cam < 180 degrees" is:

"1" between minus and plus cams

"0" outside this range

The status of the non-inverted output signal for rotary axes with "plus cam - minus cam >= 180 degrees" is:

"0" between minus and plus cams

"1" outside this range

The following must be specified as the byte address for the digital outputs:

1: for on-board byte

2 - 5: for external bytes

10471	SW_CAM_ASSIGN_FASTOUT_2	N09	N3
-	Hardware assignment for the output of cams 9-16 to NCK I/Os	DWORD	PowerOn
-			
-	-	0	-
-			0/0

Description: The cam signal status can be output to the NCK I/Os as well as to the PLC.

The hardware assignment of the minus and plus cam signals to the digital output bytes used for the NCK I/Os can be made in this machine data for cam pairs 9 - 16.

The assigned output signals can also be inverted with this machine data.

The MD is coded as follows:

Bits 0-7: No. of 1st HW byte used with digital outputs
 Bits 8-15: No. of 2nd HW byte used with digital outputs
 Bits 16-23: Inversion mask for writing 1st HW byte used
 Bits 24-31: Inversion mask for writing 2nd HW byte used

Bit=0: Do not invert
 Bit=1: Invert

If both HW bytes are specified, the 1st byte contains the minus cam signals and the 2nd byte the plus cam signals.

If the 2nd byte is not specified (= "0"), then the 8 cams are output as an AND operation of the minus and plus cam signals via the 1st HW byte using the 1st inversion mask.

The status of the non-inverted output signal for linear axes and for rotary axes with "plus cam - minus cam < 180 degrees" is:

"1" between minus and plus cams
 "0" outside this range

The status of the non-inverted output signal for rotary axes with "plus cam - minus cam >= 180 degrees" is:

"0" between minus and plus cams
 "1" outside this range

The following must be specified as the byte address for the digital outputs:

1: for on-board byte
 2 - 5: for external bytes

General machine data

10472	SW_CAM_ASSIGN_FASTOUT_3	N09	N3
-	Hardware assignment for output of cams 17-24 to NCK I/Os	DWORD	PowerOn
-			
-	-	0	-
-			0/0

Description: The cam signal status can be output to the NCK I/Os as well as to the PLC.

The hardware assignment of the minus and plus cam signals to the digital output bytes of the NCK I/Os used can be made in this machine data for cam pairs 17 - 24.

The assigned output signals can also be inverted with this machine data.

The MD is coded as follows:

Bits 0-7: Number of 1st HW byte used with digital outputs
 Bits 8-15: Number of 2nd HW byte used with digital outputs
 Bits 16-23: Inversion mask for writing 1st HW byte used
 Bits 24-31: Inversion mask for writing 2nd HW byte used

Bit=0: Do not invert
 Bit=1: Invert

If both HW bytes are specified, the 1st byte contains the minus cam signals and the 2nd byte the plus cam signals.

If the 2nd byte is not specified (= "0"), then the 8 cams are output as an AND operation of the minus and plus cam signals via the 1st HW byte using the 1st inversion mask.

The status of the non-inverted output signal for linear axes and for rotary axes with "plus cam - minus cam < 180 degrees" is:

"1" between minus and plus cams
 "0" outside this range

The status of the non-inverted output signal for rotary axes with "plus cam - minus cam >= 180 degrees" is:

"0" between minus and plus cams
 "1" outside this range

The following must be specified as the byte address for the digital outputs:

1: for on-board byte
 2 - 5: for external bytes

10473	SW_CAM_ASSIGN_FASTOUT_4	N09	N3
-	Hardware assignment for output of cams 25-32 to NCK I/Os	DWORD	PowerOn
-			
-	-	0	-
-			0/0

Description: The cam signal status can be output to the NCK I/Os as well as to the PLC

The hardware assignment of the minus and plus cam signals to the digital output bytes of the NCK I/Os used can be made in this machine data for cam pairs 25 - 32.

The assigned output signals can also be inverted with this machine data.

The MD is coded as follows:

Bits 0-7: Number of 1st HW byte used with digital outputs
 Bits 8-15: Number of 2nd HW byte used with digital outputs
 Bits 16-23: Inversion mask for writing 1st HW byte used
 Bits 24-31: Inversion mask for writing 2nd HW byte used

Bit=0: Do not invert
 Bit=1: Invert

If both HW bytes are specified, the 1st byte contains the minus cam signals and the 2nd byte the plus cam signals.

If the 2nd byte is not specified (= "0"), then the 8 cams are output as an AND operation of the minus and plus cam signals via the 1st HW byte using the 1st inversion mask.

The status of the non-inverted output signal for linear axes and for rotary axes with "plus cam - minus cam < 180 degrees" is:

"1" between minus and plus cams
 "0" outside this range

The status of the non-inverted output signal for rotary axes with "plus cam - minus cam >= 180 degrees" is:

"0" between minus and plus cams
 "1" outside this range

The following must be specified as the byte address for the digital outputs:

1: for on-board byte
 2 - 5: for external bytes

General machine data

10480	SW_CAM_TIMER_FASTOUT_MASK		N09	N3
-	Mask for output of cam signals via timer interr. to NCU		DWORD	PowerOn
-				
802d-cu3	-	0	-	2/2
802d-ng2	-	0	-	2/2
802d-ng3	-	0	-	2/2
802d-tm1	-	0	-	0/0
802d-tm2	-	0	-	0/0
802d-tm3	-	0	-	0/0

Description: A timer-controlled output to the 4 on-board outputs of the NCK I/Os can be selected in this machine data for 4 cam pairs. In this case, the minus and plus signals of a cam pair are "EXCLUSIVE OR'd" for output as one signal. Meaning for set bit: Associated cam (minus and plus cam signals "EXCLUSIVE OR'd") is output via a timer interrupt at one of the 4 on-board outputs of the NCU. The on-board outputs are assigned in order of increasing machine axis numbers (with assigned cam pairs). Example: Machine axis 3 = cam pair 1 --> on-board output 3
Machine axis 1 = cam pair 2 --> on-board output 1
Machine axis 7 = cam pair 3 --> on-board output 4
Machine axis 2 = cam pair 4 --> on-board output 2
If a plurality of cam pairs are set for one machine axis, then this axis is assigned in ascending order of the cam pairs. Example: Machine axis 3 = cam pair 1 --> on-board output 2
Machine axis 3 = cam pair 2 --> on-board output 3
Machine axis 7 = cam pair 3 --> on-board output 4
Machine axis 2 = cam pair 4 --> on-board output 1
This function works independently of the assignment set in MD10470 \$MN_SW_CAM_ASSIGN_FASTOUT_1 or MD10471 \$MN_SW_CAM_ASSIGN_FASTOUT_2.
Note:
The on-board byte must not be used more than once.
If there is more than one signal change in the IPO cycle for the cam pairs specified in the MD, then the cam pair with the lowest number determines the instant of output. The other signals change at the same time.

10485	SW_CAM_MODE		N09	N3
-	Behavior of SW cams		DWORD	PowerOn
-				
802d-cu3	-	0	-	2/2
802d-ng2	-	0	-	2/2
802d-ng3	-	0	-	2/2
802d-tm1	-	0	-	0/0
802d-tm2	-	0	-	0/0
802d-tm3	-	0	-	0/0

Description:

Meaning of the individual bits:

Bit 0 (LSB) = 0:

If more than 1 signal change per interpolation cycle is due for the cams specified in MD10480 \$MN_SW_CAM_TIMER_FASTOUT_MASK, the cam having the lowest number will determine the output instant. The other signals change at the same instant. That is, a maximum of one interrupt-controlled output is effected per interpolation cycle.

Bit 0 (LSB) = 1:

Each cam specified in MD10480 \$MN_SW_CAM_TIMER_FASTOUT_MASK will be output precisely at the time of the interpolation cycle. There is no output priority of the cams. A maximum of 8 interrupt-controlled outputs can be performed per interpolation cycle.

Bit 1 = 0:

Inversion of signal behavior from plus cam, where plus cam - minus cam \geq 180 degr.

Bit 1 = 1:

No inversion of signal behavior from plus cam, where plus cam - minus cam \geq 180 degr.

Signal behavior on-board output:

Overtravelling:

Minus cam plus cam

Traversing direction:

positive 0->1 1->0

negative 1->0 0->1

Bit 2 = 0:

No path-time cam

Bit 2 = 1:

Path-time cam for cams where minus position = plus position. The lead/delay time applied is independent of:

- velocity of the axis
- position of the axis
- reversal of traversing direction

The cam is only activated on overtravelling of the cam position. A lead/delay time applied to the minus cam is active and leads to a shift of the whole cam.

Bit 3 = 0:

No alignment signal in case of measurement area selection.

Bit 3 = 1:

Output of an alignment signal for measurement area selection (FM only). On-board output 8 is used permanently.

General machine data

On-board output 8 = 1: Measurement possible (active range enabled)

On-board output 8 = 0: Measurement not possible

Bit 4 = 0:

and following free

10490	SW_CAM_COMP_NCK_JITTER	N09	-
s	Cam jitter compensation	DOUBLE	NEW CONF
-			
-	-	0	0.0
		0.0001	0/0

Description: The compensation value reduces system-related time inaccuracies during output of highly precise cam signals. The default time encumbers the cyclic time level of the control, and should therefore be selected as short as possible. It is recommended to return a cam signal to a measuring input of the control and to increase the compensation value until the scatter of the measured positions cannot be reduced any further.
Currently only active when MD10485 \$MN_SW_CAM_MODE Bit0 = 0.

10500	DPIO_LOGIC_ADDRESS_IN	N10	A4
-	Logical slot address of the PROFIBUS/PROFINET I/Os	DWORD	PowerOn
-			
-	16	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	8191
		0,0,0,0	-1/2

Description: Logical slot address of the PROFIBUS/PROFINET I/Os usable by the NCK.

10501	DPIO_RANGE_LENGTH_IN	N10	A4
-	Length of the PROFIBUS/PROFINET I/O range	DWORD	PowerOn
-			
-	16	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	128
		0,0,0,0	-1/2

Description: Length of the PROFIBUS/PROFINET I/O range consistently usable for the NCK. This range must be defined in STEP 7, hardware configuration.
0: only the first data slot is used.
x: length of the consistent PROFIBUS/PROFINET I/O range
Note: in PROFINET it is not possible to combine several slots in one area.

10502	DPIO_RANGE_ATTRIBUTE_IN	N10	A4
-	Attributes of the PROFIBUS/PROFINET I/Os	DWORD	PowerOn
-			
-	16	0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01,0x01	0x0F
		0x00	-1/2

Description: Attributes of the PROFIBUS/PROFINET I/Os
Bit 0: Little/Big Endian format of the system variable \$A_DPx_IN[n,m]
0: Little Endian format
1: Big Endian format

Bit 1: (reserved)
 Bit 2: Read input data
 0: Read possible through system variable and CC binding
 (increased performance requirements)
 1: Read only possible for CC binding (low performance
 requirements)
 Bit 3: Slot sign-of-life alarm
 0: Slot sign-of-life alarms are output
 1: Slot sign-of-life alarms are suppressed

10510	DPIO_LOGIC_ADDRESS_OUT		N10	A4
-	Logical slot address of the PROFIBUS/PROFINET I/Os		DWORD	PowerOn
-				
-	16	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	8191	-1/2

Description: Logical slot address of the PROFIBUS/PROFINET I/Os usable by the NCK.

10511	DPIO_RANGE_LENGTH_OUT		N10	A4
-	Length of the PROFIBUS I/O range		DWORD	PowerOn
-				
-	16	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	128	-1/2

Description: Length of the PROFIBUS I/O range consistently usable for the NCK. This range must be defined in STEP 7, hardware configuration.
 0: only the first data slot is used.
 x: length of the consistent PROFIBUS I/O range
 Note: in PROFINET it is not possible to combine several slots in one area.

10512	DPIO_RANGE_ATTRIBUTE_OUT		N10	A4
-	Attributes of the PROFIBUS/PROFINET I/Os		DWORD	PowerOn
-				
-	16	0x01,0x01,0x01,0x01,0x01,0x00 0x01,0x01,0x01...	0x0F	-1/2

Description: Attributes of the PROFIBUS/PROFINET I/Os
 Bit 0: Little/Big Endian format of system variable
 \$A_DPx_OUT[n,m]
 0: Little Endian format
 1: Big Endian format
 Bit 1: Write output data
 0: Write only through system variable
 1: Write only through CC binding
 Bit 2: (reserved)
 Bit 3: Slot sign-of-life alarm
 0: Slot sign-of-life alarms are output
 1: Slot sign-of-life alarms are suppressed

General machine data

10530	COMPAR_ASSIGN_ANA_INPUT_1	N10	A4
-	Hardware assignment of analog inputs for comparator byte 1	BYTE	PowerOn
-			
-	1	0,0,0,0,0,0,0	-
-			0/0

Description: This MD assigns analog inputs 1 to 8 to a bit number of comparator byte 1. This input bit of the comparator is set to "1" if the comparison between the applied analog value and the associated threshold value (SD41600 \$SN_COMPAR_THRESHOLD_1 fulfills the condition parameterized in (MD10540 \$MN_COMPAR_TYPE_1). An analog input can be assigned to a plurality of comparator input bits.

The following generally applies to comparator byte 1:

COMPAR_ASSIGN_ANA_INPUT_1 [b] = n

with index: b = number of comparator input bit (0 to 7)

n = number of analog input (1 to 8)

Example:

```

COMPAR_ASSIGN_ANA_INPUT_1[0] = 1
COMPAR_ASSIGN_ANA_INPUT_1[1] = 2
COMPAR_ASSIGN_ANA_INPUT_1[2] = 1
COMPAR_ASSIGN_ANA_INPUT_1[3] = 3
COMPAR_ASSIGN_ANA_INPUT_1[4] = 3
COMPAR_ASSIGN_ANA_INPUT_1[5] = 1
COMPAR_ASSIGN_ANA_INPUT_1[6] = 1
COMPAR_ASSIGN_ANA_INPUT_1[7] = 1

```

Analog input 1 affects input bits 0, 2, 5, 6 and 7 of comparator byte 1

Analog input 2 affects input bit 1 of comparator byte 1

Analog input 3 affects input bits 3 and 4 of comparator byte 1

Related to:

MD10540 \$MN_COMPAR_TYPE_1

MD10541 \$MN_COMPAR_TYPE_2

10531	COMPAR_ASSIGN_ANA_INPUT_2	N10	A4
-	Hardware assignment of analog inputs for comparator byte 2	BYTE	PowerOn
-			
-	1	0,0,0,0,0,0,0	-
-			0/0

Description: This MD assigns analog inputs 1 to 8 to a bit number of comparator byte 2. This input bit of the comparator is set to "1" if the comparison between the applied analog value and the associated threshold value (SD41601 \$SN_COMPAR_THRESHOLD_2 fulfills the condition parameterized in (MD10541 \$MN_COMPAR_TYPE_2). An analog input can be assigned to a plurality of comparator input bits.

The following generally applies to comparator byte 2:

COMPAR_ASSIGN_ANA_INPUT_2 [b] = n

with index: b = number of comparator input bit (0 to 7)

n = number of analog input (1 to 8)

Example:

```

COMPAR_ASSIGN_ANA_INPUT_2[0] = 1
COMPAR_ASSIGN_ANA_INPUT_2[1] = 2
COMPAR_ASSIGN_ANA_INPUT_2[2] = 1
COMPAR_ASSIGN_ANA_INPUT_2[3] = 3
COMPAR_ASSIGN_ANA_INPUT_2[4] = 3
COMPAR_ASSIGN_ANA_INPUT_2[5] = 1
COMPAR_ASSIGN_ANA_INPUT_2[6] = 1
COMPAR_ASSIGN_ANA_INPUT_2[7] = 1

```

Analog input 1 affects input bits 0, 2, 5, 6 and 7 of comparator byte 2

Analog input 2 affects input bit 1 of comparator byte 2

Analog input 3 affects input bits 3 and 4 of comparator byte 2

Related to:

```

MD10540 $MN_COMPAR_TYPE_1
MD10541 $MN_COMPAR_TYPE_2

```

10540	COMPAR_TYPE_1	N10	A4
-	Parameterization for comparator byte 1	DWORD	PowerOn
-			
-	0	-	0/0

- Description:** This MD can be used to make the following settings for the individual output bits (0 to 7) of comparator byte 1:
- Bits 0 to 7: Comparison type mask (for comparator output bits 0 to 7)
 - Bit = 1: output bit = 1 if analog value \geq threshold value
 - Bit = 0: output bit = 1 if analog value $<$ threshold value (Threshold value defined by SD41600 \$SN_COMPAR_THRESHOLD_1)
 - Bits 8 to 15: Not used (defined to be set to 0)
 - Bits 16 to 23: Assignment of a HW output byte for outputting the comparator states (statement of the byte address)
 - Byte = 0: No output via digital NCK outputs
 - Byte = 1: Output via digital onboard NCK outputs (1 to 4)
 - Byte = 2: Output via external digital NCK outputs 9 to 16
 - Byte = 3: Output via external digital NCK outputs 17 to 24
 - Byte = 4: Output via external digital NCK outputs 25 to 32
 - Byte = 5: Output via external digital NCK outputs 33 to 40
 - Bits 24 to 31: Inversion mask for the output of the comparator states (bits 0 to 7)
 - Bit = 0: Output bit is not inverted
 - Bit = 1: Output bit is inverted

General machine data

Related to:

MD10530 \$MN_COMPAR_ASSIGN_ANA_INPUT_1
 MD10531 \$MN_COMPAR_ASSIGN_ANA_INPUT_2
 SD41600 \$SN_COMPAR_THRESHOLD_1
 SD41601 \$SN_COMPAR_THRESHOLD_2
 MD10360 \$MN_FASTIO_DIG_NUM_OUTPUTS

10541	COMPAR_TYPE_2	N10	A4
-	Parameterization of comparator byte 2	DWORD	PowerOn
-			
-	-	0	-
-			0/0

Description:

This MD can be used to make the following settings for the individual output bits (0 to 7) of comparator byte 2:

- Bits 0 to 7: Comparison type mask (for comparator output bits 0 to 7)
 - Bit = 1: output bit = 1 if analog value \geq threshold value
 - Bit = 0: output bit = 1 if analog value $<$ threshold value (Threshold value defined by SD41601 \$SN_COMPAR_THRESHOLD_2)
- Bits 8 to 15: not used (defined to be set to 0)
- Bits 16 to 23: Assignment of a HW output byte for outputting the comparator states (statement of the byte address)
- Byte = 0: no output via digital NCK outputs
 - Byte = 1: output via digital onboard NCK outputs (1 to 4)
 - Byte = 2: output via external digital NCK outputs 9 to 16
 - Byte = 3: output via external digital NCK outputs 17 to 24
 - Byte = 4: output via external digital NCK outputs 25 to 32
 - Byte = 5: output via external digital NCK outputs 33 to 40
- Bits 24 to 31: Inversion mask for the output of the comparator states (bits 0 to 7)
 - Bit = 0: Output bit is not inverted
 - Bit = 1: Output bit is inverted

Related to:

MD10530 \$MN_COMPAR_ASSIGN_ANA_INPUT_1
 MD10531 \$MN_COMPAR_ASSIGN_ANA_INPUT_2
 SD41600 \$SN_COMPAR_THRESHOLD_1
 SD41601 \$SN_COMPAR_THRESHOLD_2
 MD10360 \$MN_FASTIO_DIG_NUM_OUTPUTS

10600	FRAME_ANGLE_INPUT_MODE			EXP, N01, N09	K2
-	Sequence of rotation in FRAME			BYTE	PowerOn
-					
-	-	1	1	2	0/0

Description: FRAME_ANGLE_INPUT_MODE sets how the rotations (ROT and AROT) around the three geometry axes are defined if more than one rotation is programmed in a block. The order in which these rotations are programmed within the block is irrelevant.

The rotations can be set to be calculated according to:

- Euler angle with FRAME_ANGLE_INPUT_MODE = 2
The rotations are calculated according to the Euler angle in the following order:
 1. Rotation around Z
 2. Rotation around X
 3. Rotation around Y
- RPY with FRAME_ANGLE_INPUT_MODE = 1
The rotations are calculated according to the Euler angle in the following order:
 1. Rotation around Z
 2. Rotation around Y
 3. Rotation around X

10602	FRAME_GEOAX_CHANGE_MODE			EXP, N01, N09	K2
-	Frames when changing geometry axes			BYTE	PowerOn
-					
-	-	0	0	5	0/0

Description: Geometry axes can be switched over in the following states:

- Selection and deselection of transformations
- Switchable geometry axes GEOAX()

The current total frame is then defined as follows:

0: The current total frame is canceled.

1: The current total frame is recalculated when geometry axes are switched over. Translations, scaling and mirroring for the new geometry axes become active. The rotations of the old geometry axes still apply.

2: The current total frame is recalculated when geometry axes are switched over. Translations, scaling and mirroring for the new geometry axes become active. If rotations were active before switching over to the current base frames, current settable frame or programmable frame, switchover is aborted with an alarm.

3: The current total frame is deleted when selecting and deselecting transformations. When the GEOAX() command is entered, the frame is recalculated and translation, scaling and mirroring for the new geometry axes become active. The rotations of the old geometry axes still apply.

General machine data

10604	WALIM_GEOAX_CHANGE_MODE	EXP, N01, N09	A3
-	Working area limitation by changing geometry axes	BYTE	PowerOn
-			
-	-	0	0
-	-	1	0/0

Description: This machine data specifies whether a potentially active working area limitation will remain active after geo axis replacement, or whether it will be deactivated.

Meaning of the MD values:

= 0 Working area limitation will be deactivated when replacing geo axis.

= 1 Working area limitation will remain activated when replacing geo axis.

10610	MIRROR_REF_AX	EXP, N01, N09	K2
-	Reference axis for mirroring	BYTE	PowerOn
-			
-	-	0	0
-	-	3	0/0

Description: 0: Mirroring always takes place in the stated axis, without scaling.

The mirroring of a geometry axis can always be related to a defined reference axis.

1: x is the reference axis

Mirroring of the x axis is unique.

Mirroring of the y axis is mapped on:

a mirroring of the x axis and

a rotation of the z axis through 180 degrees.

Mirroring of the z axis is mapped on:

a mirroring of the x axis and

a rotation of the x axis through 180 degrees and

a rotation of the z axis through 180 degrees

2: y is the reference axis

Mirroring of the x axis is mapped on:

a mirroring of the y axis and

a rotation of the z axis through 180 degrees.

Mirroring of the y axis is unique.

Mirroring of the z axis is mapped on:

a mirroring of the y axis and

a rotation of the x axis through 180 degrees

3: z is the reference axis

Mirroring of the x axis is mapped on:

a mirroring of the z axis and

a rotation of the z axis through 180 degrees and

a rotation of the x axis through 180 degrees

Mirroring of the y axis is mapped on:

a mirroring of the z axis and

a rotation of the x axis through 180 degrees.

Mirroring of the z axis is unique.

10612	MIRROR_TOGGLE	EXP, N01, N09	K2
-	Mirror toggle	BYTE	PowerOn
-			
-	-	1	0
-	-	1	0/0

Description: Mirror toggle function.
 1: Programmed axis values are not evaluated. Toggle switching behavior.
 0: Programmed axis values are evaluated.
 The axes are mirrored in the case of values not equal to 0 if they are not already mirrored. Mirroring is disabled if the value is 0.

10613	NCBFRAME_RESET_MASK	EXP	K2
-	Active NCU global base frames after reset	DWORD	Reset
-			
-	-	0xFFFF	0
-	-	0xFFFF	0/0

Description: Bit mask for the reset setting of the NCU global base frames which are included in the channel.
 The following applies:
 When MD20110 \$MC_RESET_MODE_MASK bit0 = 1 and bit14 = 1
 The entire base frame is derived on reset from the linking of the NCU global base frame field elements whose bit in the bit mask is 1.
 When MD20110 \$MC_RESET_MODE_MASK bit0 = 1 and bit14 = 0
 The entire base frame is deselected on reset.

10615	NCBFRAME_POWERON_MASK	EXP, N12	K2
-	Reset global base frames after power on	DWORD	PowerOn
-			
-	-	0	0
-	-	0xFFFF	0/0

Description: This machine data defines whether global base frames are reset in the data management on Power On.
 That is

- Offsets are set to 0,
- Scalings are set to 1.
- Mirroring is disabled.

The individual base frames can be selected separately.
 Bit 0 means base frame 0, bit 1 base frame 1 etc.
 Value=0: Base frame is retained on Power On
 Value=1: Base frame is reset in the data management on Power On.
 Related to:
 MD24004 \$MC_CHBFRAME_POWERON_MASK

General machine data

10617	FRAME_SAVE_MASK	EXP	K2
-	Behavior of frames in SAVE subroutines	DWORD	PowerOn
-			
-	-	0	0
		0x3	0/0

Description: This machine data is used to define which frames are restored with SAVE attribute at return from a subprogram.

Bit 0: Settable frames G54 through G599

Value = 0:
If the same G code is active at subprogram return and subprogram call, the active settable frame is maintained. If not, the settable frame is reactivated when the subprogram is called.

Value = 1:
At subprogram return, the settable frame is reactivated when the subprogram is called.

Bit 1: Basic frame

Value = 0:
The active basic frame is not changed at subprogram return. This is also the case, if a basic frame change is carried out in the subprogram by an operation or by an implicit frame deselection (possibly through TRAFOOF).

Value = 1:
At subprogram return, the basic frame is reactivated when the subprogram is called.

10618	PROTAREA_GEOAX_CHANGE_MODE	EXP, N01, N09	A3
-	Protection range on change of geometry axes	BYTE	PowerOn
-			
802d-cu3	-	0	0
802d-ng2	-	0	0
802d-ng3	-	0	0
802d-tm1	-	0	0
802d-tm2	-	0	0
802d-tm3	-	0	0
		3	1/1
		3	1/1
		3	1/1
		3	-1/2
		3	-1/2
		3	-1/2

Description: This machine data is used to define whether any active protection zones will remain active after a transformation change or geo axis replacement, or whether they will be deactivated.

The machine data is bit-coded with the following meanings:

Bit 0 = 0
Protection zones deactivated on transformation change.

Bit 0 = 1
Active protection zones remain active after transformation change.

Bit 1 = 0
Protection zones deactivated on geo axis replacement.

Bit 1 = 1
Active protection zones remain active after geo axis replacement.

10650	IPO_PARAM_NAME_TAB	EXP, N01	K2
-	Name of interpolation parameters	STRING	PowerOn
-			
-	3	I,J,K	0/0

Description: List of identifiers for the interpolation parameters
 The rules for axis identifiers described in MD20080
 \$MC_AXCONF_CHANAX_NAME_TAB apply to the selection of identifiers.
 The identifiers must be selected so that they do not cause any
 conflicts with other identifiers (axes, Euler angles, normal vec-
 tors, direction vectors, intermediate point coordinates).

Related to:

MD10660 \$MN_INTERMEDIATE_POINT_NAME_TAB

References: /PA/, Programming Guide: Fundamentals

10652	CONTOUR_DEF_ANGLE_NAME	EXP, N01, N12	FBFA
-	Name of angle for contour definitions	STRING	PowerOn
-			
-	-	ANG	0/0

Description: Identifier for contour angle
 The identifier must be selected so that no conflict arises with
 other identifiers (e.g. axes, Euler angles, normal vectors, direc-
 tion vectors, interpolation point coordinates).

10654	RADIUS_NAME	EXP, N01, N12	FBFA
-	Name of radius for contour definitions	STRING	PowerOn
-			
-	-	RND	0/0

Description: Identifier for contour radius
 The identifier must be selected so that no conflict arises with
 other identifiers (e.g. axes, Euler angles, normal vectors, direc-
 tion vectors, intermediate point coordinates).

10656	CHAMFER_NAME	EXP, N01, N12	FBFA
-	Name of chamfer for contour definitions	STRING	PowerOn
-			
-	-	CHR	0/0

Description: Identifier for contour chamfer
 The identifier must be selected so that no conflict arises with
 other identifiers (e.g. axes, Euler angles, normal vectors, direc-
 tion vectors, intermediate point coordinates).

General machine data

10660	INTERMEDIATE_POINT_NAME_TAB		EXP, N01	K2
-	Name of interpolation point coordinates for G2/G3		STRING	PowerOn
-				
-	3	I1,J1,K1	-	0/0

Description: List of identifiers for the intermediate point coordinates
The rules for axis identifiers described in MD20080
\$MC_AXCONF_CHANAX_NAME_TAB apply to the selection of identifiers.
The identifiers must be selected so that they do not cause any
conflicts with other identifiers (axes, Euler angles, normal vec-
tors, direction vectors, intermediate point coordinates).
Related to:
MD10650 \$MN_IPO_PARAM_NAME_TAB
References: /PG/, Programming Guide: Fundamentals

10670	STAT_NAME		N01, N09	F2
-	Name of state information		STRING	PowerOn
-				
-	-	STAT	-	0/0

Description: Identifier for position information for solving ambiguities in
Cartesian PTP travel.
An identifier must be chosen that does not conflict with other
identifiers (e.g. axes, Euler angles, normal vectors, direction
vectors, intermediate point coordinates).

10672	TU_NAME		N01, N09	F2
-	Name of state information of axes		STRING	PowerOn
-				
-	-	TU	-	0/0

Description: Identifier for position information of axes for solving ambigu-
ities in
Cartesian PTP travel.
An identifier must be chosen that does not conflict with other
identifiers (e.g. axes, Euler angles, normal vectors, direction
vectors, intermediate point coordinates).

10680	MIN_CONTOUR_SAMPLING_TIME		N01, EXP	-
s	Minimum contour sampling time		DOUBLE	Reset
-				
-	-	0.008	-	0/0

Description: Min. possible contour sampling time in seconds. This MD is used to
limit the value that can be entered with MD10682
\$MN_CONTOUR_SAMPLING_FACTOR, independently of the current interpo-
lation cycle of the control.

10682	CONTOUR_SAMPLING_FACTOR			N01, EXP	-
-	Contour sampling factor			DOUBLE	Reset
-					
-	-	1.0	-	-	1/1

Description: This factor defines the maximum time interval at which a curved contour is sampled in the interpolator.

The maximum sampling time results from the set interpolation cycle (see MD10071 \$MN_IPO_CYCLE_TIME) and the factor set with this data and the tolerance set for the geometry axes in MD33100 \$MA_COMPRESS_POS_TOL[].

The minimum sampling time cannot be shorter than the time set in MD10680 \$MN_MIN_CONTOUR_SAMPLING_TIME.

10700	PREPROCESSING_LEVEL			N01, N02	V2,K1
-	Program preprocessing level			BYTE	PowerOn
-					
-	-	0x01	-	-	1/1

Description:

Bit 0= 0:
No preprocessing

Bit 0= 1:
The call description of the cycles is formed during control power on. All the programs in the directories `_N_CUS_DIR`, `_N_CMA_DIR` and `_N_CST_DIR` can be called in the part program without `EXTERNAL` declaration. If the parameter interface of a cycle is changed in the control, then this change does not become active until after Power On.

Bit 1=1:
During control power on, all cycles in the directories `_N_CUS_DIR`, `_N_CMA_DIR` and `_N_CST_DIR` are preprocessed to form a process-optimizing compilation. These cycles are then processed more quickly. Changes to the cycle programs do not become active until after the next Power On.

Bit 2=1:
During control power on, the Siemens cycles in the directory `_N_CST_DIR` are preprocessed to form a process-optimizing compilation (from SW 3.5).

Bit 3=1:
During control power on, the user cycles in the directory `_N_CUS_DIR` are preprocessed to form a process-optimizing compilation (from SW 3.5).

Bit 4=1:
Preprocessing the user cycles in the directory `_N_CMA_DIR`

Bit 5=1:
All files marked with `PREPRO` in the `PROG` statement line are preprocessed (from SW 6.4)

Bit 5=0:
During control power on, all cycles in the directories activated by bits 1 to 4 are preprocessed. This also applies to programs that are not marked with `PREPRO`.

General machine data

Bit 6=1:

The compilation is stored in SRAM if there is inadequate space in DRAM (from SW 7.1).

Memory space is required for preprocessing cycles. Better utilization of memory can be achieved by selective setting of the preprocessing:

The runtime-critical cycles are brought together in one directory. The remaining cycles are in the other directory.

References:

/PG/, "Programming Guide Fundamentals" (EXTERNAL declaration)

10702	IGNORE_SINGLEBLOCK_MASK			N01	K1,Z1
-	Prevents stopping at specific blocks in single block mode			DWORD	PowerOn
-					
-	-	0	0	0xFFFF	1/1

Description:

This machine data prevents stopping at certain blocks with single block.

Single block stop can be prevented with the following bits of the mask:

Bit0 = 1

Means that there is no stop in any internal ASUB block. Exception: the single block stop has been explicitly activated by the SBLON command.

There are three different internal ASUBs that are triggered by different events.

- Repos: In the case of the events: change of operating mode to a manual mode (JOG, JOGREF,...) unless MODESWITCH_MASK is not set, switch skip block on and off, activate machine data, switch-on overstore, axis replacement, subroutine level abort, switch-on single block, switch dry run feedrate on and off, alarm with compensation block.

- Return: Delete distance-to-go, switchover after TEACH-IN, or deselection of MDI with corresponding MODESWITCH_MASK.

- N_PROG_EVENT_SPF: Parameterizing MD 20108
\$MC_PROG_EVENT_MASK parameterizes the events whereby N_PROG_EVENT_SPF is executed.

Bit1 = 1

Means that there is no stop in any user ASUB block. Exception: The single block stop has been explicitly activated via the SBLON command.

User ASUBs are linked to an interrupt channel by the part program command SETINT or via the PI- N_ASUP__. The interrupt channel is then activated via PLC or the high-speed inputs, and the user ASUBs are retracted.

This disables machine data MD20117 \$MC_IGNORE_SINGLEBLOCK_ASUP. The NCK behavior corresponds to the machine data assignment MD20117 \$MC_IGNORE_SINGLEBLOCK_ASUP= FFFFFFFF.

Bit2 = 1

Means that there is no stop in any intermediate block. Intermediate blocks are generated at, among other events, tool change, ADIS and complicated geometry.

Bit3 = 1

Means that there is no stop in the block search pickup block. The block search pickup block is the 1st block that is loaded into the main run at the start after the search target has been found in the program.

Bit4 = 1

Means that there is no stop in the INIT blocks. INIT blocks are generated from reset immediately after a part program start.

Bit5 = 1

Means that there is no stop in any subprogram block with the parameter DISPLOF.

Bit6 = 1

Means that there is no stop in any block in which the NCK cannot reorganize.

Reorganize is an internal procedure that is needed for mode change after JOG/JOGREF..., switch skip block on and off, activate machine data, axis replacement, switch on overstore, switch on single block, switch dry run feedrate on and off, subroutine level abort, user ASUBs delete distance-to-go, switch over after TEACH-IN. Reorganize is never needed in Reset state.

Example blocks in which reorganize is impossible:

- Tool change
- 1st block after the Repos procedure
- Block after an ASUB from JOG/aborted

Bit7 = 1

Means that there cannot be a stop in any block in which repositioning is impossible.

Reposition is an internal procedure that is needed for mode change after JOG/JOGREF..., switch skip block on and off, activate machine data, axis replacement, switch on overstore, switch on single block, switch dry run feedrate on and off, subroutine level abort, and possibly user ASUBs. Reposition is never needed in Reset state.

Example blocks in which reposition is impossible:

- G33 + blocks in which reorganize is impossible.

Bit8 = 1

Means that there is no stop in a residual block that does not contain traversing information.

Bit9 = 1

Means that there is no stop in a run in/main run synchronization block (e.g.STOPRE, \$Variable) that is repeated because of an interruption with Reorg (e.g. mode change).

Bit10= 1

Means that there is no stop in a "tool selection block". "Tool selection block" only occurs with tool management (magazine management or TMMG) active. This block gives the corresponding tool change command to the PLC.

This block is generally generated by T programming from the part program.

Example block "N1010 T="Drill" M6 D1"

Depending on machine data, the "tool selection block" can be held in the interpolator until the PLC has acknowledged the corresponding tool change (see MD20310 \$MC_TOOL_MANAGEMENT_MASK).

General machine data

However the program status remains in "run".

Bit11= 1

The control has to automatically generate implicit GET blocks for the axis replacement function (axis replacement: 2 or more channels control one axis alternately) if no explicit GET(D) has been programmed and the following block wants to traverse the axis. (The other channel had previously used this axis).

An explicitly programmed GET may appear as follows

"getd(x1,y1,z1) or get(x1,y1,z1)".

There is no stop at explicit or implicit GET blocks in the single block with this bit 11.

Bit12= 1

There is no stop in the single block type 2 in the SBLON block.

Bit13= 1

If an axis is pulled out in the middle of a block and possibly assigned to another channel, then there is no stop at the PRE-MATURE end of this block. This block follows a REPOSA in order to traverse it to the end, there is no stop until this end has been reached.

Bit14=1

In a part program line, in which a substitution subroutine is called due to NC language replacement, only one stop is performed under the condition that the subroutine includes PROC attribute SBLOF. It is irrelevant whether the subroutine is called at block start and/or end or whether it is exited with M17 or RET.

Bit15=1

Means that there is no stop in any user ASUB block. Exception: The single block stop has been explicitly activated via the SBLON command.

There are three different internal ASUBs that are triggered by different events.

- Repos: In the case of the events: change of operating mode to a manual mode (JOG, JOGREF,...) unless MODESWITCH_MASK is not set, switch skip block on and off, activate machine data, switch-on overstore, axis replacement, subroutine level abort, switch-on single block, switch dry run feedrate on and off, alarm with compensation block.

- Return: Delete distance-to-go, switchover after TEACH-IN, or deselection of MDI with corresponding MODESWITCH_MASK.

Related to:

MD20117 \$MC_IGNORE_SINGLEBLOCK_ASUP

10704	DRYRUN_MASK	N01	V1
-	Dry run feedrate activation	BYTE	PowerOn
-			
-	-	0	0
-		2	1/1

Description: DRYRUN_MASK == 0
 Dryrun can only be switched on or off at the end of the block.
 When DRYRUN_MASK = 1 is set, the dry run feedrate can also be activated during program execution (in the part program block).
 NOTICE!
 After activating dry run feedrate, the axes are stopped for the duration of the reorganization process.
 DRYRUN_MASK == 2
 Dryrun can be switched on or off in every phase and the axes are not stopped.
 NOTICE:
 However, the function does not become active until a "later" block in the program execution and this is with the next (implicit) StopRe block.
 Related to:
 SD42100 \$SC_DRY_RUN_FEED

10706	SLASH_MASK	N01	PG,A2
-	Activation of block skip	BYTE	PowerOn
-			
-	-	0	0
-		2	1/1

Description: If SLASH_MASK = 0, skip block can only be activated when stopped at the end of the block
 If SLASH_MASK = 1, skip block can also be activated during program execution.
 NOTICE!
 After activating skip block, the axes are stopped for the duration of the reorganization process.
 If SLASH_MASK = 2 ,skip block can be activated in every phase.
 Notice!
 However, the function does not become active until a "later" block in the program execution, and this is with the next (implicit) StopRe block.

10707	PROG_TEST_MASK	N01	K1
-	Program test mode	DWORD	PowerOn
-			
-	-	1	0
-		1	1/1

Description: Bit-coded mask for program test
 Bit 0 == 1 Program test cannot be deselected in 'Stopped' program status.
 Bits 1..31 Still unused.

General machine data

10708	SERUPRO_MASK	N01	K1
-	Seach run modes	DWORD	PowerOn
-			
-	-	0	0
		15	1/1

Description: Bit-coded mask for block search via program test (abbr. SERUPRO). SERUPRO block search is activated by the PI service `_N_FINDBL` mode parameter == 5. SERUPRO means SEarchRUN by PROgram test, that is proceed under program test from start of program to search target. Note: Program test does not move any axis.

Bit 0 == 0
There is a stop at M0 during the search phase

Bit 0 == 1
There is no stop at M0 during the search phase

Bit 1 == 0
Alarm 16942 aborts the search phase upon the part programm command START.

Bit 1 == 1
Alarm 16942 is switched off.
NOTICE:
A start program command may really start the other channel!

Bit 2 == 0
Switches the function "Group Serupro" off

Bit 2 == 1
Switches the function "Group Serupro" on.
"Group-Serupro" enables a search routine in which the start part program command is changed into a search routine for the other channel.

Bit 3 == 0
Compels all channels that have started Serupro to end Serupro simultaneously unless they are aborted via Reset or the channel reaches M30 without finding the search target. In other words, all channels that find the search target (including self-acting Serupro) terminate SERUPRO simultaneously.

Bit 3 == 1
Switches this function off

Bits 4 .. 31
Still unused.

General machine data

10709	PROG_SD_POWERON_INIT_TAB			EXP, N01	K1
-	Setting data to be initialized			DWORD	PowerOn
-					
802d-cu3	30	43200,43202	-	-	2/2
802d-ng2	30	43200,43202	-	-	2/2
802d-ng3	30	43200,43202	-	-	2/2
802d-tm1	30	43200,43202	-	-	1/1
802d-tm2	30	43200,43202	-	-	2/2
802d-tm3	30	43200,43202	-	-	2/2

Description:

Setting data to be initialized:

The values of the programmable SD indicated in this MD are set to their initial values on control power up.

Programmable setting data are:

	(GCODE)
SD42000 \$SC_THREAD_START_ANGLE	SF
SD42010 \$SC_THREAD_RAMP_DISP	DITS/DITE
SD42400 \$SC_PUNCH_DWELLTIME	PDELAYON
SD42800 \$SC_SPIND_ASSIGN_TAB	SETMS
SD43200 \$SA_SPIND_S G94,G95,G97,G971,G972	S wih
SD43202 \$SA_SPIND_CONSTCUT_S	S with G96,G961,G962
SD43210 \$SA_SPIND_MIN_VELO_G25	G25 S
SD43220 \$SA_SPIND_MAX_VELO_G26	G26 S
SD43230 \$SA_SPIND_MAX_VELO_LIMS	LIMS
SD43300 \$SA_ASSIGN_FEED_PER_REV_SOURCE	FPRAON
SD43420 \$SA_WORKAREA_LIMIT_PLUS	G26
SD43430 \$SA_WORKAREA_LIMIT_MINUS	G25
SD43700 \$SA_OSCILL_REVERSE_POS1	OSP1
SD43710 \$SA_OSCILL_REVERSE_POS2	OSP2
SD43720 \$SA_OSCILL_DWELL_TIME1	OST1
SD43730 \$SA_OSCILL_DWELL_TIME2	OST2
SD43740 \$SA_OSCILL_VELO	FA
SD43750 \$SA_OSCILL_NUM_SPARK_CYCLES	OSNSC
SD43760 \$SA_OSCILL_END_POS	OSE
SD43770 \$SA_OSCILL_CTRL_MASK	OSCTRL
SD43780 \$SA_OSCILL_IS_ACTIVE	OS

itation minus) are to be stored in the buffered RAM after every RESET, M02, M30 or M17.

--> PROG_SD_RESET_SAVE_TAB[0] = 43420

--> PROG_SD_RESET_SAVE_TAB[1] = 43430

See also: 'REDEF: change attributes of NC language elements', setting data/PRLOC

10711	NC_LANGUAGE_CONFIGURATION			EXP, N01	K1
-	NC language commands of inactive options / functions			DWORD	PowerOn
-					
802d-cu3	-	0	0	4	0/0
802d-ng2	-	1	0	4	0/0
802d-ng3	-	1	0	4	0/0
802d-tm1	-	2	0	4	0/0
802d-tm2	-	1	0	4	0/0
802d-tm3	-	1	0	4	0/0

Description:

Manner of handling language commands whose associated option or function has not been activated.

All programmable commands in an NC program or cycle program are language commands. Detailed information is available in the description of the language command STRINGIS.

ValueMeaning

 0: All language commands are known - especially those whose function has not been activated. That means that all language commands are programmable. Whether the required function is active is not detected until execution. If not, then a specific alarm is generated.

Option approved / not approved (for functions without options "Option approved" applies implicitly):

 1: All language commands are known. Language commands with options that have not been approved, are recognized at the beginning of the program interpretation and rejected with alarm 12553 "Option/function inactive".

Example:

If the option data for cylinder transformation has not been set, programming of TRACYL will be rejected with alarm 12553.

2: Only those language commands are known that correspond to the current scope of approved NCK software options. This means that options that are not approved are rejected with 12550 "Name not defined or option/function not available". In this case it is not possible to decide whether the relevant command is not known in Siemens NC language in general or whether it is simply not available on this system.

10714	M_NO_FCT_EOP	EXP, N07	K1,H2
-	M function for spindle active after reset	DWORD	PowerOn
-			
-	-	-1	-
-			2/2

Description: For spindles where a '2' is configured in MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET, no spindle reset is enabled with this M function when the part program is terminated. The spindle therefore remains active after the end of the part program.

Proposal: M32

Restrictions: see MD10715 \$MN_M_NO_FCT_CYCLE

Related to:

MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET

MD10714 \$MN_M_NO_FCT_EOP,

MD10715 \$MN_M_NO_FCT_CYCLE,

MD20094 \$MC_SPIND_RIGID_TAPPING_M_NR,

MD22254 \$MC_AUXFU_ASSOC_M0_VALUE

For external language mode:

MD10814 \$MN_EXTERN_M_NO_MAC_CYCLE,

MD10804 \$MN_EXTERN_M_NO_SET_INT

MD10806 \$MN_EXTERN_M_NO_DISABLE_INT,

MD10800 \$MN_EXTERN_CHAN_SYNC_M_NO_MIN,

MD10802 \$MN_EXTERN_CHAN_SYNC_M_NO_MAX

MD20095 \$MC_EXTERN_RIGID_TAPPING_M_NR

For nibbling:

MD26008 \$MC_NIBBLE_PUNCH_CODE

General machine data

10715	M_NO_FCT_CYCLE	EXP, N12, N07	H2,K1
-	M function to be replaced by a subroutine	DWORD	PowerOn
-			
-	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	2/2

Description: M number with which a subprogram is called.

The name of the subprogram is stated in MD10716 \$MN_M_NO_FCT_CYCLE_NAME[n]. If the M function defined with MD10715 \$MN_M_NO_FCT_CYCLE[n] is programmed in a part program block, the subprogram defined in MD10716 \$MNM_NO_FCT_CYCLE_NAME[n] is started at the end of the block. If the M function is programmed again in the subprogram, there is no longer substitution by a subprogram call. MD10715 \$MN_M_NO_FCT_CYCLE[n] acts both in Siemens mode G290 and in external language mode G291.

The subprograms configured with MD10716 \$MN_M_NO_FCT_CYCLE_NAME[n] and MD10717 \$MN_T_NO_FCT_CYCLE_NAME must not be active simultaneously in one block (line of a part program). This means that no more than one M/T function replacement can be active in any one block. Neither an M98 nor a modal subprogram call can be programmed in a block with the M function replacement.

Subprogram return and end of part program are also not permitted. Alarm 14016 is output in the event of a conflict.

Restrictions:

M functions with a fixed meaning and configurable M functions are checked for conflicting settings. A conflict is reported with an alarm.

The following M functions are checked:

- M0 to M5,
- M17, M30,
- M19,
- M40 to M45,
- M function for spindle/axis mode switchover according to MD20094 \$MC_SPIND_RIGID_TAPPING_M_NR (default: M70),
- M functions for nibbling/punching as configured in MD26008 \$MC_NIBBLE_PUNCH_CODE if activated by MD26012 \$MC_PUNCHNIB_ACTIVATION.
- M19, M96-M99 for applied external language (MD18800 \$MN_MM_EXTERN_LANGUAGE).

Exception: The M function for the tool change defined by MD22560 \$MC_TOOL_CHANGE_M_CODE.

10716	M_NO_FCT_CYCLE_NAME	EXP, N12, N07	K1
-	Subroutine name for M function replacement	STRING	PowerOn
-			
-	10	-	2/2

Description: The machine data contains the name of the cycle. This cycle is called if the M function has been programmed from MD10715 \$MN_M_NO_FCT_CYCLE.

If the M function is programmed in a motion block, the cycle is executed after the motion.

MD10715 \$MN_M_NO_FCT_CYCLE is active in both Siemens mode G290 and in external language mode G291.

If a T number is programmed in the call block, then the programmed T number can be polled in the cycle under the variable \$P_TOOL.

M and T function replacements must not be programmed simultaneously in one block. This means that not more than one M or T function replacement may be active in any one block.

Neither an M98 nor a modal subprogram call may be programmed in a block with M function replacement.

Moreover, neither subprogram return nor part program end are allowed.

Alarm 14016 is issued if there is a conflict.

Related to:

MD10715 \$MN_M_NO_FCT_CYCLE,
MD10717 \$MN_T_NO_FCT_CYCLE_NAME

10717	T_NO_FCT_CYCLE_NAME	EXP, N12, N07	K1
-	Name of tool-changing cycle for T function replacement	STRING	PowerOn
-			
-	-	-	2/2

Description: Cycle name for tool change routine on call-up with a T function.

If a T function is programmed in a part program block, the subprogram defined in T_NO_FCT_CYCLE_NAME is called at the end of the block.

The T number programmed can be polled in the cycle via system variables \$C_T / \$C_T_PROG as a decimal value and via \$C_TS / \$C_TS_PROG as a string (only with tool management). MD10717 \$MN_T_NO_FCT_CYCLE_NAME is active both in Siemens mode G290 and in external language mode G291.

MD10716 \$MN_M_NO_FCT_CYCLE_NAME and MD10717 \$MN_T_NO_FCT_CYCLE_NAME must not be active in one block at the same time, i.e. no more than one M/T function replacement can be active per block. Neither an M98 nor a modal subprogram call can be programmed in a block with a T function replacement. Furthermore, neither subprogram return nor part program end are allowed.

Alarm 14016 is output in the event of a conflict.

Related to:

MD10715 \$MN_M_NO_FCT_CYCLE,
MD10716 \$MN_M_NO_FCT_CYCLE_NAME

General machine data

10718	M_NO_FCT_CYCLE_PAR	EXP, N12, N07	K1
-	M function replacement with parameters	DWORD	PowerOn
-			
-	-	-1	-
-			2/2

Description: If an M function replacement was configured with MD10715 \$MN_M_NO_FCT_CYCLE[n] / MD10716 \$MN_M_NO_FCT_CYCLE_NAME[n], a parameter transfer via system variable can be specified for one of these M functions using MD10718 \$MN_M_NO_FCT_CYCLE_PAR, in the same way as T function replacement. The parameters stored in the system variables always refer to the part program line where the M function to be replaced was programmed.

The following system variables are available:

\$C_ME : Address extension of the replaced M function
 \$C_T_PROG : TRUE if address T was programmed
 \$C_T : Value of address T (Integer)
 \$C_TE : Address extension of address T
 \$C_TS_PROG : TRUE if address TS was programmed
 \$C_TS : Value of address TS (string, only with tool management)
 \$C_D_PROG : TRUE if address D was programmed
 \$C_D : Value of address D
 \$C_DL_PROG : TRUE if address DL was programmed
 \$C_DL : Value of address DL

10719	T_NO_FCT_CYCLE_MODE	EXP, N12, N07	K1
-	Setting of T function substitution	DWORD	PowerOn
-			
-	-	0	0
-			7
-			2/2

Description: This machine data parameterizes the execution of the replacement subprogram for the tool and tool offset selection.

Bit 0 = 0:

D or DL number is transferred to the replacement subprogram (default value)

Bit 0 = 1:

The D or DL number is not transferred to the replacement subprogram if the following conditions are fulfilled:

\$MC_TOOL_CHANGE_MODE = 1 Programming D/DL with T or M function with which the tool change cycle is called, in a part program line.

Bit 1 = 0

Execution of the replacement subprogram at end of block (default value)

Bit 1 = 1

Execution of the replacement subprogram at block start

Bit 2 = 0:

Execution of the replacement subprogram according to the setting of bit 1

Bit 2 = 1:

Execution of the replacement subprogram at block start and at end of block.

10720	OPERATING_MODE_DEFAULT	N01	H2
-	Setting of mode after power ON	BYTE	PowerOn
-			
-	1	7,7,7,7,7,7,7,7	0
		12	1/1

Description: Default modes of the mode groups after power ON.
 If no mode is selected by the PLC, all the channels associated with mode group n are in the mode preset by OPERATING_MODE_DEFAULT[n -1] after power ON:
 0 = Automatic mode
 1 = Automatic mode, submode REPOS
 2 = MDI mode
 3 = MDI mode, submode REPOS
 4 = MDI mode, submode Teach In
 5 = MDI mode, submode Reference point approach
 6 = JOG mode
 7 = JOG mode, submode Reference point approach
 8 = AUTO mode, submode Teach In
 9 = AUTO mode, submode Teach In, submode Reference point approach
 10 = AUTO mode, submode Teach In, submode Repos
 11 = MDI mode, submode Teach In, submode Reference point approach
 12 = MDI mode, submode Teach In, submode Repos

10722	AXCHANGE_MASK	EXP, N01	K5
-	Paramameters for axis replacement behavior	DWORD	PowerOn
-			
-	-	0x08	0
		0xFFFF	0/0

Description: The axis replacement behavior can be changed with this machine data.
 Bit0 = 1
 Means that there is an automatic axis replacement via channels even if the axis has been brought into a neutral state by Waitp.
 Bit1 = 1
 Means that an AXCTSWE fetches all the axis container axes that can be assigned to the channel by means of implicit GET or GETD, and an axis replacement is not permitted again until after the axis container rotation.
 Bit2 = 1
 Means that, in the case of a GET, an intermediate block without preprocessing stop is generated, and whether a reorganization is needed is not checked until main run.
 Bit3 = 1 means, that the NC carries out an axis replacement request for the VDI interface only for:
 - an axis exclusively controlled by the PLC
 (\$MA_BASE_FUNCTION_MASK Bit 4 == 1)

General machine data

- a permanently assigned PLC axis (\$MA_BASE_FUNCTION_MASK Bit 5 == 1)

For such axes, the VDI interface signal 'Axis replacement possible' is always 1.

For all other axes, the VDI interface signal 'Axis replacement possible' is always 0.

For permanently assigned PLC axes, an axis replacement is possible only from neutral axis to PLC axis

or from PLC axis to neutral axis.

Bit3 = 0 means that an axis replacement can be requested by the PLC for each axis.

For permanently assigned PLC axes, an axis replacement is only possible from neutral axis to PLC axis

or from PLC axis to neutral axis.

10731	JOG_MODE_KEYS_EDGETRIGGRD	EXP, N01	IAF
-	Functioning of the JOG keys	BOOLEAN	PowerOn
-			
-	-	TRUE	0/0

Description: This data determines whether the signals of the VDI interface, which set the JOG mode (progressive INC10000, ... INC1), work as switches (level triggered) or as push buttons (edge triggered). In the latter case, a setting is made in the NCK to retain the function of the key last pressed.

10735	JOG_MODE_MASK	EXP, N01	K1
-	Settings for JOG mode	DWORD	PowerOn
-			
-	-	0	0
-	-	0xff	2/2

Description: Bit 0:
Enables JOG in automatic.
JOG is enabled in automatic when all channels in the mode group are in the RESET state and no channel of the DRF mode group has been selected. The mode group changes internally to JOG with the +/- key and the handwheel, and the axis moves. After the JOG motion has ended, a change back to AUTO is also made internally.

Bit 1:
Position with AxFrame.
The function 'JOG to position' considers all axial frames and, in the case of an axis configured as geometry axis, the tool length offset.

Bit 2:
Travel in opposite direction.
The functions 'JOG to position' and 'Approach machine fixed point manually' allow travel in opposite direction, i.e. away from the specified position.

Bit 3:
Tool radius offset.
MD21020 \$MC_WORKAREA_WITH_TOOL_RADIUS is active with JOG motions of the geometry axes.

Bit 4:

Alarm suppression operating range limit in the basic coordinate system in JOG.

Alarms that would be output in JOG when an operating range limit is reached in the basic coordinate system, are suppressed.

Bit 5:

Alarm suppression operating range limit in the workpiece coordinate system in JOG.

Alarms that would be output in JOG when an operating range limit is reached in the workpiece coordinate system, are suppressed.

Bit 6, 7:

JOG of circles:

Bit 7 and bit 6 = 0: traversing the 2nd geometry axis of the active plane to PLUS for radius increase, traversing to MINUS for radius decrease independently of inner or outer machining being active.

Bit 7 = 1 and bit 6 = 0: traversing the 2nd geometry axis of the active plane to PLUS always travels in the direction of the limiting circle. This means that the radius is increased on inner machining and decreased on outer machining.

Bit 7 = 1 and bit 6 = 1: traversing the 2nd geometry axis of the active plane to MINUS always travels in the direction of the limiting circle. This means that the radius is increased on inner machining and decreased on outer machining.

Bits 8-31:

Currently unassigned.

10760	G53_TOOLCORR			N12	FBFA
-	Method of operation of G53, G153 and SUPA			DWORD	NEW CONF
-					
-	-	0	0	3	2/2

Description:

With this MD you define whether tool length offset and tool radius offset are also to be suppressed with language commands G53, G153 and SUPA

The machine data is bit-coded.

Bit 0 = 0: G53, G153 and SUPA cause block-by-block suppression of work offsets. The active tool length offset and tool radius offset remain active.

Bit 0 = 1: G53, G153 and SUPA cause block-by-block suppression of work offsets, active tool length offset and tool radius offset. The tool length behavior can be modified with bit 1.

Bit 1 is only evaluated, if the value of bit 0 is 1.

Bit1 = 0: with bit 0 set, the tool length is always suppressed with G53, G153 and SUPA.

Bit1 = 1: with bit 0 set the tool length is only suppressed with G53, G153 and SUPA, if a cutting edge is not selected in the same block (this can also be the cutting edge that is already active).

General machine data

10780	UNLOCK_EDIT_MODESWITCH	EXP, N01	-
-	Cancel start disable when editing a part program	BOOLEAN	PowerOn
-			
-	-	TRUE	-
-	-	-	0/0

Description: To avoid inconsistent states, a start disable is forced in Teach In mode when a part program is edited.
This start disable during editing can be canceled together with the operating algorithms of the individual MMCs by an NC reset or a mode group change.
0: Start disable when editing is also canceled with NC Reset
1: Start disable when editing is also canceled on a mode group change.

10800	EXTERN_CHAN_SYNC_M_NO_MIN	EXP, N12	H2
-	1st M function for channel synchronization	DWORD	PowerOn
-			
-	-	-1	-
-	-	-	0/0

Description: M number of the first M function which can be used to perform a channel (program) synchronization in ISO2/3 mode.
To avoid conflicts with standard M functions the lowest permissible value is 100. If you enter a value between 0 and 99, alarm 4170 will be issued.

10802	EXTERN_CHAN_SYNC_M_NO_MAX	EXP, N12	H2
-	Last M function for channel synchronization	DWORD	PowerOn
-			
-	-	-1	-
-	-	-	0/0

Description: M number of the last M function which can be used to perform a channel (program) synchronization in ISO2/3 mode.
In combination with MD10800 \$MN_EXTERN_CHAN_SYNC_M_NO_MIN, the machine data defines an M number range reserved for channel synchronization. This range may be a maximum of 10 times the number of channels as only 10 WAIT marks may be set for each channel.
Alarm 4170 is output if a value is entered between 0 and 99 or less than MD10800 \$MN_EXTERN_CHAN_SYNC_M_NO_MIN.

10804	EXTERN_M_NO_SET_INT			EXP, N12	H2,K1
-	M function to activate ASUB			DWORD	PowerOn
-					
802d-cu3	-	96	-	-	1/1
802d-ng2	-	96	-	-	-1/2
802d-ng3	-	96	-	-	-1/2
802d-tm1	-	96	-	-	1/1
802d-tm2	-	96	-	-	1/1
802d-tm3	-	96	-	-	1/1

Description: M function number used to activate an interrupt program (ASUB) in ISO2/3 mode. The interrupt program is always started by the 1st high-speed input of the numerical control.

The M number defined in the machine data replaces M96 in external language mode.

Restrictions: Refer to MD10715 \$MN_M_NO_FCT_CYCLE

Related to:

```
MD10714 $MN_M_NO_FCT_EOP,
MD10715 $MN_M_NO_FCT_CYCLE,
MD20094 $MC_SPIND_RIGID_TAPPING_M_NR,
MD22254 $MC_AUXFU_ASSOC_M0_VALUE
```

For external language mode:

```
MD10814 $MN_EXTERN_M_NO_MAC_CYCLE,
MD10804 $MN_EXTERN_M_NO_SET_INT
MD10806 $MN_EXTERN_M_NO_DISABLE_INT,
MD10800 $MN_EXTERN_CHAN_SYNC_M_NO_MIN,
MD10802 $MN_EXTERN_CHAN_SYNC_M_NO_MAX
MD20095 $MC_EXTERN_RIGID_TAPPING_M_NR
```

For nibbling:

```
$MC_NIBBLE_PUNCH_CODE
```

General machine data

10806	EXTERN_M_NO_DISABLE_INT		EXP, N12	H2,K1
-	M function to deactivate ASUB		DWORD	PowerOn
-				
802d-cu3	-	97	-	1/1
802d-ng2	-	97	-	-1/2
802d-ng3	-	97	-	-1/2
802d-tm1	-	97	-	1/1
802d-tm2	-	97	-	1/1
802d-tm3	-	97	-	1/1

Description: M function number used to deactivate an interrupt program (ASUB) in ISO2/3 mode.

The M number defined in the machine data replaces M97 in external language mode.

Restrictions: refer to MD10715 \$MN_M_NO_FCT_CYCLE

```
MD10714 $MN_M_NO_FCT_EOP,
MD10715 $MN_M_NO_FCT_CYCLE,
MD20094 $MC_SPIND_RIGID_TAPPING_M_NR,
MD22254 $MC_AUXFU_ASSOC_M0_VALUE
```

For external language mode:

```
MD10814 $MN_EXTERN_M_NO_MAC_CYCLE,
MD10804 $MN_EXTERN_M_NO_SET_INT
MD10806 $MN_EXTERN_M_NO_DISABLE_INT,
MD10800 $MN_EXTERN_CHAN_SYNC_M_NO_MIN,
MD10802 $MN_EXTERN_CHAN_SYNC_M_NO_MAX
MD20095 $MC_EXTERN_RIGID_TAPPING_M_NR
```

For nibbling:

```
MD26008 $MC_NIBBLE_PUNCH_CODE
```


10808	EXTERN_INTERRUPT_BITS_M96			EXP, N12	FBFA
-	Activate interrupt program (ASUB)			DWORD	PowerOn
-					
802d-cu3	-	0	-	-	1/1
802d-ng2	-	0	-	-	-1/2
802d-ng3	-	0	-	-	-1/2
802d-tm1	-	0	-	-	1/1
802d-tm2	-	0	-	-	1/1
802d-tm3	-	0	-	-	1/1

Description: Setting the various bits can influence the processing of the interrupt routine activated by M96 P...

Bit 0 = 0,
No interrupt program possible, M96/M97 are normal M functions

Bit 0 = 1,
Using M96/M97 to activate an interrupt program is allowed

Bit 1 = 0,
Continue processing part program at the final position of the next block after the interrupt block

Bit 1 = 1,
Continue processing part program from interrupt position

Bit 2 = 0,
The interrupt signal immediately interrupts the current block and starts the interrupt routine

Bit 2 = 1,
The interrupt routine will not be started until the end of the block

Bit 3 = 0,
Interrupt machining cycle at an interrupt signal

Bit 3 = 1,
Do not start interrupt program until the end of a machining cycle.

General machine data

10810	EXTERN_MEAS_G31_P_SIGNAL			EXP, N12	FBFA
-	Config. of measuring inputs for G31 P..			BYTE	PowerOn
-					
802d-cu3	4	1,1,1,1	0	3	2/2
802d-ng2	4	1,1,1,1	0	3	-1/2
802d-ng3	4	1,1,1,1	0	3	-1/2
802d-tm1	4	1,1,1,1	0	3	2/2
802d-tm2	4	1,1,1,1	0	3	2/2
802d-tm3	4	1,1,1,1	0	3	2/2

Description: This machine data defines the assignment of measurement inputs 1 and 2 to the P numbers programmed with G31 P1 (- P4). The machine data is bit-coded. Only bits 0 and 1 are evaluated. For example, if bit 0 = 1 in MD10810 \$MN_EXTERN_MEAS_G31_P_SIGNAL[1], the 1st measurement input is activated with G31 P2. If MD10810 \$MN_EXTERN_MEAS_G31_P_SIGNAL[3]=2, the 2nd measurement input is activated with G31 P4.

Bit 0: = 0, Do not evaluate measurement input 1 with G31 P1 (- P4)

Bit 0: = 1, Activate measurement input 1 with G31 P1 (- P4)

Bit 1: = 0, Do not evaluate measurement input 2 with G31 P1 (- P4)

Bit 1: = 1, Activate measurement input 2 with G31 P1 (- P4)

10812	EXTERN_DOUBLE_TURRET_ON			EXP, N12	FBFA
-	Double turret with G68			BOOLEAN	PowerOn
-					
802d-cu3	-	FALSE	-	-	2/2
802d-ng2	-	FALSE	-	-	-1/2
802d-ng3	-	FALSE	-	-	-1/2
802d-tm1	-	FALSE	-	-	2/2
802d-tm2	-	FALSE	-	-	2/2
802d-tm3	-	FALSE	-	-	2/2

Description: This machine data is used to determine whether double-slide machining (channel synchronization for 1st and 2nd channel) is to be started using G68 or whether the second tool of a double turret (= two closely-linked tools at a distance defined in the MD42162 SC_EXTERN_DOUBLE_TURRET_DIST) is to be activated.

FALSE:

Channel synchronization for double-slide machining

TRUE:

Load 2nd tool of a double turret (that is, activate \$SC_EXTERN_DOUBLE_TURRET_DISTANCE as additive zero offset and mirroring around Z axis)

10814	EXTERN_M_NO_MAC_CYCLE			EXP, N12	H2,K1
-	Macro call via M function			DWORD	PowerOn
-					
802d-cu3	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	2/2
802d-ng2	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	-1/2
802d-ng3	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	-1/2
802d-tm1	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	2/2
802d-tm2	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	2/2
802d-tm3	10	-1,-1,-1,-1,-1,-1,-1,-1,-1,-1	-	-	2/2

Description: A macro is called with this M number.
The name of the subprogram is stated in MD10815
\$MN_EXTERN_M_NO_MAC_CYCLE_NAME[n].
If the M function specified with MD10814
\$MN_EXTERN_M_NO_MAC_CYCLE[n] is programmed in a part program
block, the subprogram defined in MD10815
\$MN_EXTERN_M_NO_MAC_CYCLE_NAME[n] is started. All addresses pro-
grammed in the block are written into the corresponding variables.
If the M function is programmed again in the subprogram, there is
no longer a replacement by a subprogram call.
MD10814 \$MN_EXTERN_M_NO_MAC_CYCLE[n] is only active in the exter-
nal language mode G291.
The subprograms configured with MD10815
\$MN_EXTERN_M_NO_MAC_CYCLE_NAME[n] must not be active simulta-
neously in a block (part program line), i.e. only one M function
replacement can become active in any one block. Neither an M98 nor
a modal subprogram call may be programmed in the block with the M
function replacement.
Subprogram return and the part program end are also not permitted.
Alarm 14016 is issued in case of a conflict. Restrictions: see
MD10715 \$MN_M_NO_FCT_CYCLE
Related to:
MD10714 \$MN_M_NO_FCT_EOP,
MD10715 \$MN_M_NO_FCT_CYCLE,
MD20094 \$MC_SPIND_RIGID_TAPPING_M_NR,
MD22254 \$MC_AUXFU_ASSOC_M0_VALUE
For external language mode:
MD10814 \$MN_EXTERN_M_NO_MAC_CYCLE,
MD10804 \$MN_EXTERN_M_NO_SET_INT
MD10806 \$MN_EXTERN_M_NO_DISABLE_INT,
MD10800 \$MN_EXTERN_CHAN_SYNC_M_NO_MIN,
MD10802 \$MN_EXTERN_CHAN_SYNC_M_NO_MAX
MD20095 \$MC_EXTERN_RIGID_TAPPING_M_NR
For nibbling:
MD26008 \$MC_NIBBLE_PUNCH_CODE

General machine data

10815	EXTERN_M_NO_MAC_CYCLE_NAME		EXP, N12	H2
-	Name of subroutine for M function macro call		STRING	PowerOn
-				
802d-cu3	10		-	2/2
802d-ng2	10		-	-1/2
802d-ng3	10		-	-1/2
802d-tm1	10		-	2/2
802d-tm2	10		-	2/2
802d-tm3	10		-	2/2

Description: Name of the subprogram started by a call via the M function defined by MD10814 \$MN_EXTERN_M_NO_MAC_CYCLE[n].

10816	EXTERN_G_NO_MAC_CYCLE		EXP, N12	FBFA
-	Macro call via G function		DOUBLE	PowerOn
-				
802d-cu3	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	2/2
802d-ng2	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	-1/2
802d-ng3	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	-1/2
802d-tm1	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	2/2
802d-tm2	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	2/2
802d-tm3	50	-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1.,-1....	-	2/2

Description: G number for calling a macro.
The name of the subprogram is stated in MD10817 \$MN_EXTERN_G_NO_MAC_CYCLE_NAME[n].
If the G function specified with MD10816 \$MN_EXTERN_G_NO_MAC_CYCLE[n] is programmed in a part program block, the subprogram defined in MD10817 \$MN_EXTERN_M_NO_MAC_CYCLE_NAME[n] is started. All addresses programmed in the block are written in the corresponding \$C_xx variables.
No subprogram call is executed if a subprogram call is already active via an M/G macro or an M replacement. If a standard G function is programmed in this case, this code is executed. Otherwise, alarm 12470 is issued.
MD10816 \$MN_EXTERN_G_NO_MAC_CYCLE[n] is only active in the external language mode G291.
Only a single subprogram call may be included in any one block. This means that only a single M/G function replacement may be programmed in a block, and no additional subprogram (M98) or cycle call may be included in the block.
Furthermore, a subprogram return and a part program end are not permitted in the same block.
Alarm 14016 is issued in case of a conflict.

General machine data

10817	EXTERN_G_NO_MAC_CYCLE_NAME			EXP, N12	FBFA
-	Name of subroutine for G function macro call			STRING	PowerOn
-					
802d-cu3	50		-	-	2/2
802d-ng2	50		-	-	-1/2
802d-ng3	50		-	-	-1/2
802d-tm1	50		-	-	2/2
802d-tm2	50		-	-	2/2
802d-tm3	50		-	-	2/2

Description: Name of the subprogram started by call via the G function defined by MD10816 \$MN_EXTERN_G_NO_MAC_CYCLE[n].

10818	EXTERN_INTERRUPT_NUM_ASUP			EXP, N12	FBFA
-	Interrupt number for ASUB start (M96)			BYTE	PowerOn
-					
802d-cu3	-	1	1	8	1/1
802d-ng2	-	1	1	8	-1/2
802d-ng3	-	1	1	8	-1/2
802d-tm1	-	1	1	8	1/1
802d-tm2	-	1	1	8	1/1
802d-tm3	-	1	1	8	1/1

Description: Number of the interrupt input starting an asynchronous subprogram activated in ISO mode. (M96 <program number>)

10820	EXTERN_INTERRUPT_NUM_RETRAC			EXP, N12	FBFA
-	Interrupt number for rapid retraction (G10.6)			BYTE	PowerOn
-					
802d-cu3	-	2	1	8	2/2
802d-ng2	-	2	1	8	-1/2
802d-ng3	-	2	1	8	-1/2
802d-tm1	-	2	1	8	2/2
802d-tm2	-	2	1	8	2/2
802d-tm3	-	2	1	8	2/2

Description: Number of the interrupt input triggering rapid retraction to the position programmed with G10.6 in ISO mode.

General machine data

10880	MM_EXTERN_CNC_SYSTEM			N01, N12	FBFA
-	Definition of the control system to be adapted			DWORD	PowerOn
-					
802d-cu3	-	1	1	5	2/2
802d-ng2	-	1	1	5	-1/2
802d-ng3	-	1	1	5	-1/2
802d-tm1	-	1	1	5	2/2
802d-tm2	-	1	1	5	2/2
802d-tm3	-	1	1	5	2/2

Description: Definition of the external CNC system whose part programs are to be executed on the SINUMERIK control in addition to SINUMERIK code (ISO_1):

- 1: ISO_21: System Fanuc0 milling (5.1 and higher)
- 2: ISO_31: System Fanuc0 turning (P5.2 and higher)
- 3: External language via OEM application (P6.2 and higher)
- 4: ISO_22: System Fanuc0 Milling (P7 and higher)
- 5: ISO_32: System Fanuc0 Turning (P7 and higher)

10881	MM_EXTERN_GCODE_SYSTEM			N01, N12	FBFA
-	ISO_3 Mode: GCodeSystem			DWORD	PowerOn
-					
802d-cu3	-	0	0	2	2/2
802d-ng2	-	0	0	2	-1/2
802d-ng3	-	0	0	2	-1/2
802d-tm1	-	0	0	2	2/2
802d-tm2	-	0	0	2	2/2
802d-tm3	-	0	0	2	2/2

Description: Definition of the GCodeSystem to be actively executed in ISO_3 Mod (turning):

- Value = 0 : ISO_3: Code system B
- Value = 1 : ISO_3: Code system A
- Value = 2 : ISO_3: Code system C

10882	NC_USER_EXTERN_GCODES_TAB			N12	FBFA
-	List of user-specific G commands of an external NC language			STRING	PowerOn
-					
802d-cu3	60		-	-	2/2
802d-ng2	60		-	-	-1/2
802d-ng3	60		-	-	-1/2
802d-tm1	60		-	-	2/2
802d-tm2	60		-	-	2/2
802d-tm3	60		-	-	2/2

Description: List of G commands of external NC languages which have been reconfigured by the user.

The implemented G commands are to be taken from the current Siemens documentation for this programming language.

The list is structured as follows:

Even address: G command to be changed

Subsequent odd address: New G command

Only G codes can be reconfigured, e.g.: G20, G71.

10884	EXTERN_FLOATINGPOINT_PROG			N12	FBFA
-	Evaluation of programmed values without decimal point			BOOLEAN	PowerOn
-					
802d-cu3	-	TRUE	-	-	2/2
802d-ng2	-	TRUE	-	-	-1/2
802d-ng3	-	TRUE	-	-	-1/2
802d-tm1	-	TRUE	-	-	2/2
802d-tm2	-	TRUE	-	-	2/2
802d-tm3	-	TRUE	-	-	2/2

Description: This MD defines how programmed values without a decimal point are evaluated:

0: Values without a decimal point are interpreted in internal units. For example, X1000 = 1 mm (for 0.001 mm input resolution)
X1000.0 = 1000 mm

1: Values without decimal point are interpreted as mm, inch or degrees. For example, X1000 = 1000 mm X1000.0 = 1000 mm

Related to:

MD10886 \$MN_EXTERN_INCREMENT_SYSTEM

10886	EXTERN_INCREMENT_SYSTEM			N12	FBFA
-	Incremental system in external language mode			BOOLEAN	PowerOn
-					
802d-cu3	-	FALSE	-	-	2/2
802d-ng2	-	FALSE	-	-	-1/2
802d-ng3	-	FALSE	-	-	-1/2
802d-tm1	-	FALSE	-	-	2/2
802d-tm2	-	FALSE	-	-	2/2
802d-tm3	-	FALSE	-	-	2/2

Description: This machine data is active for external programming languages, that is if MD18800 \$MN_MM_EXTERN_LANGUAGE = 1.

This machine data specifies which incremental system is active:

0: Incremental system IS-B = 0.001 mm/degree
= 0.0001 inch

1: Incremental system IS-C = 0.0001 mm/degree
= 0.00001 inch

Related to:

MD10884 \$MN_EXTERN_FLOATINGPOINT_PROG

General machine data

10888	EXTERN_DIGITS_TOOL_NO			N12	FBFA
-	Digits for T number in ISO mode			BYTE	PowerOn
-					
802d-cu3	-	2	0	8	2/2
802d-ng2	-	2	0	8	-1/2
802d-ng3	-	2	0	8	-1/2
802d-tm1	-	2	0	8	2/2
802d-tm2	-	2	0	8	2/2
802d-tm3	-	2	0	8	2/2

Description: This machine data is only active when MD10880
`$MN_MM_EXTERN_CNC_SYSTEM == 2`.
Number of digits of the tool number in the programmed T word.
From the programmed T word, the number of leading digits specified
in MD10888 `$MN_EXTERN_DIGITS_TOOL_NO` are interpreted as the tool
number.
The following digits address the offset memory.

10890	EXTERN_TOOLPROG_MODE			N12	FBFA
-	Tool change programming for external language			DWORD	PowerOn
-					
802d-cu3	-	0x0	-	-	2/2
802d-ng2	-	0x0	-	-	-1/2
802d-ng3	-	0x0	-	-	-1/2
802d-tm1	-	0x0	-	-	2/2
802d-tm2	-	0x0	-	-	2/2
802d-tm3	-	0x0	-	-	2/2

Description: Configuration for programming the tool change in an external programming language:

Bit0=0:

Only active if MD10880 `$MN_MM_EXTERN_CNC_SYSTEM =2`: The tool number and offset number are programmed in the T word.
`$MN_DIGITS_TOOLNO` defines the number of leading digits that form the tool number.

Example:

```
$MN_DIGITS_TOOLNO = 2
T=1234      ; Tool number 12,
             ; Offset number 34
```

Bit0=1:

Only active if MD10880 `$MN_MM_EXTERN_CNC_SYSTEM =2`: Only the tool number is programmed in the T word. Offset number = Tool number. `$MN_DIGITS_TOOLNO` is irrelevant.

Example:

```
T=12      ; Tool number 12
           ; Offset number 12
```


Bit1=0:

Only active if MD10880 \$MN_MM_EXTERN_CNC_SYSTEM =2: A leading 0 is added if the number of digits programmed in the T word is the same as that in MD10888 \$MN_EXTERN_DIGITS_TOOL_NO.

Bit1=1:

Only active if MD10880 \$MN_MM_EXTERN_CNC_SYSTEM =2: If the number of digits programmed in the T word is equal to the number of digits defined in MD10888 \$MN_EXTERN_DIGITS_TOOL_NO, the programmed number is both the offset number and the tool number

Bit2=0:

Only active if \$MN_MM_EXTERN_CNC_LANGUAGE =2: ISO T offset selection only with D (Siemens cutting edge number)

Bit2=1:

Only active if \$MN_MM_EXTERN_CNC_LANGUAGE =2: ISO T offset selection only with H (\$TC_DPH[t,d])

Bit6=0:

The offset memories for the tool length and tool radius are linked so that tool length and tool radius are always selected when either H or D is programmed.

Bit6=1:

The offset memories for the tool length and tool radius are not linked, so that the number of the tool length value is selected when H is programmed, and the number of the tool radius value is selected when D is programmed.

10900	INDEX_AX_LENGTH_POS_TAB_1			N09	T1
-	Number of positions for indexing axis table 1			DWORD	Reset
-					
802d-cu3	-	0	0	60	2/2
802d-ng2	-	0	0	60	2/2
802d-ng3	-	0	0	60	2/2
802d-tm1	-	0	0	60	0/0
802d-tm2	-	0	0	60	2/2
802d-tm3	-	0	0	60	2/2

Description:

The indexing position table is used to assign the axis positions in the valid unit of measurement (mm, inches or degrees) to the indexing positions [n] on the indexing axis. The number of indexing positions used in table 1 is defined by MD10900 \$MN_INDEX_AX_LENGTH_POS_TAB_1.

These indexing positions must be assigned valid values in table 1. Any indexing positions in the table above the number specified in the machine data are ignored. Up to 60 indexing positions (0 to 59) can be entered in the table.

Table length = 0 means that the table is not evaluated. If the length is not equal to 0, then the table must be assigned to an axis with MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB.

If the indexing axis is defined as a rotary axis (MD30300 \$MA_IS_ROT_AX = "1") with modulo 360° (MD30310 \$MA_ROT_IS_MODULO = "1"), the machine data defines the last indexing position after which, with a further traversing movement in the positive direction, the indexing positions begin again at 1.

General machine data

Special cases:

Alarm 17090 "Value violates upper limit" if values over 60 are entered in MD10900 \$MN_INDEX_AX_LENGTH_POS_TAB_1.

Related to:

MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB (axis is an indexing axis)

MD10910 \$MN_INDEX_AX_POS_TAB_1 (indexing position table 1)

MD30300 \$MA_IS_ROT_AX (rotary axis)

MD30310 \$MA_ROT_IS_MODULO (modulo conversion for rotary axis)

10910	INDEX_AX_POS_TAB_1			N09	T1
mm/inch, degrees	Indexing position table 1			DOUBLE	Reset
-					
802d-cu3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-ng2	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-ng3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-tm1	1	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	0/0
802d-tm2	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-tm3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2

Description:

The indexing position table is used to assign the axis positions in the valid unit of measurement (mm, inches or degrees) to the indexing positions [n] on the indexing axis.

[n] = indexing for the entry of the indexing positions in the indexing position table.

Range: 0 y n x 59, where 0 corresponds to the 1st indexing position and 59 to the 60th indexing position.

Note.

Programming with the absolute indexing position (e.g. CAC) starts with indexing position 1. This corresponds to the indexing position with indexing n = 0 in the indexing position table.

The following should be noted when entering the indexing positions:

- Up to 60 different indexing positions can be stored in the table.
- The 1st entry in the table corresponds to indexing position 1; the nth entry corresponds to indexing position n.
- The indexing positions must be entered in the table in ascending order (starting with the negative and going to the positive traversing range) with no gaps between the entries. Consecutive position values must not be identical.
- If the indexing axis is defined as a rotary axis (MD30300 \$MA_IS_ROT_AX = "1") with modulo 360° (MD30310 \$MA_ROT_IS_MODULO = "1"), then the position values are limited to a range of 0° x pos. < 360°.

The number of indexing positions used in the table is defined by MD10900 \$MN_INDEX_AX_LENGTH_POS_TAB_1.

Entering the value 1 in axial MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB assigns indexing position table 1 to the current axis.

Special cases:

Alarm 17020 "Illegal array index" if over 60 positions are entered in the table.

Related to:

MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB (axis is an indexing axis)

MD10900 \$MN_INDEX_AX_LENGTH_POS_TAB_1 (number of indexing positions used in table 1)

MD30300 \$MA_IS_ROT_AX (rotary axis)

MD30310 \$MA_ROT_IS_MODULO (modulo conversion for rotary axis)

10920	INDEX_AX_LENGTH_POS_TAB_2			N09	T1
-	Number of positions for indexing axis table 2			DWORD	Reset
-					
802d-cu3	-	0	0	60	2/2
802d-ng2	-	0	0	60	2/2
802d-ng3	-	0	0	60	2/2
802d-tm1	-	0	0	60	0/0
802d-tm2	-	0	0	60	2/2
802d-tm3	-	0	0	60	2/2

Description:

The indexing position table is used to assign the axis positions in the valid unit of measurement (mm, inches or degrees) to the indexing positions [n] on the indexing axis. The number of indexing positions used in table 2 is defined by MD10920 \$MN_INDEX_AX_LENGTH_POS_TAB_2.

These indexing positions in table 2 must be assigned valid values. Any indexing positions in the table above the number specified in the machine data are ignored.

Up to 60 indexing positions (0 to 59) can be entered in the table. Table length = 0 means that the table is not evaluated. If the length is not equal to 0, the table must be assigned to an axis with MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB.

If the indexing axis is defined as a rotary axis (MD30300 \$MA_IS_ROT_AX = "1") with modulo 360° (MD30310 \$MA_ROT_IS_MODULO = "1"), the machine data defines the last indexing position after which, with a further traversing movement in the positive direction, the indexing positions begin again at 1.

Not relevant for tool magazines (revolvers, chain magazines)

Special cases:

Alarm 17090 "Value violates upper limit" if a value over 60 is entered in MD10920 \$MN_INDEX_AX_LENGTH_POS_TAB_2.

Related to:

MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB (axis is an indexing axis)

MD10930 \$MN_INDEX_AX_POS_TAB_2 (indexing position table 2)

MD30300 \$MA_IS_ROT_AX (rotary axis)

MD30310 \$MA_ROT_IS_MODULO (modulo conversion for rotary axis)

General machine data

10930	INDEX_AX_POS_TAB_2		N09	T1
mm/inch, degrees	Indexing position table 2		DOUBLE	Reset
-				
802d-cu3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	2/2
802d-ng2	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	2/2
802d-ng3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	2/2
802d-tm1	1	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	0/0
802d-tm2	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	2/2
802d-tm3	60	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	2/2

Description:

The indexing position table is used to assign the axis positions in the valid unit of measurement (mm, inches or degrees) to the indexing positions [n] on the indexing axis.

[n] = indexing for the entry of the indexing positions in the indexing position table.

Range: 0 y n x 59, where 0 corresponds to the 1st indexing position and 59 to the 60th indexing position.

Note:

Programming with the absolute indexing position (e.g. CAC) starts with indexing position 1. This corresponds to the indexing position with indexing n = 0 in the table.

The following should be noted when entering the indexing positions:

- Up to 60 different indexing positions can be stored in the table.
- The 1st entry in the table corresponds to indexing position 1; the nth entry corresponds to indexing position n.
- The indexing positions should be entered in the table in ascending order (starting with the negative and going to the positive traversing range) with no gaps between the entries. Consecutive position values must not be identical.
- If the indexing axis is defined as a rotary axis (MD30300 \$MA_IS_ROT_AX = "1") with modulo 360° (MD30310 \$MA_ROT_IS_MODULO = "1"), then the position values are limited to a range of 0° x pos. < 360°.

The number of indexing positions used in the table is defined by MD10920 \$MN_INDEX_AX_LENGTH_POS_TAB_2.

Entering the value 1 in axial MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB assigns indexing position table 1 to the current axis.

Special cases:

Alarm 17020 "Illegal array index" if over 60 positions are entered in the table.

Related to:

MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB (axis is an indexing axis)
MD10920 \$MN_INDEX_AX_LENGTH_POS_TAB_2 (number of indexing positions used in table 2)
MD30300 \$MA_IS_ROT_AX (rotary axis)
MD30310 \$MA_ROT_IS_MODULO (modulo conversion for rotary axis)

General machine data

10940	INDEX_AX_MODE			EXP	T1
-	Settings for indexing position			DWORD	PowerOn
-					
802d-cu3	-	1	0	1	1/1
802d-ng2	-	1	0	1	1/1
802d-ng3	-	1	0	1	1/1
802d-tm1	-	1	0	1	0/0
802d-tm2	-	1	0	1	1/1
802d-tm3	-	1	0	1	1/1

Description: Affects the display of indexing positions (AA_ACT_INDEX_AX_POS_NO and aaActIndexAxPosNo).

Bit 0 = 0:

Indexing position display changes on reaching/passing the indexing position (indexing range lies between the indexing positions, compatible behavior).

Bit 0 = 1:

Indexing position display changes on passing the half indexing axis position (indexing range lies quasi symmetrically round the indexing position)

11100	AUXFU_MAXNUM_GROUP_ASSIGN			N01, N07, N02	H2
-	Number of auxiliary functions distr. amongst aux. fct. groups			DWORD	PowerOn
-					
-	-	1	1	255	2/2

Description: The maximum number of auxiliary functions that can be assigned to a group by

AUXFU_ASSIGN_TYPE,
AUXFU_ASSIGN_EXTENTION,
AUXFU_ASSIGN_VALUE and
AUXFU_ASSIGN_GROUP.

This number includes only the user-defined auxiliary functions, not the predefined auxiliary functions.

Related to:

MD22010 \$MC_AUXFU_ASSIGN_TYPE[n].

General machine data

11110	AUXFU_GROUP_SPEC	N07	H2
-	Auxiliary function group specification	DWORD	PowerOn
-			
-	128	0x81,0x21,0x41,0x41, 0x41,0x41,0x41...	1/1

Description: Defines the output options for the auxiliary functions belonging to a group.

However, the output option of an auxiliary function configured by MD22080 \$MC_AUXFU_PREDEF_SPEC[preIndex] or MD22035 \$MC_AUXFU_ASSIGN_SPEC[auxIndex] has a higher priority.

Bit 0=1"Normal" acknowledgement after an OB1 cycle
 Bit 1=1"Quick" acknowledgement with OB40
 Bit 2=1No predefined auxiliary function
 Bit 3=1No output to PLC
 Bit 4=1Spindle response after acknowledgement by the PLC
 Bit 5=1Output prior to motion
 Bit 6=1Output during motion
 Bit 7=1Output at end of block
 Bit 8=1No output after block search types 1, 2, 4
 Bit 9=1Collection during block search type 5 (SERUPRO)
 Bit 10 = 1 No output during block search type 5 (SERUPRO)
 Bit 11 = 1Cross-channel auxiliary function (SERUPRO)
 Bit 12 = 1Output via synchronized action
 Bit 13 = 1 Implicit auxiliary function
 Bit 14 = 1 Active M01
 Bit 15 = 1 No output during running-in test
 Bit 16 = 1 Nibbling off
 Bit 17 = 1 Nibbling on
 Bit 18 = 1 Nibbling

The MD must be defined for each existing auxiliary function group. The index [n] corresponds to the auxiliary function group: 0...63. The assignment of individual auxiliary functions to specific groups is defined in channel-specific machine data (AUXFU_PREDEF_TYPE, AUXFU_PREDEF_EXTENTION, AUXFU_PREDEF_VALUE, AUXFU_PREDEF_GROUP, AUXFU_ASSIGN_TYPE, AUXFU_ASSIGN_EXTENTION, AUXFU_ASSIGN_VALUE, AUXFU_ASSIGN_GROUP).

M0, M1, M2, M17 and M30 are assigned to group 1 by default. The specification of this group (0x81: output duration 1 OB1 pass, output at end of block) must not be changed.

All spindle-specific auxiliary functions (M3, M4, M5, M19, M70) are assigned to group 2 by default.

If several auxiliary functions with different output types (before / during / at end of motion) are programmed in one motion block, then the output of the individual auxiliary functions occurs in accordance with their output types.

All auxiliary functions are output simultaneously in a block without motion.

Default setting:

```
AUXFU_GROUP_SPEC[0]=81H
AUXFU_GROUP_SPEC[1]=21H
AUXFU_GROUP_SPEC[2]=41H
...
AUXFU_GROUP_SPEC[n]=41H
```

General machine data

11120	LUD_EXTENDED_SCOPE	N01	PG
-	Function "program global user data (PUD)" is active	BOOLEAN	PowerOn
-			
-	-	FALSE	-
-	-	-	0/0

Description: Activate function "Program-global user data (PUD)":
MD = 0: User data of the main program level are only active on this level.
MD = 1: User data of the main program level are also visible in the subprogram levels.

11140	GUD_AREA_SAVE_TAB	N01	-
-	Additional saving for GUD modules	DWORD	Immediately
-			
-	9	0,0,0,0,0,0,0,0,0	-
-	-	-	0/0

Description: This data indicates in which area the contents of the GUD module are also saved.

MD11140 \$MN_GUD_AREA_SAVE_TAB[0] : SGUD_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[1] : MGUD_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[2] : UGUD_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[3] : GUD4_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[4] : GUD5_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[5] : GUD6_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[6] : GUD7_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[7] : GUD8_DEF
MD11140 \$MN_GUD_AREA_SAVE_TAB[8] : GUD9_DEF

BitNo. Hexadec. Meaning when bit is set
Value
0 (LSB) 0x00000001 TOA area

11160	ACCESS_EXEC_CST	N01	-
-	Execution right for /_N_CST_DIR	BYTE	PowerOn
-			
-	-	7	-
-	-	-	2/2

Description: Execution right assigned to the program stored in directory /_N_CST_DIR :
Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0
Machine data can only be written with values 0 and 1, and with the corresponding password also active.

General machine data

11161	ACCESS_EXEC_CMA	N01	-
-	Execution right for /_N_CMA_DIR	BYTE	PowerOn
-			
-	-	7	-
-	-	-	2/2

Description: Execution right assigned to the programs stored in directory /_N_CMA_DIR :

Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0

Machine data can only be written with values 0 and 1, and with the corresponding password also active.

11162	ACCESS_EXEC_CUS	N01	-
-	Execution right for /_N_CUS_DIR	BYTE	PowerOn
-			
-	-	7	-
-	-	-	3/3

Description: Execution right assigned to the programs stored in directory /_N_CUS_DIR :

Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0

Machine data can only be written with values 0, 1 and 2, and with the corresponding password also active.

11165	ACCESS_WRITE_CST	N01	-
-	Write protection for directory /_N_CST_DIR	DWORD	PowerOn
-			
-	-	-1	-
-	-	-	2/2

Description: Set write protection for cycle directory /_N_CST_DIR:
Assigned to the programs:

Value -1: Keep the value currently set
Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0

The machine data can only be written with values 0 and 1, and with the corresponding password also active.

11166	ACCESS_WRITE_CMA	N01	-
-	Write protection for directory /_N_CMA_DIR	DWORD	PowerOn
-			
-	-	-1	-
-	-	-	2/2

Description: Set write protection for cycle directory /_N_CMA_DIR:
Assigned to the programs:
Value -1: Keep the value currently set
Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0
The machine data can only be written with values 0 and 1, and with the corresponding password also active.

11167	ACCESS_WRITE_CUS	N01	-
-	Write protection for directory /_N_CUS_DIR	DWORD	PowerOn
-			
802d-cu3	-	-1	-
802d-ng2	-	-1	-
802d-ng3	-	-1	-
802d-tm1	-	-1	-
802d-tm2	-	-1	-
802d-tm3	-	-1	-

Description: Set write protection for cycle directory /_N_CUS_DIR:
Assigned to the programs:
Value -1: Keep the value currently set
Value 0: Siemens password
Value 1: Machine OEM password
Value 2: Password of startup engineer, service
Value 3: End user password
Value 4: Keyswitch position 3
Value 5: Keyswitch position 2
Value 6: Keyswitch position 1
Value 7: Keyswitch position 0
The machine data can only be written with values 0, 1 and 2, and with the corresponding password also active.

General machine data

11170	ACCESS_WRITE_SACCESS	N01	-
-	Write protection for _N_SACCESS_DEF	BYTE	PowerOn
-			
-	-	7	-
-	-	-	2/2

Description: Set write protection for definition file
 /_N_DEF_DIR/_N_SACCESS_DEF:
 Value 0: Siemens password
 Value 1: Machine OEM password
 Value 2: Password of startup engineer, service
 Value 3: End user password
 Value 4: Keyswitch position 3
 Value 5: Keyswitch position 2
 Value 6: Keyswitch position 1
 Value 7: Keyswitch position 0
 The machine data can only be written with values 0 and 1, and with the corresponding password also active.

11171	ACCESS_WRITE_MACCESS	N01	-
-	Write protection for _N_MACCESS_DEF	BYTE	PowerOn
-			
-	-	7	-
-	-	-	2/2

Description: Set write protection for definition file
 /_N_DEF_DIR/_N_SACCESS_DEF:
 Value 0: Siemens password
 Value 1: Machine OEM password
 Value 2: Password of startup engineer, service
 Value 3: End user password
 Value 4: Keyswitch position 3
 Value 5: Keyswitch position 2
 Value 6: Keyswitch position 1
 Value 7: Keyswitch position 0
 The machine data can only be written with values 0 and 1, and with the corresponding password also active.

11172	ACCESS_WRITE_UACCESS	N01	-
-	Write protection for _N_UACCESS_DEF	BYTE	PowerOn
-			
-	-	7	-
-	-	-	3/3

Description: Set write protection for definition file
 /_N_DEF_DIR/_N_UACCESS_DEF:
 Value 0: Siemens password
 Value 1: Machine OEM password
 Value 2: Password of startup engineer, service
 Value 3: End user password
 Value 4: Keyswitch position 3
 Value 5: Keyswitch position 2
 Value 6: Keyswitch position 1
 Value 7: Keyswitch position 0
 The machine data can only be written with values 0, 1 and 2, and with the corresponding password also active.

11200	INIT_MD	EXP, N01	IAF, IAD, IA
-	Standard machine data loaded at next Power On	BYTE	PowerOn
-			
-	-	0	-
-	-	-	0/0

Description: A power on must be triggered after setting MD11200 \$MN_INIT_MD. The function is executed and the MD reset to "0" at power on.

Meaning of the input:

Bit 0 set:
All machine data (with the exception of the memory-configuring data) will be overwritten with the compiled values at the next NCK power on.

Bit 1 set:
All memory-configuring machine data will be overwritten with the compiled values at the next NCK power on.

Bit 2 set:
The OEM machine data brought in by compile cycles will be deleted from the buffered memory at the next power on.

Bit 3 set:
All setting data will be overwritten with the compiled values at the next power on.

Bit 4 set: All option data will be overwritten with the compiled values at the next power on.

INIT_MD is automatically set to 0 at power on.

Memory configuring MDs are described in:
References: /IAD/, Installation and Startup Guide, Memory Configuration

- MD10010 \$MN_ASSIGN_CHAN_TO_MODE_GROUP
- All machine data starting with "MM_"
 - MD 18000 - 18999 (general MD)
 - MD 28000 - 28999 (channel-specific MD)
 - MD 38000 - 38999 (axis-specific MD)

General machine data

11210	UPLOAD_MD_CHANGES_ONLY			N01, N05	IAD
-	Machine data backup of changed machine data only			BYTE	Immediately
-					
-	-	0x0F	-	-	2/2

Description:

Select differential MD upload:

Bit0 (LSB) Effectiveness of the differential upload with TEA files (machine files)

0: All data are output

1: Only those MDs which have changed in comparison to the compiled values are output

Bit1 efficiency of differential upload for INI files

0: all data are output

1: only MDs changed from the value compiled in are output

Bit2 Change to an array element

0: Complete array is output

1: Only those elements of an array which have changed are output

Bit3 R parameters (only for INI files)

0: All R parameters are output

1: Only those R parameters not equal to '0' are output

Bit4 Frames (only for INI files)

0: All frames are output

1: Only those frames which are not zero frames are output.

Bit5 Tool data (cutting edge parameters) (only for INI files)

0: All tool data are output

1: Only those tool data not equal to '0' are output.

11220	INI_FILE_MODE			N01, N05	G2
-	Error response to INI file errors			BYTE	Reset
-					
-	-	1	0	2	0/0

Description:

If, while reading machine data files (INI files) into controls, data are read in

- that are faulty or
- do not agree with the check sum

then alarms are generated and the reading in may be aborted. The following control behaviors can be selected via machine data settings:

0: Output of an alarm, abort on detection of 1st error. (As SW versions 1 and 2).

1: Output of an alarm, continuation of execution. An alarm with the number of errors is output at the end of execution.

2: Execution continues despite possible errors. An alarm with the number of errors is output at the end of execution.

11230	MD_FILE_STYLE			N01, N05	IAD
-	Structure of machine data backup files			BYTE	Immediately
-					
-	-	3	-	-	0/0

Description: Appearance of a machine data file at 'upload'

Bit 0 (LSB): Line check sum is generated

Bit 1:
MD numbers are generated

Bit 2:
Channel axis name as field index with axis-MD in the TEA file

Bit 3:
With an NCU-link, the MDs of the LINK axes are also output.

Bit 4:
All local axes are output (even when they are not activated by MD20070 \$MC_AXCONF_MACHAX_USED)

Active:
The change in the data becomes active on the start of the upload for the next area.

Default setting:
The line check sums and MD numbers are generated, but not channel names as field index with axis-MD.

11240	PROFIBUS_SDB_NUMBER			N01, N05	K4, FBU
-	SDB number			DWORD	PowerOn
-					
-	4	0,-1,0	-1	7	2/2

Description: Only for PROFIBUS/PROFINET with selection option of autonomous SDB data management (802d, 828d):
Number of the system data block (SDB) used for configuring the I/Os.

11241	PROFIBUS_SDB_SELECT			N01, N05	-
-	SDB source selection			DWORD	PowerOn
-					
-	-	0	0	3	2/2

Description: Only for PROFIBUS/PROFINET with selection option of autonomous SDB data management (802d, 828d):
If MD11240 \$MN_PROFIBUS_SDB_NUMBER > 0, SDBs are loaded directly from the directory:
MD11241 \$MN_PROFIBUS_SDB_SELECT = 0: /siemens/sinumerik/sdb/...
MD11241 \$MN_PROFIBUS_SDB_SELECT = 1: /addon/sinumerik/sdb/...
MD11241 \$MN_PROFIBUS_SDB_SELECT = 2: /oem/sinumerik/sdb/...
MD11241 \$MN_PROFIBUS_SDB_SELECT = 3: /user/sinumerik/sdb/...

General machine data

11250	PROFIBUS_SHUTDOWN_TYPE	EXP, N01	G3,FBU
-	PROFIBUS/PROFINET shutdown handling	BYTE	PowerOn
-			
-	-	0	0
-	-	2	2/2

Description: For PROFIBUS/PROFINET only:
 Handling of PROFIBUS/PROFINET when shutting down NCK (NCK reset)
 Value 0:
 The bus is shut down directly from cyclic operation, without 'prewarning'
 Value 1:
 When shutting down NCK, the bus is changed to the CLEAR state for at least 20 cycles. Then, it is shut down. If this is not possible on the hardware side, the procedure described for value 2 is used instead.
 Value 2:
 When shutting down NCK, the bus is changed to a state where all drives are sent a zero word as control word1 and control word2 (pseudoclear) for at least 20 cycles. The bus itself remains in the Operate status.

11270	DEFAULT_VALUES_MEM_MASK	N01	A2
-	Activation of default values for NC language elements	DWORD	PowerOn
-			
-	-	1	-
-	-	-	7/2

Description: Activation of the function 'Memory for initialization values of NC language elements'
 Bit Hex. Meaning
 value

 0: (LSB) 0x1 default values GUD
 Meaning of the individual bits:
 Bit 0 = 0:
 The default values stated for the definition are not stored
 Bit 0 = 1:
 The default values stated for the definition are stored persistently. The memory reserved via MD18150 \$MN_MM_GUD_VALUES_MEM is used for this purpose.
 The memory reserved via MD18150 \$MN_MM_GUD_VALUES_MEM should be increased by the size required for default values.
 If this size cannot be determined, the memory should be doubled and adaptations should be made later if required.
 The stored default values can be restored, provided that the corresponding programming (REDEF) has been performed.

11280	WPD_INI_MODE	N01	IAD
-	Handling of INI files in workpiece directory	BYTE	PowerOn
-			
-	-	0	0
-	-	1	0/0

Description: Processing mode of INI files in the workpiece directory:

Value = 0:
 An INI file, `_N_werkstück_INI`, stored in the workpiece directory is executed on the first NC start after workpiece selection.

Value = 1:
 INI files with the names of the selected part program and extensions are executed on the first NC start after workpiece selection

SEA,
 GUD,
 RPA,
 UFR,
 PRO,
 TOA,
 TMA and
 CEC
 .

11290	DRAM_FILESYSTEM_MASK	N01	S7
-	Select directories in DRAM	DWORD	PowerOn
-			
-	-	0x3f	0/0

Description: Bit0-n = 0:
 The files of the corresponding directory should be stored in SRAM

1:
 The files of the corresponding directory should be stored in DRAM.

Bit0 CST directory (Siemens cycles)
 Bit1 CMA directory (machine manufacturer's cycles)
 Bit2 CUS directory (user cycles)
 Bit3 MPF directory (main programs)
 Bit4 SPF directory (subprograms)
 Bit5 WPD directory (workpieces)

General machine data

11291	DRAM_FILESYST_SAVE_MASK	N01	S7
-	Back up of directories in DRAM	DWORD	PowerOn
-			
-	-	0x3f	0/0

Description: Bit0-n = 0:
No backup is performed. The files stored on NCK are lost if the control is switched off.

1:
Backup in the FFS of the NC card takes place if the files are located in DRAM.

Bit0 CST directory (Siemens cycles)
Bit1 CMA directory (machine manufacturer cycles)
Bit2 CUS directory (user cycles)
Bit3 MPF directory (main programs)
Bit4 SPF directory (subprograms)
Bit5 WPD directory (workpieces)

11292	DRAM_FILESYST_CONFIG	EXP	-
-	Configuration of the DRAM file system	BYTE	PowerOn
-			
-	-	0x22	0/0

Description: Configuration of the DRAM file system.
It is not permitted to change the default value!

Bit0/1:
Background memory for the DRAM file system

Bit4/5:
Memory for a fast backup during editing of DRAM files.

11294	SIEM_TRACEFILES_CONFIG	EXP	-
-	Configuration of the SIEM* trace file	DWORD	PowerOn
-			
-	-	0	1/1

Description: Configuration of the tracefiles SIEM*

Bit0:
Additional information about the PDUs sent is to be entered in `_N_SIEMDOMAINSEQ_MPF` for download

Bit1:
Additional information about the PDUs received is to be entered in `_N_SIEMDOMAINSEQ_MPF` for download

11297	PROTOK_IPOCYCLE_CONTROL	N01	-
-	Prevent overrun of IPO time level	BYTE	PowerOn
-			
-	10	1,1,1,1,1,1,1,1,1,1	0 1 1/1

Description: Setting whether an overflow of the time level is to be prevented during the recording of data in the time level of the IPO.
If applicable, data sets are discarded when the function is active, and are not entered in the log file in order to prevent an impending overflow of the IPO time level.
This may mean that data sets are also then lost if a level overflow would not yet have occurred with the function inactive.

General machine data

11298	PROTOK_PREPTIME_CONTROL		N01	-
-	Interruption time prep time level in seconds.		DOUBLE	PowerOn
-				
-	10	1.0,1.0,1.0,1.0,1.0,1.0, 1.0,1.0,1.0...	-	0/0

Description: Time in seconds, for which the prep time level may be blocked. If the PREP does not manage to pass through within the set time, the cyclic events are not logged. It is thus ensured that operation cannot be completely blocked by data recording.

11300	JOG_INC_MODE_LEVELTRIGGRD		N01	H1,R1
-	INC and REF in jog mode		BOOLEAN	PowerOn
-				
-	-	TRUE	-	1/1

Description: 1: Jog mode for JOG-INC and reference point approach
 JOG-INC:
 When the traversing key is pressed in the required direction (e.g. +), the axis begins to traverse the set increment. If the key is released before the increment has been completely traversed, the movement is interrupted and the axis stops. If the same key is pressed again, the axis completes the remaining distance-to-go until this is 0.

0: Continuous operation for JOG-INC and reference point approach
 JOG-INC:
 When the traversing key is pressed (first rising edge) the axis travels the whole set increment. If the same key is pressed again (second rising edge) before the axis has completed traversing the increment, the movement is aborted, i.e. not completed.

The differences in axis travel behavior between the jog mode and continuous operation in incremental traversing are described in detail in the relevant chapters.

For travel behavior in reference point approach see
 References: /FB/, R1, "Reference Point Approach"
 MD irrelevant for:
 Continuous traversing (JOG continuous)

11310	HANDWH_REVERSE		N09	H1
-	Threshold for direction change handwheel		BYTE	PowerOn
-				
-	-	2	-	2/2

Description: Handwheel travel:
 Value = 0: no immediate traversing in the opposite direction
 Value > 0: immediate traversing in the opposite direction if the handwheel is turned in the opposite direction by at least the indicated number of pulses

General machine data

11320	HANDWH_IMP_PER_LATCH	N09	H1
-	Handwheel pulses per detent position	DOUBLE	PowerOn
-			
-	6	1.,1.,1.,1.,1.,1.	2/2

Description: The connected handwheels are adapted to the control in MD11320 \$MN_HANDWH_IMP_PER_LATCH.
The number of pulses generated by the handwheel for each handwheel detent position has to be entered. The handwheel pulse weighting must be defined separately for each connected handwheel (1 to 3). With this adaptation, each handwheel detent position has the same effect as one press of the traversing key in incremental traversal.
Entering a negative value reverses the direction of rotation of the handwheel.

11322	CONTOURHANDWH_IMP_PER_LATCH	N09	H1
-	Contour handwheel pulses per detent position	DOUBLE	PowerOn
-			
802d-cu3	6	1.,1.,1.,1.,1.,1.	2/2
802d-ng2	6	1.,1.,1.,1.,1.,1.	0/0
802d-ng3	6	1.,1.,1.,1.,1.,1.	0/0
802d-tm1	6	1.,1.,1.,1.,1.,1.	0/0
802d-tm2	6	1.,1.,1.,1.,1.,1.	0/0
802d-tm3	6	1.,1.,1.,1.,1.,1.	0/0

Description: Adaptation factor to the hardware of the contour handwheel:
Enter the number of pulses issued per detent position by the contour handwheel.
Because of this normalization, a detent position of the contour handwheel corresponds to one press of a key with incremental jog processes.
Sign reversal reverses the direction of evaluation.

11324	HANDWH_VDI_REPRESENTATION	N01	OEM
-	Display of handwheel number in VDI Interface	DWORD	PowerOn
-			
-	-	0	0
-	-	0	1
-	-	0	0/0

Description: The number of the handwheel is displayed in the channel/axis-specific signals of the VDI interface:
Value = 0 :
Bit coded (1 of 3, only 3 handwheels can be displayed)
Value = 1 :
Binary coded (6 handwheels can be displayed)

General machine data

11330	JOG_INCR_SIZE_TAB			EXP, N09	H1
-	Increment size for INC/handwheel			DOUBLE	PowerOn
-					
-	5	1.,10.,100.,1000.,10000.	-	-	1/1

Description: In incremental traversal or handwheel travel, the number of increments to be traversed by the axis can be defined by the user, e.g. via the machine control panel.

In addition to the variable increment size (INCvar), 5 fixed increment sizes (INC...) can also be set.

The increment size for each of these 5 fixed increments is defined collectively for all axes by entering values in JOG_INCR_SIZE_TAB [n]. The default setting is INC1, INC10, INC100, INC1000 and INC10000.

The entered increment sizes are also active for DRF.

The size of the variable increment is defined in SD41010 \$SN_JOG_VAR_INCR_SIZE.

Related to:

MD31090 \$MA_JOG_INCR_WEIGHT (weighting of an increment for INC/manual)

NC/PLC interface signal V3300 1001.0-4,1005.0-4,1009.0-4
(geometry axis 1-3 active machine function: INC1; ...;
INC10000)

NC/PLC interface signal V390x 0005.0 - .5
(active machine function: INC1; ...; INC10000).

11346	HANDWH_TRUE_DISTANCE			N01	H1,P1,W1
-	Handwheel default path or velocity			BYTE	PowerOn
-					
-	-	0	0	7	2/2

Description: 0: The default settings of the handwheel are velocity defaults. Braking during handwheel standstill is executed on the shortest travel path.

1: The default settings of the handwheel are path defaults.

No pulses are lost. Due to limiting to a maximum permitted speed, axes may be trailing.

2: Effects as with value=0, but with longer deceleration path during handwheel standstill.

3: Effects as with value=1, but with longer deceleration path during handwheel standstill.

11350	HANDWHEEL_SEGMENT			N09	H1
-	Handwheel segment			BYTE	PowerOn
-					
802d-cu3	3	2,2,0,0,0,0	-	-	1/1
802d-ng2	2	2,2,0,0,0,0	-	-	1/1
802d-ng3	2	2,2,0,0,0,0	-	-	1/1
802d-tm1	2	2,2,0,0,0,0	-	-	1/1
802d-tm2	2	2,2,0,0,0,0	-	-	1/1
802d-tm3	2	2,2,0,0,0,0	-	-	1/1

General machine data

Description: Machine data defines which hardware segment the handwheel is connected to:

```

0 = SEGMENT_EMPTY      ;no handwheel
1 = SEGMENT_840D_HW    ;handwheel at 840D HW
2 = SEGMENT_802DSL_HW  ;handwheel at 802DSL HW
5 = SEGMENT_PROFIBUS   ;handwheel at PROFIBUS
7 = SEGMENT_ETHERNET   ;handwheel at Ethernet

```

11351	HANDWHEEL_MODULE			N09	H1
-	Handwheel module			BYTE	PowerOn
-					
802d-cu3	3	1,1,0,0,0,0	0	6	1/1
802d-ng2	2	1,1,0,0,0,0	0	6	1/1
802d-ng3	2	1,1,0,0,0,0	0	6	1/1
802d-tm1	2	1,1,0,0,0,0	0	6	1/1
802d-tm2	2	1,1,0,0,0,0	0	6	1/1
802d-tm3	2	1,1,0,0,0,0	0	6	1/1

Description: Machine data specifies the hardware module to which the handwheel is connected.
(Content dependent on MD11350 \$MN_HANDWHEEL_SEGMENT):

```

0 = no handwheel configured
$MN_HANDWHEEL_MODUL =
1 ;SEGMENT_840D_HW
1 ;SEGMENT_802DSL_HW
1..6 ;SEGMENT_PROFIBUS/PROFINET ;index for MD11353
$MN_HANDWHEEL_LOGIC_ADDRESS[(x-1)]
1 ;SEGMENT_ETHERNET

```

11352	HANDWHEEL_INPUT			N09	H1
-	Handwheel connection			BYTE	PowerOn
-					
802d-cu3	3	1,2,0,0,0,0	0	6	1/1
802d-ng2	2	1,2,0,0,0,0	0	6	1/1
802d-ng3	2	1,2,0,0,0,0	0	6	1/1
802d-tm1	2	1,2,0,0,0,0	0	6	1/1
802d-tm2	2	1,2,0,0,0,0	0	6	1/1
802d-tm3	2	1,2,0,0,0,0	0	6	1/1

Description: Machine data which is intended to select the handwheels connected to a hardware module:

```

0 = No handwheel configured
1..6 = Handwheel connection to HW module/Ethernet interface

```

11353	HANDWHEEL_LOGIC_ADDRESS			N04, N10	H1
-	Logical handwheel slot addresses			DWORD	PowerOn
-					
-	6	0,0,0,0,0,0	0	8191	1/1

Description: For PROFIBUS/PROFINET only:
Logical start address of the hand wheel slots if handwheels are connected by PROFIBUS/PROFINET (\$MN_HANDWHEEL_SEGMENT = 5)

General machine data

11380	MONITOR_ADDRESS	EXP, N06	STZ
-	Test MD for changing the NCK code or data for Safety Integrated	DWORD	Immediately
NBUP, NDLD			
-	-	0	-

Description: Address of an NCU memory location whose content is displayed in the MD11382 \$MN_MONITOR_DISPLAY_INT and 11384 \$MN_MONITOR_DISPLAY_REAL.
There are no protective measures incorporated to prevent unauthorized access. That is the input address points to a memory area protected by the system or unoccupied, so refreshing the MD values MONITOR_DISPLAY_INT and MONITOR_DISPLAY_REAL causes a time-out and the NCU remains at a standstill (watchdog LED lights up)!
There is a list of permissible addresses for the test, which depends on the software version.
A restart resets the address to its starting value.
It then points to any writable and readable memory location that is not used by any other system function.

11382	MONITOR_DISPLAY_INT	EXP, N06	STZ
-	INTEGER display of the addressed location	DWORD	Immediately
NBUP, NDLD			
-	-	0	-

Description: INTEGER display of the addressed location SW3.2
This MD displays the content of the NCU memory location that is defined in MD11380 \$MN_MONITOR_ADDRESS. The displayed values contains the four consecutive bytes from the stated address, whereby the first byte is on the extreme right and the fourth on the extreme left.
This MD is a display MD whose content is read anew on every display refresh. Writing to this MD is ignored (without alarm).

11384	MONITOR_DISPLAY_REAL	EXP, N06	STZ
-	REAL display of the addressed location	DOUBLE	Immediately
NBUP, NDLD			
-	-	0.0	-

Description: REAL display of the addressed location SW3.2
This MD displays the content of the NCU memory location that is defined in MDMD11380 \$MN_MONITOR_ADDRESS. The displayed value interprets the eight consecutive memory locations from the stated address as a floating point number with double accuracy (64 bit IEEE format). 0.0 is displayed if this value does not correspond to a valid floating point number.
This MD is a display MD whose content is read anew on every display refresh. Writing to this MD is ignored (without alarm).

General machine data

11386	MONITOR_INPUT_INT	EXP, N06	STZ
-	INTEGER input for the addressed location	DWORD	Immediately
NBUP, NDLD			
-	-	0	-

Description: INTEGER input for addressed location, SW3.2
The value is written with the aid of MD11390 \$MN_MONITOR_INPUT_STROBE into the address selected with MD11380 \$MN_MONITOR_ADDRESS. The 4 bytes from the stated address are taken over by writing the value 1 in the MD11390 \$MN_MONITOR_INPUT_STROBE.
In so doing, the byte moves to the extreme right of the memory location MONITOR_ADDRESS, the byte to its left into the memory location MONITOR_ADDRESS+1, etc.

11388	MONITOR_INPUT_REAL	EXP, N06	STZ
-	REAL input for addressed location	DOUBLE	Immediately
NBUP, NDLD			
-	-	0.0	-

Description: REAL input for addressed location, SW3.2
The value is written with the aid of MD11390 \$MN_MONITOR_INPUT_STROBE into the address selected with MD11380 \$MN_MONITOR_ADDRESS. The 8 bytes from the stated address are taken over by writing the value 2 in the MD11390 \$MN_MONITOR_INPUT_STROBE.
In so doing, the input floating point number is converted into 64 bit IEEE format.

11390	MONITOR_INPUT_STROBE	EXP, N06	STZ
-	Overwrite the addressed location with MONITOR_INT/REAL	BYTE	Immediately
NBUP, NDLD			
-	-	0	0

Description: Overwriting the addressed location with MD11386 \$MN_MONITOR_INPUT_INT/REAL or MD11388 \$MN_MONITOR_INPUT_REAL SW3.2
An input into this MD takes over the content of the MD11386 \$MN_MONITOR_INPUT_INT or the MD11388 \$MN_MONITOR_INPUT_REAL. The input value decides which data is taken over:
0: No action
1: Content of MD11386 \$MN_MONITOR_INPUT_INT is written in four NCU bytes from MD11380 \$MN_MONITOR_ADDRESS.
2: Content of MD11388 \$MN_MONITOR_INPUT_REAL is written in eight NCU bytes from MD11380 \$MN_MONITOR_ADDRESS.
The content of MONITOR_INPUT_STROBE is reset to 0 after the take-over (no action). A new input can therefore be made immediately.
In order to familiarize oneself with this function, one should first leave MD11380 \$MN_MONITOR_ADDRESS at its default value. One can then write data without causing damage.

Examples:

```

MONITOR_INPUT_INT = 55AA
MONITOR_INPUT_STROBE = 1
=> in MONITOR_DISPLAY_INT appears 55AA
MONITOR_INPUT_REAL = 1.234
MONITOR_INPUT_STROBE = 2
=> in MONITOR_DISPLAY_REAL appears 1.234

```

Caution!!!

Writing data to unknown addresses can even destroy the NCK system program! That may have unforeseen consequences (danger to machine and people!). If the machine and those present survive such an action undamaged, the system program can usually be restored by power off/on.

11398	AXIS_VAR_SERVER_SENSITIVE	EXP	B3
-	Axis-Var server response	BYTE	PowerOn
-			
-	-	0	-

Description: The axis-variable server supplies the data for the OPI blocks SMA/SEMA, SGA/SEGA and SSP.
 If no value can be supplied for an axis (e.g. because the axis is a link axis) then a default value (usually 0) is returned.
 For debugging purposes, this machine data can be used to set the axis-var-server to sensitive so that an error message is returned instead of a default value.
 0: default value
 1: error message

11400	TRACE_SELECT	EXP	-
-	Activation of internal trace functions	DWORD	PowerOn
-			
-	-	0	-

Description: Bit string for activating internal trace functions for NCK time measurements, analog output of variables etc.

11405	TCI_TRACE_ACTIVE	EXP	-
-	Activation of internal task trace function	BOOLEAN	PowerOn
-			
-	-	FALSE	-

Description: Control the activation of the TCI interface for the NRKpro. It will activate the tci and kernel task traces modules.

General machine data

11410	SUPPRESS_ALARM_MASK	EXP, N06	D1,M3,K3,S1,V1, W1
-	Mask for support of special alarm outputs	DWORD	PowerOn
-			
-	-	0x108003	0
		0xFFFFFFFF	0/0

Description: Mask for suppressing special alarm outputs
 Bit set: The corresponding alarm (warning) is NOT generated.

Bit 0:
 Alarm 15110 "Channel %1 block %2 REORG not possible"

Bit 1:
 Alarm 10763 "Channel %1 block %2. The path component of the block in the contour plane is zero"

Bit 2:
 Alarm 16924 "Channel %1 Caution: program testing can modify tool/magazine data"
 --> Note: The alarm is only a message alarm

Bit 3:
 Alarm 22010 "Channel %1 spindle %2 block %3. Actual gear stage does not correspond to the set gear stage"

Bit 4:
 Alarm 17188 "Channel %1 D number %2 with tool T nos. %3 and %4 defined"
 Alarm 17189 "Channel %1 D number %2 of the tools at magazine/magazine locations %3 and %4 defined". The two alarms are of equal status and only message alarms.

Bit 5:
 Alarm 22071 "TO unit %1 tool %2 duplo no. %3 is active but not in the active wear grouping." The alarm is only a message alarm.

Bit 6:
 Alarm 4027 "NOTICE! MD %1 was also changed for the other axes of the axis container %2 "
 Alarm 4028 "NOTICE! The axial MDs in the axis container will be aligned on the next runup "

Bit 7:
 Alarm 22070 "TO unit %1 please change tool T= %2 into magazine. Repeat data backup". The alarm is only a message alarm.

Bit 8:
 Alarm 6411 "Channel %1 tool %2 with duplo no. %3 has reached tool prewarning limit"
 Alarm 6413 "Channel %1 tool %2 with duplo no. %3 has reached tool monitoring limit."
 The two alarms are only message alarms. They occur during the program execution.

Bit 9:
 Alarm 6410 "TO unit %1 tool %2 with duplo no. %3 has reached tool prewarning limit ."
 Alarm 6412 "TO unit %1 tool %2 with duplo no. %3 has reached tool monitoring limit ".
 The two alarms are only message alarms. They occur as a result of an operator action.

Bit10:
 Alarm 10604 "channel %1 block %2 "Thread lead increase too high"
 Alarm 10605 "channel %1 block %2 "Thread lead decrease too high"

Bit 11:
 Alarm 14088 "Channel 51 block %2 axis %3 doubtful position".

Bit 12:
 Alarm 10607 "Channel %1 block %2 tapping cannot be executed with frame."

Bit13:
 Alarm 10704 " channel %1 block %2 Protection area monitoring is not guaranteed."

Bit14:
 Alarm 21701 "Measuring reactivated too soon (<2 IPO cycles)"

Bit15:
 Alarm 5000 "Communication order cannot be executed"

Bit16:
 Alarm 21600 "Monitoring active for ESR"

Bit17:
 Alarm 16945 "Channel %1 action %2<ALNX> is delayed until block end"
 Note: The alarm is only a message alarm.

Bit18:
 Alarm 10750 "Channel %1 block %2 Activation of the tool radius compensation without tool number"

Bit19: Alarm 17193 "Channel %1 block %2 The active tool ist no longer at tool holder no./spindle no. %3, program %4"

Bit20:
 Alarm 2900 "Reboot is delayed"

Bit21:
 Alarm 22012 "Channel %1 block %2. Leading axis %3 is in simulation mode"
 Alarm 22013 "Channel %1 block %2. Following axis %3 is in simulation mode"
 Alarm 22014 "Channel %1 block %2. The dynamics of leading axis %3 and following axis %4 are very different"
 Alarm 22040 "Channel%1 Block %3 Spindle %2 not referenced with zero mark" is no longer checked (cyclically) with
 Bit21 set after power ON of the closed loop position control.

Bit22:
 Alarm 26080 "Channel %1 retraction position of axis %2 not programmed or invalid"
 Alarm 26081 "Channel %1 single axis trigger axis %2 is triggered, but axis is not PLC controlled"

Bit23:
 Alarm 16949 "Correspondence between marks of channel %1 and channel %2 is invalid"

Bit24:
 Alarm 16950 "Channel %1 search run with holding block"

Bit25:
 Alarm 22016 "Channel %1 block %2 following spindle %3 in range of reduced acceleration capacity"

General machine data

Bit26:

Alarm 22015 "Channel %1 block %2 following spindle %3 no dynamic for additional motion"

Bit27:

Alarms 16112 and 22030 "Channel %1 block %2 following spindle %3 impermissible programming"

Bit28:

Alarm 26083 "Channel %1 ESR for PLC controlled axis %2 was triggered"

Bit29:

Alarm 16772 "Channel %1 block %2 axis %3 is following axis, coupling is opened"

Bit30:

Alarm 16600 "Channel %1 block %2 spindle %3 gear stage change not possible"

Bit31:

Alarm 16774 "Channel %1 axis %2 synchronisation aborted"

11411	ENABLE_ALARM_MASK	EXP	D1,K1
-	Activation of warnings	DWORD	Reset
-			
-	-	0	-

Description:

Mask for generating alarms that are normally suppressed.

Bit set: Alarms of this alarm group are output.

Bit not set: Alarms of this alarm group are not output.

Bit Hex.Meaning

value

=====

0: 0x1 Alarms that have SHOWALARMAUTO as the alarm response are output.

1: 0x2 Alarms that have SHOWWARNING as the alarm response are output.

2: 0x4 Alarm 22280 "Thread power up path too short" is output.

3: 0x8 Alarms that are triggered by the NCU LINK MODULE are switched on.

4: 0x10 Alarm 10883 "Chamfer or rounding must be shortened" allowed.

5: 0x20 Alarm 20096 "Brake test aborted" is output.

6: 0x40 Alarm 16956 "Program cannot be started because of global start disable" is output.

Alarm 14005 "Program cannot be started because of program-specific start disable" is output. Alarm can only be switched on in channel status RESET, in all other channel states it is output without conditions.

- 7: 0x80Alarm 16957 "Stop delay range is suppressed" is output.
 8: 0x100Alarm 1011 fine coding150019 or 150020 "Incorrect axis number in the LINK".
 9: 0x200Alarm 22033 Diagnostics 1 to 6 for "Track synchronism" (linkages).
 10: 0x400Alarm 15122 "PowerOn after Powerfail: %1 data were restored, thereof %2 machine data, %3 errors" is output.
 11: 0x800Alarms 10722, 10723, 10732 or 10733 are output instead of alarms 10720, 10721, 10730 or 10731.
 12: 0x1000Alarm 22033 diagnostics greater than or equal to 7 for "Track synchronism" (linkages)

11412	ALARM_REACTION_CHAN_NOREADY	EXP, N01	D1
-	Alarm response CHAN_NOREADY permitted	BOOLEAN	PowerOn
-			
-	FALSE	-	0/0

Description: This MD is used for compatibility with the PLC systems older than SW4.1.
 If this MD is not set, the behavior implemented before SW4.1 (configured alarm reaction) is set
 With SW 4.1 and higher, it is possible to set signal CHANNEL_NOREADY on the PLC in response to alarms.
 If this MD is not set, then the alarm handler internally re-configures BAG_NOREADY into CHAN_NOREADY.

11413	ALARM_PAR_DISPLAY_TEXT	EXP, N01	D1
-	Alarm parameter as text output	BOOLEAN	PowerOn
-			
-	FALSE	-	0/0

Description: If the MD is set, texts can be output as alarm parameters instead of numbers.

11414	ALARM_CLR_NCSTART_W_CANCEL	EXP, N01	D1
-	Clear NCSTART alarms with CANCEL	BOOLEAN	PowerOn
-			
-	FALSE	-	0/0

Description: If this MD is set, then alarms that have ClearInfo=NCSTART are cleared by the Alarm Cancel button as well as by NC-Start.
 If this MD is not set, then NCSTART alarms are not cleared by Cancel.
 The purpose of this MD is to provide compatibility with system behavior.

General machine data

11415	SUPPRESS_ALARM_MASK_2	EXP, N06	-
-	Masking of alarm outputs	DWORD	PowerOn
-			
-	-	0xE	-
-			0/0

Description: Mask for suppressing special alarm outputs
 Bit set:Corresponding alarm (warning) is NOT triggered.
 Bit Hex. Meaning
 value
 =====
 =====
 0: 0x116773 "Channel %1 axis %3 is following axis. The axis/spindle disables of the leading axes are different."
 1: 0x22100 "NCK battery warning level reached"
 2101 "NCK battery alarm"
 2102 "NCK battery alarm"
 2: 0x42120 "NCK fan alarm" (no effect on modules with a design requiring a fan)
 3: 0x815120 "PowerFail: Display buffer overflow"
 4: 0x1015187 "Error during execution of PROGEVENT file"
 5: 0x2015188 "Error during execution of ASUB file"
 6: 0x4026120 "\$AA_ESR_ENABLE = 1 and axis is to become neutral"
 26121 "Axis is neutral and \$AA_ESR_ENABLE =1 is to be set"
 26123 "\$AA_ESR_ENABLE = 1 is to be set, but \$MA_ESR_REACTION is not set"
 26124 "\$AC_TRIGGER triggered, but axis is neutral, ESR ignores this axis"
 7: 0x80:10724 "Software limit violated at block start"
 10734 "Operating range limit violated at block start"
 10737 "WCS operating range limit violated at block start"
 8: 0x10014008 "WRITE command in /_N_EXT_DIR"
 10734 "Operating range limit violated at block start"
 10737 "WCS operating range limit violated at block start"
 9: 0x20014006 "Invalid program name"
 10: 0x4004006 "Maximum number of activatable axes exceeded"
 11: 0x80016017 "LIFTFAST ignores this axis, as it is not applicable to this type of axis."

11450	SEARCH_RUN_MODE	EXP, N01	K1,TE3,N4,H2,Z1
-	Parameterization for search run	DWORD	PowerOn
-			
-	-	0	0
		0x3F	1/1

Description: The behavior during the action blocks after search run can be affected by the following bits:

Bit 0 = 0:
Machining is stopped after loading of the last action block after search run, the NC/PLC interface signal V3300 0000.6 (last action block active) and alarm 10208 is output.

Bit 0 = 1:
Machining is stopped with the loading of the last action block after search run, and the NC/PLC interface signal V3300 0000.6 (last action block active) is set. Alarm 10208 is not output until the PLC requests it by setting the NC/PLC interface signal V3200 0001.6 (PLC action finished).

Usage:
Starting an ASUB from the PLC after search run.
The message to the operator that another NC start is required in order to continue with the program is not to be displayed until after the end of the ASUB.

Bit1 = 1
Automatic ASUB start after output of the action blocks (see also MD11620 \$MN_PROG_EVENT_NAME). Alarm 10208 is not output until the ASUB has finished.

Bit2 = 0:
Spindle: The auxiliary functions are output in the action blocks

Bit2 = 1:
The output of the auxiliary functions in the action blocks is suppressed. The spindle programming collected by search run can be output at a later point in time (e.g. in an ASUB).
The program data for this are stored in the following system variables:
\$P_SEARCH_S,
\$P_SEARCH_SDIR,
\$P_SEARCH_SGEAR,
\$P_SEARCH_SPOS,
\$P_SEARCH_SPOS.MODE.

Bit 3 = 1:
The cascaded search run is disabled (default setting: release).
Cascaded search run means that the search run is restarted immediately after finding a search target.

Bit 4:Reserved

Bit 5 = 0:
During block search on a nibbling block the 1st nibbling stroke is not executed.

Bit 5 = 1:
During block search on a nibbling block a punching stroke is triggered at block start (1st nibbling stroke).

General machine data

11460	OSCILL_MODE_MASK			N09	P5
-	Mode mask for asynchronous oscillation			DWORD	PowerOn
-					
-	-	0x0	0	0xFFFF	0/0

Description:

Bit 0

Value 1

In the case of block search, the oscillation movement is started immediately after NC start, i.e. during approach to approach position, provided it has been activated in the program section being processed.

Value 0

(default value)

The oscillation movement is not started until the approach position is reached.

11470	REPOS_MODE_MASK			EXP, N01	K1
-	Repositioning properties			DWORD	PowerOn
-					
-	-	0x8	0	0xFFFF	1/1

Description:

This bit mask can be used to set the behavior of the control during repositioning.

Bit no. Meaning when bit set

0 (LSB)

The dwell time is continued in the residual block from where it was interrupted. (If the bit is not set, the dwell time is repeated completely).

1 Reserved

2 When the bit is set, the repositioning of individual axes can be prevented or delayed via the VDI interface.

3 When the bit is set, positioning axes are repositioned in the approach block during search run via program test.

4 As 3, but after every Repos, not only during search run.

5 When the bit is set, changed feeds and spindle speeds already become valid in the residual block, otherwise not until the following block.

6 When the bit is set, neutral axes and positioning spindles are repositioned after SERUPRO as command axes in the approach block.

7 The bit changes the behavior of the VDI-AXIN interface signal "Repos Delay". The level of "Repos Delay" is read if REPOSA is interpreted. Axes that are neither geo nor orientation axes are then excluded from the REPOS, that is REPOS does NOT move these axes.

11480	PLC_OB1_TRACE_DEPTH			EXP, N03, N09	-
-	Buffer depth of PLC trace data at OB1			DWORD	PowerOn
-					
-	-	2	2	8	0/0

Description:

Buffer depth of PLC trace data at OB1.

Multiple values of PLC data are buffered, between the time of collection in the PLC and the time of inspection in NCK. Variables traced at "OB1" are collected once per complete PLC scan, but can only be inspected once per IPO cycle.

The buffer size must accommodate at least one more value than the total number of buffered values to be inspected. This is to prevent NCK from inspecting a value that the PLC is in the process of collecting.

A good value to start with is one more than MD10074

\$MN_PLC_IPO_TIME_RATIO.

The larger the buffer depth, the fewer PLC variables that can be traced, because there is a single, small, fixed pool of data slots for sending data samples from the PLC to NCK (64 data slots).

Every PLC variable being traced is allocated as many data slots from the pool as the value of the buffer depth.

This single pool of data slots is shared by data collected at OB1, OB35, and OB40 (even though the buffer depths of OB1, OB35, and OB40 can be configured to be different from one another). It is also shared by all concurrent users of trace, even though the users might have no knowledge of one another.

11481	PLC_OB35_TRACE_DEPTH			EXP, N03, N09	-
-	Buffer depth of PLC trace data at OB35			DWORD	PowerOn
-					
-	-	2	2	8	0/0

Description:

Buffer depth of PLC trace data at OB35.

Multiple values of PLC data are buffered, between the time of collection in the PLC and the time of inspection in NCK. Variables traced at "OB35" are collected every time the PLC timer interrupts, but can only be inspected once per IPO cycle.

The buffer size must accommodate at least one more value than the number of buffered values to be inspected. This is to prevent NCK from inspecting a value that the PLC is in the process of collecting.

A good value to start with is one more than the number of PLC timer interrupts expected to occur every IPO cycle.

The larger the buffer depth, the fewer PLC variables that can be traced, because there is a single, small, fixed pool of data slots for sending data samples from the PLC to NCK (64 data slots).

Every PLC variable being traced is allocated as many data slots from the pool as the value of the buffer depth.

The single pool of data slots is shared by data collected at OB1, OB35, and OB40 (even though the buffer depths of OB1, OB35, and OB40 can be configured to be different from each other). It is also shared by all concurrent users of trace, even though the users might have no knowledge of one another.

General machine data

11482	PLC_OB40_TRACE_DEPTH	EXP, N03, N09	-
-	Buffer depth of PLC trace data at OB40	DWORD	PowerOn
-			
-	-	2	2
-	-	8	0/0

Description: Buffer depth of PLC trace data at OB40.

Multiple values of PLC data are buffered, between the time of collection in the PLC and the time of inspection in NCK. Variables traced at "OB40" are collected just when the PLC receives the special, programmably initiated OB40 interrupt from NCK, but can only be inspected once per IPO cycle.

The buffer size must accommodate at least one more value than the number of buffered values to be inspected. This is to prevent NCK from inspecting a value that the PLC is in the process of collecting.

If the OB40 interrupt is issued less frequently than once per IPO cycle, then the OB40 buffer depth should be 2. Otherwise it should be one more than the largest number of interrupts expected during any one IPO cycle.

The larger the buffer depth, the fewer PLC variables that can be traced, because there is a single, small, fixed pool of data slots for sending data samples from the PLC to NCK (64 data slots). Every PLC variable being traced is allocated as many data slots from the pool as the value of the buffer depth.

The single pool of data slots is shared by data collected at OB1, OB35, and OB40 (even though the buffer depths of OB1, OB35, and OB40 can be configured to be different from each other). It is also shared by all concurrent users of trace, even though the users might have no knowledge of one another.

11550	STOP_MODE_MASK	N01	V1
-	Defines the stop behavior.	DWORD	PowerOn
-			
-	-	0	0
-	-	0x1	0/0

Description: This MD describes the stop behavior of the NCK under certain conditions:

Bit no. Meaning

Bit 0 == 0 :=
No stop if G codes G331/G332 are active and a path motion or G4 has also been programmed.

Bit 0 == 1 :=
Same behavior as until SW version 6.4, i.e. a stop is possible during G331/G332.

Bits 1.....15
Not assigned

11600	BAG_MASK	N01	K1,Z1
-	Defines the mode group behavior	DWORD	PowerOn
-			
-	-	0	0
		0x3	0/0

Description: This MD describes the effect of the VDI signals on the channels of a mode group in respect of ASUBs and interrupt routines.

Bit no. Hexadec. Meaning when bit set value

Bit0: 0x0 Normal response to mode group signals in all channels of the mode group (as SW 3)
All channels switch into a program operating mode on interrupt.

Bit0: 0x1 No response to other mode group VDI signale in the channel in which an
interrupt handling (ASUB) is running. (BAG-RESET, BAG-STOP. individual types
A and B, mode selection)

Bit1: 0x1 There is an operating mode changeover only in those channels
which have received an interrupt request.
(Only when bit 0 is set!)

11602	ASUP_START_MASK	N01, -	K1,M3,TE3,TE7
-	Ignore stop conditions for ASUB	DWORD	PowerOn
-			
-	-	0	0
		0xf	2/2

Description: This machine data defines which stop reasons are to be ignored at an ASUB start. The ASUB is started, or the following stop reasons are ignored:

Bit 0 :

STOP reason: STOP key , M0 or M01
An ASUB is started immediately if NCK is in RESET state (or JOG mode) (no ASUB can be started in RESET/JOG without this bit).
NOTICE:
- This bit is set implicitly if MD20108 \$MC_PROG_EVENT_MASK deviates from zero in a channel!
- This bit is set implicitly if BIT 1 is set in MD11450 \$MN_SEARCH_RUN_MODE!

Bit 1 :

Start allowed even if not all axes have yet been referenced.

Bit 2:

Start allowed even if a read-in disable is active, that is the blocks of the ASUB program are loaded and executed immediately. This disables machine data IGNORE_INHIBIT_ASUP. The NCK behavior corresponds to the machine data contents of
IGNORE_INHIBIT_ASUP== FFFFFFFF.

General machine data

If the bit is not set:

then the ASUB is internally selected, but not processed until the read-in disable is canceled.

The assignment of the machine data IGNORE_INHIBIT_ASUP is evaluated.

If IGNORE_INHIBIT_ASUP = 0 also applies, then an ASUB is triggered immediately internally, but the blocks of the ASUB program are not loaded until the read-in disable is canceled.

The path is immediately decelerated when the ASUB is triggered (except with option BLSYNC).

The read-in disable is set once more in the ASUB program.

Bit 3:

Notice:

The following function can always be activated in single-channel systems. Multi-channel system require bit1 in MD11600 \$MN_BAG_MASK in addition. The function is active o_n_l_y for those ASUBs that were activated from program status Abort (channel status Reset). The function is not active in multi-channel systems without MD11600 \$MN_BAG_MASK Bit1.

If an ASUB is started automatically from JOG, the user may stop in the middle of the ASUB program. The JOG mode is continuously displayed for the user. With bit 3 set, the user may jog in this situation. This is not possible without bit 3. In this case mode change is locked with alarm 16927. By pressing the Start key, the user can continue the ASUB program. As long as the ASUB program is running, the user is naturally not able to jog. After ASUB program end the user may jog again.

Bits 4 to 15:Reserved

Related to:

MD11604 \$MN_ASUP_START_PRIO_LEVEL

11604	ASUP_START_PRIO_LEVEL	N01, -	K1,TE3,TE7
-	Priorities from which 'ASUP_START_MASK' is effective	DWORD	PowerOn
-			
-	-	0	0
		128	2/2

Description: This machine data defines the ASUB priority from which MD11602 \$MN_ASUP_START_MASK is to be applied. MD11602 \$MN_ASUP_START_MASK is applied from the level specified here up to the highest ASUB priority level 1.

Related to:

MD11602 \$MN_ASUP_START_MASK

11610	ASUP_EDITABLE	N01	K1
-	Activation of a user-specific ASUB program	DWORD	PowerOn
-			
-	-	0	0
		0x7	2/2

Description: This MD determines whether user-specific routine: `_N_ASUP_SPF` stored in directory `_N_CUS_DIR/ _N_CMA_DIR` is to be used to process RET and REPOS. The user ASUB is searched for first in `_N_CUS_DIR`.

Value: Meaning:

0 Routine `_N_ASUP_SPF` is not activated for either RET or REPOS.

Bit0 = 1User-specific routine `_N_ASUP_SPF` is executed for RET, the routine supplied by the system is executed for REPOS.

Bit1 = 1User-specific routine `_N_ASUP_SPF` is executed for REPOS, the routine supplied by the system is executed for RET

Bit0= + bit1 = 3User-specific routine `_N_ASUP_SPF` is executed for both RET and REPOS

Bit2 = 1User ASUB `_N_ASUP_SPF` is searched for first in `_N_CMA_DIR`

Related to:

 MD11612 `$MN_ASUP_EDIT_PROTECTION_LEVEL`

References:

 /IAD/ "Installation and Start-Up Guide"

11612	ASUP_EDIT_PROTECTION_LEVEL	N01	K1
-	Protection level of the user-specific ASUB program	DWORD	PowerOn
-			
-	-	2	0
		7	2/2

Description: Protection level of the user-specific ASUB program for RET and/or REPOS

The data is active only if MD11610 `$MN_ASUP_EDITABLE` is set to a value other than 0.

This machine data defines the protection level of the program `_N_ASU_CUS`.

MD irrelevant for:

 MD11610 `$MN_ASUP_EDITABLE` set to 0

Related to:

 MD11610 `$MN_ASUP_EDITABLE`

General machine data

11620	PROG_EVENT_NAME	EXP, N12	K1
-	Program name for PROG_EVENT	STRING	PowerOn
-			
-	-	-	2/2

Description: Name of the user program called by the functions "Event-controlled program calls" and "Automatic ASUB start after block search" (MD11450 \$MN_SEARCH_RUN_MODE Bit1). `_N_PROG_EVENT_SPF` is preset. The presetting becomes active if MD11620 \$MN_PROG_EVENT_NAME includes a blank string.

If the machine data does not contain a blank string, then the syntax of the string is checked as in the case of a subprogram identifier. This means that the first two characters must be letters or underscores (not numbers). If this is not the case, alarm 4010 is output during power on.

The program must be located in a cycle directory. The following search path is run through when it is called:

1. `/_N_CUS_DIR/_N_PROG_EVENT_SPF`
2. `/_N_CMA_DIR/_N_PROG_EVENT_SPF`
3. `/_N_CST_DIR/_N_PROG_EVENT_SPF`

The prefix (`_N_`) and the suffix (`_SPF`) of the program name are added automatically if they have not been declared.

11640	ENABLE_CHAN_AX_GAP	N01, N11	K2
-	Allow channel axis gaps in AXCONF_MACHAX_USED	DWORD	PowerOn
-			
-	-	0x0	0
-		0x1	0/0

Description: Bit0 = 1

Machine data allows configuration of channel axis gaps in the MD20070 \$MC_AXCONF_MACHAX_USED.

Permits following MD assignment:

```
$AXCONF_MACHAX_USED[0] = 1 ; 1st MA is 1st axis in channel
$AXCONF_MACHAX_USED[1] = 2 ; 2nd MA is 2nd axis in channel
$AXCONF_MACHAX_USED[2] = 0 ; Channel axis gap
$AXCONF_MACHAX_USED[3] = 3 ; 3rd MA is 3rd axis in channel
$AXCONF_MACHAX_USED[4] = 0
```

C A U T I O N:

(BIT0 set with MD20070 \$MC_AXCONF_MACHAX_USED):

If a geo axis is placed in a channel axis gap with MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB[1]= 3, the control responds as with MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB[1]= 0. This eliminates the geo axis!

Transformation machine data must not be assigned a channel axis number specified as a gap.

BIT1 - BIT31: not used.

Related to:

```
MD20080 $MC_AXCONF_CHANAX_NAME_TAB,
MD20050 $MC_AXCONF_GEOAX_ASSIGN_TAB,
MD20060 $MC_AXCONF_GEOAX_NAME_TAB
MD20070 $MC_AXCONF_MACHAX_USED
MD24... $MC_TRAFO_AXES_IN...
MD24... $MC_TRAFO_GEOAX_ASSIGN_TAB...
```

11700	PERMISSIVE_FLASH_TAB	EXP, N01	IAD
-	Codes for NC card	DWORD	PowerOn
-			
-	6	0,0,0,0,0,0,0	1/1

Description: Normally, the NCK knows the program algorithms for writing on the flash of the PCMCIA card, however, if "new" cards with another ManufacturerCode and/or DeviceCode are used, then these values can be entered here. Whereby, the ManufacturerCode must be entered in the first line, and the DeviceCode in the following line.

11717	D_NO_FCT_CYCLE_NAME	EXP, N12, N07	K1
-	Subroutine name for D function replacement	STRING	PowerOn
-			
-	-	-	2/2

Description: Cycle name for replacement routine of the D function.
 If a D function is programmed in a part program block, then, depending on machine data MD10717 \$MN_T_NO_FCT_CYCLE_NAME, MD10719 \$MN_T_NO_FCT_CYCLE_MODE and MD10718 \$MN_M_NO_FCT_CYCLE_PAR, the MD subprogram defined in MD11717 \$MN_D_NO_FCT_CYCLE_NAME is called. The programmed D number can be polled in the cycle via system variable \$C_D / \$C_D_PROG.
 MD11717 \$MN_D_NO_FCT_CYCLE_NAME is only active in Siemens mode (G290).
 No more than one M/T/D function replacement can be active per part program line.
 A modal subprogram call must not be programmed in the block with the D function replacement. Furthermore, neither subprogram return nor part program end are allowed.
 In the event of a conflict alarm 14016 is output.

11750	NCK_LEAD_FUNCTION_MASK	N09	-
-	Functions for master value coupling	DWORD	NEW CONF
-			
-	-	0x00	0
-		0x10	1/1

Description: Special functions of the master value coupling are set with this MD.
 The MD is bit-coded, the following bits are assigned:
 Bits 0-3:
 reserved
 Bit 4 == 0:
 the following axis of a master value coupling decelerates independently on NC or mode group stop or channel-specific feed disable
 Bit 4 == 1:
 the following axis of a master value coupling does not decelerate independently on NC or mode group stop or channel-specific feed disable
 Bits 5-31:
 reserved

General machine data

11752	NCK_TRAIL_FUNCTION_MASK			N09	-
-	Functions for coupled motion			DWORD	NEW CONF
-					
-	-	0x200	0	0x210	1/1

Description: Special functions for coupled motions are set with this MD. The MD is bit-coded; the following bits are assigned:

Bits 0-3:
reserved

Bit 4 = 0:
the following axis of a coupled axis grouping activated by a synchronized action decelerates independently on NC or mode group stop or channel-specific feed disable

Bit 4 = 1:
the following axis of a coupled axis grouping activated by a synchronized action does not decelerate independently on NC or mode group stop or channel-specific feed disable

Bit 5-31:
reserved

11754	COUPLE_CYCLE_MASK			EXP, N09	-
-	Replacement of coupling language commands by machining cycles			DWORD	PowerOn
-					
-	-	0x0	0	0x3F	1/1

Description: This machine data defines which predefined procedures for axis-spindle coupling are replaced by machining cycles. This MD is bit-coded; the following bits have been assigned:

Bit 0 == 0:
The predefined procedures EGDEL, EGOFC, EGOFS, EGON, EGONSYN and EGONSYNE are executed

Bit 0 == 1:
The predefined procedures EGDEL, EGOFC, EGOFS, EGON, EGONSYN and EGONSYNE are replaced by calling machining cycles

Bit 1 == 0:
The predefined procedures LEADON and LEADOF are executed

Bit 1 == 1:
The predefined procedures LEADON and LEADOF are replaced by calling machining cycles

Bit 2 == 0:
The predefined procedures TRAILON and TRAILOF are executed

Bit 2 == 1:
The predefined procedures TRAILON and TRAILOF are replaced by calling machining cycles

Bit 3 == 0:
The predefined procedures COUPDEF, COUPDEL, COUPOF, COUPOFS, COUPON, COUPONC and COUPRES are executed

Bit 3 == 1:
The predefined procedures COUPDEF, COUPDEL, COUPOF, COUPOFS, COUPON, COUPONC and COUPRES are replaced by calling machining cycles

Bit 4 == 0:

The predefined procedures LEADON and LEADOF are executed in synchronized actions

Bit 4 == 1:

The predefined procedures LEADON and LEADOF are replaced in synchronized actions by calling machining cycles as technology cycles

Bit 5 == 0:

The predefined procedures TRAILON and TRAILOF are executed in synchronized actions

Bit 5 == 1:

The predefined procedures TRAILON and TRAILOF are replaced in synchronized actions by calling machining cycles as technology cycles

11756	NCK_EG_FUNCTION_MASK			N09	-
-	Functions for Electronic Gear			DWORD	NEW CONF
-					
-	-	0x0	0	0x2F	1/1

Description:

This MD is used to set special functions of Electronic Gear (EG). The MD is bit-coded, the following bits are occupied:

Bit 0 - 4:

reserved

Bit 5 = 0:

Positions indicated in EGONSYN and EGONSYNE are evaluated according to setting G700 or G710 inch or metric that is valid in the currently machined part program block.

Bit 5 = 1

Positions indicated in EGONSYN and EGONSYNE are evaluated in the basic system involved.

Bit 6 - 31:

reserved

2.2.2 Override switch settings

12000	OVR_AX_IS_GRAY_CODE			EXP, N10	V1,Z1
-	Axis feedrate override switch Gray-coded			BOOLEAN	PowerOn
-					
-	-	TRUE	-	-	1/1

Description: This machine data is used to adapt the axis feed override switch to the interface coding of the PLC interface.

1: The 5 low-order bits of the PLC interface signal V380x 0000 (Feed override A-H) are interpreted as a Gray code. The value which is read corresponds to a switch setting. It is used as an index for selecting the correct override factor from the table of MD12010 \$MN_OVR_FACTOR_AX_SPEED [n].

0: The feed override byte of the PLC interface is interpreted as a binary representation of the override value in percent (limit 200 percent).

Related to:

NC/PLC interface signal V380x 0000 (Feed override A-H), (axis-specific)

MD12010 \$MN_OVR_FACTOR_AX_SPEED [n]

(Evaluation of the axis feed override switch)

12010	OVR_FACTOR_AX_SPEED			EXP, N10	V1,Z1
-	Evaluation of axis feedrate override switch			DOUBLE	PowerOn
-					
-	31	0.00,0.01,0.02,0.04,0.06,0.08,0.10...	0.00	2.00	1/1

Description: Evaluation of the axis velocity override switch with gray-coded interface.

Not relevant with:

MD12000 \$MN_OVR_AX_IS_GRAY_CODE = 0

Related to:

NC/PLC interface signal V380x 0000 (Feed override A-H), (axis-specific)

12020	OVR_FEED_IS_GRAY_CODE			EXP, N10	V1,Z1
-	Path feedrate override switch Gray-coded			BOOLEAN	PowerOn
-					
-	-	TRUE	-	-	1/1

Description: This machine data is used to adapt the path feed override switch to the interface coding of the PLC interface.

1: The 5 low-order bits of the NC/PLC interface signal V380x 0000 (Feed override A-H) are interpreted as a Gray code. The value which is read corresponds to a switch setting. It is used as an index for selecting the correct override factor from the table of MD12030 \$MN_OVR_FACTOR_FEEDRATE [n].

0: The feed override byte of the PLC interface is interpreted as a binary representation of the override value in percent (limit 200 percent).

Related to:

NC/PLC interface signal V380x 0000 (Feed override A-H)
MD12030 \$MN_OVR_FACTOR_FEEDRATE [n]
(Evaluation of the path feed override switch)

12030	OVR_FACTOR_FEEDRATE			EXP, N10	V1,B1,Z1
-	Evaluation of path feedrate override switch			DOUBLE	PowerOn
-					
-	31	0.00,0.01,0.02,0.04,0.06,0.08,0.10...	0.00	2.00	1/1

Description: Evaluation of the feedrate override switch with gray-coded interface.

Special function of the 31st value for the velocity control:
The setting of the 31st override value defines the dynamic reserves which take the velocity control to be an excessive increase in the path feed. The setting should correspond to the highest override factor actually used.

The function of the 31st value is thus identical to the effect of MD12100 \$MN_OVR_FACTOR_LIMIT_BIN when using the binary-coded interface.

Not relevant with:

MD12020 \$MN_OVR_FEED_IS_GRAY_CODE = 0

Related to:

NC/PLC interface signal V380x 0000 (Feed override A-H)

General machine data

12040	OVR_RAPID_IS_GRAY_CODE		EXP, N10	V1,Z1
-	Rapid traverse override switch Gray-coded		BOOLEAN	PowerOn
-				
-	-	TRUE	-	1/1

Description: This machine data is used to adapt the rapid traverse override switch to the interface coding of the PLC interface.

1: The 5 low-order bits of the PLC interface signal V3200 0005 (Rapid traverse override A-H) are interpreted as a Gray code. The value which is read corresponds to a switch setting.

It is used as an index for selecting the correct override factor from the table of MD12050 \$MN_OVR_FACTOR_RAPID_TRA[n].

0: The rapid traverse override byte of the PLC interface is interpreted as a binary representation of the override value in percent (limit 200 percent).

Related to:

NC/PLC interface signal V3200 0005 (Rapid traverse override A-H)

MD12050 \$MN_OVR_FACTOR_RAPID_TRA[n]
(Evaluation of the rapid traverse override switch)

12050	OVR_FACTOR_RAPID_TRA		EXP, N10	V1,Z1
-	Evaluation of rapid traverse override switch		DOUBLE	PowerOn
-				
-	31	0.00,0.01,0.02,0.04,0.06,0.08,0.10...	0.00	1.00
-				1/1

Description: Evaluation of the rapid traverse override switch with gray-coded interface.

Not relevant with:

MD12040 \$MN_OVR_RAPID_IS_GRAY_CODE = 0

Related to:

NC/PLC interface signal V3200 0005 (Rapid traverse override A-H)

12060	OVR_SPIND_IS_GRAY_CODE		EXP, N10	V1,Z1
-	Spindle override switch Gray-coded		BOOLEAN	PowerOn
-				
-	-	TRUE	-	1/1

Description: This machine data is used to adapt the spindle speed override switch to the interface coding of the PLC interface.

1: The 5 low-order bits of the "spindle speed override" PLC interface signal are interpreted as a Gray code. The value which is read corresponds to a switch setting. It is used as an index for selecting the correct override factor from the table of MD12070 \$MN_OVR_FACTOR_SPIND_SPEED [n].

0: The spindle speed override byte of the PLC interface is interpreted as a binary representation of the override value in percent (limit 200 percent).

Related to:

NC/PLC interface signal V380x 2003 (Spindle speed override)

MD12070 \$MN_OVR_FACTOR_SPIND_SPEED[n]
(Evaluation of the spindle speed override switch)

12070	OVR_FACTOR_SPIND_SPEED			EXP, N10	V1,Z1
-	Evaluation of spindle override switch			DOUBLE	PowerOn
-					
-	31	0.5,0.55,0.60,0.65,0.7 0,0.75,0.80...	0.00	2.00	1/1

Description: Evaluation of the spindle-specific override switch with Gray-coded interface.

Special function of the 31st value for the velocity control:

The setting of the 31st override value defines the dynamic reserves which take the velocity control to be an excessive increase in the spindle feed. The setting should correspond to the highest override factor actually used.

The function of the 31st value is thus identical to the effect of MD12100 \$MN_OVR_FACTOR_LIMIT_BIN when using the binary-coded interface.

Not relevant for:

MD12060 \$MN_OVR_SPIND_IS_GRAY_CODE = 0

Related to:

NC/PLC interface signal V380x 2003 (Spindle speed override)

12080	OVR_REFERENCE_IS_PROG_FEED			N10, N09	V1
-	Override reference speed			BOOLEAN	PowerOn
-					
-	-	TRUE	-	-	0/0

Description: The entry in this MD specifies whether the spindle override given by the IS refers to the speed limited by MD/SD or to the programmed speed.

1: Spindle override acts with reference to the programmed speed (programmed speed _ spindle override 100%)

0: Spindle override acts on the speed limited by MD or SD (speed limited by MD/SD _ spindle override 100%)

Related machine data:

A speed limitation is effected by the following MDs or SDs:

MD35100 \$MA_SPIND_VELO_LIMIT Maximum spindle speed

MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT Maximum speed of gear stage

MD35160 \$MA_SPIND_EXTERN_VELO_LIMIT Spindle speed limitation by PLC

SD43220 \$SA_SPIND_MAX_VELO_G26 Maximum spindle speed

SD43230 \$SA_SPIND_MAX_VELO_LIMS Spindle speed limitation with G96

General machine data

12082	OVR_REFERENCE_IS_MIN_FEED	N10, N09	V1
-	Specification of the reference of the path override	BOOLEAN	PowerOn
-			
-	-	FALSE	0/0

Description: The reference speed for the path feed override specified via the machine control panel can be set differently from the standard.

0: Standard:
The override is relative to the programmed feed.

1: Special case:
The override is relative to the programmed feed or to the path feed limit, depending on which resulting value is lower. In this way, even for a great feed reduction (due to the permissible axis dynamics), the effect of the override value (in the range 0 to 100%) is always visible.

12090	OVR_FUNCTION_MASK	N01, N10, N09	-
-	Selection of override specifications	DWORD	Reset
-			
-	-	0	0/0

Description: The functionality of the override switches can be affected by the bits.

Bit 0: = 0,
Standard: Spindle override active with G331/G332
= 1,
Path override is active instead of spindle override with G331/G332
(Tapping without compensating chuck)

12100	OVR_FACTOR_LIMIT_BIN	EXP, N10	V1,B1,Z1
-	Limitation for binary-coded override switch	DOUBLE	PowerOn
-			
-	-	2.0	0/0

Description: This machine data can be used as an additional limit for the override factor when using the binary-coded interface for path, axis and spindle feeds.

In this case, the maximum values

- 200% for channel-specific feed override
- 100% for channel-specific rapid traverse override
- 200% for axis-specific feed override
- 200% for spindle override

are replaced with the limit value entered in MD:
OVR_FACTOR_LIMIT_BIN when this value is lower.
Example: OVR_FACTOR_LIMIT_BIN = 1.20
--> maximum override factor for

- channel-specific feed override =120%
- channel-specific rapid traverse override =100%
- axis-specific feed override =120%
- spindle override =120%

This value also defines the dynamic reserves maintained by the speed control for increasing the path and spindle feedrates.

References:
/FB/, B1, "Continuous Path Mode, Exact Stop and Look Ahead"

12200	RUN_OVERRIDE_0	N01, N09	FBMA,V1,Z1
-	Traversing response with override 0	BOOLEAN	PowerOn
-			
-	-	FALSE	-
-	-	-	0/0

Description:

= 0

Override 0 is active and means deceleration (JOG mode, safety function).

Bits 0 and 1 in MD32084 \$MA_HANDWH_STOP_COND for hand wheels and in MD20624 \$MC_HANDWH_CHAN_STOP_COND for machine axes define whether the pulses are collected for geometry axes and contour handwheel.

= 1

Traversing with handwheels and in JOG mode with fixed feedrates is also possible with a 0 % override.

Related to:

MD32084 \$MA_HANDWH_STOP_COND

MD20624 \$MC_HANDWH_CHAN_STOP_COND

12202	PERMANENT_FEED	N01, N09	Z1,V1
mm/min	Fixed feedrates for linear axes	DOUBLE	Reset
-			
-	4	0.,0.,0.,0.	-
-	-	-	0/0

Description:

In AUTOMATIC mode:

After activating a fixed feedrate via an interface signal, traversing is done with a fixed feedrate instead of the programmed feedrate.

Note:

The fixed feedrate is also evaluated in continuous-path mode in order to optimize the overhead for the Look Ahead calculation. Unnecessarily high values should therefore be avoided. Enter zero if a fixed feedrate is not wanted

In JOG mode:

After activating a fixed feedrate via an interface signal, and traversing the linear axis with a traversing key, traversing proceeds in the selected direction with the fixed feedrate.

n = 0, 1, 2, 3 mean fixed feedrates 1, 2, 3, 4. The values must be entered in ascending order.

Special cases, errors,

The maximum velocity defined by MD32000 \$MA_MAX_AX_VELO is active. An override setting of 100 % is assumed. MD12200 \$MN_RUN_OVERRIDE_0 is active if the override is 0.

Related to:

MD12200 \$MN_RUN_OVERRIDE_0

General machine data

12204	PERMANENT_ROT_AX_FEED	N01, N09	V1
rev/min	Fixed feedrates for rotary axes	DOUBLE	Reset
-			
-	4	0.,0.,0.,0.	0/0

Description: Fixed feedrate values:
 In AUTOMATIC mode:
 After activating a fixed feedrate via an interface signal, traversing is done with a fixed feedrate instead of the programmed feedrate.
 Note: PERMANENT_ROT_AX_FEED is used instead of PERMANENT_FEED for the path motion if all synchronously traversed axes in the current block are rotary axes. PERMANENT_FEED applies if linear and rotary axes are to be synchronously traversed together.
 The fixed feedrate is also evaluated in continuous-path mode in order to optimize the overhead for the Look Ahead calculation. Unnecessarily high values should therefore be avoided. Enter zero if a fixed feedrate is not wanted
 In JOG mode:
 After activating a fixed feedrate via an interface signal, and traversing the rotary axis with a traversing key, traversing proceeds in the selected direction with the fixed feedrate.
 n = 0, 1, 2, 3 mean fixed feedrates 1, 2, 3, 4.
 Special cases, errors,

The maximum velocity defined by MD32000 \$MA_MAX_AX_VELO is active. An override setting of 100 % is assumed. MD12200 \$MN_RUN_OVERRIDE_0 is active if the override is 0.

Related to:
 MD12200 \$MN_RUN_OVERRIDE_0

12205	PERMANENT_SPINDLE_FEED	N01, N09	FBMA
rev/min	Fixed feedrates for spindles	DOUBLE	Reset
-			
-	4	0.,0.,0.,0.	0/0

Description: Fixed feedrate values:
 JOG: A spindle is traversed with a fixed feedrate by activating the traversing keys and activating the appropriate signals in the PLC interface.
 The override is not active.
 Depending upon MD12200 \$MN_RUN_OVERRIDE_0, traversing also takes place with override 0.
 The value defined by MD32000 \$MA_MAX_AX_VELO is taken as the upper limit. If the fixed feedrate has a larger value, the aforementioned limiting value applies.

12300	CENTRAL_LUBRICATION	N01, N09	-
-	Central lubrication active	BOOLEAN	PowerOn
-			
-	-	FALSE	0/0

Description: When a settable axial path has been exceeded, the axial VDI signals request a lubrication pulse from the PLC (compare MD33050 \$MA_LUBRICATION_DIST). These axial pulses act (by default) independently of each other.

If the machine construction requires a central lubrication, i.e. the lubrication pulse of any axis is acting on all axes, the corresponding path monitoring of all axes must be restarted after lubrication pulse output. This start synchronization of the monitoring is executed via MD12300 \$MN_CENTRAL_LUBRICATION=TRUE.

12970	PLC_DIG_IN_LOGIC_ADDRESS	N10	-
-	Logical start address of the digital PLC input address	DWORD	PowerOn
-			
-	-	0	0
			1023
			0/0

Description: Logical start address of the digital input addresses of the PLC
Related to:
MD12971 \$MN_PLC_DIG_IN_NUM

12971	PLC_DIG_IN_NUM	N10	-
-	Number of digital input addresses	DWORD	PowerOn
-			
-	-	256	1
			256
			0/0

Description: Number of digital input addresses as from the start address
Related to:
MD12970 \$MN_PLC_DIG_IN_LOGIC_ADDRESS

12974	PLC_DIG_OUT_LOGIC_ADDRESS	N10	-
-	Logical start address of the digital PLC output addresses	DWORD	PowerOn
-			
-	-	0	0
			1023
			0/0

Description: Logical start address of the digital output addresses of the PLC
Related to:
MD12975 \$MN_PLC_DIG_OUT_NUM

12975	PLC_DIG_OUT_NUM	N10	-
-	Number of digital output addresses	DWORD	PowerOn
-			
-	-	256	1
			256
			0/0

Description: Number of digital output addresses as from the start address

12978	PLC_ANA_IN_LOGIC_ADDRESS	N10	-
-	Logical start address of the analog PLC input addresses	DWORD	PowerOn
-			
-	-	0	0
			1023
			0/0

Description: Logical start address of the analog input addresses of the PLC
Related to:
MD12979 \$MN_PLC_ANA_IN_NUM

General machine data

12979	PLC_ANA_IN_NUM	N10	-
-	Number of analog input addresses	DWORD	PowerOn
-			
-	-	0	0
		1023	0/0

Description: Number of analog input addresses as from the start address
 Related to:
 MD12978 \$MN_PLC_ANA_IN_LOGIC_ADDRESS

12982	PLC_ANA_OUT_LOGIC_ADDRESS	N10	-
-	Logical start address of the analog PLC output addresses	DWORD	PowerOn
-			
-	-	0	0
		1023	0/0

Description: Logical start address of the analog output addresses of the PLC
 Related to:
 MD12983 \$MN_PLC_ANA_OUT_NUM

12983	PLC_ANA_OUT_NUM	N10	-
-	Number of analog output addresses	DWORD	PowerOn
-			
-	-	0	0
		1023	0/0

Description: Number of analog output addresses as from the start address
 Related to:
 MD12982 \$MN_PLC_ANA_OUT_LOGIC_ADDRESS

12986	PLC_DEACT_IMAGE_LADDR_IN	N10	-
-	Deactivation of I/O connection to the PLC image	DWORD	PowerOn
-			
-	8	0,9,18,27,36,96,112,- 1	-1
		255	1/1

Description: The PLC input/output image of the stations with these logical addresses
 is not connected to the real I/Os

12987	PLC_DEACT_IMAGE_LADDR_OUT	N10	-
-	Deactivation of I/O connection to the PLC image	DWORD	PowerOn
-			
-	8	-1,-1,-1,-1,-1,-1,-1,-1	-1
		255	1/1

Description: The PLC input/output image of the stations with these logical addresses
 is not connected to the real I/Os

13050	DRIVE_LOGIC_ADDRESS		N04, N10	G2
-	Logical drive addresses		DWORD	PowerOn
-				
-	31	4100,4140,4180,4220, 4260,4300,450...	258	8191
				0/0

Description: For PROFIdrive only:
Logical I/O addresses of the PROFIdrive drives on the PROFIBUS/PROFINET. An address is assigned to a drive.
This MD is the link to the description of the PROFIBUS/PROFINET configuration in SDB.
The MD value is the address index of the logical I/O drive address assigned with HW-Config (SIMATIC Manager S7).
Example:
DRIVE_LOGIC_ADDRESS[1] = 272 (The start address 272 is assigned to drive 1.)
The SDB defines the logical I/O address of the drives on the PROFIBUS/PROFINET. An address is assigned to a drive or to a slave.
The address index is used for actual-value and setpoint-value assignment
(MD30220 \$MA_ENC_MODULE_NR[n], MD30110 \$MA_CTRL_OUT_MODULE_NR[n]).
Note:
The same drive (I/O address) must be assigned to the MD30220 \$MA_ENC_MODULE_NR[0] and MD30110 \$MA_CTRL_OUT_MODULE_NR[0] of a machine axis.
Each drive or slave must be assigned to a single logical address index.
The index [n] of the machine data has the following coding: [Drive index]:
Drive 1 -->n=0
Drive 2 -->n=1,

13060	DRIVE_TELEGRAM_TYPE		N04, N10	G2
-	Standard message frame type for PROFIdrive		DWORD	PowerOn
-				
-	31	116,116,116,116,116, 116,102,102,102...	-	2/2

Description: Telegram type has to be indicated for every drive:
102:
10: - spindle with direct measuring system
Machine data index [n] has the following coding: [drive index]:
n=0: drive number 1
n=1: drive number 2 etc.

General machine data

13070	DRIVE_FUNCTION_MASK	N04, N10	G2
-	PROFIdrive expansion functions	DWORD	PowerOn
-			
-	31	2,2,2,2,2,2,0,0,0,0,0,0	2/2

Description: For PROFIdrive only:
 Bit-coded mask for skipping the scope of available functions for PROFIdrive axes expected by the NCK.
 Meaning of set bits:
 Bit 0: Deactivation of axial drive alarm display
 Note: the effect of this bit may be hidden, depending on the value in MD13140 \$MN_PROFIBUS_ALARM_ACCESS.
 Bit 1: Deactivation of 611U description file intermediate storage in the NCK
 Bit 2: Deactivation of axial encoder driver parameter accesses
 Bit 3: Deactivation of axial output driver parameter accesses
 Bit 4: Reserved, free (previously activation of DSC bits)
 Bit 5: Deactivation of the 611U-specific drive parking (STW2.7/STA2.7)
 Bit 6: Deactivation of the 611U-specific travel to fixed stop (STW2.8/STA2.8)
 Bit 7: Deactivation of the 611U-specific motor switching int. (STW2.9 to 2.11)
 Bit 8: Deactivation of the 611U-specific ramp block (STW1.11+13)
 Bit 9: Deactivation of the 611U-specific function generator bits (STW1.8/STA1.13)
 Bit 10: Deactivation of the control of the holding brake (STW1.12 / STA2.5)
 Bit 11: Deactivation of the effect of OFF2/OFF3 on V390x 4001.5 (Drive Ready)
 Bit 12: Deactivation of the error/warning class SINAMICS (STA1.11 to STA1.12)
 Bit 13: Drive parking simulation (STA2.7 = STW2.7)
 Bit 14: Selection of non-cyclical communication 0 = DPT 1 = DPV1
 Bit 15: Deactivation of the consistency check of the PROFIdrive message frame configuration
 Configuration of bits 5 - 10, which is new for SW 6.3 and higher, allows adaptation of certain control or status bits that are not standardized in the PROFIdrive profile. The bits may have a different significance and effect in the default setting of third-party drives.

General machine data

13113	PROFIBUS_TRACE_START	EXP	-
-	Activation of PROFIBUS/PROFINET trace	DWORD	Immediately
-			
-	-	0	0
-		1	1/1

Description: For PROFIBUS/PROFINET only:
 0: Trace off
 1: Trace on
 MD13112 \$MN_PROFIBUS_TRACE_FILE_SIZE > 0: Trace is automatically disabled when the file size is reached.

13114	PROFIBUS_TRACE_START_EVENT	EXP	-
-	Trigger conditions for PROFIBUS/PROFINET trace	DWORD	NEW CONF
-			
-	14	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0x00000000
-		0,0	0x111ffff
-			1/1

Description: For PROFIBUS/PROFINET only:
 The trigger frequency is configured bit-by-bit
 Bits 0-15: 0x0001-0xffff: bit mask
 Bits 16-23: 0x01-0x14: process data number (a maximum of 20 words are permissible)
 Bits 24-27: 0x01: status change 0->1
 0x00: status change 1->0
 Bits 28-31: 0x10: send slot
 0x00: receive slot
 When MD13113=1 and MD13114=0x0 Recording starts immediately
 When MD13113=1 and MD13114=0x1 Recording starts on control power on
 When MD13113=1 and MD13114=0x2 Recording starts on loss of the sign of life

13120	CONTROL_UNIT_LOGIC_ADDRESS	N04, N10	-
-	Logical address of SINAMICS CU	DWORD	PowerOn
-			
-	7	6500,0,0,0,0,0,0	0
-			8191
-			2/2

Description: For PROFIBUS/PROFINET, SINAMICS:
 Logical I/O address of a SINAMICS-CU (Control Unit) on the PROFIBUS/PROFINET.
 The cyclic DP communication with SINAMICS-CU is activated by taking over the associated slot address from the STEP7 project. The onboard I/Os cannot be accessed until after configuration.

13140	PROFIBUS_ALARM_ACCESS	N04, N10	-
-	Alarm response of PROFIBUS/PROFINET drives on power up	DWORD	Immediately
-			
-	-	1	0
-	-	2	1/7

Description: For PROFIBUS/PROFINET only:
 Specifies the time of activation for evaluation/transmission of PROFIBUS/PROFINET node alarms or warnings (fine diagnostics messages) on the NCK. Affects drive alarms or warnings 380500, 380501 (or alarms 200000ff etc. created from these in the HMI) as well as drive safety alarms 27900.
 Meaning of the MD values:
 0 = alarms/warnings are evaluated immediately
 1 = alarms/warnings are not evaluated
 2 = alarms are evaluated only after power up, i.e. as soon as HMI has set value 2 active again (NCK automatically resets the MD value to 1 at every power up; HMI must explicitly articulate its readiness for message processing by setting value 2)
 Note: the MD restricts the range or effectiveness of MD13150 \$MN_SINAMICS_ALARM_MASK
 Default: the display default behavior of the mentioned drive alarms changes with the introduction of this MD. Now the alarms are not transported and displayed by default. The previous default behavior can be restored with MD13140 \$MN_PROFIBUS_ALARM_ACCESS=0.

General machine data

13150	SINAMICS_ALARM_MASK	N04, N05	-
-	Activate fault and warning buffer output for Sinamics	DWORD	Immediately
-			
-	-	0x0909	-
-	-	-	1/1

Description: For PROFIBUS/PROFINET only, especially SINAMICS:
 Relevant to SINAMICS diagnostics:
 Note: the effect of this MD may be hidden independently of
 the value of \$MN_PROFIBUS_ALARM_ACCESS.
 Mask for displaying the SINAMICS DOS fault and warning buffers
 Bit set: Alarms in this DO group are output
 Bit not set: Alarms in this DO group are not output
 Bit Hex. Meaning
 value

=====
 =====

0: 0x1 Output faults of the Control Units
 1: 0x2 Reserved
 2: 0x4 Output faults of the Drive Controls
 3: 0x8 Output faults of the Line Modules
 4: 0x10 Output faults of the Terminal Boards
 5: 0x20 Output faults of the Terminal Modules
 8: 0x100 Output warnings of the Control Units
 9: 0x200 Output warnings of the Communication Objects
 10: 0x400 Output warnings of the Drive Controls
 11: 0x800 Output warnings of the Line Modules
 12: 0x1000 Output warnings of the Terminal Boards
 13: 0x2000 Output warnings of the Terminal Modules

13200	MEAS_PROBE_LOW_ACTIVE	N10, N09	M5
-	Polarity reversal of sensor	BOOLEAN	PowerOn
-			
-	2	FALSE,FALSE	-
-	-	-	3/3

Description: 0: Non-deflected state 0 V
 Deflected state 24 V
 1: Non-deflected state 24 V
 Deflected state 0 V

13210	MEAS_TYPE			N10, N09	M5
-	Meas. type with decentralized drives			BYTE	PowerOn
-					
-	-	1	0	1	0/0

Description: For PROFIdrive only:
This MD sets the measuring function of decentralized drives.
The MD currently only functions for PROFIdrive drives.
MEAS_TYPE = 0 defines:
A probe is used that is connected centrally to the NC.
However, as the encoders only provide actual position values in cycles, the actual measuring position is found by interpolation.
MEAS_TYPE = 1 defines:
The probe must be wired decentralized to ALL drives.
The measuring functionality of the drive is then used, saving the actual encoder values in the hardware at the time of the measuring edge.
This method is more accurate than that with MEAS_TYPE = 0, but it requires a more complex wiring and drives that support this measuring functionality (e.g. 611U).

13211	MEAS_CENTRAL_SOURCE			N10, N09	-
-	Data source central measurement with PROFIBUS/PROFINET drives			BYTE	PowerOn
-					
-	-	3	1	3	0/0

Description: For PROFIBUS/PROFINET only:
This MD is used to set the method used to obtain the time stamps for central measurement with PROFIdrive drives.
The following applies if MEAS_CENTRAL_SOURCE = 1:
NRK accesses are used to access the onboard measuring registers.
For this purpose, the appropriate hardware which allows this must be available, e.g. 840Di with MCI extension board.
The following applies if MEAS_CENTRAL_SOURCE = 2:
The SINAMICS D01 telegram is used (telegram type 391), variant "Cyclic measurement" without handshake.
For this purpose, an integrated SINAMICS must be available, e.g. NCU 710.
(Not available until supported by SINAMICS).
The following applies if MEAS_CENTRAL_SOURCE = 3:
The SINAMICS D01 telegram is used (telegram type 391), in the variant with handshake. This procedure is fault-tolerant, however, allows a measuring edge only every 4 PROFIBUS/PROFINET cycles, i.e. it is considerably slower.
For this purpose, an integrated SINAMICS must be available, e.g. NCU 710.
This MD is only relevant, if MD13210 \$MN_MEAS_TYPE == 0.

General machine data

13220	MEAS_PROBE_DELAY_TIME	N10, N09	FBA/IAD
s	Delay time between probe deflection and recognition	DOUBLE	PowerOn
-			
-	2	0.0,0.0	0
		0.1	3/3

Description: For probes with e.g. radio transmission, the probe deflection can be detected in the NC only with delay.
 With this MD, the transmission link delay between the probe deflection and its detection is set in the control.
 The measured value is corrected internally by the control by the distance that corresponds to the traversing motion during this time before measuring (modeling).
 It is practicable to set values only up to a maximum of 15 position controller cycles.
 Anyhow, the modeling could not work with the expected accuracy with values greater than that. In this case, the input value is therefore limited internally by the software to 15 position controller cycles (without any further feedback).

13230	MEAS_PROBE_SOURCE	N10, N09	-
-	Probe simulation	BYTE	PowerOn
-			
-	-	0	0
		8	7/2

Description: Simulation of the probe only works when all axes are simulated.
 Value = 0: the probe is triggered on the programmed end position.
 Value > 0: the probe is triggered via digital output with the number=value.

13231	MEAS_PROBE_OFFSET	N10, N09	-
mm/inch, degrees	Probe offset	DOUBLE	Immediately
-			
-	-	0.1	-
		-	7/7

Description: The switching position of the probe is offset by the value.
 The offset is only active with the simulated probes and MD 13230=0.

14504	MAXNUM_USER_DATA_INT	N03	P3
-	Number of user data (INT)	DWORD	PowerOn
-			
-	-	32	0
		256	0/0

Description: Number of NC/PLC user data of type INT

14506	MAXNUM_USER_DATA_HEX	N03	P3
-	Number of user data (HEX)	DWORD	PowerOn
-			
-	-	32	0
		256	0/0

Description: Number of NC/PLC user data (HEX)

14508	MAXNUM_USER_DATA_FLOAT	N03	P3
-	Number of user data (FLOAT)	DWORD	PowerOn
-			
-	-	8	0
		32	0/0

Description: Number of NC/PLC user data of type FLOAT

General machine data

17200	GMMC_INFO_NO_UNIT		EXP	K1
-	Global HMI information (without physical unit)		DOUBLE	PowerOn
-				
-	16	3.,4.,3.,1.,0.,0.,0.,0., 0.,0.,0.,0....	-	0/0

Description: The HMI stores the global display machine data

- \$MM_DISPLAY_RESOLUTION
- \$MM_DISPLAY_RESOLUTION_INCH
- \$MM_SPIND_DISPLAY_RESOLUTION
- \$MM_MA_COORDINATE_SYSTEM

in the NCK machine data from MD17200 \$MN_GMMC_INFO_NO_UNIT[0] to MD17200 \$MN_GMMC_INFO_NO_UNIT[3]. This enables these display machine data to be accessed from the NCK.

17201	GMMC_INFO_NO_UNIT_STATUS		EXP	K1
-	Global HMI status info (without physical unit)		BYTE	PowerOn
-				
-	16	1,1,1,1,0,0,0,0,0,0,0, 0,0,0,0	-	0/0

Description: Value 0: input not assigned
Value 1: input assigned

17400	OEM_GLOBAL_INFO		A01, A11	-
-	OEM version information		STRING	PowerOn
-				
-	5		-	2/2

Description: A version information freely available to the user (is indicated in the version screen)

17500	MAXNUM_REPLACEMENT_TOOLS		N09	FBW
-	Maximal number of replacement tools.		DWORD	PowerOn
-				
-	-	1	0	32

Description: Only relevant if the tool management function is active.
Only relevant if the tool management (TMMA) function or the tool monitoring function (TMMO) is active.
0: The number of replacement tools is not monitored.
1: Exactly one replacement tool may be assigned to an identifier.
The data does not influence the memory requirement. It is solely for monitoring purposes.
Related to:
MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK,
MD20310 \$MC_TOOL_MANAGEMENT_MASK

17515	TOOL_RESETMON_MASK	N09	-
-	Tool data behavior with RESETMON	DWORD	PowerOn
-			
-	-	0x14	0
		0x49F	0/0

Description: The 5th parameter of the RESETMON command defines which tool status is to be reset. If the 5th parameter is omitted, it is replaced by the value in this MD. With the PI service "_N_TRESMON", work is always done with this value.

In that case, the bits are always assigned as the bits in the tool status \$TC_TP8[x].

Bit no.: 0 Bit value: 0 hex value: -
Meaning: Tool status "active" remains unchanged

Bit no.: 0 Bit value: 1 hex value: 'H1'
Meaning: Tool status "active" is deleted

Bit no.: 1 Bit value: 0 hex value: -
Meaning: Tool status "released" remains unchanged

Bit no.: 1 Bit value: 1 hex value: 'H2'
Meaning: Tool status "released" is set

Bit no.: 2 Bit value: 0 hex value: -
Meaning: Tool status "locked" remains unchanged

Bit no.: 2 Bit value: 1 hex value: 'H4'
Meaning: Tool status "locked" is deleted, if this is permitted by the monitoring data and the 4th parameter is set correspondingly.

Bit no.: 3 Bit value: 0 hex value: -
Meaning: Tool status "measure" remains unchanged

Bit no.: 3 Bit value: 1 hex value: 'H8'
Meaning: Tool status "measure" is set.

Bit no.: 4 Bit value: 0 hex value: -
Meaning: Tool status "prewarning limit" remains unchanged

Bit no.: 4 Bit value: 1 hex value: 'H10'
Meaning: Tool status "prewarning limit" is deleted, if this is permitted by the monitoring data and the 4th parameter is set.

Bit no.: 5 Not permitted (tool status "tool is being changed")

Bit no.: 6 Not permitted (tool status "tool is fixed-location-coded")

Bit no.: 7 Bit value: 0 hex value: -
Meaning: Tool status "was in use" remains unchanged

Bit no.: 7 Bit value: 1 hex value: 'H80'
Meaning: Tool status "was in use" is deleted

Bit no.: 8 Bit value: 0 Not permitted (tool status "is in retract")

Bit no.: 9 Bit value: 0 hex value: -
Meaning: Tool status "locked is ignored" remains unchanged

Bit no.: 9 Bit value: 1 hex value: 'H200'
Meaning: Tool status "locked is ignored" is deleted

Bit no.: 10 Bit value: 0 hex value: -
Meaning: Tool status "to unload" remains unchanged

Bit no.: 10 Bit value: 1 hex value: 'H400'
Meaning: Tool status "to unload" is deleted

Bit no.: 11 Not permitted (tool status "to load")

Bit no.: 12 Bit value: 0 Not permitted (tool status "master tool")

Bit no.: 13 Not permitted (reserved)

General machine data

The default setting corresponds to the previous behavior.
 Impermissible bits are filtered and not displayed in the limit mask.
 Bits not defined here are ignored when writing the machine data.

17520	TOOL_DEFAULT_DATA_MASK			N09	FBW
-	Create new tool: default settings			DWORD	PowerOn
-					
-	-	0x5	0	0x1F	1/1

Description: When defining a tool for the first time, certain data of the tool can be set to fixed default values. This can prevent simple applications from dealing with data which do not necessarily have to be assigned individual values.

Bit no.: 0 Bit value: 0 Hex value: -
 Meaning: Default value of tool status (\$TC_TP8), bit1=0 = 'not released'

Bit no.: 0 Bit value: 1 Hex value: 'H1'
 Meaning: Default value of tool status (\$TC_TP8), bit1=1 = 'released'

Bit no.: 1 Bit value: 0 Hex value: -
 Meaning: Default value of tool status (\$TC_TP8), bit6=0 = 'not fixed-location-coded'

Bit no.: 1 Bit value: 1 Hex value: 'H2'
 Meaning: Default value of tool status (\$TC_TP8), bit6=1 = 'fixed-location-coded'

Bit no.: 2 Bit value: 0 Hex value: -
 Meaning: The tool is only accepted in the tool group when the explicit write command is used for the tool name. Only then can it be loaded via programming.

Bit no.: 2 Bit value: 1 Hex value: 'H4'
 Meaning: The tool is automatically accepted in the tool group corresponding to the tool name when it is defined for the first time. The tool can then be changed using the default name ("t" = t-No.). The term 'tool name' (\$TC_TP2) can be hidden from the user. (This only makes sense if you do not use replacement tools or if the tool name is not written explicitly, as this may give rise to data consistency problems.)

Bit no.: 3 Bit value: 0 Only with TMMG: Default value of location type (\$TC_TP7) = 9999 =not defined

Bit no.: 3 Bit value: 1 Hex value: 'H8'
 Meaning: Only with TMMG: Default value of location type (\$TC_TP7) = 1 and consequently the default value of magazine location type (\$TC_MPP2) = 1. This means that all magazine locations can accept all tools.

Bit no.: 4 Bit value: 0 Hex value: -
 Meaning: Only with TMMG + active consider adjacent location: With SET/RESET of the magazine location status 'disabled', the magazine location status 'Overlapping allowed' remains unchanged.

Bit no.: 4 Bit value: 1 Hex value: 'H10'
 Meaning: Only with TMMG + active consider adjacent location: With SET/RESET of the magazine location status 'disabled' the magazine location status 'Overlapping allowed' occurs automatically with SET/RESET.

17530	TOOL_DATA_CHANGE_COUNTER	EXP, N01	FBW
-	Mark tool data change for HMI	DWORD	PowerOn
-			
-	-	0	0
-		0x1F	2/2

Description: HMI display support. This data enables individual data to be explicitly taken into account or not taken into account in the OPI variables (block C/S) toolCounter, toolCounterC, toolCounterM.

Bit no.: 0 Bit value: 0 Hex value: -
Meaning: Changes to the values of the tool status (\$TC_TP8) are not taken into account in toolCounterC

Bit no.: 0 Bit value: 1 Hex value: 'H1'
Meaning: Changes to the values of the tool status (\$TC_TP8) are taken into account in toolCounterC

Bit no.: 1 Bit value: 0 Hex value: -
Meaning: Changes to the values of the remaining number of tools (\$TC_MOP4) are not taken into account in toolCounterC

Bit no.: 1 Bit value: 1 Hex value: 'H2'
Meaning: Changes to the values of the remaining number of tools (\$TC_MOP4) are taken into account in toolCounterC

Bit no.: 2 Bit value: 0 Hex value: -
Meaning: Changes to the values of the tool data are not taken into account in the tool data update service

Bit no.: 2 Bit value: 1 Hex value: 'H4'
Meaning: Changes to the values of the tool data are taken into account in the tool data update service

Bit no.: 3 Bit value: 0 Hex value: -
Meaning: Changes to the values of the magazine data are not taken into account in the tool data update service

Bit no.: 3 Bit value: 1 Hex value: 'H8'
Meaning: Changes to the values of the magazine data are taken into account in the tool data update service.

Bit no.: 4 Bit value: 0 Hex value: -
Meaning: Changes to the values of the ISO tool offset data are not taken into account in the tool data update service

Bit no.: 4 Bit value: 1 Hex value: 'H10' Meaning: Changes to the values of the ISO tool offset data are taken into account in the tool data update service

The statements "Changes to the values of the tool status" and "Changes to the values of the remaining number of tools" refer not only to value changes effected by internal processes in the NC but also to value changes produced by writing the corresponding system variables.

General machine data

17540	TOOLTYPES_ALLOWED			N09	-
-	Permitted tool types			DWORD	PowerOn
-					
-	-	0x3FF	0	0x3FF	0/0

Description: Definition of the tool types permitted in NCK (see \$TC_DP1) with the tool offset selection. That is, tools of any type may be loaded in the NCK; but only the tools types defined here may be defined in the offset defining tool. A bit value = 1 means that the named tool type range is permitted for the offset selection. A bit value = 0 means that the named tool type range is rejected with an offset-capable alarm in the case of an attempted offset selection of a cutting edge of this type. The special value = 0, 9999 for the tool type means "undefined". Tool offsets with this tool type value generally cannot be selected.

Bit no.: 0 value 0x1 means: Tool types 1 to 99 permitted
 Bit no.: 1 value 0x2 means: Tool types 100 to 199 permitted (milling tools)
 Bit no.: 2 value 0x4 means: Tool types 200 to 299 permitted (drilling tools)
 Bit no.: 3 value 0x8 means: Tool types 300 to 399 permitted
 Bit no.: 4 value 0x10 means: Tool types 400 to 499 permitted (grinding tools)
 Bit no.: 5 value 0x20 means: Tool types 500 to 599 permitted (turning tools)
 Bit no.: 6 value 0x40 means: Tool types 600 to 699 permitted
 Bit no.: 7 value 0x80 means: Tool types 700 to 799 permitted
 Bit no.: 8 value 0x100 means: Tool types 800 to 899 permitted
 Bit no.: 9 value 0x200 means: Tool types 900 to 999 permitted

Related to:
 MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

17600	DEPTH_OF_LOGFILE_OPT			EXP, N01	-
-	Depth of log memory optimization in REORG			DWORD	Reset
-					
-	-	5	0	300	0/0

Description:

The depth of memory optimization in the REORG log file (=search depth to determine if a parameter to be written is already included in the REORG log file).

The value of the machine data can be increased if alarm 15110 occurs during program execution and if this alarm is to be avoided.

(Alternatively, the size of the REORG log file can be increased with MD28000 \$MC_MM_REORG_LOG_FILE_MEM, provided that the operator has the access rights required. This procedure should generally be preferred.)

Value

0 = No optimization,

That is each write operation creates an input into the REORG log file. Writing a variable value is therefore very time-efficient, but requires more memory.

0 < n <= Maximum value

When a new variable value is written, the n previously entered write operations (but maximally up to the previous indicatable block) are checked to determine if the parameter now to be written has already been written in the past. If this is the case, a new entry is not made in the REORG log file.

If this is not the case, an entry is made. A variable value can therefore be written in a very memory-efficient way, but requires more time.

Example:

MD17600 \$MN_DEPTH_OF_LOGFILE_OPT is assumed to be 5 and the following would be a typical program sequence:

```
x10      ; Executable NC block
r1=1    ; The first write command since x10
          ; -> Save old value in log file. 1st entry
r2=1    ; Determine that r2 is not yet included
          ; -> Save old value in log file. 2nd entry
r3=1    ; Determine that r3 is not yet included
          ; -> Save old value in log file. 3rd entry
r4=1    ; Determine that r4 is not yet included
          ; -> Save old value in log file. 4th entry
r5=1    ; Determine that r5 is not yet included
          ; -> Save old value in log file. 5th entry
r6=1    ; Determine that r6 is not yet included
          ; -> Save old value in log file. 6th entry
r2=1    ; Determine that r2 is already included
          ; (5th oldest entry) -> no renewed saving
r3=1    ; Determine that r3 is already included
          ; (4th oldest entry) -> no renewed saving
r1=2    ; As MD17600 $MN_DEPTH_OF_LOGFILE_OPT = 5 it is not
          detected that
          ; r1 is already included
          ; (6th oldest entry) -> save old value in log file.
          ; 7th entry
```

General machine data

```

x20      ; Executable NC block
r1=3     ; The first write command since x20
          ; -> Save old value in log file. 1st entry
r1=4     ; Determine that r1 is already included
          ; (Only one entry) -> no renewed saving

```

The setting of the MD is particularly useful if a small number of various parameters are written frequently (e.g. in a loop) and if alarm 15110 occurs for this reason.

17610	DEPTH_OF_LOGFILE_OPT_PF			EXP, N01	-
-	Depth of the PowerFail log memory optimization			DWORD	Reset
-					
-	3	10,0,0	0	300	1/1

Description: Depth of the memory optimization in the PowerFail log file (=search depth, to find out whether a parameter to be written is already included in the PowerFail log file).

It is possible to increase the value of the machine data if alarm 15120 occurs during program processing and if you wish to avoid it.

(Alternatively, you can increase the size of the PowerFail log file itself by means of MD18232 \$MN_MM_ACTFILESYS_LOG_FILE_MEM, if you have the necessary access right and if the required memory is available.

Value

0 = same effect as value 1.

Writing of a variable value is therefore very time-efficient at the cost of the required memory.

$0 < n \leq$ Maximum value

= Writing of a new variable value leads, prior to saving of the new variable value in the PowerFail log file, to the last n write operations which have been being checked to see whether the new parameter to be written has already been written once.

If yes, the new value is not entered again in the PowerFail log file, but the old value is overwritten with the new one.

If no, the new value is entered.

At the cost of the required time, writing of a variable value can therefore be designed very memory-efficiently. Changing of the data can shorten/increase the time requirement of the present application.

Changing of the data can fill the available log buffers faster/more slowly.

Frequent occurring of alarm 15120 -> Increase values for index=0,1,2.

The value indicating the index to be changed can be deducted from the parameter of alarm 15120:

if it is the value for MD18232 \$MN_MM_ACTFILESYS_LOG_FILE_MEM[0], then increase the value for index 0;

or increase MD18232 \$MN_MM_ACTFILESYS_LOG_FILE_MEM[0] itself.

Index Meaning

- 0 Search depth in preprocessing buffer
 1 Search depth in buffer for data changes within the range of tool change
 2 Search depth in buffer for data changes of main processing (especially synchronized actions)

17900	VDI_FUNCTION_MASK			EXP, N09	H1
-	Setting to VDI signals			DWORD	PowerOn
-					
-	-	0x0	0	0x1	0/0

Description: Settings for VDI signals:
 Bit 0 == 0:
 The VDI signals motion command + / motion command - are already issued if there is a travel request (default).
 Bit 0 == 1:
 The VDI signals motion command + / motion command - are issued only if the axis actually moves.

2.2.3 System specific memory settings

18000	VDI_UPDATE_IN_ONE_IPO_CYCLE			EXP, N01	P3
-	PLC interface update			BOOLEAN	PowerOn
-					
-	-	TRUE	-	-	0/0

Description: 1: Complete reading/writing of the VDI interface in one IPO cycle
 0: Complete reading/writing of the VDI interface in two IPO cycles

18030	HW_SERIAL_NUMBER			N05	-
-	Hardware series number			STRING	PowerOn
-					
-	1		-	-	2/RO

Description: During power on of the control, a unique hardware serial number is stored in this MD:

- For Powerline series modules this is the serial number of the NCU module
- For Solutionline series modules this is the serial number of the CF card, or the unique number of the MCI module in the case of PC-based systems

This data cannot be written.

General machine data

18040	VERSION_INFO	N05	IAD
-	Version and possibly data of the PCMCIA card, not FM-NC	STRING	PowerOn
-			

Description: Version identifiers of the system software
The identifiers of the PCMCIA card (assigned by the configuration management) and the 'system_date_time' from the NCK are stored in this MD during control power on. A unique assignment can always be made with this data from the MD block (startup file or INITIAL_INI) to a software release.

18050	INFO_FREE_MEM_DYNAMIC	N01, N02, N05	S7
-	Display data of free dynamic memory	DWORD	PowerOn
-			
-	-	1572864	1/1

Description: The data is used for

- the manufacturer's presetting of the memory size [bytes] available to the user for each channel after cold restart.
- Displaying the available dynamic memory [bytes]

The data cannot be written.

The contents of the data state how much unbuffered memory is available per channel for increasing the unbuffered user data storage area via MD.

One should check whether the available memory is sufficient before increasing, for example, the number of LUDs, number of functional parameters, or the size of the IPO buffer.

If necessary, proceed step by step:

- increase by 1, note (old) value
- NCK startup (= 'warm start' or NCK reset), read off new value
- memory requirement = new value - old value

On the first NCK startup or cold restart of the control (=deletion of user data), MD18210 \$MN_MM_USER_MEM_DYNAMIC is set by the NCK software so that at least the preset value results for MD18050 \$MN_INFO_FREE_MEM_DYNAMIC.

That is, the value is automatically increased if the initial value of MD18210 \$MN_MM_USER_MEM_DYNAMIC is too low.

The following also applies to multichannel systems:

- The preset value applies to each possible channel. That is, if there are ten possible channels, MD18210 \$MN_MM_USER_MEM_DYNAMIC is set by the NCK SW so that at least the 'preset value* ten' results for MD18050 \$MN_INFO_FREE_MEM_DYNAMIC.
- On activation of a channel, MD18210 \$MN_MM_USER_MEM_DYNAMIC is increased if necessary so that the memory free at the time of activation continues to be free (provided that the memory structure permits this) after the channel has become active.

- The activation of the maximum possible number of axes is ensured by increasing the data MD18210 \$MN_MM_USER_MEM_DYNAMIC if necessary so that memory free at the time of activation continues to be free (provided that the memory structure permits this) after the axis has become active.

'If necessary' in the previous sentences means that the adjustment is automatic if the channel/axis could not be activated with the current values of MD18210 \$MN_MM_USER_MEM_DYNAMIC/\$MN_INFO_FREE_MEM_DYNAMIC.

18060	INFO_FREE_MEM_STATIC	N01, N02, N05	S7
-	Display data of free static memory	DWORD	PowerOn
-			
-	524288	-	1/1

Description:

The following applies to powerline control models:

Output of the buffered memory available in the passive file system [bytes].

The data cannot be written.

The preset value states the minimum number of bytes available to the user when the NCK starts up with a cold restart.

The contents of the data state how much battery-backed memory is available for the passive file system at the time of startup.

After a non-buffered startup, the maximum memory available in the file system can be read.

If MDs that affect the requirement for buffered memory (e.g. MM_NUM_GUD_VALUES_MEM, MD38000 \$MA_MM_ENC_COMP_MAX_POINTS) are changed then this changes the amount of memory available for the passive file system, as the amount of memory allocated to the passive file system consists of MD18230 \$MN_MM_USER_MEM_BUFFERED minus all other buffered user data.

(See also the document on MD18350 \$MN_MM_USER_FILE_MEM_MINIMUM)

At the first NCK startup or cold restart of the control (=deletion of user data) MD18230 \$MN_MM_USER_MEM_BUFFERED is set by the NCK software so that at least the default value results for MD18060 \$MN_INFO_FREE_MEM_STATIC.

That is MD18230 \$MN_MM_USER_MEM_BUFFERED is automatically increased if its initial value is too low.

The following applies to solution line control models:

The data reserves the available memory for the data that are not the passive file system.

(MD18350 \$MN_MM_USER_FILE_MEM_MINIMUM[0] dimensions the passive file system.)

Machine data for setting the active file system (tools, GUDs, ...) can be increased until this memory has all been allocated.

18070	INFO_FREE_MEM_DPR	EXP, N01, N02, N05	S7
-	Display data of free memory in DUAL PORT RAM	DWORD	PowerOn
-			
-	0	-	-1/RO

Description:

Output of the available memory in the Dual Port RAM (Bytes).

The data cannot be written.

General machine data

18075	MM_NUM_TOOLHOLDERS			N02, N09	/FBW, "Description of Functions, Tool Management"
-	Max. number of tool holders per TOA			DWORD	PowerOn
-					
802d-cu3	-	3	1	5	-1/1
802d-ng2	-	3	1	5	-1/1
802d-ng3	-	3	1	5	-1/1
802d-tm1	-	1	1	4	-1/1
802d-tm2	-	2	1	5	-1/1
802d-tm3	-	2	1	5	-1/1

Description: Max. number of definable tool holders per TO range.
The address extension e of commands Te=t, Me=6 (*) is the number of the tool holder.
t=T number/tool name - depending on the function activated in the NCK.
(*): if: MD22550 \$MC_TOOL_CHANGE_MODE=1 and MD22560 \$MC_TOOL_CHANGE_M_CODE=6 applies
Normally the tool holder of milling machines is a spindle.
Also see MD20090 \$MC_SPIND_DEF_MASTER_SPIND.
For turning machines the tool holder normally is not a spindle axis.
Also see MD20124 \$MC_TOOL_MANAGEMENT_TOOLHOLDER.
In this case it should reasonably apply that MD18075 \$MN_MM_NUM_TOOLHOLDERS is larger or equal to MD20090 \$MC_SPIND_DEF_MASTER_SPIND/MD20124 \$MC_TOOL_MANAGEMENT_TOOLHOLDER.
If bit 0 = 1 in MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK and MD20310 \$MC_TOOL_MANAGEMENT_MASK is set (=magazine management (TOOLMAN)) it will apply for reasonable values that MD18075 \$MN_MM_NUM_TOOLHOLDERS is smaller or equal to MD18076 \$MN_MM_NUM_LOCS_WITH_DISTANCE.
A maximum of MD18075 \$MN_MM_NUM_TOOLHOLDERS intermediate memory locations of the type spindle (\$TC_MPP1[9998,x]=2) can then be defined.
Example: TOOLMAN inactive
MD20090 \$MC_SPIND_DEF_MASTER_SPIND shall be =3, MD18075 \$MN_MM_NUM_TOOLHOLDERS shall be =3.
Then T1=t, T2=t, T3=t, T=t can be programmed.
Example: TOOLMAN active, milling machine with Me=6 as tool change command
MD18075 \$MN_MM_NUM_TOOLHOLDERS shall be = 14, MD18076 \$MN_MM_NUM_LOCS_WITH_DISTANCE=20,
10 channels shall be active, all channels have TOOLMAN active and have the same tool and magazine data (=one TO range for all channels). MD20090 \$MC_SPIND_DEF_MASTER_SPIND=1,....10 for the channels.
Then up to 14 locations of the kind 'tool holder'/'spindle' can be defined in the intermediate magazine memory.
Additional 6 grippers or others can be defined.
These 20 locations max. can be linked to magazines.
In the channels T1=t, T14=t and Tt, or M1=6,....M14=6 and M6

can be programmed.

The PLC version used can limit the maximum number of tool holders.

18080	MM_TOOL_MANAGEMENT_MASK			N02, N09	FBW
-	Reserved memory for the tool management (SRAM)			DWORD	POWER ON
802d-cu3	-	0x0	0	0xFFFF	2/2
802d-ng2	-	0x0	0	0xFFFF	2/2
802d-ng3	-	0x0	0	0xFFFF	2/2
802d-tm1	-	0x0	0	0xFFFF	0/0
802d-tm2	-	0x0	0	0xFFFF	2/2
802d-tm3	-	0x0	0	0xFFFF	2/2

Description: Value = 0: no memory reserved, no tool monitoring possible
 Value = 0x2: monitoring data / memory available
 (only possible if option "Tool monitoring" is available)
 Related to: MD20310 \$MC_TOOL_MANAGEMENT_MASK

18082	MM_NUM_TOOL			N02, N09	FBW,S7
-	Number of tools the NCK can manage (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	128	0	200	0/0
802d-ng2	-	64	0	200	0/0
802d-ng3	-	128	0	200	0/0
802d-tm1	-	32	0	64	0/0
802d-tm2	-	64	0	200	0/0
802d-tm3	-	128	0	200	0/0

Description: The NC cannot manage more tools than the number entered in the MD.
 A tool has at least one cutting edge.
 Buffered user memory is used.
 The maximum possible number of tools is equal to the number of cutting edges. The MD must also be set when TOOLMAN is not used.
 The buffered data are lost when the machine data is changed.
 Related to:
 MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

18088	MM_NUM_TOOL_CARRIER			N02, N09	W1
-	Maximum number of definable tool holders			DWORD	PowerOn
-					
-	-	0	0	600	0/0

Description: Maximum number of definable toolholders for orientable tools in the TO area. The value is divided by the number of active TO units. The integer result states how many toolholders can be defined for each TO unit. The data for defining a toolholder are set with the system variables \$TC_CARR1, ... \$TC_CARR14.
 The data are stored in battery-backed memory.
 Application example(s):
 -

General machine data

18094	MM_NUM_CC_TDA_PARAM			N02, N09	H2
-	Number of OEM tool data (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	10	0	10	1/1
802d-ng2	-	10	0	10	1/1
802d-ng3	-	10	0	10	1/1
802d-tm1	-	0	0	10	0/0
802d-tm2	-	0	0	10	0/0
802d-tm3	-	0	0	10	0/0

Description: Number of tool-specific data (of type Integer) which can be created per tool, and which are available to the user or the compile cycle.

This machine data increases the buffered memory requirement by `sizeof(double)*max. number of tools.`

Related to:

MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK

MD18082 \$MN_MM_NUM_TOOL

18095	MM_TYPE_CC_TDA_PARAM			N02, N09	-
-	Type of OEM tool data (SRAM)			DWORD	PowerOn
-					
802d-cu3	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-ng2	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-ng3	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-tm1	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2
802d-tm2	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2
802d-tm3	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2

Description: Work may only be done with the default setting.

Individual types can be assigned to the parameters in this way.

The array index n can accept values from 0 to the value of MD18094 \$MN_MM_NUM_CC_TDA_PARAM.

The possible values of the MD = 1, 2, 3, 4, 5 and 6 represent the NC language types

- 1 BOOL,
- 2 CHAR,
- 3 INT,
- 4 REAL,
- 5 STRING and
- 6 AXIS.

The type FRAME cannot be defined here. The type STRING can be up to 31 characters long.

Example:

MD18094 \$MN_MM_NUM_CC_TDA_PARAM=1

MD18095 \$MN_MM_TYPE_CC_TDA_PARAM=5

"UserCuttingEdge" can then be programmed for parameter \$TC_TPC1.

Buffered working memory is used. A value change can - but need not - lead to reconfiguration of the buffered memory.

Related to:

MD18094 \$MN_MM_NUM_CC_TDA_PARAM

MD18082 \$MN_MM_NUM_TOOL

General machine data

18096	MM_NUM_CC_TOA_PARAM			N02, N09	G2
-	Number of data per tool edge for compile cycles (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	10	0	10	1/1
802d-ng2	-	10	0	10	1/1
802d-ng3	-	10	0	10	1/1
802d-tm1	-	0	0	10	0/0
802d-tm2	-	0	0	10	0/0
802d-tm3	-	0	0	10	0/0

Description: Number of TOA data (of type Real) which can be created per tool, and which are available to the user or the compile cycle.
This MD increases the buffered memory requirement by sizeof(double)*max. number of cutting edges.
Related to:
MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK
MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

18097	MM_TYPE_CC_TOA_PARAM			N02, N09	-
-	Type of OEM data per cutting edge (SRAM)			DWORD	PowerOn
-					
802d-cu3	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-ng2	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-ng3	10	4,4,4,4,4,4,4,4,4,4	1	6	1/1
802d-tm1	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2
802d-tm2	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2
802d-tm3	10	4,4,4,4,4,4,4,4,4,4	1	6	-1/2

Description: Work may only be done with the default setting.
Individual types can be assigned to the parameters in this way.
The array index n can accept values from 0 to the value of MD18096 \$MN_MM_NUM_CC_TOA_PARAM.
The possible values of the MD = 1, 2, 3, 4 and 6 represent the NC language types
1 BOOL,
2 CHAR,
3 INT,
4 REAL and
6 AXIS.
The type STRING is explicitly not possible here. The value 5 is treated like value 2).
The type FRAME cannot be defined here.
Example:
MD18096 \$MN_MM_NUM_CC_TOA_PARAM=1
MD18097 \$MN_MM_TYPE_CC_TOA_PARAM=2
"A" can then be programmed for parameter \$TC_DPC1.
Buffered working memory is used. A value change can - but need not - lead to reconfiguration of the buffered memory.
Related to:
MD18096 \$MN_MM_NUM_CC_TOA_PARAM
MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

General machine data

18098	MM_NUM_CC_MON_PARAM	N02, N09	FBW
-	Number of monitoring data per tool for compile cycles	DWORD	PowerOn
-			
-	-	0	0
-		10	0/0

Description: Number of monitoring data (of type Integer) which can be created per tool, and which are available to the user or the compile cycle.

This MD increases the buffered memory requirement by $\text{sizeof(int)} \times \text{max. number of cutting edges}$.

Related to:

MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK

MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

18099	MM_TYPE_CC_MON_PARAM	N02, N09	FBW
-	Type of OEM monitor data (SRAM)	DWORD	PowerOn
-			
-	10	3,3,3,3,3,3,3,3,3,3	1
-		6	-1/2

Description: Work may only be done with the default setting.

Individual types can be assigned to the parameters in this way. The array index n can accept values from 0 to the value of MD18098 \$MN_MM_NUM_CC_MON_PARAM.

Possible values of the MD = 1, 2, 3, 4 and 6 represent the NC language types

- 1 BOOL,
- 2 CHAR,
- 3 INT,
- 4 REAL and
- 6 AXIS.

The FRAME type cannot be defined here.

(The type STRING is explicitly not possible here. The value 5 is treated like value 2.)

Example:

MD18098 \$MN_MM_NUM_CC_MON_PARAM=1

MD18099 \$MN_MM_TYPE_CC_MON_PARAM=2

"UserCuttingEdge" can then be programmed for the parameter \$TC_MOPC1.

Buffered working memory is used. A value change can - but need not - lead to reconfiguration of the buffered memory.

Related to:

MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

MD18098 \$MN_MM_NUM_CC_MON_PARAM

General machine data

18100	MM_NUM_CUTTING_EDGES_IN_TOA			N02, N09	W1
-	Tool offsets in the TO range (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	144	0	288	0/0
802d-ng2	-	144	0	288	0/0
802d-ng3	-	144	0	288	0/0
802d-tm1	-	32	0	64	0/0
802d-tm2	-	64	0	128	0/0
802d-tm3	-	128	0	200	0/0

Description: Defines the number of tool cutting edges in a TO area. This machine data reserves approximately 250 bytes of battery-backed memory per TOA block for each tool cutting edge, irrespective of the tool type.

Tools with cutting edges of type 400-499 (= grinding tools) also occupy the location of a cutting edge.

Example:
 Defining 10 grinding tools each of which has one cutting edge.
 Then at least:
 MD18082 \$MN_MM_NUM_TOOL = 10
 MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA = 20 must apply.
 See also MD18082 \$MN_MM_NUM_TOOL
 Buffered user memory is used.

Special cases:
 The battery-backed data are lost if this machine data is altered.

18102	MM_TYPE_OF_CUTTING_EDGE			N02, N09	W1
-	Type of D No. programming (SRAM)			DWORD	PowerOn
-					
-	-	0	0	1	2/2

Description: This MD activates the 'flat D number management'.
 The type of D programming can be determined by individual values:

- direct or
- indirect programming.

The default value is zero. This means that the NCK manages the T and D numbers.

The NCK only accepts a value > 0 if bit 0 is not set in MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK. That means the tool management function cannot be active at the same time.

Value: Meaning

 0: No 'flat D number management' active
 1: D numbers are programmed directly and absolutely
 Values 2, 3 have not yet been released

General machine data

18105	MM_MAX_CUTTING_EDGE_NO	N02, N09	W1
-	maximum value of D number	DWORD	PowerOn
-			
-	-	9	1
		32000	0/0

Description: Maximum value of the D number.
This does not affect the maximum number of D numbers per cutting edge.
The monitoring of the D number assignment associated with this value is only active when the D numbers are redefined. This means that existing data blocks are not subsequently checked if the MD is changed.
The following settings are advantageous:
MD18105 \$MN_MM_MAX_CUTTING_EDGE_NO is equal to
MD18106 \$MN_MM_MAX_CUTTING_EDGE_PER_TOOL.
If MD18105 \$MN_MM_MAX_CUTTING_EDGE_NO is selected > MD18106 \$MN_MM_MAX_CUTTING_EDGE_PER_TOOL, then the difference between offset number D and cutting-edge number CE should be known.
See also language commands CHKDNO, CHKDM, GETDNO, SETDNO, DZERO.
The machine data is not evaluated with the function "flat D number", and therefore has no significance there.
The MD can affect the memory requirement:
If the relation between the two, above-mentioned MDs changes from "less than or equal to" to "greater than" or vice versa, then this affects the non-buffered memory requirement.
Related to:
MD18106 \$MN_MM_MAX_CUTTING_EDGE_PER_TOOL

18106	MM_MAX_CUTTING_EDGE_PERTOOL	N02, N09	W1
-	maximum number of D numbers per tool	DWORD	PowerOn
-			
-	-	9	1
		12	0/0

Description: Maximum number of cutting edges (D offsets) per tool (per T number).
This enables more safety to be achieved in the data definition.
The value can be set to 1 if only tools with one cutting edge are used. This prevents more than one cutting edge being assigned to a tool in the data definition.
The following settings are advantageous: MD18105
\$MN_MM_MAX_CUTTING_EDGE_NO is equal to MD18106
\$MN_MM_MAX_CUTTING_EDGE_PER_TOOL. If MD18105
\$MN_MM_MAX_CUTTING_EDGE_NO is selected > MD18106
\$MN_MM_MAX_CUTTING_EDGE_PER_TOOL, then the difference between offset number D and cutting-edge number CE should be known.
See also language commands CHKDNO, CHKDM, GETDNO, SETDNO, DZERO.
The machine data is not evaluated with the function "flat D number", and therefore has no significance there.
The data can affect the memory requirement.
The MD can affect the memory requirement.
If the relation between the two, above-mentioned MDs changes from "less than or equal to" to "greater than" or vice versa, then this affects the non-buffered memory requirement.
Related to:
MD19105 \$MN_MM_MAX_CUTTING_EDGE_NO

18108	MM_NUM_SUMCORR	N02, N09	W1
-	Resulting offsets in TO area (SRAM)	DWORD	PowerOn
-			
-	-	-1	-1
		9000	0/0

Description: Total number of resulting offsets in the NCK.
The value = -1 means that the number of resulting offsets is equal to the number of cutting edges multiplied by the number of resulting offsets per cutting edge.
A value > 0 and < "number of cutting edges multiplied by the number of resulting offsets per cutting edge" means that a maximum "number of resulting offsets per cutting edge" can be defined per cutting edge but do not have to be. This means that buffered memory can be used economically. Only those cutting edges for which explicit data have been defined have a resulting offset data block.
Buffered memory is reserved. The memory requirement for a resulting offset doubles if "setup offset active" has also been configured, see MD18112 \$MN_MM_KIND_OF_SUMCORR.
See also:
MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA,
MD18110 \$MN_MM_MAX_SUMCORR_PER_CUTTEDGE

18110	MM_MAX_SUMCORR_PER_CUTTEDGE	N02, N09	S7
-	Max. number of additive offsets per edge (SRAM)	DWORD	PowerOn
-			
-	-	1	1
		6	0/0

Description: Maximum number of resulting offsets per cutting edge.
If MD18108 \$MN_MM_NUM_SUMCORR > 0 then:
The data is not memory defining, but is only used for monitoring.
If MD18108 \$MN_MM_NUM_SUMCORR = -1 then:
The data is memory defining.
See also
MD18108 \$MN_MM_NUM_SUMCORR,
MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA.

General machine data

18112	MM_KIND_OF_SUMCORR	N02, N09	W1
-	Properties of resulting offsets in TO area (SRAM)	DWORD	PowerOn
-			
-	-	0	0
		0x1F	0/0

Description: Properties of the resulting offsets in NCK.

Bit 0=0 "Resulting offsets fine" are backed up when the tool data are backed up.

Bit 0=1 "Resulting offsets fine" are backed up when the tool data are backed up.

Bit 1=0 Set-up offsets are backed up when the tool data are backed up.

Bit 1=1 Set-up offsets are not backed up when the tool data are backed up.

Bit 2=0 If work is done with the function tool management (TOOLMAN) and/or tool monitoring (TMMO), existing "resulting offsets fine/setup offsets" are not affected when the tool status is set to "active".

Bit 2 =1 Existing resulting offsets are set to zero when the tool status is set to "active".

Bit 3=0 If work is done with the function "TOOLMAN" +"adapter", the "resulting offsets fine"/setup offsets are transformed.

Bit 3=1 No transformation of the "resulting offsets fine"/setup offsets

Bit 4=0 No set-up offset data blocks

Bit 4=1 Set-up offset data blocks are additionally created. Whereby the resulting offset is composed of the sum of the set-up offset + "resulting offset fine"

Changing the status of bits 0, 1, 2, 3 does not change the memory structure.

Changing the status of bit 4 triggers restructuring of the buffered memory after the next PowerOn.

See also

MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA

MD18108 \$MN_MM_NUM_SUMCORR

MD18110 \$MN_MM_MAX_SUMCORR_PER_CUTTEDGE

MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK,

MD20310 \$MC_TOOL_MANAGEMENT_MASK,

MD18086 \$MN_MM_NUM_MAGAZINE_LOCATION,

MD18104 \$MN_MM_NUM_TOOL_ADAPTER

18114	MM_ENABLE_TOOL_ORIENT	N02, N09	W1, F2
-	Assign tool cutting edge orientation	DWORD	PowerOn
-			
-	-	0	0
-		3	0/0

Description: The function allows an orientation deviating from the default value to be assigned to each tool cutting edge.

Value = 0:
The tool orientation function is inactive.

Value = 1:
The system parameter \$TC_DPV[n, m] is assigned to each tool cutting edge D=m of the tool T=n, with the aid of which one of 6 possible tool orientations in positive or negative coordinate direction can be defined.

Value = 2:
Not only the system parameter \$TC_DPV[n, m] but also the additional three system parameters \$TC_DPV3[n, m], \$TC_DPV4[n, m] and \$TC_DPV5[n, m] are assigned to each tool cutting edge D=m of the tool T=n, with the aid of which any spatial tool orientation can be defined

T, D are the NC addresses T and D with which the tool change or the tool selection and the offset selection are programmed.

Value = 3:
Not only the system parameters \$TC_DPV[n, m] and \$TC_DPV3 - \$TC_DPV5 but also the additional three system parameters \$TC_DPVN3[n, m], \$TC_DPVN4[n, m] and \$TC_DPVN5[n, m] are assigned to each tool cutting edge D=m of the tool T=n, with the aid of which a vector (normal vector) can be defined that is preferably perpendicular to the tool orientation. The normal vector may be modified so that it lies in the plane formed by the orientation and the programmed normal vector but perpendicular to the orientation

The orientation and the possibly modified normal vector together define a complete orientation coordinate system. The machine data affects the requirement for battery-backed memory.

18116	MM_NUM_TOOL_ENV	N02, N09	W1
-	Number of tool environments in the TO area (SRAM)	DWORD	PowerOn
-			
-	-	0	0
-		600	0/0

Description: Total number of tool environments in the NCK.
Battery-backed memory is reserved.

General machine data

18118	MM_NUM_GUD_MODULES	N02	S7
-	Number of GUD files in active file system (SRAM)	DWORD	PowerOn
-			
-	-	7	1
-		9	0/0

Description: A GUD block corresponds to a file in which user-defined data can be stored. 9 GUD blocks are available of which 3 are already assigned to specific users/applications.

UGUD_DEF_USER (block for user)
 SGUD_DEF_USER (block for SIEMENS)
 MGUD_DEF_USER (block for machine manufacturer)

Special cases:

The number of GUD modules is determined by the GUD module with the highest number entered.

Example:

If the following GUD modules are defined,

UGUD
 MGUD
 GUD5
 GUD8

then the machine data must be set to a value of 8, signifying a memory requirement of 8 x 120 bytes = 960 bytes.

It is therefore advisable to selected the "lowest" possible GUD module. If GUD modules UGUD and MGUD have not been assigned elsewhere, then they may be used for this purpose.

Related to:

MD18150 \$MN_MM_GUD_VALUES_MEM
 (Memory space for user variables)

18120	MM_NUM_GUD_NAMES_NCK	N02	S7
-	Number of global user variable names (SRAM)	DWORD	PowerOn
-			
-	-	50	0
-		32000	2/2

Description: Defines the number of user variables for NCK global user data (GUD). Approximately 80 bytes of memory per variable are reserved in the SRAM for the names of the variables. The additional memory required for the value of the variable depends on the data type of the variable. The number of available NCK global user data is exhausted on reaching the limit value set in MD18120 \$MN_MM_NUM_GUD_NAMES_NCK or MD18150 \$MN_MM_GUD_VALUES_MEM (memory space for user variables).

Buffered user memory is used.

Special cases:

The battery-backed data are lost if this machine data is altered.

Related to:

MD18150 \$MN_MM_GUD_VALUES_MEM
 (Memory space for user variables)

General machine data

18130	MM_NUM_GUD_NAMES_CHAN			N02	S7
-	Number of channel-specific user variable names (SRAM)			DWORD	PowerOn
-					
-	-	150	0	32000	2/2

Description: Defines the number of user variable names for channel-specific global user data (GUD). Approximately 80 bytes of memory are reserved in the SRAM for each variable name. The additional memory required for the value of the variable is equal to the size of the data type of the variable multiplied by the number of channels. This means that each channel has its own memory available for the variable values. The number of available channel-specific global user data is exhausted on reaching the limit value set in MD18130 \$MN_MM_NUM_GUD_NAMES_CHAN or MD18150 \$MN_MM_GUD_VALUES_MEM (memory space for user variables).
The name created with the DEF statement is valid for all channels. The memory requirement for the variable value is equal to the size of the data type multiplied by the number of channels. Buffered user memory is used.

Special cases:

The battery-backed data are lost if this machine data is altered.

Related to:

MD18150 \$MN_MM_GUD_VALUES_MEM
(Memory space for user variables)

18150	MM_GUD_VALUES_MEM			N02	A2
-	Memory location for global user variable values (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	48	0	32000	2/2
802d-ng2	-	48	0	32000	2/2
802d-ng3	-	48	0	32000	2/2
802d-tm1	-	32	0	32000	2/2
802d-tm2	-	32	0	32000	2/2
802d-tm3	-	32	0	32000	2/2

Description: The specified value reserves memory space for the variable values of the global user data (GUD). The dimensioning of the memory depends to a large extent on the data types used for the variables.

Overview of the memory requirements of the data types:

Data type	Memory requirement
REAL	8 bytes
INT	4 bytes
BOOL	1 byte
CHAR	1 byte
STRING	1 byte per character, 100 characters permitted per string
AXIS	4 bytes
FRAME	up to 1KB depending on control model

General machine data

The total memory required by a channel or axis-specific global user variable is the memory requirement of the variables multiplied by the number of channels or axes. The number of global user variables available is given when the limit defined in MD18120 \$MN_MM_NUM_GUD_NAMES_NCK, MD18130 \$MN_MM_NUM_GUD_NAMES_CHAN, MD18140 \$MN_MM_NUM_GUD_NAMES_AXIS or MD18150 \$MN_MM_GUD_VALUES_MEM is reached.

Buffered user memory is used.

Special cases:

The buffered data are lost if this machine data is altered!

Related to:

MD18118 \$MN_MM_NUM_GUD_MODULES

(Number of GUD blocks)

MD18120 \$MN_MM_NUM_GUD_NAMES_NCK

(Number of global user variables)

MD18130 \$MN_MM_NUM_GUD_NAMES_CHAN

(Number of channel-specific user variables)

18160	MM_NUM_USER_MACROS			N02	S7
-	Number of macros (DRAM)			DWORD	PowerOn
-					
802d-cu3	-	70	0	32000	1/1
802d-ng2	-	70	0	32000	1/1
802d-ng3	-	70	0	32000	1/1
802d-tm1	-	50	0	32000	1/1
802d-tm2	-	50	0	32000	1/1
802d-tm3	-	50	0	32000	1/1

Description:

Defines the number of macros that can be stored in the files `_N_SMAC_DEF`, `_N_MMAC_DEF` und `_N_UMAC_DEF`. Each of these files which is opened occupies at least one kbyte memory space for the file code in the part program memory. Another kbyte of memory is reserved for the file when the one kbyte file code limit is exceeded.

The dynamic user memory is used. For the stated number of macros, approximately 375 bytes are reserved per macro for management tasks.

18170	MM_NUM_MAX_FUNC_NAMES	N02	V2,A2
-	Number of miscellaneous functions (cycles, DRAM)	DWORD	PowerOn
-			
-	-	100	0
		32000	0/0

Description: The data limits the maximum number of special functions over and above the predefined functions (such as sine, cosine, etc.) which can be used in

- cycle programs
- compile cycle software.

The function names are entered in the global NCK dictionary and must not conflict with the names that already exist.

The SIEMENS cycle package contains special functions that are taken into account by the default setting of the MD.

The data are stored in unbuffered memory. Approximately 150 bytes are required for each special function for management purposes.

Related to:

MD18180 \$MN_MM_NUM_MAX_FUNC_PARAM
(Number. of additional parameters)

18180	MM_NUM_MAX_FUNC_PARAM	N02	V2
-	Number of additional parameters for cycles according to MD 18170	DWORD	PowerOn
-			
-	-	1000	0
		32000	0/0

Description: Defines the maximum number of parameters required for the special functions in

- cycle programs
- compile cycle software.

50 parameters are required for the special functions of the SIEMENS cycle package, software version 1.

The data are stored in unbuffered memory. 72 bytes of memory are reserved for each parameter.

Related to:

MD18170 \$MN_MM_NUM_MAX_FUNC_NAMES
(Number of special functions)

General machine data

18190	MM_NUM_PROTECT_AREA_NCK			N12, N02, N06, N09	A3
-	Number of files for machine-related protection zones (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	0	0	10	1/1
802d-ng2	-	0	0	10	1/1
802d-ng3	-	0	0	10	1/1
802d-tm1	-	0	0	10	-1/2
802d-tm2	-	0	0	10	-1/2
802d-tm3	-	0	0	10	-1/2

Description: This machine data defines how many blocks are created for the protection zones available in the NCK.

Buffered memory is used.

Special cases:

The battery-backed data are lost if this machine data is altered.

References:

/FB/, A3, "Axis Monitoring, Protection Zones"

18204	MM_NUM_CCS_TDA_PARAM			N02, N09	FBW
-	Number of Siemens OEM tool data (SRAM)			DWORD	PowerOn
-					
-	-	0	0	10	0/0

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 2=1 ('H4'), is set:

User or OEM data of the tools.

Number of Siemens OEM TDA (=tool-specific) data (standard format Int).

See also: MD18094 \$MN_MM_NUM_CC_TDA_PARAM, MD18082 \$MN_MM_NUM_TOOL
Buffered user memory is used

18205	MM_TYPE_CCS_TDA_PARAM	N02, N09	FBW
-	Type of Siemens OEM tool data (SRAM)	DWORD	PowerOn
-			
-	10	4,4,4,4,4,4,4,4,4,4	1
-		6	0/0

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 2=1 ('H4'), is set:
 User or OEM data in the tool management.
 Type of tool-specific Siemens user data configured by MD18204 \$MN_MM_NUM_CCS_TDA_PARAM.
 Each parameter can be assigned its own type. The permissible types are

Type	Value of the machine data

BOOL	1
CHAR	2
INT	3
REAL	4
STRING	5 (permits identifiers up to 31 characters long)
AXIS	6
FRAME	not defined

See also: MD18204 \$MN_MM_NUM_CCS_TDA_PARAM, MD18082 \$MN_MM_NUM_TOOL
 Buffered user memory is used

18206	MM_NUM_CCS_TOA_PARAM	N02, N09	FBW
-	No. of Siemens OEM data per cutting edge (SRAM)	DWORD	PowerOn
-			
-	-	0	0
-		10	0/0

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 2=1 ('H4'), is set:
 User or OEM data of the tools.
 Number of Siemens OEM TOA data (standard format IN_Real).
 See also: MD18096 \$MN_MM_NUM_CC_TOA_PARAM, MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA
 Buffered user memory is used

General machine data

18207	MM_TYPE_CCS_TOA_PARAM	N02, N09	FBW
-	Type of Siemens OEM data per cutting edge (SRAM)	DWORD	PowerOn
-			
-	10	4,4,4,4,4,4,4,4,4,4	1
		6	0/0

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 2=1 ('H4'), is set:

User or OEM data in the tool management.

Type of cutting-edge-specific Siemens user data configured by MD18206 \$MN_MM_NUM_CCS_TOA_PARAM.

Each parameter can be assigned its own type. The permissible types are

Type	Value of the machine data
(See types of the NC language)	

```

-----
BOOL                1
CHAR                2
INT                 3
REAL                4
• (STRING is explicitly impossible here; value 5 is treated
  like value 2)
AXIS                6
FRAME              not defined
See also: MD18206 $MN_MM_NUM_CCS_TOA_PARAM, MD18100
$MN_MM_NUM_CUTTING_EDGES_IN_TOA
Buffered user memory is used

```

18208	MM_NUM_CCS_MON_PARAM	N02, N09	FBW
-	No. of Siemens OEM monitor data (SRAM)	DWORD	PowerOn
-			
-	-	0	0
		10	0/0

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 0 = 1 or bit 1 = 1 and bit 2=1 ('H4'), is set:

User or OEM data in the tool management.

Number of Siemens OEM monitoring data; standard format IN_Int).

See also: MD18098 \$MN_MM_NUM_CC_MON_PARAM, MD18100

\$MN_MM_NUM_CUTTING_EDGES_IN_TOA

Buffered user memory is used

18209	MM_TYPE_CCS_MON_PARAM			N02, N09	FBW
-	Type of Siemens OEM monitor data (SRAM)			DWORD	PowerOn
-					
-	10	3,3,3,3,3,3,3,3,3,3	1	6	-1/2

Description: Only when MD18080 \$MN_MM_TOOL_MANAGEMENT_MASK, bit 0 = 1 or bit 1 = 1 and bit 2=1 ('H4'), is set:
 User or OEM data in the tool management.
 Type of monitoring-specific Siemens user data configured by MD18208 \$MN_MM_NUM_CCS_MON_PARAM.
 Each parameter can be assigned its own type. The permissible types are

Type	Value of the machine data

BOOL	1
CHAR	2
INT	3
REAL	4
• (STRING is explicitly impossible here; value 5 is treated like value 2)	
AXIS	6
FRAME	not defined

See also: MD18208 \$MN_MM_NUM_CCS_MON_PARAM, MD18100 \$MN_MM_NUM_CUTTING_EDGES_IN_TOA
 Buffered user memory is used

18210	MM_USER_MEM_DYNAMIC			EXP, N02	S7
-	User memory in DRAM [KB]			DWORD	PowerOn
-					
802d-cu3	-	3000	0	17920	0/0
802d-ng2	-	3000	0	15360	0/0
802d-ng3	-	3000	0	16384	0/0
802d-tm1	-	3000	0	13312	0/0
802d-tm2	-	3000	0	15360	0/0
802d-tm3	-	3000	0	16384	0/0

Description: The DRAM in the NC is used jointly by the system and the user. MD18210 \$MN_MM_USER_MEM_DYNAMIC defines the size of the DRAM available to the user. The input limits depend upon the hardware and software configurations of the CNC.
 There are various types of user data in this memory area, for example.

- Local user data
- IPO block buffers
- User macros
- Diagnostics functions such as trace recording of times,.....
- Tool management trace

General machine data

- Communication with 1-n HMIs; Value of n: See MD10134 \$MN_MM_NUM_MMC_UNITS.
- Reorg Log file (required for internal purposes of the NC program sequence)
- ...

Each additionally active channel occupies a substantial amount of memory here.

Each activated axis requires part of this memory.

Exactly how much that is depends largely on the control model and the software version.

The settable values depend on the hardware and software configurations.

The value of NCK is automatically set after unbuffered startup of the NCK or deletion of the memory. The value is then such that the free memory defined in MD18050 \$MN_INFO_FREE_MEM_DYNAMIC is available to the user.

(See the description of MD18050 \$MN_INFO_FREE_MEM_DYNAMIC).

If the value is set too high (in the sense that the memory required is

more than that available on the memory module), the NCK responds at the next NCK reset/power on by automatically reducing the machine data value to the maximum possible value that the hardware permits.

Message alarm 6030 advises of this process. This corresponds to a legal response of the NCK and is not an incorrect response.

The essential significance of the machine data is not to release the entire memory to the user because the memory is shared between the system and the user. A part of the physically existing memory is reserved for future developments of the NCK.

The maximum amount of memory available on the hardware can be found by selecting a value for the data that is so large that, after the subsequent restart, message alarm 6030 indicates the maximum available memory. Applications that use the maximum available memory will in all probability have memory problems with a software conversion to a newer NCK version.

Upper and lower limits are not necessary. The software rejects values outside the permissible range and then automatically sets suitable values.

(See also message alarm 6030.)

The data in the dynamic memory are not battery-backed.

Note:

During power on, the system software compares the sum of all requests for dynamic memory with the value in MD18210 \$MN_MM_USER_MEM_DYNAMIC. Alarm 6000 "Memory allocated with standard machine data" is output if the memory required exceeds the memory capacity set with the MD. Alarm 6030 "User memory limit has been adapted" is output if the control detects during the power on that the memory capacity required by MD18210 \$MN_MM_USER_MEM_DYNAMIC is larger than the physical memory.

Related to:

The available dynamic memory can be taken from MD18050 \$MN_INFO_FREE_MEM_DYNAMIC (display data of the free dynamic memory).

General machine data

18220	MM_USER_MEM_DPR	EXP, N02	-
-	User memory in DUAL PORT RAM (DPR)	DWORD	PowerOn
-			
-	-	0	-
-	-	-	-1/0

Description: The functionality is not available in previous software versions.

18230	MM_USER_MEM_BUFFERED	N02	S7
-	User memory in SRAM	DWORD	PowerOn
-			
802d-cu3	-	0	0
802d-ng2	-	0	0
802d-ng3	-	0	0
802d-tm1	-	0	0
802d-tm2	-	0	0
802d-tm3	-	0	0

Description: Battery-backed user memory (in kbyte).
 Various types of user data are stored in this memory area.
 For example:

- NC part programs
- R parameters
- Global user data (GUD)
- Definitions of the protection zones
- Correction tables EEC, CEC, QEC
- Tool / magazine data

...

This data is retained after control power off.
 (Provided the data backup (battery,...) is in good working order and the Init switch is correctly set on the control).
 This means that they are available unchanged after restart.
 In the case of control models without a backup battery (e.g. 802S,...) there is, as a rule, an option of , specifically backing up the data by operation, so that they are available again after the next power on process.
 The settable values depend on the hardware and software configurations.
 The set values are designed for the minimum memory configuration of the particular control model.
 256, 512 and 2000, 4000KB of battery-backed memory are available on the hardware.
 Approximately 30KB of this physically present memory is used for internal purposes. This means that approximately 226, 482, 1970, 3970KB of user memory can be set.
 After all the NCK functions have taken 'their' memory corresponding to the relevant machine data values, the rest of the memory is added to the part program memory. As a rule, the user will thus have more part program memory available than that guaranteed in the sales brochure. This 'more' may however vary from version to version.

General machine data

If there are various memory configuration options for a control model then the data may have to be increased correspondingly when using the larger memory variants.

In this respect, see the meaning of MD18060

\$MN_INFO_FREE_MEM_STATIC

Special cases:

The battery-backed data are lost if this machine data is altered.

18231	MM_USER_MEM_BUFFERED_TYPEOF	N02	-
-	Technology for data buffering	DWORD	PowerOn
-			
-	3	1,1,1	0
		1	0/0

Description: Type of technology used for data back-up
Value = 0 SRAM memory only
Value = 1 SRAM and flash/disk memory
If the value = 1 then see also MD18232
\$MN_MM_ACTFILESYS_LOG_FILE_MEM
Index 0 = Reserved
Index 1 = Definition for the battery-backed data of the active file system (incl. machine data).
Index 2 = Definition for the battery-backed data of the passive file system (part programs, cycles, ...).
This value is in each case automatically derived during power on
from MD11292 \$MN_DRAM_FILESYST_CONFIG.

18232	MM_ACTFILESYS_LOG_FILE_MEM	N02	-
-	System: logfile size in SRAM [KB]	DWORD	PowerOn
-			
-	3	200,5,30	0
		32000	0/0

Description: Buffered log file for buffered data of the active file system (in kbytes)
Systems with slow data buffer media store changed buffered data in the internal system SRAM. When the buffer is full, all data of the active file system are made persistent. The buffer backs up the data persistence of the last persistence operation until the next power fail. After a power fail (power failure or power OFF), data that had not yet been made persistent at the time of the power fail can be restored from this buffer.
The log file serves to minimize or totally avoid data loss in the event of power fail.
1000 entries require approximately 70 kB.
A value greater than 0 is only practicable if MD18231 \$MN_MM_USER_MEM_BUFFERED_TYPEOF[1] = 1.
A value equal to 0 means that the buffered data are not voltage loss safe
if MD18231 \$MN_MM_USER_MEM_BUFFERED_TYPEOF[1] = 1 (typical for SINUMERIK solution line)

Example:

With MD18232 \$MN_MM_ACTFILESYS_LOG_FILE_MEM[2] = 0, data changes from synchronized actions can be excluded from the power fail data backup.

An improved time response of the synchronized actions would be advantageous. This should only be set if the buffered data that are changed by the synchronized action are not safety-relevant.

Index Meaning

0 Preprocessing buffer
 1 Buffer for data changes within the range of the tool change
 2 Buffer for data changes of the main processing (especially synchronized actions)

See also MD17610 \$MN_DEPTH_OF_LOGFILE_OPT_PF, which can be used to optimize the behavior.

18233	IS_CONTINUOUS_DATA_SAVE_ON	EXP, N02	-
-	System: Automatic saving of persistent data	BOOLEAN	PowerOn
-			
-	3	TRUE,TRUE,TRUE	0/0

Description: The machine data is relevant only if MD18231 \$MN_MM_USER_MEM_BUFFERED_TYPEOF = 1.
 The default value should be changed only if the system is operated in an environment,
 Value = 0 : Continuous saving of persistent data on disk/flash/etc. is deactivated.
 The dynamic response of the software on systems of the SolutionLine range can thus be improved.
 Value = 1 : Continuous automatic saving of persistent data on disk/flash/etc. is active.
 Index 0 = Reserved
 Index 1 = Definition for the buffered data of the active file system (incl. machine data).
 Index 2 = Definition for the buffered data of the passive file system (part programs, cycles,).
 The default value should be changed only for diagnostic purposes or for optimizing the dynamic response.
 The default value should be changed only if the system is operated in an environment,
 where no spontaneous shutdown of the system / spontaneous power failure occurs.
 Otherwise, persistent data can be lost.

18235	MM_INCOA_MEM_SIZE	EXP	-
-	Size of the DRAM memory for INCOA applications [Kbyte]	DWORD	PowerOn
-			
-	-	0	0
-		25600	-1/2

Description: On cold restart of the control system, the default value of MD18235 \$MN_MM_INCOA_MEM_SIZE specifies the DRAM memory range that is available for INCOA applications in total.
 This MD can only be read. With the diagnostics function "Read current actual value" the memory space actually occupied by the INCOA applications can be determined.

General machine data

18237	MM_CYC_DATA_MEM_SIZE	EXP, N02	-
-	Cycle/display setting data in SRAM [kB]	DWORD	PowerOn
-			
-	-	0	0
-	-	96	1/RO

Description: Size of the buffered memory for 'Setting data for cycles and display' [kB]

18240	MM_LUD_HASH_TABLE_SIZE	EXP, N02	S7
-	Hash table size for LUD (DRAM)	DWORD	PowerOn
-			
-	-	37	11
-	-	107	0/0

Description: Defines the size of the hash table for local user data (LUD). The value entered must be a primary number. The setting allows the optimization of

- the interpreter execution time (low value = longer execution time) and
- memory requirements (low value = less memory).

A larger table requires a smaller number of decoding operations for internally decoding the variables and consequently a shorter interpreter execution time. The value of this machine data affects the amount of dynamic memory required for managing the blocks for local user variables with REORG, see MD28010

\$MC_MM_NUM_REORG_LUD_MODULES (Number of blocks for local user variables with REORG (DRAM)).

Note:

This machine data is assigned internally by the control and must not be altered by the user.

18242	MM_MAX_SIZE_OF_LUD_VALUE	N02	V2
-	Maximum memory block size for LUD/GUD values	DWORD	PowerOn
-			
-	-	920	920
-	-	SLMAXVARBYTES	0/0

Description: Defines the net memory array size for LUD/GUD variables. Each NC program that defines at least one LUD/GUD variable or has call parameters then occupies at least one memory array of this size. The LUD/GUD variables of a program may occupy the complete LUD/GUD value memory set for the channel. However, then there is no memory available for other programs.

The memory for the LUD/GUD variables (that is defined for LUD by the channel-specific MD28040 \$MC_MM_LUD_VALUES_MEM and for GUD by the NCK-specific MD18150 \$MN_MM_GUD_VALUES_MEM) is divided into equally sized arrays of the size MD18242

\$MN_MM_MAX_SIZE_OF_LUD_VALUE.

Example:

```
MM_LUD_VALUES_MEM = 12 (kbytes gross)
MM_MAX_SIZE_OF_LUD_VALUE = 660 (bytes net)
                        + 16 (bytes management data per array)
                        -----
                        676 (bytes gross)
```

One then obtains $12 \cdot 1024 / 676 = 18$ memory arrays each of 660 bytes.

This means that 12 NC programs can either each occupy one array or one NC program can define, for example, 18 variables of type Frame (whose size is approximately 660 bytes).

Data type	Memory requirement
REAL	8 bytes
INT	4 bytes
BOOL	1 byte
CHAR	1 byte
STRING	1 byte per character, 100 characters are possible per string
AXIS	4 bytes
FRAME	up to 1 kbyte (depending on control model)

Related to:

```
MD28040 $MC_MM_LUD_VALUES_MEM
(Memory size for local user variables (DRAM))
```

Warning:

The battery-backed data are lost when this machine data is changed!

The size of the NC language type Frame depends on the maximum number of channel axes generated by the NCK.

There are NCK systems with a maximum number of channel axes from 4 to 20. In the case of 20 axes, the type Frame then has a size of 660 bytes.

18250	MM_CHAN_HASH_TABLE_SIZE	EXP, N02	S7
-	Hash table size for channel-specific data (DRAM)	DWORD	PowerOn
-			
-	-	23	3
		193	0/0

Description: Defines the size of the hash table for channel-specific names. The value entered must be a primary number. The setting allows the optimization of

- the interpreter execution time (low value = longer execution time) and
- memory requirements (low value = less dynamic memory).

A larger table requires a smaller number of decoding operations for internally decoding the variables and consequently a shorter interpreter execution time. The value of this machine data affects the amount of dynamic memory required.

The memory required per channel in bytes is equal to the value entered multiplied by 68.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

General machine data

Warning:

The battery-backed data are lost if this machine data is altered!

18260	MM_NCK_HASH_TABLE_SIZE		EXP, N02	S7
-	Hash table size for global data (DRAM)		DWORD	PowerOn
-				
-	-	4001	537	4327
-	-			0/0

Description:

Defines the size of the NCK-specific names. The value entered must be a primary number. The setting allows the optimization of

- the interpreter execution time (low value = longer execution time) and
- memory requirements (low value = less dynamic memory).

A larger table requires a smaller number of decoding operations for internally decoding the variables and consequently a shorter interpreter execution time. The value of this machine data affects the amount of dynamic memory required. The memory required in bytes is equal to the value entered multiplied by 68.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

18270	MM_NUM_SUBDIR_PER_DIR		N02	S7
-	Number of subdirectories (DRAM)		DWORD	PowerOn
-				
-	-	MD_MAXNUM_DIR_I N_FILESYSTEM	-	0/RO

Description: Defines the maximum number of subdirectories that can be created in a directory or subdirectory of the passive file system. This value is for information only, and cannot be changed. See also MD18280 \$MN_MM_NUM_FILES_PER_DIR (number of files per directory).

18280	MM_NUM_FILES_PER_DIR		N02	S7
-	Number of files per directory (DRAM)		DWORD	PowerOn
-				
-	-	MD_MAXNUM_FILES _PER_DIR	-	0/RO

Description: Defines the maximum number of files that can be created in a directory or subdirectory of the passive file system. This value is for information only, and cannot be changed. See also MMD18270 \$MN_MM_NUM_SUBDIR_PER_DIR (number of subdirectories per directory).

General machine data

18290	MM_FILE_HASH_TABLE_SIZE	EXP, N02	S7
-	Hash table size for files of a directory (SRAM)	DWORD	PowerOn
-			
-	-	47	3
		299	0/0

Description: Defines the size for the files of a directory. The value entered must be a primary number. The setting allows the optimization of

- the interpreter execution time (low value = longer execution time) and
- memory requirements (low value = less memory).

The value of this machine data affects the amount of static memory required for the management of directories, see MD18310 \$MN_MM_NUM_DIR_IN_FILESYSTEM (number of directories in the passive file system)

Buffered user memory is used.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

Special cases:

The battery-backed data are lost if this machine data is altered!

18300	MM_DIR_HASH_TABLE_SIZE	EXP, N02	S7
-	Hash table size for subdirectories (SRAM)	DWORD	PowerOn
-			
-	-	11	3
		349	0/0

Description: Defines the size of the subdirectories of a directory. The value entered must be a primary number. The setting allows the optimization of

- the interpreter execution time (low value = longer execution time) and
- memory requirement (low value = less memory).

The value of this machine data affects the amount of static memory required for the management of directories, see MD18310 \$MN_MM_NUM_DIR_IN_FILESYSTEM (number of directories in the passive file system).

Buffered user memory is used.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

Special cases:

The battery-backed data are lost if this machine data is altered!

General machine data

18310	MM_NUM_DIR_IN_FILESYSTEM			N02	S7
-	Number of directories in passive file system (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	30	30	256	0/0
802d-ng2	-	30	30	256	0/0
802d-ng3	-	30	30	256	0/0
802d-tm1	-	30	30	50	0/0
802d-tm2	-	30	30	256	0/0
802d-tm3	-	30	30	256	0/0

Description: This machine data limits the number of directories in the passive file system.

It can be used to reserve memory in the SRAM for the management of the directories. The directories and subdirectories of the passive file system set up by the system are included in this machine data. The memory required for the management of the directories can be calculated as follows:

Memory required = a (440+28 (b+c)) bytes

a = Input value of MD18310 \$MN_MM_NUM_DIR_IN_FILESYSTEM
(no. of directories in passive file system)

b = Input value of MD19300 \$MN_MM_DIR_HASH_TABLE_SIZE
(HASH table size for subdirectories)

c = Input value of MD18290 \$MN_MM_FILE_HASH_TABLE_SIZE
(hash table size for the files of a directory)

Buffered user memory is used.

Special cases:

The battery-backed data are lost if this machine data is altered.

Related to:

MD18270 \$MN_MM_NUM_SUBDIR_PER_DIR
(Number of subdirectories)

General machine data

18320	MM_NUM_FILES_IN_FILESYSTEM			N02	S7
-	Number of files in passive file system (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	512	64	768	0/0
802d-ng2	-	512	64	768	0/0
802d-ng3	-	512	64	768	0/0
802d-tm1	-	150	64	768	0/0
802d-tm2	-	512	64	768	0/0
802d-tm3	-	512	64	768	0/0

Description: Defines the number of files available in the part program memory. This machine data is used to reserve memory in SRAM - approximately 320 bytes per file - for managing the file memory. Each file created requires a minimum of one kbyte of memory for the file code. If the one kbyte limit for the file code is exceeded another kbyte is reserved for the file. Buffered user memory is used.

Special cases:

The battery-backed data are lost if this machine data is altered.

Related to:

MD18280 \$MN_MM_NUM_FILES_PER_DIR
(Number of files in directories)

18321	MM_NUM_SYSTEM_FILES_IN_FS			N02	-
-	Number of system files			DWORD	PowerOn
-					
802d-cu3	-	300	100	512	1/1
802d-ng2	-	300	100	512	1/1
802d-ng3	-	300	100	512	1/1
802d-tm1	-	100	100	512	1/1
802d-tm2	-	300	100	512	1/1
802d-tm3	-	300	100	512	1/1

Description: Number of temporary system files in the passive file system (see also MD18355 \$MN_MM_T_FILE_MEM_SIZE);
For example: Compilations of cycles (preprocessing), system traces

18331	MM_FLASHFILESYS_MEM			N01, N02	-
-	Reserved for FFS (DRAM)			BYTE	PowerOn
-					
-	8	0,0,0,0,0,0,0	-	-	0/0

Description: Reserved for FFS

18350	MM_USER_FILE_MEM_MINIMUM	EXP, N02	S7
-	minimum part program memory (SRAM)	DWORD	PowerOn
-			
-	-	0	0
-	-	0	0/0

Description: Valid only for PowerLine control models.
 Minimum user memory for files in the passive file system (in kbyte)
 There are various types of user data in this memory area.
 Defines the minimum remaining battery-backed memory area for the files of the passive file system (in kbyte). The settable value depends on the hardware and software configurations (memory allocation SRAM) and on MD18230 \$MN_MM_USER_MEM_BUFFERED (user memory in the SRAM). During the memory allocation of the SRAM, the files of the passive file system are assigned to the end of the remaining memory.
 The remaining memory must have at least the memory space stated in MD18350 \$MN_MM_USER_FILE_MEM_MINIMUM available for the file system to be able to work. If this is not ensured, the control assigns the pre-assigned data to the memory during power on, as a consequence of which all the battery-backed data entered by the user is lost. Alarm 6000 "Memory allocation with standard machine data" is also output.
 The available part program memory can be taken from the MD18060 \$MN_INFO_FREE_MEM_STATIC (display data of the free static memory).
 Special cases:
 The battery-backed data are lost if this machine data is changed and the remaining memory is less than the value of MD18350 \$MN_MM_USER_FILE_MEM_MINIMUM.

18351	MM_DRAM_FILE_MEM_SIZE	EXP, N02	TE7,V2,M5,S7
-	Size of part program memory (DRAM)	DWORD	PowerOn
-			
-	-	0	0
-	-	32768	0/0

Description: Size of memory for files in the DRAM of the passive file system (in kbyte).
 If the flash file system is used as a background memory for the DRAM file system then MD18332 \$MN_MM_FLASH_FILE_SYSTEM_SIZE must be at least 3 times the size of the largest file in the DRAM file system and be larger than MD18351 \$MN_MM_DRAM_FILE_MEM_SIZE.

General machine data

18352	MM_U_FILE_MEM_SIZE			EXP, N02	S7
-	End user memory for part programs/cycles/files			DWORD	PowerOn
-					
802d-cu3	3	3136,0,0	0	3200	0/0
802d-ng2	3	1088,0,0	0	1152	0/0
802d-ng3	3	3136,0,0	0	3200	0/0
802d-tm1	3	576,0,0	0	640	0/0
802d-tm2	3	1088,0,0	0	1152	0/0
802d-tm3	3	3136,0,0	0	3200	0/0

Description: The machine data is not available or not defined for PowerLine control models.

End user memory for files in the passive file system (in kbyte). There are various types of user data in this memory area. E.g.: NC part programs, cycle programs of the end user, diagnostic files,

The settable values depend on the hardware and software configurations.

The settable size of the part program memory is, apart from the upper limit value, determined by the MD18230 \$MN_MM_USER_MEM_BUFFERED and can also be determined by a software option.

Index 0 = Size of the battery-backed part program / cycle program memory
 Index 1 = Reserved
 Index 2 = Reserved

18353	MM_M_FILE_MEM_SIZE			EXP, N02	S7
-	Memory capacity for machine manufacturer's cycles/files			DWORD	PowerOn
-					
802d-cu3	3	0,0,0	0	512	0/0
802d-ng2	3	0,0,0	0	512	0/0
802d-ng3	3	0,0,0	0	512	0/0
802d-tm1	3	0,0,0	0	256	0/0
802d-tm2	3	0,0,0	0	512	0/0
802d-tm3	3	0,0,0	0	512	0/0

Description: The machine data is not available or not defined for PowerLine control models.

Memory for machine manufacturer files in the passive file system (in kbyte).

The machine manufacturer's files are in this memory area of the passive file system. E.g.: cycle programs

The settable values depend on the hardware and software configurations.

The settable size of the memory is, apart from the upper limit value, determined by the MD18230 \$MN_MM_USER_MEM_BUFFERED.

Index 0 = Minimum size of the battery-backed (persistent) part program / cycle program memory
 Index 1 = Reserved
 Index 2 = Reserved

18354	MM_S_FILE_MEM_SIZE	EXP, N02	-
-	Memory capacity for NC manufacturer's cycles/files	DWORD	PowerOn
-			
-	3	384,0,128	0
		768	0/0

Description: The machine data is not available or not defined for PowerLine control models.

Memory for the control manufacturer's files in the passive file system (in kbyte).

The control manufacturer's files are in this memory area of the passive file system.

E.g.: cycle programs, system files

The settable values depend on the hardware and software configurations.

The settable size of the memory is, apart from the upper limit value,

for index = 0 determined by MD18230 \$MN_MM_USER_MEM_BUFFERED.

For index 1 = Reserved.

For index 2 = limited by the size of the internally available battery-backed memory (SRAM).

Index 0 = Size of the battery-backed cycle program memory

Index 1 = Reserved

Index 2 = Size of the battery-backed memory for system files

18355	MM_T_FILE_MEM_SIZE	EXP, N02	-
-	Memory size for temporary files	DWORD	PowerOn
-			
-	-	1000	0
		-	0/0

Description: The machine data is not available or not defined for PowerLine control models.

Memory for temporary files in the passive file system (in kbyte)

For example: Compile of cycles (preprocessing), system traces

General machine data

18356	MM_E_FILE_MEM_SIZE			EXP, N02	-
-	Memory size for the clipboard of external files			DWORD	PowerOn
-					
802d-cu3	3	512,0,0	0	3200	0/0
802d-ng2	3	512,0,0	0	1152	0/0
802d-ng3	3	512,0,0	0	3200	0/0
802d-tm1	3	256,0,0	0	640	0/0
802d-tm2	3	512,0,0	0	1152	0/0
802d-tm3	3	512,0,0	0	3200	0/0

Description: For PowerLine control models the machine data is not available or has not been defined.
Memory for the clipboard of external files in the passive file system (in kB)
The settable values depend on the hardware and software configuration.
The settable memory size is limited, except for the upper limit value,
for index = 0 by MD18230 \$MN_MM_USER_MEM_BUFFERED.
for index = 1 reserved
for index = 2 reserved
Index 0 = size of the buffered clipboard
Index 1 = reserved
Index 2 = reserved

18390	MM_COM_COMPRESS_METHOD			EXP, N01, N02	-
-	Supported compression methods.			DWORD	PowerOn
-					
-	-	0x01	-	-	0/0

Description: Setting for the compression methods to be supported.

18400	MM_NUM_CURVE_TABS			N02, N09	M3
-	Number of curve tables (SRAM)			DWORD	PowerOn
-					
-	-	0	0	INT_MAX	-1/1

Description: Defines the maximum number of curve tables that can be stored in the SRAM of the entire system. A curve table consists of a number of curve segments.
Related to:
MD18402 \$MN_MM_NUM_CURVE_SEGMENTS

18402	MM_NUM_CURVE_SEGMENTS			N02, N09	M3,B3
-	Number of curve segments (SRAM)			DWORD	PowerOn
-					
-	-	0	0	INT_MAX	-1/1

Description: Defines the maximum number of curve segments that can be stored in the SRAM of the entire system. The curve segments are a component of a curve table.
Related to
MD18400 \$MN_MM_NUM_CURVE_TABS

18403	MM_NUM_CURVE_SEG_LIN	N02, N09	M3
-	Number of linear curve segments (SRAM)	DWORD	PowerOn
-			
-	-	0	0
		INT_MAX	-1/1

Description: Number of linear curve segments in the SRAM available throughout the NCK.
A curve table may consist of "normal" curve segments and linear segments. The number of "normal" curve segments in the SRAM is defined by MD18402 \$MN_MM_NUM_CURVE_SEGMENTS, these curve segments can accommodate polynomials.
Linear curve segments can only accommodate straight lines.
These linear curve segments are stored in battery-backed memory.

18404	MM_NUM_CURVE_POLYNOMS	N02, N09	M3,B3
-	Number of curve table polynomials (SRAM)	DWORD	PowerOn
-			
-	-	0	0
		INT_MAX	-1/1

Description: Defines the maximum total number of polynomials for curve tables that can be stored in the SRAM of the entire system. The polynomials are a component of a curve segment. A maximum of 3 polynomials are required for a curve segment. As a rule, only 2 polynomials are used for each curve segment.
Related to
MD18400 \$MN_MM_NUM_CURVE_TABS
MD18402 \$MN_MM_NUM_CURVE_SEGMENTS

18406	MM_NUM_CURVE_TABS_DRAM	N02, N09	M3
-	Number of curve tables (DRAM)	DWORD	PowerOn
-			
-	-	0	0
		INT_MAX	-1/1

Description: Number of curve tables in the DRAM available throughout the NCK. The curve tables are stored either in the buffer memory or in the dynamic memory.
This MD is used to set the number of curve tables in the dynamic memory (DRAM).

18408	MM_NUM_CURVE_SEGMENTS_DRAM	N02, N09	M3
-	Number of curve segments (DRAM)	DWORD	PowerOn
-			
-	-	0	0
		INT_MAX	-1/1

Description: Number of polynomial curve segments in the DRAM available throughout the NCK.
The curve segments are stored either in the buffer memory or in the dynamic memory.
This MD is used to set the number of segments in the dynamic memory (DRAM).

General machine data

18409	MM_NUM_CURVE_SEG_LIN_DRAM	N02, N09	M3
-	Number of linear curve segments (DRAM)	DWORD	PowerOn
-			
-	-	0	0
-		INT_MAX	-1/1

Description: Number of linear curve segments in the DRAM available throughout the NCK.

A curve table may consist of "normal" curve segments and linear segments. The number of "normal" curve segments in the DRAM is defined by MD18408 \$MN_MM_NUM_CURVE_SEGMENTS_DRAM, these curve segments can accommodate polynomials. Linear curve segments can only accommodate straight lines.

The curve segments are stored either in the buffer memory or in the dynamic memory. This MD defines the number of curve segments in the dynamic memory (DRAM).

18410	MM_NUM_CURVE_POLYNOMS_DRAM	N02, N09	M3
-	Number of curve table polynomials (DRAM)	DWORD	PowerOn
-			
-	-	0	0
-		INT_MAX	-1/1

Description: Number of polynomials for curve tables in the DRAM available throughout the NCK.

The polynomials for curve tables are stored in the buffer memory or in the dynamic memory.

This MD is used to set the number of polynomials for curve tables in the dynamic memory (DRAM).

18450	MM_NUM_CP_MODULES	N02, N09	-
-	Max. number of CP modules	DWORD	PowerOn
-			
-	-	4	0
-		48	-1/1

Description: Number of CP coupling modules available within the NCK

The MD defines the max. permissible number of CP couplings and reserves the required dynamic memory (DRAM).

18452	MM_NUM_CP_MODUL_LEAD	N02, N09	-
-	Maximum number of CP master values	DWORD	PowerOn
-			
-	-	4	0
-		99	-1/1

Description: Number of NCK-wide available CP master values.

This MD defines the max. permissible number of CP master values and reserves the required dynamic memory (DRAM).

18500	MM_EXTCOM_TASK_STACK_SIZE	EXP, N02	S7
-	Stack size for external communications task (DRAM)	DWORD	PowerOn
-			
-	-	30	30
-		60	0/0

Description: Defines the size (KB) of the stack for external communication. The dynamic memory area is used.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

General machine data

18510	MM_SERVO_TASK_STACK_SIZE	EXP, N02	S7		
-	Stack size of servo task (DRAM)	DWORD	PowerOn		
-					
-	-	20	20	40	0/0

Description: Defines the stack size for the SERVO task. The dynamic memory is used for this purpose.

Note:

This machine data is assigned internally by the control and must not be altered by the user.

18512	MM_IPO_TASK_STACK_SIZE	EXP, C02	-		
-	Stack size of IPO task (DRAM)	DWORD	PowerOn		
-					
-	-	30	30	40	0/0

Description: Size of the IPO task stack in kbyte.

The dynamic memory is used.

18540	MM_PLC_TASK_STACK_SIZE	EXP, N02	-		
-	Stack size of the PLC task (DRAM)	DWORD	PowerOn		
-					
-	-	30	30	60	0/0

Description: Size of the stack of the PLC task in kbyte.

Dynamic memory is used.

18541	MM_PLCBG_TASK_STACK_SIZE	EXP, N02	-		
-	Stack size of the PLC background task (DRAM)	DWORD	PowerOn		
-					
-	-	30	30	60	0/0

Description: Size of the stacks for the PLC background task in Kbyte.

The dynamic memory is used.

18542	MM_PLCINT_TASK_STACK_SIZE	EXP, N02	-		
-	Stack size of the servosynch. PLC task (DRAM)	DWORD	PowerOn		
-					
-	-	30	30	60	0/0

Description: Size of the stack of the servosynchronous PLC task in KB.

Dynamic memory is used.

18600	MM_FRAME_FINE_TRANS	N02	K2,M5		
-	Fine offset with FRAME (SRAM)	DWORD	PowerOn		
-					
-	-	1	0	1	0/0

Description: 0: The fine offset cannot be entered or programmed.

Disabling fine offset saves a maximum of 10KB SRAM, (depending on MD28080 \$MC_MM_NUM_USER_FRAMES).

1: The fine offset is possible for settable frames, the basic frame and the programmable frame by operator input or via program.

General machine data

18601	MM_NUM_GLOBAL_USER_FRAMES	N02	K2,M5
-	Number of global predefined user frames (SRAM).	DWORD	PowerOn
-			
-	-	0	0
-		100	0/0

Description: Number of global predefined user frames.
The value corresponds to the number of field elements for the predefined field \$P_UIFR[].
If the value of the data is greater than 0, then all settable fields are only global. The MD28080 \$MC_MM_NUM_USER_FRAMES is then ignored.

18602	MM_NUM_GLOBAL_BASE_FRAMES	N02	K2,M5
-	Number of global base frames (SRAM).	DWORD	PowerOn
-			
-	-	0	0
-		16	0/0

Description: Number of NCU basic frames.
The value corresponds to the number for the predefined field \$P_NCBFR[].

18660	MM_NUM_SYNACT_GUD_REAL	N02	-
-	Number of configurable GUD variables of type REAL	DWORD	PowerOn
-			
-	9	0,0,0,0,0,0,0,0	0
-		32767	0/0

Description: The MD18660 \$MN_MM_NUM_SYNACT_GUD_REAL[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type REAL. The GUD blocks are differentiated by the field index:
\$MN_MM_NUM_SYNACT_GUD_REAL[0] = <value> -> extension of the SGUD block
\$MN_MM_NUM_SYNACT_GUD_REAL[1] = <value> -> extension of the MGUD block
\$MN_MM_NUM_SYNACT_GUD_REAL[2] = <value> -> extension of the UGUD block
\$MN_MM_NUM_SYNACT_GUD_REAL[3] = <value> -> extension of the GUD4 block
\$MN_MM_NUM_SYNACT_GUD_REAL[8] = <value> -> extension of the GUD9 block
In each case, fields with the following properties are created:
Data type REAL
Field size corresponding to <value> of the relevant machine data
Predefined names:
SYG_RS[] -> Synact parameter of type REAL in the SGUD block
SYG_RM[] -> Synact parameter of type REAL in the MGUD block
SYG_RU[] -> Synact parameter of type REAL in the UGUD block
SYG_R4[] -> Synact parameter of type REAL in the GUD4 block
....
SYG_R9[] -> Synact parameter of type REAL in the GUD9 block
The parameters can be read and written both by the part program and also via synchronous actions.

18661	MM_NUM_SYNACT_GUD_INT	N02	-
-	Number of configurable GUD variables of type integer	DWORD	PowerOn
-			
-	9	0,0,0,0,0,0,0,0	0
		32767	0/0

Description: The MD18661 \$MN_MM_NUM_SYNACT_GUD_INT[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type INTEGER. The GUD blocks are differentiated by the field index:

\$MN_MM_NUM_SYNACT_GUD_INT[0] = <value> -> extension of the SGUD block
 \$MN_MM_NUM_SYNACT_GUD_INT[1] = <value> -> extension of the MGUD block
 \$MN_MM_NUM_SYNACT_GUD_INT[2] = <value> -> extension of the UGUD block
 \$MN_MM_NUM_SYNACT_GUD_INT[3] = <value> -> extension of the GUD4 block
 \$MN_MM_NUM_SYNACT_GUD_INT[8] = <value> -> extension of the GUD9 block

In each case, fields with the following properties are created:
 Data type BOOL
 Field size corresponding to <value> of the relevant machine data
 Predefined names:

SYG_IS[] -> Synact parameter of type INT in the SGUD block
 SYG_IM[] -> Synact parameter of type INT in the MGUD block
 SYG_IU[] -> Synact parameter of type INT in the UGUD block
 SYG_I4[] -> Synact parameter of type INT in the GUD4 block

 SYG_I9[] -> Synact parameter of type INT in the GUD9 block

The parameters can be read and written both by the part program and also via synchronous actions.

General machine data

18662	MM_NUM_SYNACT_GUD_BOOL	N02	-
-	Number of configurable GUD variables of type Boolean	DWORD	PowerOn
-			
-	9	0,0,0,0,0,0,0,0	0
		32767	0/0

Description: The MD18662 \$MN_MM_NUM_SYNACT_GUD_BOOL[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type Boolean. The GUD blocks are differentiated by the field index:

\$MN_MM_NUM_SYNACT_GUD_BOOL[0] = <value> -> extension of the SGUD block
 \$MN_MM_NUM_SYNACT_GUD_BOOL[1] = <value> -> extension of the MGUD block
 \$MN_MM_NUM_SYNACT_GUD_BOOL[2] = <value> -> extension of the UGUD block
 \$MN_MM_NUM_SYNACT_GUD_BOOL[3] = <value> -> extension of the GUD4 block
 \$MN_MM_NUM_SYNACT_GUD_BOOL[8] = <value> -> extension of the GUD9 block

In each case, fields with the following properties are created:
 Data type BOOL
 Field size corresponding to <value> of the relevant machine data
 Predefined names:

SYG_BS[] -> Synact parameter of type Boolean in the SGUD block
 SYG_BM[] -> Synact parameter of type Boolean in the MGUD block
 SYG_BU[] -> Synact parameter of type Boolean in the UGUD block
 SYG_B4[] -> Synact parameter of type Boolean in the GUD4 block

 SYG_B9[] -> Synact parameter of type Boolean in the GUD9 block

The parameters can be read and written both by the part program and also via synchronous actions.

18663	MM_NUM_SYNACT_GUD_AXIS	N02	-
-	Number of configurable GUD variables of type Axis	DWORD	PowerOn
-			
-	9	0,0,0,0,0,0,0,0	0
		32767	0/0

Description: The MD18663 \$MN_MM_NUM_SYNACT_GUD_AXIS[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type AXIS. The GUD blocks are differentiated by the field index:

\$MN_MM_NUM_SYNACT_GUD_AXIS[0] = <value> -> extension of the SGUD block
 \$MN_MM_NUM_SYNACT_GUD_AXIS[1] = <value> -> extension of the MGUD block
 \$MN_MM_NUM_SYNACT_GUD_AXIS[2] = <value> -> extension of the UGUD block
 \$MN_MM_NUM_SYNACT_GUD_AXIS[3] = <value> -> extension of the GUD4 block
 \$MN_MM_NUM_SYNACT_GUD_AXIS[8] = <value> -> extension of the GUD9 block

In each case, fields with the following properties are created:
 Data type AXIS
 Field size corresponding to <value> of the relevant machine data
 Predefined names:

SYG_AS[] -> Synact parameter of type AXIS in the SGUD block
 SYG_AM[] -> Synact parameter of type AXIS in the MGUD block
 SYG_AU[] -> Synact parameter of type AXIS in the UGUD block
 SYG_A4[] -> Synact parameter of type AXIS in the GUD4 block

 SYG_A9[] -> Synact parameter of type AXIS in the GUD9 block

The parameters can be read and written both by the part program and also via synchronous actions.

General machine data

18664	MM_NUM_SYNACT_GUD_CHAR	N02	-
-	Configurable GUD variable of type Char	DWORD	PowerOn
-			
-	9	0,0,0,0,0,0,0,0	0
		32767	0/0

Description: The MD18664 \$MN_MM_NUM_SYNACT_GUD_CHAR[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type CHAR. The GUD blocks are differentiated by the field index:

\$MN_MM_NUM_SYNACT_GUD_CHAR[0] = <value> -> extension of the SGUD block
 \$MN_MM_NUM_SYNACT_GUD_CHAR[1] = <value> -> extension of the MGUD block
 \$MN_MM_NUM_SYNACT_GUD_CHAR[2] = <value> -> extension of the UGUD block
 \$MN_MM_NUM_SYNACT_GUD_CHAR[3] = <value> -> extension of the GUD4 block
 \$MN_MM_NUM_SYNACT_GUD_CHAR[8] = <value> -> extension of the GUD9 block

In each case, fields with the following properties are created:
 Data type CHAR
 Field size corresponding to <value> of the relevant machine data
 Predefined names:

SYG_CS[] -> Synact parameter of type CHAR in the SGUD block
 SYG_CM[] -> Synact parameter of type CHAR in the MGUD block
 SYG_CU[] -> Synact parameter of type CHAR in the UGUD block
 SYG_C4[] -> Synact parameter of type CHAR in the GUD4 block

 SYG_C9[] -> Synact parameter of type CHAR in the GUD9 block

The parameters can be read and written both by the part program and also via synchronous actions.

General machine data

18665	MM_NUM_SYNACT_GUD_STRING			N02	-
-	Configurable GUD variable of type STRING			DWORD	PowerOn
-					
-	9	0,0,0,0,0,0,0,0	0	25	0/0

Description: The MD18665 \$MN_MM_NUM_SYNACT_GUD_STRING[] can be used to extend individual GUD blocks by additional channel-specific parameter areas of type STRING.

The GUD blocks are differentiated by the field index:

\$MN_MM_NUM_SYNACT_GUD_STRING[0] = <value> -> extension of the SGUD block

\$MN_MM_NUM_SYNACT_GUD_STRING[1] = <value> -> extension of the MGUD block

\$MN_MM_NUM_SYNACT_GUD_STRING[2] = <value> -> extension of the UGUD block

\$MN_MM_NUM_SYNACT_GUD_STRING[3] = <value> -> extension of the GUD4 block

\$MN_MM_NUM_SYNACT_GUD_STRING[8] = <value> -> extension of the GUD9 block

In each case, fields with the following properties are created:

Data type STRING

Field size corresponding to <value> of the relevant machine data

The maximum length of a string is 31 characters.

Predefined names:

SYG_SS[] -> Synact parameter of type STRING in the SGUD block

SYG_SM[] -> Synact parameter of type STRING in the MGUD block

SYG_SU[] -> Synact parameter of type STRING in the UGUD block

SYG_S4[] -> Synact parameter of type STRING in the GUD4 block

....

SYG_S9[] -> Synact parameter of type STRING in the GUD9 block

The parameters can be read and written both by the part program and also via synchronous actions.

18710	MM_NUM_AN_TIMER			N02	-
-	Number of global time variable for synchronized actions			DWORD	PowerOn
-					
802d-cu3	-	0	0	10000	2/2
802d-ng2	-	0	0	10000	0/0
802d-ng3	-	0	0	10000	0/0
802d-tm1	-	0	0	10000	0/0
802d-tm2	-	0	0	10000	0/0
802d-tm3	-	0	0	10000	0/0

Description: Number of global time variables for motion-synchronous actions (DRAM)

General machine data

18720	MM_SERVO_FIFO_SIZE	EXP, N01	B3
-	Setpoint value for buffer size between IPO and position control	DWORD	PowerOn
-			
-	-	2	2
-	-	35	0/0

Description: The machine data determines the size of the setpoint value buffer between interpolator and position control, and has a direct effect on the dynamic user memory requirement.

That is normally 2. If several NCUs are connected via NCU link for e.g. rotary indexing machines, the value should be set to 3 on all NCUs. This will balance the transmission rates of the setpoint values via the link.

In a master value application (e.g. line shaft), the value should be set to 4, but only on the NCU that generates the master value. For all the other NCUs, the preset value should be maintained at 2.

Note:

In control loops that are connected via interpolator, every increase of the value generates a further dead-time.

When the IPO cycles of the NCUs within an NCU group are set to different values, the link communication will only run in the slowest IPO cycle. The MD must be increased in the ratio of the NCU IPO cycle to the slowest IPO cycle in the NCU group, in order to achieve a synchronized output of the setpoint values on the drive interface. The formula for this is as follows:

$$\text{MM_SERVO_FIFO_SIZE} = 2 * \text{IPO cycle ratio} + 1$$

Example:

In an IPO cycle ratio of 4:1, the value on the fast NCU should be set to 9 instead of 3. On the slow NCU, the value must be set to 3.

18730	MM_MAXNUM_ALARM_ACTIONS	N02	-
-	Length of the alarm action list	DWORD	PowerOn
-			
-	-	500	100
-	-	2000	1/1

Description: Maximum number of alarm actions that are retained. This is the length of the alarm action list.

General machine data

18800	MM_EXTERN_LANGUAGE			N01, N12	K1
-	Activation of external NC languages			DWORD	PowerOn
-					
802d-cu3	-	0x0001	0x0000	0x0001	1/1
802d-ng2	-	0x0000	0x0000	0x0001	-1/2
802d-ng3	-	0x0000	0x0000	0x0001	-1/2
802d-tm1	-	0x0001	0x0000	0x0001	1/1
802d-tm2	-	0x0001	0x0000	0x0001	1/1
802d-tm3	-	0x0001	0x0000	0x0001	1/1

Description: The corresponding NC language must be activated to execute part programs of other control manufacturers. Only one external NC language can be selected. The range of instructions which is made available in each case is to be taken from the current documentation.

Bit 0 (LSB):

Execution of part programs ISO_2 or ISO_3.

See MD10880 \$MN_MM_EXTERN_CNC_SYSTEM for coding.

18840	MM_EPSPARAM_DIMENSION			EXP, N01, N02	ePS Dokumentation
-	Dimension of ePS-specific variables \$EPS_*			DWORD	PowerOn
-					
-	-	0	0	100	0/0

Description: Dimension of ePS-specific parameters \$EPS_R[i], \$EPS_I[i], \$EPS_B[i], \$EPS_A[i], \$EPS_C[i], #EPS_S[i]; i = 0-Value of the machine data - 1. MD data value zero indicates that the functionality is not available.

18860	MM_MAINTENANCE_MON			EXP, N01	W6
-	Activation of maintenance data recording			BOOLEAN	PowerOn
-					
-	-	FALSE	-	-	1/1

Description: Maintenance data is recorded when this MD has the value TRUE. The axial MD33060 \$MA_MAINTENANCE_DATA sets which data are to be recorded. Details are to be found in the service documentation.

18864	MM_NUM_TRAFO_DATA_SETS			N02, N09	W1
-	Maximum number of definable transformation data blocks.			DWORD	PowerOn
-					
-	-	0	0	100	0/0

Description: Maximum number of definable transformation data blocks. The data for defining a transformation data block are set by the system variables \$NT_XXX. The data are stored in the buffered memory.

General machine data

18866	MM_NUM_KIN_TRAFOS	N02, N09	W1
-	Maximum number of transformation objects in NCK	DWORD	PowerOn
-			
-	-	0	0
-	-	200	0/0

Description: Maximum number of transformation objects in NCK.
This machine data defines the maximum number of transformation objects in NCK which can be created by transformations that are defined by kinematic chains.

18900	FPU_ERROR_MODE	EXP	-
-	System reaction to FPU calculation error	DWORD	PowerOn
NBUP, NDLD			
-	-	0x1	-
-	-	-	0/0

Description: System response to floating point unit arithmetic errors
Bit 0 = 0: (LSB)
The response to an FPU arithmetic error takes place during a station change by the station controller polling the FPU status word. (For CPUs without exception handling)
Bit 0 = 1:
There is an immediate branch into an exception when an FPU arithmetic error occurs:
The address at which the arithmetic error occurred can be exactly localized in the alarm output

18910	FPU_CTRLWORD_INIT	EXP	-
-	Basic initialization of FPU control word	DWORD	PowerOn
NBUP, NDLD			
-	-	0x37F	-
-	-	-	0/0

Description: The basic initialization of the FPU control word enables the FPU mode of operation (e.g. rounding mode) to be changed.
Significance of the bit: see manual of the FPU used.

18920	FPU_EXEPTION_MASK	EXP	-
-	Exception mask for FPU calculation errors	DWORD	PowerOn
NBUP, NDLD			
-	-	0xD	0/0

Description: The exception mask for FPU calculation errors enables selection of the FPU error for which an exception was issued.
Significance of the bits for Intel 486:

Bit 0 (LSB):
invalid operation

Bit 1:
denormalized operand: | operand | < as the smallest 2nd power

Bit 2:
zero divide

Bit 3:
overflow: result is larger than the largest displayable number

Bit 4:
underflow: result is smaller than the smallest displayable number

Bit 5:
precision: result cannot be displayed exactly (e.g. 1/3)

Significance of the bits for Intel 960:

Bit 12:
integer overflow

Bit 24:
floating overflow

Bit 25:
floating underflow

Bit 26:
invalid operation

Bit 27:
zero divide

Bit 28:
floating inexact (precision): result cannot be displayed exactly

Bit 29:
denormalized operand

18930	COREFILE_NAME	EXP	-
-	Path for core file creation	STRING	PowerOn
-			
-	-		0/0

Description: File name with path name under which a core file is created in the case of a control crash.
The core file is used for problem analysis by NCK development.
A core file will be created, if a valid file name is entered in this MD.

Channel-specific machine data

2.3 Channel-specific machine data

Number	Identifier			Display filters	Reference
Unit	Name			Data type	Active
Attributes					
System	Dimension	Default value	Minimum value	Maximum value	Protection

Description: Description

2.3.1 Basic channel machine data

20000	CHAN_NAME			C01, C10	B3,K1
-	Channel name			STRING	PowerOn
-					
-	-	CHAN1,CHAN2,CHAN3,CHAN4...	-	-	0/0

Description: The channel name can be defined in this MD. The channel name is only used for the display on the HMI.

20050	AXCONF_GEOAX_ASSIGN_TAB			C01, C10	TE7,TE8,M1,R2,K1,K2
-	Assignment of geometry axis to channel axis			BYTE	PowerOn
-					
802d-cu3	3	1, 2, 3,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-ng2	3	1, 0, 2	0	20	2/2
802d-ng3	3	1, 0, 2	0	20	2/2
802d-tm1	3	1, 2, 3,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm2	3	1, 2, 3,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm3	3	1, 2, 3,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2

Description: This MD assigns a geometry axis to a channel axis. The assignment has to apply to all three geometry axes (X, Y, Z). If no assignment has been made for one geometry axis, then enter value 0. The geometry axis is thus not available and cannot be programmed. For example, in the case of the "Turning" technology the second geometry axis Y -> entry: value 0 (see default setting for turning) is missing.

Channel-specific machine data

20060	AXCONF_GEOAX_NAME_TAB		C01, C11, C10	F2,V2,M1,K2
-	Geometry axis name in channel		STRING	PowerOn
-				
802d-cu3	3	X, Y, Z,X, Y, Z...	-	1/1
802d-ng2	3	X, , Z	-	1/1
802d-ng3	3	X, , Z	-	1/1
802d-tm1	3	X, Y, Z,X, Y, Z...	-	1/1
802d-tm2	3	X, Y, Z,X, Y, Z...	-	1/1
802d-tm3	3	X, Y, Z,X, Y, Z...	-	1/1

Description: This MD is used to enter the names of the geometry axes separately for each channel. Geometry axes can be programmed in the part program using the names specified here.

Special cases:

- The geometry axis name entered must not conflict with the designations and assignments of the machine and channel axis names.
- The machine axis names entered must not be the same as the names entered for Euler angles (MD10620 \$MN_EULER_ANGLE_NAME_TAB), names specified for directional vectors (MD10640 \$MN_DIR_VECTOR_NAME_TAB), names given to intermediate point coordinates in the case of CIP (MD10660 \$MN_INTERMEDIATE_POINT_NAME_TAB) or the names of interpolation parameters (MD10650 \$MN_IPO_PARAM_NAME_TAB).
- The geometry axis name entered must not include any of the following reserved address letters:

- D Tool offset (D function)	- E Reserved
- F Feedrate (F function) function	- G Preparatory
- H Auxiliary function (H function) call	- L Subroutine
- M Miscellaneous function (M function)	- N Subblock
- P Subroutine number of passes	- R Arithmetic parameters
- S Spindle speed (S function)	- T Tool (T function)
- The name must not include any keywords (e.g. DEF, SPOS etc.) or pre-defined identifiers (e.g. ASPLINE, SOFT).
- The use of an axis identifier consisting of a valid address letter (A, B, C, I, J, K, Q, U, V, W, X, Y, Z) followed by an optional numerical extension (1-99) gives slightly better block cycle times than a general identifier.
- Identical names may be given to geometry axes assigned to different channels.

Related to:

MD10000 \$MN_AXCONF_MACHAX_NAME_TAB
(machine axis name [axis no.])
MD20080 \$MC_AXCONF_CHANAX_NAME_TAB
(channel axis name in the channel [channel axis no.])

Channel-specific machine data

20070	AXCONF_MACHAX_USED			C01, C10	TE3,B3,K5,M1,K1 ,K2,P3 pl,P3 sl,S1
-	Machine axis number valid in channel			BYTE	PowerOn
-					
802d-cu3	6	1, 2, 3, 4, 5, 0	0	31	2/2
802d-ng2	6	1, 2, 3, 4, 5, 0	0	31	2/2
802d-ng3	6	1, 2, 3, 4, 5, 0	0	31	2/2
802d-tm1	4	1, 2, 3, 4	0	31	2/2
802d-tm2	6	1, 2, 3, 4, 5, 0	0	31	2/2
802d-tm3	6	1, 2, 3, 4, 5, 0	0	31	2/2

Description: This MD assigns a channel axis to a machine axis.
The SINUMERIK 802D has five channel axes.
For the axes activated in the channel, the channel axis identifiers must be set by default in MD20080 \$MC_AXCONF_CHANAX_NAME_TAB.
These axes can be programmed.

A machine axis not assigned to a channel axis is not active, i.e. no axis control, no display on the screen.

20080	AXCONF_CHANAX_NAME_TAB			C01, C11, C10	F2,V2,M1,K2,V1
-	Channel axis name in channel			STRING	PowerOn
-					
802d-cu3	6	X, Y, Z, SP, A, PLCX	-	-	2/2
802d-ng2	6	X, Z, C, A, B, PLCX	-	-	2/2
802d-ng3	6	X, Z, C, A, B, PLCX	-	-	2/2
802d-tm1	4	X, Y, Z, SP	-	-	2/2
802d-tm2	6	X, Y, Z, SP, A, PLCX	-	-	2/2
802d-tm3	6	X, Y, Z, SP, A, PLCX	-	-	2/2

Description: This MD is used to set the name of the channel axis. The channel axis in the work (workpiece coordinate system) is displayed under this name. The same name is also written in the program.
Generally, the first two or three channel axes are used as geometry axes (see also MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB). The remaining channel axes are called additional axes.
The SINUMERIK 802D has five channel axes.

Channel-specific machine data

20095	EXTERN_RIGID_TAPPING_M_NR		C01, C11, C03, C10	H2,K1
-	M function for switching to controlled axis mode(external mode)		DWORD	PowerOn
-				
802d-cu3	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	2/2
802d-ng2	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	-1/2
802d-ng3	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	-1/2
802d-tm1	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	0/0
802d-tm2	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	2/2
802d-tm3	-	29,29,29,29,29,29,29, 29,29,29,29,29,29...	-	2/2

Description: This machine data defines the M function number with which the switchover to controlled spindle/axis mode is to be carried out. The M number defined in the machine data replaces M29 in external language mode.

Pre-defined M numbers, such as M00,M1,M2,M3, etc., are not allowed as M numbers.

Restrictions: See machine data MD10715 \$MN_M_NO_FCT_CYCLE

Related to:

MD10714 \$MN_M_NO_FCT_EOP,
MD10715 \$MN_M_NO_FCT_CYCLE,
MD20094 \$MC_SPIND_RIGID_TAPPING_M_NR,
MD22254 \$MC_AUXFU_ASSOC_M0_VALUE

For external language mode:

MD10814 \$MN_EXTERN_M_NO_MAC_CYCLE,
MD10804 \$MN_EXTERN_M_NO_SET_INT
MD10806 \$MN_EXTERN_M_NO_DISABLE_INT,
MD10800 \$MN_EXTERN_CHAN_SYNC_M_NO_MIN,
MD10802 \$MN_EXTERN_CHAN_SYNC_M_NO_MAX
MD20095 \$MC_EXTERN_RIGID_TAPPING_M_NR

For nibbling:

MD26008 \$MC_NIBBLE_PUNCH_CODE

Channel-specific machine data

20096	T_M_ADDRESS_EXT_IS_SPINO	C01, C04, C09	H2,W1
-	Meaning of address extension at T, M tool change	BOOLEAN	PowerOn
-			
-	-	FALSE,FALSE,FALSE,FALSE,FALSE...	1/1

Description:

This MD is only significant if the functions 'Tool management'/'flat D numbers' are inactive.

FALSE

The contents of the address extensions of the NC addresses T and M 'tool change command number' are not evaluated by the NCK. The PLC decides on the significance of the programmed extension.

TRUE

The address extensions of the NC addresses T and M 'tool change command number' - 'tool change command number'=TOOL_CHANGE_M_CODE with 6 as the default value - are interpreted as spindle numbers. NCK treats the extension in the same way as the active functions 'tool management' and 'flat D number management'.

That is, the programmed D number always refers to the T number of the programmed main spindle number.

See also:

```
MD20090 $MC_SPIND_DEF_MASTER_SPIND,
MD22550 $MC_TOOL_CHANGE_MODE,
MD22560 $MC_TOOL_CHANGE_M_CODE
```


Channel-specific machine data

20098	DISPLAY_AXIS		EXP, C01	-
-	Display axis on HMI		DWORD	Immediately
-				
802d-cu3	6	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1
802d-ng2	6	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1
802d-ng3	6	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1
802d-tm1	4	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1
802d-tm2	6	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1
802d-tm3	6	0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF, 0xFFFFFFFF...	-	1/1

Description: Identification whether the axis is to be displayed by the HMI as a machine, geometry or auxiliary axis.
This data is only evaluated by the HMI.
Bit 0 to 15: MCS
Bit 0= 1 Display machine axis in the actual-value windows
0 Hide machine axis in the actual-value windows
Bit 1= 1 Display machine axis in the reference-point windows
0 Hide machine axis in the reference-point windows
Bit 2=1 Display machine axis in the present/basic offset/scratch window
0 Hide machine axis in the present/basic off-set/scratch window
Bit 3= 1 Display machine axis in the handwheel selection window
0 Hide machine axis in the handwheel selection window
Bit 16 to 31: WCS
Bit 16= 1 Display geometry axis in the actual-value window
0 Hide geometry axis in the actual-value window
(Bit 17) not assigned
Bit 18= 1 Display geometry axis in the basic offset window
0 Hide geometry axis in the basic offset window
Bit 19= 1 Display geometry axis in the handwheel selection window
0 Hide geometry axis in the handwheel selection window

Channel-specific machine data

20100	DIAMETER_AX_DEF		C01, C10	H1,M5,P1,V1,W1
-	Geometry axis with transverse axis function		STRING	PowerOn
-				
802d-cu3	-		-	1/1
802d-ng2	-	X	-	1/1
802d-ng3	-	X	-	1/1
802d-tm1	-		-	1/1
802d-tm2	-		-	1/1
802d-tm3	-		-	1/1

Description: This MD is used to define a geometry axis as a transverse axis. Only one transverse axis can be defined here for each channel. The axis identifier of an active geometry axis that has been defined in the channel-specific MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB[n] or MD24120 \$MC_TRAFO_AX_GEOAX_ASSIGN_TAB_1[n] (from SW 4) and MD20060 \$MC_AXCONF_GEOAX_NAME_TAB[n] must be specified. If space characters are entered or if an axis identifier is specified for an axis which is not defined as a geometry axis, this leads to the following alarms:

- during runup, to alarm 4032 "Channel %1 wrong identifier for transverse axis in %2", if the "Diameter programming" function (DIAMON) or constant cutting velocity G96/G961/G962 is the switch-on setting.
- when the "Diameter programming (DIAMON)" function is activated, to alarm 16510 "Channel %1 block %2 No transverse axis available for diameter programming", if no axis has been permitted via DIAMCHANA[AX] for channel-specific diameter programming.
- when G96/G961/G962 has been programmed, to alarm 10870 "Channel %1 block %2 No transverse axis defined as reference axis for G96/G961/G962", if no geometry axis has been defined as the reference axis for G96/G961/G962 by the instruction SCC[ax].

Related to:

MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB[n]
 (assignment of geometry axis to channel axis)
 MD20060 \$MC_AXCONF_GEOAX_NAME_TAB[n]
 (geometry axis name in the channel)
 MD24120 \$MC_TRAFO_AX_GEOAX_ASSIGN_TAB_1[n]
 (assignment of GEO axis to channel axis for transformation 1)

Channel-specific machine data

20110	RESET_MODE_MASK	C11, C03	F2,K6,M3,TE4,W5 ,B3,K5,M1,G2,K1, K2,P1,S1,W1,2.4, 2.7
-	Definition of basic control settings after reset/PP end	DWORD	Reset
-			
-	-	0x4045,0x4045,0x4045,0x4045...	0 0x7FFFF 1/1

Description: The initial setting of the control after runup and on reset / part program end with regard to the G codes (in particular the active plane and the settable zero offset), tool length compensation and transformation is defined by setting the following bits:

Bit 0: Reset mode

Bit 1: Suppress auxiliary function output on tool selection

Bit 2: Select reset response after POWER ON; e.g. tool offset

Bit 3: Select reset response after end of test mode with reference to active tool offsets. This bit is only relevant when bits 0 and 6 are set.

It defines what "Current setting for active tool length compensation" refers to:

- the program which was active at the end of test mode
- the program which was active before test mode was switched on

Bit 4: Reserved! Setting now via MD20152 \$MC_GCODE_RESET_MODE[...]

Bit 5: Reserved! Setting now via MD20152 \$MC_GCODE_RESET_MODE[...]

Bit 6: Reset response "Active tool length compensation"

Bit 7: Reset response "Active kinematic transformation"

Bit 8: Reset response "Coupled-motion axes"

Bit 9: Reset response "Tangential follow-up"

Bit 10: Reset response "Synchronous spindle"

Bit 11: Reset response "Revolutional feedrate"

Bit 12: Reset response "Geo-axis replacement"

Bit 13: Reset response "Master value coupling"

Bit 14: Reset response "Basic frame"

Bits 4 to 11 are only evaluated when bit 0 = 1.

Bit 15: Function for "electronic gearbox", not relevant for tool management.

Bit 16=0: The spindle number defined by MD20090 \$MC_SPIND_DEF_MASTER_SPIND is the number of the master spindle after programm end/reset.

Bit 16=1: The programmed value of SETMS is retained after programm end/reset.

Bit 17=0: The tool holder number defined by MD20124 \$MC_TOOL_MANAGEMENT_TOOLHOLDER is the number of the master tool holder after programm end/reset.

Bit 17=1 The programmed value of SETMS is retained after programm end/reset.

These two bits are only relevant if bit 0=1 is also set. The bit value=0 is selected so that the previous response with bit 0=1 is retained. (Retention of the programmed values of SETMTH/SETMS after programm end already applied to bit 0=0.)

Bit 18=0 Reference axis for G96/G961/G962 according to MD20100 \$MC_DIAMETER_AX_DEF. Bit 18 = 1 is recommended when using SCC with its own spindle reset (see also MD20112 \$MC_START_MODE_MASK, Bit 18).

Channel-specific machine data

Bit 18=1 Reference axis for G96/G961/G962 is retained.

Related to:

MD20120 \$MC_TOOL_RESET_VALUE
 MD20130 \$MC_CUTTING_EDGE_RESET_VALUE
 MD20150 \$MC_GCODE_RESET_VALUES
 MD20152 \$MC_GCODE_RESET_MODE
 MD20140 \$MC_TRAFO_RESET_VALUE
 MD20112 \$MC_START_MODE_MASK
 MD20121 \$MC_TOOL_PRESEL_RESET_VALUE
 MD20118 \$MC_GEOAX_CHANGE_RESET

20112	START_MODE_MASK	C03	K6,M3,K5,M1,K1, K2,P1,S1,W1
-	Definition of basic setting of control after part program start	DWORD	Reset
-			
-	-	0x400,0x400,0x400,0 x400,0x400,0x400...	0 0x7FFFF 1/1

Description:

The initial setting of the control at the start of the part program with respect to G codes (in particular, current plane and active settable zero offset), active tool length compensation, transformation and axis couplings is defined by setting the following bits:

Bit 0: Not assigned: MD20112 \$MC_START_MODE_MASK is evaluated every time a part program is started.
 Bit 1: Suppression of auxiliary function output on tool selection.
 Bit 4: Start response for G code "Current plane"
 Bit 5: Start response for G code "Settable zero offset"
 Bit 6: Start response for "Active tool length compensation"
 Bit 7: Start response for "Active kinematic transformation"
 Bit 8: Start response for "Coupled-motion axes"
 Bit 9: Start response for "Tangential follow-up"
 Bit 10: Start response for "Synchronous spindle"
 Bit 11: Reserved
 Bit 12: Start response for "Geometry axis replacement"
 Bit 13: Start response for "Master value coupling"
 Bit 14: Start response for "Basic frame".
 Bit 15: Function for electronic gearboxes (irrelevant to tool management)
 Bit 16=0: The current value of SETMS is retained (it is a function of the settings in MD20110 \$MC_RESET_MODE_MASK).
 Bit 16=1: At program start, the spindle defined by MD20090 \$MC_SPIND_DEF_MASTER_SPIND is the master spindle.
 Bit 17=0: The current value of SETMH is retained (it is a function of the settings in MD20110 \$MC_RESET_MODE_MASK).
 Bit 17=1: At program start, the number allocated by MD20124 \$MC_TOOL_MANAGEMENT_TOOLHOLDER is the number of the master tool holder.
 Bit 18=0: Reference axis for G96/G961/G962 according to MD20100 \$MC_DIAMETER_AX_DEF. Bit 18=1 is recommended when using SCC with its own spindle reset (see also MD20110 \$MC_RESET_MODE_MASK, bit 18).
 Bit 18=1: Reference axis for G96/G961/G962 is retained.

Channel-specific machine data

20130	CUTTING_EDGE_RESET_VALUE		C03	-
-	Tool edge with length compens. during runup (reset/end of pp)		DWORD	Reset
-				
-	-	1,1,1,1,1,1,1,1,1,1	0	32000 1/1

Description: Definition of the cutting edge for which tool length compensation is selected during runup or on reset or part program end as a function of MD20110 \$MC_RESET_MODE_MASK, and as a function of MD20112 \$MC_START_MODE_MASK on part program start.

With active tool management and with bit 0 and bit 6 set in MD20110 \$MC_RESET_MODE_MASK at selection, the last offset of the tool active at power OFF - as a rule the tool on the spindle - is effective after runup.

Related to:

MD20110 \$MC_RESET_MODE_MASK

MD20112 \$MC_START_MODE_MASK

20132	SUMCORR_RESET_VALUE		C03	-
-	Effective resulting offset on RESET		DWORD	Reset
-				
-	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	6 0/0

Description: Definition of the total offset with which the tool length compensation is selected in the runup and on reset or part program end as a function of MD20110 \$MC_RESET_MODE_MASK and as a function of MD20112 \$MC_START_MODE_MASK on part program start.

MD18110 \$MN_MM_MAX_SUMCORR_PER_CUTTEDGE determines the maximum useful value which can be entered.

20140	TRAFO_RESET_VALUE		C03	F2,TE4,M1
-	Transformation data block selected during runup (reset/pp end)		BYTE	Reset
-				
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 2/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 2/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 2/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20 2/2

Description: Definition of the transformation data block which is selected during runup and on reset or part program end as a function of MD20110 \$MC_RESET_MODE_MASK, and as a function of MD20112 \$MC_START_MODE_MASK on part program start.

Number of the transformation data block (1...n) corresponding with MD24100 \$MC_TRAFO_TYPE_1 bis TRAFO_TYPE_n.

Not relevant MD20110 \$MC_RESET_MODE_MASK:

MD20110 \$MC_RESET_MODE_MASK, Bit 0 = 0

MD20112 \$MC_START_MODE_MASK

Channel-specific machine data

Bit 1 = 0:

Default behavior.

Bit 1 = 1:

The last active transformation is selected again after control power on. MD20110 \$MC_RESET_MODE_MASK Bit 0 = 1 and Bit 7 = 1 also have to be set.

20150	GCODE_RESET_VALUES			C11, C03	F2,TE4,K3,M1,M5 ,K1,K2,P1,V1
-	Initial setting of G groups			BYTE	Reset
-					
802d-cu3	70	2, 0, 0, 1, 0, 1, 1, 1, 0, 1, 0, 1, 2, 1, 2, 1, 1, 1, 1, 1, 1...	-	-	1/1
802d-ng2	70	2, 0, 0, 1, 0, 2, 1, 2, 0, 1, 0, 1, 2, 1...	-	-	1/1
802d-ng3	70	2, 0, 0, 1, 0, 2, 1, 2, 0, 1, 0, 1, 2, 1...	-	-	1/1
802d-tm1	70	2, 0, 0, 1, 0, 1, 1, 1, 0, 1, 0, 1, 2, 1, 2, 1, 1, 1, 1, 1, 1...	-	-	1/1
802d-tm2	70	2, 0, 0, 1, 0, 1, 1, 1, 0, 1, 0, 1, 2, 1, 2, 1, 1, 1, 1, 1, 1...	-	-	1/1
802d-tm3	70	2, 0, 0, 1, 0, 1, 1, 1, 0, 1, 0, 1, 2, 1, 2, 1, 1, 1, 1, 1, 1...	-	-	1/1

Description:

Definition of the G codes which become active on runup and reset or at part program end depending on MD20110 \$MC_RESET_MODE_MASK (up to software version 4) and MD20152 \$MC_GCODE_RESET_MODE (from software version 5) and at part program start depending on MD20112 \$MC_START_MODE_MASK.

The index of the G codes in the respective groups must be programmed as the default value.

For a list of the G groups and their G functions, please refer to References:

Programming Manual, Fundamentals

TitleGroupDefault setting on 840D/810D

```
GCODE_RESET_VALUES[0] 12 (G1)
GCODE_RESET_VALUES[1] 20 (inactive)
GCODE_RESET_VALUES[2] 30 (inactive)
GCODE_RESET_VALUES[3] 42 (STARTFIFO)
GCODE_RESET_VALUES[4] 50 (inactive)
GCODE_RESET_VALUES[5] 61 (G17)
GCODE_RESET_VALUES[6] 71 (G40)
GCODE_RESET_VALUES[7] 81 (G500)
GCODE_RESET_VALUES[8] 90 (inactive)
GCODE_RESET_VALUES[9] 101 (G60)
GCODE_RESET_VALUES[10] 110 (inactive)
GCODE_RESET_VALUES[11] 121 (G601)
GCODE_RESET_VALUES[12] 132 (G71)
GCODE_RESET_VALUES[13] 141 (G90)
GCODE_RESET_VALUES[14] 151 (G94)
```

Channel-specific machine data

GCODE_RESET_VALUES[15]	161	(CFC)
GCODE_RESET_VALUES[16]	171	(NORM)
GCODE_RESET_VALUES[17]	181	(G450)
GCODE_RESET_VALUES[18]	191	(BNAT)
GCODE_RESET_VALUES[19]	101	(ENAT)
GCODE_RESET_VALUES[20]	211	(BRISK)
GCODE_RESET_VALUES[21]	221	(CUT2D)
GCODE_RESET_VALUES[22]	231	(CDOF)
GCODE_RESET_VALUES[23]	241	(FFWOF)
GCODE_RESET_VALUES[24]	251	(ORIWKS)
GCODE_RESET_VALUES[25]	262	(RMI)
GCODE_RESET_VALUES[26]	271	(ORIC)
GCODE_RESET_VALUES[27]	281	(WALIMON)
GCODE_RESET_VALUES[28]	291	(DIAMOF)
GCODE_RESET_VALUES[29]	301	(COMPOF)
GCODE_RESET_VALUES[30]	311	(inactive)
GCODE_RESET_VALUES[31]	321	(inactive)
GCODE_RESET_VALUES[32]	331	(FTOCOF)
GCODE_RESET_VALUES[33]	341	(OSOF)
GCODE_RESET_VALUES[34]	351	(SPOF)
GCODE_RESET_VALUES[35]	361	(PDELAYON)
GCODE_RESET_VALUES[36]	371	(FNORM)
)GCODE_RESET_VALUES[37]	381	(SPIF1)
GCODE_RESET_VALUES[38]	391	(CPRECOF)
GCODE_RESET_VALUES[39]	401	(CUTCONOF)
GCODE_RESET_VALUES[40]	411	(LFOF)
GCODE_RESET_VALUES[41]	421	(TCOABS)
GCODE_RESET_VALUES[42]	431	(G140)
GCODE_RESET_VALUES[43]	441	(G340)
GCODE_RESET_VALUES[44]	451	(SPATH)
GCODE_RESET_VALUES[45]	461	(LFTXT)
GCODE_RESET_VALUES[46]	471	(G290 SINUMERIK mode)
GCODE_RESET_VALUES[47]	483	(G460)
GCODE_RESET_VALUES[48]	491	(CP)
GCODE_RESET_VALUES[49]	501	(ORIEULER)
GCODE_RESET_VALUES[50]	511	(ORIVECT)
GCODE_RESET_VALUES[51]	521	(PAROTOF)
GCODE_RESET_VALUES[52]	531	(TOROTOF)
GCODE_RESET_VALUES[53]	541	(ORIROTA)
GCODE_RESET_VALUES[54]	551	(RTLION)
GCODE_RESET_VALUES[55]	561	(TOWSTD)
GCODE_RESET_VALUES[56]	571	(FENDNORM)
GCODE_RESET_VALUES[57]	581	(RELIEVEON)
GCODE_RESET_VALUES[58]	591	(DYNORM)
GCODE_RESET_VALUES[59]	601	(WALCS0)
GCODE_RESET_VALUES[60]	611	(ORISOF)
:	::	
GCODE_RESET_VALUES[69]	701	(not defined)

20154	EXTERN_GCODE_RESET_VALUES		C11, C03	-
-	Initial setting of G groups in ISO mode		BYTE	Reset
-				
802d-cu3	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-
802d-ng2	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-
802d-ng3	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-
802d-tm1	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-
802d-tm2	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-
802d-tm3	31	1, 1, 1, 2, 1, 1, 1, 3, 4, 1, 1, 2, 2, 1, 3, 2, 1, 0, 1, 1, 1...	-	-

Description: When an external NC programming language is used, the G codes which become active on runup and reset or at part program end are defined as a function of MD20110 \$MC_RESET_MODE_MASK and at part program start as a function of MD20112 \$MC_START_MODE_MASK. The following external programming languages are possible:

ISO2 dialect Milling
ISO3 dialect Turning

The G group division that is to be used is stated in the current SINUMERIK documentation.

The following groups within MD20154 \$MC_EXTERN_GCODE_RESET_VALUES can be written:

ISO2 dialect M:
G group 2: G17/G18/G19
G group 3: G90/G91
G group 5: G94/G95
G group 6: G20/G21
G group 13: G96/G97
G group 14: G54-G59

ISO3 dialect T:
G group 2: G96/G97
G group 3: G90/G91
G group 5: G94/G95
G group 6: G20/G21
G group 16: G17/G18/G19

Channel-specific machine data

DISC = 0 ...Overshoot disabled, transition circle active
 DISC = 100 ...Overshoot large enough to theoretically produce a
 response similar to intersection (G451).

Programmed values of DISC which are higher than those stored in
 CUTCOM_MAX_DISC are limited to this maximum value without output
 of a message. A severely non-linear alteration in the path speed
 can thus be avoided.

Special cases:

It is not generally meaningful to enter values higher than 50 in
 DISC.

It is therefore not possible to enter values > 75.

20230	CUTCOM_CURVE_INSERT_LIMIT			C08, C06	W1
-	Maximum angle for calculation of intersection with TRC			DOUBLE	Reset
-					
802d-cu3	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	1/1
802d-ng2	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	0/0
802d-ng3	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	0/0
802d-tm1	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	0/0
802d-tm2	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	0/0
802d-tm3	-	10.,10.,10.,10.,10.,10., 10.,10.,10....	0.0	150.	1/1

Description: Where outer corners are very flat, G450 (transition circle) and G451 (intersection) approximate each other more and more. In such a case, it is no longer useful to insert a transition circle. Especially with 5-axis machining, it is not allowed to insert a transition circle at these outer corners, as this might lead to losses in velocity during continuous-path mode (G64). That is why the system switches automatically from G450 (transition circle, possibly with DISC) to G451 (intersection) in the case of very flat outer corners. The contour angle (in degrees), as of which the automatic switchover (transition circle ---> intersection) is to be carried out, can be specified in CUTCOM_CURVE_INSERT_LIMIT.

Channel-specific machine data

20372	SHAPED_TOOL_CHECKSUM		C01, C08	-
-	Checksum test for contour tools		BOOLEAN	Immediately
-				
-	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0

Description: Indicates for each channel whether for completion of the contour tool definition an edge must be available that includes the negative sums of tool length components and tool radius of the previous edges.

20380	TOOL_CORR_MODE_G43G44		C01, C08, C11	-	
-	Treatment of tool length compensation with G43 / G44		BYTE	Reset	
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	-1/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	-1/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2

Description: This machine data determines in ISO dialect M (G43 / G44) the way in which length compensations programmed with H are processed.

0: Mode A

Tool length H always acts on the third geometry axis (usually Z)

1: Mode B

Tool length H acts, depending on the active plane, on one of the three geometry axes. This means with

G17 on the 3rd geometry axis (usually Z)

G18 on the 2nd geometry axis (usually Y)

G19 on the 1st geometry axis (usually X)

In this mode, compensations in all three geometry axes can be configured through multiple programming, i.e. through the activation of one component, the length compensation possibly active in another axis is not deleted.

2: Mode C

The tool length acts, independent of the active plane, on the axis that has simultaneously been programmed with H. Otherwise, the response is the same as with mode B.

Channel-specific machine data

20382	TOOL_CORR_MOVE_MODE	C01, C08	-
-	Traversing of tool length compensation	BOOLEAN	Reset
-			
-	-	FALSE,FALSE,FALSE,FALSE,FALSE...	1/1

Description: This machine data determines how the tool length compensations are traversed.

0: A tool length compensation is only traversed if the associated axis has been programmed (behavior as in previous software versions)

1: Tool lengths are always traversed independently of whether the associated axes are programmed or not.

20384	TOOL_CORR_MULTIPLE_AXES	C01, C08, C11	-
-	Tool length compensation in several axes simultaneously	BOOLEAN	Reset
-			
802d-cu3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	1/1
802d-ng2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-1/2
802d-ng3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-1/2
802d-tm1	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	1/1
802d-tm2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	1/1
802d-tm3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	1/1

Description: This machine data determines for tool length compensation in ISO dialect M (ISO2) (G43 / G44), whether the compensation shall be allowed in mode C (selection of the axis on which the compensation is acting by specifying the corresponding axis letter) to act on several axes simultaneously.

If this machine data is 1, this type of programming is allowed; otherwise it is rejected with an alarm.

20390	TOOL_TEMP_COMP_ON	C01, C08	K3,W1
-	Activation of temperature compensation for tool length	BOOLEAN	Reset
-			
-	-	FALSE,FALSE,FALSE,FALSE,FALSE...	1/1

Description: This machine data activates the temperature compensation in tool direction (see also SD42960 \$SC_TOOL_TEMP_COMP)

Channel-specific machine data

20392	TOOL_TEMP_COMP_LIMIT		C01, C08	W1
mm	Max. temperature compensation for tool length		DOUBLE	Reset
-				
-	3	1.0, 1.0 , 1.0,1.0, 1.0 , 1.0...	-	1/1

Description: With temperature compensation, this machine data indicates the maximum permissible value for the tool length for each geometry axis.
If a temperature compensation value larger than this limit value is entered, it will be limited without an alarm.

20396	TOOL_OFFSET_DRF_ON		C01, C08	-
-	Handwheel override in tool direction		BOOLEAN	Reset
-				
-	-	FALSE,FALSE,FALS E,FALSE,FALSE,FAL SE...	-	-1/2

Description: This machine data activates the handwheel override in tool direction.
When this machine data is set, a handwheel override is active in the axis that is assigned to length L1 of the active tool, in the direction defined by tool orientation.
Example:
G17 is active; the tool is a milling tool; tool length L1 is therefore assigned to the Z axis (the 3rd geometry axis).
When the tool (e.g. with active 5-axis transformation) is turned around the Y axis by 90 degrees, so that it shows in X direction, a handwheel override becomes active in the 3rd axis in the X axis.

20400	LOOKAH_USE_VELO_NEXT_BLOCK		EXP, C05	B1
-	LookAhead following block velocity		BOOLEAN	PowerOn
-				
802d-cu3	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	1/1
802d-ng2	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	0/0
802d-ng3	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	0/0
802d-tm1	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	0/0
802d-tm2	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	0/0
802d-tm3	-	TRUE,TRUE,TRUE,T RUE,TRUE,TRUE,TR UE...	-	1/1

Description: For SW-internal function optimization.

Channel-specific machine data

20486	COMPRESS_SPLINE_DEGREE			EXP, C05	B1
-	Compressor spline degree			BYTE	NEW CONF
-					
-	5	3, 3, 3, 3, 3, 3, 3, 3, 3, 3...	3	5	0/0

Description: Spline degree for compressor type COMPCAD. Value 3 is recommended; value 5 may be possible for roughing, if soft and rapid movements are more important than accuracy
Entry for all dynamic G code groups.

20490	IGNORE_OVL_FACTOR_FOR_ADIS			EXP	B1
-	G641/G642 independent of overload factor			BOOLEAN	NEW CONF
-					
802d-cu3	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	1/1
802d-ng2	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	1/1
802d-ng3	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	1/1
802d-tm1	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	0/0
802d-tm2	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	1/1
802d-tm3	-	FALSE,FALSE,FALSE,FALSE,FALSE...	-	-	1/1

Description: A block transition is normally only smoothed with G641 and G642 when the path velocity at block transition is reduced by the overload factor set in MD32310 \$MA_MAX_ACCEL_OVL_FACTOR. When SOFT is active, the maximum jerk occurring at block transitions is also limited by MD32432 \$MA_PATH_TRANS_JERK_LIM. This means that the effect of smoothing with G641 and G642 depends on the values set for the overload factor and possibly for the maximum jerk.
By setting MD20490 \$MC_IGNORE_OVL_FACTOR_FOR_ADIS = TRUE a block transition can be smoothed with G641 and G642, irrespectively of the values set for the overload factor.

Channel-specific machine data

20602	CURV_EFFECT_ON_PATH_ACCEL	EXP, C05	B1,B2
-	Effect of path curvature on path dynamic	DOUBLE	NEW CONF
-			
-	5	0., 0., 0., 0., 0., 0., 0., 0., 0.	0.95
		0., 0., 0....	1/1

Description: This MD is used to determine whether the reaction of path curvature on path acceleration and path velocity is taken into account.

0:

Not taken into account

> 0:

If required, the path velocity and path acceleration are reduced in order to keep a sufficient reserve on the machine axes for centripetal acceleration.

0.75: Recommended setting.

MD20602 \$MC_CURV_EFFECT_ON_PATH_ACCEL defines the proportion of the axis accelerations (see MD32300 \$MA_MAX_AX_ACCEL[...]) that can be used for centripetal acceleration. The remainder is used for changing the path velocity.

Centripetal acceleration is not required for linear blocks; the full axis acceleration is therefore available for the path acceleration. On slightly curved contours or with a sufficiently low maximum path feedrate \$MC_CURV_EFFECT_ON_PATH_ACCEL has only a partial or no effect. Accordingly, the path acceleration is higher than that specified by (1. - MD20602

\$MC_CURV_EFFECT_ON_PATH_ACCEL) * MD32300 \$MA_MAX_AX_ACCEL[...].

There is an entry for each dynamic G code group.

20603	CURV_EFFECT_ON_PATH_JERK	EXP, C05	B1
-	Effect of path curvature on path jerk	DOUBLE	NEW CONF
-			
-	5	0., 0., 0., 0., 0., 0., 0., 0., 0.	1000.
		0., 0., 0....	1/1

Description: Allows the reaction of the path curvature on the path jerk to be taken into account on especially jerk-sensitive machines.

Entry for each dynamic G code group.

20605	PREPDYN_SMOOTHING_FACTOR	EXP, C05	B1
-	Factor for curve smoothing	DOUBLE	NEW CONF
-			
-	5	1., 1., 1., 1., 1., 1., 1., 1., 1.	-
		1., 1., 1....	1/1

Description: Factor to determine the degree of smoothing and torsion.

A larger value of this MD causes a stronger smoothing and thus a more homogenous curvature/torsion and resulting path velocity.

With this factor being zero no smoothing is performed.

There is an entry for all dynamic G code groups.

Channel-specific machine data

20606	PREPDYN_SMOOTHING_ON	EXP, C05	B1
-	Activation of curve smoothing	BOOLEAN	NEW CONF
-			
-	5	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0...	7/7

Description: Switch on of curve and torsion smoothing.
Smoothing of the curve or torsion causes a homogenous path velocity.
Smoothing is only performed, when the relevant factor is MD 20605 \$MC_PREPDYN_SMOOTHING_FACTOR > 0.
There is an entry for all dynamic G code groups.

20607	PREPDYN_MAX_FILT_LENGTH_GEO	EXP, C05	B1
mm, degrees	Maximum filter length for geometry axes	DOUBLE	NEW CONF
-			
-	5	2., 2., 2., 2., 2., 2., 2., 2., 2., 2....	1/1

Description: Maximum filter length for curve and torsion smoothing of the geometry axes.
There is an entry for all dynamic G code groups.

20608	PREPDYN_MAX_FILT_LENGTH_RD	EXP, C05	B1
mm, degrees	Maximum filter length for rotary axes	DOUBLE	NEW CONF
-			
-	5	5., 5., 5., 5., 5., 5., 5., 5., 5., 5....	1/1

Description: Maximum filter length for curve and torsion smoothing of the rotary axes.
There is an entry for all dynamic G code groups.

20610	ADD_MOVE_ACCEL_RESERVE	C05	F2,B2,K1	
-	Acceleration margin for overlaid movements	DOUBLE	PowerOn	
-				
802d-cu3	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	2/2
802d-ng2	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	2/2
802d-ng3	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	2/2
802d-tm1	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	0/0
802d-tm2	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	0/0
802d-tm3	-	.2,.2,.2,.2,.2,.2,.2,.2, 0.	0.9	0/0

Description: This machine data contains the factor which defines the acceleration margin which is not used by a path movement in order to provide sufficient acceleration reserves for an overlaid movement for the velocity control.
A factor of 0.2 means that the path axes utilize 80% of the path acceleration in normal operation. Only when a request for overlaid movement is made, can 100% of the path acceleration be utilized.

Channel-specific machine data

20624	HANDWH_CHAN_STOP_COND			EXP, C09	H1,P1
-	Definition of response of handwheel travel, channel-specific			DWORD	PowerOn
-					
802d-cu3	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	2/2
802d-ng2	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	1/1
802d-ng3	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	2/2
802d-tm1	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	0/0
802d-tm2	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	0/0
802d-tm3	-	0x13FF,0x13FF,0x13FF,0x13FF,0x13FF...	0	0xFFFF	0/0

Description: Definition of the behavior for handwheel travel to channel-specific VDI interface signals (bit 0 to bit 7) or the context-sensitive interpolator stop (bit 7):

Bit = 0:

Interruption or collection of the displacements entered via the handwheel.

Bit = 1:

Traversing aborted and no collecting

Bit assignment:

Bit 0: Mode group stop

Bit 1: Mode group stop, axes plus spindle

Bit 2: NC stop

Bit 3: NC stop, axes plus spindles

Bit 4: Feed disable

Bit 5: Feedrate override

Bit 6: Rapid traverse override

Bit 7: Feed stop, geometry axis or context-sensitive interpolator stop

Bit 8 = 0:

The maximum feedrate for handwheel travel of geometry axes is that specified in machine data JOG_AX_VELO for the corresponding machine axis/axes.

Bit 8 == 1:

The maximum feedrate for handwheel travel of geometry axes is that specified in machine data MAX_AX_VELO for the corresponding machine axis/axes.

Bit 9 = 0:

The override is active during handwheel travel of geometry axes

Bit 9 = 1:

During handwheel travel of geometry axes, the override is assumed to be 100% irrespective of the position of the override switch.

Exception: override 0, which is always active.

Bit 10 = 0:

MD11310 \$MN_HANDWH_REVERSE is not active for DRF, i.e. handwheel travel with DRF is carried out as if MD11310

\$MN_HANDWH_REVERSE = 0.

Bit 10 = 1:
MD11310 \$MN_HANDWH_REVERSE is active for DRF.

Bit 11 = 0:
When the contour handwheel is deselected, program processing is continued automatically.

Bit 11 = 1:
When the contour handwheel is deselected, an NCSTOP is triggered automatically. Program processing is not continued until NCSTART is entered.

Bit 12 = 0
NC start has no effect on handwheel travel.

Bit 12 = 1:
The previously collected paths are rejected at NC start.

Bit 13 = 0:
For DRF, bits 0 - 3 and bit 12: bit = 0 / bit = 1 are active (see above).

Bit 13 = 1:
For DRF, bits 0 - 3 and bit 12 are NOT active: the DRF motion is not interrupted by a stop, and a DRF motion can take place even in "Automatic interrupted" state (achieved by NC Stop).

Note:
If an alarm leads to an axis stop and if such an alarm is pending, no DRF motion can take place.

Bit 14 = 0:
The maximum feedrate for handwheel travel of geometry axes is that specified in SD41120 \$SN_JOG_REV_SET_VELO or in MD32050 \$MA_JOG_REV_VELO (for revolutional feedrate) or in MD32040 \$MA_JOG_REV_VELO_RAPID (for rapid traverse) for the corresponding machine axis, the spindle or rotary axis feedrate is included in the calculation.

Bit 14 = 1:
The maximum rotational feedrate for handwheel travel of geometry axes is the feedrate specified in MD32000 \$MA_MAX_AX_VELO for the corresponding machine axis (see also bit 6).

Bit 15 = 0:
If an axis with active diameter programming is traversed in the channel, only half the distance of the specified increment is traveled during handwheel travel (\$MN_HANDWH_TRUE_DISTANCE = 1 or 3).

Bit 15 = 1:
If an axis with active diameter programming is traversed in the channel, the specified increment is fully traveled during handwheel travel (\$MN_HANDWH_TRUE_DISTANCE = 1 or 3).

Channel-specific machine data

20700	REFP_NC_START_LOCK		C01, C03	D1, R1, Z1
-	NC start disable without reference point		BOOLEAN	Reset
-				
-	-	TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE...	-	2/2

Description: 0: The NC/PLC interface signal V3200 0007.1 (NC Start) for starting of part programs or part program blocks (MDI and over-store) is active even if one or all axes of the channel has/have not yet been referenced.

To ensure that the axes nevertheless reach the correct position after NC Start, the workpiece coordinate system (WCS) must be set to the correct value by means of other methods (scratch method, automatic zero offset determination etc.).

1: Those axes, for which the axial MD34110 \$MA_REFP_CYCLE_NR specifies that a reference point is obligate (value > -1), must have been referenced before NC Start is allowed.

20730	G0_LINEAR_MODE		C09	P2
-	G0 interpolation mode		BOOLEAN	PowerOn
-				
-	-	TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE...	-	2/2

Description: This machine data defines the interpolation behavior of G0:

0: Non-linear interpolation (RTLIOF): Each path axis interpolates as an individual axis (positioning axis), independently of the other axes, at the rapid traverse velocity of the axis (MD32000 \$MA_MAX_AX_VELO).

1: Linear interpolation (RTLION): The path axes are interpolated jointly.

Related to:

MD20732 \$MC_EXTERN_G0_LINEAR_MODE

Channel-specific machine data

Bit1: 0:
ISO mode T: G10 P < 100 tool geometry
P > 100 tool wear
1:
G10 P < 10000 tool geometry
P > 10000 tool wear

Bit2: 0:
G04 dwell time: always [s] or [ms]
1:
If G95 is active, in spindle revolutions

Bit3: 0:
Errors in ISO scanner lead to an alarm
1:
Errors in ISO scanner are not output, the block is transferred to the Siemens translator.

Bit4: 0:
G00 is traversed with the current exact stop - continuous-path mode G code
1:
G00 is always traversed with G09

Bit5: 0:
Modulo rotary axis is positioned at the shortest possible distance
1:
Direction of rotation of modulo rotary axis depends on sign

Bit6: 0:
Only 4-digit program number allowed.
1:
8-digit program number allowed. If the program number has less than 4 digits, it is expanded to 4 digits with 0.

Bit7: 0:
Axis programming for geometry axis exchange/parallel axes is compatible with ISO mode.
1:
Axis programming for geometry axis exchange/parallel axes in ISO mode is compatible with Siemens mode.

Bit8: 0:
With cycles, the F value transferred is always interpreted as a feedrate.
1:
With threading cycles, the F value transferred is interpreted as a pitch.

Bit9: 0:
Multiplication with 0.01mm / 0.0001inch is carried out in ISO mode T for G84, G88 and in standard mode F for G95.
1:
Multiplication with 0.001mm / 0.00001inch is carried out in ISO mode T for G84, G88 and in standard mode F for G95.

Bit10: 0:
With M96 Pxx, the program programmed with Pxx is always called in the case of an interrupt

Channel-specific machine data

21110	X_AXIS_IN_OLD_X_Z_PLANE		EXP, C01, C09	M1,K2
-	Coordinate system for automatic frame definition		BOOLEAN	PowerOn
-				
-	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	1/1

Description: 1 = With automatic definition of a frame (TOFRAME), the Z direction of which equals the current tool orientation, the new coordinate system is additionally rotated around the new Z axis so that the new X axis is in the old Z-X plane.
0 = With automatic definition of a frame (TOFRAME), the Z direction of which equals the current tool orientation, the new coordinate system is maintained as it results from the kinematics of the machine, i.e. it is assumed that the coordinate system is fixed to the tool and rotates with the tool (orientation).
From SW 5.3:
This machine data is only effective when the three lowest value decimal positions (units, tens, hundreds) of SD42980 \$SC_TOFRAME_MODE) equal zero. Otherwise the frame definition is specified by SD42980 \$SC_TOFRAME_MODE.
MD irrelevant for:
No orientation programming
Related to:
MD21100 \$MC_ORIENTATION_IS_EULER
Further references:
/PG/, Programming Guide, Fundamentals

21160	JOG_VELO_RAPID_GEO		C07	F2
mm/min	JOG rapid traverse for geometry axes		DOUBLE	Reset
-				
802d-cu3	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	1/1
802d-ng2	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	0/0
802d-ng3	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	0/0
802d-tm1	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	0/0
802d-tm2	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	0/0
802d-tm3	3	10000., 10000.0, 10000., 10000., 10000.0, 10000....	-	0/0

Description: Velocity in JOG mode with rapid traverse override for geometry axes in the channel (mm/min)

Channel-specific machine data

21165	JOG_VELO_GEO		C07	F2
mm/min	Jog feedrate for geometry axes		DOUBLE	Reset
-				
802d-cu3	3	1000., 1000., 1000.,1000., 1000., 1000....	-	1/1
802d-ng2	3	1000., 1000., 1000.,1000., 1000., 1000....	-	0/0
802d-ng3	3	1000., 1000., 1000.,1000., 1000., 1000....	-	0/0
802d-tm1	3	1000., 1000., 1000.,1000., 1000., 1000....	-	0/0
802d-tm2	3	1000., 1000., 1000.,1000., 1000., 1000....	-	0/0
802d-tm3	3	1000., 1000., 1000.,1000., 1000., 1000....	-	0/0

Description: JOG velocity for geometry axes in the channel (mm/min)

21186	TOCARR_ROT_OFFSET_FROM_FR		C01, C07	F2
-	Offset of TOCARR rotary axes from WO		BOOLEAN	Immediately
-				
-	-	FALSE,FALSE,FALS E,FALSE,FALSE,FAL SE...	-	0/0

Description: Rotary axes offset for the orientable tool holder is automatically accepted from the work offset activated on activation of the orientable tool holder for the rotary axes.

21198	ORI_TRAFO_ONLINE_CHECK_LIM		C07	F2
mm	Activation limit of the realtime dynamic monitoring		DOUBLE	NEW CONF
-				
-	-	1.0,1.0,1.0,1.0,1.0,1.0, 1.0,1.0,1.0...	-	1/1

Description: The realtime dynamic limitation is activated if the effective tool length in an orientation transformation differs from the value taken into account in the preprocessing by more than the value defined in this machine data, for example as a result of overlaid motions or activation of the online tool length compensation.

21200	LIFTFAST_DIST		C09	K1,V1,2,6,6.1
mm	Traversing distance on rapid lift from contour		DOUBLE	PowerOn
-				
-	-	0.1,0.1,0.1,0.1,0.1,0.1, 0.1,0.1,0.1...	-	1/1

Description: The machine data determines the absolute value of the traverse movement for rapid lift. The direction of the traverse movement is defined in the part program by the command ALF.

References:

/PA/, Programming Guide: Fundamentals

2.3.2 Machine data for grinding function

21500	TRACLG_GRINDSPI_VERT_OFFSET	C07	-
mm	Vertical position offset of grinding axis in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: The vertical offset of the grinding axis is specified in this MD.

21501	TRACLG_GRINDSPI_HOR_OFFSET	C07	-
mm	Horiz. position offset of grinding axis in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: Horizontal position offset of the grinding axis in centerless grinding.
The setting in this MD is significant only when MD: TRAFO_AXES_IN_n[0] = 0, i.e. no axis is programmed for the grinding wheel.

21502	TRACLG_CTRLSPI_VERT_OFFSET	C07	-
mm	vert. position offset of regulating axis in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: The vertical offset for the regulating axis is specified in this MD.

21504	TRACLG_SUPPORT_VERT_OFFSET	C07	-
mm	Vertical offset of work blade in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: Y offset for work blade
Rule: $X(0) = Y(\text{offset}) + Q1 < Y(\text{direction vector } Q1) + Q2 < Y(\text{direction vector } Q2)$

21506	TRACLG_SUPPORT_HOR_OFFSET	C07	S8
mm	Horizontal offset of work blade in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: X offset for work blade
Rule: $X(0) = X(\text{offset}) + Q1 < X(\text{direction vector } Q1) + Q2 < X(\text{direction vector } Q2)$

Channel-specific machine data

21508	TRACLG_VERT_DIR_SUPPORTAX_1	C07	-
-	Vertical component of work blade direction vector for Q1	DOUBLE	PowerOn
-			
-	-	1.,1.,1.,1.,1.,1.,1.,1.,1.,1., 1.,1.,1.,1....	0/0

Description: Y component of blade direction vector for Q1
Rule: $Y(0) = Y(\text{offset}) + Q1 < Y(\text{direction vector} Q1) + Q2 < Y(\text{direction vector } Q2)$

21510	TRACLG_HOR_DIR_SUPPORTAX_1	C07	-
-	Horizontal component of work blade direction vector for Q1	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: X component of blade direction vector for Q1
Rule: $X(0) = X(\text{offset}) + Q1 < X(\text{direction vector } Q1) + Q2 < X(\text{direction vector } Q2)$

21512	TRACLG_VERT_DIR_SUPPORTAX_2	C07	-
-	Vertical component of work blade direction vector for Q2	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	0/0

Description: Y component of blade direction vector for Q2
Rule: $Y(0) = Y(\text{offset}) + Q1 < Y(\text{direction vector} Q1) + Q2 < Y(\text{direction vector } Q2)$

21514	TRACLG_HOR_DIR_SUPPORTAX_2	C07	-
-	Horizontal component of work blade direction vector for Q2	DOUBLE	PowerOn
-			
-	-	1.,1.,1.,1.,1.,1.,1.,1.,1., 1.,1.,1.,1....	0/0

Description: X component of blade direction vector for Q2
Rule: $X(0) = X(\text{offset}) + Q1 < X(\text{direction vector } Q1) + Q2 < X(\text{direction vector } Q2)$

21516	TRACLG_SUPPORT_LEAD_ANGLE	C07	-
degrees	Lead angle of work blade in centerless grinding	DOUBLE	PowerOn
-			
-	-	0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-90. 90. 0/0

Description: The angle of lead of the work blade (a) is entered here.

Channel-specific machine data

22200	AUXFU_M_SYNC_TYPE	C04	H2,K1,2,4
-	Output time of M functions	BYTE	PowerOn
-			
-	-	1	0
-	-	3	0/0

Description: Synchronization of the M auxiliary functions with regard to a simultaneously programmed axis motion.

0 = Output before motion

1 = Output during motion

2 = Output at block end

3 = No output to the PLC (therefore no block change delay)

Notice:

An auxiliary function output specification configured by MD22080 \$MC_AUXFU_PREDEF_SPEC[preIndex], MD22035 \$MC_AUXFU_ASSIGN_SPEC[auxIndex] or

A group output specification configured by MD11110 \$MN_AUXFU_GROUP_SPEC[groupIndex], which has a higher priority.

22210	AUXFU_S_SYNC_TYPE	C04	H2,2,4
-	Output time of S functions (see MD22200 for values)	BYTE	PowerOn
-			
-	-	1	0
-	-	4	0/0

Description: Synchronization of the S auxiliary functions with regard to a simultaneously programmed axis motion.

0 = Output before motion

1 = Output during motion

2 = Output at block end

3 = No output to the PLC (therefore no block change delay)

4 = Output in accordance with the predefined output specification

Notice:

An auxiliary function output specification configured by MD22080 \$MC_AUXFU_PREDEF_SPEC[preIndex], MD22035 \$MC_AUXFU_ASSIGN_SPEC[auxIndex] or

A group output specification configured by MD11110 \$MN_AUXFU_GROUP_SPEC[groupIndex], which has a higher priority.

Channel-specific machine data

22220	AUXFU_T_SYNC_TYPE	C11, C04	H2,2,4
-	Output time for T functions (see MD22200 for values)	BYTE	PowerOn
-			
-	-	1	0
-	-	4	0/0

Description: Synchronization of the T auxiliary functions with regard to a simultaneously programmed axis motion.
 0 = Output before motion
 1 = Output during motion
 2 = Output at block end
 3 = No output to the PLC (therefore no block change delay)
 4 = Output in accordance with the predefined output specification

Notice:

An auxiliary function output specification configured by MD22080 \$MC_AUXFU_PREDEF_SPEC[preIndex], MD22035 \$MC_AUXFU_ASSIGN_SPEC[auxIndex] or
 A group output specification configured by MD11110 \$MN_AUXFU_GROUP_SPEC[groupIndex], which has a higher priority.

22250	AUXFU_D_SYNC_TYPE	C04	H2
-	Output time for D functions (see MD22200 for values)	BYTE	PowerOn
-			
-	-	1	0
-	-	4	0/0

Description: Synchronization of the D auxiliary functions with regard to a simultaneously programmed axis motion.
 0 = Output before motion
 1 = Output during motion
 2 = Output at block end
 3 = No output to the PLC (therefore no block change delay)
 4 = Output in accordance with the predefined output specification

Notice:

An auxiliary function output specification configured by MD22080 \$MC_AUXFU_PREDEF_SPEC[preIndex], MD22035 \$MC_AUXFU_ASSIGN_SPEC[auxIndex] or
 A group output specification configured by MD11110 \$MN_AUXFU_GROUP_SPEC[groupIndex], which has a higher priority.

See MD20112 \$MC_START_MODE_MASK, MD20110 \$MC_RESET_MODE_MASK
On RESET, this does not affect the behavior "Keep disabled tool on the spindle active".

Bit 3=0: Standard: If the tool on the spindle is disabled, generate a tool change command requesting a replacement tool. An alarm will be generated if there is no such replacement tool.

Bit 3=1: The disabled status of the spindle tool is ignored. The tool becomes active. The subsequent part program should be formulated so that no parts are machined with the disabled tool.

Bit 4=0: Standard: The system tries to activate the spindle tool or its replacement tool.

Bit 4=1: If the tool on the spindle is disabled, T0 is programmed in the start init block.

The combination of bits 3 and 4 produces the following statements:
0 / 0: Behavior as before, automatic change on NC start if a disabled tool is in the spindle

1 / 0: No automatic change

0 / 1: A T0 is automatically generated if a disabled tool is in the spindle at NC start

1 / 1: No statement

Bit 5: Reserved

Bit 6=0: Standard: If T0 or D0, only T0 or D0 is exactly programmed. This means that MD20270 \$MC_CUTTING_EDGE_DEFAULT and MD20272 \$MC_SUMCORR_DEFAULT determine the value of D and DL for the programming of T0.

Example: MD20270 \$MC_CUTTING_EDGE_DEFAULT=1, MD20272 \$MC_SUMCORR_DEFAULT=2, MD22550 \$MC_TOOL_CHANGE_MODE=0 (tool change with T programming)

N10 T0 ; T no. 0 has active numbers D1 and DL=2, which results in offset zero. If bit 2 is also set:

Programming of

a) T0; for tool deselection

b) D0; for offset deselection

generates an alarm, if

a) at least one of MD20270 \$MC_CUTTING_EDGE_DEFAULT and MD20272 \$MC_SUMCORR_DEFAULT is unequal to zero (The correct programming is T0 D0 DL=0).

b) MD20272 \$MC_SUMCORR_DEFAULT is unequal to zero (The correct programming is D0 DL=0).

Bit 6=1: Controls the NCK behavior when x, y, z are all programmed greater than zero, if at least one of MD20270 \$MC_CUTTING_EDGE_DEFAULT and MD20272 \$MC_SUMCORR_DEFAULT is unequal to zero.

a) Tx Dy --> T0:

With T0, D0 or D0 DL=0 is automatically programmed in the NCK; i.e. values in MD20270 \$MC_CUTTING_EDGE_DEFAULT and \$MC_SUMCORR_DEFAULT unequal to zero are treated as values equal to zero.

b) Tx Dy --> T0 Dy, or T0 DL=z, or T0 Dy DL=z, or T0 D0 DL=z, explicitly programmed values of D, DL are not influenced.

c) Dy DL=z --> D0

With D0, DL=0 is automatically programmed in the NCK; i.e. values in MD20272 \$MC_SUMCORR_DEFAULT unequal to zero are treated as values equal to zero.

d) Dy DL=z --> D0 DL=z

Channel-specific machine data

1: Under program test, the axes/spindles are traversed at the following speeds:

Axes: at the same velocity as dry run feed.

Spindles: at the programmed speed.

Dynamic axis / spindle limitations are taken into account.

2: Under program test, the axes/spindles are traversed at the programmed velocity/speed.

Dynamic axis /spindle limitations are taken into account.

3: Not assigned.

Related to:

SD42100 \$SC_DRY_RUN_FEED, MD22601 \$MC_SERUPRO_SPEED_FACTOR

22601	SERUPRO_SPEED_FACTOR		EXP	K1
-	Speed factor for search run type 5		DOUBLE	Immediately
-				
-	-	10.0,10.0,10.0,10.0,10.0,10.0,10.0,10.0...	1.0	1/1

Description: SERUPRO means SEArch RUN by PROgram test, i.e. traversing under program test from beginning of program to search target.

Note:

Program test does not move any axes / spindles.

The machine data is relevant only if the first two bits of MD22600 \$MC_SERUPRO_SPEED_MODE are 0. The machine data has the following meaning:

Axes: MD specifies the factor by which the test run feedrate is multiplied.

Spindles: MD specifies the factor by which the programmed speed is multiplied.

Dynamic limitations of axes / spindles are always ignored.

Related to:

SD42100 \$SC_DRY_RUN_FEED, MD22600 \$MC_SERUPRO_SPEED_MODE

22620	START_MODE_MASK_PRT		EXP, C03	M3,K1
-	Initial setting on special starts		DWORD	Reset
-				
-	-	0x400,0x400,0x400,0x400,0x400,0x400...	0	0xFFFF

Description: This machine data is activated via MD22621 \$MC_ENABLE_START_MODE_MASK_PRT. If MD22621 \$MC_ENABLE_START_MODE_MASK_PRT is in its initial setting, MD22620 \$MC_START_MODE_MASK_PRT is inactive. If MD22620 \$MC_START_MODE_MASK_PRT is activated for "search via program test" (abbr. SERUPRO), then MD22620 \$MC_START_MODE_MASK_PRT replaces MD20112 \$MC_START_MODE_MASK when "search via program test" is started. This enables a behavior deviating from PLC start to be set at the start of the search. The meaning of the bit-by-bit assignment of MD22620 \$MC_START_MODE_MASK_PRT is the same as that in MD20112 \$MC_START_MODE_MASK.

Channel-specific machine data

22900	STROKE_CHECK_INSIDE		EXP, C01, C11	-
-	Direction (inside/outside) in which prot. zone 3 is effective		BOOLEAN	PowerOn
-				
802d-cu3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	1/1
802d-ng2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-ng3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm1	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0

Description: This MD defines whether protection zone 3 is a protection zone inside or outside.
Meaning:
0: Protection zone 3 is a protection zone inside, i.e. the protection zone must not entered inwardly.
1: Protection zone 3 is a protection zone outside

22910	WEIGHTING_FACTOR_FOR_SCALE		EXP, C01, C11	-
-	Input resolution for scaling factor		BOOLEAN	PowerOn
-				
802d-cu3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-ng2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-ng3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm1	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2

Description: Definition of the unit for the scaling factor P and for the axial scaling factors I, J, K.
Meaning:
0 Scale factor in 0.001
1 Scale factor in 0.00001

Channel-specific machine data

Related to:

SD43120 \$SA_DEFAULT_SCALE_FACTOR_AXIS,
SD42140 \$SC_DEFAULT_SCALE_FACTOR_P

22914	AXES_SCALE_ENABLE		EXP, C01, C11	-
-	Activation for axial scaling factor (G51)		BOOLEAN	PowerOn
-				
802d-cu3	-	FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-ng2	-	FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-ng3	-	FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm1	-	FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm2	-	FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm3	-	FALSE,FALSE,FALSE,FALSE...	-	2/2

Description: This MD enables axial scaling.

Meaning:

0: Axial scaling not possible

1: Axial scaling possible -> MD DEFAULT_SCALE_FACTOR_AXIS is active

Related to:

SD43120 \$SA_DEFAULT_SCALE_FACTOR_AXIS

22920	EXTERN_FIXED_FEEDRATE_F1_ON		EXP, C01, C11	-
-	Activation of fixed feedrates F1 - F9		BOOLEAN	PowerOn
-				
802d-cu3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-ng2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-ng3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	0/0
802d-tm1	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm2	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2
802d-tm3	-	FALSE,FALSE,FALSE,FALSE,FALSE,FALSE...	-	2/2

Description: This MD is used to activate the fixed feedrates set in SD42160 \$SC_EXTERN_FIXED_FEEDRATE_F1_F9[].

Meaning:

0: no fixed feedrates with F1 - F9

1: the feedrates set in SD42160

\$SC_EXTERN_FIXED_FEEDRATE_F1_F9[] become active when F1 - F9 are programmed.

Channel-specific machine data

24002	CHBFRAME_RESET_MASK	C03	K2
-	Active channel-specific base frames after reset	DWORD	Reset
-			
-	-	0xFFFF,0xFFFF,0xFF FF,0xFFFF,0xFFFF...	0 0xFFFF 0/0

Description: Bit mask for the reset setting of the channel-specific base frames which are included in the channel.
The following apply:
If MD20110 \$MC_RESET_MODE_MASK bit0 = 1 and BIT14 = 1
the entire base frame is determined on reset by chaining the base frame field elements, whose bit is 1 in the bit mask.
If MD20110 \$MC_RESET_MODE_MASK bit0 = 1 and BIT14 = 0
the entire base frame is deselected on reset.

24004	CHBFRAME_POWERON_MASK	C03	K2
-	Reset channel-specific base frames after power on	DWORD	PowerOn
-			
-	-	0x0,0x0,0x0,0x0,0x0,0 x0,0x0,0x0,0x0...	0 0xFFFF 0/0

Description: This machine data defines whether channel-specific base frames are reset in the data management on Power On.
That is

- Offsets and rotations are set to 0,
- Scalings are set to 1.
- Mirror image machining is disabled.

The selection can be made separately for individual base frames.
Bit 0 means base frame 0, bit 1 base frame 1 etc.
Value=0: Base frame is retained on Power On
Value=1: Base frame is reset in the data management on Power On.
Related to:
MD10615 \$MN_NCBFRAME_POWERON_MASK

24006	CHSFRAME_RESET_MASK	C03	K2
-	Active system frames after reset	DWORD	Reset
-			
-	-	0x1,0x1,0x1,0x1,0x1,0 x1,0x1,0x1,0x1...	0 0x00000FFF 0/0

Description: Bit mask used for the reset setting of the channel-specific system frames included in the channel.
Bit 0: System frame for actual value setting and scratching is active after reset.
Bit 1: System frame for external work offset is active after reset.
Bit 2: Reserved, for TCARR and PAROT see MD20150
\$MC_GCODE_RESET_VALUES[].
Bit 3: Reserved, for TOROT and TOFRAME see MD20150
\$MC_GCODE_RESET_VALUES[].
Bit 4: System frame for workpiece reference points is active after reset.

Channel-specific machine data

Bit 5: System frame for cycles is active after reset.
 Bit 6: Reserved; reset behavior dependent on MD20110
 \$MC_RESET_MODE_MASK.
 Bit 7: System frame \$P_ISO1FR (ISO G51.1 Mirror) is active after
 reset.
 Bit 8: System frame \$P_ISO2FR (ISO G68 2DROT) is active after
 reset.
 Bit 9: System frame \$P_ISO3FR (ISO G68 3DROT) is active after
 reset.
 Bit 10: System frame \$P_ISO4FR (ISO G51 Scale) is active after
 reset.
 Bit 11: System frame \$P_RELFRR is active after reset.
 Related to:
 MD28082 \$MC_MM_SYSTEM_FRAME_MASK

24007	CHSFRAME_RESET_CLEAR_MASK			C03	K2
-	Deletion of system frames after reset			DWORD	Reset
-					
802d-cu3	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	1/1
802d-ng2	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	1/1
802d-ng3	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	1/1
802d-tm1	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	0/0
802d-tm2	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	0/0
802d-tm3	-	0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0,0x0...	0	0x00000FFF	0/0

Description: Bit mask used to delete channel-specific system frames from the data management on reset.
 Bit 0: System frame for actual value setting and scratching is deleted on reset.
 Bit 1: System frame for external work offset is deleted on reset.
 Bit 2: Reserved, for TCARR and PAROT, see MD20150
 \$MC_GCODE_RESET_VALUES[].
 Bit 3: Reserved, for TOROT and TOFRAME, see MD20150
 \$MC_GCODE_RESET_VALUES[].
 Bit 4: System frame for workpiece reference points is deleted on reset.
 Bit 5: System frame for cycles is deleted on reset.
 Bit 6: Reserved; reset behavior depends on MD20110
 \$MC_RESET_MODE_MASK.
 Bit 7: System frame \$P_ISO1FR (ISO G51.1 Mirror) is deleted on reset.
 Bit 8: System frame \$P_ISO2FR (ISO G68 2DROT) is deleted on reset.
 Bit 9: System frame \$P_ISO3FR (ISO G68 3DROT) is deleted on reset.
 Bit 10: System frame \$P_ISO4FR (ISO G51 Scale) is deleted on reset.
 Bit 11: System frame \$P_RELFRR is deleted on reset.

2.3.4 Transformation definitions in channel

24100	TRAFO_TYPE_1		C07	F2,TE4,M1,K1,W1
-	Definition of transformation 1 in channel		DWORD	NEW CONF
-				
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	2/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	2/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	2/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	2/2

Description: This MD specifies the first available transformation in each channel.

The 4 low-value bits identify the specific transformation of a specific transformation group. The transformation group is identified by a number starting with the 5th bit.

Meaning:

0 No transformation

16 and higher

5-axis transformation with turnable tool

32 and higher

5-axis transformation with turnable workpiece

48 and higher

5-axis transformation with turnable tool and turnable workpiece

72

Generic 5-axis transformation. Type and kinematic data are determined by an associated, orientable tool carrier, see MD24582 \$MC_TRAFO5_TCARR_NO_1 and MD24682 \$MC_TRAFO5_TCARR_NO_2

The 4 low-value bits have the following meaning for a 5-axis transformation:

0 Axis sequence AB

1 Axis sequence AC

2 Axis sequence BA

3 Axis sequence BC

4 Axis sequence CA

5 Axis sequence CB

8 Generic orientation transformation (3- 5 axes)

256 and higher

TRANSMIT transformation

512 and higher

TRACYL transformation

1024 and higher

TRAANG transformation

2048

Example for TRACYL: see TRACYL Section

Not relevant:

no transformation

Related to:

MD24200 \$MC_TRAFO_TYPE_2

24120	TRAFO_GEOAX_ASSIGN_TAB_1			C07	F2,TE4,TE4,M1,K 1,W1
-	Assignment of the geometry axes to channel axes for transformation 1			BYTE	NEW CONF
-					
802d-cu3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-ng2	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-ng3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm1	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	0/0
802d-tm2	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2

Description: This MD states the channel axes on which the axes of the cartesian coordinate system are mapped for active transformation 1. Index i adopts the values 0, 1, 2 for TRANSMIT. It refers to the first, second and third geometry axis.

Not relevant:

No transformation

Application example:

MD20050 \$MC_TRAFO_GEOAX_ASSIGN_TAB_1[0]= 2 ; 2nd channel axis

Related to:

MD20050 \$MC_AXCONF_GEOAX_ASSIGN_TAB, if no transformation is active.

Channel-specific machine data

24130	TRAFO_INCLUDES_TOOL_1		C07	-
-	Tool handling with 1st active transformation		BOOLEAN	NEW CONF
-				
802d-cu3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-ng2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-ng3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-tm1	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	0/0
802d-tm2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-tm3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2

Description: This machine data states for each channel whether the tool is handled during the 1st transformation or externally. This machine data is evaluated only with specific transformations. It is evaluated on the condition that the orientation of the tool with reference to the Basic Coordinate System cannot be changed by the transformation. In standard transformations, only the "inclined-axis transformation" fulfills this condition. If this machine data is set, the Basic Coordinate System (BCS) refers to the tool reference point even with active transformations. Otherwise, it refers to the tool tip (Tool Center Point - TCP).

The method of operation of protection zones and working area limitations varies correspondingly.

Channel-specific machine data

24220	TRAFO_GEOAX_ASSIGN_TAB_2			C07	F2,M1
-	Assignment of geometry axes to channel axes for transformation 2			BYTE	NEW CONF
-					
802d-cu3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-ng2	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-ng3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm1	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	0/0
802d-tm2	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2
802d-tm3	3	0, 0, 0,0, 0, 0,0, 0, 0,0, 0, 0...	0	20	2/2

Description: This MD states the channel axes on which the axes of the cartesian coordinate system are mapped for active transformation 2. Otherwise the meaning corresponds to TRAFO_GEOAX_ASSIGN_TAB_1.

24230	TRAFO_INCLUDES_TOOL_2			C07	-
-	Tool handling with active 2nd transformation			BOOLEAN	NEW CONF
-					
802d-cu3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	2/2
802d-ng2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	2/2
802d-ng3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	2/2
802d-tm1	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	0/0
802d-tm2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	2/2
802d-tm3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-	2/2

Description: This machine data states for each channel whether the tool is handled during the 2nd transformation or externally. This machine data is evaluated only with specific transformations. It is evaluated on the condition that the orientation of the tool with reference to the Basic Coordinate System cannot be changed by the transformation. In standard transformations, only "inclined-axis transformation" fulfills this condition. If this machine data is set, the Basic Coordinate System (BCS) refers to the tool reference point even with active transformations. Otherwise, it refers to the tool tip (Tool Center Point - TCP). The method of operation of protection zones and working area limitations varies correspondingly.

Channel-specific machine data

24484	TRAFO_GEOAX_ASSIGN_TAB_10	C07	M1
-	Assignment of geometry axes to channel axes f. transformation 10	BYTE	NEW CONF
-			
-	3	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0...	20
			-1/7

Description: Assignment table of geometry axes with transformation 10
Same as AXCONF_GEOAX_ASSIGN_TAB, but only effective when transformation 10 is active.

24486	TRAFO_INCLUDES_TOOL_10	C07	-
-	Treatment of tool with active 10th transformation	BOOLEAN	NEW CONF
-			
-	-	TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE, TRUE...	-1/7

Description: Same as TRAFO_INCLUDES_TOOL_1, but for the 10th transformation.

24561	TRAFO6_JOINT_OFFSET_2_3_1	C07	F2
mm	Vector of kinematic offset	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: In the case of 6-axis transformations, defines the offset between the 2nd and third rotary axes for the 1st transformation of each channel.

24573	TRAFO5_AXIS3_1	C07	F2
-	Direction of the 3rd rotary axis	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: Indicates the vector which defines the direction of the third rotary axis in the case of the general 6-axis transformation (TRAFO_TYPE_* = 24, 40, 56, 57).
The vector may have any value except zero.
Example:
The same axis is defined with both (0, 1, 0) and (0, 7.21, 0) (in the direction of the 2nd geometry axis, that is as a rule Y).
Valid for the first orientation transformation of a channel.

Channel-specific machine data

24576	TRAF06_BASE_ORIENT_NORMAL_1	C07	F2
-	Normal tool vector in 6-axis transformation	DOUBLE	NEW CONF
-			
-	3	0.0, 1.0, 0.0, 0.0, 1.0, 0.0...	-1/7

Description: Indicates a vector that is perpendicular to the tool orientation (TRAF05_BASE_ORIENTATION_1) in the case of the general 6-axis transformation (TRAF0_TYPE_* = 24, 40, 56, 57).
If TRAF06_BASE_ORIENT_NORMAL_1 and TRAF05_BASE_ORIENTATION_1 are neither orthogonal nor parallel, then the two vectors are orthogonalized by modifying the normal vector. The two vectors must not be parallel.
The vector may have any value other than zero.
Valid for the first orientation transformation of a channel.

24661	TRAF06_JOINT_OFFSET_2_3_2	C07	-
mm	Vector of kinematic offset	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: As TRAF06_JOINT_OFFSET_2_3_1 but for the second transformation.

24673	TRAF05_AXIS3_2	C07	-
-	Direction of the 3rd rotary axis	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: As TRAF05_AXIS3_1 but for the second orientation transformation of a channel.

24676	TRAF06_BASE_ORIENT_NORMAL_2	C07	-
-	Normal tool vector	DOUBLE	NEW CONF
-			
-	3	0.0, 1.0, 0.0, 0.0, 1.0, 0.0...	-1/7

Description: As TRAF06_BASE_ORIENT_NORMAL_1 but for the second orientation transformation

Channel-specific machine data

24700	TRAANG_ANGLE_1		C07	M1
degrees	Angle between Cartesian axis and real (inclined) axis		DOUBLE	NEW CONF
-				
802d-cu3	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	2/2
802d-ng2	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	2/2
802d-ng3	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	2/2
802d-tm1	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-1/7
802d-tm2	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-1/7
802d-tm3	-	0.0,0.0,0.0,0.0,0.0,0.0, 0.0,0.0,0.0...	-	-1/7

Description: Indicates for the first agreed TRAANG transformation of the channel the angle of the inclined axis in degrees between the 1st machine axis and the 1st basic axis while TRAANG is active. The angle is measured positively clockwise.

Related to:

MD24750 \$MC_TRAANG_ANGLE_2

24710	TRAANG_BASE_TOOL_1		C07	M1
mm	Vector of base tool for 1st TRAANG transformation		DOUBLE	NEW CONF
-				
802d-cu3	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	2/2
802d-ng2	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	2/2
802d-ng3	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	2/2
802d-tm1	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	-1/7
802d-tm2	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	-1/7
802d-tm3	3	0.0, 0.0, 0.0,0.0, 0.0, 0.0...	-	-1/7

Description: Indicates a basic offset of the tools zero for the 1st TRAANG transformation. The offset is referenced to the geometry axes valid when TRAANG is active. The basic offset is included with and without selection of the tool length compensation. Programmed length corrections have an additive effect with respect to the basic tool.

The index *i* takes the values 0, 1, 2 for the 1st to 3rd geometry axes.

Related to:

MD24760 \$MC_TRAANG_BASE_TOOL_2

Channel-specific machine data

24720	TRAANG_PARALLEL_VELO_RES_1		C07	M1	
-	Velocity margin for 1st TRAANG transformation		DOUBLE	NEW CONF	
-					
802d-cu3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	2/2
802d-ng2	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	2/2
802d-ng3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	2/2
802d-tm1	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	-1/7
802d-tm2	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	-1/7
802d-tm3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	0.0	1.0	-1/7

Description: Indicates the axis velocity reserve for jog, positioning and oscillating movements for each channel for the first TRAANG transformation which is held ready on the parallel axis (see MD2.... \$MC_TRAFO_AXES_IN...[1]) for the compensating movement. Velocity reserve to be provided for jog, positioning and oscillating movements on the parallel axis to handle the compensating movement as a consequence of the inclined axis. 0.0 means that the control or the transformation itself determines the reserve according to the angle of the inclined axis and the velocity capacity of the inclined and parallel axes. - The criterion for this is that the same velocity limit has to be maintained in the direction of the parallel axis and the (virtual) axis at right-angles to it. >0.0 means that a fixed reserve has been set (MD24720 \$MC_TRAANG_PARALLEL_VELO_RES_1 * MD32000 \$MA_MAX_AX_VELO of the parallel axis). The velocity capacity in the virtual axis is determined by this. The lower MD24720 \$MC_TRAANG_PARALLEL_VELO_RES_1 has been set, the lower it is Related to:

MD24771 \$MC_TRAANG_PARALLEL_ACCEL_RES_2

Channel-specific machine data

24760	TRAANG_BASE_TOOL_2		C07	M1
mm	Vector of base tool for 2nd TRAANG transformation		DOUBLE	NEW CONF
-				
802d-cu3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2
802d-ng2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2
802d-ng3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2
802d-tm1	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-1/7
802d-tm2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-1/7
802d-tm3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-1/7

Description: Indicates a basic offset of the tools zero for the 2nd TRAANG transformation. The offset is referenced to the geometry axes valid when TRAANG is active. The basic offset is included with and without selection of the tool length compensation. Programmed length corrections have an additive effect with respect to the basic tool.

The index i takes the values 0, 1, 2 for the 1st to 3rd geometry axes.

Related to:

MD24710 \$MC_TRAANG_BASE_TOOL_1

24770	TRAANG_PARALLEL_VELO_RES_2		C07	M1
-	Velocity margin for 2nd TRAANG transformation		DOUBLE	NEW CONF
-				
802d-cu3	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	2/2
802d-ng2	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	2/2
802d-ng3	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	2/2
802d-tm1	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	-1/7
802d-tm2	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	-1/7
802d-tm3	-	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	1.0	-1/7

Description: Indicates the axis velocity reserve for jog, positioning and oscillating movements for each channel for the second TRAANG transformation which is held ready on the parallel axis (see MD2.... \$MC_TRAFO_AXES_IN_...[1]) for the compensating movement.

Related to:

MD24771 \$MC_TRAANG_PARALLEL_ACCEL_RES_2

Channel-specific machine data

24810	TRACYL_ROT_SIGN_IS_PLUS_1		C07	M1
-	Sign of rotary axis for 1st TRACYL transformation		BOOLEAN	NEW CONF
-				
802d-cu3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-ng2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-1/7
802d-ng3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	-1/7
802d-tm1	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	0/0
802d-tm2	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2
802d-tm3	-	TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE,TRUE...	-	2/2

Description: Indicates the sign with which the rotary axis is taken into account in the TRACYL transformation for the first agreed TRACYL transformation.

Related to:

MD24860 \$MC_TRACYL_ROT_SIGN_IS_PLUS_2

24820	TRACYL_BASE_TOOL_1		C07	M1
mm	Vector of base tool for 1st TRACYL transformation		DOUBLE	NEW CONF
-				
802d-cu3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2
802d-ng2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-1/7
802d-ng3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-1/7
802d-tm1	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	0/0
802d-tm2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2
802d-tm3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	2/2

Description: Indicates a basic offset of the tools zero for the 1st TRACYL transformation. The offset is referenced to the geometry axes valid when TRACYL is active. The basic offset is included with and without selection of the tool length compensation. Programmed length corrections have an additive effect with respect to the basic tool.

The index *i* takes the values 0, 1, 2 for the 1st to 3rd geometry axes.

Related to:

MD24870 \$MC_TRACYL_BASE_TOOL_2

Channel-specific machine data

24870	TRACYL_BASE_TOOL_2			C07	M1
mm	Vector of base tool for 2nd TRACYL transformation			DOUBLE	NEW CONF
-					
802d-cu3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	2/2
802d-ng2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	-1/7
802d-ng3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	-1/7
802d-tm1	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	0/0
802d-tm2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	2/2
802d-tm3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-	-	2/2

Description: Indicates a basic offset of the tools zero for the 2ndTRACYL transformation. The offset is referenced to the geometry axes valid when TRACYL is active. The basic offset is included with and without selection of the tool length compensation. Programmed length corrections have an additive effect with respect to the basic tool.

The index i takes the values 0, 1, 2 for the 1st to 3rd geometry axes.

Related to:

MD24820 \$MC_TRACYL_BASE_TOOL_1

24900	TRANSMIT_ROT_AX_OFFSET_1			C07	M1
degrees	Offset of rotary axis for the 1st TRANSMIT transformation			DOUBLE	NEW CONF
-					
802d-cu3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	2/2
802d-ng2	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	0/0
802d-ng3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	0/0
802d-tm1	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	0/0
802d-tm2	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	2/2
802d-tm3	-	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0...	-	-	2/2

Description: Indicates the offset of the rotary axis for the first agreed TRANSMIT transformation in degrees in relation to the neutral position while TRANSMIT is active.

Related to:

MD24950 \$MC_TRANSMIT_ROT_AX_OFFSET_2

Channel-specific machine data

24911	TRANSMIT_POLE_SIDE_FIX_1			C07	M1
-	Restr. working range before/behind the pole, 1. TRANSMIT			BYTE	NEW CONF
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	0/0
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	0/0
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	2	2/2

Description: Restriction of the working area in front of/behind pole or no restriction, i.e. traversal through the pole.
The assigned values have the following meanings:
1: Working area of linear axis for positions ≥ 0 ,
(if tool length compensation parallel to linear axis equals 0)
2: Working area of linear axis for positions ≤ 0 ,
(if tool length compensation parallel to linear axis equals 0)
0: No restriction of working area. Traversal through pole.

24920	TRANSMIT_BASE_TOOL_1			C07	M1
mm	Vector of base tool for 1st TRANSMIT transformation			DOUBLE	NEW CONF
-					
802d-cu3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	2/2
802d-ng2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	0/0
802d-ng3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	0/0
802d-tm1	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	0/0
802d-tm2	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	2/2
802d-tm3	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	2/2

Description: Indicates a basic offset of the tools zero for the 1st TRANSMIT transformation. The offset is referenced to the geometry axes valid when TRANSMIT is active. The basic offset is included with and without selection of the tool length compensation. Programmed length corrections have an additive effect with respect to the basic tool.

The index i takes the values 0, 1, 2 for the 1st to 3rd geometry axes.

Related to:

MD24970 \$MC_TRANSMIT_BASE_TOOL_2

Channel-specific machine data

25273	TRAF05_AXIS3_3	C07	-
-	Direction of the 3rd rotary axis	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: The MD designates the vector that describes the direction of the third rotary axis with the general 6-axis transformation (TRAF0_TYPE_* = 24, 40, 56, 57).
Other than that it has the same meaning as TRAF05_AXIS3_1.

25276	TRAF06_BASE_ORIENT_NORMAL_3	C07	-
-	Normal tool vector in 6-axis transformation	DOUBLE	NEW CONF
-			
-	3	0.0, 1.0, 0.0, 0.0, 1.0, 0.0...	-1/7

Description: Indicates the vector that stands vertically on the tool orientation (TRAF05_BASE_ORIENTATION_1) in general 6-axis transformation (TRAF0_TYPE_* = 24, 40, 56, 57).
Other than that it has the same meaning as TRAF06_BASE_ORIENT_NORMAL_1.

25361	TRAF06_JOINT_OFFSET_2_3_4	C07	-
mm	Vector of kinematic offset	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: In the case of 6-axis transformations, defines the offset between the 2nd and third rotary axes for the 4th transformation of each channel.

25373	TRAF05_AXIS3_4	C07	-
-	Direction of the 3rd rotary axis	DOUBLE	NEW CONF
-			
-	3	0.0, 0.0, 0.0, 0.0, 0.0, 0.0...	-1/7

Description: The MD designates the vector that describes the direction of the third rotary axis with the general 6-axis transformation (TRAF0_TYPE_* = 24, 40, 56, 57).
Other than that it has the same meaning as TRAF05_AXIS3_1.

25376	TRAF06_BASE_ORIENT_NORMAL_4	C07	-
-	Normal tool vector in 6-axis transformation	DOUBLE	NEW CONF
-			
-	3	0.0, 1.0, 0.0, 0.0, 1.0, 0.0...	-1/7

Description: Indicates the vector that stands vertically on the tool orientation (TRAF05_BASE_ORIENTATION_1) in general 6-axis transformation (TRAF0_TYPE_* = 24, 40, 56, 57).
Other than that it has the same meaning as TRAF06_BASE_ORIENT_NORMAL_1.

Channel-specific machine data

2.3.5 Punching and nibbling

26000	PUNCHNIB_ASSIGN_FASTIN			C01, C09	N4
-	Hardware assignment for input byte for stroke control			DWORD	PowerOn
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2

Description: Assignment of the high-speed input byte for "punching and nibbling"

Bit 0-7: Number of the input byte used
 Bit 8-15: Free
 Bit 16-23: Inversion mask for writing the hardware byte
 Bit 24-31: Free

This data defines which input byte is to be used for the signal "travel active".

= 1:
 On-board inputs (4 high-speed NCK outputs) are used.
 2, 3, 4, 5
 The external digital NCK inputs are used

128-129:
 Comparator byte (results from high-speed analog inputs or VDI specification)

Related to:
 MD26006 \$MC_NIBBLE_PUNCH_INMASK[n]

References:
 /FB/, A4, Digital and Analog NCK I/Os

The signal is high active as default from software 3.2. That is there is wire break monitoring. If the signal is low active then, e.g., the MD must be set to the value MD ="H 0001 0001" for the outboard inputs.

Channel-specific machine data

26002	PUNCHNIB_ASSIGN_FASTOUT			C01, C09	N4
-	Hardware assignment for output byte for stroke control			DWORD	PowerOn
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2

Description: This data defines which output byte is to be used for the stroke control.

Number of the high-speed output byte for "punching and nibbling"

Bit 0-7: Number of the output byte used

Bit 8-15: Free

Bit 16-23: Inversion mask for writing the hardware byte

Bit 24-31: Free

Possible inputs:

1:

840D on-board outputs (4 high-speed + 4 bits via VDI specification)

2, 3, 4, 5

External digital outputs (high-speed NCK O/I or VDI specification)

Related to:

MD26004 \$MC_NIBBLE_PUNCH_OUTMASK[n]

References:

/FB/, A4, Digital and Analog NCK I/Os

26004	NIBBLE_PUNCH_OUTMASK			C01, C09	N4
-	Mask for fast output bits			BYTE	PowerOn
-					
802d-cu3	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	2/2
802d-ng2	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	2/2
802d-ng3	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	2/2
802d-tm1	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	-1/2
802d-tm2	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	-1/2
802d-tm3	8	1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0	-	-	-1/2

Description: Mask for high-speed output bits for punching and nibbling.

Byte 1: Contains the bit for stroke release

Bytes 2-8: Currently free

Channel-specific machine data

26008	NIBBLE_PUNCH_CODE			C09	H2,K1
-	Definition of M functions			DWORD	PowerOn
-					
802d-cu3	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	2/2
802d-ng2	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	2/2
802d-ng3	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	2/2
802d-tm1	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	-1/2
802d-tm2	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	-1/2
802d-tm3	8	0,23,22, 25, 26, 0, 0, 0,0, 0, 0, 0, 0, 0, 0...	-	-	-1/2

Description: This data defines the special M functions for punching and nibbling.

	Standard value	Example
NIBBLE_PUNCH_CODE[0] = 0 with M20	20	End punching, nibbling
NIBBLE_PUNCH_CODE[1] = 23 with M23	23	End punching, nibbling
NIBBLE_PUNCH_CODE[2] = 22	22	Start nibbling
NIBBLE_PUNCH_CODE[3] = 25	25	Start punching
NIBBLE_PUNCH_CODE[4] = 26	26	Activate dwell time
NIBBLE_PUNCH_CODE[5] =122	122	Start nibbling with pre- tension, stroke control at servo level
NIBBLE_PUNCH_CODE[6] =125	125	Start punching with pre- tension, stroke control at servo level
NIBBLE_PUNCH_CODE[7] = 0	0	Not used (in preparation)

Special cases:

If MD26012 \$MC_PUNCHNIB_ACTIVATION = 2 (M functions are interpreted directly by the software), then MD26008 \$MC_NIBBLE_PUNCH_CODE[0] =20 has to be set.

Related to:

MD26012 \$MC_PUNCHNIB_ACTIVATION

Channel-specific machine data

26010	PUNCHNIB_AXIS_MASK			C09	N4
-	Definition of punching and nibbling axes			DWORD	PowerOn
-					
802d-cu3	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng2	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng3	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-tm1	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm2	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm3	-	7,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2

Description: Defines the axes involved in punching and nibbling. That is all the axes defined here must be at rest during punching and nibbling.

Related to:

MD26016 \$MC_PUNCH_PARTITION_TYPE

26012	PUNCHNIB_ACTIVATION			C09	K1
-	Activation of punching and nibbling functions			DWORD	PowerOn
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2

Description: This MD defines the ways in which punching and nibbling functions can be activated:

PUNCHNIB_ACTIVATION = 0

None of the punching or nibbling functions can be activated. The automatic path segmentation is the only exception - if it is enabled via MD26014 \$MC_PUNCH_PATH_SPLITTING.

PUNCHNIB_ACTIVATION = 1

The functions are activated via language commands. If M functions are to be used, then they must be programmed using macros.

PUNCHNIB_ACTIVATION = 2

The M functions are interpreted directly by the software. Language commands can still be used.

Note:

This option is intended only as a temporary solution.

Related to:

MD26014 \$MC_PUNCH_PATH_SPLITTING

MD26008 \$MC_NIBBLE_PUNCH_CODE[n]

Channel-specific machine data

26016	PUNCH_PARTITION_TYPE			C09	N4
-	Behavior of individual axes with automatic path segmentation			DWORD	PowerOn
-					
802d-cu3	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng2	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-ng3	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	2/2
802d-tm1	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm2	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2
802d-tm3	-	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	-	-	-1/2

Description:

This machine data defines how single axes that are also nibbling axes within the meaning of MD26010 \$MC_PUNCHNIB_AXIS_MASK are to behave.

In this case, there are the following options for the behavior of the single axes during automatic path segmentation and stroke control:

PUNCH_PARTITION_TYPE = 0

No special behavior during automatic path segmentation. If the single axes are programmed together with path axes in one block, then their total traversing path is split up corresponding to the path axes. That is the pure geometric relationship between the single axes and path axes is identical to the undivided motion. If the single axes are programmed without the path axes but with SPN=<value>, then the path is divided according to the programmed SPN value.

PUNCH_PARTITION_TYPE = 1

In this case, the path of the single axes, if they are programmed together with path axes, are generally traversed in the first section (that is independently of the currently active type of interpolation).

PUNCH_PARTITION_TYPE = 2

In this case, the single axes behave with linear interpolation in the same way as with PUNCH_PARTITION_TYPE = 1, and with all other types of interpolation in the same way as with PUNCH_PARTITION_TYPE = 0.

Related to:

MD26010 \$MC_PUNCHNIB_AXIS_MASK

26018	NIBBLE_PRE_START_TIME			C09	N4
s	Delay time for nibbling/punching with G603			DOUBLE	PowerOn
-					
802d-cu3	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-ng2	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-ng3	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	2/2
802d-tm1	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	-1/2
802d-tm2	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	-1/2
802d-tm3	-	0.,0.,0.,0.,0.,0.,0.,0.,0., 0.,0.,0.,0....	-	-	-1/2

Description: To minimize any dead times due to the reaction time of the punching unit, it is possible to release the stroke before reaching the in-position window of the axes. The reference time for this is the interpolation end. Since there is normally a delay of some interpolation cycles after reaching the interpolation end (depending on the machine dynamics) until the axes actually come into position, the prestart time is a delay time with respect to reaching the interpolation end.

The function is therefore coupled to G603 (block change at the end of interpolation).

The time can be set via the machine data NIBBLE_PRE_START_TIME).

Example:

With an interpolation cycle of 5 ms, a stroke shall be released 2 cycles after reaching the interpolation end. In this case, the value 0.010 s must be selected for NIBBLE_PRE_START_TIME. If a value that is not integrally divisible by the set interpolation time is selected, then the stroke is initiated in the interpolation cycle following the set time.

Channel-specific machine data

27860	PROCESSTIMER_MODE	C09	K1
-	Activation of program runtime measurement	DWORD	Reset
-			
-	-	0x07	0
		0x3FF	2/2

Description: Timers are provided as system variables under the function program runtime. While the NCK-specific timers are always activated (for time measurements since the last control power on), the channel-specific timers have to be started via this machine data.

Meaning:

Bit 0 = 0
No measurement of total operating time for any part program

Bit 0 = 1
Measurement of total operating time is active for all part programs (\$AC_OPERATING_TIME)

Bit 1 = 0
No measurement of current program runtime

Bit 1 = 1
Measurement of current program runtime is active (\$AC_CYCLE_TIME)

Bit 2 = 0
No measurement of tool operating time

Bit 2 = 1
Measurement of tool operating time is active (\$AC_CUTTING_TIME)

Bit 3
Reserved

Bits 4,5 only when bit 0, 1, 2 = 1:

Bit 4 = 0 No measurement with active dry run feed

Bit 4 = 1 Measurement also with active dry run feed

Bit 5 = 0 No measurement with program test

Bit 5 = 1 Measurement also with program test

Bit 6 only when Bit 1 = 1:

Bit 6 = 0
Delete \$AC_CYCLE_TIME also with start by ASUB and PROG_EVENTS

Bit 6 = 1
\$AC_CYCLE_TIME is not deleted on start by ASUB and PROG_EVENTS.

Bit 7 only when bit 2 = 1:

Bit 7 = 0 \$AC_CUTTING_TIME counts only with active tool

Bit 7 = 1 \$AC_CUTTING_TIME counts irrespective of tool

Bits 8 only when bit 1 = 1

Bit 8 = 0
\$AC_CYCLE_TIME is not deleted on jumping to program start with GOTOS

Bit 8 = 1
\$AC_CYCLE_TIME is deleted on jumping to program start with GOTOS.

Bit 9 only when bits 0, 1 = 1:

Bit 9 = 0
\$AC_OPERATING_TIME, \$AC_CYCLE_TIME: No measurement with override = 0.

Bit 9 = 1
\$AC_OPERATING_TIME, \$AC_CYCLE_TIME: Measurement also with over-

Bit 10 = 0:\$AC_ACTUAL_PARTS also active with program test/block search
 Bit 10 = 1:No machining \$AC_ACTUAL_PARTS with program test/block search
 Bit 11 = 1:counter \$AC_ACTUAL_PARTS is incremented by 1 when jumping back with GOTOS
 Bit 12 - 15:Activating \$AC_SPECIAL_PARTS

 Bit 12 = 1:Counter \$AC_SPECIAL_PARTS is active
 Further significance of bits 13-15 only when bit 12 =1 and \$AC_REQUIRED_PARTS > 0:
 Bit 13 = 0:Counter \$AC_SPECIAL_PARTS is incremented by 1 with a VDI output of M02/M30
 Bit 13 = 1:Counter \$AC_SPECIAL_PARTS is incremented by 1 with output of the M command from MD PART_COUNTER_MCODE[2]
 Bit 14 = 0:\$AC_SPECIAL_PARTS also active with program test/block search
 Bit 14 = 1:No machining \$AC_SPECIAL_PARTS with program test/block search
 Bit 15 = 1:counter \$AC_SPECIAL_PARTS is incremented by 1 when jumping back with GOTOS
 Related to:
 MD27882 \$MC_PART_COUNTER_MCODE

27882	PART_COUNTER_MCODE			C09	K1
-	Workpiece counting with user-defined M command			BYTE	PowerOn
-					
-	3	2, 2, 2, 2, 2, 2, 2, 2, 2, 2...	0	99	3/2

Description: If part counting is activated via MD27880 \$MC_PART_COUNTER, the count pulse can be triggered by a special M command. Only then are the values defined here taken into account:
 Meaning:
 The part counters are incremented by 1 in the NST signal output of the M command described, where:
 MD27882 \$MC_PART_COUNTER_MCODE[0] for \$AC_TOTAL_PARTS
 MD27882 \$MC_PART_COUNTER_MCODE[1] for \$AC_ACTUAL_PARTS
 MD27882 \$MC_PART_COUNTER_MCODE[2] for \$AC_SPECIAL_PARTS

2.3.6 Channel-specific memory settings

28000	MM_REORG_LOG_FILE_MEM		EXP, C02	V2,K1
-	Memory space for REORG (DRAM)		DWORD	PowerOn
-				
-	-	100,100,100,100,100, 100,100,100,100...	1	500 0/0

Description: Definition of the size (in kbyte) of the dynamic memory for the REORG-LOG data. The size of the memory determines the quantity of the data available for the function REORG.

References:

/FB/, K1, "Mode Groups, Channel, Program Operation"

28010	MM_NUM_REORG_LUD_MODULES		EXP, C02	V2,K1
-	Number of blocks for local user variables in REORG (DRAM)		DWORD	PowerOn
-				
-	-	8,8,8,8,8,8,8,8,8,8, 8,8,8,8	0	SLMAXNUMBER OF_USERMODU LES 1/1

Description: Defines the number of additional LUD data blocks available for the function REORG (see Description of Functions, Channels, Mode Groups, Program Operation (K1)).

This value can be 0 if the function REORG is not used. The CNC always opens 12 LUD data blocks, of which 8 are used for NC programs and 4 for the ASUBs.

An LUD data block is needed for each NC program and ASUB in which a local user variable is defined. This value may have to be increased for the function REORG if a large IPO buffer is present and a large number of short NC programs in which LUD variables are defined are active (prepared NC blocks of the programs are located in the IPO buffer).

An LUD data block is needed for each of these programs. The size of the reserved memory is affected by the number of LUDs per NC program and their individual memory requirements. The LUD data blocks are stored in the dynamic memory.

The memory requirement for managing the blocks for local user variables with REORG can be determined as follows:

The size of the LUD blocks depends on the number of active LUDs and their data type. The memory for the LUD blocks is limited by the MD28000 \$MC_MM_REORG_LOG_FILE_MEM (memory size for REORG).

Channel-specific machine data

28020	MM_NUM_LUD_NAMES_TOTAL	C02	V2,K1
-	Number of local user variables (DRAM)	DWORD	PowerOn
-			
-	-	400,400,400,400,400, 0 400,400,400,400...	32000 1/1

Description: Defines the number of variables for the local user data (LUD) which are permitted to exist in the active sections of the program. Approximately 150 bytes of memory per variable are reserved for the names of the variables and the variable values. The memory required for the variable value is equal to the size of the data type. If the total of the local user variables from the active main program and the related subprograms is larger than the defined limit, the variables which are over the limit are not accepted during execution of the program. Dynamic memory is used for the variable names and variable values.

Overview of the memory used by the data types:

Data type	Memory used
REAL	8 bytes
INT	4 bytes
BOOL	1 byte
CHAR	1 byte
STRING	1 byte per character, 200 characters per string are possible
AXIS	4 bytes
FRAME	400 bytes

28040	MM_LUD_VALUES_MEM	C02	V2,K1
-	Memory space for local user variables (DRAM)	DWORD	PowerOn
-			
-	-	50,50,50,50,50,50, 0 50,50,50,50,50,50...	32000 1/1

Description: This MD defines the amount of memory space available for LUD variables.

The maximum number of available LUDs is given by one of the limit values of MD28020 \$MC_MM_NUM_LUD_NAMES_TOTAL or MD28040 \$MC_MM_LUD_VALUES_MEM.

The memory defined here is subdivided into $(MD28040 \$MC_MM_LUD_VALUES_MEM * 1024) / MD18242 \$MN_MM_MAX_SIZE_OF_LUD_VALUE$ blocks, and allocated to part programs which request memory. Each part program that contains at least one definition of an LUD variable or call parameters uses at least one such block.

It should be remembered that several part programs requiring memory can be open simultaneously in the NCK. The number depends on the type of programming, the program length, and the size of the internal NCK block memory upwards of (MD28060 \$MC_MM_IPO_BUFFER_SIZE, MD28070 \$MC_MM_NUM_BLOCKS_IN_PREP).

Related to:

MD28020 \$MC_MM_NUM_LUD_NAMES_TOTAL
(number of local user variables (DRAM))

Channel-specific machine data

28050	MM_NUM_R_PARAM	C02	K1
-	Number of channel-specific R parameters (SRAM)	DWORD	PowerOn
-			
-	-	300	0
		32535	0/0

Description: Defines the number of R parameters available in the channel. A maximum of 32535 R parameters are available per channel. This machine data reserves 8 bytes of buffered user memory per R parameter.

R parameters have a considerably lower management overhead in comparison to LUD and GUD variables.

Attention:

The buffered data are lost when this machine data is changed!

28060	MM_IPO_BUFFER_SIZE	C02	B1,K1
-	Number of NC blocks in IPO buffer (DRAM)	DWORD	PowerOn
-			
802d-cu3	-	100	2
802d-ng2	-	50	2
802d-ng3	-	100	2
802d-tm1	-	20	2
802d-tm2	-	50	2
802d-tm3	-	100	2

Description: Defines the number of blocks for the interpolation buffer. This buffer contains prepared NC blocks available for the interpolation. A number of kbytes of the dynamic user memory are reserved for each NC block. The data also limits the number of blocks for look ahead consideration of speed limitation for the LookAhead function.

MD28060 \$MC_MM_IPO_BUFFER_SIZE is set by the system.

Related to:

MD28070 \$MC_MM_NUM_BLOCKS_IN_PREP
(number of blocks for block preparation)

Channel-specific machine data

28082	MM_SYSTEM_FRAME_MASK			C02	M5,K2,W1
-	System frames (SRAM)			DWORD	PowerOn
-					
802d-cu3	-	0x7A1,0x7A1,0x7A1,0x7A1,0x7A1,0x7A1...	0	0x00000FFF	1/1
802d-ng2	-	0x21,0x21,0x21,0x21,0x21,0x21,0x21,0x21...	0	0x00000FFF	1/1
802d-ng3	-	0x21,0x21,0x21,0x21,0x21,0x21,0x21,0x21...	0	0x00000FFF	1/1
802d-tm1	-	0x7A1,0x7A1,0x7A1,0x7A1,0x7A1,0x7A1...	0	0x00000FFF	1/1
802d-tm2	-	0x7A1,0x7A1,0x7A1,0x7A1,0x7A1,0x7A1...	0	0x00000FFF	1/1
802d-tm3	-	0x7A1,0x7A1,0x7A1,0x7A1,0x7A1,0x7A1...	0	0x00000FFF	1/1

Description: Bit mask for configuring channel-specific system frames included in the channel.

Bit 0: System frame for setting actual value and scratching
 Bit 1: System frame for external work offset
 Bit 2: System frame for TCARR and PAROT
 Bit 3: System frame for TOROT and TOFRAME
 Bit 4: System frame for workpiece reference points
 Bit 5: System frame for cycles
 Bit 6: System frame for transformations
 Bit 7: System frame \$P_ISO1FR for ISO G51.1 Mirror
 Bit 8: System frame \$P_ISO2FR for ISO G68 2DROT
 Bit 9: System frame \$P_ISO3FR for ISO G68 3DROT
 Bit 10: System frame \$P_ISO4FR for ISO G51 Scale
 Bit 11: System frame \$P_RELFR for relative coordinate systems

28083	MM_SYSTEM_DATAFRAME_MASK			C02	-
-	System frames (SRAM)			DWORD	PowerOn
-					
-	-	0xF9F,0xF9F,0xF9F,0xF9F,0xF9F,0xF9F...	0	0x00000FFF	1/1

Description: Bit mask for configuring channel-specific system frames in the data storage (SRAM).

Bit 0: System frame for setting actual value and scratching
 Bit 1: System frame for external work offset
 Bit 2: System frame for TCARR and PAROT
 Bit 3: System frame for TOROT and TOFRAME
 Bit 4: System frame for workpiece reference points
 Bit 5: System frame for cycles
 Bit 6: System frame for transformations
 Bit 7: System frame \$P_ISO1FR for ISO G51.1 Mirror
 Bit 8: System frame \$P_ISO2FR for ISO G68 2DROT
 Bit 9: System frame \$P_ISO3FR for ISO G68 3DROT
 Bit 10: System frame \$P_ISO4FR for ISO G51 Scale
 Bit 11: System frame \$P_RELFR for relative coordinate systems

Channel-specific machine data

28210	MM_NUM_PROTECT_AREA_ACTIVE		C11, C02, C06, C09	A3	
-	Number of simultaneously active protection zones in one channel		DWORD	PowerOn	
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	1/1
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	1/1
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	1/1
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	-1/2
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	-1/2
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	10	-1/2

Description: This machine data defines the number of protection zones that may be activated simultaneously for each channel.

It is not practical to enter a numerical value higher than MD18190
 $\$MN_MM_NUM_PROTECT_AREA_NCK + MD28200$
 $\$MC_MM_NUM_PROTECT_AREA_CHAN$.

Related to:

MD28200 $\$MC_MM_NUM_PROTECT_AREA_CHAN$

(Number of blocks for channel-specific protection zones)

MD18190 $\$MN_MM_NUM_PROTECT_AREA_NCK$

(Number of files for machine-related protection zones (SRAM))

References:

/FB1/ Function Manual Basic Functions; Axis Monitoring, Protection Zones (A3)

Channel-specific machine data

28255	MM_BUFFERED_AC_PARAM			C02	2.3.6.1
-	\$AC_PARAM[] is stored in SRAM.			DWORD	PowerOn
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	1/1
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	1/1
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0

Description: \$AC_PARAM[] is stored in SRAM.

28256	MM_NUM_AC_MARKER			C02	2.3.6.1
-	Dimension of \$AC_MARKER			DWORD	PowerOn
-					
802d-cu3	-	8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8	0	20000	2/2
802d-ng2	-	8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8	0	20000	1/1
802d-ng3	-	8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8,8	0	20000	1/1
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20000	0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20000	0/0
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	20000	0/0

Description: Number of channel-specific markers \$AC_MARKER for motion-synchronous actions.

DRAM or SRAM is required depending on MD28257
\$MC_MM_BUFFERED_AC_MARKER.

28257	MM_BUFFERED_AC_MARKER			C02	2.3.6.1
-	\$AC_MARKER[] is stored in SRAM.			DWORD	PowerOn
-					
802d-cu3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	2/2
802d-ng2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	1/1
802d-ng3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	1/1
802d-tm1	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0
802d-tm2	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0
802d-tm3	-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0	1	0/0

Description: \$AC_MARKER[] is stored in SRAM.

Channel-specific machine data

28400	MM_ABSBLOCK	EXP, C02	K1
-	activate block display w. absolute values	DWORD	PowerOn
-			
-	-	0,0,0,0,0,0,0,0,0	0
		512	2/2

Description: Value:
0: Block display with absolute values deactivated
1: Block display with absolute values activated;
A display buffer of the following size is created:
(MD28257 \$MC_MM_BUFFERED_AC_MARKER + MD28070
\$MC_MM_NUM_BLOCKS_IN_PREP) * 256 bytes
>= 128:Block display with absolute values activated;
A display buffer of the following size is created:
(MD28060 \$MC_MM_IPO_BUFFER_SIZE + MD28070
\$MC_MM_NUM_BLOCKS_IN_PREP) * <value>

28402	MM_ABSBLOCK_BUFFER_CONF	EXP, C02	K1
-	Setting of upload buffer size	DWORD	PowerOn
-			
-	2	0, 0,0, 0,0, 0,0, 0,0, 0,0, 0,0, 0,0, 0,0, 0...	0
		32000	2/2

Description: Dimensioning the size of the upload buffer:
MD28402 \$MC_MM_ABSBLOCK_BUFFER_CONF[0] : Number of blocks before the current block
MD28402 \$MC_MM_ABSBLOCK_BUFFER_CONF[1] : Number of blocks after the current block
The machine data is tested for the following upper / lower limits during startup:
0 <= MD28402 \$MC_MM_ABSBLOCK_BUFFER_CONF[0] <= 8
0 <= MD28402 \$MC_MM_ABSBLOCK_BUFFER_CONF[1] <= (MD28060 \$MC_MM_IPO_BUFFER_SIZE + MD28070 \$MC_MM_NUM_BLOCKS_IN_PREP)
Alarm 4152 is issued when the limits are violated.

28500	MM_PREP_TASK_STACK_SIZE	EXP, C02	K1
-	Stack size of preparation task (DRAM)	DWORD	PowerOn
-			
-	-	70,70,70,70,70,70,70, 70,70,70,70,70,70...	70
		500	0/0

Description: Defines the stack size in kbytes for the preparation task. The stack is stored in the dynamic memory.
Note:
This machine data is assigned internally by the control and must not be altered by the user.

28502	MM_INT_TASK_STACK_SIZE	EXP, C02	-
-	Stack size for interpreter subtask (kB).	DWORD	PowerOn
-			
-	-	20,20,20,20,20,20,20, 20,20,20,20,20,20...	20
		40	0/0

Description: Definition of the stack size (kByte) for the interpreter subtask.

2.4 Axis-specific machine data

Number	Identifier			Display filters	Reference
Unit	Name			Data type	Active
Attributes					
System	Dimension	Default value	Minimum value	Maximum value	Protection

Description: Description

2.4.1 Configuration

30100	CTRL_OUT_SEGMENT_NR			EXP, A01	G2,S9
-	Setpoint assignment: bus segment number			BYTE	PowerOn
-					
-	1	5	0	5	2/2

Description: In this MD enter the number of the bus segment through which the output is addressed.

- 0: Local bus (for 802D MCPA)
- 1: SIMODRIVE611D drive bus for SINUMERIK 840D/810D (1st DCM)
- 2: reserved (previously local P bus)
- 3: reserved (previously 611D bus, 2nd DCM)
- 4: reserved (virtual buses)
- 5: PROFIBUS/PROFINET (e.g. SINUMERIK 840Di)
- 6: reserved (same effect as 5)

30110	CTRL_OUT_MODULE_NR			A01, A11, -	G2,S9
-	Setpoint assignment: module number			BYTE	PowerOn
-					
802d-cu3	1	1,2,3,4,5,6,7,8,9,10,11 ,12,13,14,15,16,17,18. ..	1	31	2/2
802d-ng2	1	3,2,4,1	1	31	2/2
802d-ng3	1	3,2,4,1	1	31	2/2
802d-tm1	1	2,3,4,1	1	31	2/2
802d-tm2	1	2,3,4,1	1	31	2/2
802d-tm3	1	2,3,4,1	1	31	2/2

Description: Enter in this MD the number of the module within a bus segment through which the output is addressed.
For axes on the PROFIBUS/PROFINET, the number of the drive assigned with MD13050 \$MN_DRIVE_LOGIC_ADDRESS must be entered here (MD30110 \$MA_CTRL_OUT_MODULE_NR=n consequently points to MD13050 \$MN_DRIVE_LOGIC_ADDRESS[n]).

Axis-specific machine data

30120	CTRL_OUT_NR	EXP, A01, -	G2
-	Setpoint assignment: Setpoint output on drive submodule/module	BYTE	PowerOn
-			
-	1	1	1
-			3
-			2/2

Description: Number of the output on a module, through which the setpoint output is addressed.
Index [n] of the machine data has the following coding: [setpoint branch]: 0

30130	CTRL_OUT_TYPE	A01, A11	G2, M3, S9
-	Output type of setpoint	BYTE	PowerOn
-			
-	1	0	0
-			3
-			2/2

Description: The type of speed setpoint output is entered in this MD:
0: Simulation (no hardware required)
1: Setpoint output active (differentiated by hardware configuration)
Index [n] of the machine data has the following coding: [setpoint branch]: 0.

30132	IS_VIRTUAL_AX	A01	M3, TE1, TE3
-	Axis is a virtual axis	BOOLEAN	PowerOn
CTEQ			
-	1	FALSE	-
-			-
-			1/1

Description: Virtual axis. An axis that is also interpolated in follow-up mode. (Electronic transfer technology; virtual and real master values.)
This MD is the successor to MD30130 \$MA_CTRL_OUT_TYPE=4. MD30130 \$MA_CTRL_OUT_TYPE=0 and MD30132 \$MA_IS_VIRTUAL_AX=1 must now be used instead of MD30130 \$MA_CTRL_OUT_TYPE=4.
Related to:
MD30130 \$MA_CTRL_OUT_TYPE

30134	IS_UNIPOLAR_OUTPUT	A01	G2
-	Setpoint output is unipolar	BYTE	PowerOn
-			
-	1	0	0
-			2
-			2/2

Description: Only for PROFIdrive, special application of analog additional drives:
Unipolar output driver (for unipolar analog drive actuator):
Only positive set speeds are supplied to the drive, the sign of the set speed is separately output in its own digital control signal.
Input value "0":
Bipolar output with pos./neg. set speed (this is the normal case)
Input value "1":
0. Digital bit = servo enable
1. Digital bit = neg. direction of travel
Input value "2": (linking of enable and direction of travel signals):
0. Digital bit = servo enable pos. direction of travel
1. Digital bit = servo enable neg. direction of travel

Axis-specific machine data

30200	NUM_ENCS			A01, A02, -	G2,R1,Z1
-	Number of encoders			BYTE	PowerOn
-					
-	-	1	0	1	2/2

Description: 0: without measuring system (possible with spindle)
1: spindle / axis with measuring system (in motor or directly)

30210	ENC_SEGMENT_NR			EXP, A01, A02	G2
-	Actual value assignment: bus segment number.			BYTE	PowerOn
-					
-	1	5, 5	5	5	-1/2

Description: Number of the bus segment, through which the encoder is addressed. The bus segments must be firmly assigned to the control systems.
0: reserved (previously local bus)
1: SIMODRIVE611D drive bus for SINUMERIK 840D/810D (1st DCM)
2: reserved (previously local P bus)
3: reserved (previously 611D bus, 2nd DCM)
4: reserved (virtual buses)
5: PROFIBUS/PROFINET (e.g. SINUMERIK 840Di)
6: reserved (same effect as 5)
Index [n] has the following coding [Encodernr.]: 0 or 1

30220	ENC_MODULE_NR			A01, A02, A11	G2
-	Actual value assignment: Drive number/measuring circuit number			BYTE	PowerOn
-					
802d-cu3	1	1, 1,2, 2,3, 3,4, 4,5, 5,6, 6,7, 7...	1	31	2/2
802d-ng2	1	3, 3,2, 2,4, 4,1, 1	1	31	2/2
802d-ng3	1	3, 3,2, 2,4, 4,1, 1	1	31	2/2
802d-tm1	1	2, 2,3, 3,4, 4,1, 1	1	31	2/2
802d-tm2	1	2, 2,3, 3,4, 4,1, 1	1	31	2/2
802d-tm3	1	2, 2,3, 3,4, 4,1, 1	1	31	2/2

Description: The number of the module within a bus segment (MD30210 \$MA_ENC_SEGMENT_NR[n]) through which the encoder is addressed must be entered in the MD.

For axes on PROFIBUS/PROFINET, the number of the drive assigned via MD13050 \$MN_DRIVE_LOGIC_ADDRESS must be entered here (MD30220 \$MA_ENC_MODULE_NR=n consequently points to MD13050 \$MN_DRIVE_LOGIC_ADDRESS[n]).

The index[n] of the machine data has the following coding:
[Encoder no.]: 0 or 1

Related to:

MD30110 \$MA_CTRL_OUT_MODULE_NR[n]
(setpoint assignment: drive number/module number)

Axis-specific machine data

30230	ENC_INPUT_NR	A01, A02, A11, -	G2,S9
-	Actual value assignm.: Input on drive module/meas. circuit board	BYTE	PowerOn
-			
-	1	1, 2	1 2 2/2

Description: For PROFIdrive:
Number of the encoder within the PROFIdrive message frame through which the encoder is addressed.
For example telegram 103: 1 (=G1_ZSW etc.) or 2 (=G2_ZSW etc.).
The index[n] of the machine data has the following coding:
[Encodernr.]: 0 or 1
If an input is selected, to which no encoder is connected, alarm 300008 "Measuring circuit not available on drive" is output.

30240	ENC_TYPE	A01, A02, A11, -	A3.,G2,R1
-	Encoder type of actual value sensing (actual position value).	BYTE	PowerOn
-			
-	1	0, 0	0 5 2/2

Description: Encoder type:
0: simulation
1: raw signal generator (high resolution)
2, 3, 5: reserved
Index [n] of the machine data has the following coding: [encoder number]: 0
4: general absolute encoder (e.g. with EnDat interface)

30242	ENC_IS_INDEPENDENT	A02, A11, -	G2,R1
-	Encoder is independent	BYTE	NEW CONF
-			
-	1	0, 0	0 3 1/1

Description: If actual value corrections performed by the NC on the encoder selected for position control are not to influence the actual value of any other encoder defined in the same axis, then the position control encoder must be declared to be "independent". Actual value corrections include the following:

- Modulo treatment,
- Reference point approach,
- Measuring system calibration,
- PRESET

Example:
MD30200 \$MA_NUM_ENCS[AX1] = 2
MD30242 \$MA_ENC_IS_INDEPENDENT[0, AX1] = 0
MD30242 \$MA_ENC_IS_INDEPENDENT[1, AX1] = 1
When the VDI interface has selected the first encoder for position control, the above mentioned actual value corrections will be executed on this encoder only.
When the VDI interface has selected the second encoder for position control, the above mentioned actual value corrections will be executed on both encoders.
The machine data is therefore only valid for encoders that have not been selected by the VDI interface for position control (passive encoders).

As from SW5, the scope of functions has been extended:

MD30242 \$MA_ENC_IS_INDEPENDENT = 2

The passive encoder is dependent. The active encoder changes the actual encoder value. In combination with MD35102

\$MA_REFP_SYNC_ENCS = 1, the passive encoder is adjusted to the active encoder during reference point approach, but is NOT referenced.

In reference mode MD34200 \$MA_ENC_REFP_MODE = 3 (distance-coded reference marks), the passive encoder is automatically referenced with the next traversing movement after zero mark distance over-travel. This is done independently of the current mode setting.

MD30242 \$MA_ENC_IS_INDEPENDENT = 3

In contrast to MD30242 \$MA_ENC_IS_INDEPENDENT = 1, modulo actual value corrections are executed in the passive encoder of modulo rotary axes.

30244	ENC_MEAS_TYPE	A01, A02, A11		-
-	Encoder measurement type	BYTE		PowerOn
-				
-	1	1, 1	0	1
				0/0

Description:

For PROFIdrive only:

In combination with the MD13210 \$MN_MEAS_TYPE = 1 (decentralized measurement), this MD can be used to set the type of axial measuring function for drives.

Encoder measurement type:

0: encoder measurement type central (global) measurement

1: encoder measurement type decentral (local) measurement

MEAS_TYPE	ENC_MEAS_TYPE	measuring sensor input used
0	0	central
0	1	central
1	0	central
1	1	decentralized

30250	ACT_POS_ABS	EXP, A02, A08		R1
-	Internal encoder position	DOUBLE		PowerOn
ODLD, -, -				
-	1	0.0, 0.0	-	-
				1/1

Description:

The actual position (hardware counter status only without machine reference) is stored (in internal format display) in this MD.

At power ON (or encoder activation), it acts with:

- Absolute encoders:

To restore the current position (in combination with the position, possibly with several meanings, buffered in the encoder).

- Incremental encoders:

To buffer the actual value beyond power OFF when the functionality is activated MD34210 \$MA_ENC_REFP_STATE = 1 or 2 (i.e. as a reference point replacement).

To buffer the actual value beyond power OFF when the functionality is activated MD34210 \$MA_ENC_REFP_STATE = 3 (i.e. as a restored position value).

Axis-specific machine data

Note:

This MD is changed internally by the control during traversing movements. Loading a previously saved MD data block can therefore destroy the encoder calibration (machine position reference) of absolute encoders.

For software conversions, we recommend removing the MD data block from the old software release prior to conversion and reloading it into the new software release without moving any axis in the meantime. Protection level 1 should be set for SW 3.6; protection level 2 suffices for SW 4 and higher. The encoder calibration must be explicitly verified (controlled, calibrated) after the software conversion.

30260	ABS_INC_RATIO	EXP, A01, A02	-
-	Absolute encoder: Ratio of absolute to incremental resolution	DWORD	PowerOn
-			
-	1	4, 4	-
-			1/1

Description:

Absolute track resolution in relation to the incremental signal resolution.

This MD only applies for absolute encoders:

- PROFIBUS drives:

Absolute information XIST2 related to incremental information XIST1.

With plausible drive parameters (e.g. for SIMODRIVE 611U: P1042/P1043 or P1044/P1045 or the relevant entries in PROFIdrive parameter p979) the value of this MD is automatically calculated and updated from drive parameters (if parameter read-out has not been deactivated by \$MN_DRIVE_FUNCTION_MASK, bit2).

With plausible drive parameters (e.g. for SIMODRIVE 611U: P1042/P1043 or P1044/P1045 or the relevant entries in PROFIdrive parameter p979) the value of this MD is calculated and updated automatically from the drive parameters (provided that parameter read-out has not been disabled by MD13070 \$MN_DRIVE_FUNCTION_MASK, bit2).

Unplausible drive parameters (e.g. multiplication of absolute track higher than that of the incremental signal) are rejected and replaced by the value entered in the current MD.

Unplausible input values in the current MD (e.g. value=0) are reset to the default value. In addition, alarm 26025 or 26002 is output in order to inform the user.

30270	ENC_ABS_BUFFERING	EXP, A01, A02	R1
-	Absolute encoder: Traversing range extension	BYTE	PowerOn
-			
-	1	0, 0	0
-			1
-			2/2

Description: This MD defines the way in which the absolute encoder position is buffered, and whether a traversing range extension is active on software side (exceeding the limits of the absolute value encoder range that can be displayed on the hardware).
 "0" = standard = traversing range extension (compare ACT_POS_ABS) is active.
 "1" = traversing range extension on software side is inactive.
 When using an absolute linear scale, there will not be a traversing range overflow for mechanical reasons. This MD is therefore only valid for rotary absolute value encoders.
 For rotary absolute value encoders, the traversing range that can be clearly displayed on the encoder side, is stored in MD34220 \$MA_ENC_ABS_TURNS_MODULO. You can do without a traversing range extension without any problems (a hardware counter overflow that might be within the traversing range is concealed in the software via shortest-path decision):

- in linear axes or limited rotary axes, if the actual traversing range on the load side is smaller than the traversing range on the load side that corresponds to MD34220 \$MA_ENC_ABS_TURNS_MODULO.
- in endlessly turning rotary axes (ROT_IS_MODULO = TRUE), if the absolute encoder is connected on the load side (no gear to be considered) or if "without remainder" can be calculated:
 Number of rotations on the load side = ENC_ABS_TURNS_MODULO * gear ratio
 (Example: ENC_ABS_TURNS_MODULO = 4096 encoder rotations, gear 25:32, i.e. number of rotations on load side = 4096*(25/32)=3200).

Notice:
 If you do not meet the conditions under a. or b., you run the risk of getting a wrong absolute encoder position at next Power ON or encoder activation after parking without prewarning if the traversing range extension is not working. Therefore, the traversing range extension remains active in the standard version.

Related to:

MD30240 \$MA_ENC_TYPE
 MD30300 \$MA_IS_ROT_AX
 MD30310 \$MA_ROT_IS_MODULO
 MD30250 \$MA_ACT_POS_ABS
 MD34220 \$MA_ENC_ABS_TURNS_MODULO
 MD34090 \$MA_REFP_MOVE_DIST_CORR

Axis-specific machine data

30300	IS_ROT_AX	A01, A06, A11, -	G1,K3,R2,T1,G2, K2,R1,S1,V1
-	Rotary axis / spindle	BOOLEAN	PowerOn
SCAL, CTEQ			
-	-	FALSE,FALSE,FALS E,FALSE,FALSE,FAL SE...	- - 2/2

Description:

- 1: Axis: The axis is defined as a "rotary axis".
- The special functions of the rotary axis are active or can be activated by means of additional machine data according to the type of machine required (see below).
 - The unit of measurement is degrees.
 - The units of the axis-specific machine and setting data are interpreted as follows with the standard control setting:
 - Positions in "degrees"
 - Speedsin "rev/minute"
 - Accelerationin "rev/second²"
 - Jerk limitationin "rev/second³"

Spindle:

The machine data should always be set to "1" for a spindle, otherwise alarm 4210 "Rotary axis declaration missing" is output.

0: The axis is defined as a "linear axis".

Special cases:

- For an axis: Alarm 4200 if the axis is already defined as a geometry axis.
- For a spindle: Alarm 4210

Related to:

The following machine data are active only after activation of MD30300 \$MA_IS_ROT_AX = "1":

- MD30310 \$MA_ROT_IS_MODULO "Modulo conversion for rotary axis"
- MD30320 \$MA_DISPLAY_IS_MODULO "Position display is modulo"
- MD10210 \$MN_INT_INCR_PER_DEG "Calculation precision for angular positions"

Axis-specific machine data

30310	ROT_IS_MODULO	A01, A06, A11, -	TE3,K3,R2,T1,A3, R1,R2,S1
-	Modulo conversion for rotary axis / spindle	BOOLEAN	PowerOn
CTEQ			
-	-	FALSE,FALSE,FALS E,FALSE,FALSE,FAL SE...	2/2

Description: 1: A modulo conversion is performed on the setpoints for the rotary axis. The software limit switches and the working area limitations are inactive; the traversing range is therefore unlimited in both directions. MD30300 \$MA_IS_ROT_AX must be set to "1"
0: No modulo conversion
MD irrelevant for:
MD30300 \$MA_IS_ROT_AX = "0" (linear axes)
Related to:
MD30320 \$MA_DISPLAY_IS_MODULO "Position display is modulo 360°"
MD30300 \$MA_IS_ROT_AX = 1 "Rotary axis"
MD36100 \$MA_POS_LIMIT_MINUS "Software limit switch minus"
MD36110 \$MA_POS_LIMIT_PLUS "Software limit switch plus"
SD43430 \$SA_WORKAREA_LIMIT_MINUS "Working area limitation minus"
SD43420 \$SA_WORKAREA_LIMIT_PLUS "Working area limitation plus"

30320	DISPLAY_IS_MODULO	A01, A06, A11	R2,T1,K2
-	Modulo 360 degrees displayed for rotary axis or spindle.	BOOLEAN	PowerOn
CTEQ			
-	-	FALSE,FALSE,FALS E,FALSE,FALSE,FAL SE...	2/2

Description: 1: "Modulo 360 degrees" position display is active:
The position display of the rotary axis or spindle (for basic or machine coordinate system) is defined as "Modulo 360 degrees". In the case of a positive direction of rotation, the control resets the position display internally to 0.000 degrees following each cycle of 359.999 degrees. The display range is always positive and lies between 0 and 359.999 degrees.
0: Absolute position display is active:
In contrast to the modulo 360 degrees position display, absolute positions are indicated by the absolute position display, e.g. +360 degrees after 1 rotation, and +720 degrees after 2 rotations, etc in the positive direction. In this case, the display range is limited by the control in accordance with the linear axes.
MD irrelevant for:
Linear axes MD30300 \$MA_IS_ROT_AX = "0"
Related to:
MD30300 \$MA_IS_ROT_AX = 1 "Axis is rotary axis"

Axis-specific machine data

30330	MODULO_RANGE	EXP, A01, -	R2,T1,R1
degrees	Size of modulo range.	DOUBLE	Reset
CTEQ			
-	-	360.0	1.0
		360000000.0	1/1

Description: Defines the size of the modulo range. Default positions are accepted and displayed within this range. Useful modulo ranges are $n * 360$ degrees with integer n . Other settings are equally possible in principle. Attention should be paid to having a useful relationship between the positions in the NC and the mechanics (ambiguity). Velocity definitions are not affected by settings in this MD.

30340	MODULO_RANGE_START	EXP, A01	R1,R2
degrees	Modulo range start position	DOUBLE	Reset
CTEQ			
-	-	0.0	-
		-	1/1

Description: Defines the start position for the modulo range.

Example:

Start = 0 degree -> modulo range 0 <->360 degrees
 Start = 180 degrees -> modulo range 180 <->540 degrees
 Start = -180 degrees -> modulo range -180 <->180 degrees

30350	SIMU_AX_VDI_OUTPUT	A01, A06	A2,G2,Z1
-	Axis signals output for simulation axes	BOOLEAN	PowerOn
CTEQ			
-	-	FALSE	-
		-	2/2

Description: This machine data defines whether axis-specific interface signals are output to the PLC during simulation of an axis.

1: The axis-specific interface signals of a simulated axis are output to the PLC.

In this way the user PLC program can be tested without the drives.

0: The axis-specific interface signals of a simulated axis are not output to the PLC.

All axis-specific interface signals are set to "0".

MD irrelevant for:

MD30130 \$MA_CTRL_OUT_TYPE (output type of setpoint value) = 1

30450	IS_CONCURRENT_POS_AX			EXP, A01	G1
-	Default for reset: neutral/channel axis			BOOLEAN	Reset
CTEQ					
802d-cu3	-	FALSE	-	-	1/1
802d-ng2	-	FALSE	-	-	1/1
802d-ng3	-	FALSE	-	-	1/1
802d-tm1	-	FALSE	-	-	0/0
802d-tm2	-	FALSE	-	-	1/1
802d-tm3	-	FALSE	-	-	1/1

Description: For SW4.3:
 If FALSE: On RESET, a neutral axis is reassigned to the NC program.
 If TRUE: On RESET, a neutral axis remains in the neutral axis state and an axis assigned to the NC program becomes a neutral axis

30465	AXIS_LANG_SUB_MASK			N01	K1
-	Substitution of NC language commands			DWORD	PowerOn
-					
-	-	0x0	0x0	0x3	2/2

Description: MD30465 \$MA_AXIS_LANG_SUB_MASK defines for the leading spindle(s) of a coupling (synchronous spindle coupling, ELG, tangential tracking, coupled motion, master value coupling, master/slave) which language constructs/functions are to be substituted by the user program set by MD15700 \$MN_LANG_SUB_NAME / MD15702 \$MN_LANG_SUB_PATH (default: /_N_CMA_DIR/_N_LANG_SUB_SPF). The substitution is executed only if a coupling is active for the relevant spindle and, in the case of a gear stage change, only if a gear stage change is actually pending.
 Bit 0 = 1:
 Automatic (M40) and direct (M41-M45) gear stage change
 Bit 1 = 1:
 Spindle positioning with SPOS/SPOSA/M19

Axis-specific machine data

30500	INDEX_AX_ASSIGN_POS_TAB			A01, A10	T1,H1
-	Axis is an indexing axis			BYTE	Reset
-					
802d-cu3	-	0	0	3	2/2
802d-ng2	-	0	0	3	2/2
802d-ng3	-	0	0	3	2/2
802d-tm1	-	0	0	3	-1/2
802d-tm2	-	0	0	3	2/2
802d-tm3	-	0	0	3	2/2

Description: The axis is declared as an indexing axis by assignment of indexing position table 1 or 2.

0: The axis is not declared as an indexing axis

1: The axis is an indexing axis. The associated indexing positions are stored in table 1 (MD10910 \$MN_INDEX_AX_POS_TAB_1).

2: The axis is an indexing axis. The associated indexing positions are stored in table 2 (MD10930 \$MN_INDEX_AX_POS_TAB_2).

3: Equidistant indexing with SW 4.3 and higher (840D) and SW 2.3 and higher (810D)

>3: Alarm 17090 "Value violates upper limit"

Special cases:

Several axes can be assigned to an indexing position table on the condition that all these indexing axes are of the same type (linear axis, rotary axis, modulo 360° function). If they are not, alarm 4000 is output during power-up.

Alarm 17500 "Axis is not an indexing axis"

Alarm 17090 "Value violates upper limit"

Related to:

MD10910 \$MN_INDEX_AX_POS_TAB_1 (indexing position table 1)

MD10900 \$MN_INDEX_AX_LENGTH_POS_TAB_1

(no. of indexing positions used in table 1)

MD10930 \$MN_INDEX_AX_POS_TAB_2 (indexing position table 2)

MD10920 \$MN_INDEX_AX_LENGTH_POS_TAB_2

(no. of indexing positions used in table 2)

For equidistant indexings with value 3:

MD30501 \$MA_INDEX_AX_NUMERATOR Numerator

MD30502 \$MA_INDEX_AX_DENOMINATOR Denominator

MD30503 \$MA_INDEX_AX_OFFSET First indexing position

MD30505 \$MA_HIRTH_IS_ACTIVE Hirth tooth system

30501	INDEX_AX_NUMERATOR			A01, A10	T1
mm, degrees	Indexing axis equidistant positions numerator			DOUBLE	Reset
-					
802d-cu3	-	0.0	-	-	1/1
802d-ng2	-	0.0	-	-	1/1
802d-ng3	-	0.0	-	-	1/1
802d-tm1	-	0.0	-	-	-1/2
802d-tm2	-	0.0	-	-	1/1
802d-tm3	-	0.0	-	-	1/1

Description: Defines the value of the numerator for calculating the distances between two indexing positions when the positions are equidistant. Modulo axes ignore this value and use MD30330 \$MA_MODULO_RANGE instead.

MD irrelevant for non-equidistant indexes in accordance with tables.

Related to:

MD30502 \$MA_INDEX_AX_DENOMINATOR,
MD30503 \$MA_INDEX_AX_OFFSET;
MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB

30502	INDEX_AX_DENOMINATOR			A01, A10	T1
-	Indexing axis equidistant positions denominator			DWORD	Reset
-					
802d-cu3	-	1	1	-	1/1
802d-ng2	-	1	1	-	1/1
802d-ng3	-	1	1	-	1/1
802d-tm1	-	1	1	-	-1/2
802d-tm2	-	1	1	-	1/1
802d-tm3	-	1	1	-	1/1

Description: Defines the value of the denominator for calculating the distances between two indexing positions when the positions are equidistant. For modulo axes it therefore specifies the number of indexing positions.

MD irrelevant for non-equidistant indexes in accordance with tables.

Related to:

MD30501 \$MA_INDEX_AX_NUMERATOR,
MD30503 \$MA_INDEX_AX_OFFSET,
MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB

Axis-specific machine data

30503	INDEX_AX_OFFSET			A01, A10	T1,R2
mm, degrees	Indexing axis with equidistant positions first index position			DOUBLE	Reset
-					
802d-cu3	-	0.0	-	-	1/1
802d-ng2	-	0.0	-	-	1/1
802d-ng3	-	0.0	-	-	1/1
802d-tm1	-	0.0	-	-	-1/2
802d-tm2	-	0.0	-	-	1/1
802d-tm3	-	0.0	-	-	1/1

Description: Defines the position of the first indexing position from zero for an indexing axis with equidistant positions.
MD irrelevant for non-equidistant indexes in accordance with tables.
Related to:
MD30501 \$MA_INDEX_AX_NUMERATOR, MD30502
\$MA_INDEX_AX_DENOMINATOR, MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB

30505	HIRTH_IS_ACTIVE			A01, A10	T1
-	Axis is an indexing axis with Hirth tooth system			BOOLEAN	Reset
CTEQ					
802d-cu3	-	FALSE	-	-	1/1
802d-ng2	-	FALSE	-	-	1/1
802d-ng3	-	FALSE	-	-	1/1
802d-tm1	-	FALSE	-	-	-1/2
802d-tm2	-	FALSE	-	-	1/1
802d-tm3	-	FALSE	-	-	1/1

Description: Hirth tooth system is active when value 1 is set.
MD irrelevant if axis is not an indexing axis.
Related to:
MD30500 \$MA_INDEX_AX_ASSIGN_POS_TAB, MD30501
\$MA_INDEX_AX_NUMERATOR, MD30502 \$MA_INDEX_AX_DENOMINATOR,
MD30503 \$MA_INDEX_AX_OFFSET

30550	AXCONF_ASSIGN_MASTER_CHAN			A01, A06, A10	K5,TE3,B3,S3,K1, R1
-	Initial setting of channel for change of axis			BYTE	PowerOn
-					
-	-	0	0	10	0/0

Description: Definition of the channel to which the axis is assigned after Power ON.
Related to:
MD20070 \$MC_AXCONF_MACHAX_USED

Axis-specific machine data

30552	AUTO_GET_TYPE	EXP, A06, A10	K5,M3,TE6,P2,P5,2,4
-	Automatic GET for get axis	BYTE	PowerOn
-			
-	-	1	0
-		2	0/0

Description: 0 = No automatically created GET -> Alarm in response to incorrect programming.
 1 = GET is output when GET is generated automatically.
 2 = GETD is output when GET is generated automatically.

30600	FIX_POINT_POS	A03, A10	K1,W3
mm, degrees	Fixed-value positions of axis with G75	DOUBLE	PowerOn
-			
-	4	0.0, 0.0, 0.0, 0.0	-
-			2/2

Description: The fixed-point positions (4 max.) for each axis which can be approached when G75 is programmed or via JOG are entered in these machine data.

References:

/PA/, "Programming Guide: Fundamentals"

30610	NUM_FIX_POINT_POS	A03, A10	K1
-	Number of fixed-value positions of an axis	DWORD	PowerOn
-			
-	-	0	0
-		4	2/2

Description: Number of fixed point positions set, i.e. the number of valid entries in MD30600 \$MA_FIX_POINT_POS.
 For G75, two (2) fixed point positions are assumed in MD30600 \$MA_FIX_POINT_POS for reasons of compatibility, even if '0' has been entered in this machine data.

30800	WORKAREA_CHECK_TYPE	-	A3
-	Type of check of working area limitations.	BOOLEAN	NEW CONF
CTEQ			
-	-	FALSE	-
-			0/0

Description: With this machine data you can specify whether only the working area limitations of traversing axes are to be checked (0) or whether the stationary axes in a traversing block are also to be checked (1).
 The value 0 corresponds to the behavior up to SW5.

Axis-specific machine data

2.4.2 Encoder matching

31000	ENC_IS_LINEAR	A02, A11, -	G2
-	Linear scale	BOOLEAN	PowerOn
-			
-	1	FALSE, FALSE	-
			2/2

Description: MD = 1: Encoder for position actual-value acquisition is linear (linear scale).
MD = 0: Encoder for position actual-value acquisition is rotary.
The index [n] of the machine data has the following coding:
[encoder no.]: 0 or 1

31010	ENC_GRID_POINT_DIST	A02, A11, -	G2
mm	Division period for linear scales	DOUBLE	PowerOn
-			
-	1	0.01, 0.01	-
			2/2

Description: For linear measuring system only:
The distance between the reference marks on the linear scale must be entered in this MD.
Index [n] of the machine data has the following coding:
[encoder no.]: 0 or 1

31020	ENC_RESOL	A02, A11, -	G2,R1
-	Encoder lines per revolution	DWORD	PowerOn
-			
-	1	2048, 2048	-
			2/2

Description: For rotary measuring system only:
The number of encoder lines per encoder revolution must be entered in this MD.
Index [n] of the machine data has the following coding:
[encoder no.]: 0

31025	ENC_PULSE_MULT	EXP, A01, A02	-
-	Encoder multiplication (high-resolution)	DWORD	PowerOn
-			
-	1	2048, 2048	-
			2/2

Description: For PROFIdrive only:
This MD describes the measuring system multiplication on PROFI-BUS/PROFINET.
Default value 2048 means: changing by just one encoder line can be seen in bit11 of the actual PROFIdrive value XIST1, that is, the actual encoder value is multiplied by 2 to the power of 11= 2048.

Axis-specific machine data

31030	LEADSCREW_PITCH	A02, A11, -	G2,A3
mm	Pitch of leadscrew	DOUBLE	PowerOn
-			
-	-	10.0	-
-	-	-	2/2

Description: The ball screw lead must be entered in the MD (see data sheet: mm/rev or inch/rev).
Special meaning for hydraulic linear drives:
If a hydraulic linear drive (HLA) is configured as rotary axis, it must be specified in this MD, which drive feedrate in mm corresponds to a programmed revolution (360 degrees).

31040	ENC_IS_DIRECT	A02, A11, -	G2,S1
-	Direct measuring system (no compilation to load position)	BOOLEAN	PowerOn
-			
-	1	FALSE, FALSE	-
-	-	-	2/2

Description: MD = 1:
Encoder for actual position value sensing is attached directly to the machine (without an intermediate gear unit).
MD = 0:
Encoder for actual position value sensing is attached to the motor (MD31060 \$MA_DRIVE_AX_RATIO_NUMERA and MD31050 \$MA_DRIVE_AX_RATIO_DENOM are included in the encoder valuation).
The index[n] of the machine data has the following coding:
[encoder no.]: 0 or 1
Special cases:
An incorrect entry may result in an incorrect encoder resolution, as, for example, the gear ratios would be calculated incorrectly.

31044	ENC_IS_DIRECT2	A02, -	G2,S1
-	Encoder mounted on the additional gearbox	BOOLEAN	NEW CONF
-			
-	1	FALSE, FALSE	-
-	-	-	2/2

Description: When using a load intermediate gearbox (for example for rotating tools, compare MD31066 \$MA_DRIVE_AX_RATIO2_NUMERA and MD31064 \$MA_DRIVE_AX_RATIO2_DENOM), the encoder installation location can be defined as "on the output" of this load intermediate gearbox: Encoder installation "on the output of the load intermediate gearbox" is configured by MD31040 \$MA_ENC_IS_DIRECT=1 and MD31044 \$MA_ENC_IS_DIRECT2=1 at the same time.
Encoder installation "on the input of the load intermediate gearbox" is configured by MD31040 \$MA_ENC_IS_DIRECT=1 together with MD31044 \$MA_ENC_IS_DIRECT2=0.
A parameterization alarm will be output if MD31044 \$MA_ENC_IS_DIRECT2=1 is set without MD31040 \$MA_ENC_IS_DIRECT=1 (this combination has not been defined).

Axis-specific machine data

31050	DRIVE_AX_RATIO_DENOM	A02, A11, -	A2,A3,G2,S1,V1
-	Denominator load gearbox	DWORD	PowerOn
-			
-	6	1, 1, 1, 1, 1, 1	1
		2147000000	2/2

Description: The load gearbox denominator is entered in this MD.
The index [n] of the machine data has the following coding:
[control parameter set no.]: 0-5

31060	DRIVE_AX_RATIO_NUMERA	A02, A11, -	A2,A3,G2,S1,V1
-	Numerator load gearbox	DWORD	PowerOn
-			
-	6	1, 1, 1, 1, 1, 1	-2147000000
		2147000000	2/2

Description: The load gearbox numerator is entered in this MD.
The index [n] of the machine data has the following coding:
[control parameter set no.]: 0-5

31064	DRIVE_AX_RATIO2_DENOM	A02, -	G2,S1
-	Denominator additional gearbox	DWORD	NEW CONF
-			
-	-	1	1
		2147000000	2/2

Description: Intermediate gearbox denominator
This MD together with MD31066 \$MA_DRIVE_AX_RATIO2_NUMERA defines an intermediate gearbox that acts as a multiplier to the motor/load gearbox (described by MD31060 \$MA_DRIVE_AX_RATIO_NUMERA and MD31050 \$MA_DRIVE_AX_RATIO_DENOM).
The load intermediate gearbox is inactive with the default values 1:1.
Please consider MD31044 \$MA_ENC_IS_DIRECT2 for encoder installation.
When the Safety Integrated functionality (see MD36901 \$MA_SAFE_FUNCTION_ENABLE) is active, the intermediate gearbox can be used, if

- the effectively active gear ratio from the motor to the tool is considered in the safety-relevant machine data and if
- the safety-relevant supplementary conditions for gear ratios are considered.

For more detailed information see the Safety Integrated Description of Functions.

31066	DRIVE_AX_RATIO2_NUMERA	A02, -	G2,S1
-	Numerator additional gearbox	DWORD	NEW CONF
-			
-	-	1	-2147000000
		2147000000	2/2

Description: Intermediate gearbox numerator
Related to:
MD31064 \$MA_DRIVE_AX_RATIO2_DENOM

31070	DRIVE_ENC_RATIO_DENOM	A02, A11, -	A3,G2,S1
-	Denominator measuring gearbox	DWORD	PowerOn
-			
-	1	1, 1	1
		2147000000	2/2

Description: The measuring gearbox denominator is entered in this MD.
The index [n] of the machine data has the following coding:
[encoder no.]: 0

31080	DRIVE_ENC_RATIO_NUMERA	A02, A11, -	A3,G2,S1
-	Numerator measuring gearbox	DWORD	PowerOn
-			
-	1	1, 1	1
		2147000000	2/2

Description: The measuring gearbox numerator is entered in this MD.
The index [n] of the machine data has the following coding:
[encoder no.]: 0

31090	JOG_INCR_WEIGHT	A01, A12	H1,G2
mm, degrees	Evaluation of an increment with INC/handwheel	DOUBLE	Reset
CTEQ			
-	2	0.001, 0.00254	-
		-	2/2

Description: The value entered in this MD defines the path of an increment which applies when an axis is traversed with the JOG keys in incremental mode or with the handwheel.
The path traveled by the axis on each increment each time the traversing key is pressed or for each handwheel detent position is defined by the following parameters:

- MD31090 \$MA_JOG_INCR_WEIGHT
(Weighting of an increment of a machine axis for INC/handwheel)
- Selected increment size (INC1, ..., INCvar)

The possible increment stages are defined globally for all axes in MD11330 \$MN_JOG_INCR_SIZE_TAB [n] and in SD41010 \$SN_JOG_VAR_INCR_SIZE.
Entering a negative value reverses the direction of evaluation of the traverse keys and the handwheel rotation.
Related to:
MD11330 \$MN_JOG_INCR_SIZE_TAB
SD41010 \$SN_JOG_VAR_INCR_SIZE

Axis-specific machine data

31122	BERO_DELAY_TIME_PLUS			A02, A06	S1,R1
s	BERO delay time Plus			DOUBLE	NEW CONF
-					
-	1	0.000110, 0.000110	-	-	2/2

Description: This machine data in combination with the setting in MD34200 \$MA_ENC_REFP_MODE (referencing mode) = 7 causes a signal runtime compensation in the positive direction of movement at a position determined by a BERO (zero mark).

The typical total delay time of the BERO message path for over-travel in the positive direction of movement is entered.

This time includes:

- the BERO edge delay time
- the time for digitizing the signal
- the time for processing the measured value, etc.

The periods of time depend on the hardware used. The default value is typical for SIEMENS products. Adjustment by the customer is only required in exceptional cases.

Input of the minimum value "0.0" deactivates the compensation (only active in combination with MD34200 \$MA_ENC_REFP_MODE = 7).

The machine data is available for all encoders.

Related to:

MD34200 \$MA_ENC_REFP_MODE (referencing mode)
MD34040 \$MA_REFP_VELO_SEARCH_MARKER[n]
(reference point creep velocity [Enc. no.]

31123	BERO_DELAY_TIME_MINUS			A02, A06	S1,R1
s	BERO delay time minus			DOUBLE	NEW CONF
-					
-	1	0.000078, 0.000078	-	-	2/2

Description: This machine data in combination with the setting in MD34200 \$MA_ENC_REFP_MODE (referencing mode) = 7 causes a signal runtime compensation in the negative direction of movement at a position determined by a BERO (zero mark).

The typical total delay time of the BERO message path for over-travel in the negative direction of movement is entered.

The time includes:

- the BERO edge delay time
- the time for digitizing the signal
- the time for processing the measured value, etc.

The periods of time depend on the hardware used. The default value is typical for SIEMENS products. Adjustment by the customer is only required in exceptional cases.

Input of the minimum value "0.0" deactivates the compensation (only active in combination with MD34200 \$MA_ENC_REFP_MODE = 7).

The machine data is available for all encoders.

Related to:

MD34200 \$MA_ENC_REFP_MODE (referencing mode)
MD34040 \$MA_REFP_VELO_SEARCH_MARKER[n]
(creep velocity [Enc. no.]

31200	SCALING_FACTOR_G70_G71	EXP, A01	G2
-	Factor for converting values while G70/G71 is active	DOUBLE	PowerOn
CTEQ			
-	-	25.4	1.e-9
-	-	-	0/0

Description: The inch/metric conversion factor by which the programmed geometry of an axis (position, polynomial coefficients, radius for circular programming, ...) is multiplied when the programmed value for G code group G70/G71 differs from the initial setting value (set in MD20150 \$MC_GCODE_RESET_VALUES[n]) is entered in this MD. The factor can be set for each axis individually, so that pure positioning axes are not dependent on G70/G71. The factors within the three geometry axes should not be different. The data influenced by G70/G71 are described in the Programming Guide.

Related to:

MD20150 \$MC_GCODE_RESET_VALUES[n] (G group initial setting).

2.4.3 Closed-loop control

32000	MAX_AX_VELO	A11, A04	M3,TE1,TE3,W6, Z3,H1,K3,M1,P2, A3,B2,G2,H2,S1, V1,W1
mm/min, rev/min	maximum axis velocity	DOUBLE	NEW CONF
CTEQ			
-	-	10000.,10000.,10000., 10000.,10000....	1.e-9
-	-	-	7/2

Description: Maximum velocity at which the axis can permanently travel. The value limits both the positive and the negative axis velocity. The axis traverses at this velocity, if rapid traverse has been programmed.

Depending on the MD30300 \$MA_IS_ROT_AX, the maximum rotary or linear axis velocity has to be entered.

In the machine data, the dynamic behavior of the machine and drive and the limit frequency of the actual value acquisition must be taken into account.

32010	JOG_VELO_RAPID	A11, A04, -	H1
mm/min, rev/min	Rapid traverse in jog mode	DOUBLE	Reset
CTEQ			
-	-	10000.,10000.,10000., 10000.,10000....	-
-	-	-	7/2

Description: The axis velocity entered applies when the rapid traverse override key is pressed in JOG mode and when the axial feedrate override is set to 100%.

The value entered must not exceed the maximum permissible axis velocity (MD32000 \$MA_MAX_AX_VELO).

This machine data is not used for the programmed rapid traverse G0.

Axis-specific machine data

MD irrelevant to:

Operating modes AUTOMATIC and MDI

Related to:

MD32000 \$MA_MAX_AX_VELO (maximum axis velocity)

MD32040 \$MA_JOG_REV_VELO_RAPID

(revolutional feedrate for JOG with rapid traverse override)

NC/PLC interface signal V3200 1000.5,1004.5,1008.5 (Rapid traverse override)

NC/PLC interface signal V3200 0004 (Feedrate override A-H)

32020	JOG_VELO		A11, A04, -	H1
mm/min, rev/min	Jog axis velocity		DOUBLE	Reset
CTEQ				
-	-	2000.,2000.,2000.,2000 0.,2000.,2000....	-	7/2

Description: The velocity entered applies to traversing in JOG mode when the axial feedrate override switch position is 100%. This velocity is only used when general SD41110 \$SN_JOG_SET_VELO = 0 for linear axes, and linear feedrate is selected (SD41100 \$SN_JOG_REV_IS_ACTIVE = 0) or SD41130 \$SN_JOG_ROT_AX_SET_VELO = 0 for rotary axes.

If this is the case, the axis velocity is active for

- continuous jogging
- incremental jogging (INC1, ... INCvar)
- handwheel jogging

The value entered must not exceed the maximum permissible axis velocity (MD32000 \$MA_MAX_AX_VELO).

If DRF is active, the axis velocity for JOG must be reduced with MD32090 \$MA_HANDWH_VELO_OVERLAY_FACTOR.

Spindles in JOG mode:

This machine data can also be used to define the JOG mode speed for specific spindles (if SD41200 \$SN_JOG_SPIND_SET_VELO = 0). However, the speed can be modified with the spindle override switch.

Related to:

MD32000 \$MA_MAX_AX_VELO

(maximum axis velocity)

MD32050 \$MA_JOG_REV_VELO

(revolutional feedrate for JOG)

MD32090 \$MA_HANDWH_VELO_OVERLAY_FACTOR

(ratio of JOG velocity to handwheel velocity (DRF))

SD41110 \$SN_JOG_SET_VELO

(JOG velocity for G94)

SD41130 \$SN_JOG_ROT_AX_SET_VELO

(JOG velocity for rotary axes)

NC/PLC interface signal V3200 0004 (Feedrate override A-H)

32040	JOG_REV_VELO_RAPID	A11, A04	H1,P2,R2,T1,V1,Z 1
mm/rev	Revolutional feedrate in JOG with rapid traverse override	DOUBLE	Reset
CTEQ			
-	-	2.5,2.5,2.5,2.5,2.5,2.5, - 2.5,2.5,2.5...	1/1

Description: The value entered defines the revolutional feedrate of the axis in JOG mode with rapid traverse override in relation to the revolutions of the master spindle. This feedrate is active when SD41100 \$SN_JOG_REV_IS_ACTIVE = 1. (Revolutional feedrate active with JOG)
MD irrelevant for:

SD41100 \$SN_JOG_REV_IS_ACTIVE = "0"

Related to:

SD41100 \$SN_JOG_REV_IS_ACTIVE (revolutional feedrate with JOG active)

MD32050 \$MA_JOG_REV_VELO (revolutional feedrate with JOG)

32050	JOG_REV_VELO	A11, A04	H1,P2,R2,T1,V1,Z 1
mm/rev	Revolutional feedrate in JOG	DOUBLE	Reset
CTEQ			
-	-	0.5,0.5,0.5,0.5,0.5,0.5, - 0.5,0.5,0.5...	1/1

Description: The value entered defines the revolutional feedrate of the axis in JOG mode in relation to the revolutions of the master spindle. This feedrate is active when SD41100 \$SN_JOG_REV_IS_ACTIVE= 1 (revolutional feedrate active with JOG).

MD irrelevant for:

Linear feedrate; i.e. SD41100 \$SN_JOG_REV_IS_ACTIVE = 0

Related to:

SD41100 \$SN_JOG_REV_IS_ACTIVE
(revolutional feedrate for JOG active)

MD32040 \$MA_JOG_REV_VELO_RAPID
(JOG revolutional feedrate with rapid traverse override)

Axis-specific machine data

32060	POS_AX_VELO		A12, A04	H1,P2,K1,V1,2.4,6.2
mm/min, rev/min	Initial setting for positioning axis velocity		DOUBLE	Reset
CTEQ				
-	-	10000.,10000.,10000., 10000.,10000....	-	1/1

Description: If a positioning axis is programmed in the part program without specifying the axis-specific feedrate, the feedrate entered in MD32060 \$MA_POS_AX_VELO is automatically used for this axis. The feedrate in MD32060 \$MA_POS_AX_VELO applies until an axis-specific feedrate is programmed in the part program for this positioning axis.

MD irrelevant for:

MD32060 \$MA_POS_AX_VELO is irrelevant for all axis types other than positioning axis.

Special cases:

If a ZERO velocity is entered in MD32060 \$MA_POS_AX_VELO, the positioning axis does not traverse if it is programmed without feed. If a velocity is entered in MD32060 \$MA_POS_AX_VELO that is higher than the maximum velocity of the axis (MD32000 \$MA_MAX_AX_VELO), the velocity is automatically restricted to the maximum rate.

32070	CORR_VELO		A04	2.4,6.2
%	Axis velocity for override		DOUBLE	Reset
CTEQ				
802d-cu3	-	50.0	-	2/2
802d-ng2	-	50.0	-	1/1
802d-ng3	-	50.0	-	1/1
802d-tm1	-	50.0	-	0/0
802d-tm2	-	50.0	-	0/0
802d-tm3	-	50.0	-	0/0

Description: Limitation of axis velocity for handwheel override, external zero offset, continuous dressing, distance control \$AA_OFF via synchronized actions related to the JOG velocity

MD32020 \$MA_JOG_VELO,
MD32010 \$MA_JOG_VELO_RAPID,
MD32050 \$MA_JOG_REV_VELO,
MD32040 \$MA_JOG_REV_VELO_RAPID.

The maximum permissible velocity is the maximum velocity in MD32000 \$MA_MAX_AX_VELO. Velocity is limited to this value.

The conversion into linear or rotary axis velocity is made according to MD30300 \$MA_IS_ROT_AX.

32074	FRAME_OR_CORRPOS_NOTALLOWED			A01	K5,K2,2.4,6.2
-	Frame or tool length compensation are not permissible			DWORD	PowerOn
CTEQ					
802d-cu3	-	0	0	0xFFF	1/1
802d-ng2	-	0	0	0xFFF	1/1
802d-ng3	-	0	0	0xFFF	1/1
802d-tm1	-	0	0	0xFFF	0/0
802d-tm2	-	0	0	0xFFF	1/1
802d-tm3	-	0	0	0xFFF	1/1

Description: This machine data is used to define the effectiveness of the frames and tool length compensations for indexing axes, PLC axes and command axes started from synchronized actions.

Bit assignment:

Bit 0 = 0:
Programmable zero offset (TRANS) allowed for indexing axis

Bit 0 = 1:
Programmable zero offset (TRANS) forbidden for indexing axis

Bit 1 = 0:
Scale modification (SCALE) allowed for indexing axis

Bit 1 = 1:
Scale modification (SCALE) forbidden for indexing axis

Bit 2 = 0:
Direction change (MIRROR) allowed for indexing axis

Bit 2 = 1:
Direction change (MIRROR) forbidden for indexing axis

Bit 3 = 0:
DRF offset allowed for axis

Bit 3 = 1:
DRF offset forbidden for axis

Bit 4 = 0:
External zero offset allowed for axis

Bit 4 = 1:
External zero offset forbidden for axis

Bit 5 = 0:
Online tool compensation allowed for axis

Bit 5 = 1:
Online tool compensation forbidden for axis

Bit 6 = 0:
Synchronized action offset allowed for axis

Bit 6 = 1:
Synchronized action offset forbidden for axis

Bit 7 = 0:
Compile cycles offset allowed for axis

Bit 7 = 1:
Compile cycles offset forbidden for axis

Bit 8 = 0:
Axial frames and tool length compensation are NOT considered for PLC axes (bit evaluation so for compatibility reasons)

Bit 8 = 1:

Axis-specific machine data

Axial frames are considered for PLC axes, and the tool length compensation is considered for PLC axes which are geometry axes.

Bit 9 = 0:

Axial frames are considered for command axes, and the tool length compensation is considered for command axes which are geometry axes.

Bit 9 = 1:

Axial frames and tool length compensation are NOT considered for command axes

Bit 10 = 0:

In JOG mode, too, traversing of a geometry axis as a PLC or command axis is NOT allowed with active rotation.

Bit 10 = 1:

In JOG mode, traversing of a geometry axis as a PLC axis or command axis (static synchronized action) is allowed with active rotation (ROT frame). Traversing must be terminated prior to returning to AUTOMATIC mode (neutral axis state), as otherwise alarm16908 would be output when the mode is changed.

Bit 11 = 0:

In the 'Program interrupted' status, repositioning to the interrupt position (AUTO - JOG) takes place when changing from JOG to AUTO.

Bit 11 = 1:

Prerequisite: Bit 10 == 1 (PLC or command axis motion with active rotation in JOG mode).

In the 'Program interrupted' status, the end point of the PLC or command axis motion is taken over when changing from JOG to AUTOMATIC and the geometry axes are positioned according to the rotation

32080	HANDWH_MAX_INCR_SIZE	A05, A10	H1
mm, degrees	Limitation of selected increment	DOUBLE	Reset
CTEQ			
-	-	0.0	-
		-	1/1

Description: > 0: Limitation of size of selected increment \$MN_JOG_INCR_SIZE <Increment/VDI signal>Ü or SD41010 \$SN_JOG_VAR_INCR_SIZE for the associated machine axis
0: No limitation

Axis-specific machine data

32082	HANDWH_MAX_INCR_VELO_SIZE		A05, A10, A04	-
mm/min, rev/min	Limitation for velocity override		DOUBLE	Reset
CTEQ				
802d-cu3	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	2/2
802d-ng2	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	1/1
802d-ng3	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	1/1
802d-tm1	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	1/1
802d-tm2	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	1/1
802d-tm3	-	500.0,500.0,500.0,500.0,500.0,500.0...	-	1/1

Description: For the velocity override of positioning axes:
 >0: Limitation of size of selected increment
 \$MN_JOG_INCR_SIZE<Increment/VDI signal> 0 or SD41010
 \$SN_JOG_VAR_INCR_SIZE for the associated machine axis
 0: No limitation

32084	HANDWH_STOP_COND		EXP, A10	H1
-	Handwheel travel behavior		DWORD	Reset
CTEQ				
802d-cu3	-	0xFF	0	0x7FF
802d-ng2	-	0xFF	0	0x7FF
802d-ng3	-	0xFF	0	0x7FF
802d-tm1	-	0xFF	0	0x7FF
802d-tm2	-	0xFF	0	0x7FF
802d-tm3	-	0xFF	0	0x7FF

Description: Definition of the response of the handwheel travel to axis-specific VDI interface signals or a context-sensitive interpolator stop:
 Bit = 0:
 Interruption or collection of the distances preset via the handwheel.
 Bit = 1:
 Cancellation of the traversing motion or no collection.
 Bit assignment:
 Bit 0: feedrate override
 Bit 1: spindle speed override
 Bit 2: feedrate stop/spindle stop or context-sensitive interpolator stop
 Bit 3: clamping procedure running (= 0 no effect)
 Bit 4: servo enable
 Bit 5: pulse enable
 For machine axis:
 Bit 6 = 0
 For handwheel travel, the maximum velocity at which the relevant machine axis can be traversed is the feedrate set in MD32020 \$MA_JOG_VELO.

Axis-specific machine data

Bit 6 = 1

For handwheel travel, the maximum velocity at which the relevant machine axis can be traversed is the feedrate set in MD32000 \$MA_MAX_AX_VELO.

Bit 7 = 0

The override is active in handwheel travel.

Bit 7 = 1

The override is always assumed to be 100% for handwheel travel, regardless of how the override switch is set.

Exception: override 0% is always active.

Bit 8 = 0

The override is active with DRF

Bit 8 = 1

The override is always assumed to be 100% for DRF, regardless of how the override switch is set.

Exception: override 0% is always active.

Bit 9 = 0

For handwheel travel, the maximum possible velocity with revolutionary feedrate is

- with the feedrate in SD41120 \$SN_JOG_REV_SET_VELO or

- the feedrate in MD32050 \$MA_JOG_REV_VELO or

- in the case of rapid traverse with MD32040

\$MA_JOG_REV_VELO_RAPID

of the relevant machine axis calculated with the spindle or rotary axis feedrate.

Bit 9 = 1

For handwheel travel, the maximum possible velocity is with the revolutionary feedrate in MD32000 \$MA_MAX_AX_VELO of the relevant machine axis. (see also bit 6)

Bit 10 = 0

For overlaid motions, \$AA_OVR is not active.

Bit 10 = 1

For overlaid motions (DRF, \$AA_OFF, external work offset, online tool offset), the override \$AA_OVR settable via synchronized actions is active.

Bit 11 = 0

With the VDI interface signal "driveReady" (= 0) missing, paths defined by the handwheel are not collected, but a traversing request is displayed. Start of a continuous JOG motion in continuous mode (\$SN_JOG_CONT_MODE_LEVELTRIGGRD 41050 = 0) or an incremental JOG motion in continuous mode (\$MN_JOG_INC_MODE_LEVELTRIGGRD 11300 = 0) is displayed as a traversing request. With "driveReady" = 1, however, the tool is not traversed, but the procedure is aborted and must be started again.

Bit 11 = 1

With the VDI interface "driveReady" missing, the paths defined by the handwheel are collected. Start of a continuous JOG motion in continuous mode (\$SN_JOG_CONT_MODE_LEVELTRIGGRD 41050 = 0) or an incremental JOG motion in continuous mode (\$MN_JOG_INC_MODE_LEVELTRIGGRD 11300 = 0) is displayed and saved as a traversing request. With "driveReady" = 1 the traversing motion is started. |

32090	HANDWH_VELO_OVERLAY_FACTOR			A10, A04	H1
-	Ratio of JOG velocity to handwheel velocity (DRF)			DOUBLE	Reset
CTEQ					
802d-cu3	-	0.5	-	-	2/2
802d-ng2	-	0.5	-	-	1/1
802d-ng3	-	0.5	-	-	1/1
802d-tm1	-	0.5	-	-	1/1
802d-tm2	-	0.5	-	-	1/1
802d-tm3	-	0.5	-	-	1/1

Description: The velocity active with the handwheel in DRF can be reduced from the JOG velocity with this machine data.
The following applies to linear axes for the velocity active with DRF:

```
vDRF = SD41110 $SN_JOG_SET_VELO * MD32090
$MA_HANDWH_VELO_OVERLAY_FACTOR
```

```
or when SD41110 $SN_JOG_SET_VELO = 0:
```

```
vDRF = MD32020 $MA_JOG_VELO * MD32090
$MA_HANDWH_VELO_OVERLAY_FACTOR
```

The velocity setting in SD41130 \$SN_JOG_ROT_AX_SET_VELO applies for DRF on rotary axes instead of the value in SD41110 \$SN_JOG_SET_VELO.

MD irrelevant for:

JOG handwheel

Related to:

MD32020 \$MA_JOG_VELO (JOG axis velocity)

SD41110 \$SN_JOG_SET_VELO (JOG velocity for G94)

SD41130 \$SN_JOG_ROT_AX_SET_VELO (JOG velocity for rotary axes)

32100	AX_MOTION_DIR			A07, A03, A11, -	G1,TE3,G2
-	Traversing direction (not control direction)			DWORD	PowerOn
-					
-	-	1	-1	1	2/2

Description: The direction of movement of the machine can be reversed with this MD.

The control direction is, however, not destroyed, i.e. closed-loop control remains stable.

-1: direction reversed

0, 1: direction not reversed

Axis-specific machine data

32110	ENC_FEEDBACK_POL			A07, A02, A11	G2
-	Sign actual value (control direction)			DWORD	PowerOn
-					
-	1	1, 1	-1	1	2/2

Description: The evaluation direction of the shaft encoder signals is entered into the MD.

-1: actual value is reversed
0, 1: actual value is not reversed

The index[n] of the machine data has the following coding:
[Encoder no.]: 0 or 1

Special cases:

When an incorrect control direction is entered, the axis can run off.

Depending on the setting of the corresponding limit values, one of the following alarms is displayed:

Alarm 25040 "Standstill monitoring"
Alarm 25050 "Contour monitoring"
Alarm 25060 "Speed setpoint limitation"

If an uncontrolled setpoint leap occurs on connection of a drive, the control direction might be incorrect.

32200	POSCTRL_GAIN			A07, A11	G1,TE1,TE9,K3,S3,A2,A3,D1,G2,S1,V1
1000/min	Servo gain factor			DOUBLE	NEW CONF
CTEQ					
-	6	16.66666667, 16.66666667, 16.66666667, 16.66666667, 16.66666667...	0	2000.	7/2

Description: Position controller gain, or servo gain factor.

The input/output unit for the user is [(m/min)/mm].
I.e. MD32200 \$MA_POSCTRL_GAIN[n] = 1 corresponds to a 1 mm following error at V = 1m/min.

The following machine data have default settings for adapting the standard selected input/output unit to the internal unit [rev/s].

- MD10230 \$MN_SCALING_FACTORS_USER_DEF[9] = 16.666667S
- MD10220 \$MN_SCALING_USER_DEF_MASK = 0x200; (bit no 9 as hex value).

If the value "0" is entered the position controller is opened.

When entering the servo gain factor it is important to take into account that the gain factor of the whole position control loop is still dependent on other parameters of the controlled system. A distinction should be made between a "desired servo gain factor" (MD32200 \$MA_POSCTRL_GAIN) and an "actual servo gain factor" (produced by the machine). Only when all the parameters of the control loop are matched will these servo gain factors be the same.

Other factors are:

- Speed setpoint adjustment (MD32260 \$MA_RATED_VELO, MD32250 \$MA_RATED_OUTVAL)
or automatic speed setpoint interface adjustment (with MD32250 \$MA_RATED_OUTVAL = 0 etc.)
- Correct actual value recording of the position encoder (no. of encoder marks, high resolution, encoder mounting location, gear etc.)
- Correct actual speed recording on the drive (standardization, possibly tacho compensation, tacho generator)

Note:

Axes which interpolate together and are to perform a machining operation, must either have the same gain setting (i.e. have the identical following error = 45° slope at the same velocity) or they must be matched via MD32910 \$MA_DYN_MATCH_TIME.

The actual servo gain factor can be checked by means of the following error (in the service display). However, note that the drift compensation must be checked first.

In the case of analog axes, a drift compensation must be performed prior to the control.

The index [n] of the machine data has the following coding:

[control parameter set no.]: 0-5

32210	POSCTRL_INTEGR_TIME	A07	G2
s	Position controller integral time	DOUBLE	NEW CONF
-			
-	-	1.0	0
		10000.0	2/2

Description: Position controller integral action time for the integral component in s
The MD is only active if MD32220 \$MA_POSCTRL_INTEGR_ENABLE = TRUE. A value of the MD less than 0.001 disables the integral component of the PI controller. The controller is then a P controller, which works with disabled manipulated variable clamping (see also MD32230 \$MA_POSCTRL_CONFIG, bit0 = 1).

32220	POSCTRL_INTEGR_ENABLE	A07	G2
-	Enable integral component position controller	BOOLEAN	PowerOn
-			
-	-	FALSE	-
		-	2/2

Description: Enable of the integral component position controller; the position controller is then a PI controller in which the manipulated variable clamping is disabled (s.a. MD32230 \$MA_POSCTRL_CONFIG, bit0 = 1).
Position overshoots may occur if the integral component is used. For this reason, this functionality may only be used in special cases.

32230	POSCTRL_CONFIG	A07	TE1
-	Configuration of the position controller structure	BYTE	PowerOn
-			
-	-	0	0
		17	7/2

Description: Configuration of the position controller structure:
Bit0 = 1: Manipulated variable clamping inactive
Bit4 = 1: Accelerated exact stop signal active

Axis-specific machine data

32250	RATED_OUTVAL			A01, A11	A3,D1,G2
%	Rated output voltage			DOUBLE	NEW CONF
CTEQ					
-	1	0.0	0.0	200	1/1

Description:

a.)

Scaling of the manipulated variable with analog drives:

The value of the speed setpoint in percent is to be entered in this MD, in relation to the maximum speed setpoint at which the motor speed specified in MD32260 \$MA_RATED_VELO[n] is reached.

Related to:

MD32250 \$MA_RATED_OUTVAL[n] only makes sense in combination with MD32260 \$MA_RATED_VELO[n].

Example:

1. At a voltage of 5V, the drive reaches a speed of 1875 rev/min ==> RATED_OUTVAL = 50%, RATED_VELO = 11250 [degrees/s]
2. At a voltage of 8V, the drive reaches a speed of 3000 rev/min ==> RATED_OUTVAL = 80%, RATED_VELO = 18000 [degrees/s]
3. At a voltage of 1.5V, the drive reaches a speed of 562.5 rev/min ==> RATED_OUTVAL = 15%, RATED_VELO = 3375 [degrees/s]

All three examples are possible for one and the same drive/converter. The ratio of the two values is decisive; it is the same in all three examples.

MD32250 \$MA_RATED_OUTVAL and MD32260 \$MA_RATED_VELO describe physical characteristics of converter and drive; they can therefore only be determined by means of measurement or start-up instructions (converter, drive).

b.)

Scaling of the manipulated variable with digital PROFIdrive drives:

Default value "0" declares MD32250 \$MA_RATED_OUTVAL and MD32260 \$MA_RATED_VELO as invalid. Scaling of the manipulated variable is automatically determined and adjusted from the drive parameters instead.

Otherwise (MD32250 \$MA_RATED_OUTVAL unequal to zero), the scaling of the manipulated variable is not determined from the drive (for example non-Siemens PROFIdrive drives), but set with RATED_VELO and RATED_OUTVAL, even in the case of these, irrespective of the scaling active on the drive side. In this case, the following applies:

Scaling of the manipulated variable on the drive = $\text{RATED_VELO} / \text{RATED_OUTVAL}$

In the case of simultaneous operation of analog and PROFIdrive drives, the settings for the analog axes must be adjusted as described in a.).

32260	RATED_VELO			A01, A11	A3,D1,G2
rev/min	Rated motor speed			DOUBLE	NEW CONF
CTEQ					
-	1	3000.0	-	-	1/1

Description: Only applies when:

MD32250 \$MA_RATED_OUTVAL is set greater than 0.

The drive speed (scaled on the drive) that is reached with the percentual speed setpoint specified in MD32250 \$MA_RATED_OUTVAL[n] must be entered in the MD.

Related to:

MD32260 \$MA_RATED_VELO[n] only makes sense in combination with MD32250 \$MA_RATED_OUTVAL[n].

32300	MAX_AX_ACCEL			A11, A04, -	M3,TE6,Z3,H1,K3 ,M1,A3,B1,B2,K1, V1,2,4
m/s ² , rev/s ²	maximum axis acceleration			DOUBLE	NEW CONF
CTEQ					
-	5	1.0, 1.0, 1.0, 1.0, 1.0,1.0, 1.0, 1.0, 1.0, 1.0...	1.0e-3	-	7/2

Description: Maximum acceleration, i.e. change in setpoint velocity, which is to act upon the axis. The value limits both the positive and negative axis acceleration.

Depending on machine data MD30300 \$MA_IS_ROT_AX, the maximum angular or linear axis acceleration must be entered.

If axes are interpolated linearly in a grouping, the grouping is limited in such a way that no axis is overloaded. With regard to contour accuracy, the control dynamic behavior has to be taken into account.

MD irrelevant for error states that lead to rapid stop.

Related to:

MD32210 \$MA_MAX_ACCEL_OVL_FACTOR

MD32434 \$MA_G00_ACCEL_FACTOR

MD32433 \$MA_SOFT_ACCEL_FACTOR

MD20610 \$MC_ADD_MOVE_ACCEL_RESERVE

MD20602 \$MC_CURV_EFFECT_ON_PATH_ACCEL

Axis-specific machine data

32301	JOG_MAX_ACCEL	A11, A04, -	-
m/s ² , rev/s ²	Maximum acceleration in JOG mode	DOUBLE	NEW CONF
CTEQ			
-	-	0.0	-

Description: MD32301 \$MA_JOG_MAX_ACCEL is effective only in JOG mode. It ensures that the acceleration set in the MD is not exceeded when the axis/spindle is in JOG mode.

MD32301 \$MA_JOG_MAX_ACCEL = 0 disables the limit. The actual acceleration value of the axis/spindle is then effective.

Related to:

MD32300 \$MA_MAX_AX_ACCEL (axis acceleration)

MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL (acceleration of spindle in speed control mode)

MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL (acceleration of spindle in position control mode)

MD35212 \$MA_GEAR_STEP_POSCTRL_ACCEL2 (acceleration of spindle in position control mode, tapping)

32310	MAX_ACCEL_OVL_FACTOR	A04	B1
-	Overload factor for axial velocity steps	DOUBLE	NEW CONF
CTEQ			
-	5	1.26, 1.26, 1.26, 1.26, 1.26	1/1

Description: The overload factor limits the velocity jump of the machine axis on block transition. The value entered is related to the value of MD32300 \$MA_MAX_AX_ACCEL (axis acceleration) and states by how much the maximum acceleration can be exceeded for one IPO cycle.

Related to:

MD32300 \$MA_MAX_AX_ACCEL (axis acceleration)

MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO (interpolator clock)

There is an entry for each dynamic G code group.

32320	DYN_LIMIT_RESET_MASK	A05, A06, A10, A04	-
-	Reset behavior of dynamic response limitation.	DWORD	Reset
CTEQ			
-	-	0	0

Description: With MD32320 \$MA_DYN_LIMIT_RESET_MASK, the reset behavior of functions limiting the dynamic response can be set.

The MD is bit-coded; currently only bit 0 (LSB) is assigned.

Bit 0 == 0:

Channel reset/M30 resets the programmed ACC to 100%. (compatibility: same response as before)

Bit 0 == 1:

Programmed ACC is maintained beyond channel reset/M30.

32400	AX_JERK_ENABLE	A07, A04, -	B2
-	Axial jerk limitation	BOOLEAN	NEW CONF
CTEQ			
-	-	FALSE	-
-	-	-	1/1

Description: Enables the function of an axial jerk limitation.
The limitation is set via a time constant; it is always active.
The limitation works independently of the limitations "path-related maximum jerk", "knee-shaped acceleration characteristic" and the axial jerk limitation of the axes that are operated in JOG mode or positioning axis mode.

Related to:

MD32410 \$MA_AX_JERK_TIME (time constant for axial jerk limitation)

32402	AX_JERK_MODE	A07, A04	B2,G2,B3
-	Filter type for axial jerk limitation	BYTE	PowerOn
CTEQ			
-	-	1	1
-	-	3	1/1

Description: Filter type for axial jerk limitation:
1: 2nd order filter (as in SW 1 through 4)
2: Moving averaging (SW 5 and higher)
3: Bandstop filter (SW 6 and higher)
Type 2 requires more computing time, but causes smaller contour errors for the same smoothing effect, or smoother movements at the same accuracy.

Type 2 is recommended; type 1 is set as a default value for reasons of compatibility.

The maximum jerk is set in the time constant MD32410 \$MA_AX_JERK_TIME.

Recommended values for type 1:

Min. 0.03 s; max. 0.06s.

Recommended values for type 2:

Min. 1 position-control cycle; max. 16 position-control cycles
At a position-control cycle of 2ms, this corresponds to 0.002 to 0.032 seconds.

Type 3 requires the setting of MD32410 \$MA_AX_JERK_TIME, MD32412 \$MA_AX_JERK_FREQ and MD32414 \$MA_AX_JERK_DAMP.

To parameterize a simple bandstop filter, we recommend setting MD32410 \$MA_AX_JERK_TIME=0, which automatically sets "denominator frequency = numerator frequency = blocking frequency = MD32412 \$MA_AX_JERK_FREQ".

However, MD32410 \$MA_AX_JERK_TIME>0 is used to set a specific denominator frequency, which makes it possible to implement a bandstop filter with amplitude increase for frequencies beyond the blocking frequency.

MD32402 \$MA_AX_JERK_MODE is only active if MD32400

\$MA_AX_JERK_ENABLE has been set to 1.

Axis-specific machine data

Special cases, errors:

The machine data must be same for all axes of an axis container.

Related to:

MD32400 \$MA_AX_JERK_ENABLE

MD32410 \$MA_AX_JERK_TIME

and for type 3: MD32412 \$MA_AX_JERK_FREQ and MD32414

\$MA_AX_JERK_DAMP

32410	AX_JERK_TIME	A07, A04	G1,TE1,S3,B2,G2
s	Time constant for axial jerk filter	DOUBLE	NEW CONF
-			
-	0.001	-	1/1

Description: Time constant of the axial jerk filter which causes a smoother axis setpoint characteristic. The jerk filter will only be active, if the time constant is higher than a position control cycle. Not active in case of errors that cause a change in follow-up mode (for example EMERGENCY STOP99):

Special cases:

Machine axes that are supposed to be interpolating with one another, must have the same effective jerk filtering (for example the same time constant for tapping without compensating chuck).

Related to:

MD32400 \$MA_AX_JERK_ENABLE (axial jerk limitation)

32412	AX_JERK_FREQ	A07, A04	-
-	Blocking frequency of axial jerk filter	DOUBLE	NEW CONF
-			
-	10.0	-	1/1

Description: Blocking frequency of axial jerk filter bandstop MD is only active if MD32402 \$MA_AX_JERK_MODE = 3

32414	AX_JERK_DAMP	A07, A04	-
-	Damping of axial jerk filter	DOUBLE	NEW CONF
-			
-	0.0	-	1/1

Description: Damping of axial jerk filter bandstop:
Input value 0 means complete blocking with MD32412 \$MA_AX_JERK_FREQ, input values >0 can attenuate the blocking effect.
MD is only active if MD32402 \$MA_AX_JERK_MODE = 3

32420	JOG_AND_POS_JERK_ENABLE	A04	G1,H1,P2,S3,B2
-	Default setting of axis jerk limitation	BOOLEAN	Reset
CTEQ			
-	-	FALSE	-
			2/2

Description: Enables the function of the axis-specific jerk limitation for the operating modes JOG, REF and positioning axis mode.
 1: Axial jerk limitation for JOG mode and positioning axis mode
 0: No jerk limitation for JOG mode and positioning axis mode
 The maximum jerk occurring is defined in MD32430
 \$MA_JOG_AND_POS_MAX_JERK.
 Related to:
 MD32430 \$MA_JOG_AND_POS_MAX_JERK (axial jerk)

32430	JOG_AND_POS_MAX_JERK	A04	G1,P2,S3,B2
m/s ³ , rev/s ³	Axial jerk	DOUBLE	NEW CONF
CTEQ			
-	-	1000.0,1000.0,1000.0, 1000.0,1000.0...	1.e-9
			2/2

Description: The jerk limit value limits the rate of change of axis acceleration in JOG, REF and positioning axis modes.
 The setting and time calculation are made as for MD20600
 \$MC_MAX_PATH_JERK (path-related maximum jerk).
 MD irrelevant for:

- Path interpolation
- Error states that lead to rapid stop.

Related to:
 MD32420 \$MA_JOG_AND_POS_JERK_ENABLE (initial setting of axial jerk limitation)

32431	MAX_AX_JERK	A04	B1,B2
m/s ³ , rev/s ³	maximum axial jerk for path movement	DOUBLE	NEW CONF
-			
-	5	1.e6, 1.e6, 1.e6, 1.e6, 1.e6...	1.e-9
			3/3

Description: Maximum axial jerk for path motion
 There is an entry for each G code except for the 59th G code group (dynamic G code group).

32432	PATH_TRANS_JERK_LIM	A04	B1,B2
m/s ³ , rev/s ³	maximum axial jerk at block transition in continuous-path mode	DOUBLE	NEW CONF
CTEQ			
-	5	1.e6, 1.e6, 1.e6, 1.e6, 1.e6...	-
			3/3

Description: The control limits the jerk (acceleration jump) at a block transition between contour sections of different curvature to the value set.
 MD irrelevant for:
 Exact stop
 Related to:
 Continuous-path mode, SOFT type of acceleration

Axis-specific machine data

32433	SOFT_ACCEL_FACTOR	A04, -	TE9,B1,B2
-	Scaling of acceleration limitation with SOFT	DOUBLE	NEW CONF
-			
-	5	1., 1., 1., 1., 1.	1e-9
-			1/1

Description: Scaling of the acceleration limitation with SOFT.
 Relevant axial acceleration limitation for SOFT =:
 (MD32433 \$MA_SOFT_ACCEL_FACTOR[...] * MD32300 \$MA_MAX_AX_ACCEL[...])
 There is an entry for each dynamic G code group.

32434	G00_ACCEL_FACTOR	A04, -	TE9,B1,B2
-	Scaling of acceleration limitation with G00.	DOUBLE	NEW CONF
-			
-	-	1.	1e-9
-			1/1

Description: Scaling of the acceleration limitation with G00.
 Relevant axial acceleration limitation for G00 =:
 (MD32433 \$MA_G00_ACCEL_FACTOR[...] * MD32300 \$MA_MAX_AX_ACCEL[...])

32435	G00_JERK_FACTOR	A04	B1,B2
-	Scaling of jerk limitation with G00.	DOUBLE	NEW CONF
-			
-	-	1.	1e-9
-			1/1

Description: Scaling of the jerk limitation with G00.
 Relevant axial jerk limitation for G00 =:
 (MD32435 \$MA_G00_JERK_FACTOR[...] * MD32431 \$MA_MAX_AX_JERK[...])

32436	JOG_MAX_JERK	A04	-
m/s ³ , rev/s ³	Maximum axial jerk during JOG motion	DOUBLE	NEW CONF
CTEQ			
-	-	0.0	0/0

Description: The jerk limit value limits the change of axis acceleration in JOG mode only .
 The behavior of the MD is analog to:
 MD32430 \$MA_JOG_AND_POS_MAX_JERK
 It therefore also communicates with:
 MD32420 \$MA_JOG_AND_POS_JERK_ENABLE
 (default of the axial jerk limitation)

32440	LOOKAH_FREQUENCY	EXP, A04	B1
-	Smoothing frequency for Look Ahead	DOUBLE	NEW CONF
-			
-	-	10.	2/2

Description: Acceleration procedures in continuous-path mode with Look Ahead which execute with a higher frequency than that parameterized in this MD are smoothed as a function of the parameterization in MD20460 \$MC_LOOKAH_SMOOTH_FACTOR.
 It is always the minimum of all the axes participating in the path which is determined.
 If vibrations are aroused in the mechanics of this axis and if their frequency is known, then this MD should be set to a lower value than this frequency.

32450	BACKLASH	A09	K3,G2
mm, degrees	Backlash	DOUBLE	NEW CONF
-			
-	1	0.0, 0.0	-

Description: Backlash on reversal between positive and negative travel directions.

Input of the compensation value is

- positive, if the encoder is leading the machine part (normal situation)
- negative, if the encoder is behind the machine part.

Backlash compensation is not active when 0 is entered.
Backlash compensation is always active after reference point approach in all operating modes.

Special cases:
A specific backlash on reversal must be entered for each measuring system.

Related to:
MD30200 \$MA_NUM_ENCS (number of measuring systems)
MD36500 \$MA_ENC_CHANGE_TOL
(Maximum tolerance at actual position value change)

32452	BACKLASH_FACTOR	A09	K3,G2,S1,V1
-	Evaluation factor for backlash	DOUBLE	NEW CONF
-			
-	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	0.01

Description: Evaluation factor for backlash.

The machine data enables the backlash defined in MD32450 \$MA_BACKLASH to be changed as a function of the parameter set, in order to take a gear stage dependent backlash into account, for example.

Related to:
MD32450 \$MA_BACKLASH[n]

32490	FRICT_COMP_MODE	A09	K3
-	Type of friction compensation	BYTE	PowerOn
-			
-	1	1	0

Description:

0: No friction compensation
1: Friction compensation with constant injection value or adaptive characteristic
2: Friction compensation with learned characteristic via neural network

Axis-specific machine data

32500	FRICT_COMP_ENABLE	A09	K3,G2
-	Friction compensation active	BOOLEAN	NEW CONF
-			
-	-	FALSE	-
-	-	-	2/2

Description:

1: Friction compensation is enabled for this axis.

Depending on the setting of MD32490 \$MA_FRICT_COMP_MODE, either "friction compensation with constant modulation factor" or "QEC with neural networks" becomes active.

In the case of neural QEC, the machine data should not be set to "1" until a valid characteristic has been "learnt".

During the learning stage, the compensation values are added on independently of the contents of this machine data.

0: Friction compensation is not enabled for this axis.

Thus, no friction compensation values are entered.

Related to:

MD32490 \$MA_FRICT_COMP_MODE

Friction compensation type

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE

Friction compensation adaptation active

MD32520 \$MA_FRICT_COMP_CONST_MAX

Maximum friction compensation value

MD32540 \$MA_FRICT_COMP_TIME

Friction compensation time constant

MD38010 \$MA_MM_QEC_MAX_POINTS

Number of interpolation points for QEC with neural networks

32510	FRICT_COMP_ADAPT_ENABLE	EXP, A09	K3
-	Adaptation friction compensation active	BOOLEAN	NEW CONF
-			
-	1	FALSE	-
			2/2

Description: 1: Friction compensation with amplitude adaptation is enabled for the axis. Quadrant errors on circular contours can be compensated with friction compensation.

The amplitude of the friction compensation value required to be added on is frequently not constant over the entire acceleration range. That is, a lower compensation value needs to be entered for optimum friction compensation for higher accelerations than for lower accelerations.

The parameters of the adaptation curve have to be determined, and entered in the machine data.

0: Friction compensation with amplitude adaptation is not enabled for the axis.

MD irrelevant for:

MD32500 \$MA_FRICT_COMP_ENABLE = 0

MD32490 \$MA_FRICT_COMP_MODE = 2

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE

Friction compensation active

MD32520 \$MA_FRICT_COMP_CONST_MAX

Maximum friction compensation value

MD32530 \$MA_FRICT_COMP_CONST_MIN

Minimum friction compensation value

MD32550 \$MA_FRICT_COMP_ACCEL1

Adaptation acceleration value 1

MD32560 \$MA_FRICT_COMP_ACCEL2

Adaptation acceleration value 2

MD32570 \$MA_FRICT_COMP_ACCEL3

Adaptation acceleration value 3

MD32540 \$MA_FRICT_COMP_TIME

Friction compensation time constant

Axis-specific machine data

32520	FRICT_COMP_CONST_MAX	EXP, A09	K3
mm/min, rev/min	Maximum friction compensation value	DOUBLE	NEW CONF
-			
-	1	0.0	-
			2/2

Description: If adaptation is inactive (MD32510=0), the maximum friction compensation is added throughout the entire acceleration range.
 If adaptation is active (MD32510=1), the maximum friction compensation is entered in accordance with the adaptation curve.
 In the 1st acceleration range ($a < MD32550$), the add-on amplitude = $MD32520 * (a/MD32550)$
 In the 2nd acceleration range ($MD32550 \leq a \leq MD32560$), the add-on amplitude = $MD32520$
 In the 3rd acceleration range ($MD32560 < a < MD32570$), the add-on amplitude = $MD32520 * (1 - (a - MD32560) / (MD32570 - MD32560))$
 In the 4th acceleration range ($MD32570 \leq a$), the add-on amplitude = $MD32530$
 MD irrelevant for:

```
MD32500 $MA_FRICT_COMP_ENABLE = 0
MD32490 $MA_FRICT_COMP_MODE = 2 (neural QEC)
```

Related to:

```
MD32500 $MA_FRICT_COMP_ENABLE
Friction compensation active
MD32510 $MA_FRICT_COMP_ADAPT_ENABLE
Friction compensation adaptation active
MD32530 $MA_FRICT_COMP_CONST_MIN
Minimum friction compensation value
MD32550 $MA_FRICT_COMP_ACCEL1
Adaptation acceleration value 1
MD32560 $MA_FRICT_COMP_ACCEL2
Adaptation acceleration value 2
MD32570 $MA_FRICT_COMP_ACCEL3
Adaptation acceleration value 3
MD32540 $MA_FRICT_COMP_TIME
Friction compensation time constant
```


32530	FRICT_COMP_CONST_MIN	EXP, A09	K3
mm/min, rev/min	Minimum friction compensation value	DOUBLE	NEW CONF
-			
-	1	0.0	-
			2/2

Description: The minimum friction compensation value is active only if "Friction compensation with adaptation" (MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE=1) is active.
The amplitude of the friction compensation value is entered in the 4th acceleration range (MD32570 \$MA_FRICT_COMP_ACCEL3 <= a).
MD irrelevant for:

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE = 0
MD32490 \$MA_FRICT_COMP_MODE = 2 (neural QEC)

Special cases:

In special cases, the value for FRICT_COMP_CONST_MIN may be even higher than for MD32520 \$MA_FRICT_COMP_CONST_MAX.

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE
Friction compensation active
MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE
Friction compensation adaptation active
MD32520 \$MA_FRICT_COMP_CONST_MAX
Maximum friction compensation value
MD32550 \$MA_FRICT_COMP_ACCEL1
Adaptation acceleration value 1
MD32560 \$MA_FRICT_COMP_ACCEL2
Adaptation acceleration value 2
MD32570 \$MA_FRICT_COMP_ACCEL3
Adaptation acceleration value 3
MD32540 \$MA_FRICT_COMP_TIME
Friction compensation time constant

32540	FRICT_COMP_TIME	EXP, A09	K3
s	Friction compensation time constant	DOUBLE	NEW CONF
-			
-	1	0.015	-
			2/2

Description: The friction compensation value is entered via a DT1 filter.
The add-on amplitude decays in accordance with the time constant.
MD irrelevant for:

MD32500 \$MA_FRICT_COMP_ENABLE = 0

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE
Friction compensation active
MD32520 \$MA_FRICT_COMP_CONST_MAX
Maximum friction compensation value

Axis-specific machine data

32550	FRICT_COMP_ACCEL1			EXP, A09	K3
m/s ² , rev/s ²	Adaptation acceleration value 1			DOUBLE	NEW CONF
-					
802d-cu3	1	0.0	-	-	1/1
802d-ng2	1	0.0	-	-	0/0
802d-ng3	1	0.0	-	-	1/1
802d-tm1	1	0.0	-	-	0/0
802d-tm2	1	0.0	-	-	0/0
802d-tm3	1	0.0	-	-	1/1

Description:

The adaptation acceleration value is only required if "Friction compensation with adaptation" (MD32510=1) is active.

The adaptation acceleration values 1 to 3 are interpolation points for defining the adaptation curve. The adaptation curve is subdivided into 4 ranges, in each of which a different friction compensation value applies.

For the 1st range ($a < MD32550$), the add-on amplitude = $a * MD32520 / MD32550$

MD irrelevant for:

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE = 0

MD32490 \$MA_FRICT_COMP_MODE = 2

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE

Friction compensation active

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE

Friction compensation adaptation active

MD32520 \$MA_FRICT_COMP_CONST_MAX

Maximum friction compensation value

MD32530 \$MA_FRICT_COMP_CONST_MIN

Minimum friction compensation value

MD32560 \$MA_FRICT_COMP_ACCEL2

Adaptation acceleration value 2

MD32570 \$MA_FRICT_COMP_ACCEL3

Adaptation acceleration value 3

MD32540 \$MA_FRICT_COMP_TIME

Friction compensation time constant

32560	FRICT_COMP_ACCEL2			EXP, A09	K3
m/s ² , rev/s ²	Adaptation acceleration value 2			DOUBLE	NEW CONF
-					
802d-cu3	1	0.0	-	-	1/1
802d-ng2	1	0.0	-	-	0/0
802d-ng3	1	0.0	-	-	1/1
802d-tm1	1	0.0	-	-	0/0
802d-tm2	1	0.0	-	-	0/0
802d-tm3	1	0.0	-	-	1/1

Description: The adaptation acceleration value is only required if "Friction compensation with adaptation" (MD32510=1) is active.
The adaptation acceleration values 1 to 3 are interpolation points for defining the adaptation curve. The adaptation curve is subdivided into 4 ranges, in each of which a different friction compensation value applies.

In the 1st acceleration range ($a < MD32550$), the add-on amplitude = $MD32520 * (a/MD32550)$

In the 2nd acceleration range ($MD32550 \leq a \leq MD32560$), the add-on amplitude = $MD32520$

In the 3rd acceleration range ($MD32560 < a < MD32570$), the add-on amplitude = $MD32520 * (1 - (a - MD32560) / (MD32570 - MD32560))$

In the 4th acceleration range ($MD32570 \leq a$), the add-on amplitude = $MD32530$

MD irrelevant for:

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE = 0

MD32490 \$MA_FRICT_COMP_MODE = 2

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE

Friction compensation active

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE

Friction compensation adaptation active

MD32520 \$MA_FRICT_COMP_CONST_MAX

Maximum friction compensation value

MD32530 \$MA_FRICT_COMP_CONST_MIN

Minimum friction compensation value

MD32550 \$MA_FRICT_COMP_ACCEL1

Adaptation acceleration value 1

MD32570 \$MA_FRICT_COMP_ACCEL3

Adaptation acceleration value 3

MD32540 \$MA_FRICT_COMP_TIME

Friction compensation time constant

Axis-specific machine data

32570	FRICT_COMP_ACCEL3			EXP, A09	K3
m/s ² , rev/s ²	Adaptation acceleration value 3			DOUBLE	NEW CONF
-					
802d-cu3	1	0.0	-	-	1/1
802d-ng2	1	0.0	-	-	0/0
802d-ng3	1	0.0	-	-	1/1
802d-tm1	1	0.0	-	-	0/0
802d-tm2	1	0.0	-	-	0/0
802d-tm3	1	0.0	-	-	1/1

Description: The adaptation acceleration value is only required if "Friction compensation with adaptation" (MD32510=1) is active.
The adaptation acceleration values 1 to 3 are interpolation points for defining the adaptation curve. The adaptation curve is subdivided into 4 ranges, in each of which a different friction compensation value applies.

In the 1st acceleration range ($a < MD32550$), the add-on amplitude = $MD32520 * (a/MD32550)$

In the 2nd acceleration range ($MD32550 \leq a \leq MD32560$), the add-on amplitude = $MD32520$

In the 3rd acceleration range ($MD32560 < a < MD32570$), the add-on amplitude = $MD32520 * (1 - (a - MD32560) / (MD32570 - MD32560))$

In the 4th acceleration range ($MD32570 \leq a$), the add-on amplitude = $MD32530$

MD irrelevant for:

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE = 0

MD32490 \$MA_FRICT_COMP_MODE = 2

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE

Friction compensation active

MD32510 \$MA_FRICT_COMP_ADAPT_ENABLE

Friction compensation adaptation active

MD32520 \$MA_FRICT_COMP_CONST_MAX

Maximum friction compensation value

MD32530 \$MA_FRICT_COMP_CONST_MIN

Minimum friction compensation value

MD32550 \$MA_FRICT_COMP_ACCEL1

Adaptation acceleration value 1

MD32560 \$MA_FRICT_COMP_ACCEL2

Adaptation acceleration value 2

MD32540 \$MA_FRICT_COMP_TIME

Friction compensation time constant

32580	FRICT_COMP_INC_FACTOR			A09	K3
%	Weighting factor of friction comp. value w/ short trav. movem.			DOUBLE	NEW CONF
-					
802d-cu3	1	0.0	0	100.0	1/1
802d-ng2	1	0.0	0	100.0	0/0
802d-ng3	1	0.0	0	100.0	1/1
802d-tm1	1	0.0	0	100.0	0/0
802d-tm2	1	0.0	0	100.0	0/0
802d-tm3	1	0.0	0	100.0	1/1

Description: The optimum friction compensation value determined by the circularity test can cause overcompensation of this axis if compensation is activated and axial positioning movements are short. In such cases, a better setting can be achieved by reducing the amplitude of the friction compensation value and acts on all positioning blocks that are made within an interpolation cycle of the control.

The factor that has to be entered can be determined empirically and can be different from axis to axis because of the different friction conditions. The input range is between 0 and 100% of the value determined by the circularity test.

The default setting is 0; so that no compensation is performed for short traversing movements.

Related to:

MD32500 \$MA_FRICT_COMP_ENABLE Friction compensation active

Axis-specific machine data

32610	VELO_FFW_WEIGHT			A07, A09	G1,TE1,K3,S3,A3, G2,S1,V1
-	Feedforward control factor f. velocity/speed feedforward control			DOUBLE	NEW CONF
-					
802d-cu3	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	2/2
802d-ng2	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	0/0
802d-ng3	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	2/2
802d-tm1	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	0/0
802d-tm2	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	0/0
802d-tm3	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0	-	-	2/2

Description: Weighting factor for feedforward control. Is normally = 1.0 on digital drives, since these keep the setpoint speed exactly. On analog drives, this factor can be used to compensate the gain error of the drive actuator, so that the actual speed becomes exactly equal to the setpoint speed (this reduces the following error with feedforward control).

On both drive types, the effect of the feedforward control can be continuously reduced with a factor of < 1.0, if the machine moves too abruptly and other measures (e.g. jerk limitation) are not to be used. This also reduces possibly existing overshoots; however, the error increases on curved contours, e.g. on a circle. With 0.0, you have a pure position controller without feedforward control.

Contour monitoring takes into account factors < 1.0.

In individual cases, it can, however, become necessary to increase MD CONTOUR_TOL.

32620	FFW_MODE	A07, A09	G1,K3,S3,G2,S1
-	Feedforward control mode	BYTE	Reset
-			
-	-	3	0
-	-	4	1/1

Description: FFW_MODE defines the feedforward control mode to be applied on an axis-specific basis:

- 0 = No feedforward control
- 1 = Speed feedforward control with PT1 balancing
- 2 = Torque feedforward control (only for SIMODRIVE611D) with PT1 balancing
- 3 = Speed feedforward control with Tt balancing
- 4 = Torque feedforward control (only for SIMODRIVE611D) with Tt balancing

The high-level language instructions FFWON and FFWOF are used to activate and deactivate the feedforward control for specific channels on all axes.

To prevent the feedforward control from being affected by these instructions on individual axes, you can define that it is always activated or always deactivated in machine data FFW_ACTIVATION_MODE (see also FFW_ACTIVATION_MODE).

The torque feedforward control must be activated via the global option data \$ON_FFW_MODE_MASK.

If a feedforward control mode is selected (speed or torque feedforward control), whether or not the feedforward control can be activated or deactivated by the part program can also be set in MD32630 \$MA_FFW_ACTIVATION_MODE.

Torque feedforward control is an option that has to be enabled.

Related to:

- MD32630 \$MA_FFW_ACTIVATION_MODE
- MD32610 \$MA_VELO_FFW WEIGHT
- MD32650 \$MA_AX_INERTIA

Axis-specific machine data

32630	FFW_ACTIVATION_MODE			A07, A09	K3,G2
-	Activate feedforward control from program			BYTE	Reset
CTEQ					
802d-cu3	-	1	0	2	2/2
802d-ng2	-	1	0	2	0/0
802d-ng3	-	1	0	2	2/2
802d-tm1	-	1	0	2	0/0
802d-tm2	-	1	0	2	0/0
802d-tm3	-	1	0	2	2/2

Description: MD32630 \$FFW_ACTIVATION_MODE can be used to define whether the feedforward control for this axis/spindle can be switched on and off by the part program.

0 = The feedforward control cannot be switched on or off by the high-level language elements FFWON and FFWOF respectively.

For the axis/spindle, the state specified by MD32620 \$MA_FFW_MODE is therefore always effective.

1 = The feedforward control can be switched on and off by the part program with FFWON and FFWOF respectively.

The instruction FFWON/FFWOF becomes active immediately

2 = The feedforward control can be switched on and off by the part program with FFWON and FFWOF respectively.

The instruction FFWON/FFWOF does not become active until the next axis standstill

The default setting is specified by the channel-specific MD20150 \$MC_GCODE_RESET_VALUES. This setting is valid even before the first NC block is executed.

Notes:

The last valid state continues to be active even after Reset (and therefore also with JOG).

As the feedforward control of all axes of the channel is switched on and off by FFWON and FFWOF respectively, MD32630 \$MA_FFW_ACTIVATION_MODE should be set identically for axes interpolating with one another.

Switching feedforward control on or off while the axis/spindle is traversing may cause compensation operations in the control loop. Interpolating axes are therefore stopped by the part program if such switching operations occur (internal stop Stop G09 is triggered).

Related to:

MD32620 \$MA_FFW_MODE
MD20150 \$MC_GCODE_RESET_VALUES

32640	STIFFNESS_CONTROL_ENABLE	A01, A07	TE3,G2
-	Dynamic stiffness control	BOOLEAN	NEW CONF
CTEQ			
-	1	FALSE	2/2

Description: Dynamic stiffness control is active when the bit is set. Higher servo gain factors are possible if stiffness control is active (MD32200 \$MA_POSCTRL_GAIN).
Precondition: The drive supports the DSC function (see SIMODRIVE611D and PROFIdrive).
Note on PROFIdrive drives:
Alarm 26017 refers to this machine data, if
a. The PROFIdrive telegram used (see \$MN_DRIVE_TELEGRAM_TYPE) does not support the DSC function. Remedy: Use a sufficiently powerful telegram (e.g. tel. 106, 116).
b. Specifically for SINAMICS drives, if inversion of the encoder signal is parameterized in \$MA_ENC_FEEDBACK_POL=-1 for active DSC. Remedy: Remove inversion of the encoder signal from \$MA_ENC_FEEDBACK_POL, and enter it in SINAMICS parameter p410 instead.

32642	STIFFNESS_CONTROL_CONFIG	A01, A07	-
-	Dynamic stiffness control configuration (DSC)	BYTE	NEW CONF
CTEQ			
-	1	0	2/2

Description: Configuration of dynamic stiffness control (DSC):
0: DSC in drive works with indirect measuring system, i.e. motor measuring system (standard case)
1: DSC in drive works with direct measuring system
Notes:
Availability of this function depends on the drive used (the drive must support function DSC).
With SIMODRIVE611D (without independent parameterization on the drive) or SINAMICS (P1193 unequal to 0) the value of this machine data must be set to 0.

32644	STIFFNESS_DELAY_TIME	A01, A07	-
s	dynamic stiffness control: Delay	DOUBLE	PowerOn
CTEQ			
-	1	-0.0015	2/2

Description: Configuration of compensation dead time of the dynamic stiffness control (DSC) with optimized PROFIBUS/PROFINET cycle, unit: seconds

Axis-specific machine data

32700	ENC_COMP_ENABLE	A09	K3
-	Encoder/spindle error compensation.	BOOLEAN	NEW CONF
-			
-	1	FALSE, FALSE	-
			2/2

Description: 1: LEC (leadscrew error compensation) is activated for the measuring system.

This enables leadscrew and measuring system errors to be compensated.

The function is not enabled internally until the relevant measuring system has been referenced (NC/PLC interface signal V390x 0000.4 / .5 (Referenced/synchronized 1 or 2) = 1).

write protect function (compensation values) active.

0: LEC is not active for the axis/measuring system.

Related to:

MD38000 \$MA_MM_ENC_COMP_MAX_POINTS number of interpolation points with LEC

NC/PLC interface signal V390x 0000.4 (Referenced/synchronized 1)

NC/PLC interface signal V390x 0000.5 (Referenced/synchronized 2)

32710	CEC_ENABLE	A09	K3
-	Enable of sag compensation	BOOLEAN	NEW CONF
-			
802d-cu3	-	FALSE	-
802d-ng2	-	FALSE	-
802d-ng3	-	FALSE	-
802d-tm1	-	FALSE	-
802d-tm2	-	FALSE	-
802d-tm3	-	FALSE	-

Description: 1: Sag compensation is enabled for this axis.

Inter-axis machine geometry errors (e.g. sag and angularity errors) can be compensated with sag compensation.

The function is not activated until the following conditions have been fulfilled:

- The "Interpolatory compensation" option is set
- The associated compensation tables have been loaded into the NC user memory and enabled (SD41300 \$SN_CEC_TABLE_ENABLE[t] = 1)
- The relevant position measuring system is referenced (NC/PLC interface signal V390x 0000.4 / .5 = 1 (Referenced/synchronized 1 or 2))

0: Sag compensation is not enabled for the compensation axis.

Related to:

MD18342 \$MN_MM_CEC_MAX_POINTS[t]

Number of interpolation points for sag compensation

SD41300 \$SN_CEC_TABLE_ENABLE[t]

Enable evaluation of sag compensation table t

NC/PLC interface signal V390x 0000.4 / .5

(referenced/synchronized 1 or 2)

Axis-specific machine data

32711	CEC_SCALING_SYSTEM_METRIC			A09	K3,G2
-	Measuring system of sag compensation			BOOLEAN	NEW CONF
-					
802d-cu3	-	TRUE	-	-	1/1
802d-ng2	-	TRUE	-	-	1/1
802d-ng3	-	TRUE	-	-	1/1
802d-tm1	-	TRUE	-	-	-1/2
802d-tm2	-	TRUE	-	-	1/1
802d-tm3	-	TRUE	-	-	1/1

Description: Compensation data exist in:
0: inch system
1: metric system

32720	CEC_MAX_SUM			A09	K3
mm, degrees	Maximum compensation value for sag compensation			DOUBLE	NEW CONF
-					
802d-cu3	-	1.0	0	1.0	1/1
802d-ng2	-	1.0	0	1.0	1/1
802d-ng3	-	1.0	0	1.0	1/1
802d-tm1	-	1.0	0	1.0	-1/2
802d-tm2	-	1.0	0	1.0	1/1
802d-tm3	-	1.0	0	1.0	1/1

Description: In sag compensation, the absolute value of the total compensation value (sum of compensation values of all active compensation relations) is monitored axially with machine data value CEC_MAX_SUM. If the determined total compensation value is larger than the maximum value, alarm 20124 is triggered. Program processing is not interrupted. The compensation value output as the additional set-point is limited to the maximum value.

MD irrelevant to:

- MSEC
- Backlash compensation
- Temperature compensation

Related to:

MD32710 \$MA_CEC_ENABLE
Enable sag compensation
SD41300 \$SN_CEC_TABLE_ENABLE[t]
Enable evaluation of sag compensation table t
NC/PLC interface signal V390x 0000.4 / .5
(referenced/synchronized 1 or 2)

Axis-specific machine data

32730	CEC_MAX_VELO			EXP, A09, A04	K3
%	Change in velocity at CEC			DOUBLE	NEW CONF
-					
802d-cu3	-	10.0	0	100.0	1/1
802d-ng2	-	10.0	0	100.0	1/1
802d-ng3	-	10.0	0	100.0	1/1
802d-tm1	-	10.0	0	100.0	-1/2
802d-tm2	-	10.0	0	100.0	1/1
802d-tm3	-	10.0	0	100.0	1/1

Description: In sag compensation, modification of the total compensation value (sum of the compensation values of all active compensation relations) is limited axially. The maximum change value is defined in this machine data as a percentage of MD32000 \$MA_MAX_AX_VELO (maximum axis velocity).

If the change in the total compensation value is greater than the maximum value, alarm 20125 is output. Program processing is however continued. The path not covered because of the limitation is made up as soon as the compensation value is no longer subject to limitation.

MD irrelevant to:

- MSEC
- Backlash compensation
- Temperature compensation

Related to:

MD32710 \$MA_CEC_ENABLE

Enable sag compensation

MD32000 \$MA_MAX_AX_VELO

Maximum axis velocity

SD41300 \$SN_CEC_TABLE_ENABLE[t]

Enable evaluation of sag compensation table t

NC/PLC interface signal V390x 0000.4 / .5

(referenced/synchronized 1 or 2)

32750	TEMP_COMP_TYPE			A09	K3,W1
-	Temperature compensation type			BYTE	PowerOn
CTEQ					
-	-	0	0	7	0/0

Description: The type of temperature compensation applicable to the machine axis is activated in MD32750 \$MA_TEMP_COMP_TYPE.

A distinction is made between the following types:

- 0: No temperature compensation active
- 1: Position-independent temperature compensation active
(compensation value with SD43900 \$SA_TEMP_COMP_ABS_VALUE)
- 2: Position-dependent temperature compensation active
(compensation value with SD43910 \$SA_TEMP_COMP_SLOPE and SD43920 TEMP_COMP_REF_POSITION)

3: Position-dependent and position-independent temperature compensation active

(compensation values with SD according to types 1 and 2)

Temperature compensation is an option that must be enabled.

Related to:

SD43900 \$SA_TEMP_COMP_ABS_VALUE

Position-dependent temperature compensation value

SD43920 \$SA_TEMP_COMP_REF_POSITION

Reference point for position-dependent temperature compensation

SD43910 \$SA_TEMP_COMP_SLOPE

Gradient for position-dependent temperature compensation

MD32760 \$MA_COMP_ADD_VELO_FACTOR

Excessive velocity due to compensation

32760	COMP_ADD_VELO_FACTOR	EXP, A09, A04	K3
-	Excessive velocity due to compensation	DOUBLE	NEW CONF
CTEQ			
-	-	0.01	0.
		0.10	0/0

Description:

The maximum distance that can be traversed because of temperature compensation in one IPO cycle can be limited by the axial MD32760 \$MA_COMP_ADD_VELO_FACTOR.

If the resulting temperature compensation value is above this maximum, it is traversed over several IPO cycles. There is no alarm. The maximum compensation value per IPO cycle is specified as a factor referring to the maximum axis velocity (MD32000 \$MA_MAX_AX_VELO).

The maximum gradient of the temperature compensation tanbmax is also limited with this machine data.

Example of calculation of the maximum gradient tanb(max):

1. Calculation of the interpolator cycle time (see Description of Functions Velocities, Setpoint/Actual Value Systems, Cycle Times (G2))

Interpolator cycle time = Basic system clock rate * factor for interpolation cycle

Interpolator cycle time = MD10050 \$MN_SYSCLOCK_CYCLE_TIME ^ MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO

Example:

MD10050 \$MN_SYSCLOCK_CYCLE_TIME = 0.004 [s]

MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO = 3

-> Interpolator cycle time = 0.004 * 3 = 0.012 [s]

2. Calculation of the maximum velocity increase resulting from a change made to the temperature compensation parameter DvTmax

DvTmax = MD32000 \$MA_MAX_AX_VELO * MD32760

\$MA_COMP_ADD_VELO_FACTOR

Example: MD32000 \$MA_MAX_AX_VELO = 10 000 [mm/min]

MD32760 \$MA_COMP_ADD_VELO_FACTOR = 0.01

-> DvTmax = 10 000 * 0.01 = 100 [mm/min]

Axis-specific machine data

3. Calculation of the traverse distances per interpolator cycle

$$S1 \text{ (at } v_{\max}) = 10\,000 \times \frac{0.012}{60} = 2.0 \text{ [mm]}$$

$$ST \text{ (at } DvT_{\max}) = 100 \times \frac{0.012}{60} = 0.02 \text{ [mm]}$$

4. Calculation of $\tan b_{\max}$

$$\tan b_{\max} = \frac{ST}{S1} = \frac{0.02}{2} = 0.01 \text{ (corresponds to value for}$$

COMP_ADD_VELO_FACTOR)

$$\rightarrow b_{\max} = \arctan 0.01 = 0.57 \text{ degrees}$$

With larger values of SD43910 \$SA_TEMP_COMP_SLOPE, the maximum gradient (here 0.57 degrees) for the position-dependent temperature compensation value is used internally. There is no alarm.

Note:

Any additional excessive velocity resulting from temperature compensation must be taken into account when defining the limit value for velocity monitoring (MD36200 \$MA_AX_VELO_LIMIT).

MD irrelevant for:

MD32750 \$MA_TEMP_COMP_TYPE = 0, sag compensation, LEC, backlash compensation

Related to:

MD32750 \$MA_TEMP_COMP_TYPE

Temperature compensation type

SD43900 \$SA_TEMP_COMP_ABS_VALUE

Position-independent temperature compensation value

SD43910 \$SA_TEMP_COMP_SLOPE

Gradient for position-dependent temperature compensation

MD32000 \$MA_MAX_AX_VELO

Maximum axis velocity

MD36200 \$MA_AX_VELO_LIMIT

Threshold value for velocity monitoring

MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO

Ratio of basic system clock rate to IPO cycle

MD10050 \$MN_SYSCLOCK_CYCLE_TIME

Basic system clock rate

32800	EQUIV_CURRCTRL_TIME		EXP, A07, A09	G1,K3,S3,A2,A3, G2,S1,V1
s	Equiv. time const. current control loop for feedforward control		DOUBLE	NEW CONF
-				
-	6	0.0005, 0.0005, 0.0005, 0.0005, 0.0005, 0.0005	-	0/0

Description: The time constant is used for parameterizing the torque feedforward control and for calculating the dynamic following error model (contour monitoring).

In order to set the torque feedforward control correctly, the equivalent time constant of the current control loop must be determined exactly by measuring the step response of the current control loop.

Closed-loop control free of following errors can be set by inputting negative values when MD32620 \$MA_FFW_MODE=4 (but positioning overshoots may then occur).

Delay values taken into account automatically by the software internally are thus compensated again until the actually active minimum symmetrizing time "0" is reached.

Any other negative input values have no further effect.

Negative values input when MD32620 \$MA_FFW_MODE=2 are automatically converted internally to the input value "0", which means that they are not active in this case.

Related to:

MD32620 \$MA_FFW_MODE

Type of feedforward control

MD32650 \$MA_AX_INERTIA

Moment of inertia for torque feedforward control

or MD32652 \$MA_AX_MASS

Axis mass for torque feedforward control

MD36400 \$MA_CONTOUR_TOL

Tolerance band contour monitoring

Axis-specific machine data

32810	EQUIV_SPEEDCTRL_TIME		A07, A09	G1,K3,S3,A2,A3, G2,S1,V1
s	Equiv. time constant speed control loop for feedforward control		DOUBLE	NEW CONF
-				
-	6	0.003, 0.003, 0.003, 0.003, 0.003...	-	2/2

Description: This time constant must be equal to the equivalent time constant of the closed current control loop.

It is used for parameterizing the speed feedforward control and for calculating the dynamic following error model (contour monitoring).

In addition, this MD determines the time behavior of the closed-loop speed control circuit for simulated drives (MD30130 \$MA_CTRLOUT_TYPE 0).

In order to set the speed feedforward control correctly, the equivalent time constant of the current control loop must be determined exactly by measuring the step response of the current control loop.

Closed-loop control free of following errors can be set by inputting negative values when MD32620 \$MA_FFW_MODE=3 (but positioning overshoots may then occur).

Delay values taken into account automatically by the software internally are thus compensated again until the actually active minimum symmetrizing time "0" is reached.

Any other negative input values have no further effect.

Negative values input when MD32620 \$MA_FFW_MODE=1 are automatically converted internally to the input value "0", which means that they are not active in this case.

Related to:

MD32620 \$MA_FFW_MODE (type of feedforward control)
MD32610 \$MA_VELO_FFW_WEIGHT (moment of inertia for speed feedforward control)
MD36400 \$MA_CONTOUR_TOL (tolerance band contour monitoring)

32900	DYN_MATCH_ENABLE		A07	G21,S3,G2
-	Dynamic response adaptation		BOOLEAN	NEW CONF
CTEQ				
-	-	FALSE	-	1/1

Description: With dynamic response adaptation, axes with different servo gain factors can be set to the same following error with MD32910 \$MA_DYN_MATCH_TIME.

1: Dynamic response adaptation active.
0: Dynamic response adaptation inactive.

Related to:

MD32910 \$MA_DYN_MATCH_TIME[n]
(time constant of dynamic response adaptation)

Axis-specific machine data

32910	DYN_MATCH_TIME	A07	G1,K3,S3,A2,A3, G2,S1,V1
s	Time constant of dynamic response adaptation	DOUBLE	NEW CONF
-			
-	6	0.0, 0.0, 0.0, 0.0, 0.0, 0.0	- / 1/1

Description: The time constant of the dynamic response adaptation of an axis has to be entered in this MD.
 Axes interpolating with each other but having different dynamic responses can be adapted to the "slowest" control loop by means of this value.
 The difference of the equivalent time constant of the "slowest" control loop to the individual axis has to be entered here as the time constant of the dynamic response adaptation.
 The MD is only active if MD32900 \$MA_DYN_MATCH_ENABLE = 1.
 Related to:
 MD32900 \$MA_DYN_MATCH_ENABLE (dynamic response adaptation)

32920	AC_FILTER_TIME	A10	-
s	Smoothing filter time constant for adaptive control	DOUBLE	PowerOn
-			
-	-	0.0	- / 0/0

Description: For SIMODRIVE611D (as well as for PROFIdrive drives, provided that they transport the following actual drive values in the PROFIdrive message frame, e.g. MD13060 \$MN_DRIVE_TELEGRAM_TYPE = 116):
 With the main run variables \$AA_LOAD, \$AA_POWER, \$AA_TORQUE and \$AA_CURR, the following drive actual values can be measured:

- Drive utilization
- Drive active power
- Drive torque setpoint value
- Current actual value of the axis or spindle

To compensate any peaks, the measured values can be smoothed with a PT1 filter. The filter time constant is defined via MD32920 \$MA_AC_FILTER_TIME (filter smoothing time constant for adaptive control).
 When measuring the drive torque setpoint value or the current actual value, the filter is active in addition to the filters available in the drive. The two filters are connected in series, if both strongly and slightly smoothed values are required in the system. The filter is switched off when a smoothing time of 0 seconds is entered.

32930	POSCTRL_OUT_FILTER_ENABLE	A07	G2
-	Activation of low-pass filter at position controller output	BOOLEAN	NEW CONF
CTEQ			
-	-	FALSE	- / 0/0

Description: Activation of low-pass filter at position controller output.
 Activation of the low-pass filter is only enabled when the dynamic stiffness control is inactive MD32640=0.

Axis-specific machine data

32940	POSCTRL_OUT_FILTER_TIME	A07	G2
s	Time constant of low-pass filter at position controller output	DOUBLE	NEW CONF
-			
-	-	0.0	-
-	-	-	0/0

Description: Time constant of low-pass filter at position controller output
 Related to:
 MD32640 \$MA_STIFFNESS_CONTROL_ENABLE (dynamic stiffness control)

32950	POSCTRL_DAMPING	EXP, A07	G2
%	Damping of the speed control circuit.	DOUBLE	NEW CONF
-			
-	-	0.0	-
-	-	-	0/0

Description: Application:
 Attenuation of an oscillating axis through additional activation of a rotational speed difference, which is determined from the difference of the two measuring systems.
 Condition: the axis must have two measuring systems, while one encoder must be connected directly, the other indirectly.
 Explanation of normalization by means of SIMODRIVE611D:
 An input value of "100%" means: An additional torque is activated in accordance with drive MD 1725, if

- a positional deviation of 1mm exists on linear motors
- a load-side positional deviation of 360 degrees exists on rotary axes
- a positional deviation corresponding to MD31030 \$MA_LEADSCREW_PITCH (e.g. 10mm as a standard) exists on linear axes (rot. drive).

33000	FIPO_TYPE	EXP, A07	G1,G3,S3,G2
-	Fine interpolator type	BYTE	PowerOn
CTEQ			
802d-cu3	-	2	1
802d-ng2	-	1	1
802d-ng3	-	2	1
802d-tm1	-	1	1
802d-tm2	-	1	1
802d-tm3	-	2	1

Description: The type of the fine interpolator has to be entered in this MD:
 1: differential FIPO
 2: cubic FIPO
 3: cubic FIPO, optimized for operation with feedforward control
 Calculation time required and contour quality increase with increasing type of FIPO.

- The default setting is the cubic FIPO.
- If no feedforward control is used in the position control loop, the use of the differential FIPO reduces the calculation time while slightly increasing the contour error.
- If the position control cycle and the interpolation cycle are identical, fine interpolation does not take place, i.e. the different types of fine interpolator do not have different effects.

33050	LUBRICATION_DIST	A03, A10	A2,Z1
mm, degrees	Traversing path for lubrication from PLC	DOUBLE	NEW CONF
-			
-	-	1.0e8	-
-	-	-	3/3

Description: After the traversing path defined in the MD has been covered, the state of the axial interface signal "Lubrication pulse" is inverted, this can activate an automatic lubrication device. The traversing path is summated after Power on. The "Lubrication pulse" can be used with axes and spindles. Application example(s): The machine bed lubrication can be carried out as a function of the relevant traversed path.

Note:
When 0 is entered, the NC/PLC interface signal V390x 1002.0 (Lubrication pulse) is set in every cycle.

Related to:
NC/PLC interface signal V390x 1002.0 (Lubrication pulse)

33060	MAINTENANCE_DATA	A10	W6,2,4,6,2
-	Configuration of maintenance data recording	DWORD	Reset
-			
-	-	1	-
-	-	-	1/1

Description: Configuration of axis maintenance data recording:

Bit 0:
Recording the entire traversing path, entire traversing time and number of axis traversing procedures

Bit 1:
Recording the entire traversing path, entire traversing time and number of traversing procedures at high axis speed

Bit 2:
Recording the total sum of axis jerks, the time in which the axis is traversed with jerk, and the number of traversing procedures with jerk.

2.4.4 Reference point approach

34000	REFP_CAM_IS_ACTIVE	A03, A11	G1,R1
-	Axis with reference point cam	BOOLEAN	Reset
-			
-	-	TRUE	-
-	-	-	2/2

Description:

1: There is at least one reference point cam for this axis
0: This axis does not have a reference point cam (e.g. rotary axis)

The referencing cycle starts immediately with phase 2 (see documentation)

Machine axes that have only one zero mark over the whole travel range or rotary axes that have only one zero mark per revolution do not require an additional reference cam that selects the zero mark (select MD34000 \$MA_REFP_CAM_IS_ACTIVE = 0).

The machine axis marked this way accelerates to the velocity specified in MD34040 \$MA_REFP_VELO_SEARCH_MARKER (reference point creep velocity) when the plus/minus traversing key is pressed, and synchronizes with the next zero mark.

34010	REFP_CAM_DIR_IS_MINUS	A03, A11	G1,R1
-	Approach reference point in minus direction	BOOLEAN	Reset
-			
-	-	FALSE	-
-	-	-	2/2

Description:

0: MD34010 \$MA_REFP_CAM_DIR_IS_MINUS Reference point approach in plus direction
1: MD34010 \$MA_REFP_CAM_DIR_IS_MINUS Reference point approach in minus direction

For incremental measuring systems:

If the machine axis is positioned in front of the reference cam, it accelerates, depending on the plus/minus traversing key pressed, to the velocity specified in MD34020 \$MA_REFP_VELO_SEARCH_CAM (reference point approach velocity) in the direction specified in MD34010 \$MA_REFP_CAM_DIR_IS_MINUS. If the wrong traversing key is pressed, reference point approach is not started.

If the machine axis is positioned on the reference cam, it accelerates to the velocity specified in MD34020 \$MA_REFP_VELO_SEARCH_CAM and travels in the direction opposite to that specified in MD34010 \$MA_REFP_CAM_DIR_IS_MINUS.

Note on absolute encoders:

The direction of the traverse key is also important for adjusting the absolute encoder: approach direction for fixed position and updating the values in MD34090 \$MA_REFP_MOVE_DIST_CORR und MD34210 \$MA_ENC_REFP_STATE.

34020	REFP_VELO_SEARCH_CAM		A03, A11, A04	G1,R1
mm/min, rev/min	Reference point approach velocity		DOUBLE	Reset
-				
-	-	5000.00,5000.00,5000.00,5000.00...	-	2/2

Description: The reference point approach velocity is the velocity at which the machine axis travels in the direction of the reference cam after the traversing key has been pressed (phase 1). This value should be set at a magnitude large enough for the axis to be stopped to 0 before it reaches a hardware limit switch.

MD irrelevant for:

Linear measuring systems with distance-coded reference marks

34030	REFP_MAX_CAM_DIST		A03, A11	G1,R1
mm, degrees	Maximum distance to reference cam		DOUBLE	Reset
-				
-	-	10000.0	-	2/2

Description: If the machine axis travels a maximum distance defined in MD34030 \$MA_REFP_MAX_CAM_DIST from the starting position in the direction of the reference cam, without reaching the reference cam (NC/PLC interface signal V380x1000.7 (Reference point approach delay) is reset), the axis stops and alarm 20000 "Reference cam not reached" is output.

Irrelevant to:

Linear measuring systems with distance-coded reference marks

34040	REFP_VELO_SEARCH_MARKER		A03, A11, A04	G1,R1,S1
mm/min, rev/min	Creep velocity		DOUBLE	Reset
-				
-	1	300.00, 300.00,300.00, 300.00...	-	2/2

Description: 1) For incremental measuring systems:
This is the velocity at which the axis travels during the time between initial detection of the reference cam and synchronization with the first zero mark (phase 2).
Traversing direction: Opposite to the direction specified for the cam search (MD34010 \$MA_REFP_CAM_DIR_IS_MINUS)
If MD34050 \$MA_REFP_SEARCH_MARKER_REVERSE (direction reversal on reference cam) is enabled, then if the axis is synchronized with a rising reference cam signal edge on the cam, the axis traverses at the velocity defined in MD34020 \$MA_REFP_VELO_SEARCH_CAM.

2) Indirect measuring system with BERO on the load-side (preferred for spindles):
At this velocity, a search is made for the zero mark associated with the BERO (zero mark selection per VDI signal). The zero mark is accepted if the actual velocity lies within the tolerance range defined in MD35150 \$MA_SPIND_DES_VELO_TOL as a deviation from the velocity specified in MD34040 \$MA_REFP_VELO_SEARCH_MARKER[n].

Axis-specific machine data

3) For linear measuring systems with distance-coded reference marks:

The axis crosses the two reference marks at this velocity. The maximum velocity must be low enough to ensure that the time required to travel the smallest possible reference mark distance [x(minimum)] on the linear measuring system is longer than one position controller cycle.

The formula

$$[x(\text{minimum})] \text{ [mm]} = \frac{\text{Basic dist.}}{2} * \text{Grad.cycle} - \frac{\text{Meas.length}}{\text{Basic dist.}}$$

with Basic distance [multiple of graduation cycle]

Graduation cycle [mm]

Measuring length [mm] yields:

x(minimum) [mm]

$$\text{max. velocity [m/s]} = \frac{\text{Position controller cycle [ms]}}{\text{Position controller cycle [ms]}}$$

This limiting value consideration also applies to the other measuring systems.

Traversing direction:

- as defined in MD34010 \$MA_REFP_CAM_DIR_IS_MINUS;
- if the axis is already positioned on the cam, the axis is traversed in the opposite direction

34050	REFP_SEARCH_MARKER_REVERSE	A03, A11	G1,R1
-	Direction reversal to reference cam	BOOLEAN	Reset
-			
-	1	FALSE, FALSE	-

Description:

This MD can be used to set the direction of search for the zero mark:

MD34050 \$MA_REFP_SEARCH_MARKER_REVERSE = 0

Synchronization with falling reference cam signal edge

The machine axis accelerates to the velocity specified in MD34040 \$MA_REFP_VELO_SEARCH_MARKER (reference point creep velocity) in the opposite direction to that specified in MD34010 \$MA_REFP_CAM_DIR_IS_MINUS (reference point approach in minus direction).

If the axis leaves the reference cam (NC/PLC interface signal V380x1000.7 (Reference point approach delay) is reset) the control is synchronized with the first zero mark.

MD34050 \$MA_REFP_SEARCH_MARKER_REVERSE = 1

Synchronization with rising reference cam signal edge

The machine axis accelerates to the velocity defined in MD34020 \$MA_REFP_VELO_SEARCH_CAM (reference point creep velocity) in the opposite direction to that specified in the MD34010 \$MA_REFP_CAM_DIR_IS_MINUS. If the axis leaves the reference cam (NC/PLC interface signal V380x1000.7 (Reference point approach delay) is reset), the machine axis decelerates to a halt and accelerates in the opposite direction towards the reference cam at the velocity specified in MD34040: \$MA_REFP_VELO_SEARCH_MARKER. When the reference cam is reached (NC/PLC interface signal V380x1000.7 (Reference point approach delay) is enabled) the control is synchronized with the first zero mark.

MD irrelevant to:

Linear measuring systems with distance-coded reference marks

34060	REFP_MAX_MARKER_DIST			A03, A11	G1,R1,S1
mm, degrees	maximum distance to reference mark			DOUBLE	Reset
-					
-	1	20.0, 20.0,20.0, 20.0,20.0, 20.0...	-	-	2/2

Description:

For incremental measuring systems:

If, after leaving the reference cam (NC/PLC interface signal V380x1000.7 (Reference point approach delay) is reset), the machine axis travels a distance defined in MD34060:

\$MA_REFP_MAX_MARKER_DIST without detecting the zero mark, the axis stops and alarm 20002 "Zero mark missing" is output.

For linear measuring systems with distance-coded reference marks:

If the machine axis travels a distance defined in MD34060 \$MA_REFP_MAX_MARKER_DIST from the starting position without crossing two zero marks, the axis stops and alarm 20004 "Reference mark missing" is output.

34070	REFP_VELO_POS			A03, A11, A04	G1,R1
mm/min, rev/min	Reference point positioning velocity			DOUBLE	Reset
-					
-	-	10000.00,10000.00,10 000.00,10000.00...	-	-	2/2

Description:

For incremental measuring systems:

The axis travels at this velocity between the time of synchronization with the first zero mark and arrival at the reference point.

For linear measuring systems with distance-coded reference marks:

The axis travels at this velocity between the time of synchronization (crossing two zero marks) and arrival at the target point.

Axis-specific machine data

34080	REFP_MOVE_DIST	A03, A11	G1,R1,S1,S3,G2
mm, degrees	Reference point distance	DOUBLE	NEW CONF
-			
-	1	-2.0, -2.0	-1e15
		1e15	2/2

Description:

- Standard measuring system (incremental with equidistant zero marks)
Reference point positioning movement: 3rd phase of the reference point approach:
The axis traverses from the position at which the zero mark is detected with the velocity REFP_AX_VELO_POS along the path REFP_MOVE_DIST + REFP_MOVE_DIST_CORR (relative to the marker). REFP_SET_POS is set as the current axis position at the target point.
- Irrelevant for distance-coded measuring system.
Override switch and selection jog/continuous mode (MD JOG_INC_MODE_IS_CONT) are active.

34090	REFP_MOVE_DIST_CORR	A03, A02, A08, A11	G1,R1,S1,S3,G2
mm, degrees	Reference point offset/absolute offset	DOUBLE	NEW CONF
-, -			
-	1	0.0, 0.0	-1e12
		1e12	2/2

Description:

- Incremental encoder with zero mark(s):
After detection of the zero mark, the axis is positioned away from the zero mark by the distance specified in MD34080 \$MA_REFP_MOVE_DIST + MD34090 \$MA_REFP_MOVE_DIST_CORR. After traversing this distance, the axis has reached the reference point. MD34100 \$MA_REFP_SET_POS is transferred into the actual value. During traversing by MD34080 \$MA_REFP_MOVE_DIST + MD34090 \$MA_REFP_MOVE_DIST_CORR, the override switch and MD11300 \$MN_JOG_INC_MODE_LEVELTRIGGRD (jog/continuous mode) are active.
- Distance-coded measuring system:
MD34090 \$MA_REFP_MOVE_DIST_CORR acts as an absolute offset. It describes the offset between the machine zero and the first reference mark of the measuring system.
- Absolute encoder:
MD34090 \$MA_REFP_MOVE_DIST_CORR acts as an absolute offset. It describes the offset between the machine zero and the zero point of the absolute measuring system.

Note:
In conjunction with absolute encoders, this MD is modified by the control during calibration processes and modulo offset.
With rotary absolute encoders (on linear and rotary axes), the modification frequency also depends on the setting of MD34220 \$MA_ENC_ABS_TURNS_MODULO.

Manual input or modification of this MD via the part program should therefore be followed by a Power ON Reset to activate the new value and prevent it from being lost.

The following applies to an NCU-LINK:

If a link axis uses an absolute encoder, every modification of MD34090 \$MA_REFP_MOVE_DIST_CORR on the home NCU (servo physically available) is updated only locally and not beyond the limits of the NCU. The modification is therefore not visible to the link axis. Writing MD34090 \$MA_REFP_MOVE_DIST_CORR through the link axis is rejected with alarm 17070.

34092	REFP_CAM_SHIFT	A03, A11	G1,R1
mm, degrees	electronic cam offset for incremental measuring systems	DOUBLE	Reset
-			
-	1	0.0, 0.0	-
			2/2

Description: Electronic cam offset for incremental measuring systems with equidistant zero marks.

When the reference cam signal occurs, the zero mark search does not start immediately but is delayed until after the distance from REFP_CAM_SHIFT.

This ensures the reproducibility of the zero mark search through a defined selection of a zero mark, even with temperature-dependent expansion of the reference cam.

Because the reference cam offset is calculated by the control in the interpolation cycle, the actual cam offset is at least REFP_CAM_SHIFT and at most REFP_CAM_SHIFT+(MD34040 \$MA_REFP_VELO_SEARCH_MARKER*interpolation cycle)

The reference cam offset is effective in the search direction of the zero mark.

The reference cam offset is only active if existing cam MD34000 \$MA_REFP_CAM_IS_ACTIVE=1.

34093	REFP_CAM_MARKER_DIST	A03, A11	R1
mm, degrees	Reference cam/reference mark distance	DOUBLE	PowerOn
-			
-	1	0.0, 0.0	-
			2/2

Description: The value displayed corresponds to the distance between exiting the reference cam and the occurrence of the reference mark. If the values are too small, there is a risk of not being able to determine the reference point due to temperature reasons or varying operating times of the cam signal. The distance travelled may serve as a clue for setting the electronic reference cam offset. This machine data is a display data and can therefore not be changed.

Axis-specific machine data

34100	REFP_SET_POS	A03, A11	G1,S3,G2,R1,S1
mm, degrees	Reference point for incremental system	DOUBLE	Reset
-			
-	4	0., 0., 0., 0.	-45000000 45000000 2/2

Description:

- Incremental encoder with zero mark(s):
The position value which is set as the current axis position after detection of the zero mark and traversal of the distance REFP_MOVE_DIST + REFP_MOVE_DIST_CORR (relative to zero mark). REFP_SET_POS of the reference point number, which is set as the instant that the edge of the reference cam signal rises (NC/PLC interface signal V380x 0002.4 - .7 (Reference point value 1 to 4)), is set as the axis position.
- Distance-coded measuring system:
Target position which is approached when MD34330 \$MA_REFP_STOP_AT_ABS_MARKER is set to 0 (FALSE) and two zero marks have been crossed.
- Absolute encoder:
MD34100 \$MA_REFP_SET_POS corresponds to the correct actual value at the calibration position.
The reaction on the machine depends on the status of MD34210 \$MA_ENC_REFP_STATE: When MD34210 \$MA_ENC_REFP_STATE = 1, the value of MD34100 \$MA_REFP_SET_POS is transferred as the absolute value. When MD34210 \$MA_ENC_REFP_STATE = 2 and MD34330 \$MA_REFP_STOP_AT_ABS_MARKER = 0 (FALSE), the axis approaches the target position stored in MD34100 \$MA_REFP_SET_POS.
The value of MD34100 \$MA_REFP_SET_POS that has been set via NC/PLC interface signal V380x 0002.4 - .7 (Reference point value 1 to 4) is used.
Related to:
NC/PLC interface signal V380x 0002.4 - .7 (Reference point value 1 to 4)

34102	REFP_SYNC_ENCS	A03, A02	R1,Z1
-	Calibration of measuring systems	BYTE	Reset
-			
-	-	0 0 1	0/0

Description:

- Calibrating the measuring system to the reference measuring system can be activated for all measuring systems of this axis with this machine data.
- The calibration procedure is made during reference point approach or when calibrated absolute encoders selected for the closed-loop control are switched on.
- Values:
- 0: No measuring system calibration, measuring systems must be referenced individually
- 1: Calibration of all measuring systems of the axis to the position of the reference measuring system
- In combination with MD30242 \$MA_ENC_IS_INDEPENDENT = 2, the passive encoder is calibrated to the active encoder but NOT referenced.

34104	REFP_PERMITTED_IN_FOLLOWUP	A03, A02	R1
-	Enable referencing in follow-up mode	BOOLEAN	Reset
-			
-	-	FALSE	-
-	-	-	1/1

Description: An axis can also be referenced in the follow-up mode under JOG+REF mode by means of an external motion.

34110	REFP_CYCLE_NR	A03	G1,TE3,D1,R1,Z1
-	Sequence of axes in channel-specific referencing	DWORD	PowerOn
-			
-	-	1,2,3,4,5,6,7,8,9,10,11 ,12,13,14,15,16,17,18. -1	31
-	-	-	2/2

Description: MD34110 \$MA_REFP_CYCLE_NR = 0 -----> axis-specific referencing
 Axis-specific referencing is started separately for each machine axis with the NC/PLC interface signal V380x 0004.7 / 4.6 (Plus/minus travel keys).
 Up to 8 axes (840D) can be referenced simultaneously.
 The following alternatives are provided for referencing the machine axes in a specific sequence:

- The operator has to observe the correct sequence on startup.
- The PLC checks the sequence on startup or defines the sequence itself.
- The channel-specific referencing function is used.

MD34110 \$MA_REFP_CYCLE_NR = 1 -----> channel-specific referencing
 Channel-specific referencing is started with the NC/PLC interface signal V3200 0001.0 (Activate referencing). The control acknowledges a successful start with the NC/PLC interface signal V3300 0001.0 (Referencing active). Each machine axis assigned to the channel can be referenced with channel-specific referencing (this is achieved internally on the control by simulating the plus/minus traversing keys). The axis-specific MD34110 \$MA_REFP_CYCLE_NR can be used to define the sequence in which the machine axes are referenced:

-1 means:
 The machine axis is not started by channel-specific referencing, and NC start is possible without referencing this axis.

0 means:
 The machine axis is not started by channel-specific referencing, and NC start is not possible without referencing this axis.

1 means:
 The machine axis is started by channel-specific referencing.

2 means:
 The machine axis is started by channel-specific referencing if all machine axes identified by a 1 in MD34110 \$MA_REFP_CYCLE_NR are referenced.

3 means:
 The machine axis is started by channel-specific referencing if all machine axes identified by a 2 in MD34110 \$MA_REFP_CYCLE_NR are referenced.

4 to 8 :
 As above for further machine axes.

Axis-specific machine data

Setting the channel-specific MD20700 \$MC_REF_NC_START_LOCK (NC start disable without reference point) to zero has the effect of entering -1 for all the axes of a channel.

MD irrelevant to:

Axis-specific referencing

Related to:

NC/PLC interface signal V3200 0001.0 (Activate referencing)

NC/PLC interface signal V3300 0001.0 (Referencing active)

34200	ENC_REFP_MODE	A03, A02	G1,R1,S1
-	Referencing mode	BYTE	PowerOn
-			
-	1	1,1	0
		8	2/2

Description:

The mounted position measuring systems can be classified for referencing as follows with MD34200 \$MA_ENC_REFP_MODE:

- MD34200 \$MA_ENC_REFP_MODE = 0
If an absolute encoder is available: MD34100 \$MA_REFP_SET_POS is taken over
Other encoders: Reference point approach not possible MD34200 \$MA_ENC_REFP_MODE = 1
Incremental rotary measuring system
Incremental linear measuring system
Zero pulse on encoder track (not with absolute encoders)
MD34200 \$MA_ENC_REFP_MODE = 2
BERO with 1-edge detection.
Also possible with an absolute encoder. After referencing, the absolute encoder is additionally marked as "calibrated".
- MD34200 \$MA_ENC_REFP_MODE = 3
Referencing on linear measuring systems with distance-coded reference marks:
Linear measuring system with distance-coded reference marks (as specified by Heidenhain)
- MD34200 \$MA_ENC_REFP_MODE = 5:
When the BERO is passed, the zero mark search is started when the negative BERO edge is detected, and it is referenced to the next zero mark detected.
- MD34200 \$MA_ENC_REFP_MODE = 6
Measuring system calibration to an already referenced encoder (not NCU 570)
- MD34200 \$MA_ENC_REFP_MODE = 7
BERO with configured approach velocity for axis and spindle applications (SW3.6 and higher) (MD34040 \$MA_REFP_VELO_SEARCH_MARKER[n]
(Reference point creep velocity [enc. no.]).
- MD34200 \$MA_ENC_REFP_MODE = 8
Referencing for linear measuring systems with distance-coded reference marks:
Linear measuring system with distance-coded reference marks over 4 zero marks (increased safety).

34210	ENC_REFP_STATE	A07, A03, A02	R1
-	Adjustment status of absolute encoder	BYTE	Immediately
-			
-	1	0, 0	0
			3
			2/2

Description:

- Absolute encoder:
 - This machine data contains the absolute encoder status
 - 0: Encoder is not calibrated
 - 1: Encoder calibration enabled (but not yet calibrated)
 - 2: Encoder is calibrated
 - Default setting for new startup: Encoder is not calibrated.
 - 3: No significance, has the same effect as "0"
- Incremental encoder:
 - This machine data contains the "Referenced status", which can be saved beyond Power On:
 - 0: Default setting: No automatic referencing
 - 1: Automatic referencing enabled, but encoder not yet referenced
 - 2: Encoder is referenced and at exact stop, automatic referencing becomes active at the next encoder activation
 - 3: The last axis position buffered before switch off is restored, no automatic referencing
 - Default setting for new startup: No automatic referencing

34220	ENC_ABS_TURNS_MODULO	A03, A02	R1
-	Modulo range for rotary absolute encoder	DWORD	PowerOn
-			
-	1	4096, 4096	1
			100000
			2/2

Description:

Number of encoder revolutions, which a rotary absolute encoder can resolve (cf. also maximum multiturn information of the absolute encoder, cf. encoder data sheet or, for example SIMODRIVE611D-MD 1021 or 1031 or PROFIdrive parameter p979).

The absolute position of a rotary axis is reduced to this resolvable range when an absolute encoder is switched on:

That means that a MODULO transformation takes place, if the actual position sensed is larger than the position permitted by MD ENC_ABS_TURNS_MODULO.

0 degree \leq position \leq n*360 degrees, (with n = ENC_ABS_TURNS_MODULO)

Note:

- With SW 2.2, the position is reduced to this range when the control/encoder is switched on. With SW 3.6 and higher, half of this value represents the maximum permissible travel distance with the control switched off / the encoder inactive.

Special cases:

- For PROFIdrive any integer values are permissible.

This MD is relevant only for rotary encoders (on linear and rotary axes).

Axis-specific machine data

Important recommendation:

The default value "1 encoder revolution" has been changed for SW 3.6 and higher to "4096". The new value is a more robust setting for the most frequently used encoder types.

When an encoder with a smaller multiturn information (encoder data sheet!) is used or when singleturn encoders are used, the value must be reduced accordingly. In either case, the value should be adjusted with multiturn absolute encoders to the maximum variable supported by the encoder, in order to be able to utilize the definite maximum travel range (Please observe: This value also influences the permissible position offset with the encoder inactive/Power Off).

Related to:

PROFIdrive parameter p979

34230	ENC_SERIAL_NUMBER	A02	R1
-	Encoder serial number	DWORD	PowerOn
-			
-	1	0, 0	-

Description: The encoder serial number (from EnDat encoders) can be read out here.
It is updated at power ON (SIMODRIVE611D or PROFIdrive) or when parking is deselected (only PROFIdrive)
"0" is supplied for encoders which do not have a serial number available.
Manipulating this MD normally causes an automatic absolute encoder maladjustment (\$MA_ENC_REFP_MODE returns to "0").

34232	EVERY_ENC_SERIAL_NUMBER	A02	R1
-	Range of encoder serial number	BOOLEAN	PowerOn
-			
-	1	TRUE, TRUE	-

Description: 0 = only valid encoder serial number are entered in the MD, i.e. when the drive supplies a "0" (which corresponds to invalid or unknown) the last valid encoder serial number is retained in the MD (e.g. for add-on axes that are not permanently connected to the machine).
1 = (default, upward compatible): the value supplied by the drive for the encoder serial number is taken over into the MD with every control runup. A validity check is not carried out.
Note for PROFIdrive drives:

As not every drive can supply the relevant parameters at all or in good time, the functionality is coded permanently corresponding to "0" for the PROFIdrive drive. A "1" setting is therefore ineffective on the PROFIBUS.

34300	ENC_REFP_MARKER_DIST	A03, A02	R1
mm, degrees	Basic distance of reference marks of distance-coded encoders.	DOUBLE	PowerOn
-			
-	1	10.0, 10.0	-
			2/2

Description: In addition to the incremental encoder track, a further encoder track is available with distance-coded measuring systems for determining the absolute encoder position. This encoder track has reference marks at defined, different distances. The basic distance between the fixed reference marks (which are the reference marks that are always the same distance from one another) can be taken from the data sheet, and directly transferred into machine data MD34300 \$MA_ENC_REFP_MARKER_DIST.

With the basic distance between the fixed reference marks (MD34300 \$MA_ENC_REFP_MARKER_DIST), the distance between two reference marks (MD34310 \$MA_ENC_MARKER_INC), and the number of encoder marks (MD31020 \$MA_ENC_RESOL) on angular measuring systems or the graduation cycle (MD31010 \$MA_ENC_GRID_POINT_DIST) on linear measuring systems, the absolute encoder position can be determined once two successive reference marks have been crossed.

MD34300 \$MA_ENC_REFP_MARKER_DIST is also used for a plausibility check of reference mark distances.

Examples of application:

For example: Heidenhain LS186 C

MD 31010 = 0.02mm (graduation cycle)

MD 34300 = 20.00mm (basic distance between the reference marks)

MD 34310 = 0.02mm (distance between two reference marks corresponds to one graduation cycle).

34310	ENC_MARKER_INC	A03, A02	R1
mm, degrees	Interval between two reference marks for distance-coded scales	DOUBLE	Reset
-			
-	1	0.02, 0.02	-
			2/2

Description: The distances between two reference marks are defined variably, so that the position of the crossed reference marks can be determined accurately in linear measuring systems with distance-coded reference marks.

The difference between two reference mark distances is entered in MD34310 \$MA_ENC_MARKER_INC.

MD irrelevant for:

Incremental measuring systems

Special cases:

On linear measuring systems with distance-coded reference marks supplied by Heidenhain, the interval between two reference marks is always equal to one graduation cycle.

Axis-specific machine data

34320	ENC_INVERS	A03, A02	G2,R1
-	Length measuring system inverse to axis movement.	BOOLEAN	Reset
-			
-	1	FALSE, FALSE	-
			2/2

Description:

- In the case of a distance-coded measuring system:
When setting a reference point, the actual position (determined by the distance-coded reference marks) on the linear measuring system is assigned to an exact machine axis position (referred to the machine zero point). The absolute offset between the machine zero point and the position of the 1st reference mark on the linear measuring system must therefore be entered in MD34090 \$MA_REFP_MOVE_DIST_CORR (reference point/absolute offset). In addition, MD34320 \$MA_ENC_INVERS must be used to set whether the linear measuring system is connected in the same or the opposite direction to the machine system.

MD irrelevant to:

Incremental encoders without distance-coded reference marks.

34330	REFP_STOP_AT_ABS_MARKER	A03	G1,R1
-	Distance-coded linear measuring system without target point	BOOLEAN	Reset
-			
-	1	TRUE, TRUE	-
			2/2

Description:

- Distance-coded measuring system:
REFP_STOP_AT_ABS_MARKER = 0:
At the end of the reference cycle, the position entered in MD34100 \$MA_REFP_SET_POS is approached (normal case for phase 2).
REFP_STOP_AT_ABS_MARKER = 1:
The axis is braked after detection of the second reference mark (shortening of phase 2)
- Absolute encoder:
MD34330 \$MA_REFP_STOP_AT_ABS_MARKER defines the response of an axis with a valid calibration identifier (MD34210 \$MA_ENC_REFP_STATE = 2) with G74 or when a traversing key is actuated in JOG-REF:
REFP_STOP_AT_ABS_MARKER = 0:
Axis traverses to the position entered in MD34100 \$MA_REFP_SET_POS
REFP_STOP_AT_ABS_MARKER = 1:
Axis does not traverse.

MD irrelevant for:

Incremental encoders with zero mark (standard encoders)

Related to:

MD34100 \$MA_REFP_SET_POS
(reference point distance/target point for distance-coded system)

Axis-specific machine data

35010	GEAR_STEP_CHANGE_ENABLE		A06, A11	P3 pl,P3 sl,S1	
-	Parameterize gear stage change		DWORD	Reset	
CTEQ					
-	-	0x00	0	0x2B	2/2

Description:

Meaning of bit places:

Bit 0 = 0 and bit 1 = 0:

There is an invariable gear ratio between motor and load. The MD of the first gear stage are active. Gear stage change is not possible with M40 to M45.

Bit 0 = 1:

Gear stage change at undefined change position. The gear can have up to 5 gear stages, which can be selected with M40, M41 to M45. To support the gear stage change, the motor can carry out oscillating motions, which must be enabled by the PLC program.

Bit 1 = 1:

Same meaning as for bit 0 = 1, however, the gear stage change is carried out at a configured spindle position (SW 5.3 and higher). The change position is configured in MD35012 \$MA_GEAR_STEP_CHANGE_POSITION. The position is approached in the current gear stage before the gear stage change. If this bit is set, bit 0 is not taken into account!

Bit 2: reserved

Bit 3 = 1:

The gear stage change dialog between NCK and PLC is simulated. An NCK-internal acknowledgement is given. PLC signals for the change are output, checkback signals from the PLC are ignored because of the NCK-internal acknowledgement.

Bit 4: reserved

Bit 5 = 1:

The second gear stage data set is used for tapping with G331/G332. The bit must be set for the master spindle used for tapping. Bit 0 or bit 1 must be set.

Related to:

MD35090 \$MA_NUM_GEAR_STEPS (number of gear stages 1st data set, see bit 5)

MD35092 \$MA_NUM_GEAR_STEPS2 (number of gear stages 2nd data set, see bit 5)

MD35110 \$MA_GEAR_STEP_MAX_VELO (max. speed for autom. gear stage change)

MD35112 \$MA_GEAR_STEP_MAX_VELO2 (max. speed for autom. gear stage change 2nd data set, see bit 5)

MD35120 \$MA_GEAR_STEP_MIN_VELO (min. speed for autom. gear stage change)

MD35122 \$MA_GEAR_STEP_MIN_VELO2 (min. speed for autom. gear stage change 2nd data set, see bit 5)

35012	GEAR_STEP_CHANGE_POSITION			A06, A11	S1
mm, degrees	Gear stage change position			DOUBLE	NEW CONF
CTEQ					
-	6	0.0, 0.0, 0.0, 0.0, 0.0, 0.0	-	-	2/2

Description: Gear stage change position.
The value range must be within the configured modulo range.
Related to:
MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE, bit 1
MD30330 \$MA_MODULO_RANGE

35014	GEAR_STEP_USED_IN_AXISMODE			A01, A06, A11	-
-	Gear stage for axis mode with M70			DWORD	NEW CONF
CTEQ					
-	-	0	0	5	2/2

Description: With this MD, a gear stage can be defined which can be loaded into the axis mode during the transition with M70. The parameter set zero used in axis mode is to be optimized on this gear stage.
Significance of the values:
0: There is no implicit gear stage change with M70.
The current gear stage is retained.
1 ... 5:
There is a change into gear stage (1...5) during the execution of M70.
During the transition into axis mode without M70, there is monitoring for this gear stage and alarm 22022 is issued if necessary. The condition for a gear stage change is the general release of the function in MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE.
Secondary conditions:
When changing from axis mode into spindle mode, the configured gear stage continues to remain active. There is no automatic return to the last active gear stage in spindle mode.

35020	SPIND_DEFAULT_MODE			A06, A10	S1
-	Initial spindle setting			BYTE	Reset
CTEQ					
-	-	0	0	3	2/2

Description: SPIND_DEFAULT_MODE activates the operating mode of the spindle at the time specified in MD35030 \$MA_SPIND_DEFAULT_ACT_MASK. The appropriate spindle operating modes can be selected with the following values:
0 Speed mode, position control deselected
1 Speed mode, position control activated
2 Positioning mode
3 Axis mode
Related to:
MD35030 \$MA_SPIND_DEFAULT_ACT_MASK (activate initial spindle setting)

Axis-specific machine data

35030	SPIND_DEFAULT_ACT_MASK	A06, A10	S1
-	Time at which initial spindle setting is effective	BYTE	Reset
CTEQ			
-	-	0x00	0
		0x03	2/2

Description: SPIND_DEFAULT_ACT_MASK specifies the time at which the operating mode defined in MD35020 \$MA_SPIND_DEFAULT_MODE becomes effective. The initial spindle setting can be assigned the following values at the following points in time:

- 0 POWER ON
- 1 POWER ON and NC program start
- 2 POWER ON and RESET (M2/M30)

Special cases:

- If MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET = 1, the following supplementary conditions are applicable:
 - SPIND_DEFAULT_ACT_MASK should be set to 0
 - If this is not possible, the spindle must be at a standstill prior to activation.

Related to:

- MD35020 \$MA_SPIND_DEFAULT_MODE (initial spindle setting)
- MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET (spindle active after reset)

35032	SPIND_FUNC_RESET_MODE	A06, A10	-
-	Reset response of individual spindle functions	DWORD	PowerOn
CTEQ			
-	-	0x00	0
		0x01	1/1

Description: This data allows the "GWPS in every operating mode" function to be selected/deselected.

SPIND_FUNC_RESET_MODE, bit 0 = 0 : "GWPS in every operating mode" is deselected

SPIND_FUNC_RESET_MODE, bit 0 = 1 : "GWPS in every operating mode" is selected

35035	SPIND_FUNCTION_MASK	A06, A10	K1,S1
-	Spindle functions	DWORD	Reset
CTEQ			
-	-	0x510	-
		-	1/1

Description: This MD allows spindle-specific functions to be set. The MD is bit-coded, the following bits are assigned:

Bit 0 = 1: Gear stage changes are suppressed when the DryRun function is activated for

- block programming (M40, M41 to M45), programming via FC18
- and synchronized actions.

Bit 1 = 1: Gear stage changes are suppressed when the Program test function is activated for

- block programming (M40, M41 to M45), programming via FC18 and synchronized actions.

Bit 2 = 1: The gear stage will finally be changed to the programmed gear stage

- by REPOS after the DryRun or Program test function has been deselected.

Bit 3: Reserved

Bit 4 = 1:

The programmed speed is taken over into SD 43200 \$SA_SPIND_S (incl. speed default settings via FC18 and synchronized actions).

S programmings, that are not speed programmings, are not written into the SD. These include, for example, S value with constant cutting speed (G96, G961), S value with revolution-related dwell time (G4).

Bit 5 = 1:

The content of SD 43200 \$SA_SPIND_S acts as speed setpoint for JOG. If the content is zero, then other JOG speed default settings become active (see SD 41200 JOG_SPIND_SET_VELO).

Bit 6: Reserved

Bit 7: Reserved

Bit 8 = 1:

The programmed cutting speed is taken over into SD 43202 \$SA_SPIND_CONSTCUT_S (incl. default settings via FC18. S programmings, that are not cutting speed programmings, are not written into the SD. These include, for example, S value beyond constant cutting speed (G96, G961, G962), S value with revolution-related dwell time (G4), S value in synchronized actions.

Bit 9: Reserved

Bit 10 = 0:

SD 43206 \$SA_SPIND_SPEED_TYPE is not changed by part program or channel settings,

= 1:

For the master spindle, the value of the 15th G group (type of feedrate) is taken over into SD 43206 \$SA_SPIND_SPEED_TYPE. For all other spindles, the corresponding SD remains unchanged.

Bit 11: Reserved

Bit 12 = 1:

Spindle override is active for zero mark search for M19, SPOS and SPOSA

= 0:

Previous behavior (default)

The following bits 16-20 can be used to set spindle-specific M functions, which are output to the VDI interface, if the associated M functionality has been implicitly generated for the program run.

Bit 16: Reserved

Bit 17: Reserved

Bit 18: Reserved

Bit 19: "Output of implicit M19 to PLC"

= 0: If MD20850 \$MC_SPOS_TO_VDI is also 0, then auxiliary function M19 is not generated with SPOS and SPOSA. Therefore, there is no acknowledgement time for the M function. This can cause faults in short blocks.

= 1: When SPOS and SPOSA are programmed, the implicit auxiliary function M19 is generated, and output to the PLC. The address extension corresponds to the spindle number.

Bit 20: "Output of implicit M70 to PLC"

= 0: The implicit auxiliary function M70 is not generated. Note: A programmed auxiliary function M70 is always output to the PLC.

Axis-specific machine data

= 1: The transition to axis mode implicitly generates the auxiliary function M70, and it is output to the PLC. The address extension corresponds to the spindle number.

Related to:

MD20850 \$MC_SPOS_TO_VDI
 MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET
 MD35020 \$MA_SPIND_DEFAULT_MODE
 SD43200 \$SA_SPIND_S

35040	SPIND_ACTIVE_AFTER_RESET			A06, A10	S1,Z1,2,7
-	Own spindle RESET			BYTE	PowerOn
CTEQ					
-	-	0	0	2	2/2

Description:

MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET defines the response of the spindle after channel reset NC/PLC interface signal V3000 0000.7 (Reset) and program end (M2, M30).

This MD is only active in the spindle mode open-loop control mode. In positioning mode or oscillation mode, the spindle is always stopped.

MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET = 0:

- Spindle stops (with M2/M30 and channel and mode group reset)
- Program is aborted

MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET= 1:

- Spindle does not stop
- Program is aborted

MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET= 2:

- Spindle does not stop at the M function configured via MD10714 \$MN_M_NO_FCT_EOP (e.g. M32).
- However, the spindle stops at channel or mode group reset. The NC/PLC interface signal V380x 0002.2 (Delete distance-to-go/Spindle reset) is always effective, independent of MD35040 \$MA_SPIND_ACTIVE_AFTER_RESET..

Not relevant to:

- Spindle modes other than open-loop control mode.

Related to:

NC/PLC interface signal V3000 0000.7 (Reset)
 NC/PLC interface signal V380x 0002.2 (Delete distance-to-go/Spindle reset)

Axis-specific machine data

35090	NUM_GEAR_STEPS		A06, A10	S1
-	Number of gear stages		DWORD	Reset
-				
-	-	MAXNUM_GEAR_STEPS	1	5 1/1

Description: Number of set gear stages.
The first gear stage is always available.
Corresponding MDs:

- MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE (gear stages available/functions)
- MD35012 \$MA_GEAR_STEP_CHANGE_POSITION (gear stage change position)
- MD35014 \$MA_GEAR_STEP_USED_IN_AXISMODE (gear stage for axis mode with M70)
- MD35110 \$MA_GEAR_STEP_MAX_VELO (max. speed for gear stage change)
- MD35120 \$MA_GEAR_STEP_MIN_VELO (min. speed for gear stage change)
- MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT (max. speed of gear stage)
- MD35140 \$MA_GEAR_STEP_MIN_VELO_LIMIT (min. speed of gear stage)
- MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL (acceleration in speed control mode)
- MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL (acceleration in position control mode)
- MD35310 \$MA_SPIND_POSIT_DELAY_TIME (positioning delay time)
- MD35550 \$MA_DRILL_VELO_LIMIT (maximum speeds for tapping)
- MD35092 \$MA_NUM_GEAR_STEPS2 (number of gear stages 2nd gear stage data set)

35092	NUM_GEAR_STEPS2		A06, A10	S1
-	Number of gear stages of 2nd gear stage data set		DWORD	Reset
-				
-	-	MAXNUM_GEAR_STEPS	1	5 1/1

Description: Number of set gear stages of the second gear stage data set for the function 'Tapping with G331/G332'.
Activation (only makes sense for master spindle on tapping): MD 35010 \$MA_GEAR_STEP_CHANGE_ENABLE, bit 5.
The number of gear stages must not be the same in the first and second gear stage data sets.
Corresponding MD:

- MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE (gear stages available/functions)
- MD35112 \$MA_GEAR_STEP_MAX_VELO2 (2nd gear stage data set: max. speed for gear stage change)
- MD35122 \$MA_GEAR_STEP_MIN_VELO2 (2nd gear stage data set: min. speed for gear stage change)
- MD35212 \$MA_GEAR_STEP_POSCTRL_ACCEL2 (2nd gear stage data set: acceleration in position control mode)

Axis-specific machine data

35100	SPIND_VELO_LIMIT	A06, A11, A04	TE3,G2,S1,V1,Z1
rev/min	Maximum spindle speed	DOUBLE	PowerOn
CTEQ			
-	-	10000.0	1.0e-3
		-	7/2

Description: MD35100 \$MA_SPIND_VELO_LIMIT defines the maximum spindle speed which the spindle (the spindle chuck with the workpiece or the tool) must not exceed. The NCK limits an excessive spindle set-point speed to this value. If the maximum actual spindle speed is exceeded, even allowing for the spindle speed tolerance (MD35150 \$MA_SPIND_DES_VELO_TOL), there is a fault with the drive and the NC/PLC interface signal V390x 2001.0 (Speed limit exceeded) is set. Alarm 22050 "Maximum speed reached" is also output and all axes and spindles on the channel are decelerated (provided the encoder is still functioning correctly).

Related to:

MD35150 \$MA_SPIND_DES_VELO_TOL (spindle speed tolerance)
 NC/PLC interface signal V390x 2001.0 (Speed limit exceeded)
 Alarm 22050 "Maximum speed reached"

35110	GEAR_STEP_MAX_VELO	A06, A11, A04	A3,S1
rev/min	Maximum speed for gear stage change	DOUBLE	NEW CONF
CTEQ			
-	6	500., 500., 1000., 2000., 4000., 8000.	-
		-	2/2

Description: MD35110 \$MA_GEAR_STEP_MAX_VELO defines the maximum speed of the gear stage for automatic gear stage change (M40). The gear stages must be defined by MD35110 \$MA_GEAR_STEP_MAX_VELO and MD35120 \$MA_GEAR_STEP_MIN_VELO in a way that avoids gaps in the programmable spindle speed range between the gear stages.

Incorrect

MD35110 \$MA_GEAR_STEP_MAX_VELO [gear stage1] =1000
 MD35120 \$MA_GEAR_STEP_MIN_VELO [gear stage2] =1200

Correct

MD35110 \$MA_GEAR_STEP_MAX_VELO [gear stage1] =1000
 MD35120 \$MA_GEAR_STEP_MIN_VELO [gear stage2] = 950

Related to:

MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE
 (gear stage change is possible)
 MD35120 \$MA_GEAR_STEP_MIN_VELO
 (min. speed for gear stage change)
 MD35140 \$MA_GEAR_STEP_MIN_VELO_LIMIT
 (min. speed of gear stage)
 MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT
 (max. speed of gear stage)

35112	GEAR_STEP_MAX_VELO2			A06, A11, A04	S1
rev/min	2nd data set: Maximum speed for gear stage change			DOUBLE	NEW CONF
CTEQ					
-	6	500., 500., 1000., 2000., 4000., 8000.	0	-	2/2

Description: The 2nd data set for the max. speeds (upper switching thresholds) of the gear stages for the automatic gear stage change (M40) is defined in GEAR_STEP_MAX_VELO2. The gear stages must be defined in GEAR_STEP_MAX_VELO2 and MD35122 \$MA_GEAR_STEP_MIN_VELO2 so that there are no gaps between the gear stages in the programmable spindle speed range.

Examples:

Incorrect:

```
GEAR_STEP_MAX_VELO2 [gear stage 1] =1000
```

```
GEAR_STEP_MIN_VELO2 [gear stage 2] =1200
```

Correct:

```
GEAR_STEP_MAX_VELO2 [gear stage 1] =1000
```

```
GEAR_STEP_MIN_VELO2 [gear stage 2] =950
```

The 2nd gear stage data block for tapping with G331/G332 is activated by MD 35010:\$MA_GEAR_STEP_CHANGE_ENABLE bit 5 for the master spindle.

Related to:

```
MD35140 $MA_GEAR_STEP_MIN_VELO_LIMIT (min. speed of gear stage)
```

```
MD35130 $MA_GEAR_STEP_MAX_VELO_LIMIT (max. speed of gear stage)
```

35120	GEAR_STEP_MIN_VELO			A06, A11, A04	S1
rev/min	Minimum speed for gear stage change			DOUBLE	NEW CONF
CTEQ					
-	6	50., 50., 400., 800., 1500., 3000.	-	-	2/2

Description: MD35120 \$MA_GEAR_STEP_MIN_VELO defines the minimum speed of the gear stage for the automatic gear stage change (M40). Refer to MD35120 \$MA_GEAR_STEP_MAX_VELO for more information.

Related to:

```
MD35110 $MA_GEAR_STEP_MAX_VELO
```

```
(maximum speed for gear stage change)
```

```
MD35010 $MA_GEAR_STEP_CHANGE_ENABLE
```

```
(gear stage change is possible)
```

```
MD35140 $MA_GEAR_STEP_MIN_VELO_LIMIT
```

```
(minimum speed of gear stage)
```

```
MD35130 $MA_GEAR_STEP_MAX_VELO_LIMIT
```

```
(maximum speed of gear stage)
```

Axis-specific machine data

35122	GEAR_STEP_MIN_VELO2			A06, A11, A04	S1
rev/min	2nd data set: Minimum speed for gear stage change			DOUBLE	NEW CONF
CTEQ					
-	6	50., 50., 400., 800., 1500., 3000.	0	-	2/2

Description: The 2nd data block of the minimum speeds (lower switching thresholds) of the gear stages for automatic gear stage change (M40) is set in GEAR_STEP_MIN_VELO2. The gear stages must be defined with GEAR_STEP_MIN_VELO2 and MD35112 \$MA_GEAR_STEP_MAX_VELO2 so that there are no gaps between the gear stages within the programmable spindle speed range.

Examples:

Incorrect:

```
GEAR_STEP_MAX_VELO2 [gear stage 1] = 1000
```

```
GEAR_STEP_MIN_VELO2 [gear stage 2] = 1200
```

Correct:

```
GEAR_STEP_MAX_VELO2 [gear stage 1] = 1000
```

```
GEAR_STEP_MIN_VELO2 [gear stage 2] = 950
```

The 2nd gear stage data block for tapping with G331/G332 is activated by MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE bit 5 for the master spindle.

Related to:

```
MD35140 $MA_GEAR_STEP_MIN_VELO_LIMIT (min. speed of the gear stage)
```

```
MD35130 $MA_GEAR_STEP_MAX_VELO_LIMIT (max. speed of the gear stage)
```

35130	GEAR_STEP_MAX_VELO_LIMIT			A06, A11, A04	A2,S1,V1
rev/min	Maximum speed of gear stage			DOUBLE	NEW CONF
CTEQ					
-	6	500., 500., 1000., 2000., 4000., 8000.	1.0e-3	-	2/2

Description: The maximum speed of the gear stage is entered in MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT with the position control switched off.

This speed can never be exceeded in the active gear stage.

With the position control switched on, the behavior described in MD35135 \$MA_GEAR_STEP_PC_MAX_VELO_LIMIT applies.

Note:

- If an S value is programmed that exceeds the max. speed of the active gear stage, the setpoint speed is limited to the max. speed of the gear stage (with gear stage selection - M41 to M45). Furthermore, the NC/PLC interface signal "Programmed speed too high" will be set.
- If an S value is programmed that exceeds the max. speed for gear stage change, a new gear stage will be set (with automatic gear stage selection - M40).

- If an S value is programmed that exceeds the max. speed of the highest gear stage, the speed will be limited to the max. speed of the gear stage (with automatic gear stage selection - M40).
- If an S value is programmed that does not have a suitable gear stage, no gear stage change will be triggered.

Related to:

MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE (gear stage change possible)
 MD35110 \$MA_GEAR_STEP_MAX_VELO (max. speed for gear stage change)
 MD35120 \$MA_GEAR_STEP_MIN_VELO (min. speed for gear stage change)
 MD35135 \$MA_GEAR_STEP_PC_MAX_VELO_LIMIT (min. speed of the gear stage with position control)
 MD35140 \$MA_GEAR_STEP_MIN_VELO_LIMIT (min. speed of the gear stage)

35135	GEAR_STEP_PC_MAX_VELO_LIMIT	A06, A11, A04	S1
rev/min	Maximum speed of the gear stage with position control	DOUBLE	NEW CONF
CTEQ			
-	6	0., 0., 0., 0., 0., 0.	0
			-
			2/2

Description:

The maximum speed of the gear stage is set in GEAR_STEP_PC_MAX_VELO_LIMIT with the position control active. If value 0 is set (default), 90% of the value from MD35130: GEAR_STEP_MAX_VELO_LIMIT (control margin) will become the max. speed of the gear stage with position control active. This limit speed is limited to a value that does not exceed MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT and MD35100 \$MA_SPIND_VELO_LIMIT. If an S value is programmed that exceeds the limit speed, the set-point speed is limited to the limit speed. In this case, the VDI interface signal "Programmed speed too high" will be set.

Related to:

MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE (gear stage change possible)
 MD35110 \$MA_GEAR_STEP_MAX_VELO (max. speed for gear stage change)
 MD35120 \$MA_GEAR_STEP_MIN_VELO (min. speed for gear stage change)
 MD35140 \$MA_GEAR_STEP_MIN_VELO_LIMIT (min. speed of the gear stage)

Axis-specific machine data

35140	GEAR_STEP_MIN_VELO_LIMIT			A06, A11, A04	S1,V1
rev/min	Minimum speed of gear stage			DOUBLE	NEW CONF
CTEQ					
-	6	5., 5., 10., 20., 40., 80.	-	-	2/2

Description: MD35140 \$MA_GEAR_STEP_MIN_VELO_LIMIT defines the minimum speed for the gear stage. The speed cannot drop below this value, even if an S value is programmed that is too low.

The speed can only drop below this minimum value as a result of the "Minimum/maximum speed of gear stage" related signals/commands/states.

MD irrelevant for:

- Spindle oscillation mode
- Spindle positioning mode, axis mode

Related to:

MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE
(gear stage change is possible)
MD35110 \$MA_GEAR_STEP_MAX_VELO
(maximum speed for gear stage change)
MD35120 \$MA_GEAR_STEP_MIN_VELO
(minimum speed for gear stage change)
MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT
(maximum speed of gear stage)

35150	SPIND_DES_VELO_TOL			A03, A05, A06, A10, A04	R1,S1,Z1
-	Spindle speed tolerance			DOUBLE	Reset
-					
-	-	0.1	0.0	1.0	2/2

Description: In spindle control mode, the set speed (programmed speed x spindle offset, allowing for limits) is compared with the actual speed.

- If the actual speed deviates from the set speed by more than MD35150 \$MA_SPIND_DES_VELO_TOL, the NC/PLC interface signal is V390x 2001.5 (Spindle in setpoint range) is set to zero.
- If the actual speed deviates from the set speed by more than MD35150 \$MA_SPIND_DES_VELO_TOL, the path feed is disabled (positioning axes continue traversing).
- If the actual speed exceeds the maximum spindle speed (MD35100 \$MA_SPIND_VELO_LIMIT) by more than MD35150 \$MA_SPIND_DES_VELO_TOL, the NC/PLC interface signal is V390x 2001.0 (Speed limit exceeded) is enabled and alarm 22050 "Maximum speed reached" is output. All axes and spindles on the channel are decelerated.

MD irrelevant to:

- Spindle oscillation mode
- Spindle positioning mode

Example:

MD 35150 \$MA_SPIND_DES_VELO_TOL = 0.1

The actual spindle speed must not deviate from the set speed by more than +/- 10%.

Related to:

MD35500 \$MA_SPIND_ON_SPEED_AT_IPO_START

(feed enable for spindle in setpoint range)

MD35100 \$MA_SPIND_VELO_LIMIT

(maximum spindle speed)

NC/PLC interface signal V390x 2001.5 (Spindle in setpoint range)

NC/PLC interface signal V390x 2001.0 (Speed limit exceeded)

Alarm 22050 "Maximum speed reached"

35160	SPIND_EXTERN_VELO_LIMIT			A06, A04	A3,S1,V1,Z1
rev/min	Spindle speed limitation from PLC			DOUBLE	NEW CONF
CTEQ					
-	-	1000.0	1.0e-3	-	2/2

Description: A limiting value for the maximum spindle speed is entered in MD35160 \$MA_SPIND_EXTERN_VELO_LIMIT, which is taken into account exactly when the NC/PLC interface signal V380x 0003.6 (Velocity/speed limitation) is set.

The control limits a spindle speed which is too high to this value.

35200	GEAR_STEP_SPEEDCTRL_ACCEL			A06, A11, A04, -	S1
rev/s ²	Acceleration in speed control mode			DOUBLE	NEW CONF
CTEQ					
-	6	30.0, 30.0, 25.0, 20.0, 15.0, 10.0	1.0e-3	-	2/2

Description: If the spindle is in speed control mode, the acceleration is entered in MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL. The spindle is in speed control mode with the function SPCOF. Special cases:

The acceleration in speed control mode (MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL) can be set so that the electric current limit is reached.

Related to:

MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL (acceleration in position control mode)

MD35220 \$MA_ACCEL_REDUCTION_SPEED_POINT (speed limit for reduced acceleration)

35210	GEAR_STEP_POSCTRL_ACCEL			A06, A11, A04, -	S1
rev/s ²	Acceleration in position control mode			DOUBLE	NEW CONF
CTEQ					
-	6	30.0, 30.0, 25.0, 20.0, 15.0, 10.0	1.0e-3	-	2/2

Description: The acceleration in position control mode must be set so that the electric current limit is not reached.

Related to:

MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL

MD35212 \$MA_GEAR_STEP_POSCTRL_ACCEL2

Axis-specific machine data

35212	GEAR_STEP_POSCTRL_ACCEL2			A06, A11, A04, -	S1
rev/s ²	2nd data set: Acceleration in position control mode			DOUBLE	NEW CONF
CTEQ					
-	6	30.0, 30.0, 25.0, 20.0, 15.0, 10.0	1.0e-3	-	2/2

Description: Second gear stage data set for maximum acceleration capability of the gear stages in position control mode.
The acceleration in position control mode must be set so that the electric current limit is not reached.
The 2nd data set for tapping with G331/G332 is activated by MD35010 \$MA_GEAR_STEP_CHANGE_ENABLE, bit 5 for the master spindle.
Related to:

MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL
MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL
MD35220 \$MA_ACCEL_REDUCTION_SPEED_POINT

35220	ACCEL_REDUCTION_SPEED_POINT			A06, A04	S1,S3,B2
-	Speed for reduced acceleration			DOUBLE	Reset
-					
-	-	1.0	0.0	1.0	0/0

Description: This machine data defines the threshold speed/velocity for spindles/positioning/path axes from which the acceleration reduction is to start. The reference is the defined maximum speed/velocity. The starting point is a percentage of the maximum values.
Example: MD35220 \$MA_ACCEL_REDUCTION_SPEED_POINT = 0.7, the maximum speed is 3000 rpm. Acceleration reduction starts at v_{on} = 2100 rpm, i.e. the maximum acceleration capacity is utilized in the speed range 0...2099.99 rpm. Reduced acceleration is used from 2100 rpm to the maximum speed.

Related to:

MD32000 \$MA_MAX_AX_VELO
(maximum axis velocity)
MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT
(maximum gear stage speed)
MD35230 \$MA_ACCEL_REDUCTION_FACTOR
(reduced acceleration)

35230	ACCEL_REDUCTION_FACTOR			A06, A04	S1,S3,B2
-	Reduced acceleration			DOUBLE	Reset
CTEQ					
-	-	0.0	0.0	0.95	0/0

Description: The machine data contains the factor by which the acceleration of the spindle/positioning/path axes is reduced with reference to the maximum speed/velocity. The acceleration is reduced by this factor between the threshold speed/velocity defined in MD35220 \$MA_ACCEL_REDUCTION_SPEED_POINT and the maximum speed/velocity.

Example:

$a = 10 \text{ rev/s}^2$, $v_{on} = 2100 \text{ rpm}$, MD35230 \$MA_ACCEL_REDUCTION_FACTOR = 0.3.

Acceleration and deceleration take place within the speed range 0...2099.99 rpm with an acceleration of 10 rev/s^2 . From a speed of 2100 rpm up to the maximum speed, the acceleration is reduced from 10 rev/s^2 to 7 rev/s^2 .

MD irrelevant to:

Errors that lead to rapid stop.

Related to:

MD32300 \$MA_MAX_AX_ACCEL (axis acceleration)

MD35200 \$MA_GEAR_STEP_SPEEDCTRL_ACCEL
(acceleration in speed control mode)

MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL
(acceleration in position control mode)

MD35242 \$MA_ACCEL_REDUCTION_SPEED_POINT
(speed for reduced acceleration)

35300	SPIND_POSCTRL_VELO			A06, A04	P3 pl,P3 sl,R1,S1
rev/min	Position control activation speed			DOUBLE	NEW CONF
CTEQ					
-	6	500.0, 500.0, 500.0, 500.0, 500.0, 500.0	-	-	2/2

Description: When positioning a spindle that is not in position control mode from a high speed, the position control is not activated until the spindle has reached or falls below the velocity defined in MD35300 \$MA_SPIND_POSCTRL_VELO.

The speed can be changed with FA[Sn] from the part program. Please refer to the documentation:

/FB1/ Function Manual, Basic Functions; Spindles (S1), section "Spindle mode 'positioning operation'" for a description of the spindle behavior under various supplementary conditions (positioning from rotation, positioning from standstill).

Note:

The active speed from MD35300 \$MA_SPIND_POSCTRL_VELO cannot exceed the max. speed set in MD35135 \$MA_GEAR_STEP_PC_MAX_VELO_LIMIT. If MD35135 \$MA_GEAR_STEP_PC_MAX_VELO_LIMIT = 0, the value is limited to 90% of MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT.

Related to:

MD35350 \$MA_SPIND_POSITIONING_DIR (direction of rotation during positioning from standstill, if no synchronization is available)

MD35100 \$MA_SPIND_VELO_LIMIT (chuck speed)

Axis-specific machine data

35310	SPIND_POSIT_DELAY_TIME		A06, A04	S1
s	Positioning delay time		DOUBLE	NEW CONF
CTEQ				
-	6	0.0, 0.05, 0.1, 0.2, 0.4, 0.8	-	2/2

Description: Positioning delay time.

- After reaching the positioning end (exact stop fine), the time delay for the block search is activated at the output of a collected positioning block (SPOS).

35350	SPIND_POSITIONING_DIR		A06	S1
-	Direction of rotation when positioning		BYTE	Reset
CTEQ				
-	-	3	3	4
				2/2

Description: When SPOS or SPOSA is programmed, the spindle is switched to position control mode and accelerates with the acceleration defined in MD35210 \$MA_GEAR_STEP_POSCTRL_ACCEL (acceleration in position control mode) if the spindle is not synchronized. The direction of rotation is defined by MD35350 \$MA_SPIND_POSITIONING_DIR (direction of rotation for positioning from standstill).

MD35350 \$MA_SPIND_POSITIONING_DIR = 3 ---> Clockwise direction of rotation

MD35350 \$MA_SPIND_POSITIONING_DIR = 4 ---> Counterclockwise direction of rotation

Related to:

MD35300 \$MA_SPIND_POSCTRL_VELO (position control activation speed)

35400	SPIND_OSCILL_DES_VELO		A06, A04	P3 pl, P3 sl, S1
rev/min	Oscillation speed		DOUBLE	NEW CONF
CTEQ				
-	-	500.0	-	2/2

Description: During oscillation, the NC/PLC interface signal V380x 2002.5 (Oscillation speed) is used to select a motor speed for the spindle motor. This motor speed is defined in MD35400 \$MA_SPIND_OSCILL_DES_VELO. The motor speed defined in this MD is independent of the current gear stage. In the AUTOMATIC and MDI displays, the oscillation speed is displayed in the "Spindle setpoint" window until the gear is changed.

This motor speed is independent of the current gear stage. In the AUTOMATIC and MDA displays, the oscillation speed is displayed in the "spindle setpoint" window until the gear is changed.

MD irrelevant to:

All spindle modes except oscillation mode

Special cases:

The acceleration during oscillation (MD35410 \$MA_SPIND_OSCILL_ACCEL) is valid for the oscillation speed defined in this MD.

Related to:

MD35410 \$MA_SPIND_OSCILL_ACCEL (acceleration during oscillation)

NC/PLC interface signal V380x 2002.5 (Oscillation speed)

NC/PLC interface signal V380x 2002.4 (Oscillation via PLC)

Axis-specific machine data

35410	SPIND_OSCILL_ACCEL			A06, A04, -	S1,Z1
rev/s ²	Acceleration during oscillation			DOUBLE	NEW CONF
CTEQ					
-	-	16.0	1.0e-3	-	2/2

Description: The acceleration specified here is only effective for the output of the oscillation speed (MD35400 \$MA_SPIND_OSCILL_DES_VELO) to the spindle motor. The oscillation speed is selected using the NC/PLC interface signal V380x 2002.5 (Oscillation speed).

MD irrelevant to:

All spindle modes except oscillation mode

Related to:

MD35400 \$MA_SPIND_OSCILL_DES_VELO (oscillation speed)

NC/PLC interface signal V380x 2002.5 (Oscillation speed)

NC/PLC interface signal V380x 2002.4 (Oscillation via PLC)

35430	SPIND_OSCILL_START_DIR			A06	S1
-	Start direction during oscillation			BYTE	Reset
CTEQ					
-	-	0	0	4	2/2

Description: With the NC/PLC interface signal V380x 2002.5 (Oscillation speed), the spindle motor accelerates to the speed specified in MD35400: \$MA_SPIND_OSCILL_DES_VELO.

The start direction is defined by MD35430

\$MA_SPIND_OSCILL_START_DIR if the NC/PLC interface signal V380x 2002.4 (Oscillation via PLC) is not enabled.

MD35430 \$MA_SPIND_OSCILL_START_DIR = 0 ---> Start direction same as the last direction of rotation

MD35430 \$MA_SPIND_OSCILL_START_DIR = 1 ---> Start direction counter to the last direction of rotation

MD35430 \$MA_SPIND_OSCILL_START_DIR = 2 ---> Start direction counter to the last direction of rotation

MD35430 \$MA_SPIND_OSCILL_START_DIR = 3 ---> Start direction is M3

MD35430 \$MA_SPIND_OSCILL_START_DIR = 4 ---> Start direction is M4

MD irrelevant to:

All spindle modes except oscillation mode

Related to:

MD35400 \$MA_SPIND_OSCILL_DES_VELO (oscillation speed)

NC/PLC interface signal V380x 2002.5 (Oscillation speed)

NC/PLC interface signal V380x 2002.4 (Oscillation via PLC)

Axis-specific machine data

35440	SPIND_OSCILL_TIME_CW	A06	S1,Z1
s	Oscillation time for M3 direction	DOUBLE	NEW CONF
CTEQ			
-	-	1.0	-
			2/2

Description: The oscillation time defined here is active in the M3 direction. MD irrelevant to:

- All spindle modes except oscillation mode
- Oscillation via PLC (NC/PLC interface signal V380x 2002.4 (Oscillation via PLC) enabled)

Related to:

MD35450 \$MA_SPIND_OSCILL_TIME_CCW (oscillation time for M4 direction)

MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO (interpolator cycle)

NC/PLC interface signal V380x 2002.5 (Oscillation speed)

NC/PLC interface signal V380x 2002.4 (Oscillation via PLC)

35450	SPIND_OSCILL_TIME_CCW	A06	S1,Z1
s	Oscillation time for M4 direction	DOUBLE	NEW CONF
CTEQ			
-	-	0.5	-
			2/2

Description: The oscillation time defined here is active in the M4 direction. MD irrelevant to:

- All spindle modes except oscillation mode
- Oscillation via PLC (NC/PLC interface signal V380x 2002.4 (Oscillation via PLC) enabled)

Related to:

MD35440 \$MA_SPIND_OSCILL_TIME_CW (oscillation time for M3 direction)

MD10070 \$MN_IPO_SYSCLOCK_TIME_RATIO (interpolator cycle)

NC/PLC interface signal V380x 2002.5 (Oscillation speed)

NC/PLC interface signal V380x 2002.4 (Oscillation via PLC)

35500	SPIND_ON_SPEED_AT_IPO_START			A03, A06, A10	S1,Z1
-	Feedrate enable for spindle in the set range			BYTE	Reset
CTEQ					
-	-	1	0	2	2/2

Description:

Byte = 0:

The path interpolation is not affected

Byte = 1:

The path interpolation is not enabled (positioning axes continue traversing) until the spindle has reached the specified speed. The tolerance range can be set in MD 35150: \$MA_SPIND_DES_VELO_TOL. If a measuring system is active, then the actual speed is monitored, otherwise the set speed. Path axes traversing in continuous-path mode (G64) are not stopped.

Byte = 2:

In addition to 1, traversing path axes are also stopped before machining begins, e.g. continuous-path mode (G64) and the change from rapid traverse (G0) to a machining block (G1, G2,..). The path is stopped at the last G0 block, and does not start traversing until the spindle is within the set speed range.

Restriction:

If the spindle is newly programmed by the PLC (FC18) or a synchronized action "shortly" before the end of the last G0 block, then the path decelerates taking the dynamic limitations into account. Because the spindle programming is asynchronous, a traverse can be made into the machining block if necessary. If the spindle has reached the setpoint speed range, then machining starts from this position.++

35510	SPIND_STOPPED_AT_IPO_START			A03, A06, A10	S1
-	Feedrate enable for spindle stopped			BOOLEAN	Reset
CTEQ					
-	-	FALSE	-	-	2/2

Description:

When a spindle is stopped (M5), the path feed is disabled (positioning axes continue traversing) if MD35510 \$MA_SPIND_STOPPED_AT_IPO_START is enabled and the spindle is in control mode.

When the spindle has come to a standstill (NC/PLC interface signal V390x 0001.4 (Axis/spindle stationary) enabled), the path feed is enabled.

Related to:

MD35500 \$MA_SPIND_ON_SPEED_AT_IPO_START (feed enable for spindle in setpoint range)

Axis-specific machine data

35550	DRILL_VELO_LIMIT		A06, A11, A04	-
rev/min	Maximum speeds for tapping		DOUBLE	NEW CONF
CTEQ				
-	6	10000., 10000., 10000., 10000., 10000., 10000.	1	- 2/2

Description: Limit speed values for tapping without compensating chuck with G331/G332.
The maximum speed of the linear motor characteristic range (constant acceleration capacity) must be specified depending on the gear stage.

2.4.6 Monitoring functions

36000	STOP_LIMIT_COARSE		A05	TE1,A3,B1,G2,S1, Z1
mm, degrees	Exact stop coarse		DOUBLE	NEW CONF
-				
-	-	0.04,0.04,0.04,0.04,0. 04,0.04,0.04...	-	- 2/2

Description: Threshold for exact stop coarse
An NC block is considered as terminated if the actual position of the path axes is away from the setpoint position by the value entered for the exact stop limit. If the actual position of a path axis is not within this limit, the NC block is considered as not terminated, and further part program execution is not possible. The magnitude of the value entered influences the transition to the next block. The larger the value, the earlier the block change is initiated.

If the specified exact stop limit is not reached, then

- the block is considered as not terminated,
- further traversing of the axis is not possible,
- alarm 25080 Positioning monitoring is output after expiry of the time specified in MD36020 \$MA_POSITIONING_TIME (monitoring time for exact stop fine),
- the direction of movement +/- is indicated for the axis in the positioning display. The exact stop window is also evaluated for spindles in position control mode (SPCON instruction).

Special cases:

MD36000 \$MA_STOP_LIMIT_COARSE must not be set smaller than MD36010 \$MA_STOP_LIMIT_FINE (exact stop fine). To achieve the identical block change behavior as with the "exact stop fine" criterion, the exact stop coarse window may be identical to the exact stop fine window. MD36000 \$MA_STOP_LIMIT_COARSE must not be set equal to or greater than MD36030 \$MA_STANDSTILL_POS_TOL (standstill tolerance).

Related to:

MD36020 \$MA_POSITIONING_TIME (delay time, exact stop fine)

36010	STOP_LIMIT_FINE	A05	TE1,A3,B1,D1,G2,S1,Z1
mm, degrees	Exact stop fine	DOUBLE	NEW CONF
-			
-	-	0.01,0.01,0.01,0.01,0.01,0.01,0.01,0.01...	2/2

Description: Threshold for exact stop fine
 See also MD36000 \$MA_STOP_LIMIT_COARSE (exact stop coarse)
 Special cases:
 MD36010 \$MA_STOP_LIMIT_FINE must not be set greater than MD36000 \$MA_STOP_LIMIT_COARSE (exact stop coarse).
 MD36010 \$MA_STOP_LIMIT_FINE must not be set greater than or equal to MD36030 \$MA_STANDSTILL_POS_TOL (standstill tolerance).
 Related to:
 MD 36020: \$MA_POSITIONING_TIME (delay time, exact stop fine)

36012	STOP_LIMIT_FACTOR	A05	G1,A3,B1,G2,S1,Z1
-	Factor for exact stop coarse/fine and standstill	DOUBLE	NEW CONF
-			
-	6	1.0, 1.0, 1.0, 1.0, 1.0, 1.0, 1.0	1/1

Description: With this factor,
 MD36000 \$MA_STOP_LIMIT_COARSE,
 MD36010 \$MA_STOP_LIMIT_FINE,
 MD36030 \$MA_STANDSTILL_POS_TOL
 can be re-assessed as a function of the parameter set. The relationship between these three values always remains the same.
 Application examples:
 Adapting the positioning behavior if the mass relationships change significantly with a gear change, or if it is desired to save on machine positioning time at the cost of accuracy in various operating conditions.
 Related to:
 MD36000 \$MA_STOP_LIMIT_COARSE,
 MD36010 \$MA_STOP_LIMIT_FINE,
 MD36030 \$MA_STANDSTILL_POS_TOL

Axis-specific machine data

36020	POSITIONING_TIME	A05	TE1,A3,B1,G2
s	Delay time exact stop fine	DOUBLE	NEW CONF
-			
-	-	1.0	-
			2/2

Description: The following error must have reached the limit value for exact stop fine by the expiry of the time entered in this MD for traveling into the position (position setpoint has reached the destination).

The current following error is therefore continuously monitored for the time limit MD36010 \$MA_STOP_LIMIT_FINE. If this time is exceeded, alarm 25080 "Positioning monitoring" is output, and the axis stopped. The time entered in this MD should be long enough to ensure that the monitoring function is not triggered under normal operating conditions, taking into account any settling times.

Related to:

MD 36010: \$MA_STOP_LIMIT_FINE (exact stop fine)

36030	STANDSTILL_POS_TOL	A05	G1,A3,D1,G2
mm, degrees	Standstill tolerance	DOUBLE	NEW CONF
-			
-	-	0.2,0.2,0.2,0.2,0.2,0.2,0.2,0.2,0.2,0.2,0.2...	-
			2/2

Description: This MD serves as a tolerance band for the following monitoring functions:

- After termination of a traversing block (position partial setpoint=0 at the end of the movement), whether the following error has reached the limit value for MD36030 \$MA_STANDSTILL_POS_TOL (standstill tolerance) is monitored after the programmable MD36040 \$MA_STANDSTILL_DELAY_TIME (delay time, standstill monitoring).
- After termination of a positioning action (exact stop fine reached), positioning monitoring is replaced by standstill monitoring. The axis is monitored for moving from its position by more than defined in MD36030 \$MA_STANDSTILL_POS_TOL (standstill tolerance).

If the setpoint position is over- or undershot by the standstill tolerance, alarm 25040 "Standstill monitoring" is output and the axis stopped.

Special cases:

The standstill tolerance must be greater than the "exact stop limit coarse".

Related to:

MD36040 \$MA_STANDSTILL_DELAY_TIME (delay time, standstill monitoring)

36040	STANDSTILL_DELAY_TIME	A05	TE1,A3,F1,G2
s	Delay time for standstill monitoring	DOUBLE	NEW CONF
-			
-	-	0.4	-
			2/2

Description: See MD36030 \$MA_STANDSTILL_POS_TOL (standstill tolerance)

36042	FOC_STANDSTILL_DELAY_TIME	A05	F1
s	Delay time for standstill monit. w/ active torque or force lim.	DOUBLE	NEW CONF
-			
-	-	0.4	-
-	-	-	0/0

Description: Only for SIMODRIVE611D or PROFIdrive telegrams including a torque/force limiting value:
 Waiting time between the end of a movement and activation of standstill monitoring with active torque/force limitation.
 If the configurable end of block criterion occurs within this time, then standstill monitoring is activated.

36050	CLAMP_POS_TOL	A05	A3,D1,Z1
mm, degrees	Clamping tolerance	DOUBLE	NEW CONF
-			
-	-	0.5	-
-	-	-	2/2

Description: With NC/PLC interface signal V380x 0002.3 (Blocking action active), blocking monitoring is activated. If the monitored axis is forced away from the setpoint position (exact stop limit) by more than the blocking tolerance, alarm 26000 "Blocking monitoring" is output and the axis stopped.
 Threshold value for clamping tolerance (half width of window).
 Special cases:
 The clamping tolerance must be greater than the "exact stop limit coarse".
 Related to:
 NC/PLC interface signal V380x 0002.3 (Blocking action active)

36052	STOP_ON_CLAMPING	A10	A3
-	Special functions with clamped axis	BYTE	NEW CONF
CTEQ			
-	-	0	0
-	-	0x07	0/0

Description: This MD defines how a blocked axis is taken into account.
 Bit 0 =0:
 If a blocked axis is to be traversed again in continuous-path mode, it must be ensured via the part program that the path axes are stopped and that there is time for releasing the blockage.
 Bit 0 =1:
 If a blocked axis is to be traversed again in continuous-path mode, the LookAhead function stops the path motion if required until the position controller is allowed to traverse the blocked axis again, i.e. until the controller enable is set again.
 Bit 1 is relevant only if bit 0 is set:
 Bit 1 =0:
 If a blocked axis is to be traversed again in continuous-path mode, the LookAhead function does not release the blockage.

Axis-specific machine data

Bit 1 =1:

If a blocked axis is to be traversed again in continuous-path mode, a traversing command for the blocked axis is given in the preceding G0 blocks so that the PLC releases the axis blockage again.

Bit 2 =0:

If an axis is to be blocked in continuous-path mode, it must be ensured in the part program that the path axes are stopped to make sure that there is time for setting the blockage.

Bit 2 =1:

If an axis is to be blocked in continuous-path mode, the Look-ahead function stops the path motion prior to the next non-G0 block, if the axis has not yet been blocked by that time, i.e. the PLC has not yet set the feedrate override to zero.

36060	STANDSTILL_VELO_TOL		A05, A04	TE1,A2,A3,D1,Z1
mm/min, rev/min	Threshold velocity/speed 'Axis/spindle in stop'		DOUBLE	NEW CONF
-				
-	-	5.00,5.00,5.00,5.00,5.00,5.00,5.00,5.00...	-	2/2

Description: This MD defines the standstill range for the axis velocity / spindle speed. If the current actual velocity of the axis or the actual speed of the spindle is less than the value entered in this MD, the NC/PLC interface signal V390x 0001.4 (Axis/spindle stationary) is set.

To bring the axis/spindle to a standstill under control, the pulse enable should not be removed until the axis/spindle is at a standstill. Otherwise the axis will coast down.

Related to:

NC/PLC interface signal V390x 0001.4 (Axis/spindle stationary)

36100	POS_LIMIT_MINUS		A03, A05, A11, -	TE1,R2,T1,A3,Z1
mm, degrees	1st software limit switch minus		DOUBLE	NEW CONF
CTEQ				
-	-	-1.0e8	-	2/2

Description: Same meaning as 1st software limit switch plus, however the traversing range limitation is in the negative direction. The MD becomes active after reference point approach if the NC/PLC interface signal V380x 1000.2 (2nd software limit switch minus) is not set.

MD irrelevant:

if axis is not referenced.

Related to:

NC/PLC interface signal V380x 1000.2 (2nd software limit switch minus)

36110	POS_LIMIT_PLUS	A03, A05, A11, -	TE1,R2,T1,G2,A3, Z1
mm, degrees	1st software limit switch plus	DOUBLE	NEW CONF
CTEQ			
-	-	1.0e8	-
			2/2

Description: A software limit switch can be activated in addition to the hardware limit switch. The absolute position in the machine axis system of the positive range limit of each axis is entered.

The MD is active after reference point approach if NC/PLC interface signal V380x 1000.3 (2nd software limit switch plus) has not been set.

MD irrelevant:

if axis is not referenced.

Related to:

NC/PLC interface signal V380x 1000.3 (2nd software limit switch plus)

36120	POS_LIMIT_MINUS2	A03, A05, -	TE1,A3,Z1
mm, degrees	2nd software limit switch minus	DOUBLE	NEW CONF
CTEQ			
-	-	-1.0e8	-
			2/2

Description: Same meaning as 2nd software limit switch plus, but the traversing range limitation is in the negative direction.

The PLC can select whether software limit switch 1 or 2 is to be active by means of the interface signal.

For example:

V380x 1000.2 = 0 (1st software limit switch minus) active for 1st axis

V380x 1000.2 = 1 (2nd software limit switch minus) active for 1st axis

MD irrelevant:

if axis is not referenced.

Related to:

NC/PLC interface signal V380x 1000.2 (2nd software limit switch minus)

Axis-specific machine data

36130	POS_LIMIT_PLUS2	A03, A05, -	TE1,A3,Z1
mm, degrees	2nd software limit switch plus	DOUBLE	NEW CONF
CTEQ			
-	-	1.0e8	-
			2/2

Description: This machine data can define a 2nd software limit switch position in the positive direction in the machine axis system. The PLC can select which of the two software limit switches 1 or 2 is to be active by means of an interface signal.

For example:

V380x 1000.3 = 0 (1st software limit switch plus) active for 1st axis

V380x 1000.3 = 1 (2nd software limit switch plus) active for 1st axis

MD irrelevant:

if axis is not referenced.

Related to:

NC/PLC interface signal V380x 1000.3 (2nd software limit switch plus)

36200	AX_VELO_LIMIT	A05, A11, A04	TE3,A3,G2,S1,V1
mm/min, rev/min	Threshold value for velocity monitoring	DOUBLE	NEW CONF
CTEQ			
-	6	11500., 11500., 11500., 11500., 11500., 11500....	-
			2/2

Description: The threshold value for actual velocity monitoring is entered in this machine data.

If the axis has at least one active encoder and if this encoder is below its limit frequency, alarm 25030 "Actual velocity alarm limit" is triggered when the threshold value is exceeded, and the axis is stopped.

Settings:

- For axes, a value should be selected that is 10 to 15 % higher than that in MD32000 \$MA_MAX_AX_VELO (maximum axis velocity). With active temperature compensation MD32750 \$MA_TEMP_COMP_TYPE, the maximum axis velocity is increased by an additional factor which is determined by MD32760 \$MA_COMP_ADD_VELO_FACTOR (velocity overshoot through compensation). The following should therefore apply to the velocity monitoring threshold value:

$$\text{MD36200 } \$\text{MA_AX_VELO_LIMIT}[n] > \text{MD32000 } \$\text{MA_MAX_AX_VELO} * (1.1 \dots 1.15 + \text{MD32760 } \$\text{MA_COMP_ADD_VELO_FACTOR})$$
- For spindles, a value should be selected for each gear stage that is 10 to 15 % higher than the corresponding values in MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT[n] (maximum speed of gear stage).

The index of the machine data has the following coding: [control parameter set no.]: 0-5

Axis-specific machine data

36210	CTRL_OUT_LIMIT	EXP, A05	A3,D1,G2
%	Maximum speed setpoint	DOUBLE	NEW CONF
CTEQ			
-	1	110.0	0
		200	7/2

Description: This MD defines the maximum speed setpoint in percent. The value refers to the speed (100%) at which the axis velocity of MD32000 \$MA_MAX_AX_VELO is reached. A value larger than 100% contains the required control reserve for digital drives. If settings beyond the limit are made, the MD value is used as the limiter, an alarm is given and the axes brought to a halt.

With an analog spindle the maximum speed that can be output is limited by the maximum setpoint output voltage of 10V. The value in this MD should not be greater than the speed value that is reached at this voltage (100%).

Index [n] of the machine data has the following coding: [setpoint branch]: 0

36220	CTRL_OUT_LIMIT_TIME	EXP, A05	A3
s	Delay time for speed setpoint monitoring	DOUBLE	NEW CONF
-			
-	1	0.0	-
		-	1/1

Description: This MD defines how long the speed setpoint may be within the limit CTRL_OUT_LIMIT[n] (max. speed setpoint) until the monitoring function is triggered.

Monitoring (and with it also this machine data) is always active. Reaching the limit renders the position control loop non-linear, which results in contour errors provided that the speed setpoint limited axis is participating in contour generation. That is why this MD has default value 0, i.e. the monitoring function responds as soon as the speed setpoint reaches the limit.

36300	ENC_FREQ_LIMIT	EXP, A02, A05, A06	A3,D1,R1,Z1
-	Encoder limit frequency	DOUBLE	PowerOn
-			
-	1	3.0e5, 3.0e5	-
		-	2/2

Description: This MD is used to enter the encoder frequency, which, in general, is a manufacturer specification (type plate, documentation).

For PROFIdrive:
No automatic, software-internal limitation for encoders on the PROFIdrive drive; here, the limit values of the measuring circuit module depend on the drive hardware used, i.e. known only by the drive. Therefore, it is the user who is responsible for taking into account the limit frequency of the measuring circuit module.

Axis-specific machine data

36302	ENC_FREQ_LIMIT_LOW	EXP, A02, A05, A06	A3,R1,S1,Z1
%	Encoder limit frequency for new encoder synchronization.	DOUBLE	NEW CONF
-			
-	1	99.9, 99.9	0
		100	2/2

Description: Encoder frequency monitoring uses a hysteresis.

MD36300 \$MA_ENC_FREQ_LIMIT defines the encoder limit frequency. The encoder is switched off when this frequency is exceeded. The encoder is switched on again when the frequency falls below that defined in MD36302 \$MA_ENC_FREQ_LIMIT_LOW.

MD36300 \$MA_ENC_FREQ_LIMIT is entered directly in Hertz, whereas MD36302 \$MA_ENC_FREQ_LIMIT_LOW is a fraction, expressed as a percentage, of MD36300 \$MA_ENC_FREQ_LIMIT.

MD36302 \$MA_ENC_FREQ_LIMIT_LOW is therefore already correctly pre-set for most of the encoders used.

Exception: In the case of absolute encoders with an En-Dat interface, the limit frequency of the absolute track is significantly lower than the limit frequency of the incremental track. A low value in MD36302 \$MA_ENC_FREQ_LIMIT_LOW ensures that the encoder is not switched on again until it falls below the limit frequency of the absolute track, and therefore is not referenced until permitted by the absolute track. For spindles, this referencing is carried out automatically.

Example EnDat encoder EQN 1325:
Limit frequency of the electronics of the incremental track: 430 kHz

==> MD36300 \$MA_ENC_FREQ_LIMIT = 430 kHz

The limit frequency of the absolute track is approx. 2000 encoder rpm at 2048 increments/encoder revolution, i.e. the limit frequency is $2000/60 * 2048 \text{ Hz} = 68 \text{ kHz}$

==> MD36302 \$MA_ENC_FREQ_LIMIT_LOW = $68/430 = 15\%$

36310	ENC_ZERO_MONITORING	EXP, A02, A05	A3,R1
-	Zero mark monitoring	DWORD	NEW CONF
-			
-	1	0, 0	-

Description: This MD is used to activate zero mark monitoring.
For PROFIdrive drives (the corresponding diagnostics system variables are not currently supplied for incremental measuring systems):
For PROFIdrive, the permissible deviation must be set in the drive, *not* in the NC. Zero mark monitoring reported by the drive is mapped to the NCK according to the following rule:
0: no zero mark monitoring
100: no zero mark monitoring together with suppression of all encoder monitoring operations, i.e. not only alarm 25020 but also alarms 25000, 25010 etc. are suppressed).
>0 but less than 100: direct triggering of power ON alarm 25000 (or 25001).
>100: attenuated error message: reset alarm 25010 (25011) is output instead of power ON alarm 25000 (25001).
For absolute measuring systems (\$MA_ENC_TYPE=4):
Permissible deviation in 1/2 coarse increments between the absolute and the incremental encoder track (one 1/2 coarse increment is sufficient).
If a SIMODRIVE611U drive type is used, monitoring only takes place at a standstill.

36312	ENC_ABS_ZEROMON_WARNING	EXP, A02, A05	A3
-	Zero mark monitoring warning level	DWORD	NEW CONF
-			
-	1	10, 10	-

Description: Only for absolute measuring systems (\$MA_ENC_TYPE=4):
This MD activates zero mark diagnostics.
0: no zero mark diagnostics
>0: permissible deviation in 1/2 coarse increments between the absolute and the incremental encoder track (one 1/2 coarse increment is sufficient).

36314	ENC_ABS_ZEROMON_INITIAL	EXP, A02, A05	A3
-	Warning level for absolute encoder power ON	DWORD	NEW CONF
-			
-	1	1000, 1000	-

Description: Only for absolute measuring systems (\$MA_ENC_TYPE=4):
Parameterization in 1/2 coarse increments
At absolute encoder power ON (deselect parking and similar) this MD parameterizes the previously permissible position offset (comparison of the new absolute position with the information last saved in SRAM). When the warning level is exceeded, system variable \$VA_ENC_ZERO_MON_ERR_CNT is incremented in coarse increments by the value 10000.

Axis-specific machine data

36400	CONTOUR_TOL			A05, A11	A3,D1,G2
mm, degrees	Tolerance band for contour monitoring			DOUBLE	NEW CONF
-					
-	-	1.0,1.0,1.0,1.0,1.0,1.0, 1.0,1.0,1.0...	-	-	2/2

Description: Tolerance band for axial contour monitoring (dynamic following error monitoring).
The permissible deviation between the real and the modelled following error is entered in this MD.
The input of the tolerance band is intended to avoid spurious tripping of the dynamic following error monitoring caused by minor speed fluctuations, which occur during normal closed-loop control operations (e.g. during first cut).
Following error modelling and thus the input of this MD depend on the position control gain MD32200 \$MA_POSCTRL_GAIN and, in the case of precontrol or simulation, on the accuracy of the controlled system model MD32810 \$MA_EQUIV_SPEEDCTRL_TIME (equivalent time constant for precontrol of speed control loop), as well as on the accelerations and velocities used.

36500	ENC_CHANGE_TOL			A02, A05	G1,K6,K3,A3,D1, G2,Z1
mm, degrees	Tolerance at actual position value change.			DOUBLE	NEW CONF
-					
-	-	0.1	-	-	2/2

Description: The permissible deviation between the actual values of the two measuring systems is entered in this MD.
This difference must not be exceeded when switching over the measuring system used for closed-loop control, in order to avoid compensating processes that are too strong. Otherwise, the error message 25100 "Axis %1 Switchover of measuring system not possible" is generated and the switchover does not take place.
MD irrelevant for:
MD30200 \$MA_NUM_ENC_S = 0 or 1.

36510	ENC_DIFF_TOL			A02, A05	A3,G2
mm, degrees	Tolerance of measuring system synchronization			DOUBLE	NEW CONF
-					
-	-	0.0	-	-	0/0

Description: Permissible deviation between the actual values of the two measuring systems. This difference must not be exceeded during the cyclic comparison of the two measuring systems used, as otherwise error message 25105 (measuring systems deviate) would be generated.
The corresponding monitoring function is not active

- with MD input value=0,
- if less than 2 measuring systems are active/available in the axis
- or if the axis has not been referenced (at least act. closed-loop control meas. system).

With modulo axes, it is always the absolute value of the shortest/direct position difference that is monitored.

Axis-specific machine data

36520	DES_VELO_LIMIT	A02, A05	-
%	Threshold for setpoint velocity monitoring	DOUBLE	NEW CONF
-			
-	-	125.0	-
			1/1

Description: Maximum permissible setpoint velocity as a percentage of the maximum axis velocity/spindle speed.
 With MD36520 \$MA_DES_VELO_LIMIT, the position setpoint is monitored for abrupt changes. If the permissible limit value is exceeded, alarm 1016 error code 550010 is output.
 With axes, this machine data refers to MD32000 \$MA_MAX_AX_VELO.
 With spindles, this MD refers to the lower of the speeds set in MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT of the current gear stage and MD35100 \$MA_SPIND_VELO_LIMIT.

36600	BRAKE_MODE_CHOICE	EXP, A05	A3,Z1
-	Deceleration response on hardware limit switch	BYTE	PowerOn
CTEQ			
-	-	0	0
			1
			2/2

Description: If a rising edge of the axis-specific hardware limit switch is detected while the axis is traversing, the axis is braked immediately.
 The type of braking is determined by this machine data:
 Value = 0:
 Controlled braking along the acceleration ramp defined by MD32300 \$MA_MAX_AX_ACCEL (axis acceleration).
 Value = 1:
 Rapid braking (selection of setpoint = 0) with reduction of following error.
 Related to:
 NC/PLC interface signal V380x 1000.1 und .0 (Hardware limit switch plus or minus)

Axis-specific machine data

36610	AX_EMERGENCY_STOP_TIME	A05, -	TE3,K3,A2,A3,N2, Z1
s	Maximum time for braking ramp in case of error.	DOUBLE	NEW CONF
-			
-	-	0.05	0.0
		1.0e15	2/2

Description: This MD defines the braking ramp time that an axis or spindle requires to brake from maximum velocity/speed to a standstill in the event of errors (e.g. emergency stop). At the same lead/brake acceleration, standstill is reached correspondingly earlier from lower velocities/speeds.

Mechanically robust axes are normally stopped abruptly with speed setpoint 0; values in the lower ms range are appropriate in these cases (default setting).

However, high moving masses or limited mechanical conditions (e.g. gear load capacity) often have to be taken into account for spindles. This means that the MD has to be changed to set a longer braking ramp.

Notice:

- With interpolating axes or axis/spindle couplings, it cannot be ensured that the contour or coupling will be maintained during the braking phase.
- If the time set for the braking ramp for error states is too long, the controller enable will be removed although the axis/spindle is still moving. Depending on the drive type used and the activation of the pulse enable, either an immediate stop with speed setpoint 0 will be initiated or the axis/spindle will coast down without power. The time selected in MD36610 \$MA_AX_EMERGENCY_STOP_TIME should therefore be shorter than the time in MD36620 \$MA_SERVO_DISABLE_DELAY_TIME (cutout delay, controller enable) so that the configured braking ramp can be fully active throughout the entire braking operation.
- The braking ramp may be ineffective or not maintained if the active drive follows its own braking ramp logic (e.g. SINAMICS).

Related to:

MD36620 \$MA_SERVO_DISABLE_DELAY_TIME (cutout delay controller enable)

MD36210 \$MA_CTRLLOUT_LIMIT (maximum speed setpoint)

36620	SERVO_DISABLE_DELAY_TIME	A05, -	TE3,K3,A2,A3,N2, Z1
s	Cutout delay servo enable	DOUBLE	NEW CONF
-			
-	-	0.1	0.0
		1.0e15	2/2

Description: Maximum time delay for removal of "controller enable" after faults. The speed enable (controller enable) of the drive is removed internally within the controller after the set delay time, at the latest.

The delay time entered becomes active as a result of the following events:

- Errors that lead to immediate stopping of the axes
- Removal of the interface signal by the PLC V380x 0002.1 (Controller enable)

As soon as the actual speed reaches the standstill range (MD36060 \$MA_STANDSTILL_VELO_TOL), the "controller enable" for the drive is removed. The time set should be long enough to enable the axis / spindle to brake down to a standstill from maximum traversing velocity or maximum speed. If the axis / spindle is stationary, the "controller enable" for the drive is removed immediately (i.e. the time defined in MD36620 \$MA_SERVO_DISABLE_DELAY_TIME is terminated prematurely).

Application example(s):

Speed control of the drive should be retained long enough to enable the axis / spindle to brake down to standstill from maximum traversing velocity or maximum speed.

Notice:

If the cutout delay controller enable is set too short, controller enable will be removed although the axis/spindle is still moving. This axis/spindle then coasts down without power (which may be appropriate for grinding wheels, for example); otherwise the time set in MD36620 \$MA_SERVO_DISABLE_DELAY_TIME should be longer than the duration of the braking ramp for error states (MD36610 \$MA_AX_EMERGENCY_STOP_TIME).

Related to:

NC/PLC interface signal V380x 0002.1 (Controller enable)

MD36610 \$MA_AX_EMERGENCY_STOP_TIME

36690	AXIS_DIAGNOSIS	EXP, A08	-
-	Internal data for test purposes	DWORD	PowerOn
NBUP			
-	-	0	-
		-	0/0

Description: Internal data for test purposes

0: :Basic setting

Bit 0 (LSB) = 1 :For test case task.exp (for alarm SCAL_WARN_VEL)

Bit 1 = 1 :For test case brake test

- ACT_POS_ABS for ENC-SIM on HOST
- Additional error information in \$VA_FXS_INFO

Bit 2 = 1 :For travel to fixed stop - preliminary

- Allow rapid braking for linked axes

Bit 3 = 1 :For travel to fixed stop - preliminary

- Consider inversion of direction when switching off rapid braking for linked axes

Axis-specific machine data

36700	DRIFT_ENABLE	EXP, A07, A09	G2
-	Automatic drift compensation	BOOLEAN	NEW CONF
-			
-	-	FALSE	-
-	-	-	1/1

Description: Only for special analog and hydraulic drives (not active with digital SIMODRIVE611D or PROFIdrive drives):
The automatic drift compensation is activated by MD36700 \$MA_DRIFT_ENABLE.

1: Automatic drift compensation active (only for position-controlled axes/spindles).

With automatic drift compensation, while the axis is at a standstill, the control continually calculates the additional drift value still required to ensure that the following error reaches the value 0 (compensation criterion). The total drift value is therefore formed from the drift basic value (MD36720 \$MA_DRIFT_VALUE) and the drift additional value.

0: Automatic drift compensation not active.

The drift value is formed only from the drift basic value (MD36720 \$MA_DRIFT_VALUE).

MD irrelevant to:

Non-position-controlled spindles

Related to:

MD36710 \$MA_DRIFT_LIMIT drift limit value for automatic drift compensation

MD36720 \$MA_DRIFT_VALUE drift basic value

36710	DRIFT_LIMIT	EXP, A07, A09	-
%	Drift limit value for automatic drift compensation	DOUBLE	NEW CONF
-			
-	1	0.0	0
-	-	1.e9	3/3

Description: Only for special analog and hydraulic drives (not active with digital SIMODRIVE611D or PROFIdrive drives):
The magnitude of the drift additional value calculated during automatic drift compensation can be limited by MD36710 \$MA_DRIFT_LIMIT.

If the drift additional value exceeds the limit value entered in MD36710 \$MA_DRIFT_LIMIT, alarm 25070 "Drift value too large" is output, and the drift additional value is limited to this value.

MD irrelevant to:

MD36700 \$MA_DRIFT_ENABLE = 0

36720	DRIFT_VALUE	EXP, A07, A09	-
%	Basic drift value	DOUBLE	NEW CONF
-			
-	1	0.0	-1e15
		1e15	2/2

Description: Only for special analog and hydraulic drives (not with digital SIMODRIVE611D drives - digital drives do not have a drift):
The value entered in MD36720 \$MA_DRIFT_VALUE is always added as an offset to the manipulated variable. Whereas automatic drift compensation is active only for position-controlled axes, this machine data is always active.
Special case: the following applies to PROFIdrive drives:
This MD can also be used for "simple" drives that have drift problems due to drive-internal implementation as analog drives. To avoid erroneous settings, this static drift compensation only becomes active with PROFIdrive, if \$MA_RATED_OUTVAL != 0 (i.e. the MD has no effect in the case of automatic interface adjustment between the NC and the drive).
Note:
Drift compensation must not be active if the DSC function (MD32640 \$MA_STIFFNESS_CONTROL_ENABLE=1) is used, as otherwise unexpected speed oscillations will occur when DSC is enabled/disabled.
Standardization: the input value is related to the corresponding interface standardization in
MD32250 \$MA_RATED_OUTVAL,
MD32260 \$MA_RATED_VELO and
MD36210 \$MA_CTRLOUT_LIMIT.

36730	DRIVE_SIGNAL_TRACKING	A10	B3
-	Acquisition of additional drive actual values	BYTE	PowerOn
-			
-	-	0	0
		4	0/0

Description: MD36730 \$MA_DRIVE_SIGNAL_TRACKING = 1 activates the acquisition of the following drive actual values:
For SIMODRIVE611D or PROFIdrive:

- \$AA_LOAD Drive load
- \$AA_POWER Drive active power
- \$AA_TORQUE Drive torque setpoint
- \$AA_CURR Smoothed current setpoint (q-axis current) of drive

MD36730 \$MA_DRIVE_SIGNAL_TRACKING = 2 activates the acquisition of the following drive actual values:
With PROFIdrive, it must be ensured that the stated values are also transmitted in the drive actual message frame (provide sufficient message frame length on the bus, assign the values to the message frame contents in the drive, e.g. use message frame 116).

- \$VA_DP_ACT_TEL shows actual value message frame words

Axis-specific machine data

36750	AA_OFF_MODE			A10	2,4,5,3,6.2
-	Effect of value assignment for axial override of synchr. action.			BYTE	PowerOn
CTEQ					
-	-	0	0	7	0/0

Description: Mode setting for axial offset \$AA_OFF

Bit 0: Effect of value assignment within a synchronized action

0: Absolute value

1: Incremental value (integrator)

Bit 1: Response of \$AA_OFF on RESET

0: \$AA_OFF is deselected on RESET

1: \$AA_OFF is retained beyond RESET

Bit 2: \$AA_OFF in JOG mode

0: No superimposed motion due to \$AA_OFF

1: A superimposed motion due to \$AA_OFF is interpolated

2.4.7 Travel to fixed stop

37000	FIXED_STOP_MODE			A10, -	-
-	Travel to fixed stop mode			BYTE	PowerOn
CTEQ					
802d-cu3	-	0	0	3	2/2
802d-ng2	-	0	0	3	2/2
802d-ng3	-	0	0	3	2/2
802d-tm1	-	0	0	3	0/0
802d-tm2	-	0	0	3	2/2
802d-tm3	-	0	0	3	2/2

Description: This machine data defines how the function "Travel to fixed stop" can be started.

0: Travel to fixed stop not available.

1: Travel to fixed stop can be started only from the NC program with the command FXS[x]=1.

Axis-specific machine data

37002	FIXED_STOP_CONTROL			A10	F1
-	Sequence control for travel to fixed stop			BYTE	PowerOn
-					
802d-cu3	-	0	0	3	2/2
802d-ng2	-	0	0	3	2/2
802d-ng3	-	0	0	3	2/2
802d-tm1	-	0	0	3	0/0
802d-tm2	-	0	0	3	2/2
802d-tm3	-	0	0	3	2/2

Description: Sequence control for travel to fixed stop.
 Bit 0: behavior on pulse disable at fixed stop
 = 0: travel to fixed stop is canceled
 = 1: travel to fixed stop is interrupted, i.e. the drive is without power.
 As soon as the pulse disable is canceled again, the drive continues with the limited torque.
 Control of the torque injection see bit 1.
 Bit 1: behavior after pulse disable at the fixed stop
 = 0: the torque is applied in steps.
 = 1: the torque is applied in ramps (see MD37012 \$MA_FIXED_STOP_TORQUE_RAMP_TIME)

37010	FIXED_STOP_TORQUE_DEF			A10	-
%	Default fixed stop clamping torque			DOUBLE	PowerOn
CTEQ					
802d-cu3	-	5.0	0.0	100.0	2/2
802d-ng2	-	5.0	0.0	100.0	2/2
802d-ng3	-	5.0	0.0	100.0	2/2
802d-tm1	-	5.0	0.0	100.0	0/0
802d-tm2	-	5.0	0.0	100.0	2/2
802d-tm3	-	5.0	0.0	100.0	2/2

Description: The clamping torque is set in this machine data as a % of the maximum motor torque (in the case of FDD this corresponds to the % of the max. current setpoint).
 The clamping torque becomes active as soon as the fixed stop is reached or the NC/PLC interface signal V380x 0001.1 (Acknowledge fixed stop reached) has been set.
 The entered value is a default and is active only as long as

- no clamping torque has been programmed with command FXST[x]
- the clamping torque set in SD 43510: FIXED_STOP_TORQUE was not changed after fixed stop had been reached.

Related to:
 SD 43510: FIXED_STOP_TORQUE
 (clamping torque for travel to fixed stop)

Axis-specific machine data

37012	FIXED_STOP_TORQUE_RAMP_TIME			A10	-
s	Time period until reaching the changed torque limit			DOUBLE	NEW CONF
-					
802d-cu3	-	0.0	-	-	2/2
802d-ng2	-	0.0	-	-	1/1
802d-ng3	-	0.0	-	-	1/1
802d-tm1	-	0.0	-	-	0/0
802d-tm2	-	0.0	-	-	2/2
802d-tm3	-	0.0	-	-	2/2

Description: Period in seconds until the changed torque limit is reached.
The value 0.0 deactivates the ramp function.

37014	FIXED_STOP_TORQUE_FACTOR			A10	TE3
-	Adaption factor torque limit			DOUBLE	NEW CONF
-					
802d-cu3	-	1.0	-	-	2/2
802d-ng2	-	1.0	-	-	1/1
802d-ng3	-	1.0	-	-	1/1
802d-tm1	-	1.0	-	-	0/0
802d-tm2	-	1.0	-	-	2/2
802d-tm3	-	1.0	-	-	2/2

Description: Interface factor torque limit.
With this factor, the torque limit of linked slave axes (MD 37250) can be weighted additionally.
Even with different motors, the torque limits can be kept equal in all linked axes.

Axis-specific machine data

37020	FIXED_STOP_WINDOW_DEF			A05, A10	-
mm, degrees	Default fixed-stop monitoring window			DOUBLE	PowerOn
CTEQ					
802d-cu3	-	1.0	0.0	1.0e15	2/2
802d-ng2	-	1.0	0.0	1.0e15	2/2
802d-ng3	-	1.0	0.0	1.0e15	2/2
802d-tm1	-	1.0	0.0	1.0e15	0/0
802d-tm2	-	1.0	0.0	1.0e15	2/2
802d-tm3	-	1.0	0.0	1.0e15	2/2

Description: This machine data is used to enter the default for the standstill monitoring window at fixed stop.

Fixed stop monitoring becomes active as soon as the fixed stop is reached, i.e. NC/PLC interface signal V390x 0002.5 (Fixed stop reached) is set.

If the position at which the fixed stop is detected is left by more than the tolerance specified in MD37020 \$MA_FIXED_STOP_WINDOW_DEF alarm 20093 "Fixed stop monitoring has responded" is output and the "FXS" function is deselected.

The value entered is a default setting and is active only as long as

- no fixed stop monitoring window is programmed with command FXSW[x],
- the fixed stop monitoring window is not changed via SD 43520: FIXED_STOP_WINDOW (after reaching of fixed stop).

Related to:

SD43520 \$SA_FIXED_STOP_WINDOW (fixed stop monitoring window)

37030	FIXED_STOP_THRESHOLD			A10, -	-
mm, degrees	Threshold for fixed stop detection			DOUBLE	NEW CONF
-					
802d-cu3	-	2.0	0.0	1.0e15	2/2
802d-ng2	-	2.0	0.0	1.0e15	2/2
802d-ng3	-	2.0	0.0	1.0e15	2/2
802d-tm1	-	2.0	0.0	1.0e15	0/0
802d-tm2	-	2.0	0.0	1.0e15	2/2
802d-tm3	-	2.0	0.0	1.0e15	2/2

Description: Threshold value for fixed stop detection.

The contour deviation is checked for this threshold as a criterion for reaching the fixed stop. Waiting until the set torque limit is reached is a further condition for digital drives.

This machine data is only active if MD37040 \$MA_FIXED_STOP_BY_SENSOR = 0.

The NC/PLC interface signal V390x 0002.5 (Fixed stop reached) is set if the axial contour deviation exceeds the threshold value set in MD37030 \$MA_FIXED_STOP_THRESHOLD.

MD irrelevant to:

MD37040 \$MA_FIXED_STOP_BY_SENSOR = 1

Related to:

NC/PLC interface signal V390x 0002.5 (Fixed stop reached)

Axis-specific machine data

37040	FIXED_STOP_BY_SENSOR			A10	-
-	Fixed stop detection by sensor			BYTE	Immediately
CTEQ					
802d-cu3	-	0	0	3	2/2
802d-ng2	-	0	0	3	2/2
802d-ng3	-	0	0	3	2/2
802d-tm1	-	0	0	3	0/0
802d-tm2	-	0	0	3	2/2
802d-tm3	-	0	0	3	2/2

Description: This machine data defines how the criterion "Fixed stop reached" is determined.

A change of this machine data becomes active with the next selection of travel to fixed stop.

MD=0

The criterion "Fixed stop reached" is determined internally on the basis of the axial FIXED_STOP_THRESHOLD.

MD=1

The criterion "Fixed stop reached" is determined via an external sensor and signalled to the NC via the NC/PLC interface signal V380x 0001.2 (Sensor fixed stop).

MD=2

The criterion "Fixed stop reached" is accepted if either the contour monitoring (MD = 0) or the signal of the external sensor (MD = 1) has responded.

Related to:

MD37030 \$MA_FIXED_STOP_THRESHOLD
(threshold for fixed stop detection)
NC/PLC interface signal V380x 0001.2 (Sensor fixed stop)

37050	FIXED_STOP_ALARM_MASK			A05, A10	-
-	Enable of the fixed stop alarms			BYTE	NEW CONF
-					
802d-cu3	-	1	0	15	2/2
802d-ng2	-	1	0	15	2/2
802d-ng3	-	1	0	15	2/2
802d-tm1	-	1	0	15	0/0
802d-tm2	-	1	0	15	2/2
802d-tm3	-	1	0	15	2/2

Description: This machine data defines whether the alarms 20091 "Fixed stop not reached", 20094 "Fixed stop aborted" and 25042 "FOC: Standstill monitoring" are output.

MD= 0

Suppression of alarm 20091 "Fixed stop not reached"

MD= 2

Suppression of alarms 20091 "Fixed stop not reached" and 20094 "Fixed stop aborted"

MD=3

Suppression of alarm 20094 "Fixed stop aborted"

37052	FIXED_STOP_ALARM_REACTION	A05, A10	-
-	Reaction with fixed stop alarms	BYTE	PowerOn
-			
-	-	0	-
-	-	-	1/1

Description: Behavior of VDI signal "Mode group ready" in case of fixed stop alarms:

Bit value = 0: "Mode group ready" will be deleted (drives de-energized)

Bit value = 1: "Mode group ready" remains active

Bit0: Alarm 20090 Travel to fixed stop not possible

Bit1: Alarm 20091 Fixed stop not reached

Bit2: Alarm 20092 Travel to fixed stop still active

Bit3: Alarm 20093 Standstill monitoring at fixed stop has triggered

Bit4: Alarm 20094 Travel to fixed stop aborted

All other bits without meaning.

Standard: 0 = All alarms de-energize the drives

37060	FIXED_STOP_ACKN_MASK	A10	-
-	Waiting for PLC acknowledgements during travel to fixed stop	BYTE	PowerOn
CTEQ			
802d-cu3	-	0	0
802d-ng2	-	0	0
802d-ng3	-	0	0
802d-tm1	-	0	0
802d-tm2	-	0	0
802d-tm3	-	0	0

Description: This machine data defines whether or not the NC waits for acknowledgement messages from the PLC when the "Travel to fixed stop" function is active.

Bit 0 = 0

Once the NC has transmitted interface signal V390x 0002.4 (Activate travel to fixed stop) to the PLC, it starts the programmed traversing.

Bit 0 = 1

After the NC has transmitted interface signal V390x 0002.4 (Activate travel to fixed stop) to the PLC, it waits for the PLC to acknowledge with interface signal V380x 0003.1 (Enable travel to fixed stop) and then starts the programmed traversing.

Bit 0 should be set to 1 for analog drives so that the motion is not started before the PLC has limited the torque in the drive.

Bit 1 = 0

Once the NC has transmitted the interface signal V390x 0002.5 (Fixed stop reached) to the PLC, the program advances to the next block..

Axis-specific machine data

Bit 1 = 1

After the NC has transmitted the interface signal V390x 0002.5 (Fixed stop reached) to the PLC, it waits for the PLC to acknowledge with interface signal V380x 0001.1 (Acknowledge fixed stop reached), outputs the programmed torque and then advances to the next block.

Bit 1 should be set for analog drives so that the PLC can switch the drive to torque-controlled operation if a programmable clamping torque has to be specified.

With digital drives (SIMODRIVE611D, PROFIdrive), the "Travel to fixed stop" function can be executed without any acknowledgements, thus allowing program run times to be reduced.

Related to:

NC/PLC interface signal V390x 0002.4 (Activate travel to fixed stop)

NC/PLC interface signal V380x 0003.1 (Enable travel to fixed stop)

NC/PLC interface signal V390x 0002.5 (Fixed stop reached)

NC/PLC interface signal V380x 0001.1 (Acknowledge fixed stop reached)

37070	FIXED_STOP_ANA_TORQUE			A10	-
%	Torque limit when approaching the fixed stop for analog drives			DOUBLE	PowerOn
CTEQ					
-	-	5.0	0.0	100.0	0/0

Description: Only for analog drives (irrelevant to digital drives SIMODRIVE611D or PROFIdrive):
 This machine data defines an internal NC torque limit for analog drives. It is specified as a percentage of the maximum drive torque (corresponds to % of max. current setpoint with FDD).
 This torque limit is active in the NC from the start of the motion (acceleration torque) until the instant the fixed stop is reached. The torque limit must have the same effect as the torque limit set in the drive (SIMODRIVE611D-A).
 This torque limit is required to ensure that

- there are no step changes in torque during switchover from speed-controlled to current-controlled or torque-controlled operation,
- the acceleration is reduced to the correct value in the NC.

37080	FOC_ACTIVATION_MODE			A10	-
-	Initial setting of modal torque/force limitation			BYTE	PowerOn
-					
-	-	0	0	3	0/0

Description: The initial setting of the modal torque/force limitation is set with this MD after reset and PowerOn:
 Bit 0: Response after PowerON
 = 0 : FOCOF
 = 1 : FOCON (modal)
 Bit 1: Response after reset
 = 0 : FOCOF
 = 1 : FOCON (modal)
 Default setting: FOCOF after reset and PowerOn

37100	GANTRY_AXIS_TYPE			A01, A10	G1,TE1,Z3
-	Gantry axis definition			BYTE	PowerOn
CTEQ					
802d-cu3	-	0	0	33	2/2
802d-ng2	-	0	0	33	-1/2
802d-ng3	-	0	0	33	-1/2
802d-tm1	-	0	0	33	-1/2
802d-tm2	-	0	0	33	2/2
802d-tm3	-	0	0	33	2/2

Description: General: decimal representation, with a b
a

0: Leading axis
1: Synchronized axis

b

0: No gantry axis
1: Axis in gantry grouping 1
2: Axis in gantry grouping 2
3: Axis in gantry grouping 3
...

A max. of 8 gantry groupings is possible.

Examples:

11: Axis is a synchronized axis in a gantry grouping 1
2: Axis is a leading axis in gantry a grouping 2
12: Axis is a synchronized axis in a gantry grouping 2
3: Axis is a leading axis in a gantry grouping 3
13: Axis is a synchronized axis in a gantry grouping 3

Special cases:

Alarm 10650 "Incorrect gantry machine data" and 10651 "Gantry unit not defined" in the case of an incorrect gantry axis definition.

Related to:

MD37110 \$MA_GANTRY_POS_TOL_WARNING (gantry warning limit)
MD37120 \$MA_GANTRY_POS_TOL_ERROR (gantry trip limit)
MD37130 \$MA_GANTRY_POS_TOL_REF (gantry trip limit during referencing)

Axis-specific machine data

37110	GANTRY_POS_TOL_WARNING			A05, A10	G1,Z3
mm, degrees	Gantry warning limit			DOUBLE	Reset
-					
802d-cu3	-	0.0	-1e15	1e15	2/2
802d-ng2	-	0.0	-1e15	1e15	-1/2
802d-ng3	-	0.0	-1e15	1e15	-1/2
802d-tm1	-	0.0	-1e15	1e15	-1/2
802d-tm2	-	0.0	-1e15	1e15	2/2
802d-tm3	-	0.0	-1e15	1e15	2/2

Description:

Value > 0

With gantry axes, the difference between the position actual values of the leading and synchronized axes is constantly monitored.

MD37110 \$MA_GANTRY_POS_TOL_WARNING is used to define a limit value for the position actual value difference; when the limit is exceeded, warning 10652 "Warning limit exceeded" is output. However, the gantry axes are not stopped internally in the control. The warning threshold must therefore be selected so that the machine can withstand the position actual value deviation between the gantry axes without sustaining mechanical damage. Furthermore, the NC/PLC interface signal V390x 5005.3 (Gantry warning limit exceeded) to the PLC is set to "1". The PLC user program can thus initiate the necessary measures (e.g. program interruption at block end) when the warning limit is exceeded. As soon as the current position actual value difference has dropped below the warning limit again, the message is canceled and the interface signal "Gantry warning limit exceeded" is reset.

Effect of the gantry warning limit on the gantry synchronization process:

The position actual value difference between the leading and synchronized axes is determined during gantry synchronization. If the deviation is less than the gantry warning limit, the synchronizing motion of the gantry axes is automatically started internally in the control.

Otherwise the synchronizing motion has to be initiated via the PLC interface (interface signal (Gantry-Synchronization run ready to start)).

Otherwise the synchronizing motion has to be initiated via the PLC interface (interface signal V380x 5005.4 (Start gantry synchronization process))

Value = 0

The setting MD37110 \$MA_GANTRY_POS_TOL_WARNING = 0 deactivates the monitoring for violation of the warning limit.

The gantry synchronization is not initiated internally in the control.

Special cases:

Alarm 10652 "Warning limit exceeded" in response to violation of the gantry warning limit.

Related to:

MD37100 \$MA_GANTRY_AXIS_TYPE Gantry axis definition

MD37120 \$MA_GANTRY_POS_TOL_ERROR Gantry trip limit

MD37130 \$MA_GANTRY_POS_TOL_REF
 Gantry trip limit during referencing
 NC/PLC interface signal V390x 5005.3 (Gantry warning limit exceeded)
 NC/PLC interface signal V380x 5005.4 (Start gantry synchronization process)

37120	GANTRY_POS_TOL_ERROR			A05, A10	G1,Z3
mm, degrees	Gantry trip limit			DOUBLE	PowerOn
-					
802d-cu3	-	0.0	-1e15	1e15	2/2
802d-ng2	-	0.0	-1e15	1e15	-1/2
802d-ng3	-	0.0	-1e15	1e15	-1/2
802d-tm1	-	0.0	-1e15	1e15	-1/2
802d-tm2	-	0.0	-1e15	1e15	2/2
802d-tm3	-	0.0	-1e15	1e15	2/2

Description: With gantry axes, the difference between the position actual values of the leading and synchronized axes is continuously monitored. MD37120 \$MA_GANTRY_POS_TOL_ERROR defines the maximum permissible deviation in position actual value between the synchronized axis and the leading axis in the gantry axis grouping. Violation of this limit value is monitored only if the gantry axis grouping is already synchronized (NC/PLC interface signal V390x 5005.5 (Gantry grouping is synchronized) = 1); otherwise the value set in MD37130 \$MA_GANTRY_POS_TOL_REF is used.

When this limit value is exceeded, alarm 10653 "Error limit exceeded" is output. The gantry axes are immediately stopped internally in the control to prevent any damage to the machine. In addition, the NC/PLC interface signal is ... (Gantry-Abschaltgrenze überschritten) an die PLC auf "1" gesetzt.

In addition, the NC/PLC interface signal V390x 5005.2 (Gantry trip limit exceeded) to the PLC is set to "1".

Special cases:

Alarm 10653 "Error limit exceeded" in response to violation of the gantry trip limit.

Related to:

MD37100 \$MA_GANTRY_AXIS_TYPE Gantry axis definition

MD37110 \$MA_GANTRY_POS_TOL_WARNING Gantry warning limit

MD37130 \$MA_GANTRY_POS_TOL_REF

Gantry trip limit during referencing

NC/PLC interface signal V390x 5005.5 (Gantry grouping is synchronized)

NC/PLC interface signal V390x 5005.2 (Gantry trip limit exceeded)

Axis-specific machine data

37130	GANTRY_POS_TOL_REF			A05, A10	G1,Z3
mm, degrees	Gantry trip limit during referencing			DOUBLE	PowerOn
-					
802d-cu3	-	0.0	-1e15	1e15	2/2
802d-ng2	-	0.0	-1e15	1e15	-1/2
802d-ng3	-	0.0	-1e15	1e15	-1/2
802d-tm1	-	0.0	-1e15	1e15	-1/2
802d-tm2	-	0.0	-1e15	1e15	2/2
802d-tm3	-	0.0	-1e15	1e15	2/2

Description: With gantry axes, the difference between the position actual values of the leading and synchronized axes is continuously monitored. MD37130 \$MA_GANTRY_POS_TOL_REF defines the maximum permissible difference between the position actual values of the synchronized axis and the leading axis that is monitored if the gantry axis grouping has not yet been synchronized (NC/PLC interface signal V390x 5005.5 (Gantry grouping is synchronized) = 0). Alarm 10653 "Error limit exceeded" is output if the limit value is exceeded. The gantry axes are immediately stopped internally in the control to prevent any damage to the machine.

In addition, the NC/PLC interface signal V390x 5005.2 (Gantry trip limit exceeded) to the PLC is set to "1".

Special cases:

Alarm 10653 "Error limit exceeded" in response to violation of the gantry trip limit.

Related to:

MD37100 \$MA_GANTRY_AXIS_TYPE Gantry axis definition

MD37110 \$MA_GANTRY_POS_TOL_WARNING Gantry warning limit

MD37120 \$MA_GANTRY_POS_TOL_ERROR Gantry trip limit

NC/PLC interface signal V390x 5005.5 (Gantry grouping is synchronized)

NC/PLC interface signal V390x 5005.2 (Gantry trip limit exceeded)

37135	GANTRY_ACT_POS_TOL_ERROR			A05, A10	-
mm, degrees	Current gantry trip limit			DOUBLE	Reset
-					
802d-cu3	-	0.0	-	-	2/2
802d-ng2	-	0.0	-	-	-1/2
802d-ng3	-	0.0	-	-	-1/2
802d-tm1	-	0.0	-	-	-1/2
802d-tm2	-	0.0	-	-	2/2
802d-tm3	-	0.0	-	-	2/2

Description: Actual value difference between master axis and slave axis in the case of alarm 10653.

Leads to alarm 10657 after Power ON.

37140	GANTRY_BREAK_UP			EXP, A01, A10	G1,Z3
-	Invalidate gantry axis grouping			BOOLEAN	Reset
CTEQ					
802d-cu3	-	FALSE	-	-	2/2
802d-ng2	-	FALSE	-	-	-1/2
802d-ng3	-	FALSE	-	-	-1/2
802d-tm1	-	FALSE	-	-	-1/2
802d-tm2	-	FALSE	-	-	2/2
802d-tm3	-	FALSE	-	-	2/2

Description:

GANTRY_BREAK_UP = "0"

The forced coupling of the gantry axis grouping remains valid. Monitoring of violation of the gantry warning or trip limit is active.

GANTRY_BREAK_UP = "1"

This invalidates the forced coupling of the gantry grouping, thus allowing all gantry axes in this grouping to be traversed individually in manual mode. The monitoring for violation of the gantry warning or trip limit is deactivated. The NC/PLC interface signal "Gantry grouping is synchronized" is set to "0".

Notice:

In cases where the gantry axes are still mechanically coupled, the machine may sustain damage in this operating state when the leading or synchronized axis is traversed.

The gantry axes cannot be referenced individually.

Related to:

MD37100 \$MA_GANTRY_AXIS_TYPE Gantry axis definition

MD37110 \$MA_GANTRY_POS_TOL_WARNING Gantry warning limit

MD37130 \$MA_GANTRY_POS_TOL_REF

Gantry trip limit during referencing

NC/PLC interface signal V390x 5005.5 (Gantry grouping is synchronized)

NC/PLC interface signal V390x 5005.2 (Gantry trip limit exceeded)

Axis-specific machine data

37150	GANTRY_FUNCTION_MASK			A10	G1
-	Gantry functions			DWORD	Reset
-					
802d-cu3	-	0x00	0	0x3	2/2
802d-ng2	-	0x00	0	0x3	-1/2
802d-ng3	-	0x00	0	0x3	-1/2
802d-tm1	-	0x00	0	0x3	-1/2
802d-tm2	-	0x00	0	0x3	2/2
802d-tm3	-	0x00	0	0x3	2/2

Description: Special gantry functions are set with this MD.
The MD is bit-coded, the following bits are assigned:

Bit 0 == 0:
Extended monitoring of the actual value difference is inactive.
An offset between master and slave axes occurring in the tracking or BREAK_UP is not taken into account in the monitoring of the actual value difference.
Alarm 10657 is not output if alarm 10563 occurs before Power OFF.

Bit 0 == 1:
Extended monitoring of the actual value difference is active.
An offset between master and slave axes occurring in the tracking or BREAK_UP is taken into account in the monitoring of the actual value difference.
Prerequisite: The gantry grouping must be re-referenced or re-synchronized after starting of the control.
Alarm 10657 is output if alarm 10563 occurs before Power OFF.

Bit 1 == 0:
Zero mark search direction of the slave axis analogous to MD 34010

Bit 1 == 1:
Zero mark search direction of the slave axis same as for master axis

37240	COUP_SYNC_DELAY_TIME			A05, A10	-
s	Delay time actual value synchronism			DOUBLE	NEW CONF
-					
-	2	60, 30	-	-	0/0

Description: Synchronous spindle coupling: delay time - monitors the time taken to reach actual value synchronism after reaching setpoint synchronism.
MD37240 \$MA_COUP_SYNC_DELAY_TIME[0]: time to reach 'Synchronism fine'
MD37240 \$MA_COUP_SYNC_DELAY_TIME[1]: time to reach 'Synchronism coarse'
If the value "0" is entered, the relevant monitoring is inactive
Related to:
MD 37200 \$MA_COUPLE_POS_TOL_COARSE
MD 37210 \$MA_COUPLE_POS_TOL_FINE
MD 37220 \$MA_COUPLE_VELO_TOL_COARSE
MD 37230 \$MA_COUPLE_VELO_TOL_FINE

Axis-specific machine data

37250	MS_ASSIGN_MASTER_SPEED_CMD	A10	TE3
-	Master axis number for speed setpoint coupling	DWORD	PowerOn
-			
-	-	0	0
-		31	0/0

Description: A master/slave speed setpoint linkage is configured by indicating the machine axis number of the master axis belonging to this slave.

Related to:

MD37252 \$MA_MS_ASSIGN_MASTER_TORQUE_CTR

37252	MS_ASSIGN_MASTER_TORQUE_CTR	A10	TE3
-	Master axis number for torque control	DWORD	PowerOn
-			
-	-	0	0
-		31	0/0

Description: A torque control between the master and the slave axes is configured by stating the machine axis number of the master axis belonging to the slave.

A homogenous torque control is achieved by using the torque compensatory controller.

In order to do this, the controller has to know the actual torque values of the drives involved (these are available by default with SIMODRIVE611D, with PROFIdrive, the message frame used must include and transfer these values, e.g. use message frame 116).

With default setting = 0, the same master axis is used for torque control as for speed setpoint coupling MD37250

\$MA_MS_ASSIGN_MASTER_SPEED_CMD.

Related to:

MD37250 \$MA_MS_ASSIGN_MASTER_SPEED_CMD

MD37254 \$MA_MS_TORQUE_CTRL_MODE

MD37256 \$MA_MS_TORQUE_CTRL_P_GAIN

MD37258 \$MA_MS_TORQUE_CTRL_I_TIME

MD37268 \$MA_MS_TORQUE_WEIGHT_SLAVE

37253	MS_FUNCTION_MASK	A10	TE3
-	Master/slave settings	DWORD	NEW CONF
-			
-	-	0x0	-
-		-	0/0

Description: Parameterizing a master/slave coupling

Bit 0 = 0:

The scaling of MD37256 \$MA_MS_TORQUE_CTRL_P_GAIN, MD37260 \$MA_MS_MAX_CTRL_VELO is smaller than described in the documentation by the factor 1s/IPO cycle.

Bit 0 = 1:

The scaling of MD37256 \$MA_MS_TORQUE_CTRL_P_GAIN, MD37260 \$MA_MS_MAX_CTRL_VELO corresponds to the documentation.

Axis-specific machine data

37254	MS_TORQUE_CTRL_MODE	A10	TE3
-	Torque compensatory controller interconnection	DWORD	Immediately
-			
-	-	0	0
-		3	0/0

Description: The output of the torque compensatory controller is connected to
0: Master and slave axis
1: Slave axis
2: Master axis
3: No axis
when the torque control is active.

Related to:

MD37252 \$MA_MS_ASSIGN_MASTER_TORQUE_CTR
MD37250 \$MA_MS_ASSIGN_MASTER_SPEED_CMD
MD37254 \$MA_MS_TORQUE_CTRL_MODE

37255	MS_TORQUE_CTRL_ACTIVATION	A10	TE3
-	Torque compensatory controller activation	BYTE	NEW CONF
-			
-	-	0	0
-		1	0/0

Description: The torque compensatory controller can be switched ON and OFF by means of MD37254 \$MA_MS_TORQUE_CTRL_MODE or via the NC/PLC interface signal DB380x.DBX5000.4 (Torque compensatory controller). In order to do this, the controller has to know the actual torque values of the drives involved (these are available by default with SIMODRIVE611D, with PROFIdrive, the message frame used must include and transfer these values, e.g. use message frame 116). In the case of the PLC, MD37254 \$MA_MS_TORQUE_CTRL_MODE is only used for configuring the interconnection of the torque compensatory controller.

0: Switch ON/OFF via MD37254

1: Switch ON/OFF via the NC/PLC interface signal
DB380x.DBX5000.4 (Torque compensatory controller)

37256	MS_TORQUE_CTRL_P_GAIN	A10	TE3
%	Torque compensatory controller gain factor	DOUBLE	NEW CONF
-			
-	-	0.0	0.0
-		100.0	0/0

Description: Gain factor of the torque compensatory controller
The gain factor is entered in percent as the ratio of the maximum axis velocity of the slave axis on the load side to the rated torque.

The maximum axis velocity is derived from MD32000 \$MA_MAX_AX_VELO, the rated torque from the product of drive machine data MD1725.

Related to:

MD37254 \$MA_MS_TORQUE_CTRL_MODE
MD37258 \$MA_MS_TORQUE_CTRL_I_TIME
MD32000 \$MA_MAX_AX_VELO

37258	MS_TORQUE_CTRL_I_TIME	A10	TE3
s	Torque compensatory controller integral action time	DOUBLE	NEW CONF
-			
-	-	0.0	0.0
		100.0	0/0

Description: Integral time of the torque compensatory controller
The integral time does not become active until the P gain factor is greater than 0.

Related to:

MD37254 \$MA_MS_TORQUE_CTRL_MODE
MD37256 \$MA_MS_TORQUE_CTRL_P_GAIN
MD32000 \$MA_MAX_AX_VELO

37260	MS_MAX_CTRL_VELO	A10	TE3
%	Torque compensatory controller limit	DOUBLE	NEW CONF
-			
-	-	100.0	0.0
		100.0	0/0

Description: Torque compensatory controller limitation
The speed setpoint value calculated by the torque compensatory controller is limited.
The limit that can be entered as a percentage refers to MD32000 \$MA_MAX_AX_VELO of the slave axis.

Related to:

MD37254 \$MA_MS_TORQUE_CTRL_MODE
MD37256 \$MA_MS_TORQUE_CTRL_P_GAIN
MD37258 \$MA_MS_TORQUE_CTRL_I_TIME
MD32000 \$MA_MAX_AX_VELO

37262	MS_COUPLING_ALWAYS_ACTIVE	A10	TE3
-	Permanent master/slave link	BYTE	NEW CONF
-			
-	-	0	0
		1	0/0

Description: Activation behavior of a master/slave coupling
0: Temporary coupling
The coupling is activated/deactivated via PLC interface signals and language commands.

1: Permanent coupling

This machine data activates the permanent coupling.
PLC interface signals and language commands do not have any effect.

Related to:

MD37252 \$MA_MS_ASSIGN_MASTER_TORQUE_CTR
MD37250 \$MA_MS_ASSIGN_MASTER_SPEED_CMD

Axis-specific machine data

37263	MS_SPIND_COUPLING_MODE	A10	TE3
-	Link response of a spindle	BYTE	NEW CONF
-			
-	-	0	0
-	-	1	0/0

Description: Link behavior of a speed-controlled spindle:
 0: Link is closed/released in standstill only.
 1: Link is closed/released already during motion.
 The configuration is valid both for activation/deactivation via DB3x.DBX24.5 and for MASLON, MASLOF, MASLOFs, MASLDEL

37264	MS_TENSION_TORQUE	A10	TE3
%	Master/slave tension torque	DOUBLE	Immediately
-			
-	-	0.0	-100.0
-	-	100.0	0/0

Description: A constant tension torque between the master and the slave axis can be entered as a percentage of the rated drive torque of the slave axis.
 Use of a tension torque requires an active torque compensatory controller (compare MD37255 \$MA_MS_TORQUE_CTRL_ACTIVATION).
 Related to:
 MD37252 \$MA_MS_ASSIGN_MASTER_TORQUE_CTR
 MD37266 \$MA_MS_TENSION_TORQ_FILTER_TIME
 MD37255 \$MA_MS_TORQUE_CTRL_ACTIVATION

37266	MS_TENSION_TORQ_FILTER_TIME	A10	TE3
s	Filter time constant tension torque	DOUBLE	NEW CONF
-			
-	-	0.0	0.0
-	-	100.0	0/0

Description: The tension torque between the master and slave axes can be activated via a PT1 filter. Any change of MD37264 \$MA_MS_TENSION_TORQUE is then travelled out with the time constant of the filter.
 As default, the filter is inactive; any torque change becomes active unfiltered.
 Related to:
 MD37264 \$MA_MS_TENSION_TORQUE

37268	MS_TORQUE_WEIGHT_SLAVE	A10	TE3
%	Torque weighting of slave axis	DOUBLE	NEW CONF
-			
-	-	50.0	1.0
-	-	100.0	0/0

Description: The torque share that the slave axis contributes to the total torque can be configured via the weighting. This enables different torque shares to be implemented between the master and slave axes. In the case of motors with the same rated torque, a 50% to 50% torque sharing is suggested.
 The torque share of the master axis results implicitly from 100% - MD37268.
 Related to:
 MD37252 \$MA_MS_ASSIGN_MASTER_TORQUE_CTR
 MD37266 \$MA_MS_TENSION_TORQ_FILTER_TIME

37270	MS_VELO_TOL_COARSE	A10	TE3,Z3
%	Master/slave speed tolerance coarse	DOUBLE	NEW CONF
-			
-	-	5.0	-
-	-	-	0/0

Description: Tolerance window, coarse, for the differential speed between the master and the slave.
 If the speed difference is within the tolerance window, the NC/PLC interface signal (Master/ Slave Ausgleichr. aktiv) gesetzt.
 If the speed difference is within the tolerance window, the NC/PLC interface signal V390x 5000.4 (Master-Slave compensatory controller active) is set.
 The tolerance value is entered as a percentage of MD32000 \$MA_MAX_AX_VELO.

37272	MS_VELO_TOL_FINE	A10	TE3,Z3
%	Master/slave speed tolerance fine	DOUBLE	NEW CONF
-			
-	-	1.0	-
-	-	-	0/0

Description: Tolerance window, fine, for the differential speed between the master and the slave.
 If the speed difference is within the tolerance window, the NC/PLC interface signal (Master/Slave grob) gesetzt.
 If the speed difference is within the tolerance window, the NC/PLC interface signal V390x 5000.3 (Master/Slave coarse) is set.
 The tolerance value is entered as a percentage of MD32000 \$MA_MAX_AX_VELO.

37274	MS_MOTION_DIR_REVERSE	A10	-
-	Inverting traversing direction slave axis	BYTE	NEW CONF
-			
-	-	0	0
-	-	1	0/0

Description: Inverting the traversing direction of a slave axis in the linked status.
 0: Equidirectional to the master axis
 1: Inverse to the master axis

Axis-specific machine data

37400	EPS_TLIFT_TANG_STEP			A10	T3
mm, degrees	Tangent angle for corner recognition			DOUBLE	Reset
CTEQ					
802d-cu3	-	5.0	-	-	2/2
802d-ng2	-	5.0	-	-	0/0
802d-ng3	-	5.0	-	-	2/2
802d-tm1	-	5.0	-	-	0/0
802d-tm2	-	5.0	-	-	0/0
802d-tm3	-	5.0	-	-	2/2

Description: If TLIFT has been programmed and the axis is tracked tangentially, a step of the position setpoint larger than MD37400 \$MA_EPS_TLIFT_TANG_STEP causes an intermediate block to be inserted. The intermediate block traverses the axis to the position corresponding to the start tangent in the next block. MD irrelevant if: TLIFT not activated
Related to:
TLIFT instruction

37402	TANG_OFFSET			A10	T3
mm, degrees	Default angle for tangential correction			DOUBLE	Reset
CTEQ					
802d-cu3	-	0.0	-	-	2/2
802d-ng2	-	0.0	-	-	0/0
802d-ng3	-	0.0	-	-	2/2
802d-tm1	-	0.0	-	-	0/0
802d-tm2	-	0.0	-	-	0/0
802d-tm3	-	0.0	-	-	2/2

Description: Default offset (angle), which the tracked axis forms with the tangent. The angle acts in addition to the angle programmed in the TANGON block. MD irrelevant if tangential tracking not active.
Related to:
TANGON instruction

37500	ESR_REACTION			EXP, A01, A10, -	M3,P2
-	Axial mode of "Extended Stop and Retract"			BYTE	NEW CONF
CTEQ					
-	-	0	0	22	0/0

Description: Selection of the response to be triggered via system variable "\$AN_ESR_TRIGGER".
0 = No response Reaktion (or only external response through synchronized action programming of rapid digital outputs).
21 = NC-controlled retraction axis
22 = NC-controlled stopping axis

37510	AX_ESR_DELAY_TIME1	EXP, A01, A10, -	P2
s	Delay time ESR single axis	DOUBLE	NEW CONF
CTEQ			
-	-	0.0	-
-	-	-	1/1

Description: If, for example, an alarm occurs, the deceleration time can be delayed by means of this MD, e.g. to allow in case of gear hobbing the retraction from the tooth gap first.

37511	AX_ESR_DELAY_TIME2	EXP, A01, A10, -	P2
s	ESR time for interpolatory deceleration of single axis	DOUBLE	NEW CONF
CTEQ			
-	-	0.0	-
-	-	-	1/1

Description: The time for interpolatory braking specified here in MD37511 \$MA_AX_ESR_DELAY_TIME2 still remains after expiry of the time MD37510 \$MA_AX_ESR_DELAY_TIME1.
Rapid braking with subsequent tracking is initiated after expiry of the time MD37511 \$MA_AX_ESR_DELAY_TIME2.

37600	PROFIBUS_ACTVAL_LEAD_TIME	EXP, A01, A02	-
s	Actual value acquisition time (PROFIBUS/PROFINET Ti)	DOUBLE	PowerOn
-			
-	-	0.000125	0.0
-	-	0.032	0/0

Description: For PROFIBUS/PROFINET only:
Machine data for setting the actual value acceptance time (Ti) of the encoder on the PROFIBUS/PROFINET.
Unit: seconds; therefore default is 125µs
(this is also the default which STEP 7 sets for a 611U).
NOTICE:
The actual Ti value is read directly from the SDB configuration or the drive, if possible.
In this case, the machine data value is set to the read value and will only serve for display purposes.

37602	PROFIBUS_OUTVAL_DELAY_TIME	EXP, A01, A02	-
s	Setpoint delay time (PROFIBUS/PROFINET To)	DOUBLE	PowerOn
-			
-	-	0.003	0.0
-	-	0.032	0/0

Description: For PROFIBUS/PROFINET only:
Machine data for setting the setpoint acceptance time (To) on the PROFIBUS/PROFINET.
Unit: seconds
NOTICE:
The actual To value is read directly from the SDB configuration or the drive, if possible.
In this case, the value of the machine data is set to the read value and serves for display purposes only.

Axis-specific machine data

37610	PROFIBUS_CTRL_CONFIG	EXP, A01	-
-	PROFIdrive control bit configuration	BYTE	PowerOn
-			
-	-	0	0
-	-	2	2/2

Description: For PROFIdrive only:
Machine data for setting special PROFIdrive control word functionality:

0 =
default = no change of standard behavior

1 =
STW2, bits 0-1 are set depending on mode of operation/rapid traverse suppressing the setting of defaults for the VDI control bits "Parameter set bit0/1" from the PLC.
Bits 0-1 get the following combinations depending on the mode of operation, and controlled by NCK:
00 = Default (after Power-On)
01 = JOG (except for JOG-INC) or ((AUTOMATIC or MDI) and G0)
10 = ((AUTOMATIC or MDI) and not G0), other
11 = JOG-INC

2 =
Combination of MD=0 (preset by VDI) and MD=1 (internally preset):
MD=2 acts as MD=1, as long as there are no VDI control bits from the PLC, i.e. if the VDI control bits "Parameter set bit0/1" are both reset (0).
MD=2 acts as MD=0, if the VDI control bits "Parameter set bit0/1" are set both or individually (!=0). In this case, the VDI control bits are transferred directly to the drive (priority of VDI signals higher than that of internally created signals).

37620	PROFIBUS_TORQUE_RED_RESOL	EXP, A01	-
%	Resolution PROFIdrive torque reduction	DOUBLE	NEW CONF
-			
-	-	1.0	0.005
		10.0	2/2

Description: For PROFIdrive only:
Resolution of the torque reduction on the PROFIdrive (LSB significance)

The MD is only relevant to controls with PROFIdrive drives. For these controls, it defines the resolution of the cyclic interface data "Torque reduction value" (only exists for MD13060 \$MN_DRIVE_TELEGRAM_TYPE = 101 ff. or 201 ff.), which is required for the "Travel to fixed stop" functionality.

The 1% default value corresponds to the original significance. The torque limit is transferred on the PROFIdrive with increments of 1%; the value 100 in the corresponding PROFIdrive message frame data cell corresponds to full torque reduction (i.e. without force).

By changing this MD to 0.005%, for example, the value can be entered in increments of 0.005%, i.e. the increments for the torque limit value become finer by the factor 200.

For the limitation to the rated torque, the value 0 is transmitted in this case; a complete torque reduction (i.e. without force) characterizes the transmittable value 10000.

To avoid misadaptation, the setting value of the MD must be selected to match the interpretation configured on the drive side or the firmly defined interpretation of the torque reduction value. If the setting of the control on the drive (manufacturer-specific drive parameter) is known (i.e. with SIEMENS drives such as SIMODRIVE 611U or SINAMICS), the software automatically sets the MD, i.e. in this case the MD is merely used for display purposes.

37800	OEM_AXIS_INFO	A01, A11	-
-	OEM version information	STRING	PowerOn
-			
-	2	,	-
		-	2/2

Description: A version information freely available to the user (is indicated in the version screen)

Setting Data - Description

3.1 Setting data

Number	Identifier	Display filters			Reference
Unit	Name	Data type			Active
Attributes					
System	Dimension	Default value	Minimum value	Maximum value	Protection

Description: Description

3.1.1 General setting data

41010	JOG_VAR_INCR_SIZE	-	H1	
-	Size of the variable increment for JOG	DOUBLE	Immediately	
-				
-	0.	-	-	7/7

Description: This setting data defines the number of increments when variable increment (INCvar) is selected. This increment size is traversed by the axis in JOG mode each time the traverse key is pressed or the handwheel is turned one detent position and variable increment is selected (PLC interface signal "Active machine function: INC variable" for machine or geometry axes is set to 1).

Note:

Please note that the increment size is active for incremental jogging and handwheel jogging. So, if a large increment value is entered and the handwheel is turned, the axis might cover a large distance (depends on setting in MD31090 \$MA_JOG_INCR_WEIGHT).

SD irrelevant to

JOG continuous

Related to

NC/PLC interface signal V3300 1001.5,1005.5,1009.5 (Geometry axis 1-3 active machine function: INC variable) or NC/PLC interface signal V390x 0005.5 (Active machine function: INC variable)

MD31090 \$MA_JOG_INCR_WEIGHT (weighting of an increment for INC/handwheel)

Setting data

41050	JOG_CONT_MODE_LEVELTRIGGRD	-	H1
-	Jog mode / continuous operation with continuous JOG	BOOLEAN	Immediately
-			
-	TRUE	F	1/1

Description:

1: Jog mode for JOG continuous

In jog mode (default setting) the axis traverses as long as the traverse key is held down and an axis limitation has not been reached. When the key is released the axis is decelerated to zero speed and the movement is considered complete.

0: Continuous operation for JOG continuous

In continuous operation the traverse movement is started with the first rising edge of the traverse key and continues to move even after the key is released. The axis can be stopped again by pressing the traverse key again (second rising edge).

SD irrelevant for

Incremental jogging (JOG INC)

Reference point approach (JOG REF)

41100	JOG_REV_IS_ACTIVE	-	-
-	JOG mode: (1) revolutional feedrate / (0) feedrate	BYTE	Immediately
-	-	-	-
802d-cu3	-	0x0E	7/7
802d-ng2	-	0x0E	1/1
802d-ng3	-	0x0E	1/1
802d-tm1	-	0x0E	7/7
802d-tm2	-	0x0E	7/7
802d-tm3	-	0x0E	7/7

Description:

Bit 0 = 0:

The behavior depends on the following:

- in the case of an axis/spindle:

on the axial SD43300 \$SA_ASSIGN_FEED_PER_REV_SOURCE

- in the case of a geometry axis with an active frame with rotation:

on the channel-specific SD42600 \$SC_JOG_FEED_PER_REV_SOURCE

- in the case of an orientation axis:

on the channel-specific SD42600 \$SC_JOG_FEED_PER_REV_SOURCE

Bit 0 = 1:

A JOG motion with revolutional feedrate shall be traversed depending on the master spindle.

The following must be considered:

- If a spindle is the master spindle itself, it will be traversed without revolutional feedrate.

- If the master spindle is in stop position and if SD43300 \$SA_ASSIGN_FEED_PER_REV_SOURCE (with an axis/spindle) or SD42600 \$SC_JOG_FEED_PER_REV_SOURCE (with a geometry axis with an active frame with rotation, or with an orientation axis) = 3, traversing will be carried out without revolutional feedrate.

Bit 1 = 0:

The axis/spindle, geometry axis or orientation axis will be traversed with revolutional feedrate even during rapid traverse (see bit 0 for selection).

Bit 1 = 1:

The axis/spindle, geometry axis or orientation axis is always traversed without revolutional feedback during rapid traverse.

Bit 2 = 0:

The axis/spindle, geometry axis or orientation axis is traversed with revolutional feedrate during JOG handwheel travel, too (see bit 0 for selection).

Bit 2 = 1:

The axis/spindle, geometry axis or orientation axis is always traversed without revolutional feedrate during JOG handwheel travel.

Bit 3 = 0:

The axis/spindle is traversed with revolutional feedrate during DRF handwheel travel, too (see bit 0 for selection).

Bit 3 = 1:

The axis/spindle is always traversed without revolutional feedrate during DRF handwheel travel.

Setting data

41110	JOG_SET_VELO	-	H1
mm/min	Axis velocity in JOG	DOUBLE	Immediately
-			
	0.0		7/7

Description:

Value not equal to 0:

The velocity value entered applies to linear axes traversed in JOG mode if they are traversed manually using the "Traversing keys plus or minus".

The axis velocity is active for

- continuous jogging
- incremental jogging (INC1, ... INCvar)

The value entered must not exceed the maximum permissible axis velocity (MD32000 \$MA_MAX_AX_VELO)

Value = 0:

The feedrate in JOG mode is the corresponding axis-specific MD32020 \$MA_JOG_VELO "Conventional axis velocity". In this way, it is possible to define a separate JOG velocity for every axis.

Related to

SD41100 \$SN_JOG_REV_IS_ACTIVE (revolutional feedrate with JOG active)

MD32020 \$MA_JOG_VELO (JOG axis velocity)

MD32000 \$MA_MAX_AX_VELO (maximum axis velocity)

SD41130 \$SN_JOG_ROT_AX_SET_VELO (JOG speed with rotary axes)

41120	JOG_REV_SET_VELO	-	H1
mm/rev	Revolutional feedrate of axes in JOG mode	DOUBLE	Immediately
-			
802d-cu3	0.0		7/7
802d-ng2	0.0		1/1
802d-ng3	0.0		1/1
802d-tm1	0.0		7/7
802d-tm2	0.0		7/7
802d-tm3	0.0		7/7

Description:

Value not equal to 0:

The velocity value entered applies to axes traversed in JOG mode if revolutional feedrate (G95) is active for the relevant axis (SD41100 \$SN_JOG_REV_IS_ACTIVE = 1). The axis velocity is active for

- continuous jogging
- incremental jogging (INC1, ... INCvar)
- handwheel traversing. The value entered is valid for all axes and must not exceed the maximum permissible axis velocity (MD32000 \$MA_MAX_AX_VELO).

Value = 0:

If 0 has been entered in the setting data, the active revolutional feedrate in JOG mode is MD32050 \$MA_JOG_REV_VELO "revolutional feedrate with JOG".

Each axis can be given its own revolutional feedrate with this MD (axial MD).

SD irrelevant for

- For axes if SD41100 \$SN_JOG_REV_IS_ACTIVE = 0

Application example(s)

The operator can define a JOG velocity for a particular application.

Related to

Axial SD41100 \$SN_JOG_REV_IS_ACTIVE (revolutional feedrate for JOG active)

Axial MD32050 \$MA_JOG_REV_VELO (revolutional feedrate with JOG)

Axial MD32000 \$MA_MAX_AX_VELO (maximum axis velocity)

Setting data

41130	JOG_ROT_AX_SET_VELO	-	H1
rev/min	Axis velocity for rotary axes in JOG mode	DOUBLE	Immediately
-	0.0	-	7/7

Description: Value not equal to 0:
The velocity value entered applies to rotary axes traversed in JOG mode if they are traversed manually using the "Traversing keys plus or minus".
The axis velocity is active for

- continuous jogging
- incremental jogging (INC1, ... INCvar)

The value entered must not exceed the maximum permissible axis velocity (MD32000 \$MA_MAX_AX_VELO).
Value = 0:
The feedrate in JOG mode is the corresponding axis-specific MD32020 \$MA_JOG_VELO "Conventional axis velocity". In this way, it is possible to define a separate JOG velocity for every axis.
Application example(s)
The operator can define a JOG velocity for a particular application.
Related to
MD32020 \$MA_JOG_VELO (JOG axis velocity)
MD32000 \$MA_MAX_AX_VELO (maximum axis velocity)

41200	JOG_SPIND_SET_VELO	-	H1
rev/min	Speed for spindle JOG mode	DOUBLE	Immediately
-	0.0	-	7/7

Description: Value not equal to 0:
The speed entered applies to spindles in JOG mode if they are traversed manually by the "Plus and minus traversing keys" or the handwheel. The speed is active for

- continuous jogging
- incremental jogging (INC1, ... INCvar)

Value = 0:
If 0 has been entered in the setting data, MD32020 \$MA_JOG_VELO (JOG axis velocity) acts as the JOG velocity. Each axis can thus be given its own JOG velocity with this MD (axis-specific MD).
The maximum speeds of the active gear stage (MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT) are taken into account when traversing the spindle with JOG.
Related to
Axial MD32020 \$MA_JOG_VELO (JOG axis velocity)
MD35130 \$MA_GEAR_STEP_MAX_VELO_LIMIT (maximum speeds of the gear stages)

41300	CEC_TABLE_ENABLE			-	K3
-	Compensation table enable			BOOLEAN	Immediately
-					
802d-cu3	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	3/3
802d-ng2	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	3/3
802d-ng3	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	3/3
802d-tm1	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	-1/7
802d-tm2	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	3/3
802d-tm3	2	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	-	-	3/3

Description:

1: The evaluation of the compensation table [t] is enabled.
The compensation table is now included in the calculation of the compensation value for the compensation axis.
The compensation axis \$AN_CEC_OUTPUT_AXIS can be taken from the table configuration.
The effective total compensation value in the compensation axis can be adapted to the current machining by the targeted activation of tables (from NC part programm or PLC user program).
The function does not become active until the following conditions have been fulfilled:

- The option "Interpolatory compensation" is set
- The associated compensation tables in the NC user memory have been loaded and enabled (SD41300 \$SN_CEC_TABLE_ENABLE[t] = 1)
- The current position measuring system is referenced (NC/PLC interface signal V390x 0000.4 / .5 (Referenced/synchronized 1 or 2) = 1).

0: The evaluation of the sag compensation table [t] is not enabled.

Related to

MD18342 \$MN_MM_CEC_MAX_POINTS[t] Number of interpolation points with sag compensation
SD41300 \$SN_CEC_TABLE_ENABLE[t] Evaluation of the sag compensation table t is enabled
NC/PLC interface signal V390x 0000.4 (Referenced/synchronized 1)
NC/PLC interface signal V390x 0000.5 (Referenced/synchronized 2)

41500	SW_CAM_MINUS_POS_TAB_1		-	N3
mm/inch, degrees	Trigger points at falling cam 1-8		DOUBLE	Immediately
-				
802d-cu3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-ng2	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-ng3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-tm1	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7
802d-tm2	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7
802d-tm3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7

Description: The cam positions of minus cams 1 - 8 are entered in this machine data.

The positions are entered in the machine coordinate system.

Index [n] of the setting data addresses the cam pair:

n = 0, 1, ... , 7 corresponds to cam pair 1, 2, ... , 8

When the set switching points are overtraveled in the positive axis direction, the associated "minus" cam signals in the PLC interface (and any applied fast output signals) switch from 1 to 0.

41501	SW_CAM_PLUS_POS_TAB_1		-	N3
mm/inch, degrees	Trigger points at rising cam edge 1-8		DOUBLE	Immediately
-				
802d-cu3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-ng2	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-ng3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	7/7
802d-tm1	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7
802d-tm2	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7
802d-tm3	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-	-1/7

Description: The cam positions of plus cams 1 - 8 are entered in this machine data.

The positions are entered in the machine coordinate system.

Index [n] of the setting data addresses the cam pair:

n = 0, 1, ... , 7 corresponds to cam pair 1, 2, ... , 8

When the set switching points are overtraveled in the positive axis direction, the associated "plus" cam signals in the PLC interface (and any applied fast output signals) switch from 0 to 1.

41600	COMPAR_THRESHOLD_1	-	A4
-	Threshold value of the 1st comparator	DOUBLE	Immediately
-			
-	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-1/7

Description: COMPAR_THRESHOLD_1[b] defines the threshold values for the individual input bits [b] of comparator byte 1.
The output bit n of the 1st comparator is created by comparing the threshold value n according to the comparison type defined in bit n of COMPAR_TYPE_1.

For example:

```

COMPAR_ASSIGN_ANA_INPUT_1[2] = 4
COMPAR_THRESHOLD_1[2]       = 5000.0
COMPAR_TYPE_1                = 5

```

The 3rd output bit of comparator 1 is set if the input value at AnalogIn 4 is greater than or equal to 5 volts.

Index [b]: Bits 0 - 7

Related to

```

MD10530 $MN_COMPAR_ASSIGN_ANA_INPUT_1
MD10531 $MN_COMPAR_ASSIGN_ANA_INPUT_2
MD10540 $MN_COMPAR_TYPE_1
MD10541 $MN_COMPAR_TYPE_2

```

41601	COMPAR_THRESHOLD_2	-	A4
-	Threshold value of the 2nd comparator	DOUBLE	Immediately
-			
-	8	0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0	-1/7

Description: COMPAR_THRESHOLD_1[b] defines the threshold values for the individual input bits [b] of comparator byte 1.
Output bit n of the 1st comparator is created by comparing the threshold value n according to the comparison type defined in bit n of COMPAR_TYPE_2.

Index [b]: Bits 0 - 7

Related to

```

MD10530 $MN_COMPAR_ASSIGN_ANA_INPUT_1
MD10531 $MN_COMPAR_ASSIGN_ANA_INPUT_2
MD10540 $MN_COMPAR_TYPE_1
MD10541 $MN_COMPAR_TYPE_2

```


42010	THREAD_RAMP_DISP		-	V1
mm	Acceleration behavior of axis when thread cutting		DOUBLE	Immediately
-				
802d-cu3	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	3/3
802d-ng2	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	0/0
802d-ng3	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	0/0
802d-tm1	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	3/3
802d-tm2	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	3/3
802d-tm3	2	-1., -1., -1., -1., -1., -1., -1. 1., -1....	999999.	3/3

Description: The SD is active for thread cutting with G33 (G34, G35).
It features two elements that define the behavior of the thread axis during runup (1st element) and during deceleration/smoothing (2nd element).

The values have the same properties for thread run-in and thread run-out:

<0:

The thread axis is started/decelerated with configured acceleration. Jerk is according to the current programming of BRISK/SOFT. Behavior is compatible with MD
20650_THREAD_START_IS_HARD = FALSE used until now.

0:

Starting/deceleration of the feed axis during thread cutting is stepped. Behavior is compatible with MD
20650_THREAD_START_IS_HARD = TRUE used until now.

>0:

The maximum thread starting or deceleration path is specified. The specified distance can lead to acceleration overload of the axis. The SD is written from the block when DITR (displacement thread ramp) is programmed.

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Setting data

42100	DRY_RUN_FEED	-	V1
mm/min	Dry run feedrate	DOUBLE	Immediately
-	-	-	-
-	5000.,5000.,5000.,5000.,5000.,5000....	-	7/7

Description: The feedrate for the active dry run is entered in this setting data. The setting data can be altered on the operator panel in the "Parameters" operating area.

The entered dry run feedrate is always interpreted as a linear feed (G94). If the dry run feedrate is activated via the PLC interface, the dry run feedrate is used as the path feed after a reset instead of the programmed feed. The programmed velocity is used for traversing if it is greater than the velocity stored here.

Application example(s)

Program testing

Related to

NC/PLC interface signal V3200 0000.6 (Activate dry run feedrate)

NC/PLC interface signal V1700 0000.6 (Dry run feedrate selected)

42101	DRY_RUN_FEED_MODE	-	V1
-	Mode for dry run velocity	BYTE	Immediately
-	-	-	-
-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	12	7/7

Description: This SD can be used to set the method of operation of the dry run velocity set by SD42100 \$SC_DRY_RUN_FEED.

The following values are possible:

0:

The maximum of SD42100 \$SC_DRY_RUN_FEED and the programmed velocity become active. This is the standard setting and corresponds to the behavior up to SW 5.

1:

The minimum of SD42100 \$SC_DRY_RUN_FEED and the programmed velocity become active.

2:

SD42100 \$SC_DRY_RUN_FEED becomes active directly, irrespective of the programmed velocity.

The values 3...9 are reserved for extensions.

10:

As configuration 0, except for thread cutting (G33, G34, G35) and tapping (G331, G332, G63). These functions are executed as programmed.

11:

As configuration 1, except for thread cutting (G33, G34, G35) and tapping (G331, G332, G63). These functions are executed as programmed.

12:

As configuration 2, except for thread cutting (G33, G34, G35) and tapping (G331, G332, G63). These functions are executed as programmed.

Setting data

42125	SERUPRO_SYNC_MASK	-	-
-	Ssynchronization in approach blocks	DWORD	Immediately
-			
-	0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0		1/1

Description:

A synchronized approach can be set for the search type SERUPRO with the setting data SERUPRO_SYNC_MASK.

SERUPRO uses the function REPOS to move from the current machine position to the target block of the search. A synchronization of the channels can be forced between the reapproach block and the target block via SERUPRO_SYNC_MASK which would correspond to the use of wait markers.

Note:

The user cannot program wait markers between reapproach block and target block in a part program.

SERUPRO_SYNC_MASK activates this internal wait marker, and defines for which other channels this channel is to wait.

Example for channel 3: `$SC_SERUPRO_SYNC_MASK= 0x55`

A new block is now inserted in the Serupro approach between the reapproach block and the target block, the function of which corresponds to the following programming: `WAITM(101, 1,3,5,7)`, i.e. a wait mark synchronizes the channels 1, 3, 5 and 7.

The wait marks used internally cannot be explicitly programmed by the user.

NOTICE:

Similarly to the part program, the user can make the error of not setting the mark in a channel, so that the other channels naturally wait for ever!

Comment: The bit mask can contain a channel that does not exist (channel gaps) without a deadlock occurring.

Example for channel 3: `$SC_SERUPRO_SYNC_MASK= 0x55` and channel 5 do not exist, so `WAITM(101, 1,3,7)` is set.

Note: The block content corresponds to `"WAITM(101, 1,3,5,7)"`, the user does not see this block content, he sees REPOSA!

Note:

SERUPRO_SYNC_MASK is evaluated as soon as the part program command REPOSA is interpreted.

SERUPRO_SYNC_MASK can still be changed if SERUPRO is in the state "search target found".

If REPOSA has already been executed, a change to SERUPRO_SYNC_MASK can only become active if a new REPOS is set. This occurs, for example, by:

- Starting a new ASUB.
- STOP-JOG-AUTO-START
- STOP - select a new REPOS mode RMI/RMN/RME/RMB - START

Comment:

If one use the prog. event for search and if the NCK is at alarm 10208 then a change of SERUPRO_SYNC_MASK is not active unless one sets a new REPOS.

`SERUPRO_SYNC_MASK == 0` A block is NOT inserted.

Note:

If the bit for the current channel is not set in SD42125

42494	CUTCOM_ACT_DEACT_CTRL	-	W1
	Approach & retraction behavior with 2-1/2D tool radius compens.	DWORD	Immediately
		2222,2222,2222,2222,2222,2222,2222,2222...	3/3

Description: This setting data controls the approach and retraction behavior with tool radius compensation if the activation or deactivation block does not contain any traversing information. It is only evaluated with 2-1/2D TRC (CUT2D or CUT2DF).

The decimal coding is as follows:

N N N N

| | | | ____ Approach behavior for tools with tool point direction
(turning tools)

| | | ____ Approach behavior for tools without tool point direction
(milling tools)

| | ____ Retract behavior for tools with tool point direction
(turning tools)

| ____ Retract behavior for tools without tool point direction
(milling tools)

If the position in question contains a 1, approach or retraction is always performed, even if G41/G42 or G40 stands alone in a block.

For example:

```
N100 x10 y0
N110 G41
N120 x20
```

If a tool radius of 10mm is assumed in the above example, position x10y10 is approached in block N110.

If the position in question contains the value 2, the approach or retraction movement is only performed if at least one geometry axis is programmed in the activation/deactivation block. To obtain the same results as the above example with this setting, the program must be altered as follows:

```
N100 x10 y0
N110 G41 x10
N120 x20
```

If axis information x10 is missing in block N110, activation of TRC is delayed by one block, i.e. the activation block would now be N120.

If the position in question contains a 3, retraction is not performed in a deactivation block (G40) if only the geometry axis perpendicular to the compensation plane is programmed. In this case, the motion perpendicular to the compensation plane is performed first. This is followed by the retraction motion in the compensation plane. In this case, the block after G40 must contain motion information in the compensation plane. The approach motions for values 2 and 3 are identical.

Setting data

If the position in question contains a value other than 1, 2 or 3, i.e. in particular the value 0, an approach or retraction movement is not performed in a block that does not contain any traversing information.

About the term "Tools with tool point direction":

These are tools with tool numbers between 400 and 599 (turning and grinding tools), whose tool point direction has a value between 1 and 8. Turning and grinding tools with tool point direction 0 or 9 or other undefined values are treated like milling tools.

Note:

If the value of this setting data is changed within a program, we recommend programming a preprocessing stop (stopre) before the description to avoid the new value being used in program sections before that point. The opposite case is not serious, i.e. if the setting data is written, subsequent NC blocks will definitely access the new value.

42496	CUTCOM_CLSD_CONT	-	-
	Tool radius compensation behavior with closed contour	BOOLEAN	Immediately
	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..		3/3

Description: FALSE:

If two intersections are created on correction of the inner side of an (almost) closed contour consisting of two successive circle blocks or a circle and a linear block, the intersection that lies on the first part contour nearer to the block end will be selected as per the default behavior.

A contour will be considered as (almost) closed if the distance between the starting point of the first block and the end point of the second block is smaller than 10% of the active compensation radius, but not larger than 1000 path increments (corresponds to 1mm to 3 decimal places).

TRUE:

Under the same condition as described above, the intersection that lies on the first part contour nearer to block start is selected.

42500	SD_MAX_PATH_ACCEL	-	B2
m/s ²	maximum path acceleration	DOUBLE	Immediately
802d-cu3	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	3/3
802d-ng2	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	1/1
802d-ng3	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	1/1
802d-tm1	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	1/1
802d-tm2	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	1/1
802d-tm3	10000.,10000.,10000.,10000.,10000.,10000....	1.0e-3	3/3

Description: Setting data for additional limitation of (tangential) path acceleration

Related to ...

MD32300 \$MA_MAX_AX_ACCEL

SD42502 \$SC_IS_SD_MAX_PATH_ACCEL

42502	IS_SD_MAX_PATH_ACCEL	-	B2
-	Evaluate SD42500 \$SC_SD_MAX_PATH_ACCEL	BOOLEAN	Immediately
802d-cu3	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	3/3
802d-ng2	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	1/1
802d-ng3	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	1/1
802d-tm1	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	1/1
802d-tm2	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	1/1
802d-tm3	-	FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	3/3

Description: SD42500 \$SC_SD_MAX_PATH_ACCEL is included in the limit calculations if SD42502 \$SC_IS_SD_MAX_PATH_ACCEL=TRUE
 Related to ...
 SD42500 \$SC_SD_MAX_PATH_ACCEL

42510	SD_MAX_PATH_JERK	-	B2
m/s ³	maximum path-related jerk as setting data	DOUBLE	Immediately
802d-cu3	-	100000.,100000.,100000 0.,100000....	3/3
802d-ng2	-	100000.,100000.,100000 0.,100000....	1/1
802d-ng3	-	100000.,100000.,100000 0.,100000....	1/1
802d-tm1	-	100000.,100000.,100000 0.,100000....	1/1
802d-tm2	-	100000.,100000.,100000 0.,100000....	1/1
802d-tm3	-	100000.,100000.,100000 0.,100000....	3/3

Description: As well as MD20600 \$MC_MAX_PATH_JERK, the maximum path-related jerk can also limit the jerk.
 Related to ...
 MD20600 \$MC_MAX_PATH_JERK
 SD42512 \$SC_IS_SD_MAX_PATH_JERK

Setting data

42910	MIRROR_TOOL_WEAR	-	W1
	Sign change of tool wear with mirror image machining	BOOLEAN	Immediately
		FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	0/0

Description:

TRUE:

If a frame with mirror image machining is activated, the signs of the wear values of the components in question are inverted. The wear values of the components that are not assigned to mirrored axes remain unchanged.

FALSE:

The signs for wear values are unaffected by whether a frame with mirror image machining is active.

42920	WEAR_SIGN_CUTPOS	-	W1
	Sign of tool wear depending on tool point direction	BOOLEAN	Immediately
		FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	0/0

Description:

TRUE:

In the case of tools with a relevant tool point direction (turning and grinding tools), the sign for wear of the tool length components depends on the tool point direction.

The sign is inverted in the following cases (marked with an X):

Tool point direction	Length 1	Length 2
1		
2	X	
3	X	X
4		X
5		
6		
7	X	
8		X
9		

The sign for wear value of length 3 is not influenced by this setting data.

The SD42930 \$SC_WEAR_SIGN acts in addition to this setting data.

FALSE:

The sign for wear of the tool length components is unaffected by the tool point direction.

42930	WEAR_SIGN	-	W1
	Sign of wear	BOOLEAN	Immediately
		FALSE,FALSE,FALSE, FALSE,FALSE,FALSE..	0/0

Description: TRUE:
The sign for wear of the tool length components and the tool radius are inverted, i.e. if a positive value is entered, the total dimension is decreased.

FALSE:
The sign for wear of the tool length components and the tool radius is not inverted.

42935	WEAR_TRANSFORM	-	W1,W4
	Transformations for tool components	DWORD	Immediately
		0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0	0/0

Description: This setting data is bit-coded.
It determines which of the three wear components wear
wear
(\$TC_DP12 - \$TC_DP14),
additive offsets fine (\$TC_SCPx3 - \$TC_SCPx5),
and additive offsets coarse (\$TC_ECPx3 - \$TC_ECPx5)
are subject to adapter transformation and transformation by an orientable tool holder, if one of the two G codes TOWMCS or TOWWCS from G code group 56 is active. If initial-setting G code TOWSTD is active, this setting data will not become active.
Then, the following assignment is valid:
Bit 0 = TRUE: Do not apply transformations to \$TC_DP12 - \$TC_DP14.
Bit 1 = TRUE: Do not apply transformations to \$TC_SCPx3 - \$TC_SCPx5.
Bit 2 = TRUE: Do not apply transformations to \$TC_ECPx3 - \$TC_ECPx5.
The bits not mentioned here are (currently) not assigned.

Setting data

42980	TOFRAME_MODE	-	K2
	Frame definition at TOFRAME, TOROT and PAROT	DWORD	Immediately
	1000,1000,1000,1000,1000,1000,1000,1000...		0/0

Description: This setting data defines the direction of the X or Y axis in the case of frame definition by means of TOFRAME, TOROT or PAROT. In the case of these frame definitions, the Z direction is uniquely defined, the rotation around the Z axis is free at first. This free rotation can be defined by this setting data so that the newly defined frame deviates as little as possible from a previously active frame. In all cases in which the setting data is not zero, an active frame remains unchanged if the Z directions of the old and the new frame are the same.

0: The orientation of the coordinate system is determined by the value of the machine data MD21110 \$MC_X_AXIS_IN_OLD_X_Z_PLANE.

1: The new X direction is selected so that it lies in the X-Z plane of the old coordinate system. The angular difference between the old and new Y axes is minimal with this setting.

2: The new Y direction is selected so that it lies in the Y-Z plane of the old coordinate system. The angular difference between the old and new X axes is minimal with this setting.

3: The average of the two settings resulting from 1 and 2 is selected.

Addition of 100:

In the case of a plane change from G17 to G18 or G19, a tool matrix is generated, in which the new axis directions are parallel to the old directions. The axes are correspondingly swapped cyclically (standard transformation with plane changes). If the hundreds digit equals zero, a matrix is supplied in the cases of G18 and G19 which is derived from the unit matrix by simply rotating through 90 degrees around the X axis (G18) or through 90 degrees around the Y axis (G19). Thus in each case one axis is antiparallel to an initial axis. This setting is required to remain compatible with old software versions.

Addition of 1000:

The tool-frame is linked to any active basic frames and settable frames. The response is thus compatible with earlier software versions (before 5.3). If the thousands digit is not set, the tool frame is calculated so that any active basic frames and settable frames are taken into account.

Addition of 2000:

The tool frame is still correctly formed if the frames in the frame chain after the TOOLFRAME contain any values (rotations and translations). This mode is only possible if the system frame for the tool frame is present. MD21110 \$MC_X_AXIS_IN_OLD_X_Z_PLANE is no longer evaluated. All values in the units digit of this setting data that are not equal to 1 or 2 are handled as if the value was three. In particular, the behavior with 2000 is identical to that with 2003. TOFRAME sets the zero point of the workpiece coordinate system to the current position.

42984	CUTDIRMOD	C08	-
-	Modification of \$P_AD[2] or \$P_AD[11]	STRING	Immediately
-	-	-	-
802d-cu3	-	-	1/1
802d-ng2	-	-	0/0
802d-ng3	-	-	0/0
802d-tm1	-	-	0/0
802d-tm2	-	-	0/0
802d-tm3	-	-	1/1

Description: States whether the tool point direction and cutting direction are to be modified on reading the corresponding system variables \$P_AD[2] and \$P_AD[11].

Modification is made by rotating the vector of the tool point direction or cutting direction by a specific angle in the active machining plane (G17-G19). The resulting output value is always the tool point direction or cutting direction created by the rotation or to which the rotated value is closest. the angle of rotation can be defined by one of the following six options:

- 1: The string is empty. The stated data are output unchanged.
- 2: The contents of the string is "P_TOTFRAME". The resulting rotation is determined from the total frame.
- 3: The contents of the string is a valid frame name (e.g. \$P_NCBFRAME[3]). The resulting rotation is then calculated from this frame.
- 4: The contents of the string has the form "Frame1 : Frame2". The resulting rotation is determined from the part frame chain that is created by chaining all frames from Frame1 to Frame2 (in each case inclusive). Frame1 and Frame2 are valid frame names such as \$P_PFRAME or \$P_CHBFRAME[5]"
- 5: The contents of the frame is the valid name of a rotary axis (machine axis). The resulting rotation is determined from the programmed end position of this rotary axis. Additionally, an offset can be stated (in degrees, e.g. "A+90).
- 6: The rotation is programmed explicitly (in degrees).

Optionally, the first character of the string can be written as sign (+ or -). A plus sign will not have any effect on the angle calculation, but a minus sign will invert the sign of the calculated angle.

3.1.3 Axis specific setting data

43120	DEFAULT_SCALE_FACTOR_AXIS	-	FBFA
-	Axial default scaling factor with G51 active	DWORD	Immediately
-			
802d-cu3			7/7
802d-ng2			0/0
802d-ng3			0/0
802d-tm1			7/7
802d-tm2			7/7
802d-tm3			7/7

Description: If no axial scaling factor I, J, or K is programmed in the G51 block, SD43120 \$SA_DEFAULT_SCALE_FACTOR_AXIS is active. The scaling factor is only active if MD22914 \$MC_AXES_SCALE_ENABLE is set.

Related to:

MD22914 \$MC_AXES_SCALE_ENABLE,
MD22910 \$MC_WEIGHTING_FACTOR_FOR_SCALE

43200	SPIND_S	-	S1
rev/min	Speed for spindle start by VDI	DOUBLE	Immediately
-			
-	0.0		7/7

Description: Spindle speed at spindle start by NC/PLC interface signals V380x 5006.1 (Spindle start clockwise rotation) and V380x 5006.2 (Spindle start counterclockwise rotation).

Example: \$SA_SPIND_S[S1] = 600

Spindle 1 is started at a speed of 600 rpm upon detection of the positive edge of one of the above-mentioned VDI starting signals. Speed programming values are entered in the SD by setting bit 4=1 in MD35035 \$MA_SPIND_FUNCTION_MASK.

The SD becomes active in JOG mode as a default speed by setting bit 5=1 in MD35035 \$MA_SPIND_FUNCTION_MASK (exception: the value is zero).

Related to:

MD35035 \$MA_SPIND_FUNCTION_MASK
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43202	SPIND_CONSTCUT_S	-	S1
m/min	Const cut speed for spindle start by VDI	DOUBLE	Immediately
-			
-	0.0		7/7

Description: Definition of the constant cutting speed for the master spindle. The setting data is evaluated at spindle start by the NC/PLC interface signals V380x 5006.1 (Spindle start clockwise rotation) and V380x 5006.2 (Spindle start counterclockwise rotation). Cutting speed programming values are entered in the SD by setting bit 8=1 in MD35035 \$MA_SPIND_FUNCTION_MASK.

Related to:

MD35035 \$MA_SPIND_FUNCTION_MASK
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

Setting data

43206	SPIND_SPEED_TYPE	A06	-
-	Spindle speed type for spindle start through VDI	DWORD	Immediately
-			
-	94	93	972
-			77

Description: Definition of the spindle speed type for the master spindle.

The range of values and the functionality correspond to the 15th G group "feed type".

Permissible values are the G values: 93, 94, 95, 96, 961, 97, and 971.

The stated values make a functional distinction between the following variants:

==> 93, 94, 95, 97 and 971: The spindle is started at the speed in SD 43200 \$SA_SPIND_S.

==> 96 and 961: The speed of the spindle is derived from the cutting speed of SD 43202 \$SA_SPIND_CONSTCUT_S and the radius of the transverse axis.

The default value is 94 (corresponds to G94).

The default value becomes active if the SD is written with impermissible values.

43210	SPIND_MIN_VELO_G25	-	S1
rev/min	Programmed spindle speed limitation G25	DOUBLE	Immediately
-			
-	0.0		77

Description: A minimum spindle speed limit below which the spindle must not fall is entered in SPIND_MIN_VELO_G25. The NCK limits the set spindle speed to this value if it is too low.

The spindle speed may only fall below the minimum as a result of:

- Spindle offset 0%
- M5
- S0
- NC/PLC interface signal V380x 0004.3 (Spindle stop)
- NC/PLC interface signal V380x 0002.1 (Servo enable)
- NC/PLC interface signal V3300 0003.7 (Channel status: Reset)
- NC/PLC interface signal V380x 0002.2 (Delete distance-to-go/Spindle reset)
- NC/PLC interface signal V380x 2002.5 (Oscillation speed)
- Cancel S value

Related to:

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43220	SPIND_MAX_VELO_G26	-	S1
rev/min	Programmable upper spindle speed limitation G26	DOUBLE	Immediately
-	1000.0	-	7/7

Description: A maximum spindle speed is entered in SD43220 \$SA_SPIND_MAX_VELO_G26, which the spindle must not exceed. The NCK limits an excessive spindle speed setpoint to this value. SD irrelevant for

all spindle modes except open-loop control mode.
Special cases, errors,

The value in SD43210 \$SA_SPIND_MIN_VELO_G26 can be altered by means of:

- G26 S.... in the part program
- Operator commands via HMI

The value in SD43210 \$SA_SPIND_MIN_VELO_G26 is retained after a reset or Power Off.

Related to

SD43210 \$SA_SPIND_MIN_VELO_G25 (programmed spindle speed limit G25)

SD43230 \$SA_SPIND_MAX_VELO_LIMS (programmed spindle speed limit G96/961)

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43230	SPIND_MAX_VELO_LIMS	-	S1,Z1
rev/min	Spindle speed limitation with G96	DOUBLE	Immediately
-	100.0	-	7/7

Description: At a constant cutting rate (G96 and G97), an extra limitation entered in SPIND_MAX_VELO_LIMS is operative in addition to the continually applied limits. Furthermore, this can be described in SPIND_MAX_VELO_LIMS in the part program with LIMS=....

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred into the active file system on reset (that is the value is retained after reset).

Related to

SD43210 \$SA_SPIND_MIN_VELO_G25 (programmed spindle speed limit G25)

SD43230 \$SA_SPIND_MAX_VELO_LIMS (programmed spindle speed limit with G96/961)

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43240	M19_SPOS	-, A12	S1
degrees	Spindle position for spindle positioning with M19.	DOUBLE	Immediately
-	0.0	-10000000.0	10000000.0
-			7/7

Description: Spindle position in [DEGREES] for spindle positioning with M19. The position approach mode is defined in \$SA_M19_SPOSMODE. Default positions must lie in the range 0 <= pos < MD30330 \$MA_MODULO_RANGE.

Path defaults (SD43250 \$SA_M19_SPOSMODE = 2) can be positive or negative and are only limited by the input format.

Setting data

43250	M19_SPOSMODE	-, A12	S1
-	Spindle position approach mode for spindle positioning with M19.	DWORD	Immediately
-	0	0	5
-			7/7

Description: Spindle position approach mode for spindle positioning with M19.
In which signify:

- 0: DC (default) approach position on the shortest path.
- 1: AC approach position normally.
- 2: IC approach incrementally (as path), sign gives the traversing direction
- 3: DC approach position on the shortest path.
- 4: ACP approach position from the positive direction.
- 5: ACN approach position from the negative direction.

43300	ASSIGN_FEED_PER_REV_SOURCE	-	M1,P2,S1
-	Revolutional feedrate for positioning axes/spindles	DWORD	Immediately
CTEQ			
-	0	3	31
-			1/1

Description: 0= No revolutional feedrate is active.
>0= Machine axis index of the rotary axis/spindle, from which the revolutional feedrate is derived.
-1= The revolutional feedrate is derived from the master spindle of the channel in which the axis/spindle is active
-2= The revolutional feedrate is derived from the axis with machine axis index == 0 or the axis with an index in MD10002 \$MN_AXCONF_LOGIC_MACHAX_TAB == 0.
-3= The revolutional feedrate is derived from the master spindle of the channel in which the axis/spindle is active. No revolutional feedrate is active if the master spindle is at a standstill.
Related to

SD42600 \$SC_JOG_FEED_PER_REV_SOURCE (revolutional feedrate for geometry axes on which a frame with rotation acts in JOG mode.)

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43320	JOG_POSITION	-	-
mm, degrees	JOG position	DOUBLE	Immediately
-	0.0	-	7/7

Description: Position to be approached in JOG. Depending on MD10735 \$MN_JOG_MODE_MASK bit 4 axial frames and, with an axis configured as geometry axis, the tool length offset are considered.

43340	EXTERN_REF_POSITION_G30_1	-, A12	FBFA
-	Reference point position for G30.1	DOUBLE	Immediately
-	0.0	-	7/7

Description: Reference point position for G30.1.
This setting data will be evaluated in CYCLE328.

43400	WORKAREA_PLUS_ENABLE	-	A3
-	Working area limitation active in positive direction	BOOLEAN	Immediately
CTEQ			
-	FALSE	-	7/7

Description: 1: The working area limitation of the axis concerned is active in the positive direction.
0: The working area limitation of the axis concerned is switched off in the positive direction.
The setting data is parameterized via the operator panel in the operating area "Parameters" by activating/deactivating the working area limitation.
SD irrelevant for

G code: WALIMOF

43410	WORKAREA_MINUS_ENABLE	-	A3
-	Working area limitation active in the negative direction	BOOLEAN	Immediately
CTEQ			
-	FALSE	-	7/7

Description: 1: The working area limitation of the axis concerned is active in the negative direction.
0: The working area limitation of the axis concerned is switched off in the negative direction.
The setting data is parameterized via the operator panel in the operating area "Parameters" by activating/deactivating the working area limitation.
SD irrelevant for

G code: WALIMOF

43420	WORKAREA_LIMIT_PLUS	-	A3
mm, degrees	Working area limitation plus	DOUBLE	Immediately
-			
-	1.0e+8	-	7/7

Description: The working area defined in machine (MCS) in the positive direction of the axis concerned can be limited with axial working area limitation.
The setting data can be changed on the operator panel in the operating area "Parameters".
The positive working area limitation can be changed in the program with G26.
SD irrelevant for

G code: WALIMOF

Related to

SD43400 \$SA_WORKAREA_PLUS_ENABLE
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43430	WORKAREA_LIMIT_MINUS	-	A3
mm, degrees	Working area limitation minus	DOUBLE	Immediately
-			
-	-1.0e+8	-	7/7

Description: The working area defined in machine (MCS) in the negative direction of the axis concerned can be limited with axial working area limitation.
The setting data can be changed on the operator panel in the operating area "Parameters".

Setting data

The negative working area limitation can be changed in the program with G25.

SD irrelevant for

G code: WALIMOF

Related to

SD43410 \$SA_WORKAREA_MINUS_ENABLE

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43500	FIXED_STOP_SWITCH	-	F1
	Selection of travel to fixed stop	BYTE	Immediately
802d-cu3	0	1	2/2
802d-ng2	0	1	2/2
802d-ng3	0	1	2/2
802d-tm1	0	1	0/0
802d-tm2	0	1	2/2
802d-tm3	0	1	2/2

Description: The "Travel to fixed stop" function can be selected and deselected with this setting data.

SD=0 Deselect "Travel to fixed stop"

SD=1 Select "Travel to fixed stop"

The setting data can be overwritten by the part program using the command FXS[x]=1/0.

43510	FIXED_STOP_TORQUE	-	F1
%	Fixed stop clamping torque	DOUBLE	Immediately
802d-cu3	5.0 0.0	800.0	2/2
802d-ng2	5.0 0.0	800.0	1/1
802d-ng3	5.0 0.0	800.0	1/1
802d-tm1	5.0 0.0	800.0	0/0
802d-tm2	5.0 0.0	800.0	2/2
802d-tm3	5.0 0.0	800.0	2/2

Description: The clamping torque is entered in this setting data as a % of the maximum motor torque (corresponds to % of max. current value with FDD).

Please note that a clamping torque greater than 100% may only be present for a short time, otherwise the motor will be damaged.

When selecting the function "Travel to fixed stop" through programming FXS[.], the default setting of the MD37010 \$MA_FIXED_STOP_TORQUE_DEF applies until it is programmed with FXST[.].

The FXST[x] command effects a block-synchronous change to this setting data. It can also be changed by the user or via the PLC.

The SD is already operative as the stop is approached.

The fixed stop is considered reached if under MD37060

\$MA_FIXED_STOP_ACKN_MASK,

Bit 1 = 0: (no acknowledgement required) the NC/PLC interface signal V390x 0002.5 (fixed stop reached) is set by the NC.

Bit 1 = 1: (acknowledgement required) the NC/PLC interface signal V390x 0002.5 (fixed stop reached) is set by the NC and is acknowledged with the NC/PLC interface signal V380x 0001.1 (acknowledge fixed stop reached).

Related to

MD37010 \$MA_FIXED_STOP_TORQUE_DEF (default setting for clamping torque)

43520	FIXED_STOP_WINDOW	-	F1
mm, degrees	Fixed stop monitoring window	DOUBLE	Immediately
-	-	-	-
-	1.0	-	0/0

Description: The fixed stop monitoring window is entered in this setting data. The setting data is active only if the fixed stop has been reached.

The fixed stop is considered reached when,

- with MD37060 \$MA_FIXED_STOP_ACKN_MASK, bit 1 = 0 (no acknowledgment required) interface signal (Festanschlag erreicht) von der NC gesetzt wird
- with MD37060 \$MA_FIXED_STOP_ACKN_MASK, bit 1 = 1 (acknowledgment required) interface signal (Festanschlag erreicht) von der NC gesetzt wird und mit dem Nahtstellensignal (Festanschlag erreicht quittieren) quittiert wird

If the position at which the fixed stop was detected leaves the tolerance band by more than the amount specified in SD43520 \$SA_FIXED_STOP_WINDOW, then alarm 20093 "Fixed stop monitoring has responded" is output and the "FXS" function is deselected.

The status of the setting data is indicated on the operator panel in the "Parameters" area.

The FXSW[x] command effects a block-synchronous change to this setting data. It can also be changed by the user or via the PLC. The value is otherwise transferred from MD37020 \$MA_FIXED_STOP_WINDOW_DEF to the setting data when "Travel to fixed stop" is active.

Related to

MD37020 \$MA_FIXED_STOP_WINDOW_DEF (default setting for fixed stop monitoring window)

43600	IPOBRAKE_BLOCK_EXCHANGE	A06, A10	K1
%	Block change criterion 'braking ramp'	DOUBLE	Immediately
-	-	-	-
-	0.0	0	100.0
-	-	-	1/1

Description: Specifies the application time at single axis interpolation for the block change criterion braking ramp: At 100%, the block change criterion is fulfilled at the time of application of the braking ramp. At 0%, the block change criterion is identical with IPOENDA.

Note:

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred into the active file system on reset (i.e. the value is retained even after reset).

43610	ADISPOSA_VALUE	A06, A10	P2
mm, degrees	Tolerance window 'braking ramp'	DOUBLE	Immediately
-	-	-	-
-	0.0	-	1/1

Description: In case of single-axis interpolation, this value defines the size of the tolerance window which the axis must have reached in order to enable a block change in case of the block-change criterion 'braking ramp with tolerance window valid' and when reaching the corresponding % value of the braking ramp (SD43600 \$SA_IPOBRAKE_BLOCK_EXCHANGE).

Setting data

Note:

By means of the MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB, the user can specify that the value written by the part program is transferred into the active file system in case of a reset (i.e. the value is retained even after the reset).

43700	OSCILL_REVERSE_POS1	-	P5
mm, degrees	Oscillation reversal point 1	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Position of the oscillating axis at reversal point 1.

Note:

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after RESET.)

Application example(s)

NC language: OSP1[Axis]=Position

Related to

SD43710 \$SA_OSCILL_REVERSE_POS2
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43710	OSCILL_REVERSE_POS2	-	P5
mm, degrees	Oscillation reversal point 2	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Position of the oscillating axis at reversal point 2.

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Application example(s)

NC language: OSP2[Axis]=Position

Related to

SD43700 \$SA_OSCILL_REVERSE_POS1
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43720	OSCILL_DWELL_TIME1	-	P5
s	Hold time at oscillation reversal point 1	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Hold time of the oscillating axis at reversal point 1.

Note:
MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Application example(s)
NC language: OST1[Axis]=Position

Related to
SD43730 \$SA_OSCILL_DWELL_TIME2
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43730	OSCILL_DWELL_TIME2	-	P5
s	Hold time at oscillation reversal point 2	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Hold time of the oscillating axis at reversal point 2.

Note:
MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Application example(s)
NC language: OST2[Axis]=Position

Related to
SD43720 \$SA_OSCILL_DWELL_TIME1
MD10709 \$MN_PROG_SD_POWERON_INIT_TAB
MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43740	OSCILL_VELO	-	P5
mm/min, rev/min	Feedrate of reciprocating axis	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Feed rate of the oscillating axis

Note:
MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Setting data

Application example(s)

NC language: FA[Axis]=F value

Related to

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43750	OSCILL_NUM_SPARK_CYCLES	-	P5
-	Number of spark-out strokes	DWORD	Immediately
-			
802d-cu3	0	-	7/7
802d-ng2	0	-	7/7
802d-ng3	0	-	7/7
802d-tm1	0	-	0/0
802d-tm2	0	-	0/0
802d-tm3	0	-	0/0

Description: Number of sparking-out strokes performed after ending the oscillating movement

Application example(s)

NC language: OSNSC[Axis]=Stroke number

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Related to

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43760	OSCILL_END_POS	-	P5
mm, degrees	End position of the reciprocating axis	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Position the oscillating axis travels to after ending the sparking-out strokes.

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Application example(s)

NC language: OSE[Axis]=Position

Related to

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43770	OSCILL_CTRL_MASK	-	P5
-	Oscillation sequence control mask	DWORD	Immediately
-	-	-	-
802d-cu3	-	0	7/7
802d-ng2	-	0	7/7
802d-ng3	-	0	7/7
802d-tm1	-	0	0/0
802d-tm2	-	0	0/0
802d-tm3	-	0	0/0

Description:

Bit mask:

Bit no. | Meaning in OSCILL_CTRL_MASK

```

-----
0 (LSB)-1 | 0: Stop at the next reversal point if the
           |   oscillating movement is switched off
           |
           | 1: Stop at reversal point 1 if the
           |   oscillating movement is switched off
           | 2: Stop at reversal point 2 if the
           |   oscillating movement is switched off
           | 3: Do not approach a reversal point when the oscil-
           |   lating movement is switched off
           |   if no sparking-out strokes are programmed
-----

```

```

-----
2          | 1: Approach end position after sparking out
-----

```

```

-----
3          | 1: If the oscillating movement is aborted by delete
distance-to-go,
           |   then the sparking-out strokes are to be executed
afterwards
           |   and the end position approached if necessary
-----

```

```

-----
4          | 1: If the oscillating movement is aborted by delete
distance-to-go,
           |   then the corresponding reversal point
           |   is approached on switch off
-----

```

```

-----
5          | 1: Changed feedrate does not become active until the
next reversal point
-----

```

```

-----
6          | 1: Path override is active if the feed rate is 0,
           |   otherwise speed override is active
-----

```

```

-----
7          | 1: In the case of rotary axes DC (shortest path)
-----

```

```

-----
8          | 1: Execute sparking-out stroke as single stroke not
-----

```

Setting data

as double stroke

 9 | 1: On starting, first approach the starting position, see

SD43790 \$SA_OSCILL_START_POS

Application example(s)

NC language: OSCTRL[Axis]=(setting options, reset options)

Related to

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43780	OSCILL_IS_ACTIVE	-	P5
-	Activate oscillation movement	BOOLEAN	Immediately
-			
802d-cu3	FALSE	-	7/7
802d-ng2	FALSE	-	7/7
802d-ng3	FALSE	-	7/7
802d-tm1	FALSE	-	0/0
802d-tm2	FALSE	-	0/0
802d-tm3	FALSE	-	0/0

Description: Switching the oscillating movement on and off

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

Application example(s)

NC language: OS[Axis]=1, OS[Axis]=0

Related to

MD10709 \$MN_PROG_SD_POWERON_INIT_TAB

MD10710 \$MN_PROG_SD_RESET_SAVE_TAB

43790	OSCILL_START_POS	-	-
mm, degrees	Start position of reciprocating axis	DOUBLE	Immediately
-			
802d-cu3	0.0	-	7/7
802d-ng2	0.0	-	7/7
802d-ng3	0.0	-	7/7
802d-tm1	0.0	-	0/0
802d-tm2	0.0	-	0/0
802d-tm3	0.0	-	0/0

Description: Position approached by the oscillating axis at the start of oscillation if this is set in SD43770 \$SA_OSCILL_CTRL_MASK.

Note:

MD 10710 \$MN_PROG_SD_RESET_SAVE_TAB can be set so that the value written by the part program is transferred to the active file system on reset (that is the value is retained after reset.)

43900	TEMP_COMP_ABS_VALUE	-	K3
	Position-independent temperature compensation value	DOUBLE	Immediately
	0.0		0/0

Description: The position-independent temperature compensation value is defined by SD43900 \$SA_TEMP_COMP_ABS_VALUE.

-

The machine axis traverses this additional compensation value as soon as the position-independent temperature compensation has been activated (MD32750 \$MA_TEMP_COMP_TYPE = 1 oder 3).

SD irrelevant for

MD32750 \$MA_TEMP_COMP_TYPE = 0 or 2

Related to

MD32750 \$MA_TEMP_COMP_TYPER Temperature compensation type

MD32760 \$MA_COMP_ADD_VELO_FACTOR Velocity overshoot caused by compensation

43910	TEMP_COMP_SLOPE	-	K3
	Lead angle for position-dependent temperature compensation	DOUBLE	Immediately
	0.0		0/0

Description: In the case of position-dependent temperature compensation, the error curve characteristic of the temperature-dependent actual-value deviation can often be approximated by a straight line. This straight line is defined by a reference point P₀ and a slope tanβ.

SD43910 \$SA_TEMP_COMP_SLOPE defines the slope tanβ. This slope can be changed by the PLC user program as a function of the current temperature.

The axis traverses additionally the compensation value calculated for the current actual position as soon as the position-dependent temperature compensation becomes active (MD32750 \$MA_TEMP_COMP_TYPE = 2 or 3).

MD32760 \$MA_COMP_ADD_VELO_FACTOR limits the maximum angle of slope tanβ_{max} of the error curve. This maximum angle of slope cannot be exceeded.

SD irrelevant for

MD32750 \$MA_TEMP_COMP_TYPE = 0 or 1

Special cases, errors,

When SD43910 \$SA_TEMP_COMP_SLOPE is greater than tanβ_{max}, the slope tanβ_{max} is used to calculate the position-dependent temperature compensation value internally. No alarm is output.

Related to

MD32750 \$MA_TEMP_COMP_TYPE Temperature compensation type

SD43920 \$SA_TEMP_COMP_REF_POSITION Reference position for position-dependent temperature compensation

MD32760 \$MA_COMP_ADD_VELO_FACTOR Velocity overshoot caused by compensation

Setting data

43920	TEMP_COMP_REF_POSITION	-	K3
-	Ref. position of position-dependent temperature compensation	DOUBLE	Immediately
-	0.0	-	0/0

Description:

In the case of position-dependent temperature compensation, the error curve characteristic of the temperature-dependent actual-value deviation can often be approximated by a straight line. This straight line is defined by a reference point P₀ and a slope tanβ.

SD43920 \$SA_TEMP_COMP_REF_POSITION defines the position of the reference point P₀. This reference position can be changed by the PLC user program as a function of the current temperature.

The axis traverses additionally the compensation value calculated for the current actual position as soon as the position-dependent temperature compensation becomes active (MD32750

\$MA_TEMP_COMP_TYPE = 2 or 3).

SD irrelevant for

MD32750 \$MA_TEMP_COMP_TYPE = 0 or 1

Related to

MD32750 \$MA_TEMP_COMP_TYPE Temperature compensation type

SD43910 \$SA_TEMP_COMP_SLOPE Angle of slope for position-dependent temperature compensation

Interface Signals


4.1 General

Interfaces

The exchange of signals and data between the PLC user program and

- NCK (core of numerical control)
- HMI sl (display unit)

takes place through various data areas. The PLC user program does not have to handle the exchange of data and signals. From the users point of view, this takes place automatically.

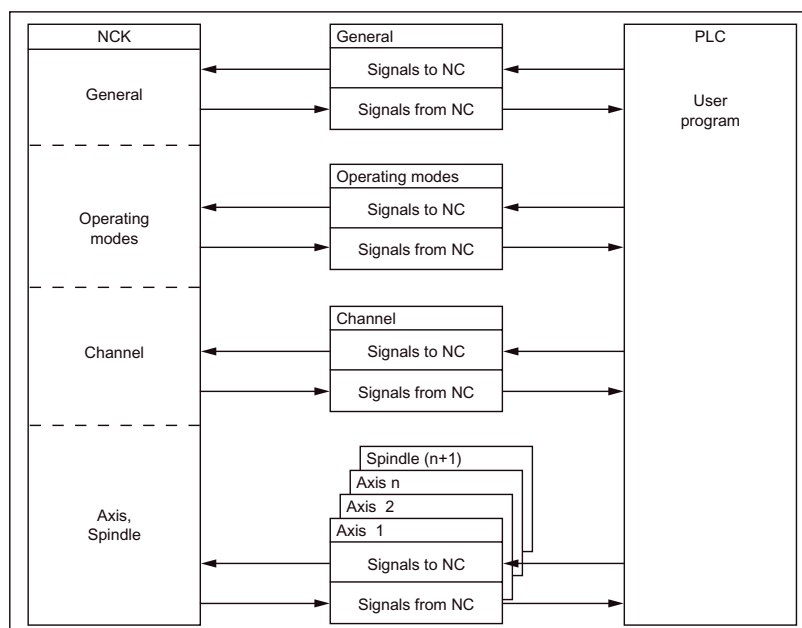

Cyclical signal exchange

The control and status signals of the PLC/NCK interface are updated cyclically.

- General signals
- Operating mode signals
- Channel signals
- Axis/spindle signals

4.2 Signals from/to HMI

4.2.1 Program-control signals from HMI

V1700 0000.5	M01 selected
Interface signal	Signal(s) from HMI ---> PLC
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Program control Activate M1 has been selected on the operator interface. This does not activate the function.
Signal state 0 or signal transition 1 ---> 0	Program control Activate M1 has not been selected via the operator interface.
Related to	IS "Activate M01" IS "M0/M1 active"
Note for the reader:	802D sl Description of Functions: K1

V1700 0000.6	Dry run feedrate selected
Interface signal	Signal(s) from HMI ---> PLC
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal status 1 or edge transition 0 ---> 1	Dry run feedrate is selected. Instead of the programmed feedrate, the dry run feedrate entered in SD 42100: DRY_RUN_FEED is effective. When activating the dry run feedrate, the signal is automatically entered in the PLC interface and transferred by the PLC basic program to the PLC interface signal "Activate dry run feedrate".
Signal status 0 or edge transition 1 ---> 0	Dry run feedrate is not selected. The programmed feedrate is effective.
Related to	IS "Activate dry run feedrate" (V3200 0000.6) SD: DRY_RUN_FEED (dry run feedrate)
Note for the reader:	802D sl Description of Functions: V1, K1

V1700 0001.3	Feed override for rapid traverse selected
Interface signal	Signal(s) from HMI ---> PLC
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal status 1 or edge transition 0 ---> 1	The feedrate override switch is also to act as a rapid traverse override switch. Overrides more than 100 % are limited to the maximum value of 100 % rapid traverse override. The interface signal (IS) "Feedrate override selected for rapid traverse" is automatically entered in the PLC interface by the operator panel and transferred by the PLC basic program to the PLC interface signal "Rapid traverse override effective". Furthermore, the IS "Feedrate override" (VB3200 0004) is copied by the PLC basic program into the IS "Rapid traverse override" (VB3200 0005).
Signal state 0 or signal transition 1 ---> 0	Program control -Feed override for rapid traverse- has not been selected via the operator interface.
Application example(s)	This signal is used if no separate rapid traverse override switch exists.

Note for the reader:	802D sl Description of Functions: V1
----------------------	--------------------------------------

V1700 0001.7	Program test selected	
Interface signal	Signal(s) from HMI ---> PLC	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Program control Program test has been selected via the operator interface. This does not activate the function.	
Signal state 0 or signal transition 1 ---> 0	Program control Program test has not been selected via the operator interface.	
Related to	IS "Activate program test" IS "Program test active"	
Note for the reader:	802D sl Description of Functions: K1	

V1700 0002 V1700 0003.0 to .1	Skip block selected Program test selected""#	
Interface signal	Signal(s) from HMI ---> PLC	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Program control -skip block- has been selected via the operator interface. This does not activate the function.	
Signal state 0 or signal transition 1 ---> 0	Program control -skip block- has not been selected via the operator interface.	
Related to	IS "Activate skip block"	
Note for the reader:	802D sl Description of Functions: K1	

V1700 0003.7 ***	Measuring in JOG active	
Interface signal	Signal(s) to PLC (HMI ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The "Tool measuring in JOG" function is activated by HMI. Note: This signal remains set when changing to AUTOMATIC mode in this function. The HMI maintains the JOG image in the display. Only the active mode display changes.	
Signal state 0 or signal transition 1 ---> 0	The "Tool measuring" function is not active.	
Note for the reader:	802D sl Description of Functions: M5	

Signals from/to HMI

4.2.2 Signals from HMI

V1800 0000.0	AUTOMATIC mode		
Interface signal	Signal(s) to PLC (HMI ---> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	AUTOMATIC mode has been selected by the HMI. The signal status 1 is active for only one PLC cycle.		
Signal state 0	AUTOMATIC mode is not selected by the HMI.		
Signal irrelevant for	if "Change mode disable" signal		
Note for the reader:	802D sl Description of Functions: M5		

V1800 0000.1	MDA mode		
Interface signal	Signal(s) to PLC (HMI ---> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	MDA mode has been selected by the HMI. The signal status 1 is active for only one PLC cycle.		
Signal state 0	MDA mode is not selected by the HMI.		
Signal irrelevant for	if "Change mode disable" signal		
Note for the reader:	802D sl Description of Functions: M5		

V1800 0000.2	JOG mode		
Interface signal	Signal(s) to PLC (HMI ---> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	JOG mode has been selected by the HMI. The signal status 1 is active for only one PLC cycle.		
Signal state 0	JOG mode is not selected by the HMI.		
Signal irrelevant for	if "Change mode disable" signal		
Note for the reader:	802D sl Description of Functions: M5		

V1800 0000.4	Mode group changeover disable		
Interface signal	Signal(s) to PLC (HMI ---> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	Request by MMC: The current active mode (JOG, MDA or AUTOMATIC) should not be changed. The signal status is active for only one PLC cycle.		
Signal state 0	The mode can be changed.		
Note for the reader:	802D sl Description of Functions: M5		

V1800 0000.6 ***	Start measuring in JOG
Interface signal	Signal(s) to PLC (HMI ---> PLC)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Request to PLC by HMI to start the measuring program with NC start. The signal status 1 is active for only one PLC cycle only.
Signal state 0	
Note for the reader:	802D sl Description of Functions: M5

V1800 0001.2	Machine function REF
Interface signal	Signal(s) to PLC (HMI ---> PLC)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The REF machine function is selected from within JOG mode. The signal status 1 is active for only one PLC cycle only.
Signal state 0	Machine function REF is not selected.
Signal irrelevant for ...	if JOG mode is not active.
...	
Note for the reader:	802D sl Description of Functions: M5

4.2.3 Signals from operator panel

V1900 0000.6	Simulation activ
Interface signal	Signal(s) from HMI ---> PLC
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The -simulation- function has been selected via the operator interface.
Signal state 0 or signal transition 1 ---> 0	The -simulation- function has not been selected via the operator interface.
Related to	
Note for the reader:	802D sl Description of Functions: K1

4.2.4 General selection/status signals from HMI

V1900 0003.7 V1900 0004.7	Machine axis for handwheel 1 for handwheel 2
Interface signal	Signal(s) from NC (HMI -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic
Signal state 1 or signal transition 0 ---> 1	The operator has assigned an axis to the handwheel (1, 2, 3) directly on the operator panel. This axis is a machine axis - not a geometry axis (axis in the WCS). For further information see IS "Axis number".
Signal state 0 or signal transition 1 ---> 0	The operator has assigned an axis to the handwheel (1, 2, 3) directly on the operator panel. This axis is a geometry axis (axis in the WCS). For further information see IS "Axis number".
Related to	IS "Axis number" (V1900 0003.0 to .4, ff)
Note for the reader:	802D sl Description of Functions: H1

V1900 1003.0 to .2 V1900 1004.0 to .2	Axis number for handwheel 1 for handwheel 2
Interface signal	Signal(s) from NC (HMI -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic
Significance of signal	The operator can assign an axis to every handwheel directly via the operator panel. To do so, he defines the required axis (e.g. X). The PLC user interface provides the number of the axis plus the information 'machine axis or geometry axis' ("machine axis" interface signal) as HMI interface signals. The "Activate handwheel" interface signal for the defined axis must be set from the PLC user program. Depending on the setting in the HMI interface signal "machine axis", either the interface for the geometry axis or for the machine axis is used.

	<p>The following must be noted when assigning the axis designation to the axis number:</p> <ul style="list-style-type: none"> IS "Machine axis" = 1; i.e. machine axis - not geometry axis: The assignment is made via MD 10000: AXCONF_MACHAX_NAME_TAB[n] (machine axis name). IS "Machine axis" = 0; i.e. geometry axis (axis in WCS): The assignment is made via MD 20060: AXCONF_GEOAX_NAME_TAB[n] (geometry axis name in channel). IS "Channel number geometry axis handwheel n" defines the channel assigned to the handwheel. <p>The following coding applies to the axis number:</p> <table border="1"> <thead> <tr> <th>Bit 2</th> <th>Bit 1</th> <th>Bit 0</th> <th>axis number</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>-</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>2</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>3</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>4</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>5</td> </tr> </tbody> </table> <p>Note: Bit 3 and bit 4 must always be left with value =0.</p>	Bit 2	Bit 1	Bit 0	axis number	0	0	0	-	0	0	1	1	0	1	0	2	0	1	1	3	1	0	0	4	1	0	1	5
Bit 2	Bit 1	Bit 0	axis number																										
0	0	0	-																										
0	0	1	1																										
0	1	0	2																										
0	1	1	3																										
1	0	0	4																										
1	0	1	5																										
Related to	<p>IS "Machine axis" (V1900 1003.7 ff) IS "Activate handwheel" 1 to 3 /geometry axes 1, 2, 3 (V3200 1000.0 to .2, V3200 1004.0 to .2, V3200 1008.0 to .2) IS "Activate handwheel" 1 to 3 /machine axes (V380x 0004.0 to .2) MD 10000: AXCONF_MACHAX_NAME_TAB [n] (machine axis name) MD 20060: AXCONF_GEOAX_NAME_TAB[n] (name of the geometry axis in the channel)</p>																												
Note for the reader:	802D sl Description of Functions: H1																												

4.2.5 General selection/status signals to HMI

V1900 5001.0	Update the tool list		
Interface signal	Signal(s) from channel (PLC ---> HMI)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	Tool display is updated		
Signal state 0 or signal transition 1 ---> 0	No effect		
Note for the reader:	802D sl Description of Functions: W1		

V1900 5002.0	Enabling machine tool measuring in JOG		
Interface signal	Signal(s) from NCK (PLC → HMI)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	Measuring in JOG function can be activated.		

Auxiliary function transfer from NC channel

Signal state 0 or signal transition 1 ---> 0	Measuring in JOG is not possible.
Note for the reader:	802D sl Description of Functions: M5

VD1900 5004	Tool number for tool measuring in JOG	
Interface signal	Signal(s) to HMI (PLC ---> HMI)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Value > 0 (DWORD)	Input of T number from PLC for entering measurement results to HMI. The number entered in the HMI screen is used as offset number D.	
Value = 0	No specification of the T no. by PLC	
Signal irrelevant for	if IS "Measuring in JOG active" (V1700 0003.7) is not set.	
Note for the reader:	802D sl Description of Functions: M5	

4.3 Auxiliary function transfer from NC channel

V2500 0004.0 to .4	M function Change 1 to 5	
V2500 0006.0	S function Change 1	
V2500 0008.0	T function Change 1	
V2500 0010.0	D function Change 1	
V2500 0012.0 to .2	H function Change 1 to 3	
Interface signal	Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1	An M, S, T, D or H function has been output to the interface with a new value together with the associated change signal. In this case, the change signal indicates that the appropriate value is valid. The change signals are only valid for one PLC cycle! That means that there is a pending change for this cycle if the signal is 1.	
Signal state 0	The value of the data concerned is not valid.	
Note for the reader:	802D sl Description of Functions: H2	

VB2500 1000 to VB2500 1012	Decoded M signals: M0 - M99	
Interface signal	Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1	The dynamic M signal bits are set by decoded M functions.	
Signal state 0	With a general auxiliary function output, dynamic M signal bits are acknowledged by the PLC system program after the complete AWP routine has been executed once.	
Application example(s)	clockwise rotation, switch coolant ON/OFF	
Related to	specific" (VD370x 0000)	
Note for the reader:	802D sl Description of Functions: H2	

Auxiliary function transfer from NC channel

VD2500 2000 Interface signal	T function 1 Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1	The T function programmed in an NC block is made available here as soon as the T change signal is applied. Value range of T function: 0-32000; integer The T function remains valid until it is overwritten by a new T function.	
Signal state 0	<ul style="list-style-type: none"> • After PLC power-up. • All auxiliary functions are deleted before a new function is entered. 	
Application example(s)	Control of automatic tool selection.	
Special cases, errors,	When T0 is selected, the current tool is removed from the tool holder but not replaced by a new tool (default configuration by machine manufacturer).	
Note for the reader:	802D sl Description of Functions: H2	

VD2500 3000 VD2500 3008 VD2500 3016 VD2500 3024 VD2500 3032 VB2500 3004 VB2500 3012 VB2500 3020 VB2500 3028 VB2500 3036 Interface signal	M function 1 M function 2 M function 3 M function 4 M function 5 Extended address M function 1 Extended address M function 2 Extended address M function 3 Extended address M function 4 Extended address M function 5 Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1	Up to 5 M functions programmed in an NC block are made available here simultaneously as soon as the M change signals are applied. Value range of the M functions: 0 to 99; integer Value range of extended address: 1-2; integer (spindle number) The M functions remain valid until they are overwritten by new M functions.	
Signal state 0	<ul style="list-style-type: none"> • After PLC power-up. • All auxiliary functions are deleted before a new function is entered. 	
Related to	IS "S function for the spindle (REAL), axis-specific" (VD370x 0000)	
Note for the reader:	802D sl Description of Functions: H2	

VD2500 4000 VD2500 4008 VB2500 4004 VB2500 4012 Interface signal	S function 1 S function 2 Extended address S function 1 Extended address S function 2 Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:

Auxiliary function transfer from NC channel

Signal state 1	The S function programmed in an NC block (speed or cutting value with G96) is made available here as soon as the S change signal is applied. Value range of the S function: : Floating point (REAL format/4-byte) Value range of extended address: 1-2; integer (spindle number) The S function remains valid until it is overwritten by a new S function.
Signal state 0	<ul style="list-style-type: none"> • After PLC power-up. • All auxiliary functions are deleted before a new function is entered.
Related to	specific" (VD370x 0004)
Note for the reader:	802D sl Description of Functions: H2

VD2500 5000	D function 1	
Interface signal	Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1	The D function programmed in an NC block is made available here as soon as the D change signal is applied. Value range of D function: 0-9; integer The D function remains valid until it is overwritten by a new D function.	
Signal state 0	<ul style="list-style-type: none"> • After PLC power-up. • All auxiliary functions are deleted before a new function is entered. 	
Application example(s)		
Special cases, errors,	D0 is reserved for deselecting the current tool offset.	
Note for the reader:	802D sl Description of Functions: H2	

VD2500 6000	H function 1	
VD2500 6008	H function 2	
VD2500 6016	H function 3	
VW2500 6004	Extended address H function 1	
VW2500 6012	Extended address H function 2	
VW2500 6020	Extended address H function 3	
Interface signal	Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1	Up to 3 H functions programmed in an NC block are made available here simultaneously as soon as the H change signals are applied. Value range of the H functions: Floating point (REAL format/4-byte) Value range of extended address: 0 to 99; integer The H functions remain valid until they are overwritten by new H functions.	
Signal state 0	<ul style="list-style-type: none"> • After PLC power-up. • All auxiliary functions are deleted before a new function is entered. 	
Application example(s)	Switching functions on the machine.	
Note for the reader:	802D sl Description of Functions: H2	

4.4 NC signals

4.4.1 General signals to NC

V2600 0000.1	EMERGENCY STOP		
Interface signal	Signal(s) to NC (PLC ----> NC)		
Edge evaluation: no		Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	The NC is switched to the EMERGENCY STOP state and the EMERGENCY STOP procedure is started on the NC.		
Signal state 0 or signal transition 1 ----> 0	<ul style="list-style-type: none"> • The NC is not in the EMERGENCY STOP state. • The EMERGENCY STOP state is (still) active but can be reset with IS "Acknowledge EMERGENCY STOP" and IS "reset". 		
Related to	IS "Acknowledge EMERGENCY STOP" (V2600 0000.2) IS "EMERGENCY STOP active" (V2700 0000.1)		

V2600 0000.2	Acknowledge EMERGENCY STOP		
Interface signal	Signal(s) to NC (PLC ----> NC)		
Edge evaluation: no		Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	<p>The EMERGENCY STOP state is reset only if IS "Acknowledge EMERGENCY STOP" followed by IS "Reset" (V3000 0000.7) are set. It must be noted in this respect that IS "Acknowledge EMERGENCY STOP" and IS "Reset" must be set (together) for a long enough period for IS "EMERGENCY STOP active" (V2600 0000.1) to be reset.</p> <p>By resetting the EMERGENCY STOP state:</p> <ul style="list-style-type: none"> • the "EMERGENCY STOP active" interface signal is reset • the controller enable is switched in • IS "Position control active" is set • Ready" is set • Alarm 3000 is canceled • the part program is no longer processed 		
Related to	IS "EMERGENCY STOP" (V2600 0000.1) IS "EMERGENCY STOP active" (V2700 0000.1) IS "Reset" (V3000 0000.7)		

V2600 0001.0	INC inputs in mode group range active		
Interface signal	Signal(s) to NCK (PLC -> NCK)		
Edge evaluation: no		Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	The IS "INC1", "INC10", ..., "continuous" in the operating mode range are used as input signals (V3000 0002.0 to .6).		
Signal state 0 or signal transition 1 ----> 0	The IS "INC1", "INC10", ..., "continuous" in the axis and geometry axis range are used as input signals.		

NC signals

Related to	IS "Machine function INC1 to continuous" in operating mode range (V3000 0002.0 to .6) IS "Machine function INC1,....,continuous" for geometry axis 1 (V3200 1001.0 to .6) for geometry axis 2 (V3200 1005.0 to .6) for geometry axis 3 (V3200 1009.0 to .6) IS "Machine function INC1,....,continuous" in axis range (V380x 0005.0 to .6)
Note for the reader:	802D sl Description of Functions: H1

4.4.2 General signals from NC

V2700 0000.1	EMERGENCY STOP active
Interface signal	Signal(s) to NC (PLC ---> NC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The NC is in the EMERGENCY STOP state.
Related to	IS "EMERGENCY STOP" (V2600 0000.1) IS "Acknowledge EMERGENCY STOP" (V2600 0000.2)

V2700 0001.0	Probe 1 is actuated
Interface signal	Signal(s) from NCK (NCK → PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Probe 1 is actuated
Signal state 0 or signal transition 1 ---> 0	Probe 1 is not actuated
Note for the reader:	802D sl Description of Functions: M5

V2700 0001.7	INCH dimension system
Interface signal	Signal(s) to NC (PLC ---> NC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1	The NC works with the inch dimension system.
Signal state 0	The NC works with the metric dimension system.
Note for the reader:	802D sl Description of Functions: G2

V2700 0004.0 to .7 Interface signal	Minus cam signals 1-32 Signal(s) from NCK (NCK---> PLC)		
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:	
Signal status 1 or edge transition 0 ---> 1	<p>The switching edges of the minus cam signals 1-32 are created independently of the direction of traversing of the (rotary) axis and transferred to the PLC interface at the IPO clock.</p> <p>Linear axis:</p> <ul style="list-style-type: none"> – The minus cam signal switches from 0 to 1 when the axis overtravels the minus cam in the negative axis direction. <p>Modulo rotary axis:</p> <ul style="list-style-type: none"> – The minus cam signal changes the levels at each positive edge of the plus cam signal. 		
Signal status 0 or edge transition 1 ---> 0	<p>Linear axis:</p> <ul style="list-style-type: none"> – The minus cam signal switches from 1 to 0 when the axis overtravels the minus cam in the positive axis direction. <p>Modulo rotary axis:</p> <ul style="list-style-type: none"> – The minus cam signal changes the levels at each positive edge of the plus cam signal. 		

V2700 0008.0 to .7 Interface signal	Plus cam signals 1-32 Signal(s) from NCK (NCK---> PLC)		
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:	
Signal status 1 or edge transition 0 ---> 1	<p>The switching edges of the plus cam signals 1-32 are created independently of the direction of traversing of the (rotary) axis and transferred to the PLC interface at the IPO clock.</p> <p>Linear axis:</p> <ul style="list-style-type: none"> – The plus cam signal switches from 0 to 1 when the axis overtravels the plus cam in the positive direction. <p>Modulo rotary axis:</p> <ul style="list-style-type: none"> – The plus cam signal switches from 0 to 1 when the axis overtravels the minus cam in the positive axis direction. <p>The described behavior of the plus cam applies under the following condition: Plus cam - minus cam < 180 degrees</p> <p>If this condition is not fulfilled or the minus cam is greater than the plus cam, the behavior of the plus cam signal is inverted. The behavior of the minus cam signal remains unchanged.</p>		
Signal status 0 or edge transition 1 ---> 0	<p>Linear axis:</p> <ul style="list-style-type: none"> – The plus cam signal switches from 1 to 0 when the axis overtravels the plus cam in the negative direction. <p>Modulo rotary axis:</p> <ul style="list-style-type: none"> – The plus cam signal switches back from 1 to 0 when the axis overtravels the plus cam in the positive axis direction. <p>The described behavior of the plus cam applies under the following condition: Plus cam - minus cam < 180 degrees</p> <p>If this condition is not fulfilled or the minus cam is greater than the plus cam, the behavior of the plus cam signal is inverted. The behavior of the minus cam signal remains unchanged.</p>		

4.5 Mode signals

V3000 0000.0	AUTOMATIC mode		
Interface signal	Signal(s) to NCK (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	AUTOMATIC mode is selected by the PLC program.		
Signal state 0 or signal transition 1 ---> 0	AUTOMATIC mode is not selected by the PLC program.		
Signal irrelevant for ...	if "Mode group changeover disable" signal		
...			
Related to	IS "Active mode AUTOMATIC"		
Note for the reader:	802D sl Description of Functions: K1		

V3000 0000.1	MDA mode		
Interface signal	Signal(s) to NCK (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	MDA mode is selected by the PLC program.		
Signal state 0 or signal transition 1 ---> 0	MDA mode is not selected by the PLC program.		
Signal irrelevant for ...	if "Mode group changeover disable" signal		
...			
Related to	IS "Active mode MDA"		
Note for the reader:	802D sl Description of Functions: K1		

V3000 0000.2	JOG mode		
Interface signal	Signal(s) to NCK (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	JOG mode is selected by the PLC program.		
Signal state 0 or signal transition 1 ---> 0	JOG mode is not selected by the PLC program.		
Signal irrelevant for ...	if "Mode group changeover disable" signal		
...			
Related to	IS "Active mode JOG"		
Note for the reader:	802D sl Description of Functions: K1		

V3000 0000.4	Mode group changeover disable	
Interface signal	Signal(s) to NCK (PLC ----> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	The currently active mode (JOG, MDA or AUTOMATIC) cannot be changed.	
Signal state 0	The mode can be changed.	
Note for the reader:	802D sl Description of Functions: K1	

V3000 0000.7	Reset	
Interface signal	Signal(s) to NCK (PLC ----> NCK)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	The channel must change to the "RESET" status. The current program is then in program status "aborted". All moving axes and spindles are decelerated to zero speed according to their acceleration ramp without contour violation. The initial settings are set (e.g. for G functions). The alarms are cleared if they are not POWER ON alarms.	
Signal state 0 or signal transition 1 ----> 0	Channel status and program run are not affected by this signal.	
Related to	IS "Channel reset" IS "All channels in reset state"	
Special cases, errors,	An alarm which cancels IS "802 ready" ensures that the channel is no longer in the Reset state. In order to switch to another operating mode, a "reset" must then be initiated.	
Note for the reader:	802D sl Description of Functions: K1	

V3000 0001.2	Machine function REF	
Interface signal	Signal(s) to NCK (PLC ----> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	Machine function REF is activated in JOG mode.	
Signal state 0 or signal transition 1 ----> 0	Machine function REF is not activated.	
Signal irrelevant for	if JOG mode is not active.	
Note for the reader:	802D sl Description of Functions: K1	

Mode signals

V3000 0002.0 to .6 Interface signal	Machine function INC1, INC10, INC100, INC1000, INC10000, INCvar, continuous Signal(s) to modes (PLC -> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 --- > 1	<p>This input range is only used if the "INC inputs in mode group range active" interface signal (V2600 0001.0) is set. The signals then apply to all axes and geometry axes.</p> <p>IS "INC..." defines how many increments the axis traverses when the traversing key is pressed or the handwheel turned one detent position. JOG mode must be active. With "INCvar" the value in the general SD 41010: JOG_VAR_INCR_SIZE applies.</p> <p>In "continuous mode" the associated axis can be traversed with the plus or minus traversing key according to how the traverse key is pressed.</p> <p>As soon as the selected machine function becomes active, this is signaled to the PLC interface (IS "Active machine function INC1; ..."). If several machine function signals (INC1, INC... or "Continuous jogging") are selected at the interface simultaneously, no machine function is activated by the control.</p> <p>Note: The input IS "INC..." or "continuous" for changing an active machine function must be active for at least one PLC cycle. A static application is not required.</p>
Signal state 0 or signal transition 1 --- > 0	<p>The machine function in question is not selected. No change to the active machine function is required.</p> <p>If an axis is currently traversing an increment, this movement is also aborted if this machine function is deselected or changed over.</p>
Related to	<p>IS "INC inputs in mode group range active" (V2600 0001.0) IS "Machine function INC1, ..., continuous" for geometry axis 1 (V3200 1001.0 to .6) for geometry axis 2 (V3200 1005.0 to .6) for geometry axis 3 (V3200 1009.0 to .6)</p> <p>IS "Machine function INC1, ..., continuous" in axis range (V380x 0005.0 to .6) IS "Active machine function INC1, ..., continuous" for geometry axis1 (V3300 1001.0 to .6) for geometry axis 2 (V3300 1005.0 to .6) for geometry axis 3 (V3300 1005.0 to .6)</p> <p>IS "Active machine function INC1, ..., continuous" in axis range (V390x 0005.0 to .6)</p>
Note for the reader:	802D sl Description of Functions: H1

V3100 0000.0 Interface signal	Active mode AUTOMATIC Signal(s) from NCK (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	AUTOMATIC mode is active.
Signal state 0 or signal transition 1 ---> 0	AUTOMATIC mode is not active.
Note for the reader:	802D sl Description of Functions: K1

V3100 0000.1	Active mode MDA
Interface signal	Signal(s) from NCK (NCK ---> PLC)
Edge evaluation:	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	MDA mode is active.
Signal state 0 or signal transition 1 ---> 0	MDA mode is not active.
Note for the reader:	802D sl Description of Functions: K1

V3100 0000.2	Active mode JOG
Interface signal	Signal(s) from NCK (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	JOG mode is active.
Signal state 0 or signal transition 1 ---> 0	JOG mode is not active.
Note for the reader:	802D sl Description of Functions: K1

V3100 0000.3	802 READY
Interface signal	Signal(s) from NCK (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	This signal is set after POWER ON when all voltages are present. The mode group is now ready and part programs can be processed and axes traversed in the channel.
Signal state 0 or signal transition 1 ---> 0	The mode group/channel is not ready. Possible causes of this are: - A serious axis or spindle alarm is active - Hardware fault - Mode group incorrectly configured (machine data) If the mode group ready signal changes to the "0" state - the axis and spindle drives are decelerated with max. braking current to zero speed, - the signals from the PLC to the NCK are switched to the inactive state (initial setting).
Special cases, errors,	An alarm which cancels IS "802 READY" ensures that the channel is no longer in the Reset state. In order to switch to another operating mode, a "reset" must then be initiated. (V3000 0000.7)
Note for the reader:	802D sl Description of Functions: K1

Channel-specific signals

V3100 0001.2	Active machine function REF	
Interface signal	Signal(s) from NCK (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Machine function REF is active in JOG.	
Signal state 0 or signal transition 1 ---> 0	Machine function REF is not active.	
Note for the reader:	802D sl Description of Functions: K1	

4.6 Channel-specific signals

4.6.1 Signals to channel

V3200 0000.4	Activate single block	
Interface signal	Signal(s) to channel (PLC ---> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	In the AUTOMATIC mode the program is processed in the single-block mode; in MDA only 1 block can be entered in any case.	
Signal state 0 or signal transition 1 ---> 0	No effect	
Application example(s)	A new program can first be tested in single block mode in order to monitor the individual program steps more exactly.	
Special cases, errors,	<ul style="list-style-type: none"> • Intermediate blocks can be inserted if tool radius compensation (G41,G42) is selected. • In a series of G33 blocks single block is effective only if "dry run feedrate" is selected. • Pure calculation blocks are not processed in the single step in "Single block coarse" but only in "Single block fine". The preselection is made via softkey "Program control". 	
Related to	IS "Single-block selected" IS "Program status stopped"	
References	Subsection NO TAG	
Note for the reader:	802D sl Description of Functions: K1	
V3200 000.5	Activate M1	
Interface signal	Signal(s) to channel (PLC ---> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:

Signal state 1 or signal transition 0 ---> 1	M1 programmed in the part program leads to a programmed stop when processed in AUTOMATIC or MDA mode.
Signal state 0 or signal transition 1 ---> 0	M1 programmed in the part program does not lead to a programmed stop.
Related to	IS "M01 selected" (V1700 0000.5) IS "M0/M1 active" (V3300 0000.5)
Note for the reader:	802D sl Description of Functions: K1

V3200 0000.6	Activate dry run feedrate
Interface signal	Signal(s) to channel (PLC → NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Instead of the programmed feedrate (for G1, G2, G3, CIP, CT), the dry run feedrate defined in SD 42100: DRY_RUN_FEED is used if the dry run feedrate is larger than the programmed feedrate. This interface signal is evaluated on an NC start when the channel is in the "Reset" state. When selected on the PLC, the "Activate dry run feedrate" interface signal is required to be set by the PLC user program.
Signal state 0 or signal transition 1 ---> 0	The programmed feedrate is used for traversing. Active after Reset.
Application example(s)	Testing a workpiece program with an increased feedrate.
Related to	IS "Dry run feedrate selected" (V1700 0000.6) SD 42100: DRY_RUN_FEED (Dry run feedrate)
Note for the reader:	802D sl Description of Functions: V1

V3200 0001.0	Activate referencing
Interface signal	Signal(s) to channel (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Channel-specific referencing is started with the "Activate referencing" interface signal. The control acknowledges a successful start with the "Referencing active" interface signal. Each machine axis assigned to the channel can be referenced with channel-specific referencing (this is achieved internally on the control by simulating the plus/minus travel keys). The axis-specific MD 34110: REFP_CYCLE_NR (axis sequence for channel-specific referencing) can be used to define the sequence in which the machine data are referenced. If all axes entered in MD: REFP_CYCLE_NR have reached their reference point, the "all axes referenced" interface signal (V3300 0004.2) is enabled.
Application example(s)	If the machine axes are to be referenced in a particular sequence, the following options are available: <ul style="list-style-type: none"> • up • the PLC must check the sequence when starting or define it itself. • specific referencing function is used.
Related to	"Referencing active" interface signal (V3300 0001.0) "All axes referenced" interface signal (V3300 0004.2)
Note for the reader:	802D sl Description of Functions: R1

Channel-specific signals

V3200 0001.7	Activate program test
Interface signal	Signal(s) to channel (PLC ----> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	Axis disable is set internally for all axes (not spindle). Therefore the machine axes do not move when a part program block or a part program is being processed. The axis movements are simulated on the operator interface with changing axis position values. The axis position values for the display are generated from the calculated setpoints. The part program is processed in the normal way.
Signal state 0 or signal transition 1 ----> 0	Part program processing is not affected by the function program test
Related to	IS "Program test selected" IS "Program test active"
Note for the reader:	802D sl Description of Functions: K1

V3200 0002.0 to .7	Skip block
Interface signal	Signal(s) to channel (PLC ----> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	Blocks marked in the part program with an oblique (/) are skipped. If there is a series of skip blocks, this signal is only active if it is pending before decoding of the first block of the series, ideally before NC start .
Signal state 0 or signal transition 1 ----> 0	The marked part program blocks are not skipped.
Related to	IS "Skip block selected"
Note for the reader:	802D sl Description of Functions: K1

V3200 0003.0	Stroke disable
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or edge transition 0 ----> 1	This signal is used to enable the punching strokes via the PLC. 1-signal: The stroke is disabled; no punching stroke must be initiated by the NC.
Signal status 0 or edge transition 1 ----> 0	0-signal: Stroke enable is provided; if no enable signal is set, no punching stroke can be executed by the NC.

V3200 0003.1	Stroke initiated manually
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ----> 1	This signal can be used to initiate a single stroke in the manual mode. 1-signal: A manual stroke is executed.
Signal status 0 or signal transition 1 ----> 0	0-signal: No effect

V3200 0003.2	Stroke suppressed
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or edge transition 0 ---> 1	The signal merely prevents the stroke. The machine will nevertheless traverse. If the automatic path distribution is active, it also remains active. Merely the "Initiate stroke" signal is suppressed. The machine will traverse in the "stop and go" mode. The step length is defined by the path segmentation. 1-signal: The stroke suppression is active.
Signal status 0 or signal transition 1 ---> 0	0-signal: The stroke suppression is not active.

V3200 0003.3	Stroke does not run
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or edge transition 0 ---> 1	The NC reacts to this signal with immediate motion stop. If a motion or another action is interrupted due to this signal, an alarm is issued. Physically, the signal for the CNC is identically to the "Stroke active" signal, i.e. the system is switched such that the two signals are connected to the same NC input via an AND operation. 1-signal: Stroke does not run (corresponds to the "Stroke enable" signal)
Signal status 0 or signal transition 1 ---> 0	0-signal: Stroke running (corresponds to the "Stroke enable" signal)

V3200 0003.4	Delayed stroke
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or edge transition 0 ---> 1	This signal can be used to activate a "Delayed stroke". In respect of its function, this signal corresponds to a programming of PDELAYON. Any further PLC signals not complying with the standard are not evaluated by the NCK. Except for the manual stroke initiation, the evaluation of the signals is limited to PON active. 1-signal: Delayed stroke is active
Signal status 0 or edge transition 1 ---> 0	0-signal: Delayed stroke is not active

V3200 0003.5	Manual stroke initiation
Interface signal	Signal(s) to the channel (PLC->NCK)
Edge evaluation:	Signal(s) updated: Signal(s) valid from SW release:
Signal status 1 or edge transition 0 ---> 1	-> PLC IS "Manual stroke initiation acknowledgment" (DB21, ... DBX38.1). 1-signal: Manual stroke initiation is active
Signal status 0 or edge transition 1 ---> 0	0-signal: Manual stroke initiation is not active

Channel-specific signals

VB3200 0004	Feedrate override		
Interface signal	Signal(s) to channel (PLC → NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	Gray coding for Feedrate override		
	Switch position	Code	Feedrate override
	1	00001	0.0
	2	00011	0.01
	3	00010	0.02
	4	00110	0.04
	5	00111	0.06
	6	00101	0.08
	7	00100	0.10
	8	01100	0.20
	9	01101	0.30
	10	01111	0.40
	11	01110	0.50
	12	01010	0.60
	13	01011	0.70
	14	01001	0.75
	15	01000	0.80
	16	11000	0.85
	17	11001	0.90
	18	11011	0.95
	19	11010	1.00
	20	11110	1.05
	21	11111	1.10
	22	11101	1.15
	23	11100	1.20
	24	10100	1.20
	25	10101	1.20
	26	10111	1.20
	27	10110	1.20
	28	10010	1.20
	29	10011	1.20
	30	10001	1.20
31	10000	1.20	
Related to	IS "Feedrate override active" (V3200 0006.7)		
Note for the reader:	802D sl Description of Functions: V1		

VB3200 0005	Rapid traverse override		
Interface signal	Signal(s) to channel (PLC → NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Special cases, errors,	The feed disable is inactive when G33 is active.		
Signal state 1 or signal transition 0 ---> 1	Gray coding for Rapid traverse override		
	Switch position	Code	Rapid traverse override factor
	1	00001	0.0
	2	00011	0.01
	3	00010	0.02
	4	00110	0.04
	5	00111	0.06
	6	00101	0.08
	7	00100	0.10
	8	01100	0.20
	9	01101	0.30
	10	01111	0.40
	11	01110	0.50
	12	01010	0.60
	13	01011	0.70
	14	01001	0.75
	15	01000	0.80
	16	11000	0.85
	17	11001	0.90
	18	11011	0.95
	19	11010	1.00
	20	11110	1.00
	21	11111	1.00
	22	11101	1.00
	23	11100	1.00
	24	10100	1.00
	25	10101	1.00
	26	10111	1.00
	27	10110	1.00
	28	10010	1.00
	29	10011	1.00
	30	10001	1.00
	31	10000	1.00
Related to	IS "Rapid traverse override active" (V3200 0006.6)		
Note for the reader:	802D sl Description of Functions: V1		

Channel-specific signals

V3200 0006.0	Feed disable		
Interface signal	Signal(s) to channel (PLC → NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The signal is active on a channel in all operating modes.</p> <ul style="list-style-type: none"> • The signal disables all axes interpolating relative to each other as long as G33 (thread) is not active. All axes are brought to a standstill with adherence to the path contour. When the feed disable is canceled (0 signal), the interrupted part program is continued. • The position control is retained, i.e. the following error is eliminated. • If a travel request is issued for an axis with an active "Feed disable", The pending travel request is executed immediately when the "Feed disable" is canceled. <p>If the axis is interpolating in relation to others, this also applies to these axes.</p>		
Signal state 0 or signal transition 1 ---> 0	<ul style="list-style-type: none"> • The feedrate is enabled for all axes on the channel. • If a travel request ("Travel command") exists for an axis or group of axes when the "Feed disable" is canceled, this is executed immediately. 		
Special cases, errors,	The feed disable is inactive when G33 is active.		
Note for the reader:	802D sl Description of Functions: V1		

Channel-specific signals

V3200 0006.6	Rapid traverse override active	
Interface signal	Signal(s) to channel (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The rapid traverse override between 0 and a maximum of 100% entered in the PLC interface is channelspecific.	
Signal state 0 or signal transition 1 ---> 0	The rapid traverse override entered in the PLC interface is ignored. If the rapid traverse override is not active, an override factor of 100% is used internally on the NC. Note: The 1st switch position of the gray-coded interface for the value represents an exception. In this case, this override factor is also used with "Rapid traverse override inactive" and 0% is issued as the override value for axes.	
Special cases, errors,	The rapid traverse override is inactive if G33 is active.	
Related to	IS "Rapid traverse override" (V3200 0005)	
Note for the reader:	802D sl Description of Functions: V1	

V3200 0006.7	Feedrate override active	
Interface signal	Signal(s) to channel (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The feedrate override between 0 and a maximum of 120% entered in the PLC interface is active for the path feedrate and therefore automatically for the related axes. In JOG mode, the feedrate override acts directly on the axes.	
Signal state 0 or signal transition 1 ---> 0	The feedrate override entered in the PLC interface is ignored. If the feedrate override is not active, an override factor of 100% is used internally on the NC. Note: The 1st switch position of the gray-coded interface for the value represents an exception. In this case, this override factor is also used with "Feedrate override inactive" and 0% is issued as the override value for axes (acts the same as "Feed disable").	
Special cases, errors,	The feedrate override is inactive if G33 is active.	
Related to	IS "Feedrate override" (V3200 0004)	
Note for the reader:	802D sl Description of Functions: V1	

V3200 0007.0	NC start disable		
Interface signal	Signal(s) to channel (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	IS "NC Start" is ineffective		
Signal state 0 or signal transition 1 ---> 0	IS "NC Start" is effective.		
Application example(s)	This signal is used to suppress renewed program processing because, for example, there is no lubricant.		
Related to	IS "NC Start"		
Note for the reader:	802D sl Description of Functions: K1		

V3200 0007.1	NC Start		
Interface signal	Signal(s) to channel (PLC ---> NCK)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW status	
Signal state 1 or signal transition 0 ---> 1	AUTOMATIC mode: The selected NC program is started or resumed. If data are transferred from the PLC to the NC in the "Program interrupted" state, the data are calculated immediately on NC Start.		
	MDA mode: The entered part program blocks are released for execution or continued.		
Signal state 0 or signal transition 1 ---> 0	No effect		
Related to	IS "NC Start disable"		
Note for the reader:	802D sl Description of Functions: K1		

V3200 0007.2	NC Stop at block limit		
Interface signal	Signal(s) to channel (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	The current NC program is stopped after the current part program block has been processed. Otherwise as for IS "NC Stop".		
Signal state 0 or signal transition 1 ---> 0	No effect		
Related to	IS "NC Stop" IS "NC Stop axes plus spindles" IS "Program status stopped" IS "Channel status interrupted"		
Note for the reader:	802D sl Description of Functions: K1		

Channel-specific signals

V3200 0007.3	NC stop	
Interface signal	Signal(s) to channel (PLC ----> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ----> 1	The current NC program is stopped immediately, the current block is not completed. Only the axes without contour violation are stopped. Distances to go are traversed only after a renewed start. The program status changes to "stopped", the channel status changes to "interrupted".	
Signal state 0 or signal transition 1 ----> 0	No effect	
Application example(s)	<p>On NC start the program is continued at the point of interruption.</p>	
Special cases, errors,	The signal NC stop must be active for at least one PLC cycle.	
Related to	IS "NC Stop at block limit" IS "NC Stop axes plus spindles" IS "Program status stopped" IS "Channel status interrupted"	
Note for the reader:	802D sl Description of Functions: K1	

V3200 0007.4	NC Stop axes plus spindles		
Interface signal	Signal(s) to channel (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	—go are not completed until a start signal is given. The axes and the spindle are stopped. They are brought to a controlled standstill, however. The program status changes to stopped, the channel status changes to interrupted.		
Signal state 0 or signal transition 1 ---> 0	No effect		
Signal irrelevant for ...	Channel status Reset Program status aborted		
Special cases, errors, ...	<p>All axes and spindles that were not caused to move by a program or program block (e.g. axes are moved by pressing the travel keys on the machine control panel) are not decelerated to zero speed with "NC stop axes plus spindles".</p> <p>The program is continued at the interrupted place with NC Start.</p> <p>The signal "NC stop axes plus spindles" must be pending for at least one PLC cycle.</p>		
Related to	IS "NC Stop at block limit" IS "NC Stop" IS "Program status stopped" IS "Channel status interrupted"		
Note for the reader:	802D sl Description of Functions: K1		

V3200 0013.5	Deactivate workpiece counter		
Interface signal	Signal(s) to channel (PLC ---> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	The workpiece count monitoring is turned off with activated tool monitoring.		

Channel-specific signals

Signal state 0 or signal transition 1 ---> 0	No effect
Related to	
Note for the reader:	802D sl Description of Functions: W1

V3200 1000.0 to .1 V3200 1004.0 to .1 V3200 1008.0 to .1 Interface signal	Activate handwheel (1 to 3) for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) to channel (PLC -> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	These machine data determine whether this geometry axis is assigned to handwheel 1, 2, 3 or no handwheel. Only one handwheel can be assigned to an axis at any one time. If several "Activate handwheel" interface signals are set, priority "Handwheel 1" before "Handwheel 2" before "Handwheel 3" applies. Note: Three geometry axes can be traversed simultaneously with handwheels 1 to 3!
Signal state 0 or signal transition 1 ---> 0	Neither handwheel 1, 2 nor 3 is assigned to this geometry axis.
Application example(s)	The PLC user program can use this interface signal to disable the influence of turning the handwheel on the geometry axis.
Related to	IS "Handwheel active" 1 to 3 for geometry axis 1: V3300 1000.0 to .2 for geometry axis 2: V3300 1004.0 to .2 for geometry axis 3: V3300 1008.0 to .2
Note for the reader:	802D sl Description of Functions: H1

V3200 1000.3 V3200 1004.3 V3200 1008.3 Interface signal	Feed stopGeo-axes (axes in the WCS) Signal(s) to channel (PLC → NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The signal is only active in JOG mode (axes traversed in the WCS). <ul style="list-style-type: none"> • The signal triggers a feed stop for the axis. Traversing axes are brought to a standstill under controlled braking (ramp stop). No alarm is output. • The position control is retained, i.e. the following error is eliminated. • If a travel request is issued for an axis with an active "Feed stop", the request is retained. This pending travel request is executed immediately after the "Feed stop" is canceled.
Signal state 0 or signal transition 1 ---> 0	<ul style="list-style-type: none"> • The feedrate is enabled for the axis. • If a travel request ("Travel command") is active when the "Feed stop" is canceled, this is executed immediately.
Note for the reader:	802D sl Description of Functions: V1

Channel-specific signals

V3200 1000.4 V3200 1004.4 V3200 1008.4 Interface signal	Traverse key disable for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) to channel (PLC -> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The traverse keys plus and minus have no effect on the geometry axes in question. It is thus not possible to traverse the geometry axis in JOG with the traverse keys on the machine control panel. If the traverse key disable is activated during a traverse movement, the geometry axis is stopped.
Signal state 0	Traverse keys plus and minus are enabled.
Application example(s)	It is thus possible, depending on the operating mode, to disable manual traverse of the geometry axis in JOG mode with the traverse keys from the PLC user program.
Related to	IS "Traverse key plus" and " ... minus" for geometry axis 1 (V3200 1000.7 and .6) for geometry axis 2 (V3200 1004.7 and .6) for geometry axis 3 (V3200 1008.7 and .6)
Note for the reader:	802D sl Description of Functions: H1

V3200 1000.5 V3200 1004.5 V3200 1008.5 Interface signal	Rapid traverse override for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) to channel (PLC -> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	If the PLC interface signal "Rapid traverse override" is set together with "Traverse key plus" and "Traverse key minus", the geometry axis in question traverses at rapid traverse set for JOG on the assigned machine axis (e.g.: X -> X1). The rapid traverse velocity is defined in MD 32010: JOG_VELO_RAPID. Rapid traverse override is active in the following JOG modes: <ul style="list-style-type: none"> • Continuous traversing • Incremental traversing If rapid traverse override is active, the velocity can be modified with the rapid traverse override switch.
Signal state 0 or signal transition 1 ---> 0	The geometry axis traverses at the defined JOG velocity (SD: JOG_SET_VELO or MD: JOG_VELO).
Note for the reader:	802D sl Description of Functions: H1, V1

V3200 1000.7 and .6 V3200 1004.7 and .6 V3200 1008.7 and .6 Interface signal	Traverse keys plus and minus for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) to channel (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:

Signal state 1 or signal transition 0 ---> 1	<p>This input range is only used if IS "INC inputs in mode group range active" (V2600 0001.0) is not set.</p> <p>The interface signals INC... define how many increments the geometry axis traverses when the traverse key is pressed or the handwheel is turned one detent position. JOG mode must be active.</p> <p>With "INCvar" the value in the general SD 41010: JOG_VAR_INCR_SIZE applies.</p> <p>In mode "continuous" the associated geometry axis can be traversed with the plus or minus traversing key according to how the traverse key is pressed.</p> <p>As soon as the selected machine function becomes active, this is signaled to the PLC interface (interface signal "Active machine function INC1;...").</p> <p>If several machine function signals (INC1, INC... or "Continuous jogging") are selected at the interface simultaneously, no machine function is activated by the control.</p> <p>Note: The input IS "INC..." or "continuous" for changing an active machine function must be active for at least one PLC cycle. A static application is not required.</p>
Signal state 0 or signal transition 1 ---> 0	<p>The machine function in question is not selected. No change to the active machine function is requested.</p> <p>If an axis is currently traversing an increment, this movement is also aborted if this machine function is deselected or changed over.</p>
Related to	<p>IS "Active machine function INC1, ..." for geometry axis 1 (V3300 1001.06) for geometry axis 2 (V3300 1005.06) for geometry axis 3 (V3300 1005.06)</p> <p>IS "INC inputs in the mode group area active" (V2600 0001.0)</p>
Note for the reader:	802D sl Description of Functions: H1

4.6.2 Signals from the channel

V3300 0000.3	Action block active	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Block search: Output with accumulated auxiliary function outputs in progress (see Subsection NO TAG)	
Application example(s)		
Note for the reader:	802D sl Description of Functions: K1	

V3300 0000.4	Approach block active	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Block search with calculation/on contour: Start block in progress (see Subsection NO TAG)	

Channel-specific signals

Application example(s)	
Note for the reader:	802D sl Description of Functions: K1

V3300 0000.5	M0/M1 active
Interface signal	Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The part program block has been processed, the auxiliary functions have been output and - M0 is stored in the working memory - M1 is stored in the working memory and IS "Activate M01" is active The program status changes to stopped.
Signal state 0 or signal transition 1 ---> 0	- With IS "NC Start" - On program abort as a result of Reset
Related to	IS "Activate M01" IS "M01 selected"
Note for the reader:	802D sl Description of Functions: K1

V3300 0000.6	Last action block active
Interface signal	Signal(s) from channel (NCK -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Block search: Last block of the output with collected auxiliary function outputs in progress (see Subsection NO TAG)
Application example(s)	
Note for the reader:	802D sl Description of Functions: K1

V3300 0001.0	Referencing active
Interface signal	Signal(s) from channel (NCK -> PLC)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Channel-specific referencing is operational.
Signal state 0 or signal transition 1 ---> 0	<ul style="list-style-type: none"> • Channel-specific referencing has been completed • Axis-specific referencing running • No referencing active
Signal irrelevant for	Spindles
Related to	"Activate referencing" interface signal (V3200 0001.0)
Note for the reader:	802D sl Description of Functions: R1

V3300 0001.2	Revolutional feedrate active
Interface signal	Signal(s) from channel (NCK → PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:

Signal state 1 or signal transition 0 ---> 1	When programming G95 (revolutional feedrate) in the AUTOMATIC mode.
Application example(s)	
Related to	
Note for the reader:	802D sl Description of Functions: V1

V3300 0001.4 Interface signal	Block search active Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The Block search function is active. It was selected and started on the operator interface.
Signal state 0 or signal transition 1 ---> 0	The block search function is not active.
Application example(s)	The block search function makes it possible to jump to a certain block within a part program and to start processing the part program at this block.
Note for the reader:	802D sl Description of Functions: K1

V3300 0001.5 Interface signal	M2/M30 active Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	NC block with M2 is completely processed. If traversing motions are also programmed in this block, the signal is not output until the target position is reached.
Signal state 0 or signal transition 1 ---> 0	- No program end or abort - Status after power-up of control system - Start of an NC program
	<p>The diagram illustrates the timing of the M2/M30 active signal. It shows five horizontal lines representing different signals over time. 1. 'Data transfer to working memory' has two short pulses. 2. 'Block processed' has a long pulse that starts when data transfer begins and ends when the first data transfer pulse ends. 3. 'NC block with M2' has a pulse that starts when the first data transfer pulse begins and ends when the second data transfer pulse ends. 4. 'M change signal (1 PLC cycle time)' has a pulse that starts when the first data transfer pulse begins and ends one PLC cycle after it. 5. 'IS "M2/M30 active"' has a pulse that starts when the 'M change signal' pulse ends and continues until the 'Block processed' pulse ends.</p>
Application example(s)	The PLC can detect the end of program processing with this signal and react appropriately.

Channel-specific signals

Special cases, errors,	<ul style="list-style-type: none"> - The functions M2 and M30 have equal priority. Only M2 should be used. - IS "M2/M30 active" is applied statically at the end of a program. - Not suitable for automatic follow-on functions such as workpiece counting, bar feed, etc. M2 must be programmed in a separate block and the word M2 or the decoded M signal used for these functions. - No auxiliary functions leading to read-in stop may be written in the last block of a program.
Note for the reader:	802D sl Description of Functions: K1

V3300 0001.6	Transformation active
Interface signal	Signal(s) from NCK channel (NCK->PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The NC command TRANSMIT or TRACYL is programmed in the part program. The corresponding block has been processed by the NC and a transformation is now active.
Signal state 0 Edge change 1--->0	No transformation is active.
Note for the reader:	802D sl Description of Functions: M1

V3300 0001.7	Program test active
Interface signal	Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Program control "Program test" is active. Axis disable is set internally for all axes (not spindles). Therefore the machine axes do not move when a part program block or a part program is being processed. The axis movements are simulated on the operator interface with changing axis position values. The axis position values for the display are generated from the calculated setpoints. The part program is processed in the normal way.
Signal state 0 or signal transition 1 ---> 0	Program control Program test is not active.
Related to	IS "Activate program test" IS "Program test selected"
Note for the reader:	802D sl Description of Functions: K1

V3300 0003.0	Program status running
Interface signal	Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The part program has been started with IS "NC start" and is running.
Signal state 0 or signal transition 1 ---> 0	<ul style="list-style-type: none"> - Program stopped by M00/M01 or NC Stop or mode change. - The block is executed in single-block mode. - End of program reached (M2) - Program abort by Reset - Current block cannot be processed

Special cases, errors,	The IS "Program status running" does not change to 0 if workpiece machining is stopped by the following events: - Output of feed disable or spindle disable - IS "Read-in disable" - Feed override to 0% - Response of the spindle and axis monitoring
Note for the reader:	802D sl Description of Functions: K1

V3300 0003.2	Program status stopped	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The NC part program has been stopped by "NC stop", "NC stop axes plus spindles", "NC stop at block limit", programmed M0 or M1 or single block mode.	
Signal state 0 or signal transition 1 ---> 0	Program status "stopped" is not active.	
Related to	IS "NC Stop" IS "NC Stop axes plus spindles" IS "NC Stop at block limit"	
Note for the reader:	802D sl Description of Functions: K1	

V3300 0003.3	Program status interrupted	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	When changing from AUTOMATIC or MDA mode (when program has stopped) after JOG the program status switches to "interrupted". The program can be continued at the point of interruption in AUTOMATIC or MDA mode when "NC start" is operated.	
Signal state 0 or signal transition 1 ---> 0	Program status interrupted is not active.	
Special cases, errors,	IS "Program status interrupted" signifies that the part program can be continued after an NC start.	
Note for the reader:	802D sl Description of Functions: K1	

V3300 0003.4	Program status aborted	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The program has been selected but not started or the current program was aborted with Reset.	
Signal state 0 or signal transition 1 ---> 0	Program status interrupted is not active.	
Related to	IS "Reset"	
Note for the reader:	802D sl Description of Functions: K1	

Channel-specific signals

V3300 0003.5	Channel status active	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	In this channel <ul style="list-style-type: none"> • a part program or block is currently being processed in AUTOMATIC or MDA mode or • at least one axis is being traversed in JOG mode. 	
Signal state 0 or signal transition 1 ---> 0	"Channel status interrupted" or "Channel status Reset" is active.	
Note for the reader:	802D sl Description of Functions: K1	

V3300 0003.6	Channel status interrupted	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The NC part program in AUTOMATIC or MDA mode can be stopped by "NC stop", "NC stop axes plus spindles", "NC stop at block limit", programmed M0 or M1 or single block mode. With NC start the part program or the interrupted traversing movement can be continued.	
Signal state 0 or signal transition 1 ---> 0	"Channel status active" or "Channel status Reset" is active.	
Note for the reader:	802D sl Description of Functions: K1	

V3300 0003.7	Channel status rese	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The signal changes to 1 as soon as the channel goes into Reset status, i.e. no processing taking place.	
Signal state 0 or signal transition 1 ---> 0	The signal changes to 0 if processing is taking place in the channel, e.g. execution of a part program or block search	
Note for the reader:	802D sl Description of Functions: K1	

V3300 0004.2	All axes referenced	
Interface signal	Signal(s) from channel (PLC -> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW: 1.1
Signal state 1 or signal transition 0 ---> 1	All axes referenced. (Note for axes requiring referencing: MD 34110: REFP_CYCLE_NR, MD 20700: REFP_NC_START_LOCK)	
Signal state 0 or signal transition 1 ---> 0	One or more axes on the channel have not been referenced.	

Channel-specific signals

Special cases, errors,	The spindles of the channel have no effect on this interface signal.
Related to	"Referenced/synchronizing 1" interface signal (V390x 0000.4)
Note for the reader:	802D sl Description of Functions: R1

V3300 0004.3 Data block	All axes stationary Signal(s) from channel (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	All axes assigned to the channel are stationary with interpolator end. No other traversing movements are active.	
Note for the reader:	802D sl Description of Functions: B1	

V3300 0006.0 Interface signal	Stroke initiation active Signal(s) from channel (NCK -> PLC)	
Edge evaluation:	Signal(s) updated:	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	This signal indicates an active stroke initiation. 1-signal: The stroke initiation is active.	
Signal status 0 or signal transition 1 ---> 0	0-signal: The stroke initiation is not active.	

V3300 0006.1 Interface signal	Acknowledgment of manual stroke initiation Signal(s) from channel (NCK -> PLC)	
Edge evaluation:	Signal(s) updated:	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	This signal indicates whether a manual stroke was initiated. 1-signal: A manual stroke was initiated.	
Signal status 0 or signal transition 1 ---> 0	0-signal: No manual stroke was initiated.	

V3300 0008 V3300 0009 Interface signal	Machine-related protection zone 1 (...10) preactivated Signal(s) from the channel (NCK ---> PLC)	
Edge evaluation: no	Signal(s) updated: cyclically	
Signal status 1 or edge transition --> 0 --->1	The machine-related protection zone 1 (...10) is preactivated in the current block. (The preactivation was performed in the part program.) Thus, the protection zone can be activated or deactivated in the PLC user program using the interface signal DB21, ... DBX8.0 - DBX9.1 ("Activate machine- related protection zone 1 (...10)").	
Signal status 0 or edge transition --> 1 ---> 0	The machine-related protection zone 1 (...10) is deactivated in the current block. (The deactivation was performed in the part program.) Thus, the protection zone can be deactivated or set inactive in the PLC user program using the interface signal DB21, ... DBX8.0 - DBX9.1 ("Activate machine- related protection zone 1 (...10)").	
Related to	DB21, ... DBX8.0 - DBX9.1 ("Activate machine-related protection zone 1 (...10)").	

Channel-specific signals

V3300 0010 V3300 0011 Interface signal	Channel-specific protection zone 1 (...10) preactivated Signal(s) from the channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclically
Signal status 1 or edge transition --> 0 --> 1	The channel-specific protection zone 1 (...10) is preactivated in the current block. (The preactivation was performed in the part program.) Thus, the protection zone can be activated or deactivated in the PLC user program using the interface signal DB21, ... DBX10.0 - DBX11.1 ("Activate channel-specific protection zone 1 (...10)").
Signal status 0 or edge transition --> 1 --> 0	The channel-specific protection zone 1 (...10) is deactivated in the current block. (The deactivation was performed in the part program.) Thus, the protection zone can be deactivated or set inactive in the PLC user program using the interface signal DB21, ... DBX10.0 - DBX11.1 ("Activate channel-specific protection zone 1 (...10)").
Related to ... with	DB21, ... DBX10.0 - DBX11.1 ("Activate channel-specific protection zone 1 (...10)").

V3300 0012 V3300 0013 Interface signal	Machine-related protection zone 1 (...10) violated Signal(s) from the channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclically
Signal status 1 or edge transition --> 0 --> 1	The activated, machine-related protection zone 1 (...10) is violated in the current block or in the current JOG motion. The preactivated, machine-related protection zone 1 (...10) would be violated in the current block if it would be set active by the PLC.
Signal status 0 or edge transition --> 1 --> 0	The activated, machine-related protection zone 1 (...10) is not violated in the current block. The preactivated, machine-related protection zone 1 (...10) would not be violated in the current block if it would be set active by the PLC.
Application example(s)	This interface signal (IS) can be used to check before swinging parts into the work space whether the tool or the workpiece is in the machine-related protection zone of the part to be swung in.

V3300 0014 V3300 0015 Interface signal	Channel-specific protection zone 1 (...10) violated Signal(s) from the channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclically
Signal status 1 or edge transition --> 0 --> 1	The activated, channel-specific protection zone 1 (...10) is violated in the current block. The preactivated, channel-specific protection zone 1 (...10) would be violated in the current block if it would be set active by the PLC.
Signal status 0 or edge transition --> 1 --> 0	The activated, channel-specific protection zone 1 (...10) is not violated in the current block. The preactivated, channel-specific protection zone 1 (...10) would not be violated in the current block if it would be set active by the PLC.
Application example(s)	This interface signal (IS) can be used to check before swinging parts into the work space whether the tool or the workpiece is in the channel-specific protection zone of the part to be swung in.

Channel-specific signals

V3300 1000.0 to .1 V3300 1004.0 to .1 V3300 1008.0 to .1 Interface signal	Handwheel active (1 to 2) for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) from channel (NCK -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	These PLC interface signals report whether this geometry axis is assigned to handwheel 1, 2 or 3 or to no handwheel. Only one handwheel can be assigned to an axis at any one time. If several "Activate handwheel" interface signals are set, priority "Handwheel 1" before "Handwheel 2" before "Handwheel 3" applies. If the assignment is active, the geometry axis can be traversed with the handwheel in JOG mode.
Signal state 0 or signal transition 1 ---> 0	Neither handwheel 1, 2 nor 3 is assigned to this geometry axis.
Related to	IS "Activate handwheel" (V3200 1000.0 to .2, V3200 1004.0 to .2, V3200 1008.0 to .2)
Note for the reader:	802D sl Description of Functions: H1

V3300 1000.7 and .6 V3300 1004.7 and .6 V3300 1008.7 and .6 Interface signal	Travel command plus and minus for geometry axis for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) from channel (NCK -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	A traverse movement of the axis is to be executed in one or the other direction. Depending on the mode selected, the command is triggered in different ways: <ul style="list-style-type: none"> • JOG mode: with the plus or minus traverse key • REF submode: with the traverse key that takes the axis to the reference point • AUTO/MDA mode: the program block containing a coordinate value for the axis in question is executed.
Signal state 0 or signal transition 1 ---> 0	A travel command in the relevant axis direction has not been given or a traverse movement has been completed. <p>JOG mode:</p> <ul style="list-style-type: none"> • Cancellation of traverse key • While ending traversing with the handwheel. <p>REF submode:</p> <ul style="list-style-type: none"> • When the reference point is reached <p>AUTO/MDA mode:</p> <ul style="list-style-type: none"> • The program block has been executed (and the next block does not contain any coordinate values for the axis in question) • Abort with "RESET", etc. • IS "Axis disable" is active
Application example(s)	To release clamping of axes with clamping Note: If the clamping is not released until the travel command is given, these axes cannot be operated under continuous path control!


Channel-specific signals

Related to	IS "Traverse key plus" and " ... minus" for geometry axis 1 (V3200 1000.7 and .6) for geometry axis 2 (V3200 1004.7 and .6) for geometry axis 3 (V3200 1008.7 and .6)
Note for the reader:	802D sl Description of Functions: H1

V3300 1001.0, ..., .6 V3300 1005.0, ..., .6 V3300 1009.0, ..., .6 Interface signal	Active machine function INC1, ..., continuous for geometry axis 1 for geometry axis 2 for geometry axis 3 Signal(s) from channel (NCK -> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The PLC interface receives a signal stating which JOG mode machine function is active for the geometry axes.
Signal state 0 or signal transition 1 ---> 0	The machine function in question is not active.
Related to	IS "Machine function INC1, ..., continuous" for geometry axis 1 (V3200 1001.06) for geometry axis 2 (V3200 1005.06) for geometry axis 3 (V3200 1009.06)
Note for the reader:	802D sl Description of Functions: H1

V3300 4001.1 Interface signal	Workpiece setpoint reached Signal(s) from channel (NCK ---> PLC)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The required number of workpieces is reached. According to setting in MD 27880: PART_COUNTER: Bit 1 = 0: when \$AC_REQUIRED_PARTS equal to \$AC_ACTUAL_PARTS Bit 1 = 1: when \$AC_REQUIRED_PARTS equal to \$AC_SPECIAL_PARTS
Signal state 0 or signal transition 1 ---> 0	The required number of workpieces is not reached.
Note for the reader:	802D sl Description of Functions: K1

4.7 Axis-/spindle-specific signals

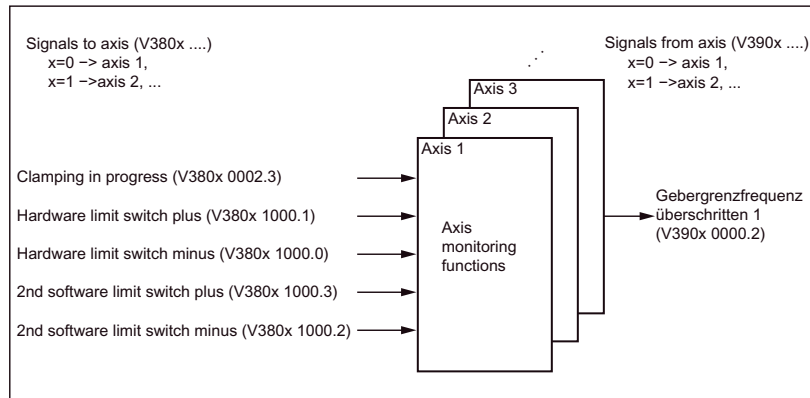

PLC interface signals for axis monitoring functions

4.7.1 Transferred axis-specific M and S functions

VD370x 0000	M function for spindle	
Interface signal	Signals from axis/spindle (NCK -> PLC), axis-specific	
Edge evaluation:	Signal(s) updated: cyclic	Signal(s) valid from SW:
	<p>Generally the M functions are output in V2500... channel-specific. In the V25001... range these only remain valid for one PLC cycle; in V25003... until a new function is output.</p> <p>In this IS "M function for spindle" selected spindle M functions are available to the PLC as a current integer value.</p> <ul style="list-style-type: none"> • M3 > value: 3 • M4 > value: 4 • M5 > value: 5 	
Related to	specific IS auxiliary function transfer from NC channel (V2500...)	
Note for the reader:	802D sl Description of Functions: S1	

VD370x 0004	S function for spindle	
Interface signal	Signals from axis/spindle (NCK -> PLC), axis-specific	
Edge evaluation:	Signal(s) updated: cyclic	Signal(s) valid from SW:
	<p>Generally the S function is transferred to the PLC channel-specific in VD2500 4000 as a floating point value.</p> <p>In this IS \hat{S} function for spindle the floating point value is output to the PLC on an axis-specific basis:</p> <ul style="list-style-type: none"> • S.... as the spindle speed in rpm (programmed value) • S.... as the constant cutting speed in m/min or ft/min for G96 <p>The following S functions are not output here:</p> <ul style="list-style-type: none"> • S.... as the programmed Spindle speed limiting G25 • S.... as the programmed Spindle speed limiting G26 • S.... as the dwell time in spindle revolutions 	
Related to	specific	
Note for the reader:	802D sl Description of Functions: S1	

4.7.2 Signals to axis/spindle

VB380x 0000	Feedrate override (axis-specific)		
Interface signal	Signal(s) to axis (PLC → NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	The axis-specific feedrate override is defined via the PLC in gray coding.		
	Gray coding for axis-specific feedrate override		
	Switch position	Code	Axial feedrate over ride factor
	1	00001	0.0
	2	00011	0.01
	3	00010	0.02
	4	00110	0.04
	5	00111	0.06
	6	00101	0.08
	7	00100	0.10
	8	01100	0.20
	9	01101	0.30
	10	01111	0.40
	11	01110	0.50
	12	01010	0.60
	13	01011	0.70
	14	01001	0.75
	15	01000	0.80
	16	11000	0.85
	17	11001	0.90
	18	11011	0.95
	19	11010	1.00
	20	11110	1.05
	21	11111	1.10
	22	11101	1.15
	23	11100	1.20
	24	10100	1.20
	25	10101	1.20
	26	10111	1.20
	27	10110	1.20
	28	10010	1.20
	29	10011	1.20
	30	10001	1.20
	31	10000	1.20
Related to	IS "Override active" (V380x 0001.7)		
Note for the reader:	802D sl Description of Functions: V1		

Axis-/spindle-specific signals

V380x 0001.1	Acknowledge fixed stop reached	
Interface signal	Signal(s) to axis/spindle (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Meaning after the fixed stop has been reached IS "Fixed stop reached" = 1 → The axis pushes against the fixed stop with the clamping torque → The fixed stop monitoring window is activated → A block change is performed.	
Signal state 0	Meaning after the fixed stop has been reached IS "Fixed stop reached" = 1 → The axis pushes against the fixed stop with the clamping torque → The fixed stop monitoring window is activated → No block change is performed and channel alarm "Wait: Auxiliary function acknowledgment missing" is displayed.	
Edge change 1--->0	Meaning once the fixed stop has been reached: IS "Fixed stop reached" = 1 The function is aborted, the alarm "20094 axis %1 Function aborted" is displayed. Meaning when function is deselected "FXS = 0" via part program: Torque limiting and monitoring of the fixed stop window are canceled.	
IS irrelevant for	MD 37060: FIXED_STOP_ACKN_MASK (monitoring of PLC acknowledgments for travel to fixed stop) = 0 or 1 (for values >1, however)	
Related to	MD 37060: FIXED_STOP_ACKN_MASK (monitoring of PLC acknowledgments for travel to fixed stop) IS "Fixed stop reached"	
Note for the reader:	802D sl Description of Functions: F1	

V380x 0001.2	Sensor for fixed stop	
Interface signal	Signal(s) to axis/spindle (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Fixed stop is reached.	
Signal state 0 or signal transition 1 ---> 0	Fixed stop is not reached.	
Related to	The signal is effective only if MD 37040: FIXED_STOP_BY_SENSOR is set to 1.	
Note for the reader:	802D sl Description of Functions: F1	

V380x 0001.7	Override active	
Interface signal	Signal(s) to axis/spindle (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Feedrate override active (for axes): <ul style="list-style-type: none"> • The axis-specific feedrate override between 0 and a maximum of 120% entered in the PLC interface is used. Spindle override active (for spindle): <ul style="list-style-type: none"> • The spindle override of 50 to a maximum of 120% is used. 	

Axis-/spindle-specific signals

Signal state 0 or signal transition 1 ---> 0	The existing axis-specific feedrate override or spindle override is not active. If the feedrate override is inactive, 100% is used as the internal override factor. Note: coded interface for the value represents a special case. In this case, the override factor of the 1st switch position is also used with "Override inactive" and 0% is issued as the override value for axes (acts the same as "Feed disable"); accordingly 50%, is issued for the spindle.
Special cases, errors,	<ul style="list-style-type: none"> • The spindle override is always accepted with 100% in the spindle "Oscillation mode". • The spindle override acts on the programmed values before the limits (e.g. G26) intervene. • The feedrate override is inactive if G33 is active.
Related to	IS "Feedrate override" and IS "Spindle override"
Note for the reader:	802D sl Description of Functions: V1

V380x 0002.0 Interface signal	Cam activation Signal(s) to axis/spindle (PLC --> NCK)	
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release: 2.1
Signal status 1 or signal transition 0 ---> 1	The output of the minus and plus cam signals of an axis to the general PLC interface is activated. The activation comes immediately into effect after processing of the IS "Cam activation" in the NCK.	
Signal status 0 or signal transition 1 ---> 0	The minus and plus cam signals of an axis are not output to the general PLC interface.	
Related to	IS "Minus cam signal 1-32" (V2700 0004.0 bis .7) IS "Plus cam signal 1-32" (V2700 0008.0 to .7)	

V380x 0002.2 Interface signal	Spindle reset/Delete distance-to-go Signal(s) to axis/spindle (PLC -> NCK)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Edge change 0 ---> 1	Independent of MD 35040: SPIND_ACTIVE_AFTER_RESET, spindle reset has the following effects for the different spindle modes: Open-loop control mode: <ul style="list-style-type: none"> – Spindle stops – Program continues running – Spindle continues to run with subsequent M and S programcommands Oscillation mode: <ul style="list-style-type: none"> – Oscillation is aborted – Axes continue to run – Program is continued with current gear stage – With a subsequent M value and a higher S value, IS "Setpoint speed limited" (V390x 2001.1) is set if necessary. Positioning mode: <ul style="list-style-type: none"> – is stopped 	

Axis-/spindle-specific signals

Signal state 0 or signal transition 1 ---> 0	No effect
Related to	MD 35040: SPIND_ACTIVE_AFTER_RESET (own spindle reset) IS "Reset" (V300 00000.7) IS "Delete distance-to-go" (V380x 0002.2) is another name for the same signal; however, it applies to each axis.
Note for the reader:	802D sl Description of Functions: S1

V380x 0002.3	Clamping in progress
Data block	Signal(s) to axis/spindle (PLC ---> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Clamping in progress The clamping monitoring function is activated.
Signal state 0 or signal transition 1 ---> 0	speed monitoring function takes over from the clamping monitoring function.
Related to	MD 36050: CLAMP_POS_TOL (clamping tolerance)
Note for the reader:	802D sl Description of Functions: A3

V380x 0003.1	Enable travel to fixed stop
Interface signal	Signal(s) to axis/spindle (PLC ---> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	Meaning when "FXS" function is selected via part program, (IS "Activate travel to fixed stop" = 1): Travel to fixed stop is enabled and the axis traverses from the start position at the programmed velocity to the programmed target position.
Signal state 0	Meaning when "FXS" function is selected via part program, (IS "Activate travel to fixed stop" = 1): → Travel to fixed stop is disabled. → The axis is at the start position with reduced torque. → Channel alarm "Wait: Auxiliary function acknowledgment missing" is displayed.
Edge change 1--->0	Meaning before the fixed stop has been reached IS "Fixed stop reached" = 0 → Travel to fixed stop is aborted → Alarm "20094: axis%1 Function aborted" is displayed Meaning once fixed stop has been reached IS "Fixed stop reached" = 1. Torque limiting and the monitoring of the fixed stop monitoring window are canceled.
IS irrelevant for	MD 37060: FIXED_STOP_ACKN_MASK (monitoring of PLC acknowledgments for travel to fixed stop) = 0 or 2
Related to	MD 37060: FIXED_STOP_ACKN_MASK (monitoring of PLC acknowledgments for travel to fixed stop) IS "Activate travel to fixed stop"
Note for the reader:	802D sl Description of Functions: F1

V380x 0003.6	Velocity/spindle speed limitation		
Data block	Signal(s)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	The NCK limits the velocity/spindle speed to the limit value set in MD 35160: SPIND_EXTERN_VELO_LIMIT.		
Signal state 0 or signal transition 1 ---> 0	No limiting active.		
Related to	MD 35100: SPIND_VELO_LIMIT (max. spindle speed) SD 43220: SPIND_MAX_VELO_G26 (prog. spindle speed limiting G26) SD 43230: SPIND_MAX_VELO_LIMIT (prog. spindle speed limiting G96)		
Note for the reader:	802D sl Description of Functions: A3		

V380x 0004.0 to .1	Activate handwheel (1 to 2)		
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	This PLC interface signal defines whether this machine axis is assigned to handwheel 1, 2 or no handwheel. Only one handwheel can be assigned to an axis at any one time. If several "Activate handwheel" interface signals are set, priority "Handwheel 1" before "Handwheel 2" applies. If the assignment is active, the machine axis can be traversed with the handwheel in JOG mode.		
Signal state 0 or signal transition 1 ---> 0	Neither handwheel 1, 2 is assigned to this geometry axis.		
Application example(s)	The PLC user program can use this interface signal to disable the influence of turning the handwheel on the axis.		
Related to	IS "Handwheel active" 1 to 2 (V390x 0004.0 to .1)		
Note for the reader:	802D sl Description of Functions: H1		

Axis-/spindle-specific signals

V380x 0004.3	Feed stop/Spindle stop (axis-specific)	
Interface signal	Signal(s) to axis/spindle (PLC → NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>The signal is active in all modes.</p> <p>Feed stop:</p> <ul style="list-style-type: none"> • The signal triggers a feed stop for the axis. Traversing axes are brought to a standstill under controlled braking (ramp stop). No alarm is output. • The signal triggers a feed stop for all path axes interpolating relative to each other when the "Feed stop" is activated for any one of these axes. In this case, all the axes are brought to a stop with adherence to the path contour. When the feed stop signal is canceled, execution of the interrupted part program is resumed. • The position control is retained, i.e. the following error is eliminated. • If a travel request is issued for an axis with an active "Feed stop", the request is retained. This pending travel request is executed immediately when "Feed stop" is canceled. If the axis is interpolating in relation to others, this also applies to these axes. <p>Spindle stop:</p> <ul style="list-style-type: none"> • The spindle is brought to a standstill along the acceleration characteristic. • In positioning mode, activation of the "Spindle stop" signal interrupts the positioning process. The above response applies with respect to individual axes. 	
Signal state 0 or signal transition 1 ---> 0	<p>Feed stop:</p> <ul style="list-style-type: none"> • The feedrate is enabled for the axis. • If a travel request ("Travel command") is active when the "Feed stop" is canceled, this is executed immediately. <p>Spindle stop:</p> <ul style="list-style-type: none"> • The speed is enabled for the spindle. • The spindle is accelerated to the previous speed setpoint with the acceleration characteristic or, in positioning mode, positioning is resumed. 	
Application example(s)	<p>Feed stop:</p> <ul style="list-style-type: none"> • The traversing motion in the machine axes is not started when "Feed stop" is active, if, for example, certain operating states that do not permit axis motion (e.g. door not closed) prevail. <p>Spindle stop:</p> <ul style="list-style-type: none"> • Change a tool 	
Special cases, errors,		
Note for the reader:	802D sl Description of Functions: V1	

V380x 0004.4	Traverse key disable		
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	The traverse keys plus and minus have no effect on the machine axes in question. It is thus not possible to traverse the machine axis in JOG with the traverse keys on the machine control panel. If the traverse key disable is activated during a traverse movement, the machine axis is stopped.		
Signal state 0 or signal transition 1 ---> 0	Traverse keys plus and minus are enabled.		
Application example(s)	It is thus possible, depending on the operating mode, to disable manual traverse of the machine axis in JOG mode with the traverse keys from the PLC user program.		
Related to	IS "Traverse key plus" and "Traverse key minus" (V380x 0004.7 and .6)		
Note for the reader:	802D sl Description of Functions: H1		

V380x 0004.5	Rapid traverse override		
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	If interface signal "Rapid traverse override" is set together with "Traverse key plus" and "Traverse key minus", the machine axis in question traverses at rapid traverse. The rapid traverse velocity is defined in MD 32010: JOG_VELO_RAPID. Rapid traverse override is active in the following JOG modes: <ul style="list-style-type: none"> • Continuous jogging • Incremental jogging If rapid traverse override is active, the velocity can be modified with the axis-specific feedrate override switch.		
Signal state 0 or signal transition 1 ---> 0	The machine axis traverses at the defined JOG velocity (SD 41110: JOG_SET_VELO or SD 41130, or MD 32020: JOG_VELO).		
Signal irrelevant for ...	<ul style="list-style-type: none"> • Operating modes AUTOMATIC and MDA • Reference point approach (JOG mode) 		
Related to	IS "Traverse key plus" and "Traverse key minus" (V380x 0004.7 and .6) specific "Feedrate override" (VB380x 0000)		
Note for the reader:	802D sl Description of Functions: H1		

Axis-/spindle-specific signals

V380x 0004.7 and .6 Interface signal	Plus and minus traverse keys Signal(s) to axis/spindle (PLC -> NCK)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>The selected axis can be traversed in both directions in JOG mode with the traverse keys plus and minus.</p> <p>Incremental traversing</p> <p>With signal 1 the axis starts to traverse at the set increment. If the signal changes to the 0 state before the increment is traversed, the traversing movement is interrupted. When signal state 1 occurs again, the traverse motion is restarted. The traversing motion of the axis can be stopped and restarted multiple times as described above until the increment has been fully traversed.</p> <p>Continuous traversing</p> <p>If no INC measure is selected but "continuous" is, the axis travels for as long as the traverse key is actuated.</p> <p>If both traverse signals (plus and minus) are set at the same time there is no movement or a current movement is aborted.</p> <p>The effect of the traverse keys can be disabled for every axis individually with the PLC interface signal "Traverse key disable".</p>	
Signal state 0 or signal transition 1 ---> 0	No traverse	
Signal irrelevant for	Operating modes AUTOMATIC and MDA	
Application example(s)	specific PLC interface (as a geometry axis). Alarm 20062 is signaled.	
Special cases,	Indexing axes	
Related to	IS "Traverse key plus" and " ... minus" for geometry axis 1 (V3200 1000.7 and .6) for geometry axis 2 (V3200 1004.7 and .6) for geometry axis 3 (V3200 1008.7 and .6) IS "Traverse key disable" (V380x 0004.4)	
Note for the reader:	802D sl Description of Functions: H1	

Axis-/spindle-specific signals

V380x 0005.0 to .6 Interface signal	Machine functions INC1, INC10, INC100, INC1000, INC10000, INCvar, continuous Signal(s) to axis/spindle (PLC -> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>This input range is only used if IS "INC inputs in mode group range active" (V2600 0001.0) is not set.</p> <p>The interface signals "INC..." define how many increments the machine axis traverses when the traverse key is pressed or the handwheel is turned one detent position. JOG must be active.</p> <p>With "INCvar" the value in the general SD 41010: JOG_VAR_INCR_SIZE applies.</p> <p>In "continuous" mode the associated axis can be traversed with the plus or minus traversing key according to how the traverse key is pressed.</p> <p>As soon as the selected machine function becomes active, this is signaled to the PLC interface (IS "Active machine function INC1...").</p> <p>If several machine function signals (INC1, INC... or "Continuous jogging") are selected at the interface simultaneously, no machine function is activated by the control.</p> <p>Note: The input IS "INC..." or "continuous" for changing an active machine function must be active for at least one PLC cycle. A static application is not required.</p>
Signal state 0 or signal transition 1 ---> 0	<p>The machine function in question is not selected. No change to the active machine function is requested.</p> <p>If an axis is currently traversing an increment, this movement is also aborted if this machine function is deselected or changed over.</p>
Related to	IS "Active machine function INC1, ..." (V390x 0005.06) IS "INC inputs in the mode group area active" (V2600 0001.0)
Note for the reader:	802D sl Description of Functions: H1

V380x 1000.1 and .0 Data block	Hardware limit switches plus and minus Signal(s) to axis/spindle (PLC ---> NCK)
Edge evaluation: no	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>A switch can be mounted at each end of the travel range of a machine axis which will cause a signal "Hardware limit switch plus or minus" to be signaled to the NC via the PLC if it is approached.</p> <p>If the signal is recognized as set, alarm 021614 "Hardware limit switch + or -" is output and the axis is decelerated immediately. The braking mode is defined in MD 36600: BRAKE_MODE_CHOICE (deceleration behavior on hardware limit switch).</p>
Signal state 0 or signal transition 1 ---> 0	Normal condition, hardware limit switch not triggered.
Related to	MD 36600: BRAKE_MODE_CHOICE (deceleration behavior on hardware limit switch)
Note for the reader:	802D sl Description of Functions: A3

V380x1000.3 or .2 Data block	2nd software limit switch plus or minus Signal(s) to axis/spindle (PLC ---> NCK)
---------------------------------	---

Axis-/spindle-specific signals

Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	2nd software limit switch for the plus or minus direction is active. 1st software limit switch for the plus or minus direction is not active. The 2nd software limit switches (plus and minus) can be activated in addition to the 1st software limit switches (plus and minus) via this interface signal. The position is defined by MD 36130: POS_LIMIT_PLUS2, MD 36120: POS_LIMIT_MINUS2 (2nd software limit switch plus, 2nd software limit switch minus).	
Signal state 0 or signal transition 1 ---> 0	1st software limit switch for the plus or minus direction is active. 2nd software limit switch for the plus or minus direction is not active.	
Related to	MD 36110: POS_LIMIT_PLUS, MD 36130: POS_LIMIT_PLUS2, MD 36100: POS_LIMIT_MINUS, MD 36120: POS_LIMIT_MINUS2, (software limit switch plus, software limit switch minus)	
Note for the reader:	802D sl Description of Functions: A3	

V380x1000.7	Reference point approach delay	
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The machine axis is positioned at the reference cam.	
Signal state 0 or signal transition 1 ---> 0	The machine axis is positioned in front of the reference cam. A reference cam of appropriate length (to the end of the traversing range) has been used to prevent the machine axis from being positioned behind the referencing cam.	
Related to		
Note for the reader:	802D sl Description of Functions: R1	

Axis-/spindle-specific signals

V380x 2000.0 to .2 Interface signal	Actual gear stage A to C Signal(s) to axis/spindle (PLC -> NCK)																														
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:																													
Signal state 1 (level-operated)	<p>When the new gear is engaged, the IS "Actual gear stage A to C" and "Gear changed" are enabled by the PLC user. This informs the NCK that the correct gear stage has been successfully engaged. The gear change is complete (spindle oscillation mode is deselected), the spindle accelerates in the new gear stage to the last programmed spindle speed and the next block in the part program can be executed.</p> <p>The actual gear stage is specified in coded format (ABC values). A parameter set is used for each of the 5 gear stages and is assigned as follows:</p> <table border="1"> <thead> <tr> <th>Parameter set no.</th> <th>VDI code</th> <th>Data in data set</th> <th>contents</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>-</td> <td>Data for axis mode</td> <td>Servo gain factor Monitoring functions</td> </tr> <tr> <td>1</td> <td>000 001</td> <td>Data for 1st gear stage</td> <td>M40 speed Min/max speed Acceleration etc.</td> </tr> <tr> <td>2</td> <td>010</td> <td>Data for 2nd gear stage</td> <td></td> </tr> <tr> <td>3</td> <td>011</td> <td>Data for 3rd gear stage</td> <td></td> </tr> <tr> <td>4</td> <td>100</td> <td>Data for 4th gear stage</td> <td></td> </tr> <tr> <td>5</td> <td>101 110 111</td> <td>Data for 5th gear stage</td> <td></td> </tr> </tbody> </table>			Parameter set no.	VDI code	Data in data set	contents	0	-	Data for axis mode	Servo gain factor Monitoring functions	1	000 001	Data for 1st gear stage	M40 speed Min/max speed Acceleration etc.	2	010	Data for 2nd gear stage		3	011	Data for 3rd gear stage		4	100	Data for 4th gear stage		5	101 110 111	Data for 5th gear stage	
Parameter set no.	VDI code	Data in data set	contents																												
0	-	Data for axis mode	Servo gain factor Monitoring functions																												
1	000 001	Data for 1st gear stage	M40 speed Min/max speed Acceleration etc.																												
2	010	Data for 2nd gear stage																													
3	011	Data for 3rd gear stage																													
4	100	Data for 4th gear stage																													
5	101 110 111	Data for 5th gear stage																													
Special cases, errors,	If the PLC user reports back to the NCK with a different actual gear stage than issued by the NCK as the set gear stage, the gear change is still treated as having been successfully completed and the actual gear stage A to C is activated.																														
Related to	IS "Set gear stage A" to "...C" (V390x 2000.0 to .2) IS "Change gear" (V390x 2000.3) IS "Gear changed" (V380x 2000.3) IS "Oscillation speed" (V380x 2002.5) Parameter sets (MD) for gear stages.																														
Note for the reader:	802D sl Description of Functions: S1																														

V380x 2000.3 Interface signal	Gear changed Signal(s) to axis/spindle (PLC -> NCK)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>When the new gear is engaged, the IS "Actual gear stage A to C" and "Gear changed" are enabled by the PLC user. This informs the NCK that the correct gear stage has been successfully engaged. The gear stage change is complete (spindle oscillation mode is deselected), the spindle accelerates in the new gear stage to the last programmed spindle speed and the next block in the part program can be executed. The IS "Change gear" is reset by the NCK, which causes the PLC user to reset the IS "Gear changed".</p>		
Signal state 0 or signal transition 1 ---> 0	No effect		
Signal irrelevant for	All spindle modes except oscillation mode		

Axis-/spindle-specific signals

Special cases, errors,	If the PLC user reports back to the NCK with a different actual gear stage than issued by the NCK as the set gear stage, the gear change is still treated as having been successfully completed and the actual gear stage A to C is activated.
Related to	IS "Actual gear stage A" to C" (V380x 2000.0 to .2) IS "Set gear stage A" to "...C" (V390x 2000.0 to .2) IS "Change gear" (V390x 2000.3) IS "Oscillation speed" (V380x 2002.5)
Note for the reader:	802D sl Description of Functions: S1

V380x 2001.0 Interface signal	Feedrate override for spindle valid (instead of spindle override) Signal(s) from axis/spindle (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The "Feedrate override" value (VB380x 0000) is used for the spindle instead of the "Spindle override" value.
Signal state 0 or signal transition 1 ---> 0	The "Spindle override" value is used.
Related to	IS "Spindle override" (VB380x 2003) IS "Feedrate override" (V380x 0000) IS "Override active" (V380x 0001.7)
Note for the reader:	802D sl Description of Functions: V1

V380x 2001.4 Interface signal	Resynchronize spindle during positioning 1 Signal(s) to axis/spindle (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1	The spindle must be resynchronized during positioning.
Signal state 0 or signal transition 1 ---> 0	No effect
Signal irrelevant for	All spindle modes except for positioning mode
Application example(s)	The spindle has an indirect measuring system and slipping may occur between the motor and the clamp. If the signal=1 when the positioning process is started, the old reference is deleted and the zero mark searched for again before the end position is approached.
Related to	"Referenced/synchronizing 1" interface signal (V390x 0000.4)
Note for the reader:	802D sl Description of Functions: S1

Axis-/spindle-specific signals

V380x 2001.6	Invert M3/M4
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The direction of rotation of the spindle motor changes with the following functions: <ul style="list-style-type: none"> • M3 • M4 • M5 • SPOS from movement; not active for SPOS from standstill.
Application example(s)	The machine has a selector switch for a vertical and horizontal spindle. The mechanical design incorporates one gear wheel more on the horizontal spindle than on the vertical spindle. The direction of rotation must therefore be changed on the vertical spindle if the spindle is always to rotate clockwise with M3.
Note for the reader:	802D sl Description of Functions: S1

V380x 2002.4	Oscillation via PLC
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)
Edge evaluation: yes	Signal(s) updated: cyclic Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	If the IS "Oscillation via PLC" is enabled , the IS "Oscillation speed" effects output of a speed only in conjunction with the IS "Direction of rotation setpoint counter-clockwise and clockwise". The oscillation, i.e. the continuous change of the direction of rotation, is performed by the PLC user with the IS "Direction of rotation setpoint counter-clockwise and clockwise" (oscillation via PLC).
Signal state 0 or signal transition 1 ---> 0	If the IS "Oscillation via PLC" is not enabled , the IS "Oscillation speed" triggers automatic oscillation on the NCK. The two times for the directions of rotation are entered in MD 35440: SPIND_OSCILL_TIME_CW (oscillation time for M3 direction) SPIND_OSCILL_TIME_CW (oscillation time for M3 direction) and MD 35450: SPIND_OSCILL_TIME_CCW (oscillation time for M4 direction).
Application example(s)	If the new gear stage cannot be engaged in spite of several attempts by the NCK, the system can be switched to oscillation via PLC. Both of the times can then be altered by the PLC user. This assures a reliable change of the gear stage, even with unfavorable gear wheel positions.
Related to	MD 35440: SPIND_OSCILL_TIME_CW (oscillation time for direction M3) MD 35450: SPIND_OSCILL_TIME_CCW (oscillation time for M4 direction) IS "Oscillation speed" (V380x 2002.5) IS "Set direction of rotation counterclockwise" (V380x 2002.7) IS "Set direction of rotation clockwise" (V380x 2002.6)
Note for the reader:	802D sl Description of Functions: S1

Axis-/spindle-specific signals

V380x 2002.5	Oscillation speed	
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>If the gear stage must be changed (IS "Change gear" (V390x 2000.3) is enabled), the spindle changes to oscillation mode.</p> <p>The spindle decelerates to a standstill with different acceleration levels, according to the point when the IS "Oscillation speed" (V380x 2002.5) was enabled:</p> <ol style="list-style-type: none"> 1. The IS "Oscillation speed" is enabled before the IS "Change gear" is enabled by the NCK. The spindle is brought to a standstill with the acceleration during oscillation (MD: SPIND_OSCILL_ACCEL). Once the spindle is stationary, oscillation is immediately initiated. 2. The IS "Oscillation speed" is enabled after the IS "Change gear" is enabled by the NCK and when the spindle is stationary. The position controller is disabled. The spindle decelerates with the deceleration rate in speed controlled mode. After the IS "Oscillation speed" is set, the spindle starts to oscillate with the oscillation acceleration (MD:SPIND_OSCILL_ACCEL). <p>If the IS "Oscillation via PLC" (V380x 2002.4) is not enabled, the IS "Oscillation speed" triggers automatic oscillation on the NCK. The two times for the directions of rotation are entered in MD: in SPIND_OSCILL_TIME_CW (oscillation time for M3 direction) and SPIND_OSCILL_TIME_CCW (oscillation time for M4 direction).</p> <p>If the IS "Oscillation via PLC" is enabled, the IS "Oscillation speed" effects output of a speed only in conjunction with the IS "Direction of rotation setpoint counter-clockwise and clockwise". The oscillation, i.e. the continuous change of the direction of rotation, is performed by the PLC user with the IS "Direction of rotation setpoint counter-clockwise and clockwise" (oscillation via PLC).</p>	
Signal state 0 or signal transition 1 ---> 0	The spindle does not oscillate.	
Signal irrelevant for	All spindle modes except oscillation mode	
Application example(s)	The oscillation speed is used to facilitate the engagement of a new gear stage.	
Related to	IS "Oscillation via the PLC" (V380x 2002.4) IS "Set direction of rotation counterclockwise" (V380x 2002.7) IS "Set direction of rotation clockwise" (V380x 2002.6)	
Note for the reader:	802D sl Description of Functions: S1	

V380x 2002.7 / .6	Setpoint direction of rotation, counter-clockwise/setpoint direction of rotation, clockwise		
Interface signal	Signal(s) to axis/spindle (PLC -> NCK)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	When the IS "Oscillation via PLC" is enabled, the two IS "Direction of rotation setpoint counterclockwise" and "Direction of rotation setpoint clockwise" can be used to set the direction of rotation for the oscillation speed. The times for the oscillation movement of the spindle motor are defined by enabling the IS "Direction of rotation setpoint counterclockwise and clockwise" for a corresponding length of time.		
Signal irrelevant for ...	All spindle modes except oscillation mode		
...			
Application example(s)	See IS "Oscillation via PLC"		
Special cases, errors,	<ul style="list-style-type: none"> • If both of the IS are enabled simultaneously, no oscillation speed is output. • If no IS are set, then an oscillation speed is not output. 		
Related to	IS "Oscillation via the PLC" (V380x 2002.4) IS "Oscillation speed" (V380x 2002.5)		
Note for the reader:	802D sl Description of Functions: S1		

Axis-/spindle-specific signals

VB380x 2003	Spindle override		
Interface signal	Signal(s) to spindle (PLC → NCK)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The spindle override is defined via the PLC in gray coding. The override value determines the percentage of the programmed speed setpoint that is issued to the spindle.</p> <p>Gray coding for spindle override</p>		
	Schalter-einstellung	Code	Spindelkorrekturfaktor
	1	00001	0.5
	2	00011	0.55
	3	00010	0.60
	4	00110	0.65
	5	00111	0.70
	6	00101	0.75
	7	00100	0.80
	8	01100	0.85
	9	01101	0.90
	10	01111	0.95
	11	01110	1.00
	12	01010	1.05
	13	01011	1.10
	14	01001	1.10
	15	01000	1.15
	16	11000	1.20
	17	11001	1.20
	18	11011	1.20
	19	11010	1.20
	20	11110	1.20
	21	11111	1.20
	22	11101	1.20
	23	11100	1.20
	24	10100	1.20
	25	10101	1.20
	26	10111	1.20
	27	10110	1.20
	28	10010	1.20
	29	10011	1.20
	30	10001	1.20
	31	10000	1.20
Related to	IS "Override active" (V380x 0001.7) IS "Feedrate override for spindle valid" (V380x 2001.0)		
Note for the reader:	802D sl Description of Functions: V1		

4.7.3 Signals from axis/spindle

V390x 0000.0	Spindle/no axis		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The machine axis is operated as a spindle in the following spindle modes:</p> <ul style="list-style-type: none"> • Control mode • Oscillation mode • Positioning mode • Thread drilling (tapping) without compensating chuck (rigid tapping) <p>The IS to axis (V380x 1000 to V380x 1003) and from axis (V390x 1000 to V390x 1003) are invalid.</p> <p>The IS to spindle (V380x 2000 to V380x 2003) and from spindle (V380x 2000 to V380x 2003) are valid.</p>		
Signal state 0 or signal transition 1 ---> 0	<p>The machine axis is operated as an axis</p> <p>The IS to axis (V380x 1000 to V380x 1003) and from axis (V390x 1000 to V390x 1003) are valid.</p> <p>The IS to spindle (V380x 2000 to V380x 2003) and from spindle (V380x 2000 to V380x 2003) are invalid.</p>		
Application examples	If a spindle is sometimes also used as a rotary axis on a machine tool (turning machine with spindle/C axis or milling machine with spindle/rotary axis for rigid tapping), the "Spindle/no axis" signal can be used to determine whether the machine axis is in axis mode or spindle mode.		
Note for the reader:	802D sl Description of Functions: S1		

V390x 0000.2	Encoder limit frequency exceeded 1		
Data block	Signal(s) from axis/spindle (NCK ---> PLC)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The axis velocity defined in MD 36300: ENC_FREQ_LIMIT (encoder limit frequency) has been exceeded.</p> <p>The reference point for the position measuring system concerned has been lost (IS: Referenced/synchronized is in signal state 0). Proper position closed loop control is no longer possible.</p> <p>The spindles continue to run with speed control.</p> <p>The axes are brought to a standstill with rapid stop (with open position control loop) along a speed setpoint ramp.</p>		
Signal state 0 or signal transition 1 ---> 0	<p>The axis velocity defined in MD 36300: ENC_FREQ_LIMIT is no longer exceeded.</p> <p>For the edge change 1 -->, the encoder frequency must have dropped below the setting in MD 36302: ENC_FREQ_LIMIT_LOW (% value of MD 36300: ENC_FREQ_LIMIT).</p>		
Note for the reader:	802D sl Description of Functions: A3		

Axis-/spindle-specific signals

V390x 0000.4 Interface signal	Referenced/synchronizing 1 Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation:	Signal(s) updated:	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>Axes:</p> <p>When, during a reference point approach, the machine axis has reached the reference point (incremental measurement systems) or target point (linear measuring system with distance-coded reference marks), the machine axis is deemed to have been referenced and the "referenced/synchronizing 1" interface signal (depending on which position measurement system is active during referencing) is enabled.</p> <p>Spindles:</p> <p>A spindle is synchronized (zero mark crossed or BERO responded) after Power On after one spindle revolution at the latest.</p>		
Signal state 0 or signal transition 1 ---> 0	The machine axis/spindle with position measurement system 1 is not referenced/synchronizing.		
Related to	"Position measuring system 1" interface signal (V380x 0000.5)		
Note for the reader:	802D sl Description of Functions: R1, S1		

V390x 0000.6 Data block	Position reached with exact stop coarse Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The axis is in the appropriate exact stop and no interpolator is active for the axis and</p> <ul style="list-style-type: none"> • The control system is in the Reset mode (Reset key or end of program). • The axis was last programmed as a positioning spindle. • The path movement was stopped with NC Stop. • The spindle is in position-controlled mode and is stationary. • The axis is switched from speed-controlled to position-controlled mode with IS "Position measuring system". 		
Signal state 0 or signal transition 1 ---> 0	<p>The axis is not in the appropriate exact stop or the interpolator is active for the axis or</p> <ul style="list-style-type: none"> • The path movement was stopped with NC Stop. • The spindle is in the speed-controlled mode. • "Parking mode" is active for the axis. • The axis is switched from the position-controlled to the speed-controlled mode with using the IS "Position measuring system". 		
Signal irrelevant for			
Related to	MD 36000: STOP_LIMIT_COARSE (exact stop coarse)		
Note for the reader:	802D sl Description of Functions: B1		

V390x 0000.7	Position reached with exact stop fine	
Data block	Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	See IS "Position reached with exact stop coarse"	
Signal state 0 or signal transition 1 ---> 0	See IS "Position reached with exact stop coarse"	
Signal irrelevant for	
Related to	MD 36010: STOP_LIMIT_FINE (exact stop fine)	
Note for the reader:	802D sl Description of Functions: B1	

V390x 0002.3	Measurement active	
Interface signal	Signal(s) from axis/spindle (NCK → PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The "Measuring" function is active. This displays the current measurement status of the axis (measuring block with this axis is running).	
Signal state 0 or signal transition 1 ---> 0	The "Measuring" function is not active.	
Note for the reader:	802D sl Description of Functions: M5	

V390x 0002.4	Activate travel to fixed end stop	
Interface signal	Signal(s) from axis/spindle (NCK ! PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The "Travel to fixed stop function" is active.	
Signal state 0 or signal transition 1 ---> 0	The "Travel to fixed stop function" is not active.	
Note for the reader:	802D sl Description of Functions: F1	

V390x 0002.5	Fixed stop reached	
Interface signal	Signal(s) from axis/spindle (NCK ! PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The fixed stop was reached after selection of the "FXS" function.	
Signal state 0 or signal transition 1 ---> 0	The fixed stop has still not been reached after selection of the "FXS" function.	
Note for the reader:	802D sl Description of Functions: F1	

Axis-/spindle-specific signals

V390x 0004.0 to .2 Interface signal	Handwheel active (1 to 3) Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>These PLC interface signals provide feedback whether the machine axis is assigned to handwheel 1, 2, 3 or no handwheel.</p> <p>Only one handwheel can be assigned to an axis at any one time.</p> <p>If several "Activate handwheel" interface signals are set, priority "Handwheel 1" before "Handwheel 2" before "Handwheel 3" applies.</p> <p>If the assignment is active, the machine axis can be traversed with the handwheel in JOG mode.</p>	
Signal state 0 or signal transition 1 ---> 0	Neither handwheel 1, 2 nor 3 is assigned to this geometry axis.	
Related to	IS "Activate handwheel" (V380x 0004.0 to .2) IS "Handwheel selected" from HMI (V1900 0003, ff)	
Note for the reader:	802D sl Description of Functions: H1	

V390x 0004.7 and .6 Interface signal	Plus and minus traverse keys Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	<p>A traverse movement of the axis is to be executed in one or the other direction. Depending on the mode selected, the command is triggered in different ways:</p> <ul style="list-style-type: none"> • JOG mode: with the plus or minus traverse key • REF submode: with the traverse key that takes the axis to the reference point • AUT/MDA mode: the program block containing a coordinate value for the axis in question is executed. 	
Signal state 0 or signal transition 1 ---> 0	<p>A travel command in the relevant axis direction has not been given or a traverse movement has been completed.</p> <p>JOG mode:</p> <ul style="list-style-type: none"> • Cancellation of traverse key. • While ending traversing with the handwheel. • REF submode: When the reference point is reached <p>AUT/MDA mode:</p> <ul style="list-style-type: none"> • The program block has been executed (and the next block does not contain any coordinate values for the axis in question) • Abort with "RESET", etc. • IS "Axis disable" is active 	
Application example(s)	<p>To release clamping of axes with clamping (e.g. on a rotary table).</p> <p>Note:</p> <p>If the clamping is not released until the travel command is given, these axes cannot be operated under continuous path control!</p>	
Related to	IS "Traverse key plus" and "Traverse key minus" (V380x 0004.7 and .6)	
Note for the reader:	802D sl Description of Functions: H1	

V390x 0005.0, ..., .6 Interface signal	Active machine function INC1, ..., continuous Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: no	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The PLC interface receives a signal stating which JOG mode machine function is active for the machine axes.	
Signal state 0 or signal transition 1 ---> 0	The machine function in question is not active.	
Related to	IS "Machine function INC1, ..., continuous" (V380x 0005.0, ..., .6)	
Note for the reader:	802D sl Description of Functions: H1	

V390x 2000.0 to .2 Interface signal	Set gear stage A to C Signal(s) from axis/spindle (NCK -> PLC)																	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:																
Signal state 1 or signal transition 0 ---> 1	<p>A gear stage can be defined as follows:</p> <ul style="list-style-type: none"> • Permanent definition in the part program (M41 to M45) • Automatic definition by the programmed spindle speed (M40) <p>M41 to M45:</p> <ul style="list-style-type: none"> • The gear stage can be permanently defined in the part program with M41 to M45. If the M41 to M45 commands select a gear stage which is not the same as the current (actual) gear stage, the IS "Change gear" and the IS "Set gear stage A to C" are enabled. <p>M40:</p> <ul style="list-style-type: none"> • M40 in the part program causes the gear stage to be selected automatically by the control. The control checks which gear stage is possible for the programmed spindle speed (S function). If a gear stage is identified that is not equal to the current (actual) gear stage, the "Change gear" and "Set gear stage A" to "...C" interface signals are set. <p>The set gear stage is output in coded format:</p> <table style="margin-left: 40px;"> <tr><td>1st gear stage</td><td>0 0 0 (C B A)</td></tr> <tr><td>1st gear stage</td><td>0 0 1</td></tr> <tr><td>2nd gear stage</td><td>0 1 0</td></tr> <tr><td>3rd gear stage</td><td>0 1 1</td></tr> <tr><td>4th gear stage</td><td>1 0 0</td></tr> <tr><td>5th gear stage</td><td>1 0 1</td></tr> <tr><td>Invalid value</td><td>1 1 0</td></tr> <tr><td>Invalid value</td><td>1 1 1</td></tr> </table>		1st gear stage	0 0 0 (C B A)	1st gear stage	0 0 1	2nd gear stage	0 1 0	3rd gear stage	0 1 1	4th gear stage	1 0 0	5th gear stage	1 0 1	Invalid value	1 1 0	Invalid value	1 1 1
1st gear stage	0 0 0 (C B A)																	
1st gear stage	0 0 1																	
2nd gear stage	0 1 0																	
3rd gear stage	0 1 1																	
4th gear stage	1 0 0																	
5th gear stage	1 0 1																	
Invalid value	1 1 0																	
Invalid value	1 1 1																	
Signal irrelevant for	Other spindle modes except oscillation mode																	
Related to	IS "Change gear" (V390x 2000.3) IS "Actual gear stage A" to "...C" (V380x 2000.0 to .2) IS "Gear changed" (V380x 2000.3)																	
Note for the reader:	802D sl Description of Functions: S1																	

Axis-/spindle-specific signals

V390x 2000.3	Change gear stage		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>A gear stage can be defined as follows:</p> <ul style="list-style-type: none"> • Permanent definition in the part program (M41 to M45) • Automatic definition by the programmed spindle speed (M40) <p>M41 to M45:</p> <ul style="list-style-type: none"> • The gear stage can be permanently defined in the part program with M41 to M45. If the M41 to M45 commands select a gear stage which is not the same as the current (actual) gear stage, the IS "Change gear" and the IS "Set gear stage A to C" are enabled. <p>M40:</p> <ul style="list-style-type: none"> • M40 in the part program causes the gear stage to be selected automatically by the control. The control checks which gear stage is possible for the programmed spindle speed (S function). If a gear stage is identified that is not equal to the current (actual) gear stage, the "Change gear" and "Set gear stage A" to "...C" interface signals are set. • While the signal = 1, the text "Wait for gear stage change" is displayed in the channel operating message". 		
Special cases, errors,	The IS "Change gear" is only enabled when a new gear stage is selected that is not equal to the current actual gear stage.		
Related to	IS "Set gear stage A" to C" (V390x 2000.0 to .2) IS "Actual gear stage A" to "...C" (V380x 2000.0 to .2) IS "Gear changed" (V380x 2000.3)		
Note for the reader:	802D sl Description of Functions: S1		

V390x 2001.0	Speed limit exceeded		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>If the actual speed exceeds the maximum spindle speed MD 35100: SPIND_VELO_LIMIT by more than the spindle speed tolerance MD 35150: SPIND_DES_VELO_TOL the IS "Speed limit exceeded" is enabled and alarm 22050 "Maximum speed reached" is output. All axes and spindles of the channel are brought to a standstill.</p>		
Related to	MD 35150: SPIND_DES_VELO_TOL (spindle speed tolerance) MD 35100: SPIND_VELO_LIMIT (maximum spindle speed) Alarm 22050 "Maximum speed reached"		
Note for the reader:	802D sl Description of Functions: S1		

Axis-/spindle-specific signals

V390x 2001.1 Interface signal	Setpoint speed limited (programmed speed too high) Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	If a spindle speed (rev/min) or a constant cutting speed (m/min or ft/min) is programmed, the value is exceeded one of the following limits: <ul style="list-style-type: none"> • Max. speed of specified gear stage • Maximum spindle speed • Speed limited by the PLC interface signal • Progr. Spindle speed limiting G26 • Progr. Spindle speed limiting for G96 The spindle speed is limited to the maximum limit.		
Signal state 0 or signal transition 1 ---> 0	If a spindle speed (1/min) or a constant cutting speed (m/min) or ft/min) is programmed, none of the limit values have been exceeded.		
Application example(s)	The IS "Setpoint speed limited" can be used to detect that the programmed speed cannot be achieved. The PLC user can recognize this condition as not permissible and block path feed, or he can block the path feed or the entire channel. IS "Spindle in set range" is processed.		
Note for the reader:	802D sl Description of Functions: S1		

V390x 2001.2 Interface signal	Setpoint speed increased (programmed speed too low) Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	If a spindle speed (rev/min) or a constant cutting speed (m/min or ft/min) is programmed, the value is below one of the following limits: <ul style="list-style-type: none"> • Minimum speed of the specified gear stage • Min. spindle speed • Speed limited by the PLC • Progr. Spindle speed limiting G25 • Progr. spindle speed limit for G96 The spindle speed is limited to the minimum limit.		
Signal state 0 or signal transition 1 ---> 0	If a spindle speed (1/min) or a constant cutting speed (m/min or ft/min) is programmed, the value has not fallen below any of the limits.		
Application example(s)	The IS "Setpoint speed increased" can be used to detect that the programmed speed cannot be achieved. The PLC user can recognize this condition as not permissible and block path feed, or he can block the path feed or the entire channel. IS "Spindle in set range" is processed.		
Note for the reader:	802D sl Description of Functions: S1		

Axis-/spindle-specific signals

V390x 2001.5 Interface signal	Spindle in setpoint range Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The IS "Spindle in setpoint range" reports whether the programmed, and possibly limited spindle speed has been reached. In the spindle "control mode", the speed setpoint (programmed speed + spindle override including limits) is compared with the actual speed. If the actual speed deviates from the set speed by less than the spindle speed tolerance in MD 35150: SPIND_DES_VELO_TOL, the IS "Spindle in setpoint range" is enabled.	
Signal state 0 or signal transition 1 ---> 0	The IS "Spindle in setpoint range" reports whether the spindle is still in the acceleration or braking phase. In the spindle control mode, the speed setpoint (programmed speed * spindle override) is compared with the actual value. If the actual speed deviates from the set speed by more than the spindle speed tolerance in SPIND_DES_VELO_TOL, the IS "Spindle in setpoint range" is reset.	
Signal irrelevant for	all spindle modes except for speed mode (control mode).	
Application example(s)	The path feed must generally be disabled when the spindle is in the acceleration phase (programmed speed setpoint not yet reached). This can be performed as follows: <ul style="list-style-type: none"> • The IS "Spindle in setpoint range" is evaluated and the IS "Feed disable" (V3200 0006.0) is enabled. • MD 35500: SPIND_ON_SPEED_AT_IPO_START (feed enable with spindle in setpoint range) is enabled and the NCK then internally evaluates whether the spindle is in the setpoint range. The path feed is only enabled if the spindle is within the setpoint range. The positioning axes are never stopped by this function. 	
Related to	MD 35500: SPIND_DES_VELO_TOL (spindle speed tolerance)	
Note for the reader:	802D sl Description of Functions: S1	

V390x 2001.7 Interface signal	Actual direction of rotation clockwise Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	When the spindle is rotating, "Actual direction of rotation clockwise" = 1 signals that the direction of rotation is CLOCKWISE. The actual direction of rotation is derived from the spindle position measurement encoder.	
Signal state 0 or signal transition 1 ---> 0	When the spindle is rotating, "Actual direction of rotation clockwise" = 0 signals that the direction of rotation is COUNTERCLOCKWISE.	
Signal irrelevant for	<ul style="list-style-type: none"> • Spindle stationary, IS "Axis/spindle stationary" = 1 (at standstill it is not possible to evaluate a direction of rotation) • Spindles without a position measuring encoder 	
Related to	IS "Spindle stationary" (V390x 0001.4)	
Note for the reader:	802D sl Description of Functions: S1	

Axis-/spindle-specific signals

V390x 2002.0	Constant cutting rate active		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	For programming G96 S... the constant cutting rate function is carried out. The S word is now the cutting value.		
Related to			
Note for the reader:	802D sl Description of Functions: S1		

V390x 2002.3	Rigid tapping active (no compensation)		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	<p>The spindle is running in the rigid tapping function [no compensating chuck] (thread interpolation G331/G332).</p> <p>The spindle speed is also programmed with S.... in rev/min for rigid tapping, however the direction of rotation is stored in the sign for the pitch.</p> <p>There is no specific interface signals such as:</p> <ul style="list-style-type: none"> IS "Spindle reset" IS "Synchronize spindle" IS "Invert M3/M4" IS "Spindle in setpoint range" IS "Programmable speed too high" 		
Application example(s)	<p>Certain functions should not be used during rigid tapping (no compensating chuck), such as:</p> <ul style="list-style-type: none"> • Reset IS "Controller enable" (V380x 0002.1) • IS "Set feed stop" (V380x 0004.3) • Reset • When activating the EMERGENCY STOP during rigid tapping, it should be remembered that the tool and workpiece are locked together. 		
Related to			
Note for the reader:	802D sl Description of Functions: S1		

V390x 2002.5	Active spindle positioning mode		
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)		
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:	
Signal state 1 or signal transition 0 ---> 1	When programming SPOS=..... the spindle is in positioning mode.		
Related to	<ul style="list-style-type: none"> IS "Active spindle mode control mode" (V390x 2002.7) IS "Active spindle mode oscillation mode" (V390x 2002.6) 		
Note for the reader:	802D sl Description of Functions: S1		

Axis-/spindle-specific signals

V390x 2002.6	Active spindle mode oscillation mode	
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The spindle is in oscillation mode if a new gear stage was defined using the automatic gear stage selection (M40) or M41 to M45 (IS "Change gear" is enabled). The IS "Change gear" is only enabled when a new gear stage is selected that is not equal to the current actual gear stage.	
Related to	IS "Active spindle mode control mode" (V390x 2002.7) IS "Active spindle mode positioning mode" (V390x 2002.5) IS "Change gear" (V390x 2000.3)	
Note for the reader:	802D sl Description of Functions: S1	

V390x 2002.7	Active spindle control mode	
Interface signal	Signal(s) from axis/spindle (NCK -> PLC)	
Edge evaluation: yes	Signal(s) updated: cyclic	Signal(s) valid from SW:
Signal state 1 or signal transition 0 ---> 1	The spindle is in control mode with the following functions: Spindle direction of rotation input M3/M4 or spindle stop M5	
Related to	IS "Active spindle mode oscillation mode" (V390x 2002.6) IS "Active spindle mode positioning mode" (V390x 2002.5)	
Note for the reader:	802D sl Description of Functions: S1	

V390x5004.2	Reciprocation reversal active	
Interface signal	Signal(s) from axis/spindle	
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	The braking phase after reciprocation reversal from external (DB31, ...DBX28.0) is active.	
Signal status 0 or signal transition 1 ---> 0	No braking after reciprocation reversal from external is active.	

V390x5004.3	Reciprocation cannot be started.	
Interface signal	Signal(s) from axis/spindle	
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	The reciprocating axis cannot be started; faulty programming. This state can also occur if the traversing motion has already been performed.	
Signal status 0 or signal transition 1 ---> 0	The reciprocating motion can be started.	

Axis-/spindle-specific signals

V390x5004.4 Interface signal	Error during the reciprocating motion Signal(s)		
Edge evaluation:	Signal(s) updated:	Signal(s) valid from SW release: 2.1	
Signal status 1 or signal transition 0 ---> 1	The reciprocating motion was canceled.		
Signal status 0 or signal transition 1 ---> 0	The reciprocating motion is performed without errors.		

V390x5004.5 Interface signal	Sparking-out active Signal(s) from axis/spindle		
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:	
Signal status 1 or signal transition 0 ---> 1	The axis performs sparking-out strokes.		
Signal status 0 or signal transition 1 ---> 0	The axis is currently not performing any sparking-out strokes.		
Related to	DBX100.7		

V390x5004.6 Interface signal	Reciprocating motion active Signal(s) from axis/spindle		
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:	
Signal status 1 or signal transition 0 ---> 1	The axis performs a reciprocating motion between 2 reversal points.		
Signal status 0 or signal transition 1 ---> 0	The axis is currently not reciprocating.		
Signal not relevant with	DBX100.7 = 0		
Related to	DBX100.7		

Axis-/spindle-specific signals

V390x5004.7 Interface signal	Reciprocation active Signal(s) from axis/spindle	
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	The axis is currently traversed as a reciprocating axis.	
Signal status 0 or signal transition 1 ---> 0	The axis is a positioning axis.	
Related to	DBX100.5, DBX100.6	

V390x5008.0 to .5 Interface signal	Active infeed axes Signal(s) from axis/spindle	
Edge evaluation: no	Signal(s) updated: cyclically	Signal(s) valid from SW release:
Signal status 1 or signal transition 0 ---> 1	The axis that issues the signal is currently the reciprocating axis and reports its active infeed axes (104.0 axis 1 is infeed axis, 104.1 axis 2 is infeed axis, etc.) in this field.	
Signal status 0 or signal transition 1 ---> 0	The appropriate axis is not an infeed axis.	
Related to	DBX100.7	

4.8 Tool management functions from NC channel

V5300 0000.0	Tool prewarning limit reached	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: yes	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1/ value	The prewarning limit for a tool to be monitored was reached. The T number is provided in VD5300 1000.	
Signal state 0	No prewarning limit reached	
Note for the reader:	802D sl Description of Functions: W1	

V5300 0000.1	Tool limit value reached	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: yes	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1/ value	The limit for a tool to be monitored was reached. The T number is provided in VD5300 1004.	
Signal state 0	Limit value reached	
Note for the reader:	802D sl Description of Functions: W1	

VD5300 1000	T number for tool prewarning limit	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: yes	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1/ value	The T number for which the tool prewarning limit is set is provided.	
Signal state 0	No tool number reported	
Note for the reader:	802D sl Description of Functions: W1	

VD5300 1004	T number for tool limit value	
Interface signal	Signal(s) from channel (NCK ---> PLC)	
Edge evaluation: yes	Signal(s) updated: Job controlled by NCK	Signal(s) valid from SW:
Signal state 1/ value	The T number for which the tool limit value is set is provided.	
Signal state 0	No tool number reported	
Note for the reader:	802D sl Description of Functions: W1	

PLC User Interface

5.1 Adressranges

Operand identifiers	Description	Area
V	Data	V0.0 to V79999999.7 (see below)
T	Timers	T0 to T15 (100 ms) T16 to T39 (10 ms)
C	Counters	C0 to C31
I	Figure: digital inputs	I0.0 to I17.7
Q	Figure: digital outputs	Q0.0 to Q11.7
M	Flag	M0.0 to M383.7
SM	Special flag	SM0.0 to SM 0.6 (see below)
O	ACCU (logic)	AC0, AC1 (UDword)
O	ACCU (arithmetic)	AC2, AC3 (Dword)

Structure of V-range addresses:

Type identifier (DB no.)	Range No. (channel and axis No.)	Subarea	Offset	addressing
10 (10-79)	00 (00-99)	0 (0-9)	000 (000-999)	symbolic (8-digit)

Special flag - SM bit definition (read-only):

SM bits	Description
SM0.0	Flag with defined ONE signal
SM0.1	Initial setting: first PLC cycle '1', following cycles '0'
SM0.2	Buffered data lost - only valid in first PLC cycle ('0' data ok, '1' data lost)
SM0.3	Power On: first PLC cycle '1', following cycles '0'
SM 0.4	60 s cycle (alternating '0' for 30 s, then '1' for 30 s)
SM 0.5	1 s cycle (alternating '0' for 0.5 s, then '1' for 0.5 s)
SM 0.6	PLC cycle (alternating one cycle '0', then one cycle '1')

Note

All empty fields in the user interface are "Reserved for Siemens" and must not be written in or evaluated!

Fields marked with "0" always receive the value "logical 0".

References to the description of the interface signals refer to the corresponding chapters of the description of functions and are specified by [F "Chapter number"].

Variable access rights:

[r] labels the range "read only" allowed

[r/w] labels the range "read/ write" allowed

additionally data format specification:

1: BIT

8: BYTE

16: INT/WORD

32: DINT/DWORD/REAL

Without data format specification: all named data formats are readable and writable.

5.2 User data

5.2.1 User data 1

1000 Data Block		Data 1 [r/w]						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1000 0000	User data							
up to								
1000 0011	User data							

5.2.2 User data 2

1100 Data Block		Data 2 [r/w]						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1100 0000	User data							
up to								
1100 0007	User data							

5.2.3 Signals from MCP (connected to the MCPA module)

1000 Data block		Data 1 [r/w]						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1000 1000	Key 8 JOG	Key 7 Var. INC	Key 6 User key 6	Key 5 User key 5	Key 4 User key 4	Key 3 User key 3	Key 2 User key 2	Key 1 User key 1
1000 1001	Key 16 4th axis -	Key 15 Spindle left	Key 14 Spindle STOP	Key 13 Spindle CW	Key 12 MDA	Key 11 Single block	Key 10 AUTO	Key 9 LOG REF
1000 1002	Key 24 4th axis +	Key 23 1st axis -	Key 22 2nd axis -	Key 21 3rd axis +	Key 20 Rapid traverse override	Key 19 3rd axis -	Key 18 2nd axis +	Key 18 1st axis +
1000 1003						Key 27 START	Key 26 STOP	Key 25 RESET
1000 1004				Feedrate override switch				
				E	D	C	B	A
1000 1005				Spindle override switch				
				E	D	C	B	A

User data

5.2.4 Signals to MCP (connected to the MCPA module)

1000		Data 1 [r/w]						
Data block								
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1100 1000			LED 6	LED 5	LED 4	LED 3	LED 2	LED 1

5.2.5 Reading/writing NC data: Job [F20.6]

1200		NC data l/s [r/w]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1200 0000						PI services	Write variable	Start
1200 0001	Number variable index PI							

1200 ... 1207		NC data l/s [r/w]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
120x1000	Variable index							
120x1001	Area number							
120x1002	Line index for the NCK variable x (WORD)							
120x1004	Column index for the NCK variable x (WORD)							
120x1006								
120x1008	Writing: Data to NCK variable x (data type of the variables: 1...4 bytes)							

5.2.6 Read/write NC data: Result [F20.6]

1200		NC data l/s [r/w]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1200 2000							Error in job	Request completed
1200 2001								
1200 2002								

1200 ... 1207		NC data I/s [r/w]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
120x3000								Invalid variable
120x3001	Access result							
120x3002								
120x3004	Reading: Data from NCK variable x (data type of the variables: 1...4 bytes)							

Access result:

0	No error
3	Illegal access to object
5	Invalid address
10	Object does not exist

5.3 Retentive data area

1400		Retentive data [r/w]						
Data Block								
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1400 0000	User data							
up to								
1400 0383	User data							

5.4 User alarm

Note:

Information on PLC alarms, including configuring user alarms, can be found in:

References:

Operating Instructions”, Chapter “PLC alarms”

5.4.1 User alarm: Activation

1600		Activating alarm [r/w]						
Data Block		PLC interface -----> HMI						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1600 0000	700007	700006	700005	700004	700003	700002	700001	700000
Activation of alarm no.								
1600 0001	700015	700014	700013	700012	700011	700010	700009	700008
Activation of alarm no.								
1600 0002	700023	700022	700021	700020	700019	700018	700017	700016
Activation of alarm no.								
1600 0003	700031	700030	700029	700028	700027	700026	700025	700024
Activation of alarm no.								
1600 0004	700039	700038	700037	700036	700035	700034	700033	700032
Activation of alarm no.								
1600 0005	700047	700046	700045	700044	700043	700042	700041	700040
Activation of alarm no.								
1600 0006	700055	700054	700053	700052	700051	700050	700049	700048
Activation of alarm no.								
1600 0007	700063	700062	700061	700060	700059	700058	700057	700056
Activation of alarm no.								

1600 0008	700071	700070	700069	700068	700067	700066	700065	700064
Activation of alarm no.								
1600 0009	700079	700078	700077	700076	700075	700074	700073	700072
Activation of alarm no.								
1600 0010	700087	700086	700085	700084	700083	700082	700081	700080
Activation of alarm no.								
1600 0011	700095	700094	700093	700092	700091	700090	700089	700088
Activation of alarm no.								
1600 0012	700103	700102	700101	700100	700099	700098	700097	700096
Activation of alarm no.								
1600 0013	700111	700110	700109	700108	700107	700106	700105	700104
Activation of alarm no.								
1600 0014	700119	700118	700117	700116	700115	700114	700113	700112
Activation of alarm no.								
1600 0015	700127	700126	700125	700124	700123	700122	700121	700120
Activation of alarm no.								

5.4.2 Variable for alarm

1600		Variable for alarm [r32/w32]						
Data Block		PLC interface -----> HMI						
Start byte								
1600 1000		Variable for alarm 700000 (4 bytes)						
1600 1004		Variable for alarm 700001 (4 bytes)						
1600 1008		Variable for alarm 700002 (4 bytes)						
...		...						
1600 1244		Variable for alarm 700125 (4 bytes)						
1600 1248		Variable for alarm 700126 (4 bytes)						
1600 1252		Variable for alarm 700127 (4 bytes)						

5.4.3 Active alarm reaction

1600		Active alarm reaction [r]						
Data Block		PLC interface -----> HMI						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1600 2000				PLC STOP	EMERGE NCY STOP	Feed disable on all axes	READ-in disable	NC start disable
1600 2001								
1600 2002								
1600 2003								

5.5 Signals from/to HMI

5.5.1 Program control signals from HMI (retentive area)

1700 Data Block		HMI signals [r] HMI interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1700 0000		Test run feedrate selected [F-K1]	M01 selected [F-K1]		DRF selected			
1700 0001	Program test selected [F-K1]				Feedrate override for rapid traverse selected [[F-K1] [F-V1]			
1700 0002	Skip block 7 selected [F-K1]	Skip block 6 selected [F-K1]	Skip block 5 selected [F-K1]	Skip block 4 selected [F-K1]	Skip block 3 selected [F-K1]	Skip block 2 selected [F-K1]	Skip block 1 selected [F-K1]	Skip block 0 selected [F-K1]
1700 0003	Measuring in JOG active [F-M5]	Measure value calculation not finished					Skip block 9 selected [F-K1]	Skip block 8 selected [F-K1]

5.5.2 Program selection from PLC (retentive area)

1700 Data Block		HMI signals [r/w] PLC interface -----> HMI						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1700 1000	Program selection from PLC: Program number [F-A2]							
1700 1001	Command job from PLC: Command [F-A2]							
1700 1002 to 1700 1003								

5.5.3 Checkback signal Program selection from HMI (retentive area)

1700 Data Block		HMI signals [r] HMI interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1700 2000							Error Program selection [F-A2]	Program selected [F-A2]

1700 2001							Error Command execution [F-A2]	Execute command [F-A2]
1700 2002 to 1700 2003								

5.5.4 Signals from HMI

1800 Data Block		HMI signals [r] HMI interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1800 0000	Reset	Start measuring in JOG [F-M5]		Mode group change over disable [F-M5]		JOG mode [[F-M5]	MDA mode [F-M5]	AUTO mode [F-M5]
1800 0001						Machine function REF [F-M5]		Machine function TEACH IN [F-M5]

5.5.5 Signals from PLC

1800 Data Block		Signals from PLC [r] PLC interface						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1800 1000	MCPA exists						up with saved data [F-A2]	up with default values [F-A2]
1800 1001								
1800 1002								
1800 1003								

5.5.6 Signals from operator panel (retentive area)

1900		HMI signals [r/w]						
Data Block		HMI interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1900 0000		Simulation active [F-K1]						
1900 0001								
1900 0002								
1900 0003								

5.5.7 General selection/status signals from HMI (retentive area)

1900		HMI signals [r]						
Data Block		HMI interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1900 1000								
1900 1001								
1900 1002								
1900 1003	Machine axis [F-H1]	Axis number for handwheel 1						
						C [F-H1]	B [F-H1]	A [F-H1]
1900 1004	Machine axis [F-H1]	Axis number for handwheel 2						
						C [F-H1]	B [F-H1]]	A [F-H1]
1900 1005								
1900 1006								
1900 1007								

5.5.8 General selection/status signals to HMI (retentive area)

1900		Signals to operator panel [r/w]						
Data Block		PLC interface -----> HMI						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1900 5000						OP key disable [F-A2]		
1900 5001								Update tool list [F-W1]
1900 5002								Enable tool measuring in JOG [F-M5]
1900 5003								
1900 5004 ... 1900 5007	T number for tool measuring in JOG (DINT) [F-M5]							

5.6 Auxiliary function transfer from NC channel

2500		Auxiliary functions from NCK channel[r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 0000 up to 2500 0003								
2500 0004				M fcts. 5 Change [F-H2]	M fcts. 4 Change [F-H2]	M fcts. 3 Change [F-H2]	M fcts. 2 Change [F-H2]	M fcts. 1 Change [F-H2]
2500 0005								
2500 0006								S fcts. 1 change [F-H2]
2500 0007								
2500 0008								T function 1 change [F-H2]
2500 0009								
2500 0010								D function 1 change [F-H2]
2500 0011								
2500 0012						H fcts. 3 change [F-H2]	H fcts. 2 change [F-H2]	H fcts. 1 change [F-H2]
2500 0013 up to 2500 0019								

5.6.1 Decoded M signals: (M0 - M99)

2500		M functions from NCK channel[r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 1000	M7	M6	M5	M4	M3	M2	M1	M0
2500 1001	M15	M14	M13	M12	M11	M10	M9	M8
2500 1002	M23	M22	M21	M20	M19	M18	M17	M16
				...				
2500 1012					M99	M98	M97	M96
2500 1013 up to 2500 1015								

Remarks:

The signals are output for the duration of a PLC cycle.

Static M functions must be created from dynamic M functions by the PLC user himself / herself.

Dynamic M functions are decoded by the basic program (M00 to M99).

5.6.2 Transferred T functions

2500		T functions from NCK channel[r]						
Data Block		NCK interface -----> PLC						
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 2000	T function 1 (DINT) [F-H2]							
2500 2004 to 2500 2007								

5.6.3 Transferred M functions

2500		M functions from NCK channel[r]						
Data Block		NCK interface -----> PLC						
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 3000	M function 1 (DINT) [F-H2]							
2500 3004	Extended address of M function 1 (byte)							
2500 3008	M function 2 (DINT) [F-H2]							
2500 3012	Extended address of M function 2 (byte)							
2500 3016	M function 3 (DINT) [F-H2]							
2500 3020	Extended address of M function 3 (byte)							
2500 3024	M function 4 (DINT) [F-H2]							
2500 3028	Extended address of M function 4 (byte)							
2500 3032	M function 5 (DINT) [F-H2]							
2500 3036	Extended address of M function 5 (byte)							

5.6.4 Transferred S functions

2500		S functions from NCK channel[r]						
Data Block		NCK interface -----> PLC						
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 4000	S function 1 (REAL) [F-H2]							
2500 4004	Extended address of S function 1 (byte)							
2500 4008	S function 2 (REAL) [F-H2]							
2500 4012	Extended address of S function 2 (byte)							
2500 4016								
2500 4020								

NCK signals

5.6.5 Transferred D functions

2500	D functions from NCK channel[r]							
Data Block	NCK interface -----> PLC							
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 5000	D function 1 (DINT) [F-H2]							
2500 5004								

5.6.6 Transferred H functions

2500	H functions from NCK channel[r]							
Data Block	NCK interface -----> PLC							
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2500 6000	H function 1 (REAL) [F-H2]							
2500 6004	Extended address for H function 1 (INT) [F-H2]							
2500 6008	H function 2 (REAL)							
2500 6012	Extended address for H function 2 (INT) [F-H2]							
2500 6016	H function 3 (REAL) [F-H2]							
2500 6020	Extended address for H function 3 (INT) [F-H2]							

5.7 NCK signals

5.7.1 General signals to NCK

2600	General signals to NCK [r/w]								
Data Block	PLC interface -----> NCK								
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
2600 0000	Protection level [F-A2]					Acknowledge EMERGENCY STOP [F-N2]	EMERGENCY STOP [F-N2]	Braking at contour in case of EMERGENCY STOP [F-N2]	
	4	5	6	7					
2600 0001						Request axis distances- to-go [F-H1]	Request axis actual values [F-H1]	INC inputs in mode group range active 1) [F-H1]	
2600 0002									
2600 0003									

Remarks:

- 1) see operating mode signals

5.7.2 General signals from NCK

2700		General signals from NCK [r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2700 0000							EMERGE NCY STOP active [F-N2]	
2700 0001	INCH dimension system [F-G2]						Probe 2 actuated [F-M5]	Probe 1 actuated [F-M5]
2700 0002		Drive ready [F-A2]	Drives in cyclical operation [F-A2]					
2700 0003		Air tempe- rature alarm [F-A2]						NCK alarm is active [F-A2]
2700 0004	Software cam MINUS 7	Software cam MINUS 6	Software cam MINUS 5	Software cam MINUS 4	Software cam MINUS 3	Software cam MINUS 2	Software cam MINUS 1	Software cam MINUS 0
2700 0005								
2700 0006								
2700 0007								
2700 0008	Software cam PLUS 7	Software cam PLUS 6	Software cam PLUS 5	Software cam PLUS 4	Software cam PLUS 3	Software cam PLUS 2	Software cam PLUS 1	Software cam PLUS 0
2700 0009								
2700 0010								
2700 0011								
2700 0012	Modification counter for motions of handwheel 1							
2700 0013	Modification counter for motions of handwheel 2							
2700 0014								
2700 0015	Modification counter, inch/metricunit system							
2700 0016								
2700 0017								
2700 0018								
2700 0019								

NCK signals

5.7.3 Signals to fast inputs and outputs

2800		Signals to fast inputs and outputs [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2800 0000	Disable digital NCK inputs							
	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
2800 0001	Values from the PLC for the NCK inputs							
	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
2800 0004	Disable digital NCK outputs							
	Output 8	Output 7	Output 6	Output 5	Output 4	Output 3	Output 2	Output 1
2800 0005	Overwrite screenform for digital NCK outputs							
	Output 8	Output 7	Output 6	Output 5	Output 4	Output 3	Output 2	Output 1
2800 0006	Value from the PLC for the digital NCK outputs							
	Output 8	Output 7	Output 6	Output 5	Output 4	Output 3	Output 2	Output 1
2800 0007	Setpoint screenform for the NCK outputs							
	Output 8	Output 7	Output 6	Output 5	Output 4	Output 3	Output 2	Output 1

2800		Signals to fast inputs and outputs [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2800 1000	Disable external digital NCK inputs							
	Input 16	Input 15	Input 14	Input 13	Input 12	Input 11	Input 10	Input 9
2800 1001	Values from the PLC for the external NCK inputs							
	Input 16	Input 15	Input 14	Input 13	Input 12	Input 11	Input 10	Input 9
2800 1008	Disable external digital NCK outputs							
	Output 16	Output 15	Output 14	Output 13	Output 12	Output 11	Output 10	Output 9
2800 1009	Overwrite screenform for the external digital NCK outputs							
	Output 16	Output 15	Output 14	Output 13	Output 12	Output 11	Output 10	Output 9
2800 1010	Value from the PLC for the external digital NCK outputs							
	Output 16	Output 15	Output 14	Output 13	Output 12	Output 11	Output 10	Output 9
2800 1011	Setpoint screenform for the external digital NCK outputs							
	Output 16	Output 15	Output 14	Output 13	Output 12	Output 11	Output 10	Output 9

5.7.4 Signal from fast inputs and outputs

2900		Signals from fast inputs and outputs [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2800 0000	Actual values of the digital NCK inputs							
	Input 8	Input 7	Input 6	Input 5	Input 4	Input 3	Input 2	Input 1
2900 0004	Setpoints of the digital NCK outputs							
	Output 8	Output 7	Output 6	Output 5	Output 4	Output 3	Output 2	Output 1

2900		Signals to fast inputs and outputs [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2900 1000	Actual values of the external digital NCK inputs							
	Input 16	Input 15	Input 14	Input 13	Input 12	Input 11	Input 10	Input 9
2900 1004	NCK setpoint for the external digital NCK outputs							
	Output 16	Output 15	Output 14	Output 13	Output 12	Output 11	Output 10	Output 9

5.7.5 Operating mode signals

3000		Operating mode signals to NCK [r/w]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3000 0000	Reset [F-K1]			Mode group changeover disable [F-K1]		Operating mode		
						JOG [F-K1]	MDI [F-K1]	AUTOM. [F-K1]
3000 0001						Machine function		
						REF [F-K1]		Teach In [F-K1]
3000 0002	Machine function ¹⁾ [F-H1]							
		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3000 0003								

Remarks:

Machine function in order to use machine function signals in VB3000 0002, signal "INC inputs in mode group range active" (V2600 0001.0) must be set to "1"
Machine function INC10 000 is not supported by all machine control panels.

NCK signals

3100		Operating mode signals to NCK [r]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3100 0000					802- READY [F-K1]	JOG [F-K1]	MDI [F-K1]	AUTOM. [F-K1]
3000 0001						Active machine function		Teach In [F-K1]
3000 0002		Continuous traversing active	var. INC active	10 000 INC active	1000 INC active	100 INC active	10 INC active	1 INC active
3000 0003								

5.8 Channel Signals

5.8.1 Signals to NC channel

Control signals to NC channel

3200		Signals to NCK channel [r/w]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3200 0000		Activate dry run feed [F-V1]	M01 Activate [F-K1]	Single block ⁴⁾ Activate [F-K1]	DRF Activate	Forward travel Activate	Reverse travel Activate	
3200 0001	Activate program test [F-K1]						Enable protection zones [F-N4]	Activate referencing [F-R1]
3200 0002	Activate "Skip block 7"	Activate "Skip block 6"	Activate "Skip block 5"	Activate "Skip block 4"	Activate "Skip block 3"	Activate "Skip block 2"	Activate "Skip block 1"	Activate "Skip block 0" [F-K1]
3200 0003	Nibbling and punching							
			Stroke initiated manually 2 [F-N4]	Delayed stroke [F-N4]	Stroke does not run [F-N4]	Stroke suppressed [F-N4]	Stroke initiated manually [F-N4]	Stroke disable [F-N4]
3200 0004	Feedrate override ²⁾ [F-V1]							
	H	G	F	E	D	C	B	O
3200 0005	Rapid traverse override ³⁾ [F-V1]							
	H	G	F	E	D	C	B	O
3200 0006	Feedrate override ¹⁾ active [F-V1]	Rapid traverse override active [F-V1]	Limited path velocity	Program level abort [F-K1]	Delete number of subroutine cycles [F-K1]	Delete distance to-go [F-A2]	Read-in disable [F-K1]	Feedrate disable [F-V1]
3200 0007			Suppress Start Lock	NC stop axes plus spindle [F-K1]	NC stop [F-K1]	NC Stop at block limit [F-K1]	NC Start [F-K1]	NC Start disable [F-K1]
3200 0008	Activate machine-related protection zone [F-H1]							
	Area 8	Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1
3200 0009	Activate machine-related protection zone							
							Area 10	Area 9
3200 0010	Activate channel-specific protection zone							
	Area 8	Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1
3200 0011	Activate channel-specific protection zone							
							Area 10	Area 9
3200 0012								

Channel Signals

3200 0013	Do not disable tool [F-W1]		Deactivate workpiece counter [F-W1]	Activatd PTP drive				
3200 0014						Activate contour handwheel (bit-/binary-coded)		
	No tool change commands	JOG of cycle mode	Activate associated M01	Neg. direction for sim. contour handwheel	Sim. contour handwheel ON		Handwheel 2	Handwheel 1
3200 0015	Activate "Skip block 9"	Activate "Skip block 8"						

Remarks:

- 1)+ Feedrate override activeEven if the feedrate override is not active, (=100%) the 0% position still functions.
- 2)+ Feedrate override31 positions (Gray code)
- 3)+ Rapid override31 positions (Gray code)
- 4)'s Guide")

Control signals to geometry axes (axes in WCS)

3200		Signals to NCK channel [r/w]						
Data Block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Geometry axis 1 (axis 1 in WCS)								
3200 1000	Traversing keys		Rapid traverse override [F-H1]	Traversing key lock [F-H1]	Feedrate stop [F-V1]	Activate handwheel		
	+	-					2	1
	[F-H1]	[F-H1]					[F-H1]	[F-H1]
Geometry axis 1 (axis 1 in WCS) Machine function ¹⁾ [F-H1]								
3200 1001		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3200 1002								
3200 1003								
Geometry axis 2 (axis 2 in WCS)								
3200 1004	Traversing keys		Rapid traverse override [F-H1]	Traversing key lock [F-H1]	Feedrate stop [F-H1]	Activate handwheel		
	+	-					2	1
	[F-H1]	[F-H1]					[F-H1]	[F-H1]
Geometry axis 2 (axis 2 in WCS) Machine function ¹⁾ [F-H1]								
3200 1005		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3200 1006								
3200 1007								
Geometry axis 3 (axis 3 in WCS)								
3200 1008	Traversing keys		Rapid traverse override [F-H1]	Traversing key lock [F-H1]	Feedrate stop [F-H1]	Activate handwheel		
	+	-					2	1
	[F-H1]	[F-H1]					[F-H1]	[F-H1]
Geometry axis 3 (axis 3 in WCS) Machine function ¹⁾ [F-H1]								
3200 1009		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3200 1010								
3200 1011								

Remarks:1)

Machine function specification of machine function in VB3200 1001, VB3200 1005, VB3200 1009, only if signal "INC inputs in mode group range active" (V2600 0001.0) is not set. Machine function INC10 000 is not supported by all machine control panels.

2) Representation of the handwheel number depending on machine data \$MD_HANDWH_VDI_REPRESENTATION (= 0) in bit or (= 1) binary code.

Channel Signals

5.8.2 Signals from NC channel

Status signals from NC channel

3300 Data Block		Signals from NCK channel [r] NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3300 0000		Last action block active [F-K1]	M0/M1 active [F-K1]	Approach block active [F-K1]	Action block active [F-K1]	Forward travel active [F-K1]	Reverse travel active [F-K1]	Program execution from ext. active
3300 0001	Program test active [F-K1]	Transform. active [F-M1]	M2 / M30 active [F-K1]	Block search active [F-K1]	Handwheel override active	Rev. feedrate active [F-V1]		Referencing active [F-R1]
3300 0002								
	Channel status			Program status				
3300 0003	Reset [F-K1]	– upted [F-K1]	active [F-K1]	Aborted [F-K1]	– upted [F-K1]	Stopped [F-K1]		Running [F-K1]
3300 0004	NCK alarm with processing stop present [F-A2]	specific NCK alarm is active [F-A2]			all axes stationary [F-B1]	all axes referenced [F-R1]	Stop request	Start request
3300 0005						Contour handwheel active (bit-/binary-coded)		
						Handwheel 12	Handwheel 1	
3300 0006	Nibbling and punching						Acknowl. of manual stroke initiation [F-N4]	Stroke initiation [F-N4]
3300 0007								Protection zones no longer guaranteed
3300 0008	Machine-related protection zones preactivated							
		Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1
3300 0009	Machine-related protection zones preactivated							
							Area 10	Area 9
3300 0010	Channel-specific protection zones preactivated							
		Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1
3300 0011	Channel-specific protection zones preactivated							
							Area 10	Area 9
3300 0012	Machine-related protection zones violated							
		Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1
3300 0013	Machine-related protection zones violated							
							Area 10	Area 9
3300 0014	Channel-specific protection zones violated							
		Area 7	Area 6	Area 5	Area 4	Area 3	Area 2	Area 1

3300 0015	Channel-specific protection zones violated						Area 10	Area 9
-----------	--	--	--	--	--	--	---------	--------

Status signals to geometry axes (axes in WCS)

3300		Signals from NCK channel [r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Geometry axis 1 (axis 1 in WCS)								
3300 1000	Motion command plus [F-H1] minus [F-H1]		Travel request plus [F-H1] minus [F-H1]				Handwheel active 2 [F-H1] 1 [F-H1]	
3300 1001	Active machine function [F-H1]							
		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3300 1002								
3300 1003								
Geometry axis 2 (axis 2 in WCS)								
3300 1004	Motion command plus [F-H1] minus [F-H1]		Travel request plus [F-H1] minus [F-H1]				Handwheel active 2 [F-H1] 1 [F-H1]	
3300 1005	Active machine function [F-H1]							
		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3300 1006								
3300 1007								
Geometry axis 3 (axis 3 in WCS)								
3300 1008	Motion command plus [F-H1] minus [F-H1]		Travel request plus [F-H1] minus [F-H1]				Handwheel active 2 [F-H1] 1 [F-H1]	
3300 1009	Active machine function [F-H1]							
		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
3300 1010								
3300 1011								

Further status signals from the NC channel

3300		Signals from NCK channel [r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3300 4000								G00 active
3300 4001				Travel request for drive test present			Workpiece setpoint reached [F-K1]	External language mode active [F-A2]
3300 4002				STOP DELAY				

Channel Signals

3300 4003	No tool change commands	DELAY FST SUPPRESS		DELAY FST				
3300 4004								
3300 4005		JOG of cycle mode active						

G functions from NC channel

3500		Signals from NCK channel [r]						
Data Block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
3500 0000	Active G function of group 1							
3500 0001	Active G function of group 2							
3500 00..	Active G function of group ...							
3500 0063	Active G function of group 64							

Note:

With SINUMERIK 802D, G group 2 is transferred in VB3500 0001 with values
 0: - no group 2 G command is active,
 1: G4, 2: G63, 3: G74, 4: G75, 11: G147, 12: G247,
 13: G347, 14: G148, 15: G248, 16: G348 (other values: not available
 in SINUMERIK 802D)

Other settings are possible with MD 22510: see Section 21.3
 When the NC program terminates or is aborted, the last status of the groups is retained.
 The meaning of the G commands is explained in

References:

“Operation and Programming”, Section “Overview of instructions”

Note:

synchronous connection between the active NC block and the applied G codes at any given time. The connection does not exist, for instance, if temporally short blocks are used with continuous path mode (G64).

5.9 Axis/spindle signals

5.9.1 Transferred M/S functions, axis-specific

3700 ... 3704		M/S functions [r]						
Data block		PLC interface -----> NCK						
Start byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
370x 0000	M function for spindle (DINT) [F-S1]							
370x 0004	S function for spindle (REAL) [F-S1]							

5.9.2 Signals to axis/spindle

Common signals to axis/spindle

3800 ... 3804		Signals to axis/spindle [r/w]						
Data block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
380x 0000	Feedrate override [F-V1]							
	H	G	F	E	D	C	B	A
380x 0001	Override active [F-V1]		Position measuring system 1 [F-A2]	Follow-up mode [F-A2]	Axis/spindle disable [F-A2]	Sensor for fixed stop [F-F1]	Acknowledge fixed stop reached [F-F1]	
380x 0002					Clamping in progress [F-A3]	Distance-to-go/spindle reset [F-S1]	Controller enable [F-A2]	Cam activation
380x 0003	Axis/spindle enable program test [F-K1]	Velocity/spindle speed limiting [F-A3]					Enable approach to fixed stop [F-F1]	
380x 0004	Traversing keys		Rapid traverse override [F-H1]	Traversing key lock [F-H1]	Feedrate stop Spindle stop [F-V1]	Activate handwheel		
	plus [F-H1]	minus [F-H1]					2 [F-H1]	1 [F-H1]
380x 0005	Machine function ¹⁾ [F-H1]							
		Continuous traversal	INCvar	INC10 000	INC1000	INC100	INC10	INC1
380x 0006 up to 380x 0011								

Axis/spindle signals

Remarks:

1) Machine function Specification of machine function in VB380x 0005, only if signal "INC inputs in modegroup range active" (V2600 0001.0) is not set. Machine function INC10 000 is not supported by all machine control panels.

Signals to axis

3800 ... 3805		Signals to axis [r/w]							
Data block		PLC interface -----> NCK							
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
380x 1000 (axis)	Delay. Ref. pt. approach [F-R1]			Modulo Limit Enabled	2nd software limit switch		Hardware limit switch		
					plus [F-A3]	minus [F-A3]	plus [F-A3]	minus [F-A3]	
380x 1001					JOG to position [F-H1]	JOG fixed- point approach 2 [F-H1]	JOG fixed- point approach 1 [F-H1]	JOG fixed- point approach 0 [F-H1]	
380x 1002									
380x 1003									
380x 1004									
380x 1005									

Explanation:

The signals IC, DC, ACP, ACN may be effective only alternatively or none at all. If none of the signals is set, AC (Absolute Coordinate) will become effective.

Signals to spindle

3800 ... 3805		Signals to spindle [r/w]						
Data block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
380x 2000 (Spindle)	Clear S value	Spindle: No speed monitoring when switching the gear stage; resynchrone 2	Spindle: Resynchrone 2	Spindle: Resynchrone 1	Gear changed [F-S1]	Actual gear stage		
						C [F-S1]	B [F-S1]	A [F-S1]
380x 2001 (spindle)		Invert M3/M4 [F-S1]		Resynchrone spindle during positioning 1 [F-S1]				Feedrate override valid for spindle [F-V1]
380x 2002 (Spindle)	Setpoint direction of rotation		Oscillation speed [F-S1]	Oscillation via PLC [F-S1]				
	Left [F-S1]	Right [F-S1]						
380x 2003 (Spindle)	Spindle override [F-V1]							
	H	G	F	E	D	C	B	A

Signals to PLC axis

3800 ... 3805		Signals to PLC axis [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
380x 3000	Start positioning axis							
380x 3001								
380x 3002						Traversing dimension: Inch (not metric)	G function: Shortest path (DC)	G function: incremental (IC)
380x 3003	Indexing position						G function: Abs. pos. direction (ACP)	G function: Abs. neg. direction (ACN)
380x 3004	Position (REAL, with indexing axis: DWORD)							
380x 3005								
380x 3006								
380x 3007								

Axis/spindle signals

380x 3008	Feedrate (REAL), if = 0, value is taken from machine data POS_AX_VELO
380x 3009	
380x 3010	
380x 3011	

Signals to drive

3800 ... 3805		Signals to axis/spindle [r/w]						
Data block		PLC interface -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
380x 4000			Speed setpoint smoothing					
380x 4001	Pulse enable [F-A2]	Speed controller integrator disable [F-A2]				Parameter set selection [F-A2]		
						C	B	A
380x 4002								
380x 4003								

Signals to technology functions

3800 ... 3805		Signals to axis/spindle [r/w]						
Data block		Interface PLC -----> NCK						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
380x 5000	Master/Slave on [F-T3]			Torque compensatory controller on [F-T3]				
380x 5001								
380x 5002								
380x 5003	Stop HIAxMove	Stop Corr	Stop DEPBCS	Stop DEPMCS	Resume HIAxMove	Resume Corr	Resume DEPBCS	Resume DEPMCS
380x 5004 (grinding) (reciprocating)	PLC controls axis [F-P2]	AxStop, stop [F-P2]	Stop at next reversal point [F-P2]	Change reversal point [F-P2]	Set reversal point [F-P2]	AxResume [F-P2]	AxReset [F-P2]	OscillAxExt Reversal
380x 5005 (grinding)		Disable automatic synchronization	Start gantry synchronization run					
380x 5006 (spindle)				Positioning the spindle	Automatic gear stage change	Specified direction of rotation CCW	Specified direction of rotation CW	Spindle STOP

5.9.3 Signals from axis/spindle

General signals from axis/spindle

3900 ... 3905		Signals from axis/spindle [r]						
Data block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
390x 0000	Position reached with exact stop, fine [F-B1] coarse [F-B1]			Referenced/synchronized 1 [F-R1]		Encoder limit frequency exceeded 1 [F-A3]		Spindle/no axis [F-S1]
390x 0001	Current controller active [F-A2]	Speed control loop active [F-A2]	Position controller active [F-A2]	Axis/spindle stationary ($n < n_{min}$) [F-A2]	Follow up mode active [F-A2]	Axis ready for operation	AxAlarm	Travel request drive test
390x 0002		Power Fixed stop limited	Fixed stop reached [F-F1]	Activate travel to fixed stop [F-F1]	Measurement active [F-M5]	Revolutional feedrate active	Handwheel override active@	Cam active
390x 0003								
390x 0004	Motion command plus [F-H1] minus [F-H1]		Travel request Handwheel active plus minus				handwheel aktiv 1) 2 1 [F-H1] [F-H1]	
390x 0005		Continuous	INCvar	INC10 000	INC1000	INC100	INC10	INC1
390x 0006 up to 390x 0011	PLC axis assigned firmly							

Signals from axis

3900 ... 3905		Signals from axis [r]						
Data block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
390x 1000				Modulo Limit Enabled active				

Axis/spindle signals

390x 1001	JOG Pos reached	JOG to position active	JOG fixed-point approach 2 reached [F-H1]	JOG fixed-point approach 1 reached [F-H1]	JOG fixed-point approach 0 reached [F-H1]	JOG fixed-point approach 2 [F-H1]	JOG fixed-point approach 1 [F-H1]	JOG fixed-point approach 0 [F-H1]
390x 1002	Rotary axis in position	Indexing axis in position	Positioning axis	Path axis				Lubrication pulse [F-A2]
390x 1003								

Representation of the handwheel number depending on machine data MD_HANDWH_VDI_REPRESENTATION (= 0) in bit or (= 1) binary code.

Signals from spindle

3900 ... 3905		Signals from spindle [r]						
Data block		NCK interface -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
390x 2000 (Spindle)					Gearbox change over [F-S1]	Set gear stage		
						C [F-S1]	B [F-S1]	A [F-S1]
390x 2001 (Spindle)	Actual direction of rotation clockwise [F-S1]	Speed monitoring	Spindle In the setpoint range [F-S1]	Supporting range limit violated	Geometry monitoring	Setpoint speed increased [F-S1]	Setpoint speed limited [F-S1]	Speed limit exceeded [F-S1]
390x 2002 (Spindle)	Active spindle mode				Rigid tapping [F-S1]		SUG active	Const. cutting velocity active [F-S1]
	Control mode [F-S1]	Oscillation mode [F-S1]	Positioning mode [F-S1]	Synchronous mode				
390x 2003			Spindle in position					

Signals from PLC axis

3900 ... 3905		Signals from spindle [r]						
Data block		Interface NCK -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
390x 3000	Positioning axis active [F-P2]	Position reached [F-P2]					Error during traversing [F-P2]	Axis cannot be started [F-P2]
390x 3001								
390x 3002								
390x 3003	Error number							

Signals from drive

3900 ... 3905		Signals from axis/spindle [r]							
Data block		NCK interface -----> PLC							
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
390x 4000									
390x 4001	Pulses enabled [F-A2]	Speed controller integrator disabled [F-A2]	Drive ready [F-A2]			Active parameter set [F-A2]			
390x 4002	Variable signaling function	$n_{act} = n_{set}$ [F-A2]	$n_{act} < n_x$ [F-A2]	$n_{act} < n_{min}$ [F-A2]	$Md < Mdx$ [F-A2]	Ramp-up completed [F-A2]	C	B	A
390x 4003							Temperature prewarning	Heat sink [F-A2]	Motor [F-A2]
									Uzk<Uzkx

Axis/spindle signals

Signals from technology functions

3900 ... 3905		Signals from axis/spindle [r]						
Data block		Interface NCK ----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
390x 5000	Master/ slave active [F-TE3]			Master/ slave Compen- satory controller active [F-TE3]	Master/ slave speed tolerance range coarse [F-TE3]	Master/ slave speed tolerance range fine [F-TE3]		
390x 5001								
390x 5002	ESR reaction initiated	Accelerat ion warning threshold reached	Velocity warning threshold reached	Overlaid movement				
390x 5003		Max. accelerat ion reached	Max. velocity reached	Synchroni zation running	Axis accelerate d			
390x 5004 (grinding) (reciprocat ing)	Recipro- cation active	Recipro- cating motion active	Sparking- out active	Error during the reciproca- ting motion	Reciprocat ion cannot be started.	OscillAxExt Reversal active		
390x 5005	gantry axis [F-G1]	gantry axis leading axis [F-G1]	gantry group is syn- chronous [F-G1]	Synchroni zation run ready to start [F-G1]	Gantry warning threshold exceeded [F-G1]	Gantry shutdown limit exceeded [F-G1]		
390x 5006								
390x 5007								
390x 5008	Active additional axis							
			Axis 6	Axis 5	Axis 4	Axis 3	Axis 2	Axis 1

5.10 PLC machine data

5.10.1 INT values (MD 14510 USER_DATA_INT)

4500		Signals from NCK [r16]					
Data block		NCK interface -----> PLC					
Start byte							
4500 0000	Int values (WORD/ 2 Byte)						
4500 0002	Int values (WORD/ 2 Byte)						
4500 0004	Int values (WORD/ 2 Byte)						
up to 4500 0062	Int values (WORD/ 2 Byte)						

5.10.2 HEX values (MD 14512 USER_DATA_HEX)

4500		Signals from NCK [r8]					
Data block		NCK interface -----> PLC					
Byte							
4500 1000	Hex value (BYTE)						
4500 1001	Hex value (BYTE)						
up to 4500 1031	Hex value (BYTE)						

5.10.3 FLOAT values (MD 14514 USER_DATA_FLOAT)

4500		Signals from NCK [r32]					
Data block		NCK interface -----> PLC					
Start byte							
4500 2000		Float value (REAL/ 4 Byte)					
4500 2004		Float value (REAL/ 4 Byte)					
4500 2008		Float value (REAL/ 4 Byte)					
4500 2012		Float value (REAL/ 4 Byte)					
4500 2016		Float value (REAL/ 4 Byte)					
4500 2020		Float value (REAL/ 4 Byte)					
4500 2024		Float value (REAL/ 4 Byte)					
4500 2028		Float value (REAL/ 4 Byte)					

5.10.4 User alarm: Configuration (MD 14516 USER_DATA_PLC_ALARM)

4500		Signals from NCK [r8]					
Data block		NCK interface -----> PLC					
Byte							
4500 3000		Alarm reaction/ deletion criterion Alarm 700000					
4500 3001		Alarm reaction/ deletion criterion Alarm 700001					
up to							
4500 3027		Alarm reaction/ deletion criterion Alarm 700031					

Note:

Information on PLC alarms, including configuring user alarms, can be found in:

References: Up Guide”, Section “PLC alarms”

5.10.5 Reading and writing PLC variables

4900		PLC variables [r/w]					
Data block		PLC interface					
Byte							
4900 0000		Offset[0]					
4900 0001		Offset[1]					
4900 0003		Offset[2]					
up to							
4900 1021		...					
4900 1022		Offset[1022]					
4900 1023		Offset[1023]					

Note:

The application programmers of NCK and PLC themselves are responsible for the organization of this data area. Data type, position offset and meaning of the variables must be agreed. The memory range limits per data type must be observed (1, 2 or 4 byte types). Further information can be found in:

References:

"Operation and Programming", Section "Reading and writing PLC variables"

5.11 Tool management functions from NC channel

Change signals for tool management functions

5300		Tool management functions [r]						
Data block		NCK interface NCK PLC -----> PLC						
Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
5300 0000							Tool limit value reached [F-W1]	Tool warning limit reached [F-W1]

Transferred tool management functions

5300		Tool management functions [r32]						
Data block		NCK interface -----> PLC						
Byte								
5300 1000								T number for tool warning limit (DINT) [F-W1]
5300 1004								T number for tool limit value (DINT) [F-W1]
5300 1008								
5300 1012								

Axis actual values and distances-to-go

5700 ... 5704		Signals from axis/spindle [r32]						
Data block		NCK interface -----> PLC						
Byte								
570x 0000								Axis actual value (REAL)
570x 0004								Axis distance-to-go (REAL)

Note:

Axis actual values and distances-to-go can each be requested separately:

- V2600 0001.1 Request for axis actual values
- V2600 0001.2 Request for axis distances-to-go

Once the respective request has been set, these values are provided by NCK for all axes.

SINAMICS Parameter

6

For the SINAMICS parameters, please refer to the documentation SINAMICS S, Lists Manualf.

LH1, SINAMICS_S, Parameter Manual

Index

Number	
1000	5-657
1100	5-657
1200	5-658
1200 ... 1207	5-658
1400	5-659
1600	5-660
1700	5-662
1800	5-663
1900	5-664
2500	5-665
2600	5-668
2700	5-669
2800	5-670
2900	5-671
3000	5-671
3100	5-672
3200	5-673
3300	5-676
3500	5-678
3700 ... 3704	5-679
3800 ... 3804	5-679
3800 ... 3805	5-681
3900 ... 3905	5-683
4500	5-687
4900	5-688
5300	5-689
5700 ... 5704	5-689
A	
AA_OFF_MODE	
MD 36750	2-500
ABS_INC_RATIO	
MD 30260	2-396
ABSBLOCK_ENABLE	
MD 42750	3-559
ABSBLOCK_FUNCTION_MASK	
MD 27100	2-370
AC_FILTER_TIME	
MD 32920	2-449
ACCEL_REDUCTION_FACTOR	
MD 35230	2-479
ACCEL_REDUCTION_SPEED_POINT	
MD 35220	2-478
ACCESS_EXEC_CMA	
MD 11161	2-120
ACCESS_EXEC_CST	
MD 11160	2-119
ACCESS_EXEC_CUS	
MD 11162	2-120
ACCESS_WRITE_CMA	
MD 11166	2-121
ACCESS_WRITE_CST	
MD 11165	2-120
ACCESS_WRITE_CUS	
MD 11167	2-121
ACCESS_WRITE_MACCESS	
MD 11171	2-122
ACCESS_WRITE_SACCESS	
MD 11170	2-122
ACCESS_WRITE_UACCESS	
MD 11172	2-122
ACT_POS_ABS	
MD 30250	2-395
ADAPT_PATH_DYNAMIC	
MD 20465	2-267
ADD_MOVE_ACCEL_RESERVE	
MD 20610	2-272
ADISPOSA_VALUE	
MD 43610	3-573
ALARM_CLR_NCSTART_W_CANCEL	
MD 11414	2-139
ALARM_PAR_DISPLAY_TEXT	
MD 11413	2-139
ALARM_REACTION_CHAN_NOREADY	
MD 11412	2-139
ALLOW_G0_IN_G96	
MD 20750	2-279
APPROACH_FEED	
MD 42120	3-543
ASSIGN_CHAN_TO_MODE_GROUP	
MD 10010	2-37
ASSIGN_FEED_PER_REV_SOURCE	
MD 43300	3-570
ASSIGN_SPIN_TO_WP_SPIN1	
MD 1088	2-32
ASSIGN_SPIN_TO_WP_SPIN2	
MD 1089	2-32
ASUP_EDIT_PROTECTION_LEVEL	
MD 11612	2-147
ASUP_EDITABLE	
MD 11610	2-147
ASUP_START_MASK	
MD 11602	2-145
ASUP_START_PRIO_LEVEL	

MD 11604	2-146	AX_JERK_DAMP	
AUTO_GET_TYPE		MD 32414	2-426
MD 30552	2-405	AX_JERK_ENABLE	
AUTO_IPTR_LOCK		MD 32400	2-425
MD 22680	2-308	AX_JERK_FREQ	
AUXFU_ASSIGN_EXTENSION		MD 32412	2-426
MD 22020	2-293	AX_JERK_MODE	
AUXFU_ASSIGN_GROUP		MD 32402	2-425
MD 22000	2-292	AX_JERK_TIME	
AUXFU_ASSIGN_SPEC		MD 32410	2-426
MD 22035	2-294	AX_LOAD_DISPL	
AUXFU_ASSIGN_TYPE		MD 1107	2-35
MD 22010	2-292	AX_MOTION_DIR	
AUXFU_ASSIGN_VALUE		MD 32100	2-419
MD 22030	2-293	AX_VELO_LIMIT	
AUXFU_ASSOC_M0_VALUE		MD 36200	2-490
MD 22254	2-299	AXCHANGE_MASK	
AUXFU_ASSOC_M1_VALUE		MD 10722	2-99
MD 22256	2-300	AXCONF_ASSIGN_MASTER_CHAN	
AUXFU_D_SYNC_TYPE		MD 30550	2-404
MD 22250	2-298	AXCONF_CHANAX_DEFAULT_NAME	
AUXFU_DL_SYNC_TYPE		MD 20082	2-229
MD 22252	2-299	AXCONF_CHANAX_NAME_TAB	
AUXFU_GROUP_SPEC		MD 20080	2-228
MD 11110	2-118	AXCONF_GEOAX_ASSIGN_TAB	
AUXFU_H_TYPE_INT		MD 20050	2-226
MD 22110	2-296	AXCONF_GEOAX_NAME_TAB	
AUXFU_M_SYNC_TYPE		MD 20060	2-227
MD 22200	2-297	AXCONF_MACHAX_NAME_TAB	
AUXFU_MAXNUM_GROUP_ASSIGN		MD 10000	2-36
MD 11100	2-117	AXCONF_MACHAX_USED	
AUXFU_PREDEF_EXTENSION		MD 20070	2-228
MD 22060	2-295	AXES_SCALE_ENABLE	
AUXFU_PREDEF_GROUP		MD 22914	2-310
MD 22040	2-294	AXIS_DIAGNOSIS	
AUXFU_PREDEF_SPEC		MD 36690	2-497
MD 22080	2-295	AXIS_LANG_SUB_MASK	
AUXFU_PREDEF_TYPE		MD 30465	2-401
MD 22050	2-294	AXIS_VAR_SERVER_SENSITIVE	
AUXFU_PREDEF_VALUE		MD 11398	2-135
MD 22070	2-295	Active alarm reaction	5-661
AUXFU_QUICK_BLOCKCHANGE		Adressranges	5-655
MD 22100	2-296	Auxiliary function transfer from NC channel 4-588	
AUXFU_S_SYNC_TYPE		Auxiliary function transfer from NC channel 5-665	
MD 22210	2-297	Axis/spindle signals	5-679
AUXFU_T_SYNC_TYPE		Axis-/spindle-specific signals	4-623
MD 22220	2-298	B	
AX_EMERGENCY_STOP_TIME		BACKLASH	
MD 36610	2-496	MD 32450	2-429
AX_ESR_DELAY_TIME1		BACKLASH_FACTOR	
MD 37510	2-519	MD 32452	2-429
AX_ESR_DELAY_TIME2			
MD 37511	2-519		

BAG_MASK		CIRCLE_ERROR_FACTOR	
MD 11600	2-145	MD 21010	2-282
BERO_DELAY_TIME_MINUS		CLAMP_POS_TOL	
MD 31123	2-410	MD 36050	2-487
BERO_DELAY_TIME_PLUS		CMM_POS_COORDINATE_SYSTEM	
MD 31122	2-410	MD 330	2-25
BRAKE_MODE_CHOICE		COL_OVERSIZE_TYPE_CHECKBOX	
MD 36600	2-495	MD 395	2-31
C		COM_CONFIGURATION	
CC_HW_DEBUG_MASK		MD 10161	2-46
MD 10430	2-63	COM_IPO_STRATEGY	
CC_TDA_PARAM_UNIT		MD 10073	2-40
MD 10290	2-55	COMP_ADD_VELO_FACTOR	
CC_TOA_PARAM_UNIT		MD 32760	2-445
MD 10292	2-56	COMPAR_ASSIGN_ANA_INPUT_1	
CCS_TDA_PARAM_UNIT		MD 10530	2-76
MD 10291	2-56	COMPAR_ASSIGN_ANA_INPUT_2	
CCS_TOA_PARAM_UNIT		MD 10531	2-76
MD 10293	2-57	COMPAR_THRESHOLD_1	
CEC_ENABLE		MD 41600	3-539
MD 32710	2-442	COMPAR_THRESHOLD_2	
CEC_MAX_SUM		MD 41601	3-539
MD 32720	2-443	COMPAR_TYPE_1	
CEC_MAX_VELO		MD 10540	2-77
MD 32730	2-444	COMPAR_TYPE_2	
CEC_SCALING_SYSTEM_METRIC		MD 10541	2-78
MD 32711	2-443	COMPRESS_ORI_ROT_TOL	
CEC_TABLE_ENABLE		MD 42477	3-550
MD 41300	3-529	COMPRESS_SMOOTH_FACTOR	
CEC_TABLE_WEIGHT		MD 20485	2-267
MD 41310	3-530	COMPRESS_SPLINE_DEGREE	
CENTRAL_LUBRICATION		MD 20486	2-268
MD 12300	2-159	CONE_ANGLE	
CHAMFER_NAME		MD 42995	3-566
MD 10656	2-83	CONST_VELO_MIN_TIME	
CHAN_NAME		MD 20500	2-269
MD 20000	2-226	CONTOUR_DEF_ANGLE_NAME	
CHBFRAME_POWERON_MASK		MD 10652	2-83
MD 24004	2-312	CONTOUR_MASK	
CHBFRAME_RESET_MASK		MD 331	2-25
MD 24002	2-312	CONTOUR_SAMPLING_FACTOR	
CHFRND_MAXNUM_DUMMY_BLOCKS		MD 10682	2-85
MD 20200	2-252	CONTOUR_TOL	
CHFRND_MODE_MASK		MD 36400	2-494
MD 20201	2-252	CONTOURHANDWH_IMP_PER_LATCH	
CHSFRAME_POWERON_MASK		MD 11322	2-130
MD 24008	2-314	CONTPREC	
CHSFRAME_RESET_CLEAR_MASK		MD 42450	3-548
MD 24007	2-313	CONTROL_UNIT_LOGIC_ADDRESS	
CHSFRAME_RESET_MASK		MD 13120	2-164
MD 24006	2-312	CONVERT_SCALING_SYSTEM	
CIRCLE_ERROR_CONST		MD 10260	2-53
MD 21000	2-282	COREFILE_NAME	

MD 18930	2-225	CUTCOM_CURVE_INSERT_LIMIT	
CORNER_SLOWDOWN_CRIT		MD 20230	2-255
MD 42526	3-555	CUTCOM_DECEL_LIMIT	
CORNER_SLOWDOWN_END		MD 42528	3-556
MD 42522	3-554	CUTCOM_G40_STOPRE	
CORNER_SLOWDOWN_OVR		MD 42490	3-550
MD 42524	3-555	CUTCOM_MAX_DISC	
CORNER_SLOWDOWN_START		MD 20220	2-254
MD 42520	3-554	CUTCOM_MAXNUM_CHECK_BLOCKS	
CORR_VELO		MD 20240	2-256
MD 32070	2-414	CUTCOM_MAXNUM_DUMMY_BLOCKS	
COUP_SYNC_DELAY_TIME		MD 20250	2-256
MD 37240	2-512	CUTCOM_MAXNUM_SUPPR_BLOCKS	
COUPLE_CYCLE_MASK		MD 20252	2-257
MD 11754	2-150	CUTDIRMOD	
CPREC_WITH_FFW		MD 42984	3-565
MD 20470	2-267	CUTEDGE_PARAM_CHECK_ON	
CRIT_SPLINE_ANGLE		MD 398	2-31
MD 42470	3-549	CUTMOD_INIT	
CTAB_DEFAULT_MEMORY_TYPE		MD 20127	2-241
MD 20905	2-282	CUTTING_EDGE_DEFAULT	
CTAB_ENABLE_NO_LEADMOTION		MD 20270	2-258
MD 20900	2-281	CUTTING_EDGE_RESET_VALUE	
CTM_CROSS_AX_DIAMETER_ON		MD 20130	2-242
MD 291	2-24	CYC_TOOLNO_EDTMOD_MANUAL_MA	
CTM_G91_DIAMETER_ON		MD 1102	2-34
MD 292	2-24	Channel Signals	5-673
CTM_POS_COORDINATE_SYSTEM		Channel-specific signals	4-598
MD 290	2-23	Checkback signal Program selection from HMI (retentive area)	5-662
CTM_SIMULATION_TIME_NEW_POS		Cyclic signal exchange	4-581
MD 289	2-22	D	
CTRLOUT_LIMIT		D_NO_FCT_CYCLE_NAME	
MD 36210	2-491	MD 11717	2-149
CTRLOUT_LIMIT_TIME		DEFAULT_FEED	
MD 36220	2-491	MD 42110	3-543
CTRLOUT_MODULE_NR		DEFAULT_ROT_FACTOR_R	
MD 30110	2-391	MD 42150	3-545
CTRLOUT_NR		DEFAULT_SCALE_FACTOR_AXIS	
MD 30120	2-392	MD 43120	3-567
CTRLOUT_SEGMENT_NR		DEFAULT_SCALE_FACTOR_P	
MD 30100	2-391	MD 42140	3-545
CTRLOUT_TYPE		DEFAULT_VALUES_MEM_MASK	
MD 30130	2-392	MD 11270	2-126
CURV_EFFECT_ON_PATH_ACCEL		DEPTH_OF_LOGFILE_OPT	
MD 20602	2-271	MD 17600	2-175
CURV_EFFECT_ON_PATH_JERK		DEPTH_OF_LOGFILE_OPT_PF	
MD 20603	2-271	MD 17610	2-176
CUTCOM_ACT_DEACT_CTRL		DES_VELO_LIMIT	
MD 42494	3-551	MD 36520	2-495
CUTCOM_CLSD_CONT		DIAMETER_AX_DEF	
MD 42496	3-552	MD 20100	2-234
CUTCOM_CORNER_LIMIT		DISABLE_PLC_START	
MD 20210	2-254		

MD 22622	2-308	DRIVE_AX_RATIO2_DENOM	
DISPLAY_AXIS		MD 31064	2-408
MD 20098	2-233	DRIVE_AX_RATIO2_NUMERA	
DISPLAY_FUNCTION_MASK		MD 31066	2-408
MD 10284	2-55	DRIVE_ENC_RATIO_DENOM	
DISPLAY_IS_MODULO		MD 31070	2-409
MD 30320	2-399	DRIVE_ENC_RATIO_NUMERA	
DISPLAY_MODE_INDEXING_AXIS		MD 31080	2-409
MD 391	2-30	DRIVE_FUNCTION_MASK	
DISPLAY_MODE_POSITION		MD 13070	2-162
MD 10136	2-45	DRIVE_LOGIC_ADDRESS	
DISPLAY_RESOLUTION		MD 13050	2-161
MD 203	2-19	DRIVE_SIGNAL_TRACKING	
DISPLAY_RESOLUTION_INCH		MD 36730	2-499
MD 204	2-20	DRIVE_TELEGRAM_TYPE	
DISPLAY_RESOLUTION_SPINDLE		MD 13060	2-161
MD 205	2-20	DRIVE_TYPE_DP	
DISPLAY_TOLI_H_NO		MD 13080	2-163
MD 393	2-30	DRY_RUN_FEED	
DISPLAY_TOLI_SISTER_TOOL		MD 42100	3-542
MD 394	2-31	DRY_RUN_FEED_MODE	
DPIO_LOGIC_ADDRESS_IN		MD 42101	3-542
MD 10500	2-74	DRYRUN_MASK	
DPIO_LOGIC_ADDRESS_OUT		MD 10704	2-89
MD 10510	2-75	DYN_LIMIT_RESET_MASK	
DPIO_RANGE_ATTRIBUTE_IN		MD 32320	2-424
MD 10502	2-74	DYN_MATCH_ENABLE	
DPIO_RANGE_ATTRIBUTE_OUT		MD 32900	2-448
MD 10512	2-75	DYN_MATCH_TIME	
DPIO_RANGE_LENGTH_IN		MD 32910	2-449
MD 10501	2-74	Decoded M signals	
DPIO_RANGE_LENGTH_OUT		(M0-M99)	5-666
MD 10511	2-75	E	
DRAM_FILESYST_CONFIG		ENABLE_ALARM_MASK	
MD 11292	2-128	MD 11411	2-138
DRAM_FILESYST_SAVE_MASK		ENABLE_CHAN_AX_GAP	
MD 11291	2-128	MD 11640	2-148
DRAM_FILESYSTEM_MASK		ENABLE_START_MODE_MASK_PRT	
MD 11290	2-127	MD 22621	2-308
DRESSER_FUNCTION_MASK		ENC_ABS_BUFFERING	
MD 385	2-29	MD 30270	2-397
DRIFT_ENABLE		ENC_ABS_TURNS_MODULO	
MD 36700	2-498	MD 34220	2-461
DRIFT_LIMIT		ENC_ABS_ZEROMON_INITIAL	
MD 36710	2-498	MD 36314	2-493
DRIFT_VALUE		ENC_ABS_ZEROMON_WARNING	
MD 36720	2-499	MD 36312	2-493
DRILL_VELO_LIMIT		ENC_ACTVAL_SMOOTH_TIME	
MD 35550	2-484	MD 34990	2-465
DRIVE_AX_RATIO_DENOM		ENC_CHANGE_TOL	
MD 31050	2-408	MD 36500	2-494
DRIVE_AX_RATIO_NUMERA		ENC_COMP_ENABLE	
MD 31060	2-408	MD 32700	2-442

ENC_DIFF_TOL		MD 21380	2-288
MD 36510	2-494	ESR_DELAY_TIME2	
ENC_FEEDBACK_POL		MD 21381	2-288
MD 32110	2-420	ESR_REACTION	
ENC_FREQ_LIMIT		MD 37500	2-518
MD 36300	2-491	EVERY_ENC_SERIAL_NUMBER	
ENC_FREQ_LIMIT_LOW		MD 34232	2-462
MD 36302	2-492	EXACT_POS_MODE	
ENC_GRID_POINT_DIST		MD 20550	2-269
MD 31010	2-406	EXACT_POS_MODE_G0_TO_G1	
ENC_INPUT_NR		MD 20552	2-270
MD 30230	2-394	EXTERN_CHAN_SYNC_M_NO_MAX	
ENC_INVERS		MD 10802	2-102
MD 34320	2-464	EXTERN_CHAN_SYNC_M_NO_MIN	
ENC_IS_DIRECT		MD 10800	2-102
MD 31040	2-407	EXTERN_DIGITS_TOOL_NO	
ENC_IS_DIRECT2		MD 10888	2-112
MD 31044	2-407	EXTERN_DOUBLE_TURRET_DIST	
ENC_IS_INDEPENDENT		MD 42162	3-546
MD 30242	2-394	EXTERN_DOUBLE_TURRET_ON	
ENC_IS_LINEAR		MD 10812	2-106
MD 31000	2-406	EXTERN_FIXED_FEEDRATE_F1_F9	
ENC_MARKER_INC		MD 42160	3-545
MD 34310	2-463	EXTERN_FIXED_FEEDRATE_F1_ON	
ENC_MEAS_TYPE		MD 22920	2-310
MD 30244	2-395	EXTERN_FLOATINGPOINT_PROG	
ENC_MODULE_NR		MD 10884	2-111
MD 30220	2-393	EXTERN_FUNCTION_MASK	
ENC_PULSE_MULT		MD 20734	2-277
MD 31025	2-406	EXTERN_G_NO_MAC_CYCLE	
ENC_REFP_MARKER_DIST		MD 10816	2-108
MD 34300	2-463	EXTERN_G_NO_MAC_CYCLE_NAME	
ENC_REFP_MODE		MD 10817	2-109
MD 34200	2-460	EXTERN_G0_LINEAR_MODE	
ENC_REFP_STATE		MD 20732	2-277
MD 34210	2-461	EXTERN_GCODE_GROUPS_TO_PLC	
ENC_RESOL		MD 22512	2-301
MD 31020	2-406	EXTERN_GCODE_RESET_MODE	
ENC_SEGMENT_NR		MD 20156	2-248
MD 30210	2-393	EXTERN_GCODE_RESET_VALUES	
ENC_SERIAL_NUMBER		MD 20154	2-247
MD 34230	2-462	EXTERN_INCREMENT_SYSTEM	
ENC_TYPE		MD 10886	2-111
MD 30240	2-394	EXTERN_INTERRUPT_BITS_M96	
ENC_ZERO_MONITORING		MD 10808	2-105
MD 36310	2-493	EXTERN_INTERRUPT_NUM_ASUP	
EPS_TLIFT_TANG_STEP		MD 10818	2-109
MD 37400	2-518	EXTERN_INTERRUPT_NUM_RETRAC	
EQUIV_CURRCTRL_TIME		MD 10820	2-109
MD 32800	2-447	EXTERN_M_NO_DISABLE_INT	
EQUIV_SPEEDCTRL_TIME		MD 10806	2-104
MD 32810	2-448	EXTERN_M_NO_MAC_CYCLE	
ESR_DELAY_TIME1		MD 10814	2-107

EXTERN_M_NO_MAC_CYCLE_NAME		FIXED_STOP_ACKN_MASK	
MD 10815	2-108	MD 37060	2-505
EXTERN_M_NO_SET_INT		FIXED_STOP_ALARM_MASK	
MD 10804	2-103	MD 37050	2-504
EXTERN_MEAS_G31_P_SIGNAL		FIXED_STOP_ALARM_REACTION	
MD 10810	2-106	MD 37052	2-505
EXTERN_PARALLEL_GEOAX		FIXED_STOP_ANA_TORQUE	
MD 22930	2-311	MD 37070	2-506
EXTERN_REF_POSITION_G30_1		FIXED_STOP_BY_SENSOR	
MD 43340	3-570	MD 37040	2-504
EXTERN_RIGID_TAPPING_M_NR		FIXED_STOP_CONTROL	
MD 20095	2-231	MD 37002	2-501
EXTERN_TOOLPROG_MODE		FIXED_STOP_MODE	
MD 10890	2-112	MD 37000	2-500
F		FIXED_STOP_SWITCH	
F_VALUES_ACTIVE_AFTER_RESET		MD 43500	3-572
MD 22410	2-300	FIXED_STOP_THRESHOLD	
Read/write NC data		MD 37030	2-503
Result	5-658	FIXED_STOP_TORQUE	
Reading/writing NC data		MD 43510	3-572
Job	5-658	FIXED_STOP_TORQUE_DEF	
FASTIO_ANA_NUM_INPUTS		MD 37010	2-501
MD 10300	2-57	FIXED_STOP_TORQUE_FACTOR	
FASTIO_ANA_NUM_OUTPUTS		MD 37014	2-502
MD 10310	2-58	FIXED_STOP_TORQUE_RAMP_TIME	
FASTIO_DIG_NUM_INPUTS		MD 37012	2-502
MD 10350	2-58	FIXED_STOP_WINDOW	
FASTIO_DIG_NUM_OUTPUTS		MD 43520	3-573
MD 10360	2-59	FIXED_STOP_WINDOW_DEF	
FASTIO_DIG_SHORT_CIRCUIT		MD 37020	2-503
MD 10361	2-59	FLOAT values (MD 14514	
FFW_ACTIVATION_MODE		USER_DATA_FLOAT)	5-688
MD 32630	2-440	FOC_ACTIVATION_MODE	
FFW_MODE		MD 37080	2-506
MD 32620	2-439	FOC_STANDSTILL_DELAY_TIME	
FG_GROUP1		MD 36042	2-487
MD 310	2-25	FPU_CTRLWORD_INIT	
FG_GROUP2		MD 18910	2-224
MD 311	2-25	FPU_ERROR_MODE	
FG_GROUP3		MD 18900	2-224
MD 312	2-25	FPU_EXEPTION_MASK	
FG_GROUP4		MD 18920	2-225
MD 313	2-25	FRAME_ACS_SET	
FG_GROUP5		MD 24030	2-315
MD 314	2-25	FRAME_ADAPT_MODE	
FGROUP_DEFAULT_AXES		MD 24040	2-316
MD 22420	2-301	FRAME_ADD_COMPONENTS	
FIPO_TYPE		MD 24000	2-311
MD 33000	2-450	FRAME_ANGLE_INPUT_MODE	
FIRST_LANGUAGE		MD 10600	2-79
MD 202	2-19	FRAME_GEOAX_CHANGE_MODE	
FIX_POINT_POS		MD 10602	2-79
MD 30600	2-405	FRAME_OFFSET_INCR_PROG	

MD 42440	3-547	MD 37140	2-511
FRAME_OR_CORRPOS_NOTALLOWED		GANTRY_FUNCTION_MASK	
MD 32074	2-415	MD 37150	2-512
FRAME_SAA_MODE		GANTRY_POS_TOL_ERROR	
MD 24050	2-316	MD 37120	2-509
FRAME_SAVE_MASK		GANTRY_POS_TOL_REF	
MD 10617	2-82	MD 37130	2-510
FRAME_SUPPRESS_MODE		GANTRY_POS_TOL_WARNING	
MD 24020	2-315	MD 37110	2-508
FRICT_COMP_ACCEL1		GCODE_GROUPS_TO_PLC	
MD 32550	2-434	MD 22510	2-301
FRICT_COMP_ACCEL2		GCODE_GROUPS_TO_PLC_MODE	
MD 32560	2-435	MD 22515	2-302
FRICT_COMP_ACCEL3		GCODE_RESET_MODE	
MD 32570	2-436	MD 20152	2-246
FRICT_COMP_ADAPT_ENABLE		GCODE_RESET_VALUES	
MD 32510	2-431	MD 20150	2-244
FRICT_COMP_CONST_MAX		GEAR_CHANGE_WAIT_TIME	
MD 32520	2-432	MD 10192	2-48
FRICT_COMP_CONST_MIN		GEAR_STEP_CHANGE_ENABLE	
MD 32530	2-433	MD 35010	2-466
FRICT_COMP_ENABLE		GEAR_STEP_CHANGE_POSITION	
MD 32500	2-430	MD 35012	2-467
FRICT_COMP_INC_FACTOR		GEAR_STEP_MAX_VELO	
MD 32580	2-437	MD 35110	2-472
FRICT_COMP_MODE		GEAR_STEP_MAX_VELO_LIMIT	
MD 32490	2-429	MD 35130	2-474
FRICT_COMP_TIME		GEAR_STEP_MAX_VELO2	
MD 32540	2-433	MD 35112	2-473
G		GEAR_STEP_MIN_VELO	
G_GROUP1		MD 35120	2-473
MD 305	2-24	GEAR_STEP_MIN_VELO_LIMIT	
G_GROUP2		MD 35140	2-476
MD 306	2-24	GEAR_STEP_MIN_VELO2	
G_GROUP3		MD 35122	2-474
MD 307	2-24	GEAR_STEP_PC_MAX_VELO_LIMIT	
G_GROUP4		MD 35135	2-475
MD 308	2-24	GEAR_STEP_POSCTRL_ACCEL	
G_GROUP5		MD 35210	2-477
MD 309	2-24	GEAR_STEP_POSCTRL_ACCEL2	
G0_LINEAR_MODE		MD 35212	2-478
MD 20730	2-276	GEAR_STEP_SPEEDCTRL_ACCEL	
G00_ACCEL_FACTOR		MD 35200	2-477
MD 32434	2-428	GEAR_STEP_USED_IN_AXISMODE	
G00_JERK_FACTOR		MD 35014	2-467
MD 32435	2-428	GEOAX_CHANGE_M_CODE	
G53_TOOLCORR		MD 22532	2-303
MD 10760	2-101	GEOAX_CHANGE_RESET	
GANTRY_ACT_POS_TOL_ERROR		MD 20118	2-240
MD 37135	2-510	GMMC_INFO_NO_UNIT	
GANTRY_AXIS_TYPE		MD 17200	2-170
MD 37100	2-507	GMMC_INFO_NO_UNIT_STATUS	
GANTRY_BREAK_UP		MD 17201	2-170

GRAPHIC_MAX_X	
MD 388	2-30
GRAPHIC_MAX_Y	
MD 390	2-30
GRAPHIC_MIN_X	
MD 387	2-30
GRAPHIC_MIN_Y	
MD 389	2-30
GUD_AREA_SAVE_TAB	
MD 11140	2-119
General selection/status signals from HMI	4-586
General selection/status signals from HMI (retentive area)	5-664
General selection/status signals to HMI (retentive area)	5-665
General signals from NCK	5-669
General signals to NC	4-591
General signals to NCK	5-668
H	
HANDWH_CHAN_STOP_COND	
MD 20624	2-274
HANDWH_GEOAX_MAX_INCR_SIZE	
MD 20620	2-273
HANDWH_GEOAX_MAX_INCR_VSIZE	
MD 20622	2-273
HANDWH_IMP_PER_LATCH	
MD 11320	2-130
HANDWH_MAX_INCR_SIZE	
MD 32080	2-416
HANDWH_MAX_INCR_VELO_SIZE	
MD 32082	2-417
HANDWH_REVERSE	
MD 11310	2-129
HANDWH_STOP_COND	
MD 32084	2-417
HANDWH_TRUE_DISTANCE	
MD 11346	2-131
HANDWH_VDI_REPRESENTATION	
MD 11324	2-130
HANDWH_VELO_OVERLAY_FACTOR	
MD 32090	2-419
HANDWHEEL_INPUT	
MD 11352	2-132
HANDWHEEL_LOGIC_ADDRESS	
MD 11353	2-132
HANDWHEEL_MODULE	
MD 11351	2-132
HANDWHEEL_SEGMENT	
MD 11350	2-131
HEX values (MD 14512 USER_DATA_HEX)	5-687
HIRTH_IS_ACTIVE	
MD 30505	2-404
HMI_COLE_TITLE_FOCUS_BACK	
MD 357	2-26
HMI_COLE_TITLE_FOCUS_FOR	
MD 356	2-26
HW_ASSIGN_ANA_FASTIN	
MD 10362	2-60
HW_ASSIGN_ANA_FASTOUT	
MD 10364	2-61
HW_ASSIGN_DIG_FASTIN	
MD 10366	2-61
HW_ASSIGN_DIG_FASTOUT	
MD 10368	2-63
HW_SERIAL_NUMBER	
MD 18030	2-177
I	
IGN_PROG_STATE_ASUP	
MD 20191	2-250
IGNORE_INHIBIT_ASUP	
MD 20116	2-239
IGNORE_OVL_FACTOR_FOR_ADIS	
MD 20490	2-268
IGNORE_SINGLEBLOCK_ASUP	
MD 20117	2-240
IGNORE_SINGLEBLOCK_MASK	
MD 10702	2-86
INDEX_AX_ASSIGN_POS_TAB	
MD 30500	2-402
INDEX_AX_DENOMINATOR	
MD 30502	2-403
INDEX_AX_LENGTH_POS_TAB_1	
MD 10900	2-113
INDEX_AX_LENGTH_POS_TAB_2	
MD 10920	2-115
INDEX_AX_MODE	
MD 10940	2-117
INDEX_AX_NUMERATOR	
MD 30501	2-403
INDEX_AX_OFFSET	
MD 30503	2-404
INDEX_AX_POS_TAB_1	
MD 10910	2-114
INDEX_AX_POS_TAB_2	
MD 10930	2-116
INFO_FREE_MEM_DPR	
MD 18070	2-179
INFO_FREE_MEM_DYNAMIC	
MD 18050	2-178
INFO_FREE_MEM_STATIC	
MD 18060	2-179
INI_FILE_MODE	
MD 11220	2-124
INIT_MD	

MD 11200	2-123	MD 42693	3-558
INT values (MD 14510 USER_DATA_INT) 5-687		JOG_CONT_MODE_LEVELTRIGGRD	
INT_INCR_PER_DEG		MD 41050	3-524
MD 10210	2-49	JOG_FEED_PER_REV_SOURCE	
INT_INCR_PER_MM		MD 42600	3-556
MD 10200	2-48	JOG_GEOAX_MODE_MASK	
INTERMEDIATE_POINT_NAME_TAB		MD 42996	3-566
MD 10660	2-84	JOG_INC_MODE_LEVELTRIGGRD	
INVERT_SPIN_ICON_MANUAL_MA		MD 11300	2-129
MD 1098	2-33	JOG_INCR_SIZE_TAB	
INVOLUTE_AUTO_ANGLE_LIMIT		MD 11330	2-131
MD 21016	2-283	JOG_INCR_WEIGHT	
INVOLUTE_RADIUS_DELTA		MD 31090	2-409
MD 21015	2-283	JOG_MAX_ACCEL	
IPO_CYCLE_TIME		MD 32301	2-424
MD 10071	2-40	JOG_MAX_JERK	
IPO_PARAM_NAME_TAB		MD 32436	2-428
MD 10650	2-83	JOG_MODE_KEYS_EDGETRIGGRD	
IPO_SYSCLOCK_TIME_RATIO		MD 10731	2-100
MD 10070	2-40	JOG_MODE_MASK	
IPOBRAKE_BLOCK_EXCHANGE		MD 10735	2-100
MD 43600	3-573	JOG_POSITION	
IS_CONCURRENT_POS_AX		MD 43320	3-570
MD 30450	2-401	JOG_REV_IS_ACTIVE	
IS_CONTINUOUS_DATA_SAVE_ON		MD 41100	3-525
MD 18233	2-201	JOG_REV_SET_VELO	
IS_ROT_AX		MD 41120	3-527
MD 30300	2-398	JOG_REV_VELO	
IS_SD_MAX_PATH_ACCEL		MD 32050	2-413
MD 42502	3-553	JOG_REV_VELO_RAPID	
IS_SD_MAX_PATH_JERK		MD 32040	2-413
MD 42512	3-554	JOG_ROT_AX_SET_VELO	
IS_UNIPOLAR_OUTPUT		MD 41130	3-528
MD 30134	2-392	JOG_SET_VELO	
IS_VIRTUAL_AX		MD 41110	3-526
MD 30132	2-392	JOG_SPIND_SET_VELO	
Interface signals	4-581	MD 41200	3-528
Interfaces	4-581	JOG_VAR_INCR_SIZE	
		MD 41010	3-523
J		JOG_VELO	
JOG_AND_POS_JERK_ENABLE		MD 32020	2-412
MD 32420	2-427	JOG_VELO_GEO	
JOG_AND_POS_MAX_JERK		MD 21165	2-286
MD 32430	2-427	JOG_VELO_RAPID	
JOG_CIRCLE_CENTRE		MD 32010	2-411
MD 42690	3-557	JOG_VELO_RAPID_GEO	
JOG_CIRCLE_END_ANGLE		MD 21160	2-285
MD 42694	3-559		
JOG_CIRCLE_MODE		L	
MD 42692	3-558	LANG_SUB_NAME	
JOG_CIRCLE_RADIUS		MD 15700	2-169
MD 42691	3-557	LANG_SUB_PATH	
JOG_CIRCLE_START_ANGLE		MD 15702	2-169
		LCD_CONTRAST	

MD 200	2-19	MD 32310	2-424
LCD_INVERSE		MAX_AX_ACCEL	
MD 201	2-19	MD 32300	2-423
LEADSCREW_PITCH		MAX_AX_JERK	
MD 31030	2-407	MD 32431	2-427
LIFTFAST_DIST		MAX_AX_VELO	
MD 21200	2-286	MD 32000	2-411
LIFTFAST_STOP_COND		MAX_BLOCKS_IN_IPOBUFFER	
MD 21204	2-287	MD 42990	3-566
LIFTFAST_WITH_MIRROR		MAX_LEAD_ANGLE	
MD 21202	2-287	MD 21090	2-283
LOOKAH_FFORM		MAX_NUM_CUTT_EDGE_MANUAL_MA	
MD 20443	2-265	MD 1097	2-33
LOOKAH_FREQUENCY		MAX_NUM_CYCLE_MANUAL_MA	
MD 32440	2-428	MD 1096	2-33
LOOKAH_FUNCTION_MASK		MAX_PATH_JERK	
MD 20455	2-265	MD 20600	2-270
LOOKAH_NUM_OVR_POINTS		MAX_SPEED_G94_MANUAL_MA	
MD 20430	2-264	MD 1094	2-33
LOOKAH_OVR_POINTS		MAX_SPEED_G95_MANUAL_MA	
MD 20440	2-264	MD 1095	2-33
LOOKAH_RELIEVE_BLOCK_CYCLE		MAX_SPEED_G96_MANUAL_MA	
MD 20450	2-265	MD 1093	2-33
LOOKAH_SMOOTH_FACTOR		MAX_SPINDEL_SPEED_MANUAL_MA	
MD 20460	2-266	MD 1092	2-33
LOOKAH_SMOOTH_WITH_FEED		MAX_TILT_ANGLE	
MD 20462	2-266	MD 21092	2-284
LOOKAH_SYSTEM_PARAM		MAXNUM_REPLACEMENT_TOOLS	
MD 20442	2-264	MD 17500	2-170
LOOKAH_USE_VELO_NEXT_BLOCK		MAXNUM_USER_DATA_FLOAT	
MD 20400	2-263	MD 14508	2-168
LUBRICATION_DIST		MAXNUM_USER_DATA_HEX	
MD 33050	2-451	MD 14506	2-168
LUD_EXTENDED_SCOPE		MAXNUM_USER_DATA_INT	
MD 11120	2-119	MD 14504	2-168
M		MD_FILE_STYLE	
M_NO_FCT_CYCLE		MD 11230	2-125
MD 10715	2-96	MEAS_CENTRAL_SOURCE	
M_NO_FCT_CYCLE_NAME		MD 13211	2-167
MD 10716	2-97	MEAS_PROBE_DELAY_TIME	
M_NO_FCT_CYCLE_PAR		MD 13220	2-168
MD 10718	2-98	MEAS_PROBE_LOW_ACTIVE	
M_NO_FCT_EOP		MD 13200	2-166
MD 10714	2-95	MEAS_PROBE_OFFSET	
M_NO_FCT_STOPRE		MD 13231	2-168
MD 10713	2-94	MEAS_PROBE_SOURCE	
M19_SPOS		MD 13230	2-168
MD 43240	3-569	MEAS_SAVE_POS_LENGTH2	
M19_SPOSMODE		MD 373	2-28
MD 43250	3-570	MEAS_SPIN_ACTIV_MANUAL_MA	
MAINTENANCE_DATA		MD 1100	2-34
MD 33060	2-451	MEAS_TYPE	
MAX_ACCEL_OVL_FACTOR		MD 13210	2-167

MIN_CONTOUR_SAMPLING_TIME	MD 18800	2-223
MD 10680		2-84
MINFEED		
MD 42460		3-549
MINTIME_BETWEEN_STROKES		
MD 42404		3-547
MIRROR_REF_AX		
MD 10610		2-80
MIRROR_TOGGLE		
MD 10612		2-81
MIRROR_TOOL_LENGTH		
MD 42900		3-559
MIRROR_TOOL_WEAR		
MD 42910		3-560
MM_ABSBLOCK		
MD 28400		2-387
MM_ABSBLOCK_BUFFER_CONF		
MD 28402		2-387
MM_ACTFILESYS_LOG_FILE_MEM		
MD 18232		2-200
MM_ARCLENGTH_SEGMENTS		
MD 28540		2-389
MM_BUFFERED_AC_MARKER		
MD 28257		2-385
MM_BUFFERED_AC_PARAM		
MD 28255		2-385
MM_CEC_MAX_POINTS		
MD 18342		2-208
MM_CHAN_HASH_TABLE_SIZE		
MD 18250		2-203
MM_COM_COMPRESS_METHOD		
MD 18390		2-212
MM_CYC_DATA_MEM_SIZE		
MD 18237		2-202
MM_DIR_HASH_TABLE_SIZE		
MD 18300		2-205
MM_DRAM_FILE_MEM_SIZE		
MD 18351		2-209
MM_E_FILE_MEM_SIZE		
MD 18356		2-212
MM_ENABLE_TOOL_ORIENT		
MD 18114		2-189
MM_ENC_COMP_MAX_POINTS		
MD 38000		2-522
MM_EPSPARAM_DIMENSION		
MD 18840		2-223
MM_EXTCOM_TASK_STACK_SIZE		
MD 18500		2-214
MM_EXTERN_CNC_SYSTEM		
MD 10880		2-110
MM_EXTERN_GCODE_SYSTEM		
MD 10881		2-110
MM_EXTERN_LANGUAGE		
	MD 18800	2-223
MM_FILE_HASH_TABLE_SIZE		
MD 18290		2-205
MM_FLASH_FILE_SYSTEM_SIZE		
MD 18332		2-208
MM_FLASHFILESYS_MEM		
MD 18331		2-207
MM_FRAME_FINE_TRANS		
MD 18600		2-215
MM_GUD_VALUES_MEM		
MD 18150		2-191
MM_INCOA_MEM_SIZE		
MD 18235		2-201
MM_INT_TASK_STACK_SIZE		
MD 28502		2-387
MM_IPO_BUFFER_SIZE		
MD 28060		2-379
MM_IPO_TASK_STACK_SIZE		
MD 18512		2-215
MM_KIND_OF_SUMCORR		
MD 18112		2-188
MM_LOOKAH_FFORM_UNITS		
MD 28533		2-389
MM_LUD_HASH_TABLE_SIZE		
MD 18240		2-202
MM_LUD_VALUES_MEM		
MD 28040		2-378
MM_M_FILE_MEM_SIZE		
MD 18353		2-210
MM_MAINTENANCE_MON		
MD 18860		2-223
MM_MAX_AXISPOLY_PER_BLOCK		
MD 28520		2-388
MM_MAX_CUTTING_EDGE_NO		
MD 18105		2-186
MM_MAX_CUTTING_EDGE_PERTOOL		
MD 18106		2-186
MM_MAX_SIZE_OF_LUD_VALUE		
MD 18242		2-202
MM_MAX_SUMCORR_PER_CUTTEDGE		
MD 18110		2-187
MM_MAXNUM_ALARM_ACTIONS		
MD 18730		2-222
MM_NCK_HASH_TABLE_SIZE		
MD 18260		2-204
MM_NUM_AC_MARKER		
MD 28256		2-385
MM_NUM_AC_PARAM		
MD 28254		2-384
MM_NUM_AC_SYSTEM_MARKER		
MD 28276		2-386
MM_NUM_AC_SYSTEM_PARAM		
MD 28274		2-386

MM_NUM_AN_TIMER		MD 18130	2-191
MD 18710	2-221	MM_NUM_GUD_NAMES_NCK	
MM_NUM_BASE_FRAMES		MD 18120	2-190
MD 28081	2-380	MM_NUM_KIN_TRAFOS	
MM_NUM_BLOCKS_IN_PREP		MD 18866	2-224
MD 28070	2-380	MM_NUM_LUD_NAMES_TOTAL	
MM_NUM_CC_MON_PARAM		MD 28020	2-378
MD 18098	2-184	MM_NUM_MAX_FUNC_NAMES	
MM_NUM_CC_TDA_PARAM		MD 18170	2-193
MD 18094	2-182	MM_NUM_MAX_FUNC_PARAM	
MM_NUM_CC_TOA_PARAM		MD 18180	2-193
MD 18096	2-183	MM_NUM_MMC_UNITS	
MM_NUM_CCS_MON_PARAM		MD 10134	2-45
MD 18208	2-196	MM_NUM_PROTECT_AREA_ACTIVE	
MM_NUM_CCS_TDA_PARAM		MD 28210	2-383
MD 18204	2-194	MM_NUM_PROTECT_AREA_CHAN	
MM_NUM_CCS_TOA_PARAM		MD 28200	2-382
MD 18206	2-195	MM_NUM_PROTECT_AREA_CONTOUR	
MM_NUM_CP_MODUL_LEAD		MD 28212	2-384
MD 18452	2-214	MM_NUM_PROTECT_AREA_NCK	
MM_NUM_CP_MODULES		MD 18190	2-194
MD 18450	2-214	MM_NUM_R_PARAM	
MM_NUM_CURVE_POLYNOMS		MD 28050	2-379
MD 18404	2-213	MM_NUM_REORG_LUD_MODULES	
MM_NUM_CURVE_POLYNOMS_DRAM		MD 28010	2-377
MD 18410	2-214	MM_NUM_SUBDIR_PER_DIR	
MM_NUM_CURVE_SEG_LIN		MD 18270	2-204
MD 18403	2-213	MM_NUM_SUMCORR	
MM_NUM_CURVE_SEG_LIN_DRAM		MD 18108	2-187
MD 18409	2-214	MM_NUM_SYNACT_GUD_AXIS	
MM_NUM_CURVE_SEGMENTS		MD 18663	2-219
MD 18402	2-212	MM_NUM_SYNACT_GUD_BOOL	
MM_NUM_CURVE_SEGMENTS_DRAM		MD 18662	2-218
MD 18408	2-213	MM_NUM_SYNACT_GUD_CHAR	
MM_NUM_CURVE_TABS		MD 18664	2-220
MD 18400	2-212	MM_NUM_SYNACT_GUD_INT	
MM_NUM_CURVE_TABS_DRAM		MD 18661	2-217
MD 18406	2-213	MM_NUM_SYNACT_GUD_REAL	
MM_NUM_CUTTING_EDGES_IN_TOA		MD 18660	2-216
MD 18100	2-185	MM_NUM_SYNACT_GUD_STRING	
MM_NUM_DIR_IN_FILESYSTEM		MD 18665	2-221
MD 18310	2-206	MM_NUM_SYSTEM_FILES_IN_FS	
MM_NUM_FILES_IN_FILESYSTEM		MD 18321	2-207
MD 18320	2-207	MM_NUM_TOOL	
MM_NUM_FILES_PER_DIR		MD 18082	2-181
MD 18280	2-204	MM_NUM_TOOL_CARRIER	
MM_NUM_GLOBAL_BASE_FRAMES		MD 18088	2-181
MD 18602	2-216	MM_NUM_TOOL_ENV	
MM_NUM_GLOBAL_USER_FRAMES		MD 18116	2-189
MD 18601	2-216	MM_NUM_TOOLHOLDERS	
MM_NUM_GUD_MODULES		MD 18075	2-180
MD 18118	2-190	MM_NUM_TRAFO_DATA_SETS	
MM_NUM_GUD_NAMES_CHAN		MD 18864	2-223

MM_NUM_USER_FRAMES	MD 18352	2-210
MD 28080		2-380
MM_NUM_USER_MACROS	MD 18350	2-209
MD 18160		2-192
MM_NUM_VDIVAR_ELEMENTS	MD 18230	2-199
MD 28150		2-382
MM_NUM_WORKAREA_CS_GROUPS	MD 18231	2-200
MD 28600		2-390
MM_PATH_VELO_SEGMENTS	MD 18220	2-199
MD 28530		2-388
MM_PLC_TASK_STACK_SIZE	MD 18210	2-197
MD 18540		2-215
MM_PLCBG_TASK_STACK_SIZE	MD 27206	2-371
MD 18541		2-215
MM_PLCINT_TASK_STACK_SIZE	MD 27207	2-371
MD 18542		2-215
MM_PREP_TASK_STACK_SIZE	MD 27200	2-370
MD 28500		2-387
MM_REORG_LOG_FILE_MEM	MD 27201	2-371
MD 28000		2-377
MM_S_FILE_MEM_SIZE	MD 27202	2-371
MD 18354		2-211
MM_SEARCH_RUN_RESTORE_MODE	MD 27203	2-371
MD 28560		2-390
MM_SERVO_FIFO_SIZE	MD 27208	2-372
MD 18720		2-222
MM_SERVO_TASK_STACK_SIZE	MD 27209	2-372
MD 18510		2-215
MM_SHAPED_TOOLS_ENABLE	MD 27204	2-371
MD 28290		2-386
MM_SYSTEM_DATAFRAME_MASK	MD 27205	2-371
MD 28083		2-381
MM_SYSTEM_FRAME_MASK	MODESWITCH_MASK	MD 20114
MD 28082		2-239
MM_T_FILE_MEM_SIZE	MODULO_RANGE	MD 30330
MD 18355		2-400
MM_TOOL_MANAGEMENT_MASK	MODULO_RANGE_START	MD 30340
MD 18080		2-400
MM_TYPE_CC_MON_PARAM	MONITOR_ADDRESS	MD 11380
MD 18099		2-133
MM_TYPE_CC_TDA_PARAM	MONITOR_DISPLAY_INT	MD 11382
MD 18095		2-133
MM_TYPE_CC_TOA_PARAM	MONITOR_DISPLAY_REAL	MD 11384
MD 18097		2-133
MM_TYPE_CCS_MON_PARAM	MONITOR_INPUT_INT	MD 11386
MD 18209		2-134
MM_TYPE_CCS_TDA_PARAM	MONITOR_INPUT_REAL	MD 11388
MD 18205		2-134
MM_TYPE_CCS_TOA_PARAM	MONITOR_INPUT_STROBE	MD 11390
MD 18207		2-134
MM_TYPE_OF_CUTTING_EDGE	MS_ASSIGN_MASTER_SPEED_CMD	MD 37250
MD 18102		2-513
MM_U_FILE_MEM_SIZE	MS_ASSIGN_MASTER_TORQUE_CTR	MD 37252
		2-513

MS_COUPLING_ALWAYS_ACTIVE		NIBBLE_PUNCH_INMASK	
MD 37262	2-515	MD 26006	2-364
MS_FUNCTION_MASK		NIBBLE_PUNCH_OUTMASK	
MD 37253	2-513	MD 26004	2-363
MS_MAX_CTRL_VELO		NIBBLE_SIGNAL_CHECK	
MD 37260	2-515	MD 26020	2-370
MS_MOTION_DIR_REVERSE		NIBPUNCH_PRE_START_TIME	
MD 37274	2-517	MD 42402	3-547
MS_SPIND_COUPLING_MODE		NUM_ENCS	
MD 37263	2-516	MD 30200	2-393
MS_TENSION_TORQ_FILTER_TIME		NUM_FIX_POINT_POS	
MD 37266	2-516	MD 30610	2-405
MS_TENSION_TORQUE		NUM_GEAR_STEPS	
MD 37264	2-516	MD 35090	2-471
MS_TORQUE_CTRL_ACTIVATION		NUM_GEAR_STEPS2	
MD 37255	2-514	MD 35092	2-471
MS_TORQUE_CTRL_I_TIME		O	
MD 37258	2-515	OEM_AXIS_INFO	
MS_TORQUE_CTRL_MODE		MD 37800	2-521
MD 37254	2-514	OEM_CHAN_INFO	
MS_TORQUE_CTRL_P_GAIN		MD 27400	2-372
MD 37256	2-514	OEM_GLOBAL_INFO	
MS_TORQUE_WEIGHT_SLAVE		MD 17400	2-170
MD 37268	2-516	OPERATING_MODE_DEFAULT	
MS_VELO_TOL_COARSE		MD 10720	2-99
MD 37270	2-517	ORI_JOG_MODE	
MS_VELO_TOL_FINE		MD 42660	3-557
MD 37272	2-517	ORI_TRAFO_ONLINE_CHECK_LIM	
N		MD 21198	2-286
NC signals	4-591	ORIENTATION_IS_EULER	
NC_LANGUAGE_CONFIGURATION		MD 21100	2-284
MD 10711	2-93	OSCILATE_FUNCTION_MASK	
NC_USER_CODE_CONF_NAME_TAB		MD 1090	2-32
MD 10712	2-94	OSCILL_CTRL_MASK	
NC_USER_EXTERN_GCODES_TAB		MD 43770	3-577
MD 10882	2-110	OSCILL_DWELL_TIME1	
NCBFRAME_POWERON_MASK		MD 43720	3-575
MD 10615	2-81	OSCILL_DWELL_TIME2	
NCBFRAME_RESET_MASK		MD 43730	3-575
MD 10613	2-81	OSCILL_END_POS	
NCK signals	5-668	MD 43760	3-576
NCK_EG_FUNCTION_MASK		OSCILL_IS_ACTIVE	
MD 11756	2-151	MD 43780	3-578
NCK_LEAD_FUNCTION_MASK		OSCILL_MODE_MASK	
MD 11750	2-149	MD 11460	2-142
NCK_PCOS_TIME_RATIO		OSCILL_NUM_SPARK_CYCLES	
MD 10185	2-48	MD 43750	3-576
NCK_TRAIL_FUNCTION_MASK		OSCILL_REVERSE_POS1	
MD 11752	2-150	MD 43700	3-574
NIBBLE_PRE_START_TIME		OSCILL_REVERSE_POS2	
MD 26018	2-369	MD 43710	3-574
NIBBLE_PUNCH_CODE		OSCILL_START_POS	
MD 26008	2-365	MD 43790	3-578

OSCILL_VELO		MD 12978	2-159
MD 43740	3-575	PLC_ANA_IN_NUM	
OVR_AX_IS_GRAY_CODE		MD 12979	2-160
MD 12000	2-152	PLC_ANA_OUT_LOGIC_ADDRESS	
OVR_FACTOR_AX_SPEED		MD 12982	2-160
MD 12010	2-152	PLC_ANA_OUT_NUM	
OVR_FACTOR_FEEDRATE		MD 12983	2-160
MD 12030	2-153	PLC_CYCLE_TIME	
OVR_FACTOR_LIMIT_BIN		MD 10075	2-41
MD 12100	2-156	PLC_CYCLE_TIME_AVERAGE	
OVR_FACTOR_RAPID_TRA		MD 10110	2-43
MD 12050	2-154	PLC_CYCLIC_TIMEOUT	
OVR_FACTOR_SPIND_SPEED		MD 10100	2-43
MD 12070	2-155	PLC_DEACT_IMAGE_LADDR_IN	
OVR_FEED_IS_GRAY_CODE		MD 12986	2-160
MD 12020	2-153	PLC_DEACT_IMAGE_LADDR_OUT	
OVR_FUNCTION_MASK		MD 12987	2-160
MD 12090	2-156	PLC_DIG_IN_LOGIC_ADDRESS	
OVR_RAPID_FACTOR		MD 12970	2-159
MD 42122	3-543	PLC_DIG_IN_NUM	
OVR_RAPID_IS_GRAY_CODE		MD 12971	2-159
MD 12040	2-154	PLC_DIG_OUT_LOGIC_ADDRESS	
OVR_REFERENCE_IS_MIN_FEED		MD 12974	2-159
MD 12082	2-156	PLC_DIG_OUT_NUM	
OVR_REFERENCE_IS_PROG_FEED		MD 12975	2-159
MD 12080	2-155	PLC_IPO_TIME_RATIO	
OVR_SPIND_IS_GRAY_CODE		MD 10074	2-41
MD 12060	2-154	PLC_OB1_TRACE_DEPTH	
Operating mode signals	5-671	MD 11480	2-143
P		PLC_OB35_TRACE_DEPTH	
PART_COUNTER		MD 11481	2-143
MD 27880	2-374	PLC_OB40_TRACE_DEPTH	
PART_COUNTER_MCODE		MD 11482	2-144
MD 27882	2-375	PLC_RUNNINGUP_TIMEOUT	
PATH_IPO_IS_ON_TCP		MD 10120	2-44
MD 20260	2-257	PLCINT_POSCTRL_TIME_RATIO	
PATH_MODE_MASK		MD 10172	2-47
MD 20464	2-267	POS_AX_VELO	
PATH_TRANS_JERK_LIM		MD 32060	2-414
MD 32432	2-427	POS_LIMIT_MINUS	
PERMANENT_FEED		MD 36100	2-488
MD 12202	2-157	POS_LIMIT_MINUS2	
PERMANENT_ROT_AX_FEED		MD 36120	2-489
MD 12204	2-158	POS_LIMIT_PLUS	
PERMANENT_SPINDLE_FEED		MD 36110	2-489
MD 12205	2-158	POS_LIMIT_PLUS2	
PERMISSIVE_FLASH_TAB		MD 36130	2-490
MD 11700	2-149	POS_TAB_SCALING_SYSTEM	
PFRAME_RESET_MODE		MD 10270	2-53
MD 24010	2-315	POSCTRL_CONFIG	
PLC User Interface	5-655	MD 32230	2-421
PLC machine data	5-687	POSCTRL_CYCLE_DELAY	
PLC_ANA_IN_LOGIC_ADDRESS		MD 10062	2-39

POSCTRL_CYCLE_DIAGNOSIS	
MD 10063	2-39
POSCTRL_CYCLE_TIME	
MD 10061	2-39
POSCTRL_DAMPING	
MD 32950	2-450
POSCTRL_GAIN	
MD 32200	2-420
POSCTRL_INTEGR_ENABLE	
MD 32220	2-421
POSCTRL_INTEGR_TIME	
MD 32210	2-421
POSCTRL_OUT_FILTER_ENABLE	
MD 32930	2-449
POSCTRL_OUT_FILTER_TIME	
MD 32940	2-450
POSCTRL_SYSCLOCK_TIME_RATIO	
MD 10060	2-38
POSITIONING_TIME	
MD 36020	2-486
PREP_COM_TASK_CYCLE_RATIO	
MD 10160	2-46
PREP_PLCBG_TASK_CYCLE_RATIO	
MD 10170	2-46
PREPDYN_MAX_FILT_LENGTH_GEO	
MD 20607	2-272
PREPDYN_MAX_FILT_LENGTH_RD	
MD 20608	2-272
PREPDYN_SMOOTHING_FACTOR	
MD 20605	2-271
PREPDYN_SMOOTHING_ON	
MD 20606	2-272
PREPROCESSING_LEVEL	
MD 10700	2-85
PROBE_MODE	
MD 369	2-28
PROCESSTIMER_MODE	
MD 27860	2-373
PROFIBUS_ACTVAL_LEAD_TIME	
MD 37600	2-519
PROFIBUS_ALARM_ACCESS	
MD 13140	2-165
PROFIBUS_ALARM_MARKER	
MD 10059	2-38
PROFIBUS_CTRL_CONFIG	
MD 37610	2-520
PROFIBUS_OUTVAL_DELAY_TIME	
MD 37602	2-519
PROFIBUS_SDB_NUMBER	
MD 11240	2-125
PROFIBUS_SDB_SELECT	
MD 11241	2-125
PROFIBUS_SHUTDOWN_TYPE	
MD 11250	2-126
PROFIBUS_TORQUE_RED_RESOL	
MD 37620	2-521
PROFIBUS_TRACE_ADDRESS	
MD 13110	2-163
PROFIBUS_TRACE_FILE_SIZE	
MD 13112	2-163
PROFIBUS_TRACE_START	
MD 13113	2-164
PROFIBUS_TRACE_START_EVENT	
MD 13114	2-164
PROFIBUS_TRACE_TYPE	
MD 13111	2-163
PROG_EVENT_IGN_INHIBIT	
MD 20107	2-235
PROG_EVENT_IGN_PROG_STATE	
MD 20192	2-250
PROG_EVENT_IGN_SINGLBLOCK	
MD 20106	2-235
PROG_EVENT_IGN_STOP	
MD 20193	2-251
PROG_EVENT_MASK	
MD 20108	2-236
PROG_EVENT_MASK_PROPERTIES	
MD 20109	2-236
PROG_EVENT_NAME	
MD 11620	2-148
PROG_FUNCTION_MASK	
MD 10280	2-54
PROG_SD_POWERON_INIT_TAB	
MD 10709	2-91
PROG_SD_RESET_SAVE_TAB	
MD 10710	2-92
PROG_TEST_MASK	
MD 10707	2-89
PROTAREA_GEOAX_CHANGE_MODE	
MD 10618	2-82
PROTOK_IPOCYCLE_CONTROL	
MD 11297	2-128
PROTOK_PREPTIME_CONTROL	
MD 11298	2-129
PUNCH_DWELLTIME	
MD 42400	3-546
PUNCH_PARTITION_TYPE	
MD 26016	2-368
PUNCH_PATH_SPLITTING	
MD 26014	2-367
PUNCHNIB_ACTIVATION	
MD 26012	2-366
PUNCHNIB_ASSIGN_FASTIN	
MD 26000	2-362
PUNCHNIB_ASSIGN_FASTOUT	
MD 26002	2-363

- PUNCHNIB_AXIS_MASK
 MD 26010 2-366
 Program control signals from HMI (retentive area) 5-662
 Program selection from PLC (retentive area) 5-662
 Program-control signals from HMI ... 4-582
- R**
- RADIUS_NAME
 MD 10654 2-83
- RATED_OUTVAL
 MD 32250 2-422
- RATED_VELO
 MD 32260 2-423
- REBOOT_DELAY_TIME
 MD 10088 2-42
- REFP_CAM_DIR_IS_MINUS
 MD 34010 2-452
- REFP_CAM_IS_ACTIVE
 MD 34000 2-452
- REFP_CAM_MARKER_DIST
 MD 34093 2-457
- REFP_CAM_SHIFT
 MD 34092 2-457
- REFP_CYCLE_NR
 MD 34110 2-459
- REFP_MAX_CAM_DIST
 MD 34030 2-453
- REFP_MAX_MARKER_DIST
 MD 34060 2-455
- REFP_MOVE_DIST
 MD 34080 2-456
- REFP_MOVE_DIST_CORR
 MD 34090 2-456
- REFP_NC_START_LOCK
 MD 20700 2-276
- REFP_PERMITTED_IN_FOLLOWUP
 MD 34104 2-459
- REFP_SEARCH_MARKER_REVERSE
 MD 34050 2-454
- REFP_SET_POS
 MD 34100 2-458
- REFP_STOP_AT_ABS_MARKER
 MD 34330 2-464
- REFP_SYNC_ENCS
 MD 34102 2-458
- REFP_VELO_POS
 MD 34070 2-455
- REFP_VELO_SEARCH_CAM
 MD 34020 2-453
- REFP_VELO_SEARCH_MARKER
 MD 34040 2-453
- REORG_LOG_LIMIT
 MD 27900 2-376
- REPOS_MODE_MASK
 MD 11470 2-142
- RESET_MODE_MASK
 MD 20110 2-237
- ROT_IS_MODULO
 MD 30310 2-399
- RUN_OVERRIDE_0
 MD 12200 2-157
- Reading and writing PLC variables .. 5-688
- Retentive data area 5-659
- S**
- S_VALUES_ACTIVE_AFTER_RESET
 MD 22400 2-300
- SCALING_FACTOR_G70_G71
 MD 31200 2-411
- SCALING_FACTORS_USER_DEF
 MD 10230 2-50
- SCALING_SYSTEM_IS_METRIC
 MD 10240 2-51
- SCALING_USER_DEF_MASK
 MD 10220 2-49
- SCALING_VALUE_INCH
 MD 10250 2-52
- SD_MAX_PATH_ACCEL
 MD 42500 3-552
- SD_MAX_PATH_JERK
 MD 42510 3-553
- SEARCH_RUN_MODE
 MD 11450 2-141
- SERUPRO_MASK
 MD 10708 2-90
- SERUPRO_SPEED_FACTOR
 MD 22601 2-307
- SERUPRO_SPEED_MODE
 MD 22600 2-306
- SERUPRO_SYNC_MASK
 MD 42125 3-544
- SERVO_DISABLE_DELAY_TIME
 MD 36620 2-497
- SETINT_ASSIGN_FASTIN
 MD 21210 2-288
- SHAPED_TOOL_CHECKSUM
 MD 20372 2-261
- SHAPED_TOOL_TYPE_NO
 MD 20370 2-260
- SIEM_TRACEFILES_CONFIG
 MD 11294 2-128
- SIMU_AX_VDI_OUTPUT
 MD 30350 2-400
- SINAMICS_ALARM_MASK
 MD 13150 2-166
- SINAMICS_IBN_TIMEOUT_VALUE

MD 1091	2-32	SPIND_POSIT_DELAY_TIME	
SINGLEBLOCK2_STOPRE		MD 35310	2-480
MD 42200	3-546	SPIND_POSITIONING_DIR	
SLASH_MASK		MD 35350	2-480
MD 10706	2-89	SPIND_RIGID_TAPPING_M_NR	
SMOOTH_ORI_TOL		MD 20094	2-230
MD 42466	3-549	SPIND_S	
SOFT_ACCEL_FACTOR		MD 43200	3-567
MD 32433	2-428	SPIND_SPEED_TYPE	
SOFTKEY_CENTRE_ADJ		MD 43206	3-568
MD 1106	2-35	SPIND_STOPPED_AT_IPO_START	
SPF_END_TO_VDI		MD 35510	2-483
MD 20800	2-280	SPIND_VELO_LIMIT	
SPIND_ACTIVE_AFTER_RESET		MD 35100	2-472
MD 35040	2-470	SPINDEL_LOAD_BAR_COL1	
SPIND_ASSIGN_TO_MACHAX		MD 366	2-27
MD 35000	2-465	SPINDEL_LOAD_BAR_MAX	
SPIND_CONSTCUT_S		MD 365	2-27
MD 43202	3-567	SPINDEL_LOAD_DISP1	
SPIND_DEF_MASTER_SPIND		MD 360	2-26
MD 20090	2-229	SPINDLE_DISP_MODE	
SPIND_DEFAULT_ACT_MASK		MD 379	2-29
MD 35030	2-468	SPINDLE_LOAD_BAR_COL2	
SPIND_DEFAULT_MODE		MD 367	2-27
MD 35020	2-467	SPINDLE_LOAD_BAR_COL3	
SPIND_DES_VELO_TOL		MD 368	2-27
MD 35150	2-476	SPINDLE_LOAD_BAR_LIM2	
SPIND_EXTERN_VELO_LIMIT		MD 363	2-27
MD 35160	2-477	SPINDLE_LOAD_BAR_LIM3	
SPIND_FUNC_RESET_MODE		MD 364	2-27
MD 35032	2-468	SPINDLE_LOAD_DISP2	
SPIND_FUNCTION_MASK		MD 362	2-27
MD 35035	2-468	SPLINE_FEED_PRECISION	
SPIND_MAX_VELO_G26		MD 20262	2-257
MD 43220	3-569	SPOS_TO_VDI	
SPIND_MAX_VELO_LIMS		MD 20850	2-281
MD 43230	3-569	STANDSTILL_DELAY_TIME	
SPIND_MIN_VELO_G25		MD 36040	2-486
MD 43210	3-568	STANDSTILL_POS_TOL	
SPIND_ON_SPEED_AT_IPO_START		MD 36030	2-486
MD 35500	2-483	STANDSTILL_VELO_TOL	
SPIND_OSCILL_ACCEL		MD 36060	2-488
MD 35410	2-481	START_MODE_MASK	
SPIND_OSCILL_DES_VELO		MD 20112	2-238
MD 35400	2-480	START_MODE_MASK_PRT	
SPIND_OSCILL_START_DIR		MD 22620	2-307
MD 35430	2-481	STARTUP_WITH_MMP	
SPIND_OSCILL_TIME_CCW		MD 1105	2-34
MD 35450	2-482	STAT_NAME	
SPIND_OSCILL_TIME_CW		MD 10670	2-84
MD 35440	2-482	STIFFNESS_CONTROL_CONFIG	
SPIND_POSCTRL_VELO		MD 32642	2-441
MD 35300	2-479	STIFFNESS_CONTROL_ENABLE	

MD 32640	2-441	SW_CAM_MINUS_TIME_TAB_2	
STIFFNESS_DELAY_TIME		MD 41522	3-536
MD 32644	2-441	SW_CAM_MINUS_TIME_TAB_3	
STOP_CUTCOM_STOPRE		MD 41524	3-537
MD 42480	3-550	SW_CAM_MINUS_TIME_TAB_4	
STOP_LIMIT_COARSE		MD 41526	3-538
MD 36000	2-484	SW_CAM_MODE	
STOP_LIMIT_FACTOR		MD 10485	2-73
MD 36012	2-485	SW_CAM_PLUS_LEAD_TIME	
STOP_LIMIT_FINE		MD 10461	2-67
MD 36010	2-485	SW_CAM_PLUS_POS_TAB_1	
STOP_MODE_MASK		MD 41501	3-531
MD 11550	2-144	SW_CAM_PLUS_POS_TAB_2	
STOP_ON_CLAMPING		MD 41503	3-532
MD 36052	2-487	SW_CAM_PLUS_POS_TAB_3	
STROKE_CHECK_INSIDE		MD 41505	3-533
MD 22900	2-309	SW_CAM_PLUS_POS_TAB_4	
SUBPRESS_STOPPER_ALARM		MD 41507	3-534
MD 399	2-31	SW_CAM_PLUS_TIME_TAB_1	
SUMCORR_DEFAULT		MD 41521	3-535
MD 20272	2-258	SW_CAM_PLUS_TIME_TAB_2	
SUMCORR_RESET_VALUE		MD 41523	3-536
MD 20132	2-242	SW_CAM_PLUS_TIME_TAB_3	
SUPPRESS_ALARM_MASK		MD 41525	3-537
MD 11410	2-136	SW_CAM_PLUS_TIME_TAB_4	
SUPPRESS_ALARM_MASK_2		MD 41527	3-538
MD 11415	2-140	SW_CAM_TIMER_FASTOUT_MASK	
SUPPRESS_SCREEN_REFRESH		MD 10480	2-72
MD 10131	2-44	SYSCLOCK_CYCLE_TIME	
SW_CAM_ASSIGN_FASTOUT_1		MD 10050	2-37
MD 10470	2-68	SYSCLOCK_SAMPL_TIME_RATIO	
SW_CAM_ASSIGN_FASTOUT_2		MD 10080	2-42
MD 10471	2-69	Signal from fast inputs and outputs ..	5-671
SW_CAM_ASSIGN_FASTOUT_3		Signals from HMI	4-584, 5-663
MD 10472	2-70	Signals from MCP (connected to the MCPA module)	5-657
SW_CAM_ASSIGN_FASTOUT_4		Signals from NC channel	5-676
MD 10473	2-71	Signals from PLC	5-663
SW_CAM_ASSIGN_TAB		Signals from axis/spindle	4-641, 5-683
MD 10450	2-65	Signals from operator panel (retentive area) 5-664	
SW_CAM_COMP_NCK_JITTER		Signals from the channel	4-613
MD 10490	2-74	Signals from/to HMI	4-582, 5-662
SW_CAM_MINUS_LEAD_TIME		Signals to MCP	5-658
MD 10460	2-66	Signals to NC channel	5-673
SW_CAM_MINUS_POS_TAB_1		Signals to axis/spindle	4-625, 5-679
MD 41500	3-531	Signals to channel	4-598
SW_CAM_MINUS_POS_TAB_2		Signals to fast inputs and outputs ...	5-670
MD 41502	3-532	T	
SW_CAM_MINUS_POS_TAB_3		T_M_ADDRESS_EXT_IS_SPINO	
MD 41504	3-533	MD 20096	2-232
SW_CAM_MINUS_POS_TAB_4		T_NO_FCT_CYCLE_MODE	
MD 41506	3-534	MD 10719	2-98
SW_CAM_MINUS_TIME_TAB_1			
MD 41520	3-535		

T_NO_FCT_CYCLE_NAME		
MD 10717	2-97
TANG_OFFSET		
MD 37402	2-518
TAPPINGCYCLE_MODE_MANUAL_MA		
MD 1103	2-34
TARGET_BLOCK_INCR_PROG		
MD 42444	3-548
TCI_TRACE_ACTIVE		
MD 11405	2-135
TECHNOLOGY_MODE		
MD 27800	2-372
TEMP_COMP_ABS_VALUE		
MD 43900	3-579
TEMP_COMP_REF_POSITION		
MD 43920	3-580
TEMP_COMP_SLOPE		
MD 43910	3-579
TEMP_COMP_TYPE		
MD 32750	2-444
THREAD_RAMP_DISP		
MD 42010	3-541
THREAD_START_ANGLE		
MD 42000	3-540
TIME_LIMIT_NETTO_COM_TASK		
MD 10130	2-44
TIME_LIMIT_NETTO_INT_TASK		
MD 27920	2-376
TIME_LIMIT_NETTO_PLCBG_TASK		
MD 10171	2-47
TIME_LIMIT_PLCINT_TASK		
MD 10173	2-47
TIME_LIMIT_PLCINT_TASK_DIAG		
MD 10174	2-47
TOCARR_BASE_FRAME_NUMBER		
MD 20184	2-249
TOCARR_CHANGE_M_CODE		
MD 22530	2-302
TOCARR_FINE_CORRECTION		
MD 42974	3-563
TOCARR_FINE_LIM_LIN		
MD 20188	2-249
TOCARR_FINE_LIM_ROT		
MD 20190	2-250
TOCARR_ROT_ANGLE_INCR		
MD 20180	2-249
TOCARR_ROT_ANGLE_OFFSET		
MD 20182	2-249
TOCARR_ROT_OFFSET_FROM_FR		
MD 21186	2-286
TOCARR_ROTAX_MODE		
MD 20196	2-251
TOFRAME_MODE		
MD 42980	3-564
TOOL_CARRIER_RESET_VALUE		
MD 20126	2-241
TOOL_CHANGE_ERROR_MODE		
MD 22562	2-304
TOOL_CHANGE_M_CODE		
MD 22560	2-304
TOOL_CHANGE_MODE		
MD 22550	2-303
TOOL_CHG_MANUALMODE_MA		
MD 1104	2-34
TOOL_CORR_MODE_G43G44		
MD 20380	2-261
TOOL_CORR_MOVE_MODE		
MD 20382	2-262
TOOL_CORR_MULTIPLE_AXES		
MD 20384	2-262
TOOL_DATA_CHANGE_COUNTER		
MD 17530	2-173
TOOL_DEFAULT_DATA_MASK		
MD 17520	2-172
TOOL_GRIND_AUTO_TMON		
MD 20350	2-260
TOOL_LENGTH_CONST		
MD 42940	3-562
TOOL_LENGTH_TYPE		
MD 42950	3-563
TOOL_LIST_PLACE_NO		
MD 332	2-26
TOOL_MANAGEMENT_MASK		
MD 20310	2-259
TOOL_OFFSET_DRF_ON		
MD 20396	2-263
TOOL_OFFSET_INCR_PROG		
MD 42442	3-548
TOOL_PARAMETER_DEF_MASK		
MD 20360	2-260
TOOL_PRESEL_RESET_VALUE		
MD 20121	2-241
TOOL_REF_PROBE_AXIS1		
MD 370	2-28
TOOL_REF_PROBE_AXIS2		
MD 371	2-28
TOOL_REF_PROBE_AXIS3		
MD 372	2-28
TOOL_RESET_VALUE		
MD 20120	2-240
TOOL_RESETMON_MASK		
MD 17515	2-171
TOOL_TEMP_COMP		
MD 42960	3-563
TOOL_TEMP_COMP_LIMIT		
MD 20392	2-263

TOOL_TEMP_COMP_ON	MD 21508	2-290
MD 20390		2-262
TOOL_TIME_MONITOR_MASK	MD 21512	2-290
MD 20320		2-259
TOOL_WEAR_LIMIT_VALUE	MD 24997	2-349
MD 374		2-28
TOOLTYPES_ALLOWED	MD 24998	2-349
MD 17540		2-174
TRAANG_ANGLE_1	MD 25495	2-361
MD 24700		2-335
TRAANG_ANGLE_2	MD 25496	2-361
MD 24750		2-337
TRAANG_BASE_TOOL_1	MD 25497	2-361
MD 24710		2-335
TRAANG_BASE_TOOL_2	MD 25498	2-361
MD 24760		2-338
TRAANG_PARALLEL_ACCEL_RES_1	MD 24820	2-341
MD 24721		2-337
TRAANG_PARALLEL_ACCEL_RES_2	MD 24870	2-344
MD 24771		2-339
TRAANG_PARALLEL_VELO_RES_1	MD 24808	2-340
MD 24720		2-336
TRAANG_PARALLEL_VELO_RES_2	MD 24858	2-343
MD 24770		2-338
TRACE_SELECT	MD 24805	2-340
MD 11400		2-135
TRACLG_CONTACT_LOWER_LIMIT	MD 24855	2-342
MD 21520		2-291
TRACLG_CONTACT_UPPER_LIMIT	MD 24800	2-339
MD 21518		2-291
TRACLG_CTRLSPI_NR	MD 24850	2-342
MD 21524		2-291
TRACLG_CTRLSPI_VERT_OFFSET	MD 24810	2-341
MD 21502		2-289
TRACLG_G0_IS_SPECIAL	MD 24860	2-343
MD 21526		2-292
TRACLG_GRINDSPI_HOR_OFFSET	MD 24110	2-318
MD 21501		2-289
TRACLG_GRINDSPI_NR	MD 24482	2-332
MD 21522		2-291
TRACLG_GRINDSPI_VERT_OFFSET	MD 25102	2-350
MD 21500		2-289
TRACLG_HOR_DIR_SUPPORTAX_1	MD 25112	2-351
MD 21510		2-290
TRACLG_HOR_DIR_SUPPORTAX_2	MD 25122	2-352
MD 21514		2-290
TRACLG_SUPPORT_HOR_OFFSET	MD 25132	2-353
MD 21506		2-289
TRACLG_SUPPORT_LEAD_ANGLE	MD 25142	2-354
MD 21516		2-290
TRACLG_SUPPORT_VERT_OFFSET	MD 25152	2-355
MD 21504		2-289
TRACLG_VERT_DIR_SUPPORTAX_1	MD 25162	2-356

TRAFO_AXES_IN_18		MD 24420	2-325
MD 25172	2-357	TRAFO_GEOAX_ASSIGN_TAB_5	
TRAFO_AXES_IN_19		MD 24434	2-326
MD 25182	2-358	TRAFO_GEOAX_ASSIGN_TAB_6	
TRAFO_AXES_IN_2		MD 24444	2-328
MD 24210	2-321	TRAFO_GEOAX_ASSIGN_TAB_7	
TRAFO_AXES_IN_20		MD 24454	2-329
MD 25192	2-359	TRAFO_GEOAX_ASSIGN_TAB_8	
TRAFO_AXES_IN_3		MD 24464	2-330
MD 24310	2-323	TRAFO_GEOAX_ASSIGN_TAB_9	
TRAFO_AXES_IN_4		MD 24474	2-332
MD 24410	2-325	TRAFO_INCLUDES_TOOL_1	
TRAFO_AXES_IN_5		MD 24130	2-320
MD 24432	2-326	TRAFO_INCLUDES_TOOL_10	
TRAFO_AXES_IN_6		MD 24486	2-333
MD 24442	2-327	TRAFO_INCLUDES_TOOL_11	
TRAFO_AXES_IN_7		MD 25106	2-350
MD 24452	2-329	TRAFO_INCLUDES_TOOL_12	
TRAFO_AXES_IN_8		MD 25116	2-351
MD 24462	2-330	TRAFO_INCLUDES_TOOL_13	
TRAFO_AXES_IN_9		MD 25126	2-352
MD 24472	2-331	TRAFO_INCLUDES_TOOL_14	
TRAFO_CHANGE_M_CODE		MD 25136	2-353
MD 22534	2-303	TRAFO_INCLUDES_TOOL_15	
TRAFO_GEOAX_ASSIGN_TAB_1		MD 25146	2-354
MD 24120	2-319	TRAFO_INCLUDES_TOOL_16	
TRAFO_GEOAX_ASSIGN_TAB_10		MD 25156	2-355
MD 24484	2-333	TRAFO_INCLUDES_TOOL_17	
TRAFO_GEOAX_ASSIGN_TAB_11		MD 25166	2-356
MD 25104	2-350	TRAFO_INCLUDES_TOOL_18	
TRAFO_GEOAX_ASSIGN_TAB_12		MD 25176	2-357
MD 25114	2-351	TRAFO_INCLUDES_TOOL_19	
TRAFO_GEOAX_ASSIGN_TAB_13		MD 25186	2-358
MD 25124	2-352	TRAFO_INCLUDES_TOOL_2	
TRAFO_GEOAX_ASSIGN_TAB_14		MD 24230	2-322
MD 25134	2-353	TRAFO_INCLUDES_TOOL_20	
TRAFO_GEOAX_ASSIGN_TAB_15		MD 25196	2-359
MD 25144	2-354	TRAFO_INCLUDES_TOOL_3	
TRAFO_GEOAX_ASSIGN_TAB_16		MD 24330	2-324
MD 25154	2-355	TRAFO_INCLUDES_TOOL_4	
TRAFO_GEOAX_ASSIGN_TAB_17		MD 24426	2-325
MD 25164	2-356	TRAFO_INCLUDES_TOOL_5	
TRAFO_GEOAX_ASSIGN_TAB_18		MD 24436	2-327
MD 25174	2-357	TRAFO_INCLUDES_TOOL_6	
TRAFO_GEOAX_ASSIGN_TAB_19		MD 24446	2-328
MD 25184	2-358	TRAFO_INCLUDES_TOOL_7	
TRAFO_GEOAX_ASSIGN_TAB_2		MD 24456	2-329
MD 24220	2-322	TRAFO_INCLUDES_TOOL_8	
TRAFO_GEOAX_ASSIGN_TAB_20		MD 24466	2-331
MD 25194	2-359	TRAFO_INCLUDES_TOOL_9	
TRAFO_GEOAX_ASSIGN_TAB_3		MD 24476	2-332
MD 24320	2-323	TRAFO_MODE_MASK	
TRAFO_GEOAX_ASSIGN_TAB_4		MD 20144	2-243

TRAF0_RESET_NAME		MD 24576	2-334
MD 20142	2-243	TRAF06_BASE_ORIENT_NORMAL_2	
TRAF0_RESET_VALUE		MD 24676	2-334
MD 20140	2-242	TRAF06_BASE_ORIENT_NORMAL_3	
TRAF0_TYPE_1		MD 25276	2-360
MD 24100	2-317	TRAF06_BASE_ORIENT_NORMAL_4	
TRAF0_TYPE_10		MD 25376	2-360
MD 24480	2-332	TRAF06_JOINT_OFFSET_2_3_1	
TRAF0_TYPE_11		MD 24561	2-333
MD 25100	2-349	TRAF06_JOINT_OFFSET_2_3_2	
TRAF0_TYPE_12		MD 24661	2-334
MD 25110	2-350	TRAF06_JOINT_OFFSET_2_3_3	
TRAF0_TYPE_13		MD 25261	2-359
MD 25120	2-351	TRAF06_JOINT_OFFSET_2_3_4	
TRAF0_TYPE_14		MD 25361	2-360
MD 25130	2-352	TRANSMIT_BASE_TOOL_1	
TRAF0_TYPE_15		MD 24920	2-346
MD 25140	2-353	TRANSMIT_BASE_TOOL_2	
TRAF0_TYPE_16		MD 24970	2-349
MD 25150	2-354	TRANSMIT_POLE_SIDE_FIX_1	
TRAF0_TYPE_17		MD 24911	2-346
MD 25160	2-355	TRANSMIT_POLE_SIDE_FIX_2	
TRAF0_TYPE_18		MD 24961	2-348
MD 25170	2-356	TRANSMIT_ROT_AX_FRAME_1	
TRAF0_TYPE_19		MD 24905	2-345
MD 25180	2-357	TRANSMIT_ROT_AX_FRAME_2	
TRAF0_TYPE_2		MD 24955	2-347
MD 24200	2-321	TRANSMIT_ROT_AX_OFFSET_1	
TRAF0_TYPE_20		MD 24900	2-344
MD 25190	2-358	TRANSMIT_ROT_AX_OFFSET_2	
TRAF0_TYPE_3		MD 24950	2-347
MD 24300	2-323	TRANSMIT_ROT_SIGN_IS_PLUS_1	
TRAF0_TYPE_4		MD 24910	2-345
MD 24400	2-324	TRANSMIT_ROT_SIGN_IS_PLUS_2	
TRAF0_TYPE_5		MD 24960	2-348
MD 24430	2-326	TU_NAME	
TRAF0_TYPE_6		MD 10672	2-84
MD 24440	2-327	Tool management functions from NC channel	
TRAF0_TYPE_7		4-653,	5-689
MD 24450	2-328	Transferred D functions	5-668
TRAF0_TYPE_8		Transferred H functions	5-668
MD 24460	2-330	Transferred M functions	5-667
TRAF0_TYPE_9		Transferred M/S functions, axis-specific	5-679
MD 24470	2-331	Transferred S functions	5-667
TRAF05_AXIS3_1		Transferred T functions	5-667
MD 24573	2-333	Transferred axis-specific M and S functions	4-624
TRAF05_AXIS3_2		U	
MD 24673	2-334	UNLOCK_EDIT_MODESWITCH	
TRAF05_AXIS3_3		MD 10780	2-102
MD 25273	2-360	UPLOAD_MD_CHANGES_ONLY	
TRAF05_AXIS3_4		MD 11210	2-124
MD 25373	2-360		
TRAF06_BASE_ORIENT_NORMAL_1			

USE_FIXPOINT_MANUAL_MA		MD 24080	2-316
MD 1099	2-33	USER_MANUAL_MA_SHOW_PAGE_NO	
USEKT_RESET_VALUE		MD 401	2-31
MD 20123	2-241	USER_MANUAL_MA_TOOL_CHANGE	
USER_CLASS_DIR_ACCESS		MD 400	2-31
MD 221	2-21	USER_MEAS_TOOL_CHANGE	
USER_CLASS_LADDER_VIEW		MD 361	2-27
MD 378	2-29	USER_TOOL_CHG_MANUAL_MA	
USER_CLASS_PLC_ACCESS		MD 1101	2-34
MD 222	2-22	User alarm	
USER_CLASS_READ_CUSS_DIR		Activation	5-660
MD 375	2-28	Configuration (MD 14516	
USER_CLASS_READ_PROGRAM		USER_DATA_PLC_ALARM)	5-688
MD 213	2-21	User data	5-657
USER_CLASS_READ_TOA		User data 1	5-657
MD 207	2-20	User data2	5-657
USER_CLASS_SELECT_PROGRAM		V	
MD 215	2-21	V1700 0000.5	4-582
USER_CLASS_SET_V24		V1700 0000.6	4-582
MD 219	2-21	V1700 0001.3	4-582
USER_CLASS_WRITE_CMA_DIR		V1700 0001.7	4-583
MD 386	2-30	V1700 0002	4-583
USER_CLASS_WRITE_CUS_DIR		V1700 0003.0 to .1	4-583
MD 376	2-28	V1700 0003.7 ***	4-583
USER_CLASS_WRITE_CYCLES		V1800 0000.0	4-584
MD 217	2-21	V1800 0000.1	4-584
USER_CLASS_WRITE_LOC_NO		V1800 0000.2	4-584
MD 392	2-30	V1800 0000.4	4-584
USER_CLASS_WRITE_PROGRAM		V1800 0000.6 ***	4-585
MD 214	2-21	V1800 0001.2	4-585
USER_CLASS_WRITE_PWA		V1900 0000.6	4-585
MD 223	2-22	V1900 0003.7	4-586
USER_CLASS_WRITE_RPA		V1900 0004.7	4-586
MD 218	2-21	V1900 1003.0 to .2	4-586
USER_CLASS_WRITE_SEA		V1900 1004.0 to .2	4-586
MD 212	2-21	V1900 5001.0	4-587
USER_CLASS_WRITE_TO_MON_DAT		V1900 5002.0	4-587
MD 377	2-29	V24_PG_PC_BAUD	
USER_CLASS_WRITE_TOA_GEO		MD 247	2-22
MD 208	2-20	V24_PPI_ADDR_DRV1	
USER_CLASS_WRITE_TOA_WEAR		MD 383	2-29
MD 209	2-20	V24_PPI_ADDR_MMC	
USER_CLASS_WRITE_ZOA		MD 343	2-26
MD 210	2-20	V24_PPI_ADDR_NCK	
USER_DATA_FLOAT		MD 281	2-22
MD 14514	2-169	V24_PPI_ADDR_PLC	
USER_DATA_HEX		MD 280	2-22
MD 14512	2-169	V24_PPI_MODEM_ACTIVE	
USER_DATA_INT		MD 344	2-26
MD 14510	2-169	V24_PPI_MODEM_BAUD	
USER_DATA_PLC_ALARM		MD 345	2-26
MD 14516	2-169	V24_PPI_MODEM_PARITY	
USER_FRAME_POWERON_MASK		MD 346	2-26

V2500 0004.0 to .4	4-588	V3200 1001.0 to .6	4-612
V2500 0006.0	4-588	V3200 1004.0 to .1	4-610
V2500 0008.0	4-588	V3200 1004.3	4-610
V2500 0010.0	4-588	V3200 1004.4	4-611
V2500 0012.0 to .2	4-588	V3200 1004.5	4-611
V2600 0000.1	4-591	V3200 1004.7 and .6	4-611
V2600 0000.2	4-591	V3200 1005.0 to .6	4-612
V2600 0001.0	4-591	V3200 1008.0 to .1	4-610
V2700 0000.1	4-592	V3200 1008.3	4-610
V2700 0001.0	4-592	V3200 1008.4	4-611
V2700 0001.7	4-592	V3200 1008.5	4-611
V2700 0004.0 to .7	4-593	V3200 1008.7 and .6	4-611
V2700 0008.0 to .7	4-593	V3200 1009.0 to .6	4-612
V3000 0000.0	4-594	V3300 0000.3	4-613
V3000 0000.0 to .6	4-596	V3300 0000.4	4-613
V3000 0000.1	4-594	V3300 0000.5	4-614
V3000 0000.2	4-594	V3300 0000.6	4-614
V3000 0000.4	4-595	V3300 0001.0	4-614
V3000 0000.7	4-595	V3300 0001.2	4-614
V3000 0001.2	4-595	V3300 0001.4	4-615
V3100 0000.0	4-596	V3300 0001.5	4-615
V3100 0000.1	4-597	V3300 0001.6	4-616
V3100 0000.2	4-597	V3300 0001.7	4-616
V3100 0000.3	4-597	V3300 0003.0	4-616
V3100 0001.2	4-598	V3300 0003.2	4-617
V3200 000.5	4-598	V3300 0003.3	4-617
V3200 0000.4	4-598	V3300 0003.4	4-617
V3200 0000.6	4-599	V3300 0003.5	4-618
V3200 0001.0	4-599	V3300 0003.6	4-618
V3200 0001.7	4-600	V3300 0003.7	4-618
V3200 0002.0	4-600	V3300 0004.2	4-618
V3200 0003.0	4-600	V3300 0004.3	4-619
V3200 0003.1	4-600	V3300 0006.0	4-619
V3200 0003.2	4-601	V3300 0006.1	4-619
V3200 0003.3	4-601	V3300 0008	4-619
V3200 0003.4	4-601	V3300 0009	4-619
V3200 0003.5	4-601	V3300 0010	4-620
V3200 0006.0	4-604	V3300 0011	4-620
V3200 0006.1	4-605	V3300 0012	4-620
V3200 0006.4	4-605	V3300 0013	4-620
V3200 0006.6	4-606	V3300 0014	4-620
V3200 0006.7	4-606	V3300 0015	4-620
V3200 0007.0	4-607	V3300 1000.0 to .1	4-621
V3200 0007.1	4-607	V3300 1000.7 and .6	4-621
V3200 0007.2	4-607	V3300 1001.0, ..., .6	4-622
V3200 0007.3	4-608	V3300 1004.0 to .1	4-621
V3200 0007.4	4-609	V3300 1004.7 and .6	4-621
V3200 0013.5	4-609	V3300 1005.0, ..., .6	4-622
V3200 1000.0 to .1	4-610	V3300 1008.0 to .1	4-621
V3200 1000.3	4-610	V3300 1008.7 and .6	4-621
V3200 1000.4	4-611	V3300 1009.0, ..., .6	4-622
V3200 1000.5	4-611	V3300 4001.1	4-622
V3200 1000.7 and .6	4-611	V380x 0001.1	4-626

V380x 0001.2	4-626	VB2500 1000	4-588
V380x 0001.7	4-626	VB2500 1012	4-588
V380x 0002.0	4-627	VB2500 3004	4-589
V380x 0002.2	4-627	VB2500 3012	4-589
V380x 0002.3	4-628	VB2500 3020	4-589
V380x 0003.1	4-628	VB2500 3028	4-589
V380x 0003.6	4-629	VB2500 3036	4-589
V380x 0004.0 to .2	4-629	VB2500 4004	4-589
V380x 0004.3	4-630	VB2500 4012	4-589
V380x 0004.4	4-631	VB3200 0004	4-602
V380x 0004.5	4-631	VB3200 0005	4-603
V380x 0004.7 and .6	4-632	VB380x 0000	4-625
V380x 0005.0 to .6	4-633	VB380x 2003	4-640
V380x 1000.1 and .0	4-633	VD1900 5004	4-588
V380x 2000.0 to .2	4-635	VD2500 2000	4-589
V380x 2000.3	4-635	VD2500 3000	4-589
V380x 2001.0	4-636	VD2500 3008	4-589
V380x 2001.4	4-636	VD2500 3016	4-589
V380x 2001.6	4-637	VD2500 3024	4-589
V380x 2002.4	4-637	VD2500 3032	4-589
V380x 2002.5	4-638	VD2500 4000	4-589
V380x 2002.7 / .6	4-639	VD2500 4008	4-589
V380x1000.3 or .2	4-633	VD2500 5000	4-590
V380x1000.7	4-634	VD2500 6000	4-590
V390x 0000.0	4-641	VD2500 6008	4-590
V390x 0000.2	4-641	VD2500 6016	4-590
V390x 0000.4	4-642	VD370x 0000	4-624
V390x 0000.6	4-642	VD370x 0004	4-624
V390x 0000.7	4-643	VD5300 1000	4-653
V390x 0002.3	4-643	VD5300 1004	4-653
V390x 0002.4	4-643	VDI_FUNCTION_MASK	
V390x 0002.5	4-643	MD 17900	2-177
V390x 0004.0 to .2	4-644	VDI_UPDATE_IN_ONE_IPO_CYCLE	
V390x 0004.7 and .6	4-644	MD 18000	2-177
V390x 0005.0, ..., .6	4-645	VELO_FFW_WEIGHT	
V390x 2000.0 to .2	4-645	MD 32610	2-438
V390x 2000.3	4-646	VERSION_INFO	
V390x 2001.0	4-646	MD 18040	2-178
V390x 2001.1	4-647	VW2500 6004	4-590
V390x 2001.2	4-647	VW2500 6012	4-590
V390x 2001.5	4-648	VW2500 6020	4-590
V390x 2001.7	4-648	Variable for alarm	5-661
V390x 2002.0	4-649	W	
V390x 2002.3	4-649	WAB_CLEARANCE_TOLERANCE	
V390x 2002.5	4-649	MD 20204	2-253
V390x 2002.6	4-650	WAB_MAXNUM_DUMMY_BLOCKS	
V390x 2002.7	4-650	MD 20202	2-253
V390x5004.2	4-650	WALIM_GEOAX_CHANGE_MODE	
V390x5004.3	4-650	MD 10604	2-80
V390x5004.4	4-651	WEAR_SIGN	
V390x5004.5	4-651	MD 42930	3-561
V5300 0000.0	4-653	WEAR_SIGN_CUTPOS	
V5300 0000.1	4-653	MD 42920	3-560

WEAR_TRANSFORM			
MD 42935	3-561	WORKAREA_MINUS_ENABLE	
WEIGHTING_FACTOR_FOR_SCALE		MD 43410	3-571
MD 22910	2-309	WORKAREA_PLUS_ENABLE	
WHEEL_TYPE_MASK		MD 43400	3-571
MD 384	2-29	WORKAREA_WITH_TOOL_RADIUS	
WORKAREA_CHECK_TYPE		MD 21020	2-283
MD 30800	2-405	WPD_INI_MODE	
WORKAREA_LIMIT_MINUS		MD 11280	2-127
MD 43430	3-571	X	
WORKAREA_LIMIT_PLUS		X_AXIS_IN_OLD_X_Z_PLANE	
MD 43420	3-571	MD 21110	2-285

<p>To</p> <p>Siemens AG</p> <p>A&D MC MS1</p> <p>Postfach 3180</p> <p>D-91050 Erlangen</p> <p>Fax +49 (0) 9131 98 - 2176 [documentation]</p>	<p>Suggestions</p> <p>Corrections</p> <p>For publication/manual: SINUMERIK 802D sl Parameter Manuals</p> <p>Manufacturer Documentation</p>
<p>From:</p> <p>Name:</p> <p>Company/Dept.</p> <p>Address _____</p> <p>Zip code: _____ City : _____</p> <p>Telephon : _____ / _____</p> <p>Telefax : _____ / _____</p> <p>Telefax : _____</p>	<p>Order No.: 6FC5397-5CP10-2BA0</p> <p>Ausgabe 06/2009</p> <p>Should you come across any printing errors when reading this publication, please notify us on this sheet. Suggestions for improvement are also welcome.</p>

Suggestions and/or corrections

